



## User Manual TMP45 Wireless Smart Food Thermometer

 


## CONTENTS

Package Contents	I
Diagram	II&III
Specifications	IV
First - Time Use	V
Operation	VI
Power Control	VII
Connection Settings	VIII
App Interface	IX
Cooking Settings	X
Trouble Shooting	XI
Certification	XII
Maintenance & Safety Guidelines	XIII
Warranty Statement	XIV

Thank you for choosing the Triplett TMP45 Wireless Smart Food Thermometer. This user manual will guide you through the setup process, explain the features and functions and provide tips for optimal use. Please read this manual carefully before using the device.


## I. Package Contents

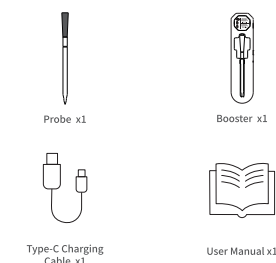

### †NOTE:


Upon receipt of the product, please charge the Booster for one hour before use. This helps prevent any potential disruption in functionality due to reduced battery levels during the transport.
 
## II. Probe Diagram



- Ambient Temperature Sensor:** Located towards the ceramic end, it measures the range of 14°F-57.2°F/-10°C-300°C.
- Internal Temperature Sensor:** Located at the tip, it measures the range of 14°F-212°F/-10°C-100°C.
- Safety Notch:** When inserting the probe into meat for measurement, ensure it goes deep enough to cover this notch.
- Stainless Steel:** The probe is made of durable stainless steel.
- High-density Zirconia Ceramic Handle:** The handle is made of ceramic for comfortable and safe handling.

## III. Booster Diagram

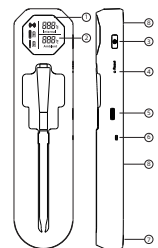 


- Display Screen:** Allows you to cook in low-light condition.
- Probe Icon:** Identify probe through the numbers.
- Pair/Silence:** Serves 4 functions:
  - Press and hold for 3 seconds to turn ON/OFF the booster.
  - Tap 3 times until you hear a "beep" sound to pair the probe.
  - Press once to silence the booster's alarm when reaching the target temp.
  - Press once to turn back to bright mode after the screen was dimmed.
- Reset:** To reset the booster if the function is abnormal or crashes.
- Type-C Charging Port:** 5V 1500mA minimum required.
- Buzzer:** Will sound when the internal or ambient temperature reaches its preset range. If the internal temperature exceeds 100°C/212°F or the ambient temperature exceeds 300°C/572°F, an over-temperature warning will activate.
- Non-slip Mat:** Preventing the device from sliding or falling off.
- Magnets:** Built-in magnets for mounting on metal surfaces.

## IV. Specifications

 Probe		Booster	
Temperature Range	Internal: 14°F-212°F/-10°C-100°C Ambient: 14°F-57.2°F/-10°C-300°C	Display	0.79" x 0.79" screen
Accuracy	Internal: ±1.0°F/±0.5°C at 125°F/52°C-100°C Ambient: ±1.4°F/±0.8°C	Dimension	7.09 x 1.75 x 0.75 inches
Dimensions	5.02"(L) x 40.23"(H)	Battery	3.7 volt 550mAh
Water Resistance	IPX7	Water Resistance	IPX2
Bluetooth Output Power	<10dBm	Connection	Bluetooth (distance only support 2.4GHz)
Probe Material	Food grade safety 304 Stainless Steel	Energy Saving Mode	The display automatically enters sleep mode after 5 minutes of no operation
Battery Life	40h	Battery Life	40h
Charging Time	30 min	Charging Time	1 hour


## V. First-Time Use

- Before using your device, ensure the product is fully charged and you have reviewed the important safety information.
- Download the free Temprobe App for iOS or Android.
- Insert the probe into the meat. Ensuring that it passes the Safe Notch and that the internal sensor is in the center of the meat.

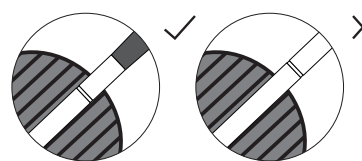


## VI. Operation
 
### Panel Instruction

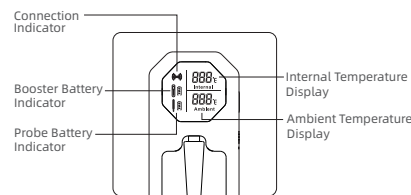


## VII. Power Control

 
**Power On:** To power on the booster, press the button at the side of booster for 3 seconds. The booster will activate immediately and the screen will change from to .



 Remove the probe from the booster—it will automatically connect. Once connected, the probe's temperature will display normally. If it fails to auto-connect, press the power button 3 times to re-pair.

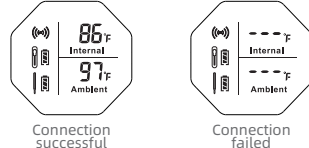

 **Power off:** Press and hold the button for 3 seconds to shut down the screen. The top right screen will display .



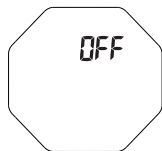


**Energy Saving Mode:** The display automatically darkens after 5 minutes of no operation. Press the button once to restore the screen to normal brightness.

## VIII. Connection Settings

   
- Download the Temprobe APP**  
Tap to download the app from the App Store or Google Play.  
iOS System Android System
- Turn on Bluetooth**
- Pairing**  
This step is needed when using the probe for the first time or after replacing it. Once paired, you don't need to do it again for future use.
- Turn on the app**
- Connect**
- Let's start cooking!**

## IX. APP Interface

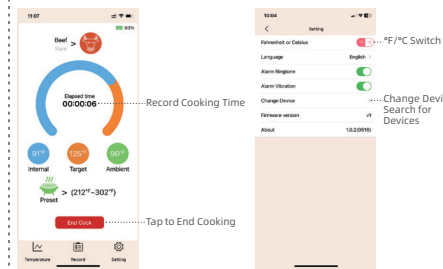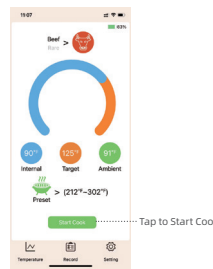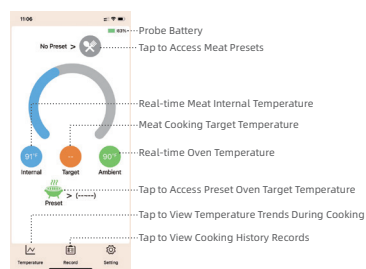

## X. Cooking Settings

 - Step 1**  
Tap to enter the preset meat options.
- Step 2**  
Choose the type of meat you're cooking.
- Step 3**  
Set the meat temperature and confirm.
- Step 4**  
Insert the probe as required and proceed.
- Step 5**  
Position the booster appropriately and continue.
- Step 6**  
Let's start cooking!

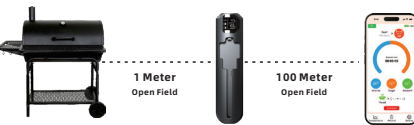

**Note:** For optimal performance, keep the booster within 1 meter from the oven to maintain signal strength and protect it from high temperatures. If the booster doesn't display the probe temperature, move it closer to the oven or align it with the booster. Obstacles between the booster and phone can significantly reduce connection range.

## XI. Trouble Shooting

Booster Prompt	Possible Cause	Solution
"Probe Battery Low"	The Probe's battery power is at a low level.	Plug the Probe into the Booster to charge it.
"Booster Battery Low"	The Booster's battery power is at a low level.	Use the included Type-C USB cable to charge the Booster.
"Overheating"	The Probe has been exposed to an overheated environment.	Remove the Probe from the heat cover and allow it to cool down before using it again.
"Probe Not Connecting to Booster at Close Range"	The Probe and the booster need to be repaired.	Quickly press the power button 3 times to repair.
"Booster has Power Off Report Turn On/Off"	System Freeze.	Use a pointed object to press Reset button on the side.

## XII. Certifications

**FCC Statement:**  
This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:  
(1) This device may not cause harmful interference, and  
(2) This device must accept any interference received, including interference that may cause undesired operation.



**WARNING:** Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**NOTE:** This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

**If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:**

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.
- The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

## XIII. Maintenance & Safety Guidelines

- Make sure the probe is clean and completely dry before placing it in the booster's charging nest. Clean probes charge better. Wash with mild soapy water and avoid using abrasive sponges or cleaners that could scratch it.
- Clean the booster by wiping it with a damp cloth. Remember, the booster is not dishwasher-safe or waterproof, so don't submerge it in water.

- Always insert the probe beyond the safety notch to avoid damage and reduce injury risk. Do not use the probe in microwave ovens.
- Keep the booster away from grill covers or hot surfaces.
- Never remove the probe while it's hot. If exposed to high heat or flames, wear eye protection when removing it.
- If the probe falls into the fire or direct heat, close the grill or cooking appliance's lid and turn off the heat. Let it cool completely before removing.
- Keep the probe away from hot charcoals. Don't use it directly above hot coals. Always wear gloves when removing the probe from meat.
- After use, clean the probe with a kitchen towel or rag. Rinse only when it has cooled to a normal temperature to avoid damage.
- After cleaning, store the probe in the booster for charging.
- The probe has a sharp tip. Please handle it carefully and keep it out of reach of children.

## XIV. Warranty Statement

Triplett Test Equipment offers a one-year warranty to the original purchaser of its products. We guarantee that our products will be free from defects in workmanship and materials for one (1) year from the purchase date.

**This warranty does not cover:**

- Products purchased from unauthorized distributors.
- Items that have been repaired or altered by unauthorized individuals.
- Damage from misuse, abuse, misapplication, negligence, or accidents.
- Products with altered, defaced, or removed serial numbers.
- Accessories, including batteries.