



NMP309-W Network Media Player Quick Start Guide


1 Box Contents



2 Mounting and Installation



Attach the wireless antenna as shown in left, screw antenna clockwise onto the post.
[VESA Mount] Put the VESA mount plate on the bottom of the player, with the screw holes aligned. Make sure the countersunk holes are facing up, so when the screw goes in, the screw head is level with the surface.

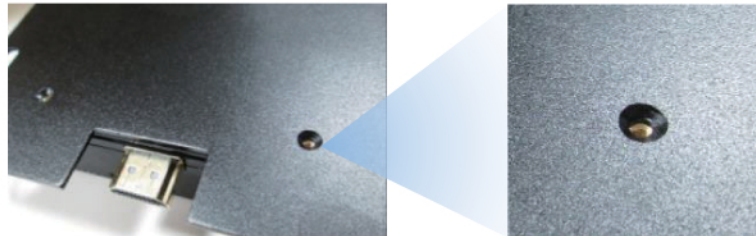


[Attach to HDMI port] Simply plug the player into the HDMI port of the monitor as shown in left.
[Attach on the back of the monitor] Separate the Velcro pads and stick one of them to the bottom of player. Stick the other Velcro pad onto the back of monitor, and then attach the player to it. Use HDMI extension cord to connect player and the monitor.





NMP309-W Network Media Player Quick Start Guide

3 Port connections

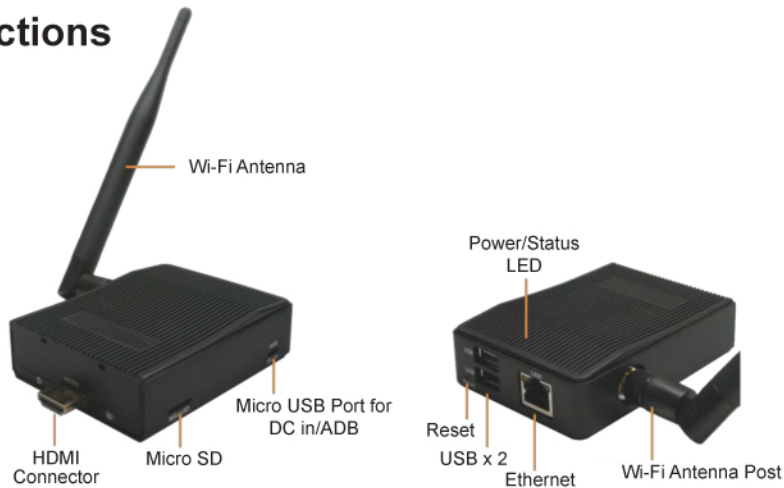

4 System setup

- PLUG** the AC power adapter into an AC outlet
→ You should see the boot up screen as shown on the right.
- WAIT** while player boots up (~ 60 seconds)
→ Once you see the "Basic settings" screen, the unit is ready for content update or menu configuration.
- PLUG IN** a USB mouse to the unit's USB port.
- Enter** the corresponding configuration menu by moving the mouse cursor over the configuration and click on the option to enter
→ (Wireless model only) Using the USB mouse, click on "Wireless LAN" to enter Wireless Configuration and provide security information to connect to your wireless access point.
→ Find and set the correct time/date AND time zone. **IMPORTANT:** time zone must be set correctly in the menus or via management software for scheduled playback.
→ (OPTIONAL) Set a Password in the menus to prevent unauthorized changes. **IMPORTANT:** Password is required to enter the setup menu during playback.
- Click** *Set content* button to enter the content service menu and configure your signage appliance to a content service.



<http://www.viewsonic.com/support/>



中国
<http://www.viewsonic.com.cn>
电话: 4008 988 588

香港
<http://www.hk.viewsonic.com>
電話: 852 3102 2900

澳門
<http://www.hk.viewsonic.com>
電話: 852 2840 3687

台灣
<http://www.viewsonic.com.tw>
電話: 0800 899 880

한국
<http://ap.viewsonic.com/kr/>
Phone: 080 333 2131

Singapore/Malaysia/Thailand
<http://www.viewsonic.com.sg>
Phone: 65 6461 6044

India
<http://www.in.viewsonic.com>
Phone: 1800 419 0959

United States
<http://www.viewsonic.com>
Phone: 1-800-688-6688

Canada
<http://www.viewsonic.com>
Phone: 1-866-463-4775

Europe
<http://www.viewsoniceurope.com>
www.viewsoniceurope.com/uk/support/call-desk/

Australia/New Zealand
<http://www.viewsonic.com.au>
Phone: 1800 880 818 (AUS)
0800 008 822 (NZ)

South Africa
<http://ap.viewsonic.com/za/>

Latin America
<http://www.viewsonic.com/la/>
<http://www.viewsonic.com/la/soporte/servicio-technico>

Puerto Rico & Virgin Islands
<http://www.viewsonic.com>
Phone: 1-800-688-6688 (English)
<http://www.viewsonic.com/la/soporte/servicio-technico>