

# >LDM163-181

All-in-one Direct View LED Display User Guide

IMPORTANT: Please read this User Guide to obtain important information on installing and using your product in a safe manner, as well as registering your product for future service. Warranty information contained in this User Guide will describe your limited coverage from ViewSonic® Corporation, which is also found on our web site at http://www.viewsonic.com in English, or in specific languages using the Regional selection box in the upper right corner of our website. "Antes de operar su equipo lea cu idadosamente las instrucciones en este manual"

Model No. VS18325 P/N: LDM163-181

## Thank you for choosing ViewSonic®

As a world-leading provider of visual solutions, ViewSonic® is dedicated to exceeding the world's expectations for technological evolution, innovation, and simplicity. At ViewSonic®, we believe that our products have the potential to make a positive impact in the world, and we are confident that the ViewSonic® product you have chosen will serve you well.

Once again, thank you for choosing ViewSonic®!

# Safety Precautions

Please read the following **Safety Precautions** before you start using the device.

- Keep this user guide in a safe place for later reference.
- Read all warnings and follow all instructions.
- Ensure there is no direct airflow from air conditioning blowing on the display.
- Do not use the device near water. To reduce the risk of fire or electric shock, do not expose the device to moisture.
- Avoid exposing the device to direct sunlight or other sources of sustained heat.
- Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that may increase the temperature of the device to dangerous levels.
- When moving the device, be careful not to drop or bump the device on anything.
- Do not place the device on an uneven or unstable surface. The device may fall over resulting in an injury or a malfunction.
- Do not place any heavy objects on the device or connection cables.
- If smoke, an abnormal noise, or a strange odor is present, immediately turn the device off and call your dealer or ViewSonic<sup>®</sup>. It is dangerous to continue using the device.
- Do not attempt to circumvent the safety provisions of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade and the third prong are provided for your safety. If the plug does not fit into your outlet, obtain an adapter and do not attempt to force the plug into the outlet.
- When connecting to a power outlet, DO NOT remove the grounding prong. Please ensure grounding prongs are NEVER REMOVED.
- Protect the power cord from being treaded upon or pinched, particularly at the plug, and at the point where it emerges from the equipment. Ensure that the power outlet is located near the equipment so that it is easily accessible.
- Only use attachments/accessories specified by the manufacturer.
- When a cart is used, use with caution when moving the cart/equipment combination to avoid injury from tipping over.
- Disconnect the power plug from the AC outlet if the device is not being used for a long period of time.

- Place the device in a well-ventilated area.
- Do not cover the surface of the display with any material.
- Do not block the air circulation around the display.
- Keep flammable materials away from the display.
- Refer all servicing to qualified service personnel. Service will be required when the unit has been damaged in any way, such as:
  - » if the power supply cord or plug is damaged;
  - » if liquid is spilled onto or objects fall in the unit;
  - » if the unit is exposed to moisture;
  - » if the unit does not operate normally or has been dropped.
- Do not assemble the display by yourself.
- This panel is an advanced product that contains millions of pixels. You may occasionally see pixel spots when viewing the screen. Since these deactivated pixels are not a defect, the performance and reliability of the product is not affected. For more information, please see page 89.

# **>** Contents

Safety Precautions	3
Introduction	8
Package Contents	
Product Overview	
Front Panel	
Rear Panel	
I/O Control Panel	10
Remote Control	11
Installation	14
Wall Mounting	14
Installing the Upper and Lower Wall Mounting Brackets	14
Installing the Middle Cabinets	16
Installing the Left and Right Cabinet	18
Connecting the System Control Box	20
Installing the LED Modules	22
Installing System Control Box Covers	23
Floor Stand Installation	25
Component List	25
Constructing the Floor Stand	27
Connecting the System Control Box to the Floor Base	
Installing the Middle Cabinets	30
Installing the Left and Right Cabinet	33
Connect the Network and Power Cables	
Installing the LED Modules	
Installing System Control Box Covers	36
Making Connections	38
Connecting to External Devices	38
HDMI IN Connection	38
Audio Connection	38
Video Output Connection	38
USB and Networking Connections	39
RS-232 Connection	30

Using Your Display	40
Powering On/Off your LED Display	
Home Screen	
Navigating the Home Screen	
Remote Control	
Keyboard and Mouse	
APP Center	
Input Source	
Settings	
Settings Menu Tree	
Network & Internet	
Connected Devices	
Apps & Notifications	
Display	
Sound	
Storage	62
System	63
Upgrade	65
On-Screen Display (OSD) Menu	66
On-Screen Display (OSD) Menu Tree	67
Menu Options	70
Picture	70
Sound	72
Time	74
NetWork	77
Update	79
Advanced	80
Embedded Applications	82
ViewBoard Cast	
vSweeper	
·	
Browser	0/ 27

Appendix	88
Specifications	
LED Display Stuck Pixel Definition	
Timing Chart	
HDMI (PC)	
HDMI (Video)	91
Supported Media Formats	92
Troubleshooting	94
Maintenance	96
General Precautions	96
Initial Operation	96
Front Panel Cleaning Instructions	96
Cabinet Cleaning Instructions	96
Regular Use	
Vacuum Suction Tool	98
LED Module Disassembly	100
RS-232 Protocol	102
RS-232 Hardware Specification	102
RS-232 Communication Setting	102
Command Table	103
Regulatory and Service Information	104
Compliance Information	
FCC Compliance Statement	
IC Warning Statement	
Country Code Statement	105
IC Radiation Exposure Statement	106
CE Conformity for European Countries	106
Declaration of RoHS2 Compliance	107
European Union Regulatory Conformance	107
Indian Restriction of Hazardous Substances	108
Product Disposal at End of Product Life	108
Copyright Information	109
Customer Service	110
Limited Warranty	111
Mexico Limited Warranty	114

## > Introduction

## **Package Contents**


Ito	em	Quantity	Note
Cabinet Sections	Kaj kajkajkaj kaj kaj kajkajkaj kaj kaj kajkajkaj kaj kaj kajkajkajkaj kaj kaj kajkajkajkaj kaj	6 sections total	One (1) Left, four (4) Middle, and one(1) Right.
System Control Box (Left and Right sides)		2 sides	
Quick Start Guide		1	
LED Modules		144 modules	The quantity of spare LED modules will vary by country.
Remote Control		1	
Screws	2 3 4 5	20 x M6x10mm (1) 32 x M6x50mm Expansion (2) 32 x TA6x30mm (3) 24 x M6x16mm (4) 15 x KM3x6mm (5)	
Hex Tool		1	
System Control Box Covers (Left, Middle, and Right sides)		3	
Wall Mounting Brackets		4	
Vacuum Suction Tool		1	
Anti-Static Gloves	Elen	2 pairs	
USB-A to USB-B Cable (5m)		1	

#### NOTE:


- This product is packed in an air transport box.
- Due to the size and weight, it is recommended that two or more people handle it.
- The base stand is an optional accessory and will be sold separately.


## **Product Overview**

## **Front Panel**

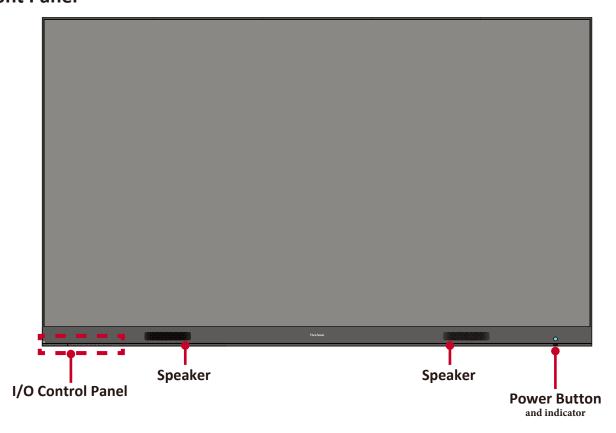

## **Rear Panel**

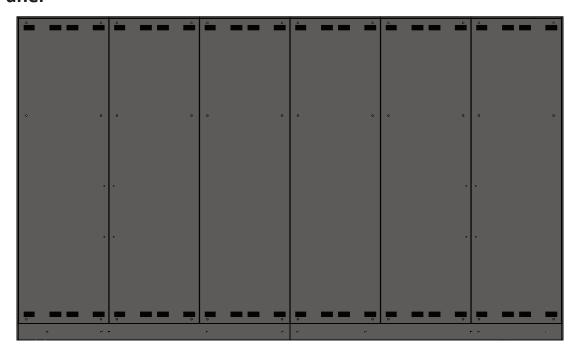

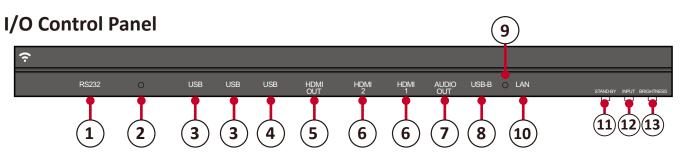


Number	Item	Port	Description	
1		RS-232	Serial control port.	
2	0	Ambient Light Sensor	Detects ambient light and adjusts brightness levels automatically.	
3	USB	USB 2.0	USB Reader (5V/0.5A)	
4	USB	USB 3.0	USB Reader. (5V/1A)	
5		HDMI Out	Extend content out to another display device.	
6		HDMI In	High definition input; connect to PC with HDMI output, set-top box, or other video device.	
7		Audio Out	Audio output to an external speaker.	
8		USB-B	Maintenance port for external PC connection.	
9	0	IR Receiver	Receiver for the Remote Control.	
10		LAN	Standard RJ45 (10M/100M/1000M) Internet connection interface.	
11	U	Stand-by	Press to enter Stand-by mode.	
12		Input Select	Press to cycle through available input sources.	
13		Brightness	Press to cycle through brightness levels.	

## **Locking the Control Panel**

When the administrator does not want others to use the control panel, it can be locked by pressing 1168+OK on the remote control.

## **Remote Control**

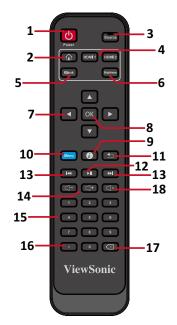

Number	lcon	ltem	Description
1	(b)	Power	Power On/Off
2		Home	Back to Home Screen
3	Source	Source	Input source selection
4	HDMI 1 HDMI 2	HDMI 1/2	Change to HDMI 1/2 input source
5	Blank	Blank	Switch to a blank, black screen
6	Brightness	Brightness	Adjust the brightness level
7		<b>▲/</b> ▼/ <b>∢</b> /▶	Directional buttons
8	ОК	ОК	Confirm the selection
9	•	i	Enter the Information page
10	Menu	Menu	Enter the Settings menu
11		Return	Return to previous
12	<b>▶II</b>	Play/Pause	Play/Pause content
13	I <del>«</del> »I	Forwards/Backwards	Move content forwards/backwards
14	< < >	Volume Up/Down	Increase/decrease the volume level
15		Numbers	Numeric input buttons
16			Input key for a dot
17	$\langle \times \rangle$	Backspace/Clear	Delete key for text input
18	Ľ√×	Mute	Mute/Unmute

#### **Inserting Remote Control Batteries**

The remote control is powered by two 1.5v "AAA" batteries.

To insert batteries into the remote control:

- 1. Remove the cover on the rear of the remote control.
- **2.** Insert two "AAA" batteries, ensuring the "+" symbol on the battery matches the "+" on the battery post.
- **3.** Replace the cover by aligning it with the slot on the remote control and snapping the latch shut.

**WARNING:** There is a risk of explosion if batteries are installed with incorrect polarity.

#### NOTE:


- It is recommended that you do not mix battery types.
- Avoid exposure to heat or steam.
- Do not allow water or other liquids to splash on the remote control. If the remote control becomes wet, wipe it dry immediately.
- Always dispose of old batteries in an environmentally friendly way. Contact your local government for more information on how to dispose of batteries safely.

#### **Locking the Remote Control**

When the administrator does not want others to control the remote control, it can be locked by pressing 1169+OK on the remote control.

## **Remote Control Receiver Range**

The operating range of the remote control is shown here. It has an effective range of 20 feet (6 meters), 30° degrees left and right. Ensure there is nothing obstructing the remote control's signal to the receiver.

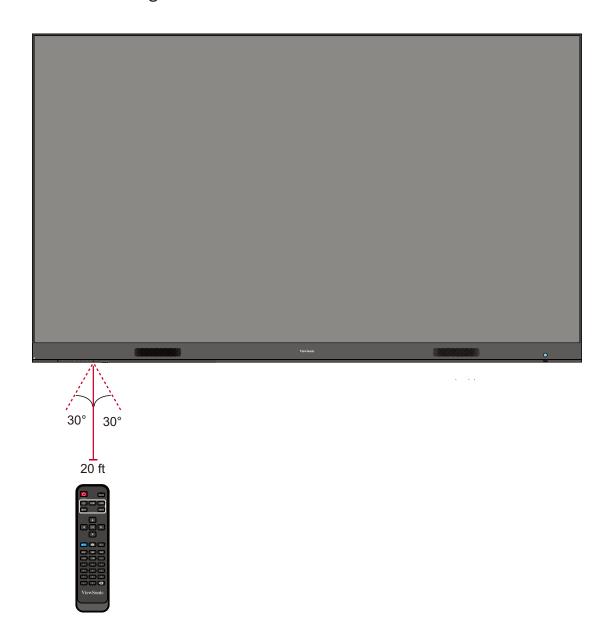

## > Installation


There are two installation methods: Wall-Mounted and Floor Stand.

#### **Before Installing**

- Maintain an adequate air gap between the back of the display and any wall for proper ventilation.
- Ensure there is no direct airflow from air conditioning or heating vents blowing on the display.
- Avoid installing the display in places with high humidity.
- Due to high power usage, always use power cords specifically designed for this product.

## **Wall Mounting**


**Installing the Upper and Lower Wall Mounting Brackets** 

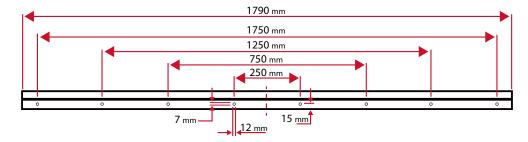


1. Ensure the wall area and size is an appropriate installation site.

**NOTE:** The height of the Upper *Wall Mount Brackets* must not be less than 102.36" (2.6 meters) from the ground.


- 2. Using the *Wall Mount Bracket* (pictured above) as a guide, mark each of the eight (8) holes and pre-drill each.
- **3.** Install the first Upper *Wall Mount Bracket* with the provided screws (M6x50mm Expansion for masonry; TA6x30mm for load bearing wood).
- **4.** Repeat **Step 2**, ensuring the second Upper *Wall Mount Bracket* is level with the first upper bracket.

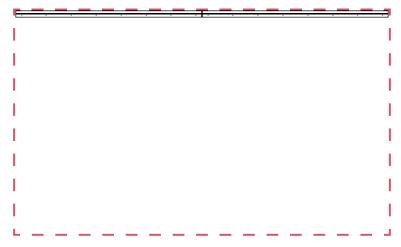

**5.** Install the Lower *Wall Mount Brackets* in the same manner as the Upper *Wall Mount Brackets*. The distance between the Upper and Lower *Wall Mount Brackets* is 77-3/8" (1965 mm).

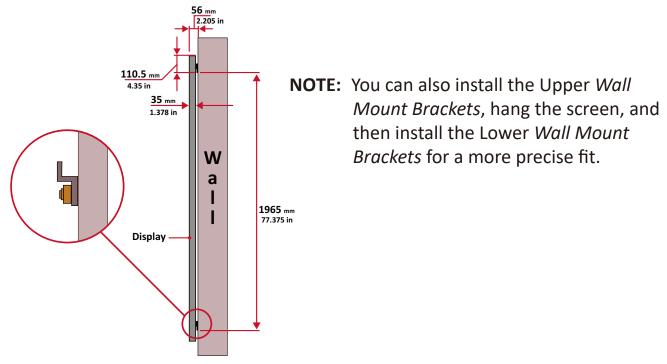


- Ensure the wall can safely support 423.29 lbs. (192 kg).
- **6.** After installing both Upper and Lower *Wall Mount Brackets*, the installation wall should look like:

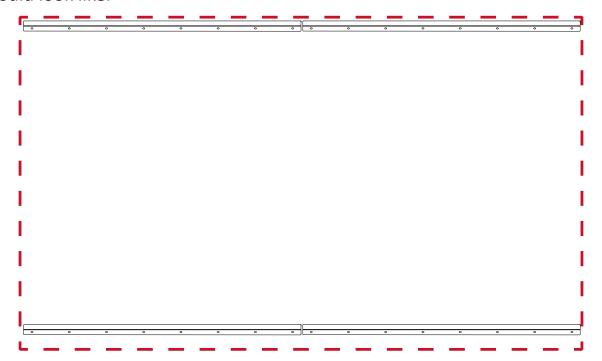


## **Installing the Middle Cabinets**


**1.** Ensure the *Mounting Brackets* on the rear of the four (4) *Middle Cabinets* are positioned at the top and bottom mounting positions as shown below:

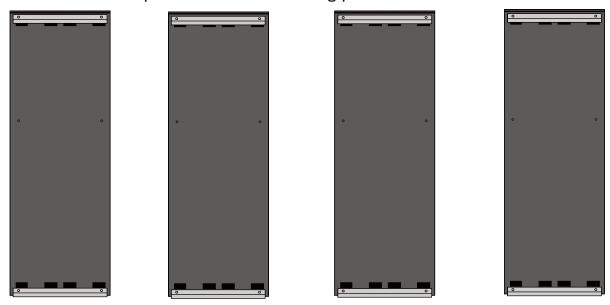


2. Carefully lift each Middle Cabinet up onto the Upper Wall Mount Brackets.

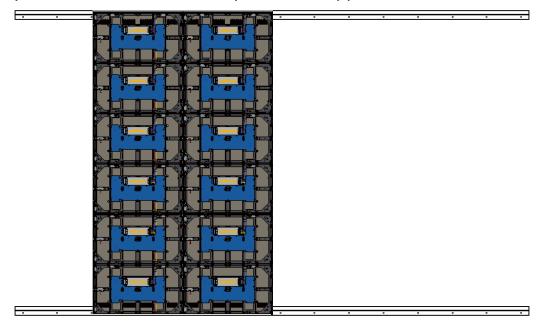


**3.** Ensure the *Mounting Brackets* sit securely on the *Wall Mount Brackets* as shown below.

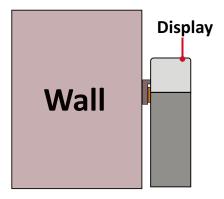

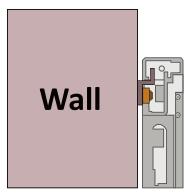


**4.** Push each *Locking Bolt* and lock each *Hook* with the hex tool to securely connect each cabinet together.

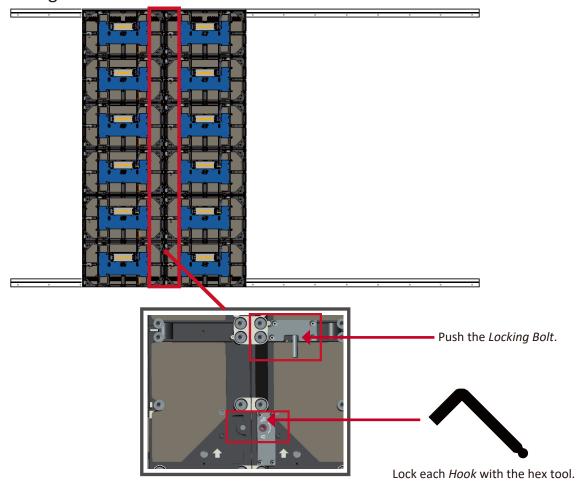


**NOTE:** There are six (6) *Locking Bolts* and 12 *Hooks* between each cabinet.

- **5.** Lift the remaining *Middle Cabinets* up onto the Upper *Wall Mount Brackets*, ensuring the *Mounting Brackets* sit securely on the *Wall Mount Brackets*.
- **6.** Repeat Step 4, securing the cabinets together with each *Locking Bolt* and *Hook*.

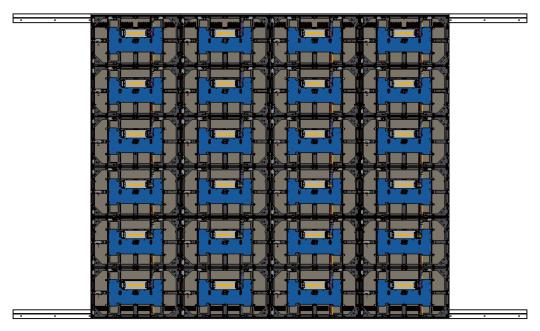


## **Installing the Left and Right Cabinet**

**1.** Ensure the *Mounting Brackets* on the rear of the *Left* and *Right Cabinet* are positioned at the top and bottom mounting positions as shown below:

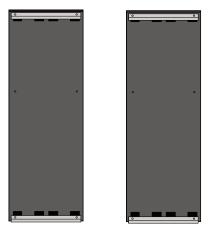


**2.** Carefully lift the *Left* and *Right Cabinet* up onto the Upper *Wall Mount Brackets*, ensuring the *Mounting Brackets* sit securely on the *Wall Mount Brackets*.

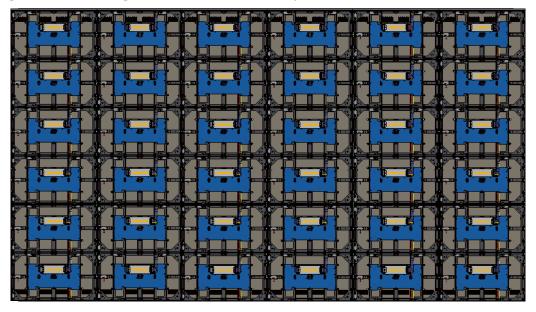

**3.** If necessary, adjust the *Left* or *Right Cabinet* so that they fit seamlessly with the *Middle Cabinets*.

**4.** Push each *Locking Bolt* and lock each *Hook* with the hex tool to securely connect the *Left* and *Right Cabinets*.

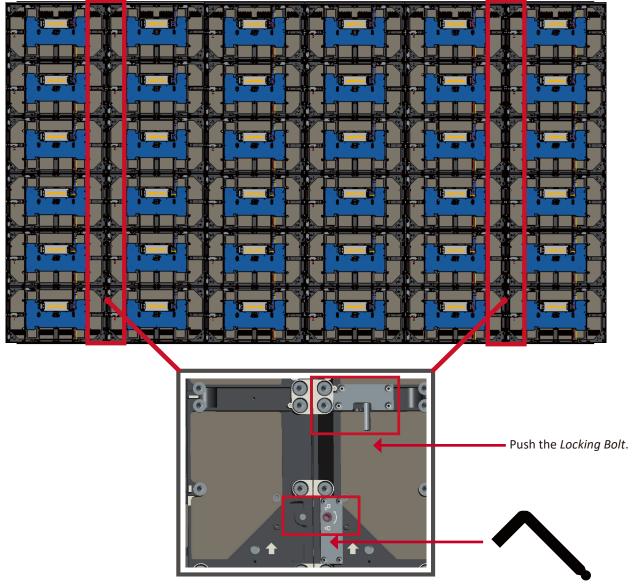

Lock each *Hook* with the hex tool.


**NOTE:** There are six (6) *Locking Bolts* and 12 *Hooks* between each cabinet.

## **Connecting the System Control Box**

**1.** Carefully unfold the *System Control Box* panel. Ensure the main system control board is on the left.

**NOTE:** Use caution as the *System Control Box* panel will be separated into two pieces, however the wires are connected.

2. Align the holes of the Cabinet with the System Control Box to attach.

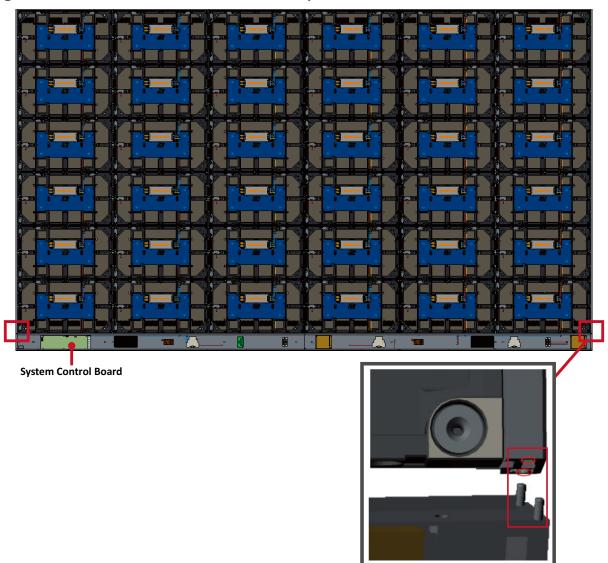


**3.** Further secure the *System Control Box* to the *Cabinets* with the 24 provided screws (M6x16mm).



**4.** Connect the Network and Power cables of the *Cabinets* to the *System Control Box*.


**NOTE:** There are six (6) Network and six (6) Power cables to connect.

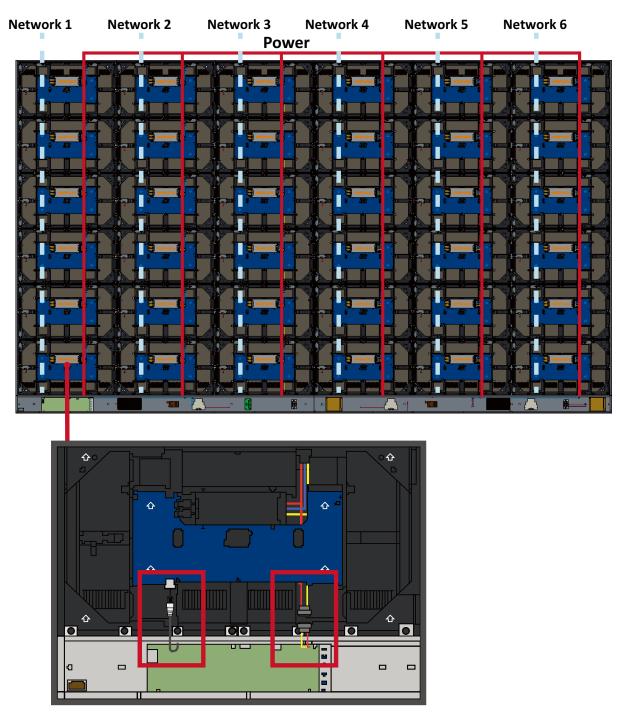


## **Installing the LED Modules**

Install each *LED Module* onto the *Cabinets*, being sure to match the corresponding numbers on the *Module* to the *Cabinet*.

Please wear Anti-Static Gloves before installing the LED modules.

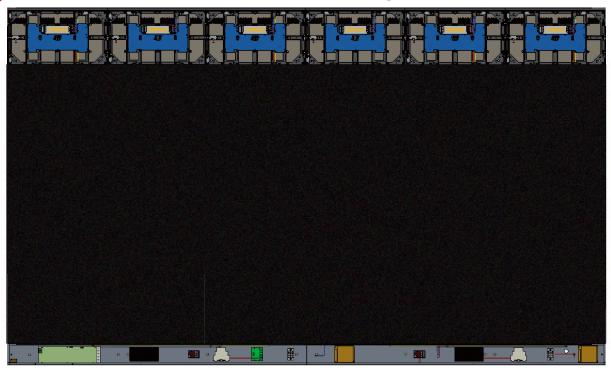

Ensure each *Module* is flush and that there is little to no gap between each.

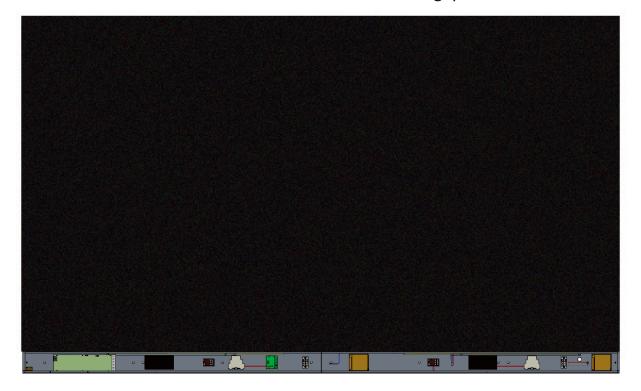

#### **Installing System Control Box Covers**


There are three (3) System Control Box Covers: Left, Middle, and Right.




**1.** Begin by installing the *Right Cover* onto the *System Control Box*.

**NOTE:** Ensure the **Power Button** cable is connected to the *System Control Box* Power cable before securing the *Cover*.


**2.** After connecting the **Power Button** cable, ensure the *Right Cover* is properly aligned with the *System Control Box*; then secure it with the 15 provided screws (KM3x6mm).

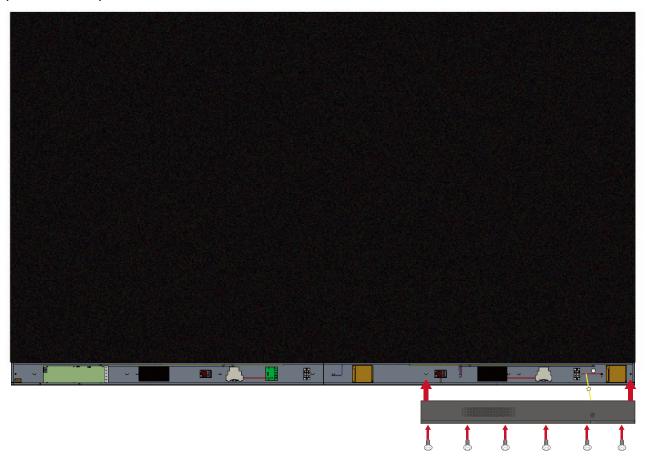

**3.** Repeat the above steps for the *Middle* and *Left Cover*.

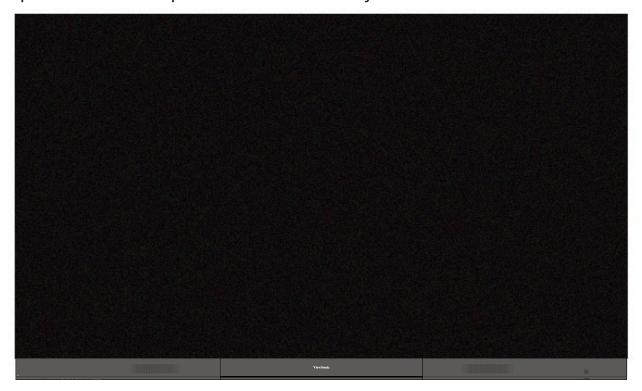

**4.** Your display is now ready for use.

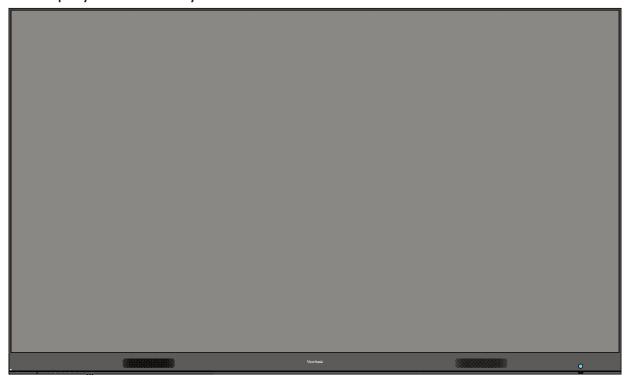

**NOTE:** An installation video is available at:


https://www.youtube.com/watch?v=cYmOUypjvWU&t=4s

## **Floor Stand Installation**

The floor stand is an optional accessory. Follow the below instructions to install your LED Display onto the stand.


## **Component List**

Letter	Item	Quantity	Description
А		1	Hex Tool
В		8	M6 x 80mm Bolt
С		1	Left Support
D		1	Bottom Cross Beam
E		1	Right Support
F		1	Top Cross Beam

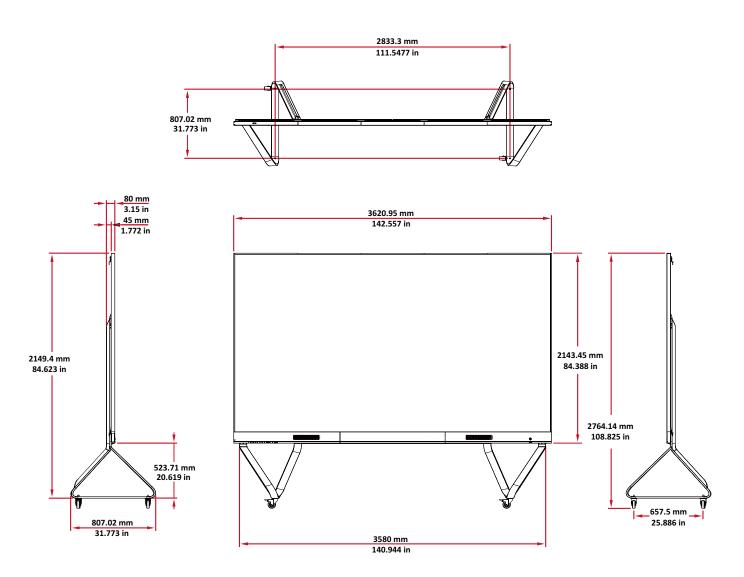


## **Constructing the Floor Stand**

**1.** Connect the *Left Support* to the *Bottom Cross Beam* with two (2) M6 x 80mm bolts.

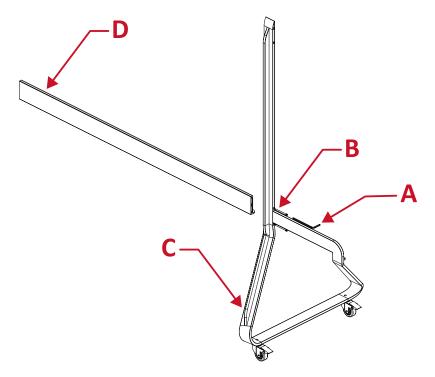


**2.** Connect the *Right Support* with the *Bottom Cross Beam* with two (2) M6 x 80mm bolts.

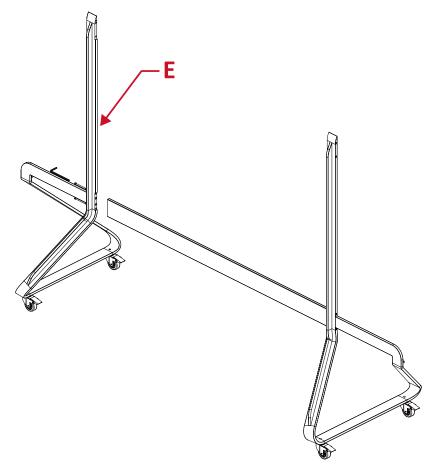


**3.** Connect the *Top Cross Beam* to the *Left* and *Right Supports* with four (4) M6 x 80mm bolts.

**NOTE:** Ensure the groove of the *Top Cross Beam* faces inwards.

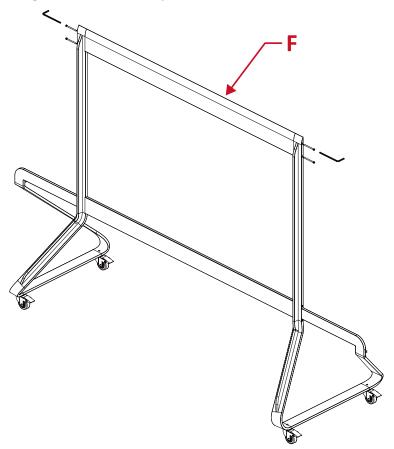

**4.** Ensure all bolts are tightened properly.

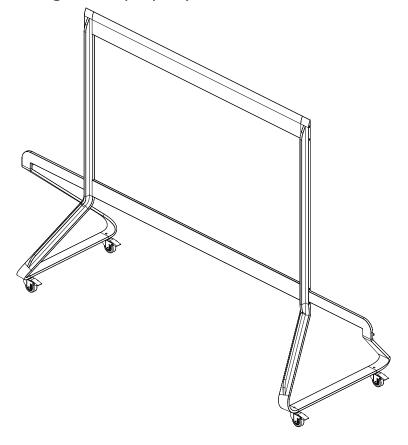

#### Connecting the System Control Box to the Floor Base

 
**1.** Carefully unfold the *System Control Box* panel. Ensure the main system control board is on the left.

**NOTE:** Use caution as the *System Control Box* panel will be separated into two pieces, however the wires are connected.

**2.** Align the *System Control Box* to the eight (8) holes on the *Bottom Cross Beam* and secure it with eight (8) screws (M6x10mm).




**3.** Install two (2) additional screws (M6x10mm) to connect the two halves of the System Control Box.




## **Installing the Middle Cabinets**


**1.** Ensure the four (4) *Mounting Brackets* on the rear of the four (4) *Middle Cabinets* are positioned as shown below:

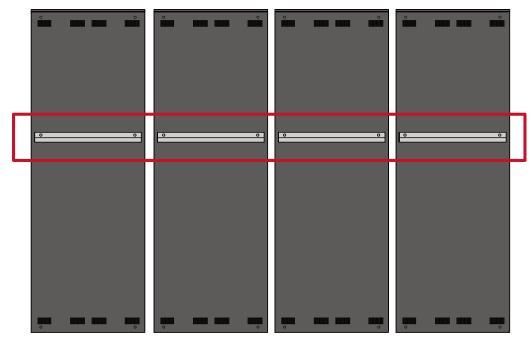


**2.** Carefully lift a *Cabinet* up onto the *Floor Stand*, securing the *Mounting Bracket* into the support channel of the *Top Cross Beam*. The bottom of the *Cabinet* will rest on the *Bottom Cross Beam*.

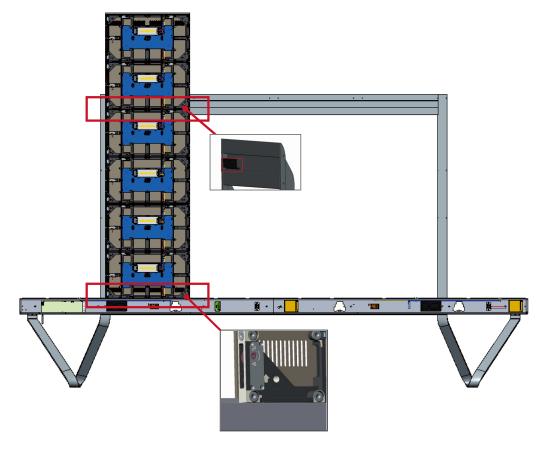

**3.** Secure the *Cabinet* to the *Support* with the provided screws (M6x10mm).

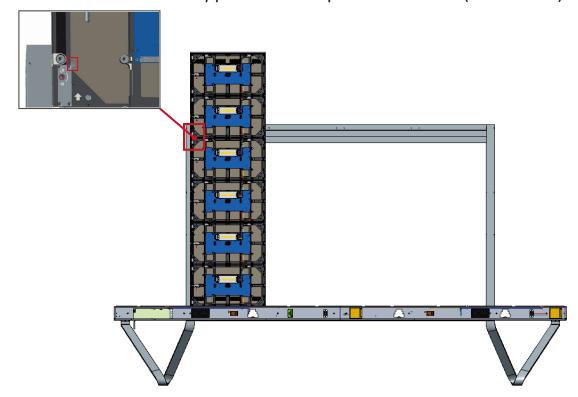

**4.** Push each *Locking Bolt* and lock each *Hook* with the hex tool to securely connect each cabinet together.

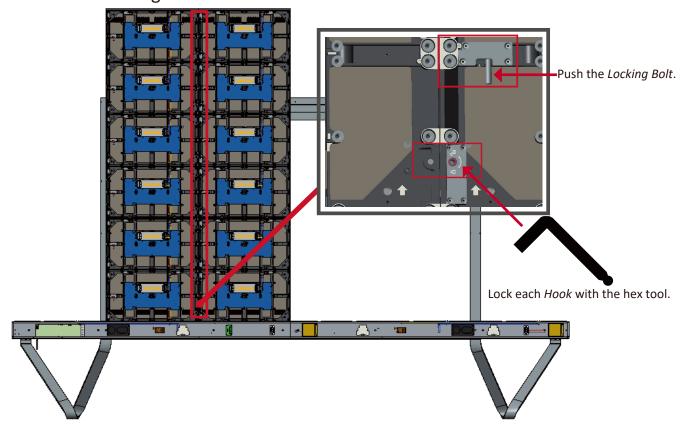

**NOTE:** There are six (6) *Locking Bolts* and 12 *Hooks* between each cabinet.

**5.** Repeat **Steps 2~4** for the remaining *Middle Cabinets*.




#### **Installing the Left and Right Cabinet**

**1.** Carefully lift the *Left* and *Right Cabinet* up onto the *Floor Stand*, securing the *Mounting Bracket* into the support channel of the *Top Cross Beam*. The bottom of the *Cabinet* will rest on the *Bottom Cross Beam*.

**NOTE:** Ensure the holes of the *Cabinet* and the *System Control Box* are aligned.

**2.** Push each *Locking Bolt* and lock each *Hook* with the hex tool to securely connect the *Left* and *Right Cabinet* to the *Middle Cabinets*.

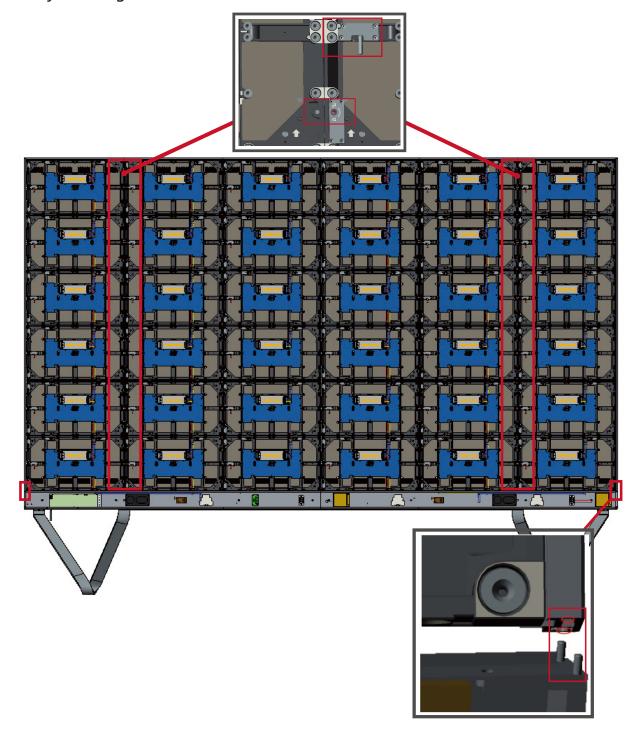


**NOTE:** There are six (6) *Locking Bolts* and 12 *Hooks* between each cabinet.

## **Connect the Network and Power Cables**

Connect the Network and Power cables of each Cabinet to the System Control Box.


**NOTE:** There are six (6) Network and six (6) Power cables to connect.

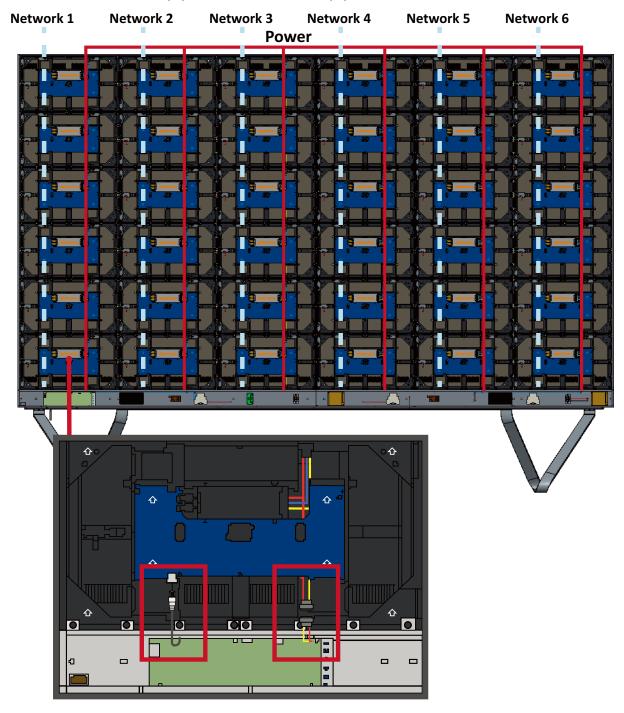

## **Installing the LED Modules**

Install each *LED Module* onto the *Cabinets*, being sure to match the corresponding numbers on the *Module* to the *Cabinet*. Ensure each *Module* is flush and that there is little to no gap between each.

Please wear Anti-Static Gloves before installing the LED modules.

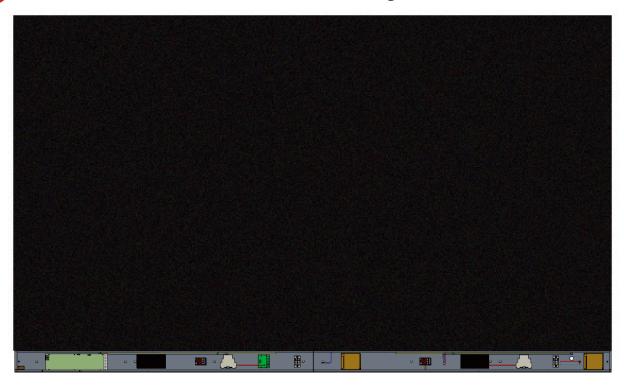

#### **Installing System Control Box Covers**

There are three (3) System Control Box Covers: Left, Middle, and Right.




**1.** Begin by installing the *Right Cover* onto the *System Control Box*.

**NOTE:** Ensure the **Power Button** cable is connected to the *System Control Box* Power cable before securing the *Cover*.

**2.** After connecting the **Power Button** cable, ensure the *Right Cover* is properly aligned with the *System Control Box*; then secure it with the 15 provided screws (KM3x6mm).



**3.** Repeat the above steps for the *Middle* and *Left Cover*. Once all of the *Covers* are secured, your LED Display is ready to use.

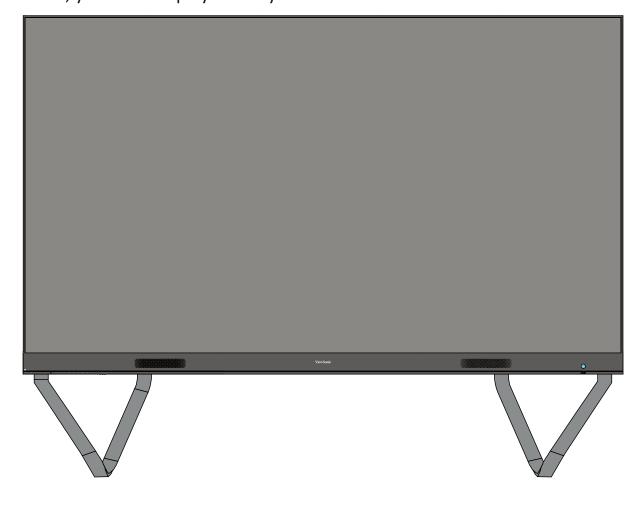

**NOTE:** An installation video is available at:

https://www.youtube.com/watch?v=cYmOUypjvWU&t=4s

# Making Connections

# **Connecting to External Devices**


#### **HDMI IN Connection**


### **Media Player Connection**

Connect an HDMI cable from your external device to an **HDMI IN** port on the LED display.

### **PC Connection**


Connect an HDMI cable from your PC to an **HDMI IN** port on the LED display.

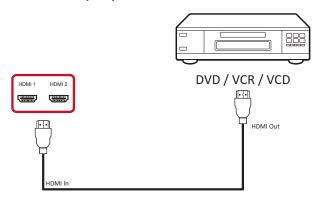

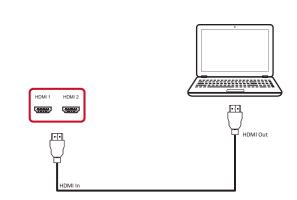


#### **Audio Connection**

Connect an audio cable from your external audio device to the **Audio Out** port on the LED display.

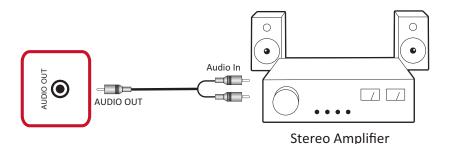

### **Video Output Connection**

To output video via an external display device, connect an HDMI cable to the **HDMI IN** port of your external display device, and the other end to the **HDMI OUT** port of your LED display.

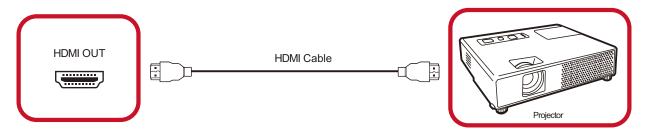


### **USB** and Networking Connections

Just like any PC, it is easy to connect various USB devices and other peripherals to your LED display.

### USB (Type A / Type B)


• USB Type A

Plug the USB device, cable, or storage drive into the **USB Type A** port.

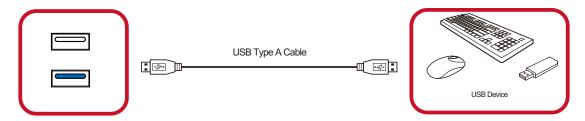


### USB Type B

Connect your PC with the LED display for debugging purposes via the **USB Type B** port on the LED display.

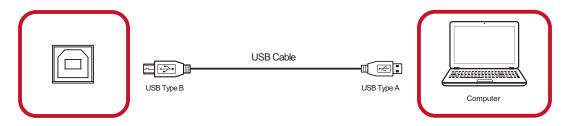

## Networking and Modem cables

Plug the network cable into the **LAN** port.

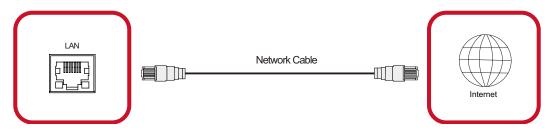

#### **RS-232 Connection**


When you use a RS-232 serial cable to connect your LED display to an external computer and control system certain functions can be controlled remotely such as: Power On/Off, Volume adjustment, Input select, Brightness, and more.



# Using Your Display


# Powering On/Off your LED Display

**1.** Ensure the power cord is connected and plugged into a power outlet.

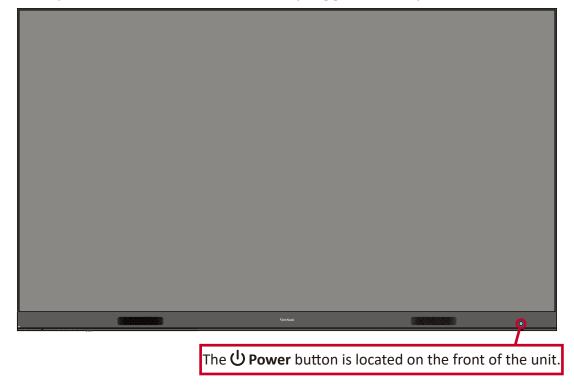

- 2. Press the  $\bigcirc$  Power button to turn on the LED display.
- 3. To turn the LED display off, press the  $\circlearrowleft$  Power button again.

# **Home Screen**

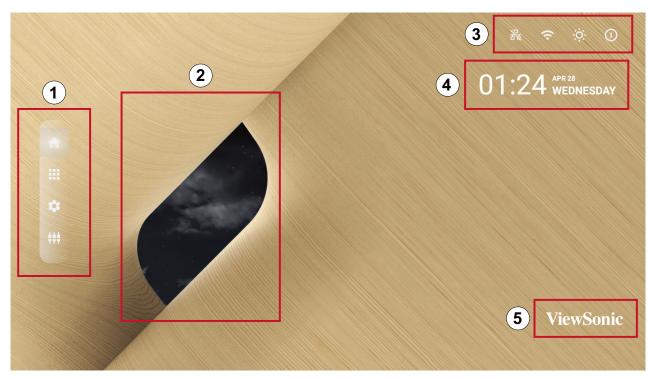


Number	Item	Description	
1	Main Menu	Access the <b>Home Screen</b> , <b>APP Center</b> , <b>Settings</b> , and <b>Input</b> Source.	
2	Time of Day Indicator	The sky will change over the day between morning, noon, afternoon, and night.	
3	Quick Access	Quick access to LAN, Wi-Fi, Brightness, and Power.  NOTE: Only supported by keyboard and mouse.	
		Automatic time adjustment, time zone selection, and 24-hour format can all be adjusted on page 64.	
4	Date & Time	The Date & Time can also be hidden from the Home Screen under:  Settings > Display > Launcher Settings	
5	ViewSonic Logo	The logo can be hidden from the Home Screen under:  Settings > Display > Launcher Settings	

## **Navigating the Home Screen**


### **Remote Control**

The remote control can be used to easily navigate the Home Screen. When using the remote control, ensure it is kept within the IR receiver range as shown below:

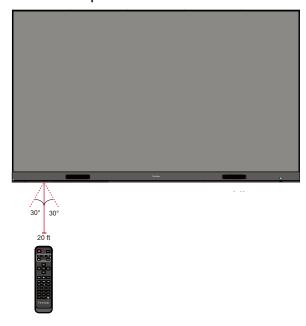


### **Keyboard and Mouse**

 When connected to the USB Type-A port of the display, a keyboard and mouse can also be used to navigate the Home Screen.




The mouse pointer will appear as an orange dot on the display when used:

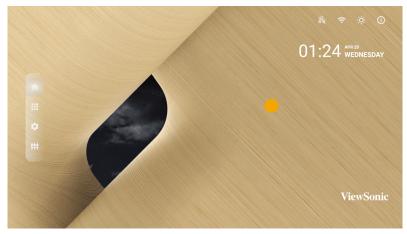

- The left mouse button will confirm actions.
- The right mouse button will go back to the previous layer.
- Keyboard shortcuts and hot keys are also supported, including: audio adjustment, mute, and back to the Home Screen.

## **APP Center**


Installed applications will be in the APP Center.

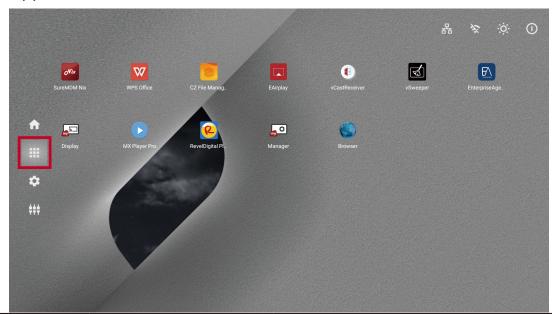

Icon	Name	Description
	Browser	Web browser
	Display	Wirelessly mirror your desktop
	EAirplay	AirPlay mirroring
EV	EnterpriseAgent	Device management
	File Manager	File explorer
	Manager	Remote device management
<u>R</u>	Revel Digital Signage	Manage digital signage
ONix	SureMDM Nix	Secure, monitor, and manage devices
W	WPS Office	Create documents, spreadsheets, and presentations
	vCastReceiver	Receive casted content from devices
<b>3</b>	vSweeper	Clear up storage space

**NOTE:** Preloaded applications are subject to change without notice.

# **Input Source**

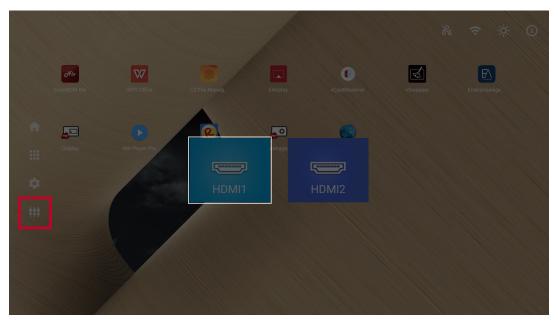

The display supports two input sources: **HDMI 1** and **HDMI 2**.

**NOTE:** Both input sources support HDMI 2.0.

# Settings

Adjust and view the display's settings.





Menu	Description	
Network & Internet	View and adjust Wi-Fi, Data Usage, Ethernet, Potable Hotspot, and VPN	
<b>Connected Devices</b>	View and adjust Connected Devices	
Apps & Notifications	View and adjust App Info., Notifications, App Permission Default Apps, and Special App Access	
Display	View and adjust Brightness Level, Ambient Light Sensor, Font Size, Startup & Shutdown, Input Setting, and Launcher Settings	
Sound	View and adjust Media Volume	
Storage	View and adjust Device Storage	
System	View and adjust Languages & Input, Date & Time, Reset, and About Device	
Upgrade	View and adjust OTA Upgrade and Local Update	

# **Settings Menu Tree**

Main Menu	Sub-menu		Menu Option	
		Wi-Fi	On Off	
		Wi-Fi List	Add Network	
	   Wi-Fi		Open Network	On
	VVI 11		Notification	Off
		Wi-Fi Preference	Keep Wi-Fi on During Sleep	
			Advanced	
		Wi-Fi Data Usage		
Network &	Data Usage	Network Restrictions	Meter Wi-Fi Network	On
Internet				Off
	Ethernet	Ethernet	On	
			Off	
		Ethernet IP Mode		
		Ethernet Details		
		Portable Wi-Fi	On	
	Portable	Hotspot	Off	
	Hotspot	Set up Wi-Fi Hotspot		
	VPN			
Connected	Connected	On		
Devices	Devices	Off		


Main Menu	Sub-menu	_	Menu Option
	Ann Info	Installed Apps	Disable
	App Info.	Installed Apps	Force Stop
		Allow	On
		Notifications Dots	Off
	Notifications	On the Lock	Don't Show Notifications at All
		On the Lock Screen	Show All Notification's Content
	App Permissions	Body Sensors	
Apps &		Calendar	
Notifications		Camera	
		Contacts	
		Location	
	1 0111113310113	Microphone	
		Phone	
		SMS	
		Storage	
		Assist & Voice	
		Input	
	Default Apps	Browser	
		Home	
		Opening Links	


Main Menu	Sub-menu	<b>I</b>	Menu Option	
Apps & Notifications	Special App Access	Battery Optimization  Device Admin Apps  Do No Disturb Access  Display Over other Apps  VR Helper Services  Modify System Settings  Notification Access  Picture-in-Picture  Premium SMS Access  Unrestricted Data Access  Usage Access  Install Unknown Apps		
	Brightness Level	(-/+, 1~8)		
	Ambient Light Sensor	On Off		
	Font Size	(-/+, 1~4)		
Display	Other Display Settings		Custom Resolution	W: 800~1920 H: 600~1080
		Display Settings	Custom DPI	(-/+, 100~240)
			Custom Wallpaper	
		Boot Logo Settings	Video Logo	


Main Menu	Sub-menu		Menu Option	
		Last Shutdown Channel		
			Home	
			HDMI 1	
		Default Startup	HDMI 2	
		Channel	APP (Display)	
	Startup & Shutdown		APP	
	Shutdown		(vCastReceiver)	
		Standby Mode	Hibernate	
		Stariuby Mode	Sleep	
			ViewSonic	
		Splash Screen	Black	
Display			Blue	
	Input Setting		HDMI 1	Display
		Input Alias	TIDIVII 1	Hide
			HDMI 2	Display
				Hide
		Signal Source Detect	HDMI	Enable
				Disable
		ViewSonic Logo	On	
	Launcher		Off	
	Settings	Data & Timo	On	
		Date & Time	Off	
		Theme		
Sound	Media Volume	(-/+, 0~100)		
			Storage	On
			Manager	Off
		Internal Shared	Photos & Videos	
Storage	Device Storage	Storage	Music & Audio	
			Games	
			Movie & TV	
		Portable Storage		


Main Menu	Sub-menu	l l	Menu Option
		Languages	
		Virtual Keyboard	Remote Controller Input Method Manage
			Keyboards Hi Keyboard
	Language &		Hi Keypad
	Input	Physical Keyboard	Keyboard Assistance
			Gestures
			Preferred Engine
		Advanced	Language
		Advanced	Speech Rate
			Pitch
System	Date & Time	Automatic Date &	On
		Time	Off
		Select Time Zone	
		Use 24-hour	On
		Format	Off
		Network Settings Reset	
	Reset	Reset App Preferences	
		Factory Data Reset	
		Status	
		Legal Information	
	About Device	Model	
	About Device	Kernel Version	
		Build Number	
		Total Time	
	OTA Upgrade	OTA Cloud Server	
Upgrade	Local Update	sda1	
		SDcard	

#### **Network & Internet**

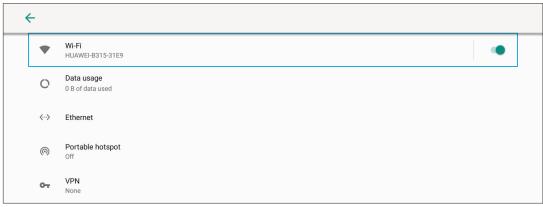

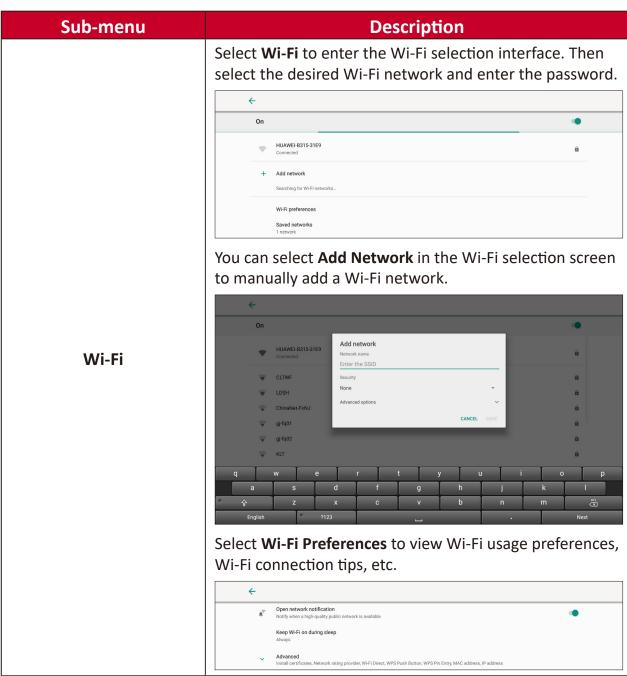

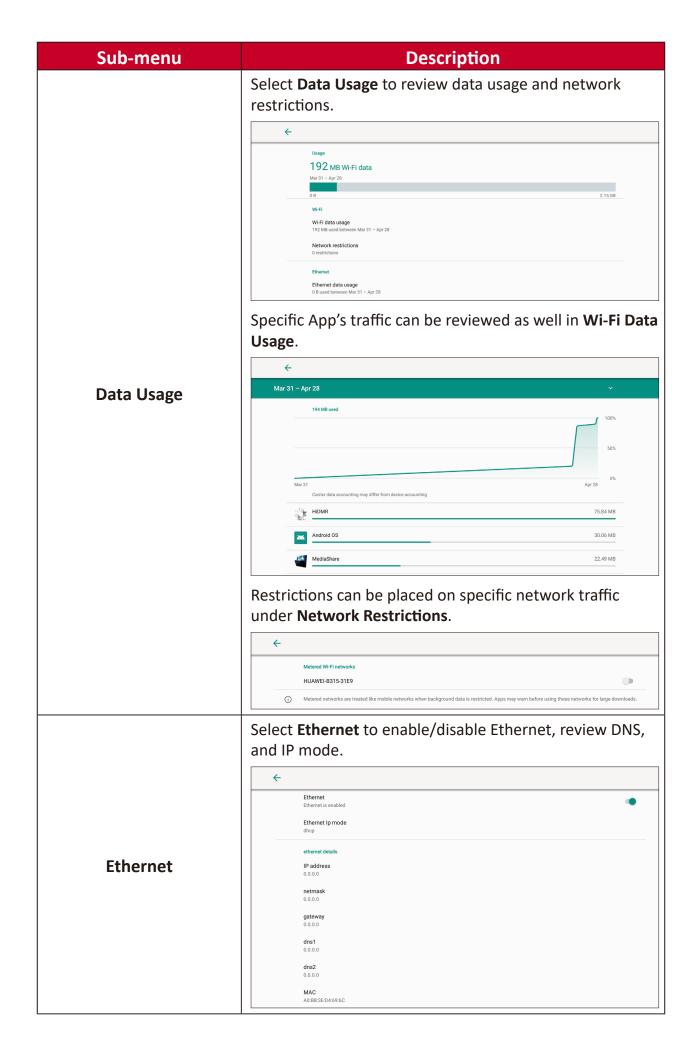

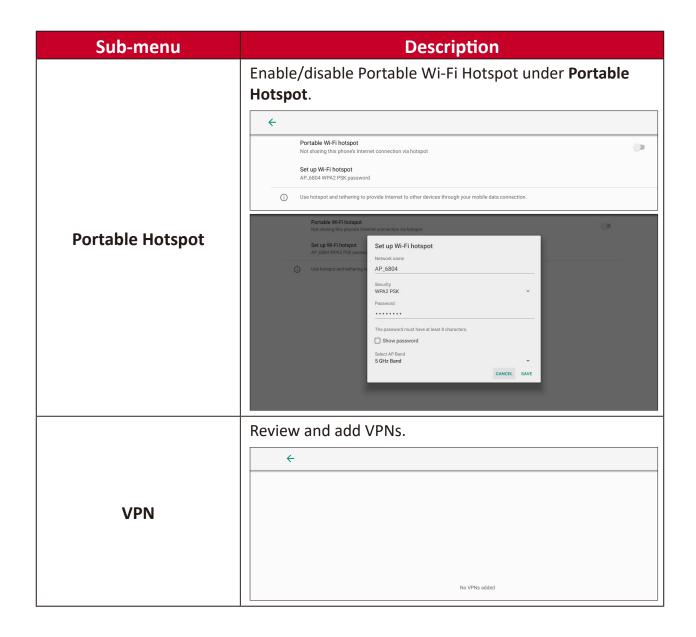


### **Connected Devices**





Enable/disable device connection, review connected devices, and search and connect to other devices.

## **Apps & Notifications**



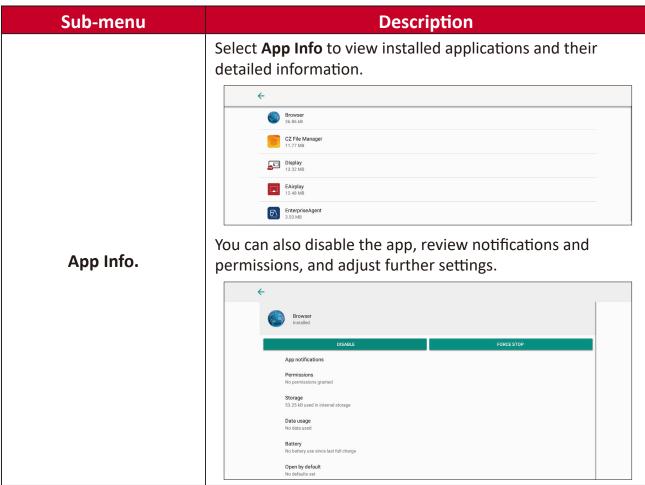


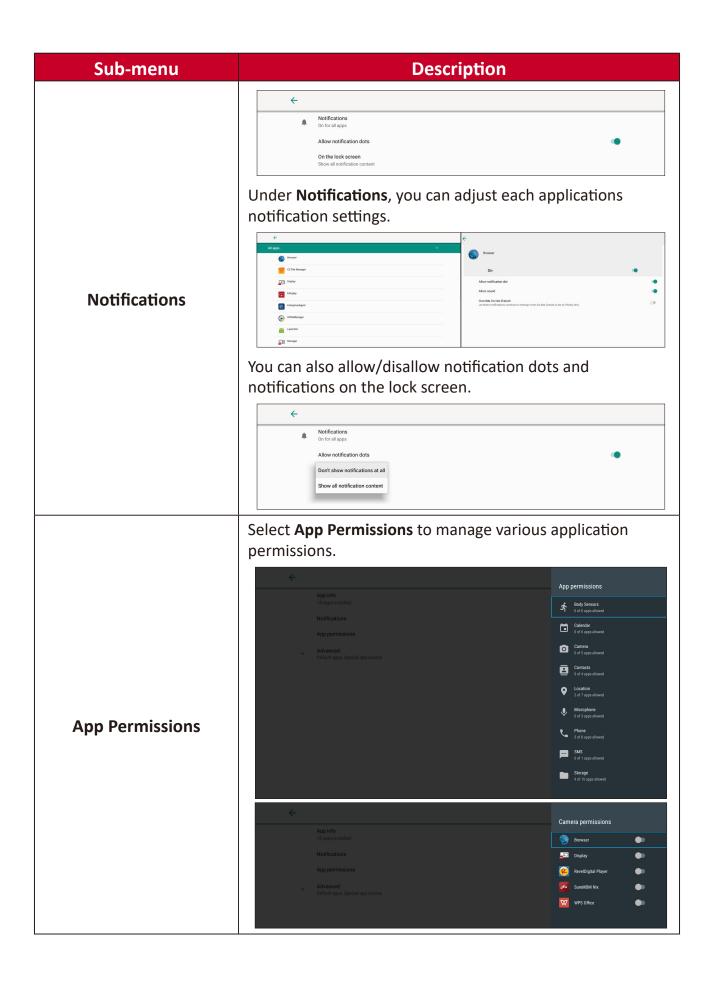


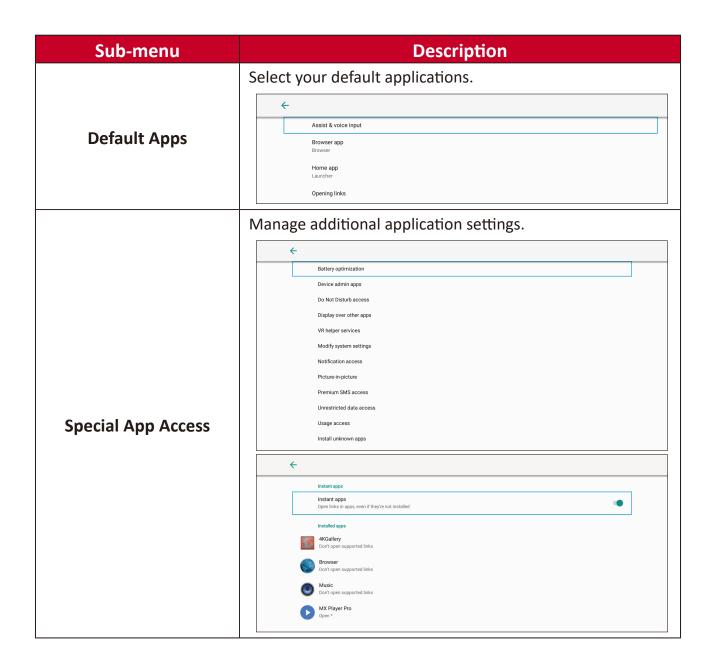


## **Display**



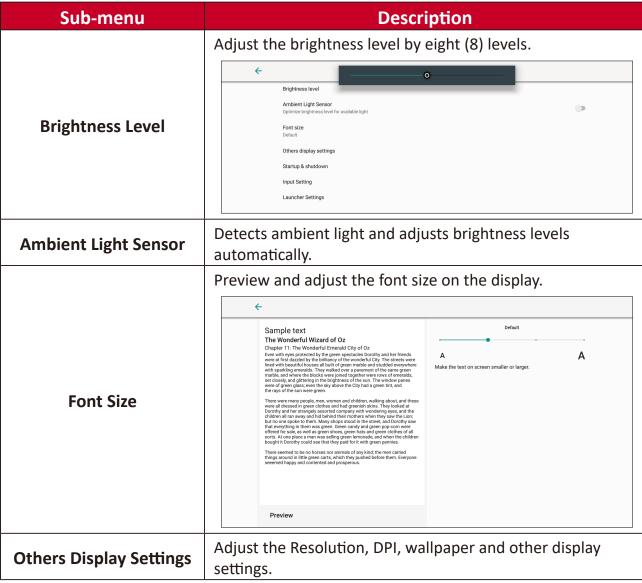

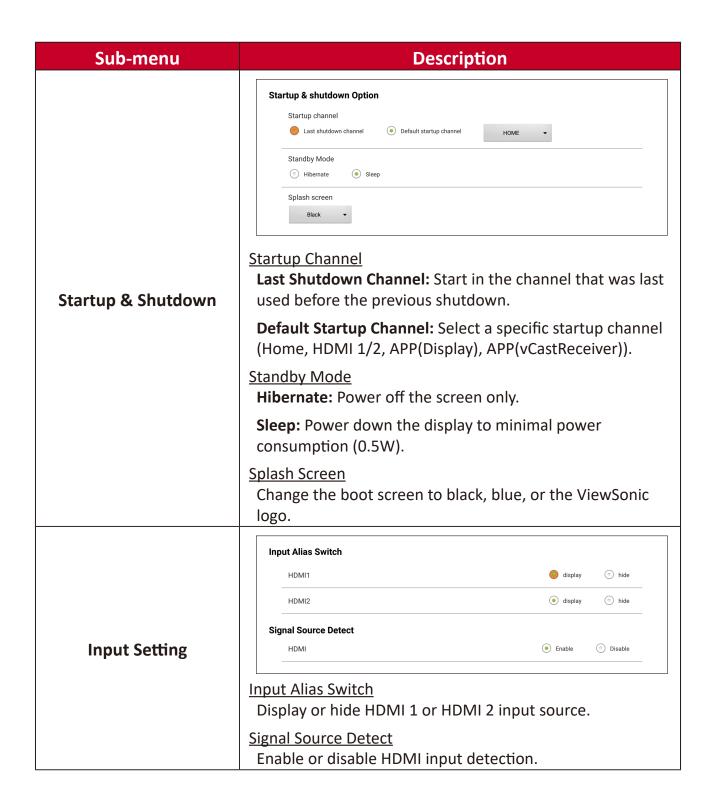

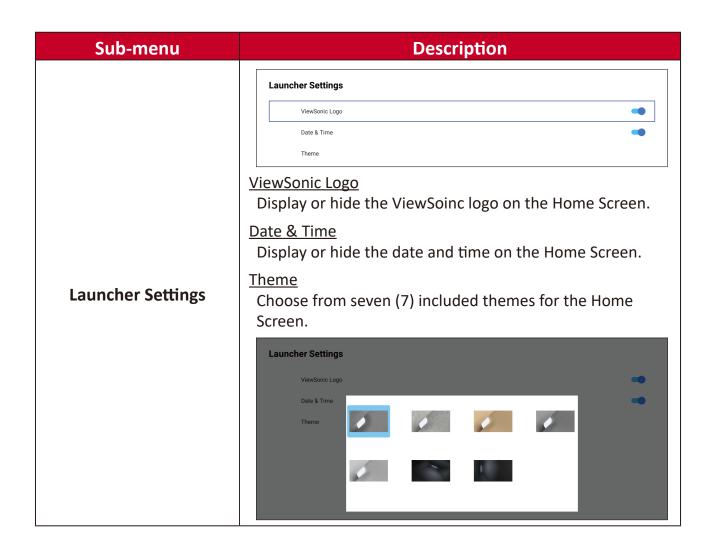

## Sound




Sub-menu	Description
Media Volume	Adjust the volume level of the display.


## Storage




Sub-menu	Description
Device Storage	Total internal storage used.
Internal Shared Storage	Internal storage allocation.
Portable Storage	External storage device details.

### **System**

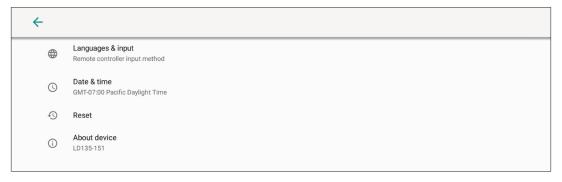


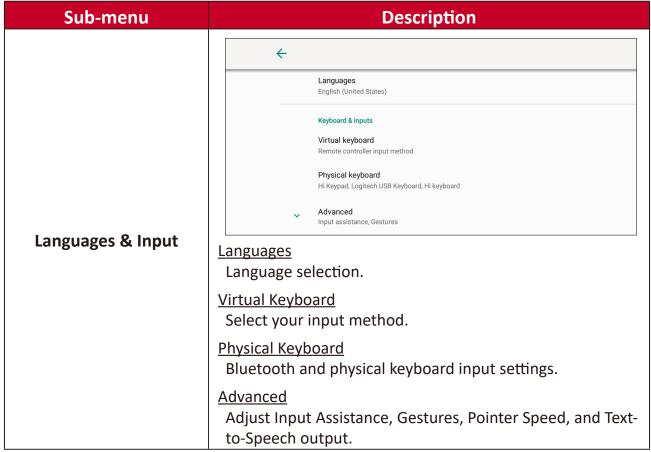

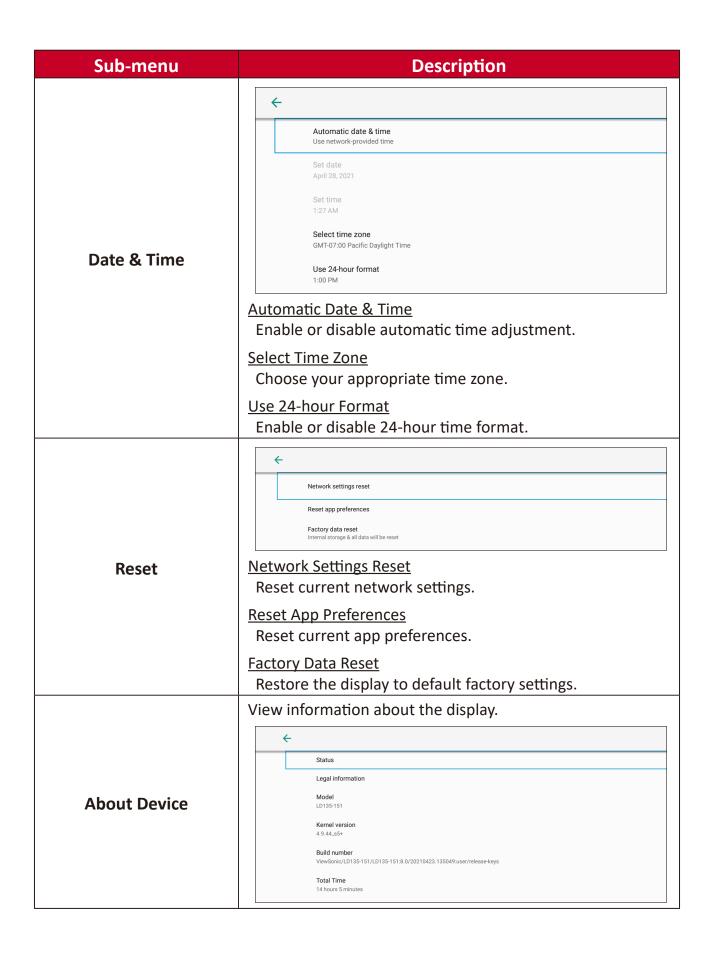

### **Upgrade**



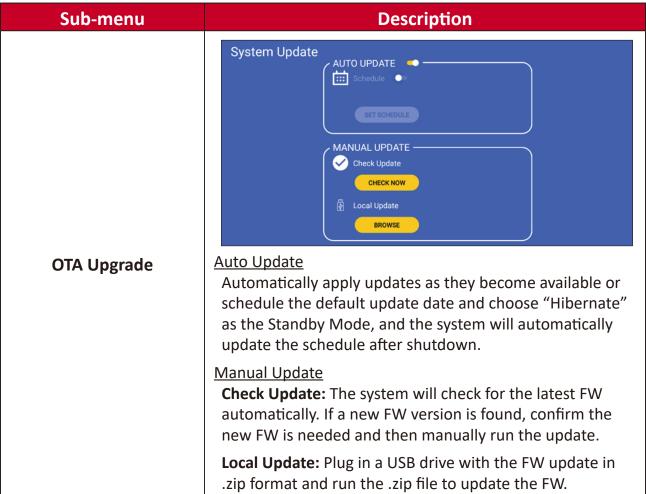

## **On-Screen Display (OSD) Menu**

Use the On-Screen Display (OSD) Menu to adjust various settings.

NOTE: The OSD Menu is only available when there is an input source, e.g. HDMI.



To open and operate the OSD Menu:

- 1. Press the **MENU** button on the remote control.
- **2.** Press  $\nabla/\triangle/\triangleleft/\triangleright$  on the remote control to select menu items or adjust values.
- **3.** Press **OK** to confirm your selection.
- **4.** Press the **RETURN** button to go back to the previous menu level.
- **5.** Press the **MENU** button to exit the OSD Menu.

# On-Screen Display (OSD) Menu Tree


Main Menu	Sub-menu		Menu Optio	n
Picture	Picture Mode	Mode	Standard	
			Vivid	
			Soft	
			User	
		Brightness	(-/+, 0~100)	
	Advanced	Color Temp	Standard	
			Cool	
			Warm	
		Noise Reduction	Off	
			Low	
			Middle	
			High	
		PC Mode	PC	
			Video	
			Auto	
		Picture Reset		
Sound	Sound Mode	Sound Mode	Standard	
			News	
			Music	
			Movie	
			Sports	
			User	
		EQ_120Hz	(-/+, 0~100)	
		EQ_500Hz	(-/+, 0~100)	
		EQ_1.5KHz	(-/+, 0~100)	
		EQ_5KHz	(-/+, 0~100)	
		EQ_10KHz	(-/+, 0~100)	
	Advanced	Balance	(-/+, -50~50)	
		Audio Reset		

Main Menu	Sub-menu		Menu Opti	ion
Time	Time Setup	Time Setting	Date Picker	
		Shutdown Time	Repeat: Off/Once/Every	day/ Workday
			Time	
		Power ON Time	Repeat: Off/Once/Every	v day/ Workday
			Time	
			Source	HDMI 1
				HDMI 2
		Sleep Timer	Off/1/10/20/30 min	)/60/90/120/ 180/240
		Power Saving	Off/1/3/5/10 m	nin
		Time Sync	Network Time	
			Off	
		Time Zone	Shanghai/Calcutta/Harare/Karachi/ Brazzaville/Beirut/Jerusalem/Tehra Baghdad/Ulaanbaatar/Damascus/ Sydney/Paris/Rome/London/Dubai, Tokyo/US-PT	
NetWork	Ethernet	Ethernet Switch	Off	
	Setting		On	
		Connection	DHCP IP	
		Mode	Static IP	
		Network Status		
	WiFi Setting	WiFi Switch	Off	
			On	
		WiFi List	Scan WiFi List	
			Add WiFi network	
		Network Status		
Update	Local Update	SD Card		

Main Menu	Sub-menu	Menu Option	
Advanced	Language	Menu Language	English
			Français
			Español
			Deutsch
			Русский
			Dutch
			繁體中文
			简体中文
			Turkish
			Arabic
	Restore	Restore Setting	
		Restore Default	
	About System	СРИ	
		GPU	
		Memory	
		Device Space	
		OS Version	
		Software Version	


## **Menu Options**

### **Picture**

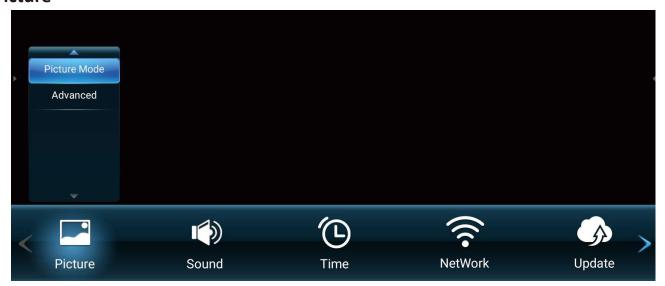


- 1. Press MENU on the remote control to display the OSD Menu.
- **2.** Then press **OK** or use  $\nabla/\Delta/\blacktriangleleft/\triangleright$  on the remote control to select the **Picture** menu.
- 3. Press ▼/▲ to select the menu option. Then press OK to display its sub-menu, or press ◀/▶ to adjust/select the setting.

NOTE: Some sub-menu options may have another sub-menu layer.

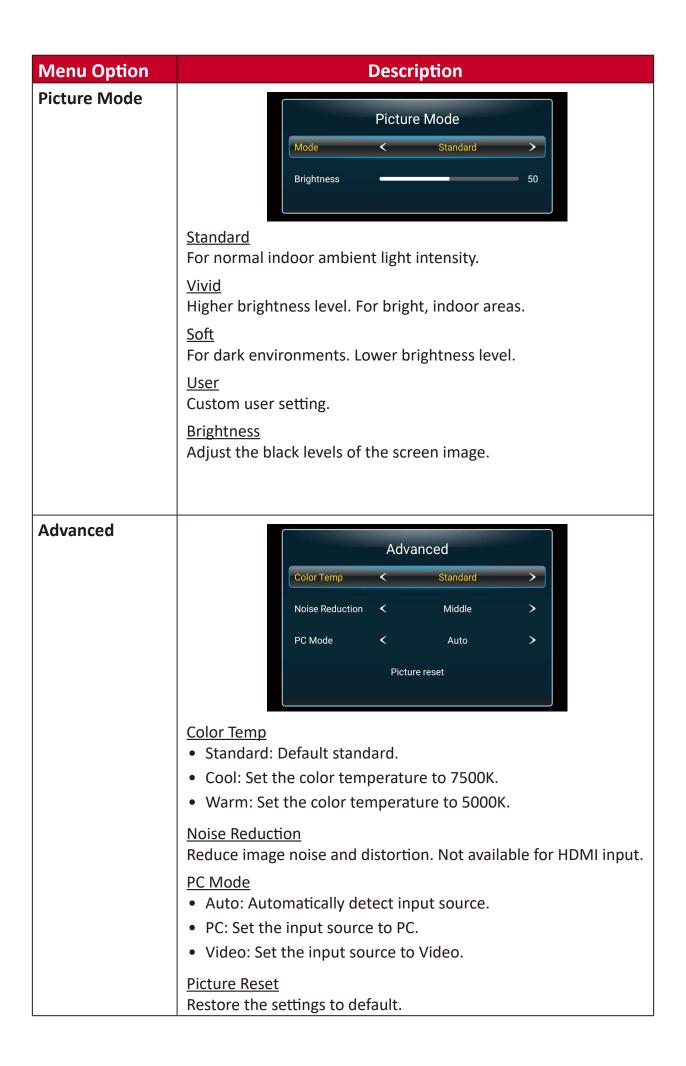


#### Sound

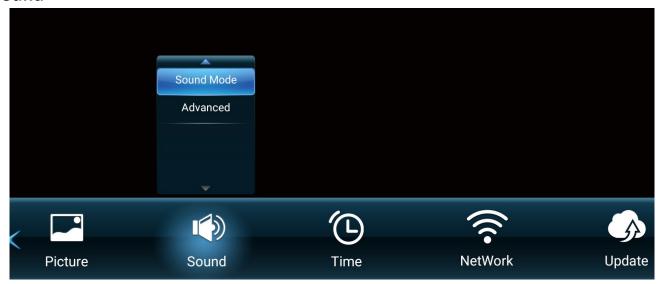


- 1. Press MENU on the remote control to display the OSD Menu.
- **2.** Then press **OK** or use  $\nabla/\triangle/\blacktriangleleft/\triangleright$  on the remote control to select the **Sound** menu.
- 3. Press ▼/▲ to select the menu option. Then press OK to display its sub-menu, or press ◀/▶ to adjust/select the setting.

NOTE: Some sub-menu options may have another sub-menu layer.

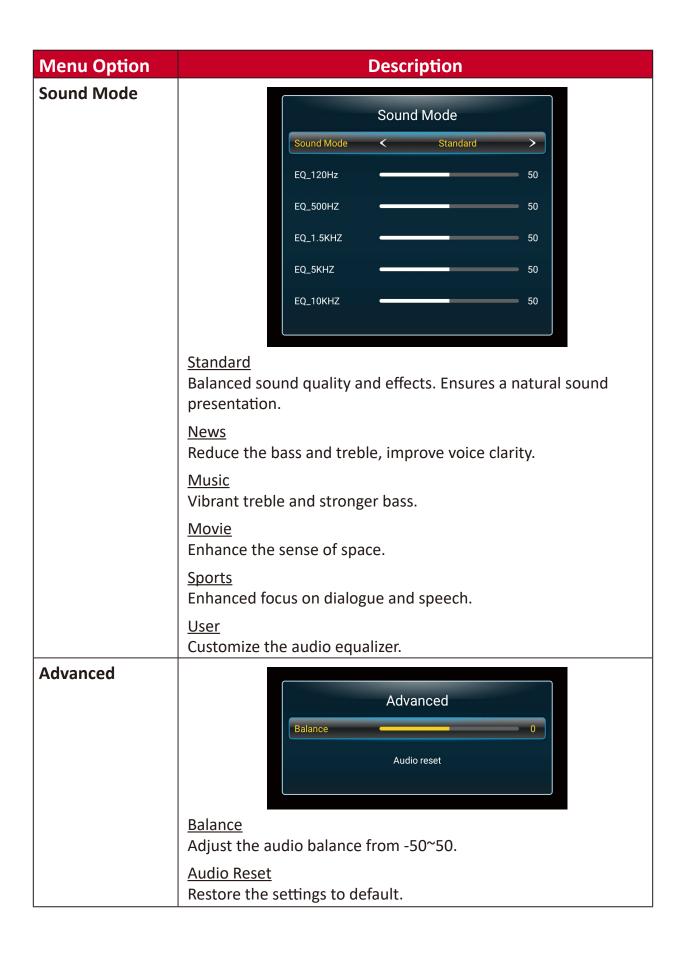



#### **Time**

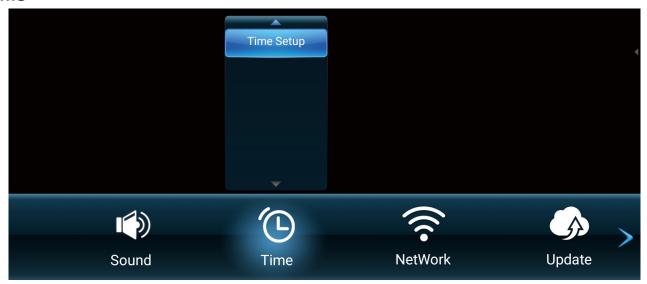


- 1. Press MENU on the remote control to display the OSD Menu.
- 3. Press ▼/▲ to select the menu option. Then press OK to display its sub-menu, or press ◀/▶ to adjust/select the setting.

NOTE: Some sub-menu options may have another sub-menu layer.

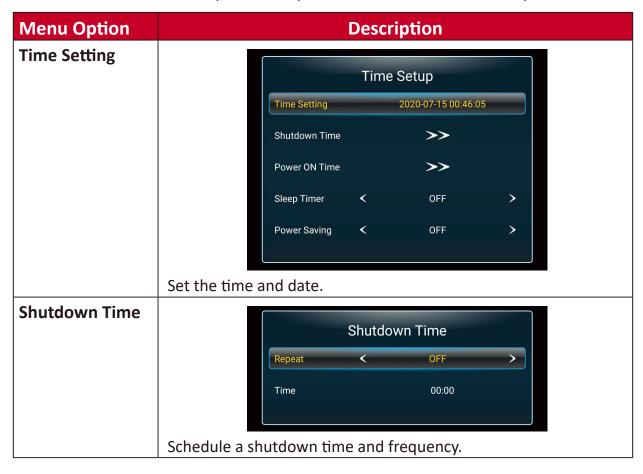

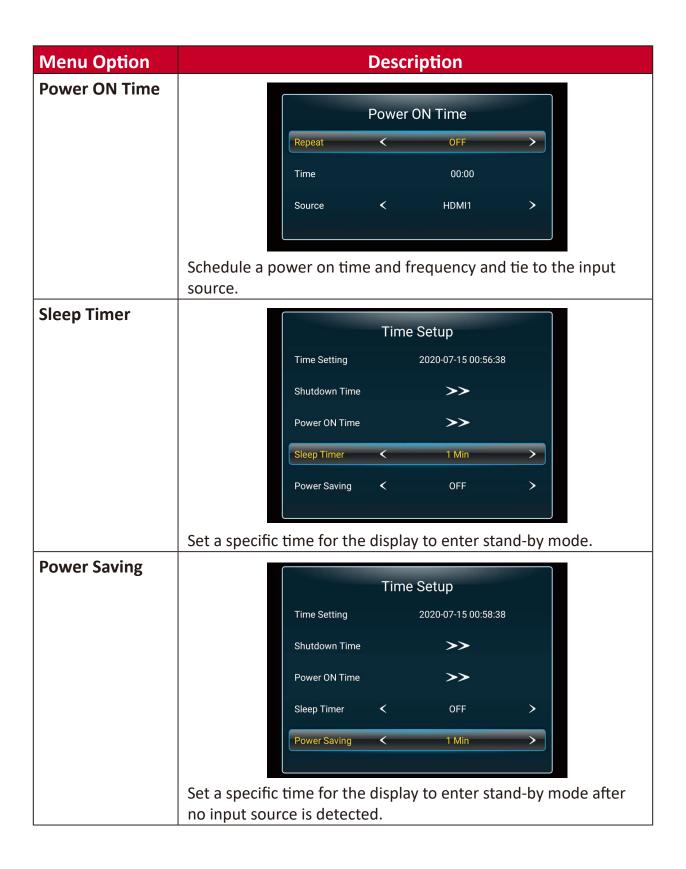

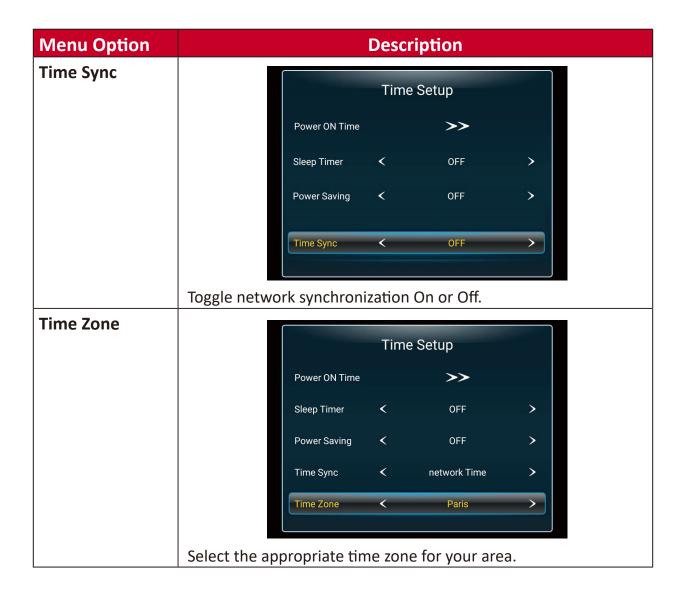



#### **NetWork**




- 1. Press MENU on the remote control to display the OSD Menu.
- **2.** Then press **OK** or use  $\nabla/\Delta/\blacktriangleleft/\triangleright$  on the remote control to select the **NetWork** menu.
- 3. Press ▼/▲ to select the menu option. Then press OK to display its sub-menu, or press ◀/▶ to adjust/select the setting.

NOTE: Some sub-menu options may have another sub-menu layer.

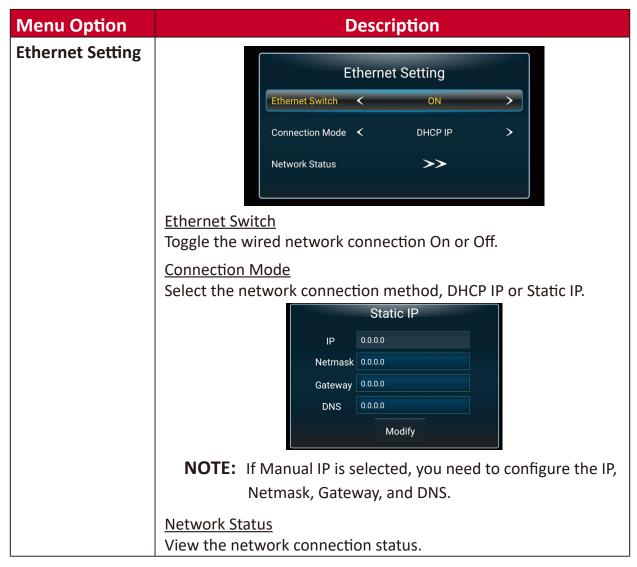

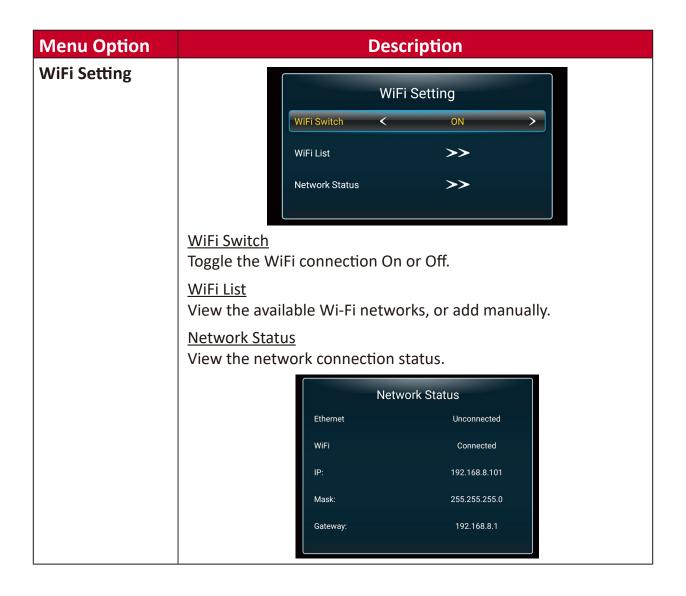


## **Update**

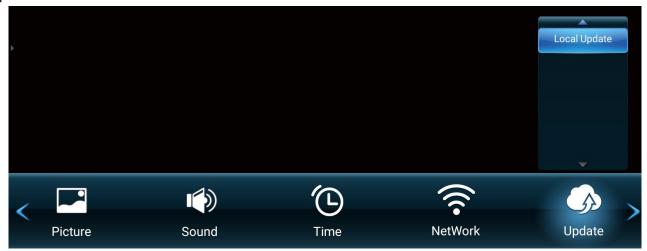

- 1. Press MENU on the remote control to display the OSD Menu.
- **2.** Then press **OK** or use  $\sqrt{/}$  on the remote control to select the **Update** menu.
- **3.** Press  $\nabla/\triangle$  to select the menu option. Then press **OK** to display its sub-menu.


Menu Option	Description	
Local Update	Update the display by using the update file on an SD Card or USB flash drive.	

#### **Advanced**

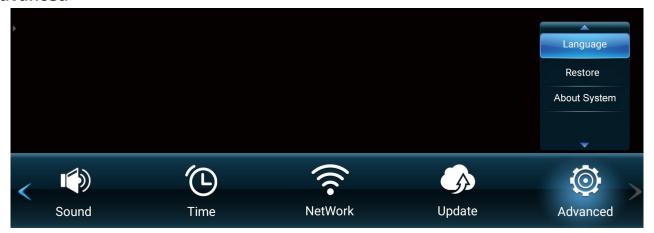

- 1. Press MENU on the remote control to display the OSD Menu.
- **2.** Then press **OK** or use  $\nabla/\triangle/\blacktriangleleft/\triangleright$  on the remote control to select the **Advanced** menu.
- 3. Press ▼/▲ to select the menu option. Then press OK to display its sub-menu, or press ◀/▶ to adjust/select the setting.

**NOTE:** Some sub-menu options may have another sub-menu layer.

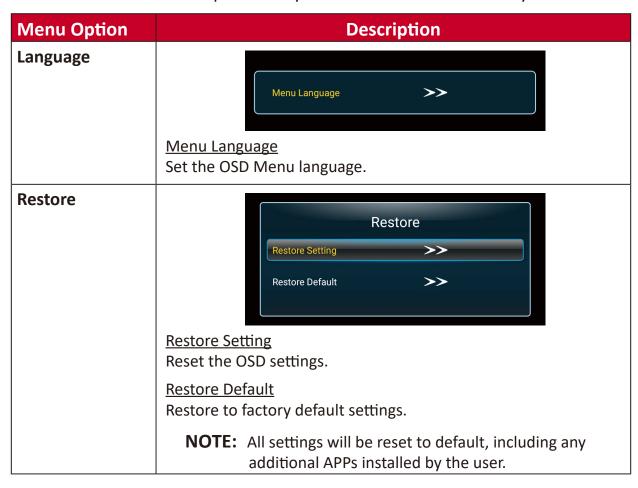


Menu Option		Desc	cription
About System		Abou	ut System
		CPU:	4 Core
		GPU:	2 Core
		Memory:	3.74 G
		Device Space:	24.77 G
		OS Version:	8.0.0
		Software Version:	VS_V811_LD163-181_20200711
			as: CPU core count, GPL
	Software vers	,	Space remaining, OS ver

# > Embedded Applications

## **ViewBoard Cast**

Working with ViewBoard® Cast software, the vCastReceiver app, will allow the LED display to receive vCastSender laptop screens (Windows/Mac/Chrome) and mobile (iOS/Android) users' screens, photos, videos, annotations, and camera(s).

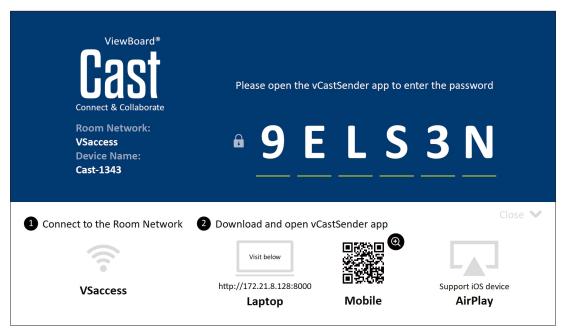

#### **Network Information**

- ViewBoard® Cast software, laptops, and mobile devices can be connected to the same subnet and across the subnet as long as it can communicate between the two.
- Connected devices will show up under "Device List" on the same subnet connection.
- If the device does not show up under "Device List", users will need to key-in the on-screen PIN-code.

ViewBoard Cast is a wireless peer to peer data communication, therefore the following port settings are required:

#### Ports:

CP: 56789, 25123, 8121, and 8000


• UDP: 48689 and 25123

#### Port and DNS activation:

• Port: 8001


DNS: h1.ee-share.com

## Cast Sender from Windows-based Devices, Macbook, and Chrome devices.

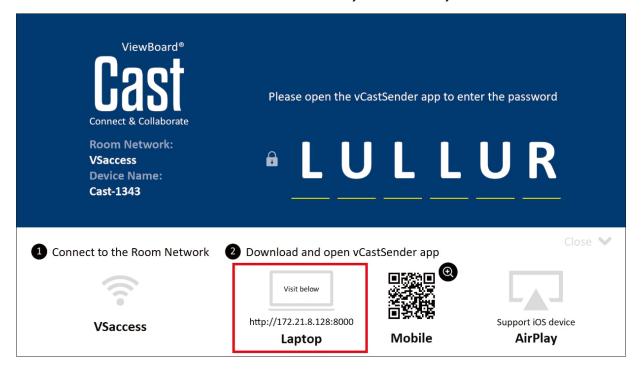

#### Mac, Windows, Chrome Devices:

- **1.** Make sure your device is connected to the same network as the display.
- **2.** Open a web browser and enter the address that is shown on the display to download the application.
- **3.** Launch the application and click the connect icon next to the Device Name.

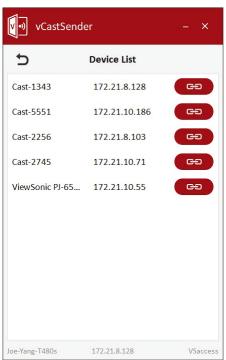

**NOTE:** If the device is not listed, click **Connect with PIN-Code** and input the pin-code displayed on the display.

Cast Sender from Mobile Devices: iOS-based (iPhone, iPad) and Android OS based phone/tablet.




### Android/iOS:


- **1.** Make sure your device is connected to the same network as the display.
- **2.** Scan the QR Code that is shown on the display to download the client application directly from the server, or download from the Google Play Store or the Apple Store.
- **3.** Launch the application and select the correct Device Name and input the pin to connect. You can also directly input the pin-code displayed on the display to connect.

## Apple AirPlay®:

- 1. Make sure your device is connected to the same network as the display.
- 2. Directly open AirPlay and select the Device Name to connect.
- **3.** Another "AirPlay Password" will be generated on-screen for the connection.

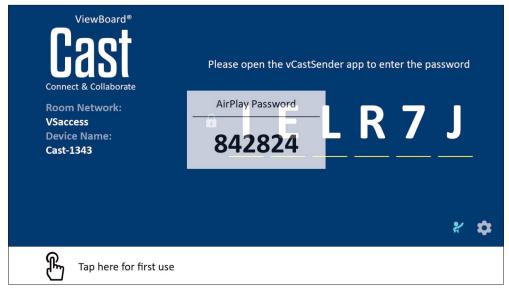


## **Cast Out from a Mobile Device that Supports Annotation**

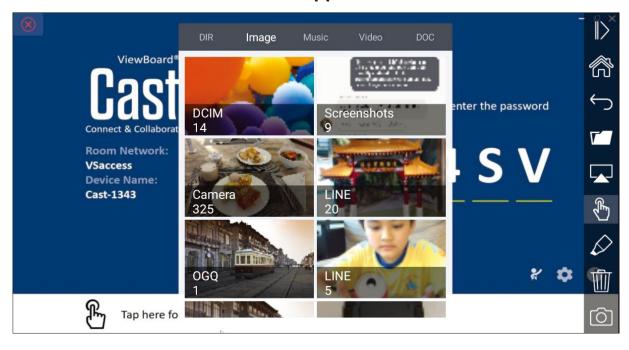


	Item	Description	
	Toggle	Click to hide or display tool bar	
	Home	Click to return to the Home interface	
$\leftarrow$	Return	Click to return to previous operation interface	
<b>7</b>	Folder	Click to view or open the mobile device's internal file	
	Screen sharing	Click to share screen (Android 5.0 and above supported)	
	Touch	Click to change to touch mode	
$\Diamond$	Pen	Click to make annotations, and to change color and thickness	
	Clear	Click to clear everything on the screen	
Ó	Camera	Click to use the camera and send the image to the ViewBoard	

# vSweeper

Remove unnecessary data and unwanted files.

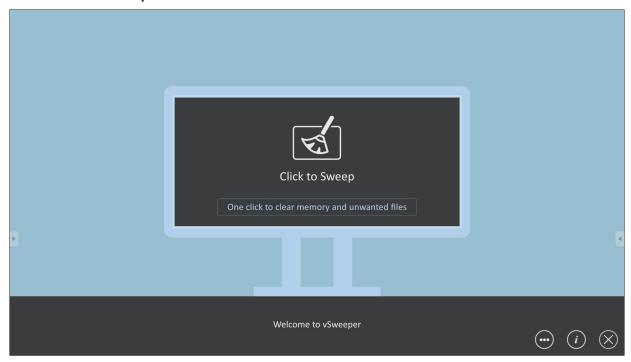


Advanced Settings can also be customized to the user's needs.

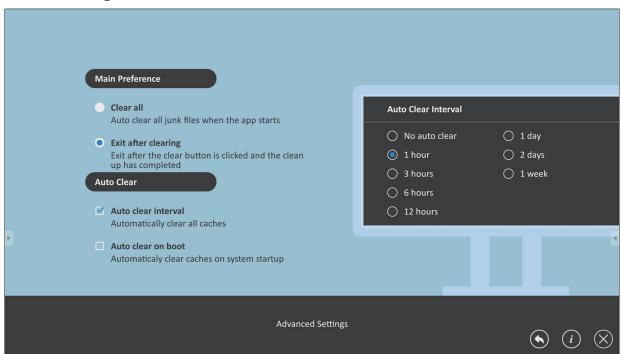


## **Browser**


Web browser for surfing the Internet.

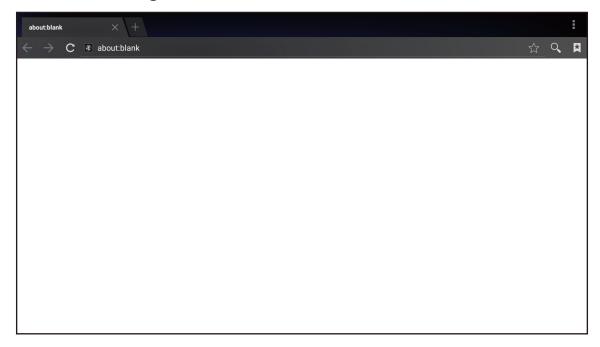

## **WPS Office**

Create, edit, and view Documents, Memos, Presentations, and Spreadsheets.

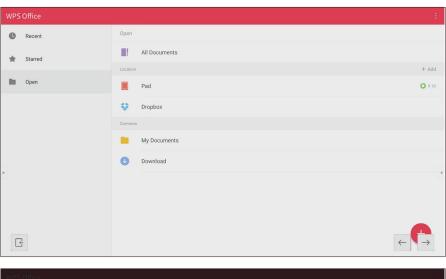

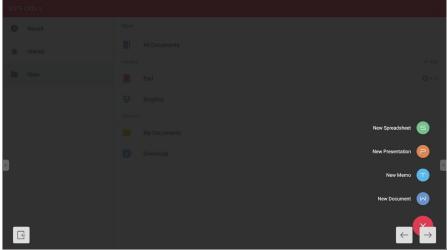


# > Appendix

# **Specifications**

Item	Category	Specifications
	Category	Specifications 194
Model	T	LDM163-181
LED Screen	Type	Direct View LED Display
	Size	163"
	Active Size	141.73" (H) x 79.72" (V)
	Pitch Size	3,600 mm (H) x 2,025 mm(V) 1.875 mm
	<del> </del>	
	Resolution	FHD, 1920 x 1080
	Refresh Frequency	3840Hz
	Contrast Ratio	6000:1 (Typical)
	Brightness	100-600 cd/m2 (8 levels of adjustments)
	LED Lifespan	100,000 hours
Input Signal		2 x HDMI (1920 x 1080 @ 60Hz, HDCP 1.4)
		1 x LAN (RJ45) 1 x USB Type A (3.0)
		2 x USB Type A (2.0)
Output Signal		1 x HDMI (1080p @ 60Hz)
Output Signal		1 x Audio Out (3.5 mm)
		1 x USB Type B (for debug)
		1 x USB Type A (Power)[5V/1A x 1; 5V/0.5A x 2]
Speaker Output		5W x 2 Stereo
RS-232		RS-232 Serial Control
Power	Voltage	100V-120V/30A ~ 50/60Hz
		220-240V/15A ~ 50Hz
		(vary by country)
Operating	Temperature	32° F to 104° F (0° C to 40° C)
Conditions	Humidity	20%~80% non-condensing
	Altitude	≤ 6,562 ft (2,000 m)
Storage	Temperature	-4° F to 140° F (-20° C to 60° C)
Conditions	Humidity	10%~90% non-condensing
	Altitude	≤ 6,562 ft (2,000 m)
Physical	/ >>/ !! > /	3,620.95 x 2,143.45 x 35 mm
Dimensions	w/o Wall Mount	(142.56" x 84.39" x 1.38")
(W x H x D)	w/ Wall Mount	3,620.95 x 2,143.45 x 56 mm
		(142.56" x 84.39" x 2.2")
Weight	Physical	192 kg (434.31 lb)
	05	1,860W (Normal)
Power	On	2,660W (Max)
Consumption	Sleep	<0.5W
	Off	<0W

**NOTE:** Product specifications are subject to change without notice.

# **LED Display Stuck Pixel Definition**

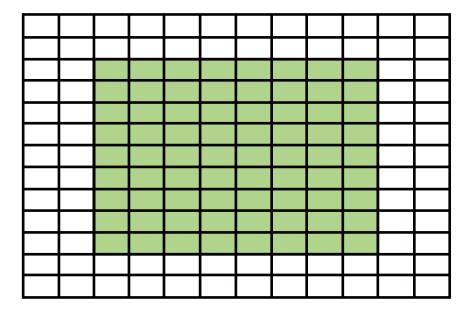

Item	Acceptance Criteria
Stuck Pixel (whole display)	≤ 60 stuck pixels
Stuck Pixel (as marked in green)	≤ 18 stuck pixels
Stuck Pixel (Single Module)	≤ 6 stuck pixels

# **Timing Chart**

# HDMI (PC)

Resolution	Refresh Rate (Hz)
640 x 480	60, 72, 75
720 x 400	70, 85
800 x 600	56, 60, 72, 75
832 x 624	75
1024 x 768	60, 70, 75
1152 x 864	60, 70, 75
1152 x 870	75
1280 x 720	60
1280 x 960	60
1280 x 1024	60, 75
1360 x 768	85
1440 x 900	60
1680 x 1050	60
1600 x 1200	60, 70, 75
1920 x 1080	60
1920 x 1200	60

## **HDMI** (Video)

Video	Resolution	Refresh Rate (Hz)
4001	720 x 480	60
480i	1440 x 480	60
F76:	720 x 576	50
576i	1440 x 576	50
480p	720 x 480	60
	720 x 576	50
576p	1440 x 576	50
720p	1280 x 720	60
1080i	1920 x 1080	50, 60
1080p	1920 x 1080	24, 25, 30, 50, 60

#### NOTE:

- The computer text quality is optimal in HD 1080 mode (1920 x 1080, 60Hz).
- Your computer display screen might appear different depending on the manufacturer and your operating system.
- Consult your computer's instructional manual on how to connect to an external display.
- If a vertical and horizontal frequency-select mode exists, select 60Hz (vertical) and 67.5KHz(horizontal). In some cases, abnormal signals (such as stripes) might appear on the screen when the computer power is turned off (or if the computer is disconnected). If this is the case, press the [INPUT SOURCE] button to enter the video mode and supply an active signal.
- The display timings conform to VESA and CTA standards.
- For 4:3 content, the screen will display them in the center of the screen and maintain a 4:3 aspect ratio.
- The optimal vertical frequency for each mode is 60Hz.

# **Supported Media Formats**

## **Multimedia Codec Formats**

Туре	File Type	Codec	Ability
Photo	PNG		Max Resolution: 8000 × 8000 Min Resolution: 4 x 4
	JPEG/JPG		Max Resolution: 8000 × 8000 Min Resolution: 4 x 4 <sup>1</sup>
Video	.3gp	H.263	Max Resolution: 1920 x 1080 30 Audio: AMR_NB
		MPEG-4	Max Resolution: 1920 x 1080 30 Audio: AMR_NB
	.avi	MPEG-2/4	Max Resolution: 1920 x 1080 30 Audio: MPEG_Audio_Layer3
		MJPEG	Max Resolution: 1920 x 1080 30 Audio: MPEG_Audio_Layer3
	.flv	H.264	Max Resolution: 1920 x 1080 30 Audio: AAC 2.0
	.mkv	H.264	Max Resolution: 1920 x 1080 30 Audio: AAC 2.0
		H.265	Max Resolution: 1920 x 1080 30 Audio: AAC 2.0
	.mp4	H.264	Max Resolution: 3840 x 2160 30 Audio: MPEG_Audio_Layer3
		H.265	Max Resolution: 3840 x 2160 30 Audio: MPEG_Audio_Layer3
		MPEG-4	Max Resolution: 1920 x 1080 30 Audio: MPEG_Audio_Layer3
	.vob	MPEG-2	Max Resolution: 1920 x 1080 30 Audio: PCM
	.mpg/.mpeg	MPEG-2	Max Resolution: 1920 x 1080 30 Audio: MPEG_Audio_Layer3

<sup>1</sup> Progressive support 4000 × 4000; baseline support 8000 x 8000.

Туре	File Type	Codec	Ability
Audio	.aac	GAAC	Sample Rate: 8K~96KHz Bit Rate: 24K~576Kbps
	.ape	Monkey's Audio	Sample Rate: max 48KHz Bit Rate: max 1411Kbps
	.flac	FLAC	Sample Rate: max 192KHz Bit Rate: max 1411Kbps
	.m4a	ALAC	Sample Rate: 8K~96KHz Bit Rate: 24K~576Kbps
	.mp3	MPEG1/2 layer 3	Sample Rate: 8K~48KHz Bit Rate: 32K~320Kbps
	.ogg	Vorbis	Sample Rate: 8K~48KHz Bit Rate: max 256Kbps
	.wav	LPCM	Sample Rate: 8K~192KHz Bit Rate: max 320Kbps

# **Troubleshooting**

Problem or Issue	Possible Solutions
Remote Control is not working	Check whether something is obstructing the display's remote control receiver.
	2. Check whether the battery polarities in the remote control are installed correctly.
	3. Check whether the batteries need to be replaced.
	1. Check whether Sleep mode is enabled.
The unit turns off	2. Check if there is a power outage in your area.
unexpectedly	<b>3.</b> Turn on the display, provide an active signal, and see if the problem is with the signal or external control system.
The power indicator	1. Ensure the power cable is connected and not loose.
is off, and there is no response	2. Check that the power outlet is functioning properly and meets the required electrical requirement.
The display does not recognize the USB storage device	<b>1.</b> Ensure the drive is either formatted for FAT32 or NTFS.
	2. If the USB storage device needs external power, connect its power adapter to an electrical outlet.

# **Video Not Working Properly**

Problem or Issue	Possible Solutions
	1. Check the Power status.
No picture/No sound	2. Check the signal cable.
ivo pietare, ivo souria	<b>3.</b> Use the remote control to ensure the input source setting is the same as the connected device.
	1. Check the signal cable.
Picture is unclear or cuts in and out	<b>2.</b> Check if other electronics or different signal types are interrupting the signal.
	<b>3.</b> An optional active video cable or optional video extender is required for a long distance source.

Problem or Issue	Possible Solutions	
Poor picture	Adjust chroma and/or brightness settings in the menu.	
	2. Check the signal cable.	
	3. Use the display's native resolution for the source.	

# **Audio Not Working Properly**

Problem or Issue	Possible Solutions		
	1. Press the Mute/Unmute button.		
	2. Adjust the volume.		
No sound	3. Check the audio cable connection (if used).		
	<b>4.</b> If using a computer digital video with embedded audio, ensure the computer speakers are set to external speakers.		
	1. Adjust the sound balance in the menu.		
One speaker only	2. Check the left and right sound control panel settings of the computer or media player source.		
One speaker only	3. Check the audio cable connection (if used).		
	<b>4.</b> Ensure the content has two audio channels and not mono.		

### **Maintenance**

#### **General Precautions**

- The LED lights used in the modules are susceptible to ESD (Electrostatic discharge). To prevent damage to the LED lights, do not touch them with bare hands or with conductive materials when handling.
- It is recommended to regularly inspect all installed components.
- Do not bring objects close to the ventilation holes of the display. Burns or personal injuries may occur if any body parts are brought too close.
- Be sure to power off and disconnect all cables before moving the display. Moving the display with its cables attached may damage the cables and thus cause fire or electric shock.
- Power off and disconnect the power plug from the wall outlet as a safety precaution before performing any type of cleaning or maintenance.

## **Initial Operation**

- If a new screen has been stowed for less than three (3) months, it can be used at normal brightness during its first use.
- If a new screen has been stowed for more than three (3) months, the brightness should be set at 30% for its first use and allowed to operate for two (2) hours continuously. After two (2) hours of use, power off for 30 minutes. The new screen is now ready for normal brightness usage.

## **Front Panel Cleaning Instructions**

- Use cool, compressed air to remove dust when the power is off. If the dust cannot be removed, the LED module should be replaced.
- Do not scratch and do not put pressure on the panel surface with fingers or any abrasive object.
- Do not use volatile substances such as sprays, solvents, or thinners.

## **Cabinet Cleaning Instructions**


- Do not allow water or detergent to come into contact with the surface of the display. If water or moisture gets inside the unit, a system malfunction or electrical shock may occur.
- Do not scratch and do not put pressure on the cabinet with any abrasive objects of any kind.
- Do not use volatile substances such as sprays, solvents, or thinners on the cabinet.
- Do not place anything made from rubber or PVC near the cabinet for any extended periods of time.


## **Regular Use**


- It is recommended to turn on the display at least once a month for more than eight (8) hours. During a wet and rainy season, it is recommended to turn on the display at least once a week.
- Avoid using full white, full red, full blue, or full green content for an extended period to avoid excessive power usage thus affecting the LED lifespan.


## **Vacuum Suction Tool**



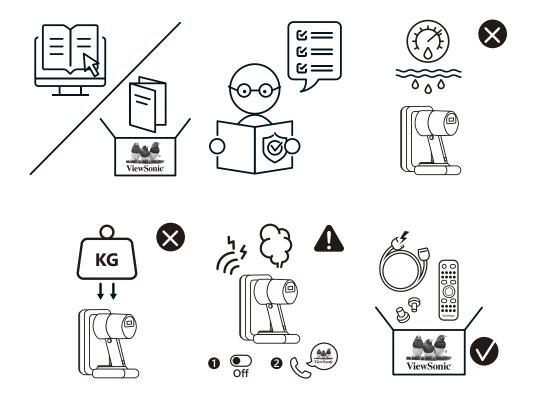


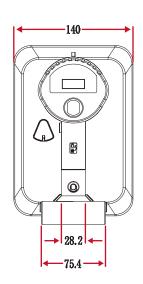

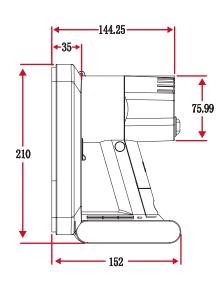


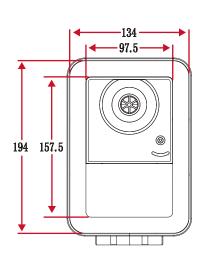


## **Charging the Battery**

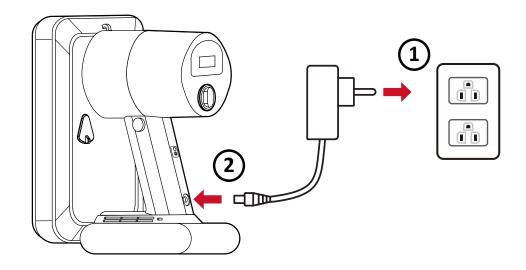


# **Changing the Battery**

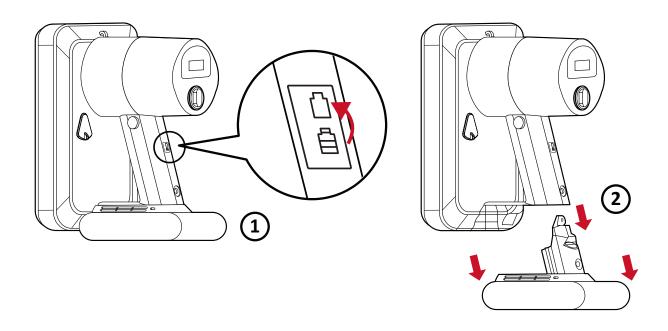

# **LED Module Disassembly**

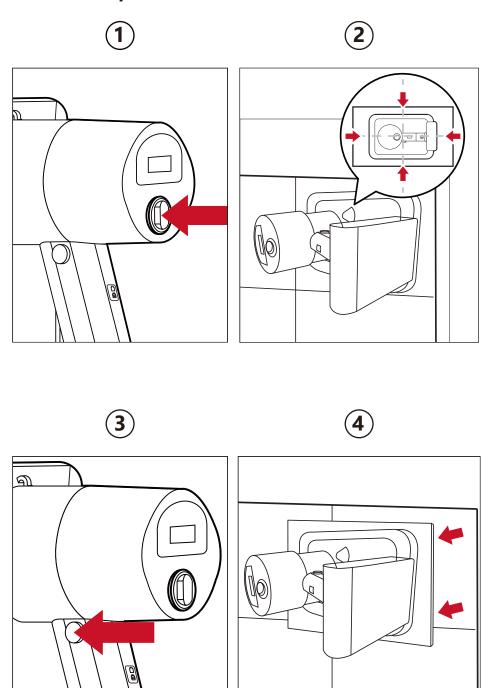

## Overview

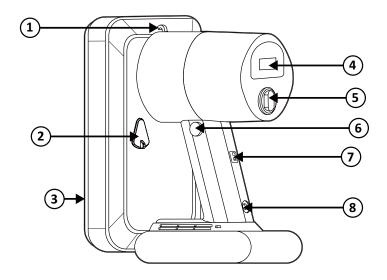

Number	Item	Description	
1	Lanyard Ring	Lanyard attachment point.	
2	Regulating Valve	Adjust the suction force level. Cover the valve for the strongest suction force.	
3	LED Module Contact Silicone	Soft contact surface for LED module removal.	
4	Power Display	Battery indicator.	
5	Power Switch	Turn the device On/Off.	
6	Start Button	Engage/Disengage the suction force.	
7	Battery Removal Button	Press to remove the battery.	
8	Charging Port	Port for battery charging.	

# Specifications

Item	Description		
Model	LD-MK-001		
Suction Face Dimension	134 x 194 mm (5.27" x 7.64")		
Available Module Size	192 x 192 to 500 x 500 mm (7.56" x 7.56" to 19.69" x 19.69")		
Product Dimension	152 x 140 x 210 mm (5.98" x 5.51" x 8.27")		
Weight	1.17 kg (2.58 lbs)		
Working Duration	17 minutes		
Working Temperature	3 to 55° C (37.4 to 131° F)		

# > RS-232 Protocol

This document describes the hardware interface and software protocols of RS-232 serial communication between the ViewSonic LED Display and computers or control systems.

## **RS-232 Hardware Specification**

 
ViewSonic RSD-232 serial port on the lower left side:

1. Connector type: DB 9-Pin Female

2. Use of straight-through parallel cable for connection

3. Pin Assignment:

Female DB 9-Pin



Pin#	Signal	Remark
1	NC	
2	TXD	Output from Display
3	RXD	Input to Display
4	NC	
5	GND	GND
6	NC	
7	NC	
8	NC	
9	NC	
frame	GND	

## **RS-232 Communication Setting**

- Baud Rate Select: 115200bps (fixed)

- Data bits: 8 bits (fixed)- Parity: None (fixed)

- Stop Bits: 1(fixed)

## **Command Table**

Function	Command Code (Hex)	HEX	Data Range
Power On	21	38 30 31 73 21 30 30 31 0D	
Power Off (Standby)	21	38 30 31 73 21 30 30 30 0D	
Get-Power Status	6C	38 30 31 67 6C 30 30 30 0D	
Input Select: HDMI 1	22	38 30 31 73 22 30 30 34 0D	
Input Select: HDMI 2	22	38 30 31 73 22 30 31 34 0D	
Get-Input Select	6A	38 30 31 67 6A 30 30 30 0D	
Input Select: Home	22	38 30 31 73 22 30 30 41 0D	
Brightness: Down (-1)	24	38 30 31 73 24 39 30 30 0D	
Brightness: Up (+1)	24	38 30 31 73 24 39 30 31 0D	
Volume: Down (-1)	35	38 30 31 73 35 39 30 30 0D	
Volume: Up (+1)	35	38 30 31 73 35 39 30 31 0D	
Get-Volume	66	38 30 31 67 66 30 30 30 0D	
Mute: OFF	36	38 30 31 73 36 30 30 30 0D	
Mute: ON (mute)	36	38 30 31 73 36 30 30 31 0D	
Get-Mute	67	38 30 31 67 67 30 30 30 0D	
Number (0~9)	40	38 30 31 73 40 30 30 3x 0D	x = 0~9
Key Pad: UP	41	38 30 31 73 41 30 30 30 0D	
Key Pad: DOWN	41	38 30 31 73 41 30 30 31 0D	
Key Pad: LEFT	41	38 30 31 73 41 30 30 32 0D	
Key Pad: RIGHT	41	38 30 31 73 41 30 30 33 0D	
Key Pad: ENTER	41	38 30 31 73 41 30 30 34 0D	
Key Pad: INPUT	41	38 30 31 73 41 30 30 35 0D	
Key Pad: MENU	41	38 30 31 73 41 30 30 36 0D	
Key Pad: EXIT	41	38 30 31 73 41 30 30 37 0D	
Get-Operational Hours	31	38 30 31 67 31 30 30 30 0D	

# Regulatory and Service Information

## **Compliance Information**

This section addresses all connected requirements and statements regarding regulations. Confirmed corresponding applications shall refer to nameplate labels and relevant markings on the unit.

## **FCC Compliance Statement**

This device complies with part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

The antenna(s) used for this transmitter must not be collocated or operating in conjunction with any other antenna or transmitter.

The device was tested and complies to measurement standards and procedures specified in FCC CFR Tile 47 Part 15 Subpart C.

## **FCC Radiation Exposure Statement**

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. End users must follow the specific operating instructions for satisfying RF exposure compliance.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body.

The users manual or instruction manual for an intentional or unintentional radiator shall caution the user that changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

**Warning:** You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

### **IC Warning Statement**

This device complies with Industry Canada license- exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, méme si le brouillage est susceptible d'en compromettre le fonctionnement.

## **Country Code Statement**

For product available in the USA/Canada market, only channel 1~11 can be operated. Selection of other channels is not possible.

Pour les produits disponibles aux États-Unis/Canada du marché, seul le canal 1 à 11 peuvent être exploités. Sélection d'autres canaux n'est pas possible.

### **IC Radiation Exposure Statement**

This equipment complied with IC RSS-102 radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. The device for the band 5150-5825 MHz is only for indoor usage to reduce potential for harmful interference to co-channel mobile satellite systems.

Cet équipement est conforme aux limites d'exposition aux rayonnements IC établies pour un environnement non contrôlê. Cet équipement doit être installé et utilize avec un minimum de 20cm de distance entre la source de rayonnement et votre corps. les dispositifs fonctionnant dans la bande 5150-5825 MHz sont réservés uniquement pour une utilisation à l'intérieur afin de réduire les risques de brouillage préjudiciable aux systèmes de satellites mobiles utilisant les mêmes canaux.

## **CE Conformity for European Countries**



The device complies with the EMC Directive 2014/30/EU and Low Voltage Directive 2014/35/EU.

## The following information is only for EU-member states:

The mark shown to the right is in compliance with the Waste Electrical and Electronic Equipment Directive 2012/19/EU (WEEE). The mark indicates the requirement NOT to dispose of the equipment as unsorted municipal waste, but use the return and collection systems according to local law.



## **Declaration of RoHS2 Compliance**

This product has been designed and manufactured in compliance with Directive 2011/65/EU of the European Parliament and the Council on restriction of the use of certain hazardous substances in electrical and electronic equipment (RoHS2 Directive) and is deemed to comply with the maximum concentration values issued by the European Technical Adaptation Committee (TAC) as shown below:

Substance	Proposed Maximum Concentration	Actual Concentration
Lead (Pb)	0.1%	< 0.1%
Mercury (Hg)	0.1%	< 0.1%
Cadmium (Cd)	0.01%	< 0.01%
Hexavalent Chromium (Cr6+)	0.1%	< 0.1%
Polybrominated biphenyls (PBB)	0.1%	< 0.1%
Polybrominated diphenyl ethers (PBDE)	0.1%	< 0.1%
Bis (2-ethylhexyl) phthalate (DEHP)	0.1%	< 0.1%
Butyl benzyl phthalate (BBP)	0.1%	< 0.1%
Dibutyl phthalate (DBP)	0.1%	< 0.1%
Diisobutyl phthalate (DIBP)	0.1%	< 0.1%

# Certain components of products as stated above are exempted under the Annex III of the RoHS2 Directives as noted below:

- Copper alloy containing up to 4% lead by weight.
- Lead in high melting temperature type solders (i.e. lead-based alloys containing 85% by weight or more lead).
- Electrical and electronic components containing lead in a glass or ceramic other than dielectric ceramic in capacitors, e.g. piezoelectronic devices, or in a glass or ceramic matrix compound.
- Lead in dielectric ceramic in capacitors for a rated voltage of 125V AC or 250V DC or higher.

## **European Union Regulatory Conformance**

The equipment complies with the RF Exposure Requirement 2014/53/EU, Council Recommendation of 16 April 2014 on the limitation of exposure of the general public to electromagnetic fields (0-300 GHz). This equipment meets the following conformance standards: EN301489-1, EN301489-17, EN62368-1, EN300328.

We, hereby, declare that this Wi-Fi radio is in compliance with the essential requirements and other relevant provisions of Directive 2014/53/EU.

#### Indian Restriction of Hazardous Substances

Restriction on Hazardous Substances statement (India). This product complies with the "India E-waste Rule 2011" and prohibits use of lead, mercury, hexavalent chromium, polybrominated biphenyls or polybrominated diphenyl ethers in concentrations exceeding 0.1 weight % and 0.01 weight % for cadmium, except for the exemptions set in Schedule 2 of the Rule.

## **Product Disposal at End of Product Life**

ViewSonic® respects the environment and is committed to working and living green. Thank you for being part of Smarter, Greener Computing. Please visit the ViewSonic® website to learn more.

#### **USA & Canada:**

http://www.viewsonic.com/company/green/recycle-program/

### **Europe:**

http://www.viewsoniceurope.com/eu/support/call-desk/

#### Taiwan:

https://recycle.epa.gov.tw/

## **Copyright Information**

Copyright© ViewSonic® Corporation, 2021. All rights reserved.

Macintosh and Power Macintosh are registered trademarks of Apple Inc.

Microsoft, Windows, and the Windows logo are registered trademarks of Microsoft Corporation in the United States and other countries.

ViewSonic®, the three birds logo, OnView, ViewMatch, and ViewMeter are registered trademarks of ViewSonic® Corporation.

VESA is a registered trademark of the Video Electronics Standards Association. DPMS, DisplayPort, and DDC are trademarks of VESA.

**Disclaimer:** ViewSonic® Corporation shall not be liable for technical or editorial errors or omissions contained herein; nor for incidental or consequential damages resulting from furnishing this material, or the performance or use of this product.

In the interest of continuing product improvement, ViewSonic® Corporation reserves the right to change product specifications without notice. Information in this document may change without notice.

No part of this document may be copied, reproduced, or transmitted by any means, for any purpose without prior written permission from ViewSonic® Corporation.

## **Customer Service**

For technical support or product service, see the table below or contact your reseller.

**NOTE:** You will need the product's serial number.

Country/ Region	Website	Country/ Region	Website	
	Asia Pacific	& Africa		
Australia	www.viewsonic.com/au/	Bangladesh	www.viewsonic.com/bd/	
中国 (China)	www.viewsonic.com.cn	香港 (繁體中文)	www.viewsonic.com/hk/	
Hong Kong (English)	www.viewsonic.com/hk-en/	India	www.viewsonic.com/in/	
Indonesia	www.viewsonic.com/id/	Israel	www.viewsonic.com/il/	
日本 (Japan)	www.viewsonic.com/jp/	Korea	www.viewsonic.com/kr/	
Malaysia	www.viewsonic.com/my/	Middle East	www.viewsonic.com/me/	
Myanmar	www.viewsonic.com/mm/	Nepal	www.viewsonic.com/np/	
New Zealand	www.viewsonic.com/nz/	Pakistan	www.viewsonic.com/pk/	
Philippines	www.viewsonic.com/ph/	Singapore	www.viewsonic.com/sg/	
臺灣 (Taiwan)	www.viewsonic.com/tw/	ประเทศไทย	www.viewsonic.com/th/	
Việt Nam	www.viewsonic.com/vn/	South Africa & Mauritius	www.viewsonic.com/za/	
	Amer	icas		
United States	www.viewsonic.com/us	Canada	www.viewsonic.com/us	
Latin America	www.viewsonic.com/la			
	Euro	ppe		
Europe	www.viewsonic.com/eu/	France	www.viewsonic.com/fr/	
Deutschland	www.viewsonic.com/de/	Қазақстан	www.viewsonic.com/kz/	
Россия	www.viewsonic.com/ru/	España	www.viewsonic.com/es/	
Türkiye	www.viewsonic.com/tr/	Україна	www.viewsonic.com/ua/	
United Kingdom	www.viewsonic.com/uk/			

## **Limited Warranty**

ViewSonic® Commercial Display

### What the warranty covers:

ViewSonic® warrants its products to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, ViewSonic® will, at its sole option, and as your sole remedy, repair or replace the product with a similar product. Replacement Product or parts may include remanufactured or refurbished parts or components. The repair or replacement unit or parts or components will be covered by the balance of the time remaining on the customer's original limited warranty and the warranty period will not be extended. ViewSonic® provides no warranty for any third-party software whether included with the product or installed by the customer, installation of any unauthorized hardware parts or components (e.g. Projector Lamps). (Please refer to: "What the warranty excludes and does not cover" section).

### Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

## What the warranty excludes and does not cover:

- Any product on which the serial number has been defaced, modified, or removed.
- Damage, deterioration, or malfunction resulting from:
  - » Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, or failure to follow instructions supplied with the product.
  - » Repair or attempted repair by anyone not authorized by ViewSonic®.
  - » Damage to or loss of any programs, data, or removable storage media.
  - » Normal wear and tear.
  - » Removal or installation of the product.
- Software or data loss occurring during repair or replacement.
- Any damage of the product due to shipment.
- Causes external to the product, such as electric power fluctuations or failure.
- Use of supplies or parts not meeting ViewSonic's specifications.
- Failure of owner to perform periodic product maintenance as stated in the User Guide.
- Any other cause which does not relate to a product defect.

- Damage caused by static (non-moving) images displayed for lengthy periods of time (also referred to as image burn-in).
- Software Any third-party software included with the product or installed by the customer.
- Hardware/Accessories/Parts/Components Installation of any unauthorized hardware, accessories, consumable parts or components (e.g. Projector Lamps).
- Damage to, or abuse of, the coating on the surface of the display through inappropriate cleaning as described in the product User Guide.
- Removal, installation, and set-up service charges, including wall-mounting of the product.

## How to get service:

- For information about receiving service under warranty, contact ViewSonic® Customer Support (Please refer to the "Customer Service" page). You will need to provide your product's serial number.
- To obtain warranty service, you will be required to provide: (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
- Take or ship the product, freight prepaid, in the original container to an authorized ViewSonic® service center or ViewSonic®.
- For additional information or the name of the nearest ViewSonic® service center, contact ViewSonic®.

## **Limitation of implied warranties:**

There are no warranties, express or implied, which extend beyond the description contained herein including the implied warranty of merchantability and fitness for a particular purpose.

### **Exclusion of damages:**

ViewSonic's liability is limited to the cost of repair or replacement of the product. ViewSonic® shall not be liable for:

- Damage to other property caused by any defects in the product, damages based upon inconvenience, loss of use of the product, loss of time, loss of profits, loss of business opportunity, loss of goodwill, interference with business relationships, or other commercial loss, even if advised of the possibility of such damages.
- Any other damages, whether incidental, consequential or otherwise.
- Any claim against the customer by any other party.
- Repair or attempted repair by anyone not authorized by ViewSonic®.

#### Effect of state law:

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on implied warranties and/or do not allow the exclusion of incidental or consequential damages, so the above limitations and exclusions may not apply to you.

#### Sales outside the U.S.A. and Canada:

For warranty information and service on ViewSonic® products sold outside of the U.S.A. and Canada, contact ViewSonic® or your local ViewSonic® dealer.

The warranty period for this product in mainland China (Hong Kong, Macao, and Taiwan Excluded) is subject to the terms and conditions of the Maintenance Guarantee Card.

For users in Europe and Russia, full details of warranty provided can be found at: http://www.viewsonic.com/eu/ under "Support/Warranty Information".

## **Mexico Limited Warranty**

ViewSonic® Commercial Display

### What the warranty covers:

ViewSonic® warrants its products to be free from defects in material and workmanship, under normal use, during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, ViewSonic® will, at its sole option, repair or replace the product with a like product. Replacement product or parts may include remanufactured or refurbished parts or components & accessories.

### Who the warranty protects:

This warranty is valid only for the first consumer purchaser.

### What the warranty excludes and does not cover:

- Any product on which the serial number has been defaced, modified or removed.
- Damage, deterioration, or malfunction resulting from:
  - » Accident, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification, unauthorized attempted repair, or failure to follow instructions supplied with the product.
  - » Causes external to the product, such as electrical power fluctuations or failure.
  - » Use of supplies or parts not meeting ViewSonic®'s specifications.
  - » Normal wear and tear.
  - » Any other cause which does not relate to a product defect.
- Any product exhibiting a condition commonly known as "image burn-in" which
  results when a static image is displayed on the product for an extended period of
  time.
- Removal, installation, insurance, and set-up service charges.

#### How to get service:

For information about receiving service under warranty, contact ViewSonic® Customer Support (Please refer to the attached "Customer Service" page). You will need to provide your product's serial number, so please record the product information in the space provided below on your purchase for your future use. Please retain your receipt of proof of purchase to support your warranty claim.

F	- - -	r \	<b>/</b> 0	ıır	Red	n	ds	
	$\sim$		•	и	$I \setminus I \setminus I$	-01	uJ	

Product Name:	Model Number:	
Document Number:	Serial Number:	
Purchase Date:	Extended Warranty Purchase?	(Y/N)
If so, what date does warranty expire?		

- To obtain warranty service, you will be required to provide (a) the original dated sales slip, (b) your name, (c) your address, (d) a description of the problem, and (e) the serial number of the product.
- Take or ship the product, in the original container packaging, to an authorized ViewSonic® service center.
- Round trip transportation costs for in-warranty products will be paid by ViewSonic<sup>®</sup>.

## **Limitation of implied warranties:**

There are no warranties, express or implied, which extend beyond the description contained herein including the implied warranty of merchantability and fitness for a particular purpose.

## **Exclusion of damages:**

ViewSonic®'s liability is limited to the cost of repair or replacement of the product. ViewSonic® shall not be liable for:

- Damage to other property caused by any defects in the product, damages based upon inconvenience, loss of use of the product, loss of time, loss of profits, loss of business opportunity, loss of goodwill, interference with business relationships, or other commercial loss, even if advised of the possibility of such damages.
- Any other damages, whether incidental, consequential or otherwise.
- Any claim against the customer by any other party.
- Repair or attempted repair by anyone not authorized by ViewSonic®.

Contact Information for Sales & Authorized Service (Centro Autorizado de Servicio) within Mexico: Name, address, of manufacturer and importers: México, Av. de la Palma #8 Piso 2 Despacho 203, Corporativo Interpalmas, Col. San Fernando Huixquilucan, Estado de México Tel: (55) 3605-1099 http://www.viewsonic.com/la/soporte/index.htm NÚMERO GRATIS DE ASISTENCIA TÉCNICA PARA TODO MÉXICO: 001.866.823.2004 Hermosillo: Villahermosa: Distribuciones y Servicios Computacionales SA de CV. Compumantenimietnos Garantizados, S.A. de C.V. Calle Juarez 284 local 2 AV. GREGORIO MENDEZ #1504 Col. Bugambilias C.P: 83140 COL, FLORIDA C.P. 86040 Tel: 01-66-22-14-9005 Tel: 01 (993) 3 52 00 47 / 3522074 / 3 52 20 09 E-Mail: disc2@hmo.megared.net.mx E-Mail: compumantenimientos@prodigy.net.mx Puebla, Pue. (Matriz): Veracruz, Ver.: CONEXION Y DESARROLLO, S.A DE C.V. Av. RENTA Y DATOS, S.A. DE C.V. Domicilio: 29 SUR 721 COL. LA PAZ Americas # 419 72160 PUEBLA, PUE. ENTRE PINZÓN Y ALVARADO Tel: 01(52).222.891.55.77 CON 10 LINEAS Fracc. Reforma C.P. 91919 Tel: 01-22-91-00-31-67 E-Mail: datos@puebla.megared.net.mx E-Mail: gacosta@qplus.com.mx Chihuahua: Cuernavaca: Soluciones Globales en Computación Compusupport de Cuernavaca SA de CV C. Magisterio # 3321 Col. Magisterial Francisco Leyva # 178 Col. Miguel Hidalgo Chihuahua, Chih. C.P. 62040, Cuernavaca Morelos Tel: 4136954 Tel: 01 777 3180579 / 01 777 3124014 E-Mail: Cefeo@soluglobales.com E-Mail: aquevedo@compusupportcva.com Distrito Federal: Guadalajara, Jal.: QPLUS, S.A. de C.V. SERVICRECE, S.A. de C.V. Av. Niños Héroes # 2281 Av. Coyoacán 931 Col. Del Valle 03100, México, D.F. Col. Arcos Sur, Sector Juárez Tel: 01(52)55-50-00-27-35 44170, Guadalajara, Jalisco E-Mail: gacosta@qplus.com.mx Tel: 01(52)33-36-15-15-43 E-Mail: mmiranda@servicrece.com Monterrey: Guerrero Acapulco: GS Computación (Grupo Sesicomp) **Global Product Services** Progreso #6-A, Colo Centro Mar Caribe # 1987, Esquina con Golfo Pérsico Fracc. Bernardo Reyes, CP 64280 39300 Acapulco, Guerrero Tel: 744-48-32627 Monterrey N.L. México Tel: 8129-5103 E-Mail: aydeem@gps1.com.mx MERIDA: Oaxaca, Oax.: ELECTROSER CENTRO DE DISTRIBUCION Y Av Reforma No. 403Gx39 y 41 SERVICIO, S.A. de C.V. Mérida, Yucatán, México CP97000 Murguía # 708 P.A., Col. Centro, 68000, Oaxaca Tel: (52) 999-925-1916 Tel: 01(52)95-15-15-22-22 E-Mail: rrrb@sureste.com Fax: 01(52)95-15-13-67-00 E-Mail. gpotai2001@hotmail.com Tijuana: **FOR USA SUPPORT:** STD ViewSonic® Corporation Av Ferrocarril Sonora #3780 L-C 381 Brea Canyon Road, Walnut, CA. 91789 USA Col 20 de Noviembr Tel: 800-688-6688

Smart White Board Warranty Term Template In UG VSC\_TEMP\_2013

Tijuana, Mexico

E-Mail: http://www.viewsonic.com

