

Touchboards

205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com

# Software Upgrade

This document describes how to upgrade NovoConnect's software applications as well as device firmware.

## 1. Upgrading Software Applications



## 2. Upgrading Device Firmware

*First of all, please make sure the NovoConnect device is connected to the Internet as it is going to contact our upgrade server for upgrade information.* 

Sections 2.1 and 2.2 describe two ways to start the firmware upgrade process. Section 2.3 explains the behavior of the device during this process.

#### 2.1 Upgrade via PC/Mac Client "Desktop Streamer"

- Step 1. Launch "Desktop Streamer" to connect to the NovoConnect device
- Step 2. Click button "Advanced..." (highlighted in the following figure) to access its advanced settings menu.



利 NovoConnect

Step 3. Click the "Upgrade" button in section "Device's Upgrade" (highlighted in the following figure).





#### 2.2 On-Screen Upgrade

For firmware version 1.2 or above, an on-screen upgrade mechanism is available for users to start the upgrade process directly from the device.

- Step 1. Connect a mouse to the NovoConnect device.
- Step 2. After it boots up, use the mouse to click button "Settings", shown below.



Step 3. Click button "Firmware Upgrade" to start the upgrade process.



### Version 1.0

#### 2.3 Upgrade Process

After the upgrade process is started, the device will contact our server for upgrade information.

(1) If no upgrade is found, you will be prompted with the following screen

NovoCor	inect			
	Firmware Upgrade	s up-to-date. No ary.		
		Settings , Pil	om Name 52. + 58.2.19 N 2026 Phishnet"	

(2) If upgrade is available, the device will download the new firmware and install it afterwards. You will see the following upgrade progress.

At the end of the upgrade, the device will reboot automatically.

ΝονοΓο	nnect	
Educ	Firmware Upgrade	16
	Firmware upgrad Downloading no RemoteViewer.a	de is available. w pk
		Settings om Name
		PIN 2026



205 Westwood Ave, Long Branch, NJ 07740 Phone: 866-94 BOARDS (26273) / (732)-222-1511 Fax: (732)-222-7088 | E-mail: sales@touchboards.com