

# Charging Bay

## INSTALLATION INSTRUCTIONS



WaveCAST Receivers and Digi-Wave DLT 400 and DLR 400 RCH can be charged in the CHG 408.

# **Assembling the Charger**

Some minor assembly is needed before the charger can be used. The package includes the charger base, a power supply, and 8 USB cables.

- 1. Insert the power supply cord into the charger on the side of the device next to the USB ports.
- 2. Connect the power supply plug to an outlet.
- 3. Press the power button on the front of the device. A blue LED should light, indicating the device is powered.
- 4. Connect the USB cables provided into the USB ports on the side of the device.

## **USB Cables for Various Products**

The WaveCAST Receivers and the Digi-Wave DLT 400 and DLR 400 RCH can be charged in the charging bay. However, the WaveCAST Receiver uses a **USB micro-B** cable to charge, and Digi-Wave products use a **USB-C** cable to charge. Both cables types can be used with this charger.

Additional cables can be ordered from Williams AV, or a generic cable of the correct type can be purchased. The Williams AV part numbers are:

- WCA 144 for the USB-C cable used by Digi-Wave devices. These cables come with the CHG 408 DW.
- WCA 145 for the USB micro-B cable used by the WaveCAST Receiver. These cables come with the CHG 408 WF.

# **Charging Devices**

To charge the devices:

- 1. Plug the correct USB cable into the bottom of your device. See "USB Cables for Various Products" on page 1.
- 2. Make sure the cable is also plugged into the base of the charger.
- 3. Set the device being charged into one of the slots on the charger. The slots only hold the device in place, and require no direct connection to the device.

# **Recycling Instructions**



Help Williams AV protect the environment! Please take the time to dispose of your equipment properly.

# Please Recycle

Please do NOT dispose of your equipment in the household trash. Please take the equipment to a electronics recycling center for proper disposal.

## **Warranty**

The CHG 408 charger is covered by a 1-Year factory warranty (excludes accessory items such as charging cables, which is covered by a 90-day warranty).

If you experience difficulty with your charger, call toll-free for customer assistance:

#### 1-800-843-3544 (U.S.A.) or

### 1-952-943-2252 (Outside the U.S.A.)

If it is necessary to return the charger for service, your customer service representative will give you a Return Authorization Number (RA) and shipping instructions.

