


THREE INPUT SELF-AMPLIFIED TWO SPEAKER WIRING DIAGRAM

For OWI MODELS AMP3S62

Optional Accessories

INPUT/SOURCE

PROJECTOR,
LAPTOP,
MICROPHONE,
CD, DVD or
MP3 PLAYERS

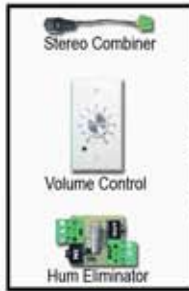

OWI[®]

OWI Incorporated


WWW.OWI-INC.COM

310-515-1900

Tech Support

800.638.1694

Three Input
Amplifier PC Board
installed at the
back of Speaker 1

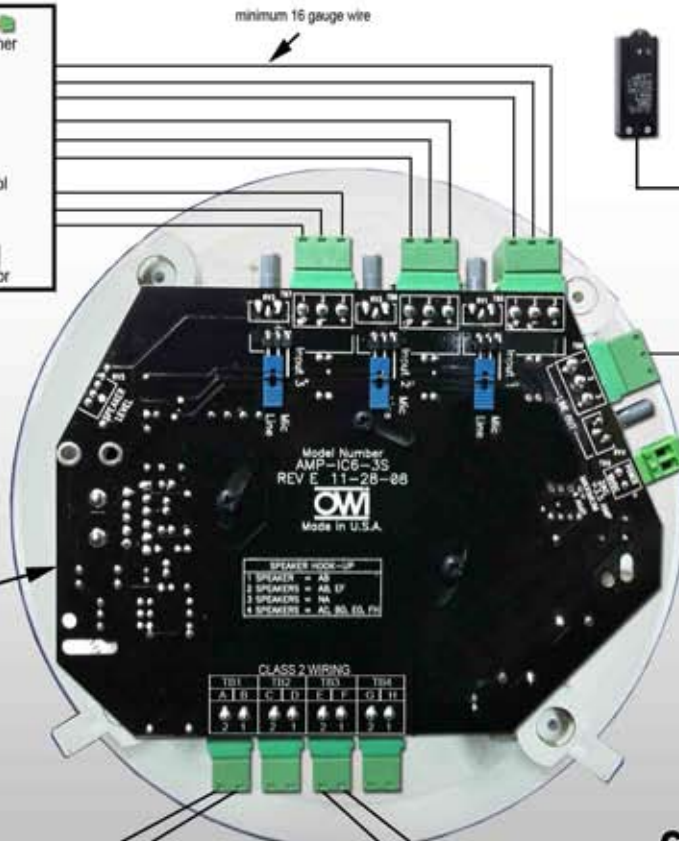


To the LINE IN 1, 2 or 3 of the third amplified speaker (Optional)


Non-amplified Speakers





TWO (2) SPEAKER COMBINATION DETAILED WIRING DIAGRAM

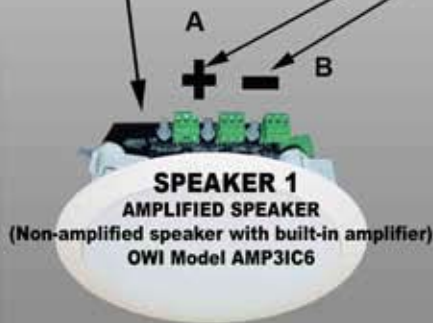

Note: Speaker 1 wires A & B are factory installed with A connected to the positive and B connected to the negative of Speaker 1.
For Speaker 2, install speaker wire from E of the pboard to the positive of Speaker 2 and from F to the negative of Speaker 2.

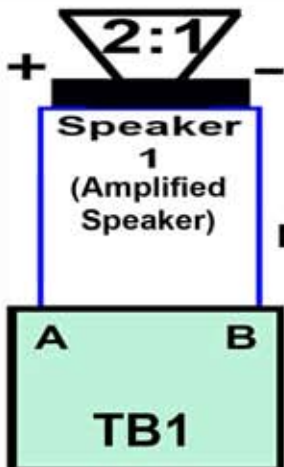

Note: A & B are factory installed.

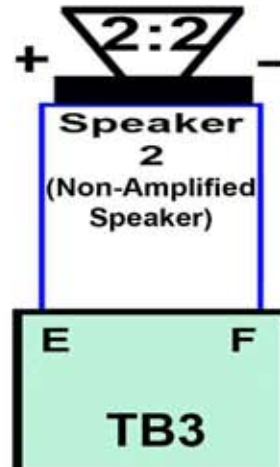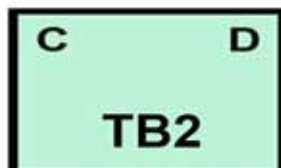

Touchboards

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com



TWO (2) SPEAKER HOOK UP SINGLE LINE DIAGRAM