

R&S® Cable Rider ZPH

Handheld Cable and Antenna Analyzer

User Manual



This document describes the following R&S®Cable Rider ZPH models and options:

- R&S®ZPH (1321.1211.02)
- R&S®ZPH (1321.1211.12)
- R&S®ZPH-B4, Frequency Extension to 4 GHz (1321.0380.02)
- R&S®ZPH-B22, Preamplifier (1334.5627.02)
- R&S®ZPH-B10, GPS Support (1321.0396.02)
- R&S®ZPH-K1, Spectrum Analysis (W TG) (1334.5604.02)
- R&S®ZPH-K7, Modulation Analysis (1334.5633.02)
- R&S®ZPH-K9, Power Sensor Support (1321.0415.02)
- R&S®ZPH-K15, Interference Analysis (1334.5640.02)
- R&S®ZPH-K16, Signal Strength Mapping (1334.5656.02)
- R&S®ZPH-K19, Power Meter (1321.0409.02)
- R&S®ZPH-K29, Pulse Measurement with Power Sensor (1321.0421.02)
- R&S®ZPH-K35, Frequency and Level Reference Alignment (1321.1570.02)
- R&S®ZPH (1321.1211.52, equivalent to 1321.1211.02)

The contents of this manual correspond to firmware version 1.41 or higher.

The software contained in this product makes use of several valuable open source software packages. For information, see the "Open Source Acknowledgement" document, which is available for download from the R&S Cable Rider ZPH product page at <http://www.rohde-schwarz.com/product/zph.html> > "Downloads" > "Firmware".

Rohde & Schwarz would like to thank the open source community for their valuable contribution to embedded computing.

© 2019 Rohde & Schwarz GmbH & Co. KG

Mühldorfstr. 15, 81671 München, Germany

Phone: +49 89 41 29 - 0

Fax: +49 89 41 29 12 164

Email: info@rohde-schwarz.com

Internet: www.rohde-schwarz.com

Subject to change – Data without tolerance limits is not binding.

R&S® is a registered trademark of Rohde & Schwarz GmbH & Co. KG.

Trade names are trademarks of the owners.

1321.0950.02 | Version 07 | R&S®Cable Rider ZPH

Throughout this manual, products from Rohde & Schwarz are indicated without the ® symbol, e.g. R&S®Cable Rider ZPH is indicated as R&S Cable Rider ZPH.

Safety Instructions

Instrucciones de seguridad

Sicherheitshinweise

Consignes de sécurité

WARNING

Risk of injury and instrument damage

The instrument must be used in an appropriate manner to prevent electric shock, fire, personal injury or instrument damage.

- Do not open the instrument casing.
 - Read and observe the "Basic Safety Instructions" delivered as printed brochure with the instrument.
 - Read and observe the safety instructions in the following sections. Note that the data sheet may specify additional operating conditions.
 - Keep the "Basic Safety Instructions" and the product documentation in a safe place and pass them on to the subsequent users.
-

ADVERTENCIA

Riesgo de lesiones y daños en el instrumento

El instrumento se debe usar de manera adecuada para prevenir descargas eléctricas, incendios, lesiones o daños materiales.

- No abrir la carcasa del instrumento.
 - Lea y cumpla las "Instrucciones de seguridad elementales" suministradas con el instrumento como folleto impreso.
 - Lea y cumpla las instrucciones de seguridad incluidas en las siguientes secciones. Se debe tener en cuenta que las especificaciones técnicas pueden contener condiciones adicionales para su uso.
 - Guarde bien las instrucciones de seguridad elementales, así como la documentación del producto, y entréguelas a usuarios posteriores.
-

** WARNUNG****Gefahr von Verletzungen und Schäden am Gerät**

Betreiben Sie das Gerät immer ordnungsgemäß, um elektrischen Schlag, Brand, Verletzungen von Personen oder Geräteschäden zu verhindern.

- Öffnen Sie das Gerätegehäuse nicht.
 - Lesen und beachten Sie die "Grundlegenden Sicherheitshinweise", die als gedruckte Broschüre dem Gerät beiliegen.
 - Lesen und beachten Sie die Sicherheitshinweise in den folgenden Abschnitten; möglicherweise enthält das Datenblatt weitere Hinweise zu speziellen Betriebsbedingungen.
 - Bewahren Sie die "Grundlegenden Sicherheitshinweise" und die Produktdokumentation gut auf und geben Sie diese an weitere Benutzer des Produkts weiter.
-

** AVERTISSEMENT****Risque de blessures et d'endommagement de l'appareil**

L'appareil doit être utilisé conformément aux prescriptions afin d'éviter les électrocutions, incendies, dommages corporels et matériels.

- N'ouvrez pas le boîtier de l'appareil.
 - Lisez et respectez les "consignes de sécurité fondamentales" fournies avec l'appareil sous forme de brochure imprimée.
 - Lisez et respectez les instructions de sécurité dans les sections suivantes. Il ne faut pas oublier que la fiche technique peut indiquer des conditions d'exploitation supplémentaires.
 - Gardez les consignes de sécurité fondamentales et la documentation produit dans un lieu sûr et transmettez ces documents aux autres utilisateurs.
-

Safety instructions for rechargeable lithium ion batteries

WARNING

Risk of serious personal injury or even death.

You must fully observe the following instructions in order to avoid serious personal injury – or even death – due to an explosion and/or fire.

1. Do not dismantle, open or crush the batteries or drop them from a great height. If mechanical damage occurs, there is a risk that chemicals may be released. Gases that are released can cause breathing difficulties. Immediately ventilate the area and in serious cases consult a doctor.
Irritation can occur if the chemicals that are released come in contact with the skin or eyes. If this happens, immediately and thoroughly rinse the skin or eyes with water and consult a doctor.
2. Do not expose cells or batteries to heat or fire. Do not store them in direct sunlight. If overheating occurs, there is the risk of an explosion or a fire, which can lead to serious personal injuries.
3. Keep the batteries clean and dry. If the terminals become soiled, clean them with a dry, clean cloth.
4. Charge the batteries prior to using them.
Only use the appropriate Rohde & Schwarz charger to charge the batteries. See the device manual or data sheet for the exact designation of the charger.
If the batteries are improperly charged, there is a risk of explosion, which can cause serious personal injury.
5. The charging temperature must be between 0 °C and 45 °C
(see manual for information on possible restrictions).
6. Discharging may take place only at temperatures between 0 °C and 50 °C
(see manual for information on possible restrictions).
7. Only charge batteries until they are fully charged. Frequent overcharging can reduce the battery lifetime.
8. Remove the battery from the device when the battery is not being used. Following a longer period of storage, it may be necessary to charge and discharge the battery several times in order to obtain the full capacity.
9. Only use the battery with designated Rohde & Schwarz devices. See the device manual for details.
10. Do not dispose of the batteries with unsorted municipal waste. The batteries must be collected separately. After the end of their life, dispose of the batteries at a suitable collection point or via a Rohde & Schwarz customer service center.



EU labeling for batteries and secondary cells

11. Follow the transport stipulations of the carrier (IATA-DGR, IMDG-Code, ADR, RID) when returning lithium batteries to Rohde & Schwarz subsidiaries.
12. Keep this safety information for future reference.

Instrucciones de seguridad para baterías recargables de ión litio

ADVERTENCIA

Posibilidad de lesiones graves que en determinadas circunstancias puede causar la muerte.

Tenga en cuenta los siguientes avisos en caso de explosión y/o incendio para impedir lesiones graves en personas que, en determinadas circunstancias, podrían incluso causar la muerte.

1. No desarme las baterías, no las abra, no las triture ni las deje caer desde una gran altura.
En caso de daños mecánicos existe el riesgo de salida de sustancias químicas. En caso de salida de gases pueden producirse dificultades respiratorias. Ventile inmediatamente la habitación y acuda a un médico en casos graves.
Si sustancias químicas provenientes de la batería entran en contacto con la piel o los ojos pueden producirse irritaciones. Enjuague en estos casos la piel y los ojos inmediatamente con abundante agua y acuda a un médico.
2. No exponga las celdas o baterías al calor ni al fuego. No las almacene bajo la luz solar directa. En caso de sobrecalentamiento existe peligro de explosión o de incendio, lo que puede provocar lesiones graves en personas.
3. Mantenga las baterías limpias y secas. Si los conectores están sucios, límpielos con un paño seco y limpio.
4. Cargue las baterías antes de su uso.
Solamente está permitido cargar la batería con el correspondiente cargador de Rohde & Schwarz. Consulte en el manual o en las especificaciones técnicas del equipo la denominación exacta del cargador.
Si las baterías se cargan de forma incorrecta existe peligro de explosión, lo que podría causar lesiones graves en personas.
5. La temperatura de carga debe encontrarse entre 0 °C y 45 °C (consulte el manual para posibles restricciones).
6. La descarga solamente puede efectuarse entre 0 °C y 50°C (consulte el manual para posibles restricciones).
7. Cargue las baterías solamente el tiempo necesario hasta que se hayan cargado por completo. La sobrecarga frecuente reduce la vida útil de la batería.
8. Extraiga la batería del equipo si no se va a utilizar. Después de un periodo de almacenamiento prolongado puede ser necesario cargar y descargar varias veces la batería para recuperar su capacidad completa.
9. Utilice la batería exclusivamente con los equipos Rohde & Schwarz correspondientes. Consulte para ello el manual del equipo.
10. No elimine las baterías junto con los residuos urbanos sin clasificar, sino por separado. Para eliminar la batería una vez finalizada su vida útil, diríjase a un punto de recogida de residuos adecuado o a una oficina de representación de Rohde & Schwarz.
Etiquetado de la UE para baterías y acumuladores
11. En caso de devolver baterías de litio a las filiales de Rohde & Schwarz, debe cumplirse las normativas sobre los modos de transporte (IATA-DGR, código IMDG, ADR, RID).
12. Conserve estas instrucciones de seguridad para fines de información y consulta posterior.

Sicherheitshinweise für wiederaufladbare Li-Ion-Batterien



Mögliche schwere Verletzungen, unter Umständen mit Todesfolge.

Beachten Sie die folgenden Hinweise vollständig, um schwere Verletzungen von Personen - unter Umständen mit Todesfolge - durch Explosion und/oder Brand zu verhindern.

1. Batterien nicht zerlegen, öffnen, zerkleinern oder aus großer Höhe fallen lassen. Bei mechanischer Beschädigung besteht die Gefahr des Austritts von Chemikalien. Austretende Gase können zu Atembeschwerden führen. Sofort lüften, in schweren Fällen einen Arzt konsultieren.
Bei Haut- oder Augenkontakt mit austretenden Chemikalien können Hautirritationen und Reizungen auftreten. In diesen Fällen die Haut oder Augen sofort gründlich mit Wasser ausspülen und einen Arzt konsultieren.
2. Zellen oder Batterien weder Hitze noch Feuer aussetzen. Nicht im direkten Sonnenlicht lagern. Bei Überhitzung besteht die Gefahr einer Explosion oder eines Brandes, was zu schweren Verletzungen bei Personen führen kann.
3. Batterien sauber und trocken halten. Falls die Anschlüsse verschmutzt sind, mit einem trockenen, sauberen Tuch reinigen.
4. Batterien vor dem Gebrauch laden.
Die Batterie darf ausschließlich mit dem entsprechenden Rohde & Schwarz Ladegerät geladen werden. Siehe Handbuch oder Datenblatt des Gerätes für die genaue Bezeichnung des Ladegerätes.
Wenn Batterien unsachgemäß geladen werden, besteht Explosionsgefahr, was zu schweren Verletzungen bei Personen führen kann.
5. Die Ladetemperatur muss zwischen 0 °C und 45 °C betragen (für mögliche Einschränkungen siehe Handbuch).
6. Ein Entladen darf nur zwischen 0 °C und 50 °C erfolgen (für mögliche Einschränkungen siehe Handbuch).
7. Batterien nur so lange laden, bis sie vollständig aufgeladen sind. Ein häufiges Überladen führt zu einer geringeren Lebensdauer der Batterie.
8. Die Batterie aus dem Gerät entfernen, wenn sie nicht benutzt wird. Nach längerer Lagerzeit kann es erforderlich sein, die Batterie mehrmals zu laden und zu entladen, um die volle Leistungsfähigkeit zu erlangen.
9. Die Batterie nur mit dafür vorgesehenen Rohde & Schwarz-Geräten betreiben. Siehe dazu das Handbuch des Gerätes.
10. Die Batterien nicht über unsortierten Siedlungsabfall entsorgen, sondern getrennt sammeln. Nach Ende der Lebensdauer über eine geeignete Sammelstelle oder eine Rohde&Schwarz-Kundendienststelle entsorgen.
EU - Kennzeichnung für Batterien und Akkumulatoren
11. Bei Rücksendungen von Lithiumbatterien zu Rohde & Schwarz - Niederlassungen müssen die Transportvorschriften der Verkehrsträger (IATA-DGR, IMDG-Code, ADR, RID) befolgt werden.
12. Diese Sicherheitsinformationen für zukünftige Informations- und Nachschlagezwecke aufbewahren.



Consignes de sécurité pour batteries rechargeables lithium-ion

AVERTISSEMENT

Risque de blessures graves pouvant entraîner la mort.

Respecter intégralement les consignes ci-dessous afin d'éliminer tout risque de blessures graves voire mortelles par suite d'explosion et/ou d'incendie.

1. Ne pas démonter, ouvrir ou découper les batteries ni les faire tomber d'une hauteur importante. Des produits chimiques peuvent s'écouler en cas de détérioration mécanique et les gaz libérés peuvent provoquer des difficultés respiratoires. Aérer immédiatement les locaux. Dans les cas graves, consulter un médecin. Si la peau ou les yeux entrent en contact avec les produits chimiques libérés, des irritations peuvent se produire. Rincer immédiatement et abondamment la peau ou les yeux à l'eau claire et consulter un médecin.
2. Ne pas exposer les cellules ou les batteries à la chaleur ou au feu. Ne pas les stocker dans un endroit exposé à la lumière directe du soleil. Toute surchauffe risque de provoquer une explosion ou un incendie, ce qui peut entraîner des blessures graves.
3. Conserver les batteries dans un lieu sec et propre. Nettoyer les points de contact sales à l'aide d'un chiffon sec et propre.
4. Charger les batteries avant utilisation. Utiliser seulement le chargeur Rohde & Schwarz approprié pour recharger les batteries. Les références exactes du chargeur sont indiquées dans le manuel ou la fiche technique de l'appareil. Une recharge incorrecte des batteries peut entraîner des explosions susceptibles de causer des blessures graves.
5. Recharger impérativement à des températures comprises entre 0 °C et 45 °C (restrictions éventuelles : voir le manuel).
6. Décharger impérativement à des températures comprises entre 0 °C et 50 °C (restrictions éventuelles : voir le manuel).
7. Terminer la charge dès que les batteries sont complètement rechargées. Une surcharge répétée diminue la longévité des batteries.
8. Retirer les batteries de l'appareil lorsqu'elles ne sont pas utilisées. Après un stockage prolongé, plusieurs cycles de recharge et de décharge peuvent s'avérer nécessaires pour rétablir la pleine capacité des batteries.
9. Utiliser les batteries exclusivement dans les appareils Rohde & Schwarz auxquels elles sont destinées. Voir le manuel fourni avec chaque appareil.



10. Ne pas éliminer les batteries avec les déchets municipaux non triés mais s'assurer qu'elles soient collectées séparément. Recycler les batteries en fin de vie en les confiant à un point de collecte compétent ou à un point de service après-vente Rohde & Schwarz.

Marquage UE pour batteries et accumulateurs

11. Lors des renvois de batteries au lithium à des filiales Rohde & Schwarz, il convient de respecter les prescriptions de transport (IATA-DGR, code IMDG, ADR, RID) fixées par les transporteurs.
12. Conserver ces consignes de sécurité de sorte à pouvoir vous y reporter ou vérifier ultérieurement certains points.

Customer Support

Technical support – where and when you need it

For quick, expert help with any Rohde & Schwarz equipment, contact one of our Customer Support Centers. A team of highly qualified engineers provides telephone support and will work with you to find a solution to your query on any aspect of the operation, programming or applications of Rohde & Schwarz equipment.

Up-to-date information and upgrades

To keep your instrument up-to-date and to be informed about new application notes related to your instrument, please send an e-mail to the Customer Support Center stating your instrument and your wish. We will take care that you will get the right information.

Europe, Africa, Middle East

Phone +49 89 4129 12345
customersupport@rohde-schwarz.com

North America

Phone 1-888-TEST-RSA (1-888-837-8772)
customer.support@rsa.rohde-schwarz.com

Latin America

Phone +1-410-910-7988
customersupport.la@rohde-schwarz.com

Asia/Pacific

Phone +65 65 13 04 88
customersupport.asia@rohde-schwarz.com

China

Phone +86-800-810-8228 /
+86-400-650-5896
customersupport.china@rohde-schwarz.com



Contents

1	Preface.....	13
1.1	Documentation Overview.....	13
1.2	Conventions Used in the Documentation.....	14
1.2.1	Typographical Conventions.....	14
1.2.2	Conventions for Procedure Descriptions.....	14
1.2.3	Other Conventions.....	15
2	Welcome to the R&S Cable Rider ZPH.....	16
3	Getting Started.....	17
3.1	Preparing for Use.....	17
3.1.1	Putting into Operation.....	17
3.1.2	Switching the Instrument On and Off.....	24
3.2	Instrument Tour.....	25
3.2.1	Front View.....	26
3.2.2	Top View.....	27
3.2.3	Left View.....	29
3.2.4	Right View.....	30
3.2.5	Rear View.....	30
3.2.6	Display Overview.....	31
4	Basic Operation.....	32
4.1	Screen Layout and Elements.....	32
4.1.1	Title Bar.....	33
4.1.2	Measurement Result View.....	33
4.1.3	Measurement Trace Window.....	34
4.1.4	Parameter View.....	35
4.2	Configuring the R&S Cable Rider ZPH.....	39
4.2.1	Configuring the Hardware.....	39
4.2.2	Configuring Antennas.....	41
4.2.3	Using the GPS Receiver.....	45
4.2.4	Configuring Date and Time.....	47
4.2.5	Selecting Regional Settings.....	48

4.2.6	Configuring the Display.....	50
4.2.7	Configuring the Audio Output.....	52
4.2.8	Configuring Power Supply.....	53
4.2.9	Internal Alignment.....	54
4.2.10	Performing Default Calibration.....	56
4.2.11	Configuring Calibration Kit Model.....	57
4.2.12	Resetting the R&S Cable Rider ZPH.....	58
4.3	Connecting the R&S Cable Rider ZPH to a PC.....	59
4.3.1	LAN Connection.....	60
4.3.2	USB Connection.....	64
4.4	Managing Options.....	65
4.4.1	Enabling Options.....	65
4.4.2	Checking Options.....	66
4.4.3	Managing Options with R&S License Manager.....	67
4.5	Identifying Cable Faults.....	69
4.6	Measuring Transmissions.....	74
4.7	Using the Spectrum Analyzer.....	76
4.7.1	Attenuating the Signal.....	76
4.7.2	Using the Preamplifier.....	78
4.7.3	Measuring CW Signals.....	78
4.7.4	Measuring Harmonics.....	81
4.8	Using a Power Sensor.....	83
4.8.1	Measuring the Power with a Power Sensor.....	84
4.8.2	Measuring Power and Return Loss.....	86
4.9	Saving and Recalling Results and Settings.....	88
5	Instrument Functions.....	89
5.1	Touchscreen Gesture Element.....	89
5.1.1	Change Center Frequency.....	89
5.1.2	Change Reference Level.....	90
5.1.3	Change Span	90
5.1.4	Add Marker.....	91
5.1.5	Move Marker.....	91
5.1.6	Delete All Markers.....	92

5.1.7	Hide or Unhide Measurement Result View Display.....	92
5.1.8	Preview Screenshot.....	93
5.1.9	Skip Wizard Measurement.....	93
5.2	On-screen Keyboard.....	94
5.3	Front Panel Keys.....	95
5.3.1	POWER Key.....	95
5.3.2	Screenshot Key.....	95
5.3.3	Softkey.....	95
5.3.4	System Keys.....	95
5.3.5	Function Keys.....	96
5.3.6	Keypad.....	98
5.3.7	Navigation Controls.....	99
5.4	Presetting the R&S Cable Rider ZPH.....	100
5.5	Configuring Measurements.....	101
5.6	Working Directory.....	102
5.7	Saving On Events.....	102
5.8	Taking Screenshots.....	105
5.9	Managing Datasets.....	107
5.9.1	Saving Datasets.....	109
5.9.2	Restoring Datasets.....	111
5.9.3	Deleting Datasets.....	113
5.10	Updating the Firmware.....	114
5.11	Installing Firmware Options.....	114
6	Working with the Measurement Wizard.....	115
6.1	Performing and Configuring Measurements.....	115
6.2	Evaluating Results.....	124
7	Cable and Antenna Test Mode.....	126
7.1	Performing Cable and Antenna Measurements.....	128
7.1.1	Reflection Measurements.....	129
7.1.2	Distance to Fault Measurements.....	130
7.1.3	1-Port Cable Loss Measurement.....	132
7.1.4	Transmission Measurements.....	133
7.1.5	Smith Chart.....	134

7.1.6	Phase Measurement.....	136
7.1.7	Calibrating Measurements.....	137
7.2	Configuring Cable and Antenna Tests.....	143
7.2.1	Selecting the Cable Mode.....	143
7.2.2	Configuring the Horizontal Axis.....	146
7.2.3	Configuring the Vertical Axis.....	150
7.2.4	Configuring the Tracking Generator.....	152
7.2.5	Setting the Measurement Bandwidth.....	153
7.2.6	Setting the Measurement Sweep.....	153
7.3	Analyzing Measurement Results.....	155
7.3.1	Working with Traces.....	155
7.3.2	Using Markers.....	157
7.3.3	Using Display Line.....	163
7.3.4	Using Limit Lines.....	163
8	Spectrum Analyzer Mode.....	167
8.1	Performing Spectrum Measurements.....	167
8.1.1	Measuring Basic Signal Characteristics.....	167
8.1.2	Measuring the Channel Power of Continuously Modulated Signals.....	168
8.1.3	Measuring the Occupied Bandwidth.....	172
8.1.4	Power Measurements on TDMA Signals.....	175
8.1.5	Measuring the Adjacent Channel Leakage Ratio (ACLR).....	178
8.1.6	Measuring the Spectrum Emission Mask.....	186
8.1.7	Measuring the Harmonic Distortion.....	189
8.1.8	Measuring the AM Modulation Depth.....	191
8.1.9	Working with the Spectrogram Result Display.....	193
8.1.10	Using Isotropic Antennas.....	208
8.2	Configuring Spectrum Measurements.....	210
8.2.1	Configuration Overview.....	211
8.2.2	Configuring the Horizontal Axis.....	212
8.2.3	Configuring the Vertical Axis.....	215
8.2.4	Configuring the Tracking Generator.....	220
8.2.5	Setting Bandwidths.....	221
8.2.6	Configuring and Triggering the Sweep.....	224

8.2.7	Working with Traces.....	229
8.2.8	Using Markers.....	234
8.2.9	Using Display Lines.....	245
8.2.10	Using Limit Lines.....	245
8.3	Working with Channel Tables.....	248
8.4	Using Transducer Factors.....	249
8.4.1	Unit for Measurements with Transducers.....	251
8.4.2	Setting the Reference Level.....	252
8.4.3	Frequency Range of Transducer.....	252
8.4.4	Data Sets Containing Transducer Factors.....	252
9	Power Meter.....	253
9.1	Using a Power Sensor.....	253
9.1.1	Connecting a Power Sensor.....	254
9.1.2	Performing and Configuring Measurements.....	255
9.2	Using a Directional Power Sensor.....	258
9.2.1	Connecting a Directional Power Sensor.....	259
9.2.2	Performing and Configuring Measurements.....	260
10	Using the Internal Power Meter.....	263
11	Performing Pulse Power Measurements.....	266
11.1	Configuring the Numerical Result Display.....	269
11.2	Configuring the Power vs Time Result Display.....	269
11.2.1	Determining Pulse Characteristics.....	270
11.2.2	Selecting the Video Bandwidth.....	271
11.2.3	Averaging Traces.....	271
11.2.4	Triggering Measurements.....	272
11.2.5	Selecting the Result Unit.....	273
11.2.6	Scaling the Y-Axis.....	273
11.2.7	Using Markers.....	273
12	Modulation Analysis	274
12.1	Analog Demodulation.....	274
12.1.1	Demodulation Bandwidth.....	277
12.1.2	Sample Rate, Measurement Time and Audio Lowpass Filter.....	277

12.1.3	Performing and Configuring Measurements.....	280
12.2	Digital Demodulation.....	284
12.2.1	Measurement Configuration.....	287
12.2.2	Frequency Configuration.....	290
12.2.3	Amplitude Configuration.....	291
12.2.4	Sweep and Trigger Configuration.....	291
13	Interference Analyzer.....	293
13.1	Interference Analysis.....	293
13.2	Signal Strength Mapping.....	294
13.3	Working with Maps.....	294
13.3.1	Transferring Maps	295
13.3.2	Transferring Indoor Maps.....	296
13.3.3	Displaying Maps.....	297
13.3.4	Measuring Interference.....	304
13.3.5	Collecting Map Data.....	307
13.3.6	Analyzing Geographic Data.....	317
13.3.7	Analyzing Indoor Data	318
14	Remote Commands.....	320
14.1	Interfaces and Protocols.....	320
14.1.1	LAN Interface.....	321
14.1.2	USB Interface.....	321
14.1.3	Protocols.....	322
14.2	Setting Up the Remote Control Connection.....	323
14.2.1	Preparing for Remote Control.....	323
14.3	Instrument Model and Command Processing.....	324
14.3.1	Input Unit.....	325
14.3.2	Command Recognition.....	325
14.3.3	Data Base and Instrument Hardware.....	326
14.3.4	Status Reporting System.....	326
14.3.5	Output Unit.....	326
14.4	SCPI Command Structure and Syntax.....	327
14.4.1	Structure of a Command.....	327
14.4.2	Parameters.....	332

14.4.3	Structure of a Program Message.....	334
14.4.4	Responses to Queries.....	335
14.5	Command Sequence and Command Synchronization.....	336
14.6	Remote Control - Commands.....	336
14.6.1	Common Commands.....	338
14.6.2	Remote Commands of the Cable and Antenna Analyzer.....	341
14.6.3	Remote Commands of the Spectrum Analyzer.....	387
14.6.4	Remote Commands of the Analog Modulation.....	459
14.6.5	Remote Commands of the Digital Modulation.....	473
14.6.6	Remote Commands of the Power Meter.....	492
14.6.7	File Management.....	498
14.6.8	Making and Storing Screenshots.....	504
14.6.9	Configuring Data Capture.....	505
14.6.10	Saving Events.....	507
14.6.11	Configuring the Instrument.....	509
14.6.12	Status Reporting System.....	524
15	Menu and Softkey Overview.....	541
15.1	General Functions.....	541
15.1.1	General R&S Cable Rider ZPH Setup.....	541
15.1.2	File Management.....	546
15.1.3	Operating Mode Selection.....	547
15.2	Functions of the Spectrum Analyzer.....	548
15.2.1	Measurement Selection.....	548
15.2.2	Frequency Parameters.....	557
15.2.3	SPAN Selection.....	558
15.2.4	AMPT Parameters.....	558
15.2.5	SWEEP Parameters.....	559
15.2.6	BW Parameters.....	559
15.2.7	Trace Functionality.....	559
15.2.8	Limit Lines.....	560
15.2.9	Markers.....	561
15.3	Functions of the Power Meter.....	562
15.3.1	Power Meter Measurements.....	562

15.3.2	Frequency Parameters.....	565
15.3.3	BW Parameters.....	566
15.3.4	SCALE Parameters.....	567
15.3.5	Sweep Configuration.....	568
15.3.6	Limits Line Parameters.....	569
15.3.7	Trace Parameters.....	569
15.3.8	Marker Parameters.....	569
15.4	Functions of the Modulation Analysis.....	570
15.4.1	Analog Demodulation Measurements.....	570
15.4.2	Digital Demodulation Measurements.....	571
15.4.3	Frequency Parameters.....	572
15.4.4	BW Parameters.....	572
15.4.5	Amplitude Parameters.....	572
15.4.6	Sweep Configuration.....	573
15.4.7	Limits Line Parameters.....	574
15.4.8	TRACE Parameters.....	574
15.4.9	TRACE Parameters.....	574
15.5	Functions of the Wizard.....	575
15.5.1	Measurement Wizard.....	575
15.6	Functions of the Maps.....	577
15.6.1	Maps Measurement.....	578
15.6.2	Frequency Parameters.....	583
15.6.3	Amplitude Parameters.....	583
15.6.4	BW Parameters.....	584
15.6.5	Sweep Configuration.....	584
15.6.6	Trace Functionality.....	585
15.6.7	Limits Line Parameters.....	585
15.7	Functions of the Cable & Antenna.....	585
15.7.1	Cable & Antenna Measurements.....	586
15.7.2	FREQ/DIST Parameters.....	586
15.7.3	SCALE Parameters.....	588
15.7.4	DTF CONFIG Parameters.....	588
15.7.5	SWEEP Parameters.....	590

15.7.6	TRACE Parameters.....	590
15.7.7	MARKER Parameters.....	591
15.7.8	CAL Parameters.....	593
16	Appendix.....	594
16.1	How a Spectrum Analyzer Works.....	594
	List of Commands.....	599
	Index.....	610

1 Preface

1.1 Documentation Overview

This section provides an overview of the R&S Cable Rider ZPH user documentation. You find it on the product page at:

<http://www.rohde-schwarz.com/product/zph.html> > "Downloads"

Getting started manual

Introduces the R&S Cable Rider ZPH and describes how to set up and start working with the product. A printed version is included in the delivery.

User manual

The user manual contains the description of all instrument modes and functions. It also provides an introduction to remote control, a complete description of the remote control commands with programming examples, and information on maintenance, instrument interfaces and error messages.

In addition to the R&S Cable Rider ZPH user manual, there is a separate user manual for the InstrumentView software package. This manual contains a description of all features of the InstrumentView software package.

Service manual

Describes the performance test for checking the rated specifications, module replacement and repair, firmware update, troubleshooting and fault elimination, and contains mechanical drawings and spare part lists.

The service manual is available for registered users on the global Rohde & Schwarz information system (GLORIS, <https://gloris.rohde-schwarz.com>).

Basic safety instructions

Contains safety instructions, operating conditions and further important information. The printed document is included in the delivery.

Data sheet and brochure

The data sheet contains the technical specifications of the R&S Cable Rider ZPH. It also lists the options and their order numbers as well as optional accessories.

The brochure provides an overview of the R&S Cable Rider ZPH and shows its specific characteristics.

Release notes and open source acknowledgment (OSA)

The release notes list new features, improvements and known issues of the current firmware version, and describe the firmware installation.

The open source acknowledgment document provides verbatim license texts of the used open source software.

See <http://www.rohde-schwarz.com/product/zph.html> > "Downloads" > "Firmware".

Application notes, application cards, white papers, etc.

These documents contain information about possible applications and background information on various topics, see www.rohde-schwarz.com/appnotes.

Calibration certificate

The calibration certificates of your device are available online. Visit the R&S Cable Rider ZPH product page and select the item to download the calibration certificate. You will be forwarded to a Gloris page.

<https://gloris.rohde-schwarz.com/calcert>.

Enter the device ID of your R&S Cable Rider ZPH and download the certificate. You can find the device ID either in the "Setup" menu or on the label on the rear panel.

1.2 Conventions Used in the Documentation

The following conventions are used throughout the R&S Cable Rider ZPH manual.

1.2.1 Typographical Conventions

The following text markers are used throughout this documentation:

Convention	Description
"Graphical user interface elements"	All names of graphical user interface elements on the screen, such as dialog boxes, menus, options, buttons, and softkeys are enclosed by quotation marks.
[KEYS]	Key names are written in capital letters.
File names, commands, program code	Filenames, commands, coding samples and screen output are distinguished by their font.
<i>Input</i>	Input to be entered by the user is displayed in italics.
Links	Links that you can click are displayed in underline blue font.
"References"	References to other parts of the documentation are enclosed by quotation marks.

1.2.2 Conventions for Procedure Descriptions

When describing how to operate the instrument, several alternative methods may be available to perform the same task. In this case, the procedure using the touchscreen

is described. The alternative procedure using the keys on the instrument or the on-screen keyboard is only described if it deviates from the standard operating procedures.

The term "select" may refer to any of the described methods, i.e. using a finger on the touchscreen or a key on the instrument or on a keyboard.

1.2.3 Other Conventions

Remote commands may include abbreviations to simplify input. In the description of such commands, all parts that have to be entered are written in capital letters. Additional text in lower-case characters is for information only.

2 Welcome to the R&S Cable Rider ZPH

The R&S Cable Rider ZPH is a new generation Rohde & Schwarz cable and antenna analyzer developed to meet demanding customer requirements. Offering touchscreen input, the analyzer enhances user experience in making measurements fast and easy.

This user manual contains a description of the functionality that the instrument provides. The latest version is available for download at the product homepage (<http://www.rohde-schwarz.com/product/zph.html>).

3 Getting Started

The following chapters are identical to those in the printed R&S Cable Rider ZPH Getting Started manual.

- [Preparing for Use](#)..... 17
- [Instrument Tour](#)..... 25

3.1 Preparing for Use

3.1.1 Putting into Operation

This chapter describes the basic steps to be taken when setting up the R&S Cable Rider ZPH for the first time.

WARNING

Risk of injury and instrument damage

The instrument must be used in an appropriate manner to prevent electric shock, fire, personal injury, or damage.

- Do not open the instrument casing.
 - Read and observe the "Basic Safety Instructions" delivered as a printed brochure with the instrument.
In addition, read and observe the safety instructions in the following sections.
Notice that the data sheet may specify additional operating conditions.
-

NOTICE

Risk of instrument damage

Note that the general safety instructions also contain information on operating conditions that prevent damage to the instrument. The instrument's data sheet may contain additional operating conditions.

NOTICE**Risk of electrostatic discharge (ESD)**

Electrostatic discharge (ESD) can cause damage to the electronic components of the instrument and the device under test (DUT). ESD is most likely to occur when you connect or disconnect a DUT or test fixture to the instrument's test ports. To prevent ESD, use a wrist strap and cord and connect yourself to the ground, or use a conductive floor mat and heel strap combination.

For details, refer to the basic safety instructions delivered as a printed brochure with the instrument.

NOTICE**Risk of instrument damage during operation**

An unsuitable operating site or test setup can cause damage to the instrument and to connected devices. Ensure the following operating conditions before you switch on the instrument:

- The instrument is dry and shows no sign of condensation.
- The instrument is positioned as described in the following sections.
- The ambient temperature does not exceed the range specified in the data sheet.
- Signal levels at the input connectors are all within the specified ranges.
- Signal outputs are correctly connected and are not overloaded.

**EMI impact on measurement results**

Electromagnetic interference (EMI) may affect the measurement results.

To suppress generated electromagnetic interference (EMI):

- Use suitable shielded cables of high quality. For example, use double-shielded RF and LAN cables.
- Always terminate open cable ends.
- Note the EMC classification in the data sheet.

3.1.1.1 Unpacking and Checking the Instrument

Unpack the R&S Cable Rider ZPH carefully and check the contents of the package.

- Check the equipment for completeness using the delivery note and the accessory lists for the various items.
- Check the instrument for any damage. If there is damage, immediately contact the carrier who delivered the instrument.
- Keep the box and packing material.

NOTICE**Risk of damage during transportation and shipment**

Insufficient protection against mechanical and electrostatic effects during transportation and shipment can damage the instrument.

- Always make sure that sufficient mechanical and electrostatic protection is provided.
- When shipping an instrument, the original packaging should be used. If you do not have the original packaging, use sufficient padding to prevent the instrument from moving around inside the box. Pack the instrument in antistatic wrap to protect it from electrostatic charging.
- Secure the instrument to prevent any movement and other mechanical effects during transportation.

**Packing material**

Retain the original packing material. If the instrument needs to be transported or shipped at a later date, you can use the material to protect the control elements and connectors.

3.1.1.2 Accessory List

The instrument comes with the following accessories:

- Power supply cable and adapter set
- Li-ion rechargeable battery
- USB2.0 cable A-Mini
- Side strap
- Printed Getting Started manual
- Document folder containing safety instructions, KC and CE certificate

Optional accessories and their order numbers are listed in the data sheet.

3.1.1.3 Setting up the R&S Cable Rider ZPH

The R&S Cable Rider ZPH is mainly used for diagnostic purpose during the installation of RF feeder cables and antennas for all kinds of radio transmitters.

Depending on the environment, you can adjust the viewing angle of the display and either lay it out horizontally or prop it up using the support on the back of the R&S Cable Rider ZPH.




When laid out horizontally for operation from above, the R&S Cable Rider ZPH is tilted slightly due to the micro-stand at the back. This position provides the optimum viewing angle for the display.

To allow easy operation from the front and still be able to read the display, you can swing out the support on the back of the R&S Cable Rider ZPH.

Before you turn on the R&S Cable Rider ZPH, you should insert the lithium ion battery included in the delivery into the battery compartment located at the back of the R&S Cable Rider ZPH.

Insert battery

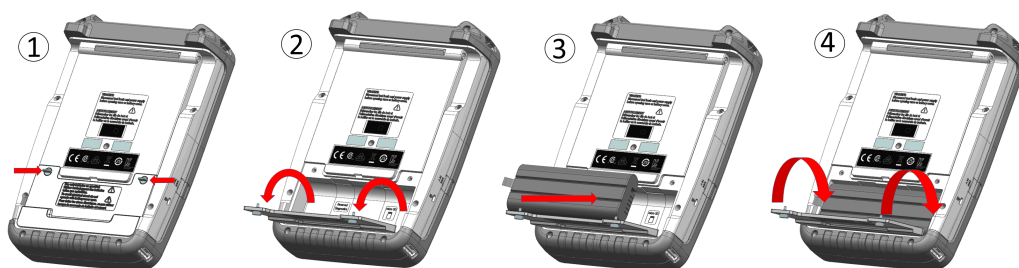

1. Unscrew the two thumb screws located on the battery compartment.
2. Open the cover.
3. Insert the battery into the R&S Cable Rider ZPH.
4. Close the cover and screw back the thumb screws.

You can operate the R&S Cable Rider ZPH with the AC adapter or the battery. Both are included in the delivery.

3.1.1.4 Using the AC Adapter

NOTICE

Risk of instrument damage

To avoid instrument damage,

- Only use the power supply (R&S HA-Z301, order number 1321.1386.02) included in the delivery.
- Make sure that the AC supply voltage is compatible to the voltage specified on the power supply unit.
- Attach the appropriate adapter to the power supply.

Connect the AC adapter to the DC port on the left side of the R&S Cable Rider ZPH (item 1 of [Figure 3-1](#)). Make sure to fully insert the AC adapter plug into the DC port.

Depending on the system you need, firmly connect the appropriate power cable included in the delivery to the AC adapter (item 2 of [Figure 3-1](#)).

Finally, connect the power cable plug to an AC power outlet.



Figure 3-1: AC adapter

- 1 = AC adapter
2 = Power cable

The voltage range of the AC power supply is 100 V to 240 V AC.

After the R&S Cable Rider ZPH is connected to the power supply, you can turn it on with the [Power] key on the front panel.

3.1.1.5 Battery Operation

The R&S Cable Rider ZPH has a smart battery indicator which displays the battery charging status on the [Power] key as well as the battery icon shown at the top right corner of the display screen. See [Chapter 3.2.6, "Display Overview"](#), on page 31.

The lithium ion battery has a capacity of 6.4 Ah and it allows operation of up to nine hours when it is fully charged.

The actual operation time depends on the current charged status (see [Figure 3-2](#)), the ambient temperature and the operating mode of the R&S Cable Rider ZPH.

For a summary of the LED indication of the [Power] key, see [Table 3-1](#).

The battery charging and discharging process of the battery icon indicated in the display screen is illustrated below:

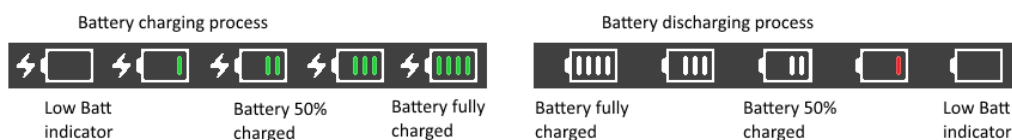


Figure 3-2: Battery charging and discharging process

Charging time is about three hours when the R&S Cable Rider ZPH is in inactive mode (i.e. R&S Cable Rider ZPH is switched off). If the instrument is in active mode (i.e. R&S Cable Rider ZPH is switched on), the charging time is extended to about four hours because the charging current is reduced as the power is partially drained by the usage of the R&S Cable Rider ZPH.

During operation in the field, you can also charge the battery with the car adapter (R&S HA-Z302, order number 1321.1340.02). You can connect the car adapter to the DC port. With the car adapter, you are able to charge the R&S Cable Rider ZPH via the car's cigarette lighter socket. A replacement battery (R&S HA-Z306, order number 1321.1334.02) with the same capacity and charging time as the battery included in the standard delivery is also available if necessary.



Battery dispatched during delivery is not fully charged, for battery operation you have to charge it first.

To charge the battery, connect the charger to AC power adapter included in the delivery. For more information, see ["Using an external battery charger"](#) on page 22.

Using an external battery charger

You can also use an external battery charger (R&S HA-Z303, order number 1321.1328.02) to charge the battery.

To charge the battery externally, put the battery into the external charger and supply it with power via the AC power adapter.

An amber LED on the charger indicates the charging process. The LED turns to green when the battery is fully charged. A red LED on the charger indicates that the battery is not charging or the charging failed.

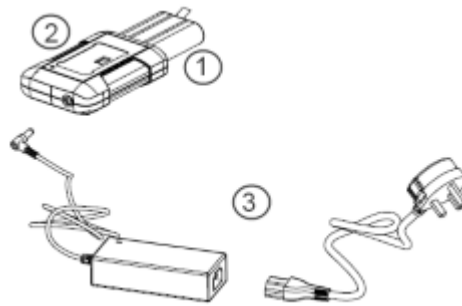


Figure 3-3: External battery charger

1 = Lithium ion battery R&S HA-Z306

2 = External charger R&S HA-Z303

3 = Power supply unit R&S HA-Z301 or car adapter R&S HA-Z302

⚠ WARNING

Risk of traffic accidents, physical injury and property damage

- Turn off the R&S Cable Rider ZPH while driving or while the engine is on.
- Operation of the R&S Cable Rider ZPH via the cigarette lighter socket while driving or while the engine on is prohibited.

3.1.1.6 Battery Maintenance

The R&S Cable Rider ZPH comes with a lithium-ion battery. In general, these batteries are easy to handle. When you handle the battery, follow the instruction mentioned in the safety instructions and in the following chapters.

Handling

- The battery has been designed for a specific application. Do not use it for any other applications.
- Do not connect batteries in series or parallel as it can cause serious damage.
- Observe correct polarities during installation and charging.
- Do not heat over 70°C. The battery contains thermal fuses that could activate and render the battery inoperable.
- The battery contains an electronic device for protection against deep discharge, overcharge and short-circuiting between the terminals.
 - If you cannot discharge the battery, it may be deep discharged. Charge the battery for 0.5 hours and check again.
 - If you cannot charge the battery, it may be overcharged. Discharge the battery and check again.
 - If the battery has been short-circuited, charge it to reset the electronics.
 - If the battery still does not work, contact the Rohde & Schwarz customer support.

- Do not allow metallic objects to come into contact with the terminals.
- Do not solder directly to the battery.

Storage

The battery self-discharges while not in use. When storing the battery for an extended period of time, make sure to

- Handle the battery carefully to avoid short circuits. Make sure that leads and terminals are insulated.
- Keep the battery in the supplied packaging before use. The temperature should not exceed 30°C.
- Store the battery at an initial state of charge between 15% and 50% of its capacity. When calculating the initial state of charge, consider
 - The maximum consumption of electronic devices
 - The self-discharge of the battery - the higher the state of charge, the higher the rate of self-discharge
- Avoid a deep discharge of the battery. A deep discharge occurs when the state of charge falls below 5% of the battery's capacity.
- Recharge the battery at least every six months.

Should the battery voltage be low or even 0 V, the battery protection circuit may have gone into a sleep mode. In that case, reset the battery with an approved charger.

Transportation

No special regulations apply for transporting the battery. The battery cells contain no metallic lithium.

End of Life

The capacity of the battery decreases after it has gone through numerous charge cycles and nearing its end of life. When the battery is dead, do not open the battery. Do not dispose battery in fire.

3.1.2 Switching the Instrument On and Off

The instrument can be powered with an AC or DC (battery operated or via car adapter) input. See [Chapter 3.1.1.4, "Using the AC Adapter"](#), on page 21.

- ▶ Press the [Power] key to switch on the instrument.
During booting, the R&S Cable Rider ZPH displays a splash screen to indicate the operable frequency range of the instrument. Depending on the frequency upgrade option installed, the respective splash screen is loaded.
After booting, the instrument is ready for operation.
Refer to the instrument brochure for the list of options available.
- ▶ Press the [Power] key to switch off the instrument.

NOTICE**Risk of losing data**

If a running instrument (without battery) is disconnected directly from the power cord, the instrument loses its current settings. Furthermore, program data may be lost.

Press the [Power] key first to shut down the application properly.

The following shows the [POWER] key behavior in different operation modes.

Table 3-1: Summary of LED indication on POWER key

LED indication on [Power] key		Descriptions
Green LED		Instrument is in operation mode.
Blue LED		Instrument is in switch off mode with a fully charged battery. A blinking blue LED indicates that the battery charging is in process.
Amber LED		Instrument is in switch off mode with AC supply and there is no battery in it.
Red LED		There is an error in the battery charging.
LED "OFF"		This is an indication that there is no AC or DC supply to the instrument. The instrument is in a switch off mode.

3.2 Instrument Tour

This chapter describes the instrument in different views.

3.2.1 Front View



- 1 = Power meter input / RF Input
- 2 = BNC connector for model .12
- 3 = Headphone jack for model .12
- 4 = USB ports
- 5 = Signal source output / Reflection (N-connector)
- 6 = Touch-sensitive screen area
- 7 = Softkey labels (on display)
- 8 = Softkey
- 9 = Systems keys
- 10 = DC port (behind protective cap)
- 11 = Kensington lock
- 12 = Function keys
- 13 = On/off key
- 14 = Alphanumeric key
- 15 = Unit keys
- 16 = Back key
- 17 = Cancel key
- 18 = Rotary knob
- 19 = Screenshot key
- 20 = LAN and mini USB port (behind protective cap)
- 21 = Micro-SD card slot (not visible as it is located behind the battery compartment)

For a description of the keys, see R&S Cable Rider ZPH user manual.

NOTICE**Instrument damage caused by cleaning agents**

Cleaning agents contain substances that may damage the instrument. For example, cleaning agents that contain a solvent may damage the front panel labeling, plastic parts, or the display.

Never use cleaning agents such as solvents (thinners, acetone, etc.), acids, bases, or other substances.

The outside of the instrument can be cleaned sufficiently using a soft, lintfree dust cloth.

3.2.2 Top View

- 1 = Power meter input / RF Input
- 2 = BNC connector for model .12 only
- 3 = Headphone jack for model .12 only
- 4 = USB type A connector
- 5 = RF out / Reflection

Power meter input / RF Input

For model .02, the built-in power-meter provides a maximum power measurement of 30 dBm (or 1 W) at the RF input port. Connect a cable or DUT to the RF input with an N-type connector. Use a cable to connect the DUT to the R&S Cable Rider ZPH, if necessary.

For model .12, the RF input allows a maximum power of 20 dBm (or 100 mW) at the RF input port. The R&S Cable Rider ZPH may be loaded with up to 30 dBm (or 1W) for up to three minutes. If you apply 1 W for a longer period, the R&S Cable Rider ZPH may be destroyed. The RF input is protected from static discharges and voltage pulses by a limiting circuit. Connect a cable or DUT to the RF input with an N-type connector. Use a cable to connect the DUT to the R&S Cable Rider ZPH, if necessary.

⚠ WARNING**Risk of electrical shock**

To avoid electrical shock, the DC input voltage must never exceed the value specified on the housing.

NOTICE**Risk of instrument damage**

To avoid damage to the coupling capacitor, input attenuator or the mixer, the DC input voltage must never exceed the value specified in the data sheet.

BNC connector

You can connect the BNC connector for various applications. It supports an external trigger signal or an external reference signal. It can also be configured as a BIAS port.

When the BNC connector is configured as a trigger input, it controls the start of a measurement. The trigger mode is selected in the SWEEP menu. The trigger threshold is similar to that of TTL signals.

When the BNC connector is configured as reference input, you can apply a 10 MHz external reference signal to it for frequency synchronization. The external reference label **Ext Ref** is displayed at the top right corner of the trace window to indicate that the reference signal is supplied via external signal input. The label turns green when the reference signal is detected.

The level of the reference signal must be larger than 0 dBm. If there is no reference signal present at the BNC connector, the R&S Cable Rider ZPH displays an appropriate message. Thus, measurements without a valid reference can be avoided.

When the BNC connector is configured as an internal DC bias port, the BNC connector provides direct current output. Active equipment under test can be supplied with power via the bias port.

NOTICE**Risk of instrument damage**

To avoid damage to the tracking generator output, never apply currents greater than 600 mA or voltages greater than 20 V to the BNC connectors if the BNC connectors are not configured as BIAS output ports.

If they are configured as BIAS ports, never apply currents greater than 600 mA or voltages greater than 50 V.

Headphone jack

The 3.5 mm connector for headphones has an internal impedance of approximately 10 Ω .

USB type A connector

The USB port provides the USB interface to connect a memory stick and store data sets or screenshots. It can also be used to control the operation of the external power sensor.

RF out / Reflection

For model .02, the RF out connector provides a signal source output power at -10.00 dBm nominal.

For model .12, the RF out connector provides the following ways to generate a signal source output power at -10.00 dBm nominal.

- Tacking generator output
- Continuous signal source output
- Coupled continuous signal source output

For model .12, the RF out connector can also be configured as an internal DC bias port. When the RF out is configured as a BIAS port, the RF out connector provides direct current output. Active equipment under test can be supplied with power via the bias port.

⚠ WARNING

Risk of electrical shock


To avoid electrical shock, the DC input voltage must never exceed the value specified on the housing.

NOTICE

Risk of instrument damage

- Make sure not to overload the RF input and keep within the maximum allowed signal levels. Refer to the datasheet for the maximum allowed signal levels.
 - To avoid damage to the coupling capacitor, input attenuator or the mixer, the DC input voltage of 50 V must never be exceeded.
-

3.2.3 Left View

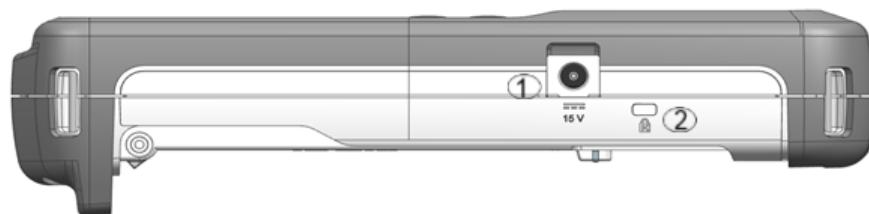

- 1 = DC input
2 = Kensington lock slot


DC input

The R&S Cable Rider ZPH is supplied with power by the AC/DC transformer power supply via the DC connector. You can also use the DC connector to charge the battery.

Kensington lock slot

A Kensington lock can be anchored to the R&S Cable Rider ZPH housing to secure it to a workstation mechanically.

3.2.4 Right View

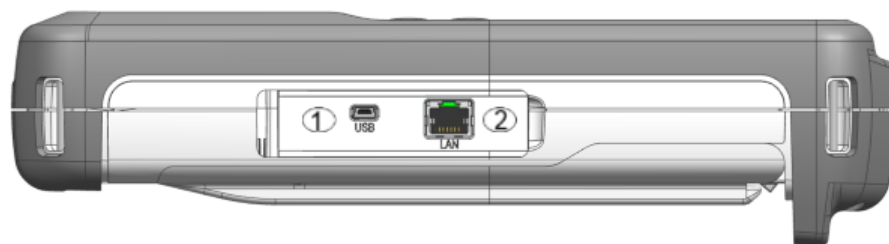

1 = Mini USB port

2 = LAN port


LAN connector

RJ-45 connector to connect the instrument to a Local Area Network (LAN) and transfer data in both directions. It supports up to 100 Mbit/s.

USB type B connector (mini USB)

Mini USB connector to connect a computer for remote control of the instrument and transfer data in both directions.

3.2.5 Rear View

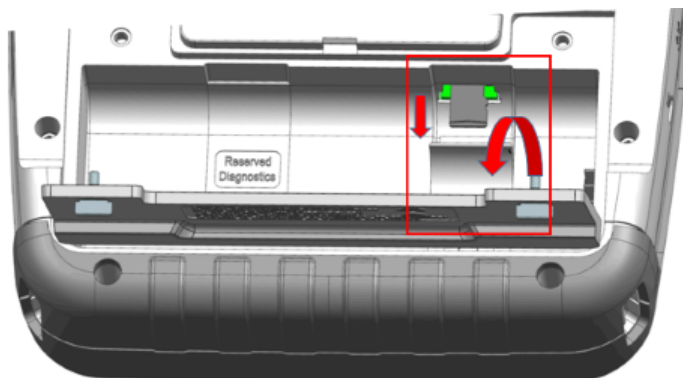


The micro-SD card slot is located behind the battery compartment of the R&S Cable Rider ZPH.

Peel open the micro-SD card protective cap to access to the micro-SD card slot. You can use the micro-SD card to store datasets or screenshots.

3.2.6 Display Overview

The display area has a touch-sensitive screen, the touch functionality can be turned on or off in the instrument setup menu.

For information of the display areas and touchscreen gestures, see the R&S Cable Rider ZPH user manual.

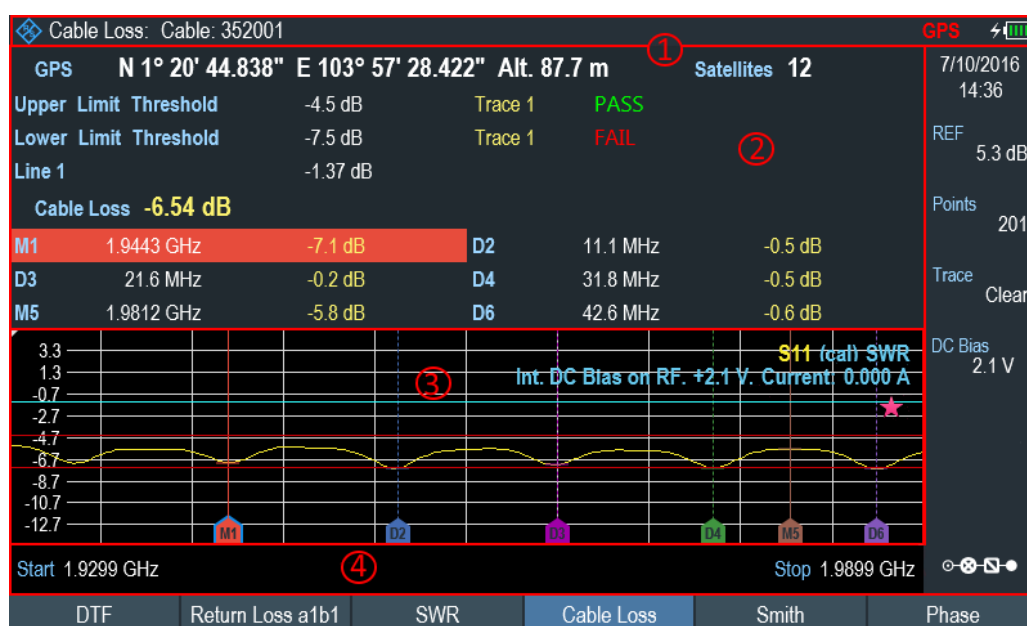

- 1 = Title bar
- 2 = Measurement result view
- 3 = Measurement trace window
- 4 = Parameter view

NOTICE

Risk of touchscreen damage during operation

- Never touch the screen with ball point pens or other pointed objects with sharp edges.
- It is recommended that you operate the touchscreen by finger only. As an alternative, you may use a stylus pen with a smooth soft tip.
- Never apply excessive force to the screen. Touch it gently.
- Never scratch the screen surface, e.g. with a finger nail. Never rub it strongly, for example with a dust cloth.

4 Basic Operation

The following chapters provide an overview on the measurements that you can perform with the R&S Cable Rider ZPH.

• Screen Layout and Elements.....	32
• Configuring the R&S Cable Rider ZPH.....	39
• Connecting the R&S Cable Rider ZPH to a PC.....	59
• Managing Options.....	65
• Identifying Cable Faults.....	69
• Measuring Transmissions.....	74
• Using the Spectrum Analyzer.....	76
• Using a Power Sensor.....	83
• Saving and Recalling Results and Settings.....	88

4.1 Screen Layout and Elements

The following figure shows the screen layout in the cable and antenna test operating mode. Screen layouts that show specifics for each operating mode or measurement are provided in the corresponding sections of this manual.

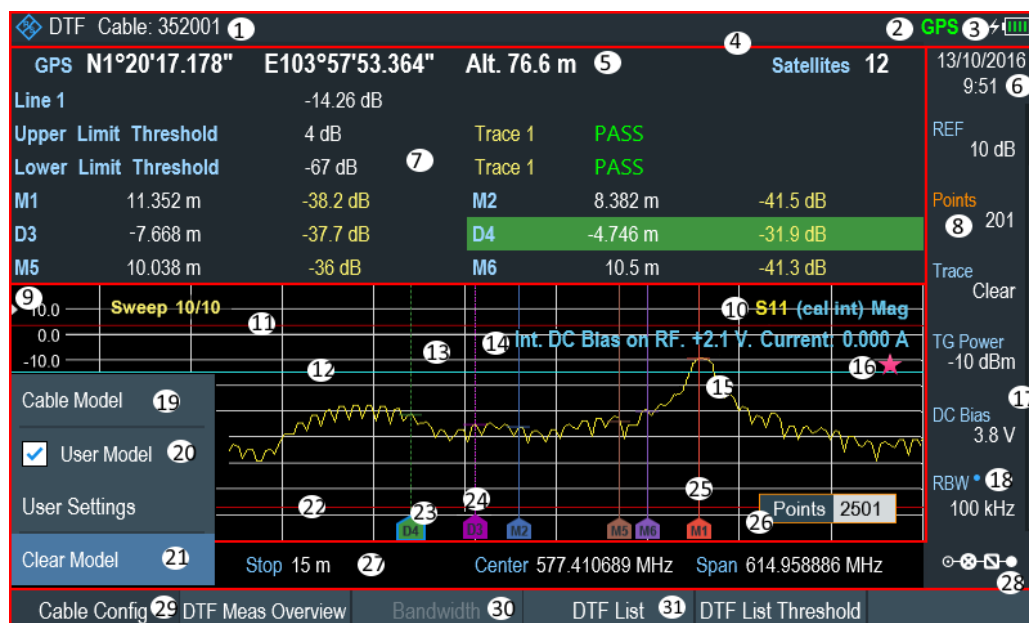


Figure 4-1: R&S Cable Rider ZPH screen layout

- 1 = Measurement information
- 2 = GPS status
- 3 = Battery status
- 4 = Title bar
- 5 = GPS information
- 6 = Date and time
- 7 = Measurement result view

- 8 = Currently selected button
- 9 = Reference position
- 10 = Measurement format and calibration status
- 11 = Upper limit line threshold
- 12 = Display Line
- 13 = [Measurement trace window](#)
- 14 = [Internal DC bias connecting status \(only for model .12\)](#)
- 15 = Trace
- 16 = [Invalid trace indicator](#)
- 17 = Scrollbar for parameter view
- 18 = Blue dot implies setting not coupled to another hardware setting
- 19 = Available menu item
- 20 = Active menu item
- 21 = Current selected menu item
- 22 = Lower limit line threshold
- 23 = Currently selected marker
- 24 = Delta marker
- 25 = Marker
- 26 = Entry box
- 27 = [Parameter view](#)
- 28 = [Configuration overview](#)
- 29 = Currently selected softkey function
- 30 = Unavailable softkey function
- 31 = Available softkey function

4.1.1 Title Bar

The "Title bar" is located at the top of the screen layout.



It is used to display static content:

- Basic information such as R&S logo, measurement mode name (i.e. DTF, Channel Power Meter), GPS and battery status
- Accessories name connected to the instrument, i.e power sensor
- Standard information such as cable model and channel table name

4.1.2 Measurement Result View



Special touchscreen gesture

You can swipe vertically up or down in the "Measurement result view" to hide or unhide the measurement result view display.

The "Measurement result view" is located below the "Title bar".

GPS	N1°20'17.178"	E103°57'53.364"	Alt. 76.6 m	Satellites	12
Upper Limit Threshold	-4.5 dB	Trace 1	PASS		
Lower Limit Threshold	-7.5 dB	Trace 1	FAIL		
Line 1	-1.37 dB				
Cable Loss	-6.54 dB				
M1	1.9443 GHz	-7.1 dB	D2	11.1 MHz	-0.5 dB
D3	21.6 MHz	-0.2 dB	D4	31.8 MHz	-0.5 dB
M5	1.9812 GHz	-5.8 dB	D6	42.6 MHz	-0.6 dB

It displays measurement results of the followings:

- GPS information
- Cable loss result
- Display lines value
- Limit lines result
- Marker values

When the marker is selected in the "Measurement result view", an entry box for marker positioning is displayed on the [measurement trace window](#). The selected marker is also highlighted with a blue frame around the marker icon in the "Measurement trace window".

Table 4-1: Selected marker

Selected marker in the "Measurement result view"	Selected marker in the "Measurement trace window"
	 Note: There is a blue frame around the selected marker icon, "M1".

For more information on marker measurement, see [Chapter 7.3.2, "Using Markers"](#), on page 157.


4.1.3 Measurement Trace Window

The "Measurement trace window" is the main user interface window in the R&S Cable Rider ZPH. It displays the measurement traces where markers and limit lines are also displayed. It also displays the result format, calibration status and internal DC bias setting status.



Invalid trace indicator

Trace invalid indicator icon,  indicates that the measurement is still in progress.

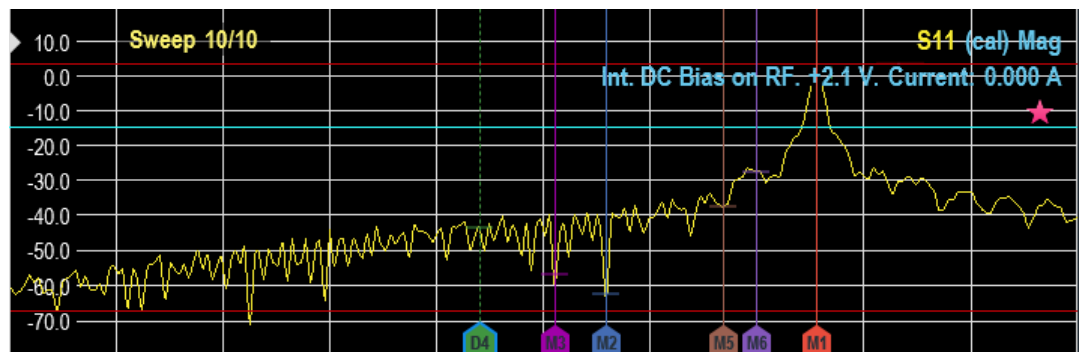

The **Invalid trace indicator** is displayed below the S11 result format and calibration status.

For information of result format and calibration status, see [Chapter 7.1, "Performing Cable and Antenna Measurements"](#), on page 128 and [Chapter 7.1.7.1, "Calibration States"](#), on page 138.

For information of the internal DC bias status, see [Configuring the BIAS output port](#).

For information of markers, display line and limit lines, see [Chapter 7.3, "Analyzing Measurement Results"](#), on page 155.




4.1.4 Parameter View

The "Parameter view" contains the important hardware setting parameters used in the measurement.

It is located at the right side and bottom section of the screen layout. See [Figure 4-1](#).

You can select any parameter in the "Parameter view" to adjust the configurations of the hardware settings. See details of each of the parameter in [Chapter 7.2.2, "Configuring the Horizontal Axis"](#), on page 146 and [Chapter 7.2.3, "Configuring the Vertical Axis"](#), on page 150.

Parameter	Description
"Center", "Start", "Stop" Center 2 GHz Start 0 m Stop 15 m	Function-specific displays depending on the softkey indicated in the softkey label. It is used to configure one of the following: - center frequency, start or stop frequency for the measurement. - start or stop cable length for measurement. See Chapter 7.2.2, "Configuring the Horizontal Axis", on page 146.
"Span" Span 3 GHz	Configure the frequency span of the measurement. See Chapter 7.2.2.1, "Setting the Frequency Range for DTF Measurements" , on page 147.

   
Parameter	Description
Time & Date 	Display time and date of the instrument. This is a read-only field. See Chapter 4.2.4, "Configuring Date and Time" , on page 47 and "Setting the date format" on page 49.
"REF" 	Configure the reference level of the measurement. See Chapter 7.2.3, "Configuring the Vertical Axis" , on page 150.
"Points" 	Configure the number of measurement points. See Chapter 7.2.6.2, "Changing the Number of Measurement Points" , on page 154.
"Trace" 	Toggle the trace parameter to select the different trace mode (Clear, Avg). See Chapter 7.3.1, "Working with Traces" , on page 155.
"TG Power" 	Configure the power level for tracking generator. Available only with model .12.
"DC Bias" 	Configure DC bias output voltage. Available only with model .12 See Configuring the BIAS output port .
"RBW" 	Configure the resolution bandwidth of the DTF measurement. Available only with model .12.
Configure Overview 	Display the configuration overview window for more configuration options used in the measurement. Configuration overview is operation mode dependent. See Chapter 4.1.4.1, "Configuration Overview" , on page 36.

4.1.4.1 Configuration Overview

This is a dedicated button located at the bottom of the "Parameter View". It is operation mode dependent. See [Figure 4-1](#).





When you select this button, it opens the "Config Overview" window. Accessing it without the touchscreen input is possible via the [SETUP] key. See [Chapter 5.5, "Configuring Measurements"](#), on page 101.







The "Config Overview" illustrates here shows the flow of a distance-to-fault (DTF) measurement at different stages and the relevant parameters which have an impact on the measurement at each stage.

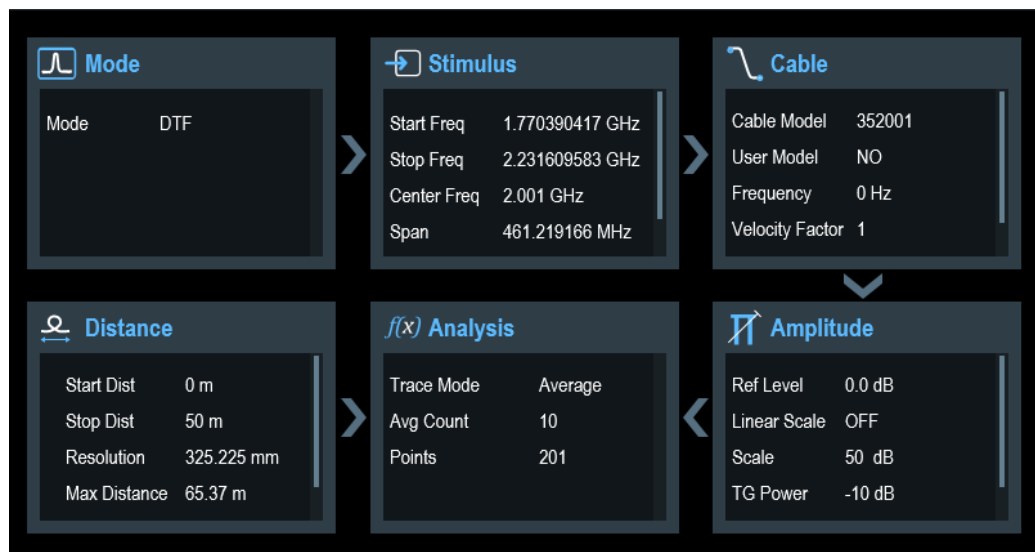

The "Config Overview" window is divided into six categories:

Table 4-2: Corresponding dialog box of Config Overview window

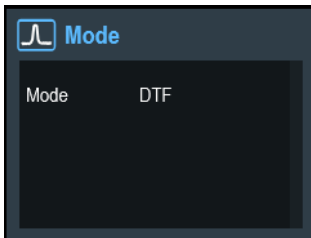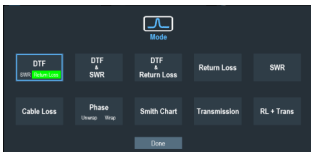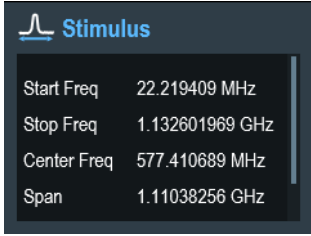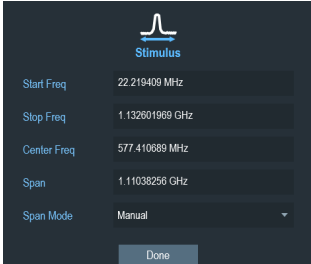"Config Overview" Block	Corresponding Dialog Box	Description
		Select "Mode" to configure the desired measurement in cable and antenna (CAT) mode. See Chapter 7.1, "Performing Cable and Antenna Measurements", on page 128.
		Select "Stimulus" to configure the parameters related to the horizontal axis of the trace window. See Chapter 7.2.2, "Configuring the Horizontal Axis", on page 146.

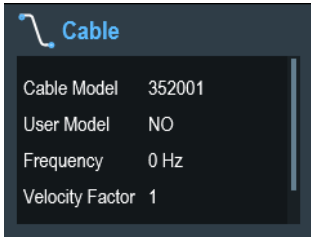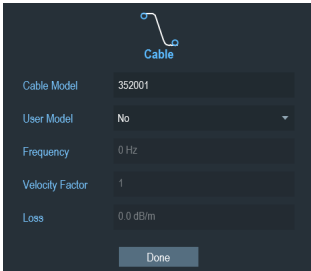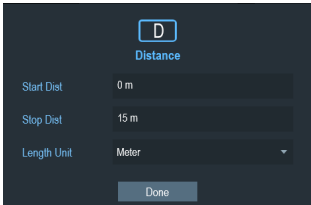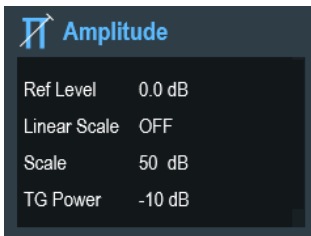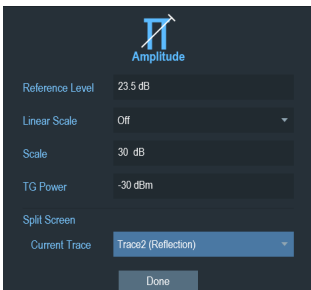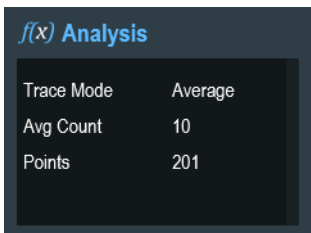"Config Overview" Block	Corresponding Dialog Box	Description
		Select "Cable" to configure the cable model used in the consideration of calculation during measurement. If "User Mode" is set "No", the preloaded model values are displayed for the field as read-only parameters for "Frequency", "Velocity Factor" and "Loss". If "User Model" is set "Yes", the "Cable Model" is switched to "UserCableModel" and the last user-defined values are re-loaded for the field "Frequency", "Velocity Factor" and "Loss". These fields are available for user-specific cable model setting. See Chapter 7.2.1, "Selecting the Cable Mode", on page 143.
		Select "Distance" to configure the cable length and unit used to determine the cable length. See Chapter 7.2.2.2, "Setting the Start and Stop Distance for DTF Measurements", on page 148.
		Select "Amplitude" to configure the parameters related to the vertical axis of the trace window. You can also select the "Current Trace" to display in the "Split Screen" menu item. The "TG Power" is only available for model .12. See Chapter 7.2.3, "Configuring the Vertical Axis", on page 150 and Split screen.
		Select "Analysis" to determine the type of trace mode (Average, Clear/Write) and the number of measurement points used in the measurement. If "Trace Mode" is configured as "Average", the field "Avg Count" is available for configuration. See Chapter 7.3, "Analyzing Measurement Results", on page 155 and Chapter 7.2.6.2, "Changing the Number of Measurement Points", on page 154.

4.2 Configuring the R&S Cable Rider ZPH

SETUP

In the "Instrument Setup" dialog box, the R&S Cable Rider ZPH provides various general settings that are independent of the operating mode of the R&S Cable Rider ZPH.

1. Press [SETUP] key.
 2. Select the "Instrument Setup" softkey.
A corresponding dialog box to configure the instrument opens.
 3. Select the item you want to modify.
- [Configuring the Hardware](#)..... 39
 - [Configuring Antennas](#)..... 41
 - [Using the GPS Receiver](#)..... 45
 - [Configuring Date and Time](#)..... 47
 - [Selecting Regional Settings](#)..... 48
 - [Configuring the Display](#)..... 50
 - [Configuring the Audio Output](#)..... 52
 - [Configuring Power Supply](#)..... 53
 - [Internal Alignment](#)..... 54
 - [Performing Default Calibration](#)..... 56
 - [Configuring Calibration Kit Model](#)..... 57
 - [Resetting the R&S Cable Rider ZPH](#)..... 58

4.2.1 Configuring the Hardware

The hardware settings contain settings that control internal and connected hardware.

Hardware	
Auto Accessory Detection	On
Detected Accessory	
BNC	Trigger Input
Internal DC Bias	BNC
Internal DC Bias Level (Volt)	6.2 V

Using auto accessory detection

If you are using any accessories while working with the R&S Cable Rider ZPH, the instrument is able to identify the connected hardware. To enable this setting:

1. In the "Instrument Setup" dialog box, select the "Auto Accessory Detection" item.
A drop-down menu to select the accessory detection opens.
2. Set the "Auto Accessory Detection" to "On".

When this feature is on, the name of the connected accessory is displayed in the "Detected Accessory" field.


Configuring the BNC connector



BNC connector is only available with model .12.

You can use the BNC connectors for various applications. For more information on the supported applications, see [BNC connector](#).

1. In the "Instrument Setup" dialog box, select the "BNC" item.
A drop-down menu to select the BNC connector application opens.

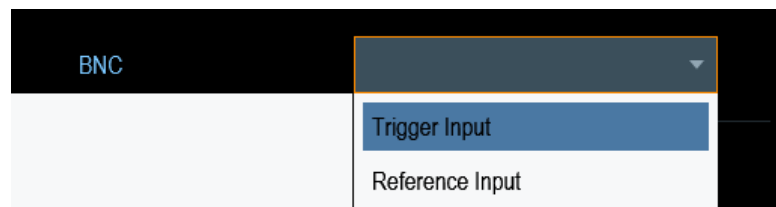

2. Select the required application.


Configuring the BIAS output port



BIAS output port is only available with model .12.

You can supply direct current output via the RF out port or BNC connector. For more information on the supported applications, see [RF out / Reflection](#) and [BNC connector](#).

1. In the "Instrument Setup" dialog box, select the "Internal DC Bias" item.
A drop-down menu to select the type of connector opens.

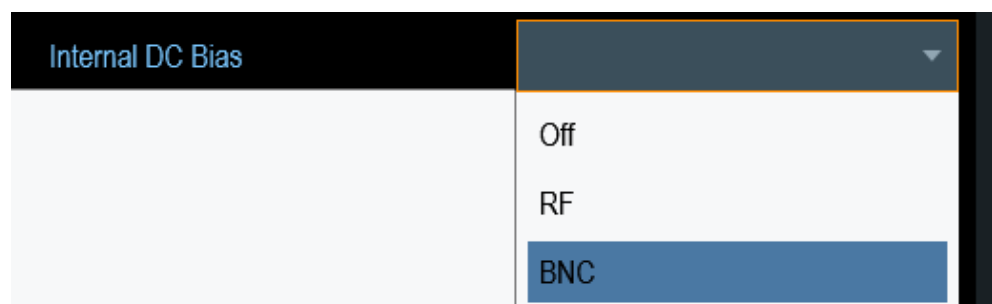

2. Select the desired connector.
When the internal DC bias is activated, the status is displayed at the right-hand corner of the trace window. The status consisting connector setting, voltage and

current level are displayed. See [Chapter 4.1.3, "Measurement Trace Window"](#), on page 34.

3. Select the "Internal DC Bias Level (Volt)" item.
4. Enter the desired DC bias voltage.

4.2.2 Configuring Antennas



Antennas configuration and calibration are only available with model .12.

You can use the log-periodic antenna (R&S HL300, order number 4097.3005.02) , active directional antenna (R&S HE300, order number 4067.5900.02) or the directional antenna (R&S HE400, order number 4104.6000.02) with the R&S Cable Rider ZPH to locate potential interfering sources.

For a comprehensive description of the antennas and their functionality, refer to the user manuals delivered with the product.

Both antennas are embedded with a GPS receiver and an electronic compass. You can control the GPS receiver of the antennas as described in [Chapter 4.2.3, "Using the GPS Receiver"](#), on page 45.


To work with both antennas, you need a USB adapter (R&S HE300USB, order number 4080.9440.02) to connect the antennas control cable to the USB interface of the R&S Cable Rider ZPH.

The "Instrument Setup" dialog box provides all settings necessary to control the antenna.

Antenna	
Antenna	HL300
Compass	On
Show Compass Information	Off
Assign Antenna Switch to	Save Current GPS Position
Magnetic Declination	0.0
Antenna Service Menu	Enter Service Menu

Enabling the antenna

1. In the "Instrument Setup" dialog box, select the "Antenna" menu item.
A drop-down menu to select the antenna opens.

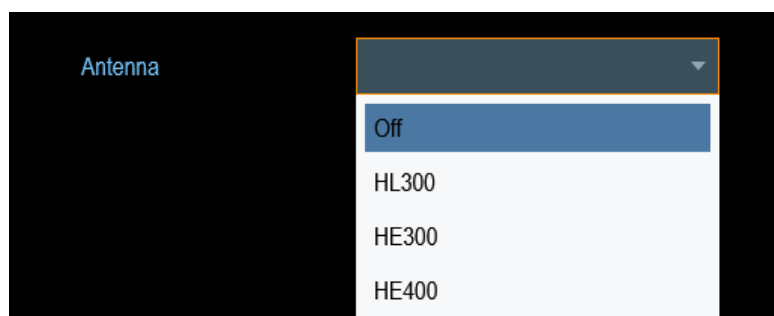


2. Select the "HL300", "HE300" or "HE400" "Antenna" menu item.
The R&S Cable Rider ZPH enables the selected antenna.
Note: The "Auto Accessory Detection" menu item in the "Hardware" section turns off when an antenna is selected.

Enabling the compass

The antennas feature an electronic compass to determine directions precisely.


1. In the "Instrument Setup" dialog box, select the "Compass" item.
A drop-down menu to enable or disable the compass opens.

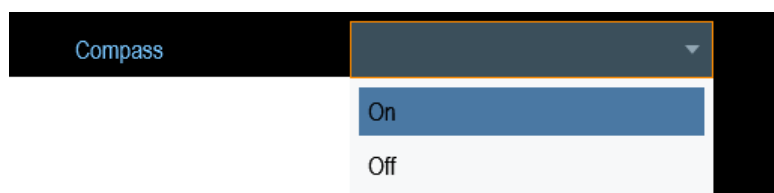

2. Select "On" to enable the compass.
The R&S Cable Rider ZPH shows the magnetic declination of your current position in the "Magnetic Declination" menu item when you turn on the compass.

Showing compass information

1. In the "Instrument Setup" dialog box, select the "Showing Compass Information" menu item.
A drop-down menu to enable or disable the display of compass information opens.

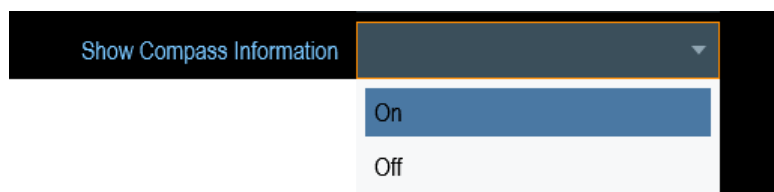


2. Select "On" to enable the display of compass information.
The R&S Cable Rider ZPH displays the compass information at the top of the map display.

Assigning functions to the toggle switch

The R&S HL300 and HE400 has a toggle switch on its handle that you can assign to one of the following functions:

1. In the "Instrument Setup" dialog box, select the "Assign Antenna Switch" menu item.

A drop-down menu to select the function of the antenna toggle switch opens.

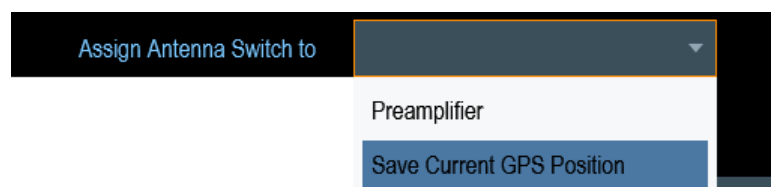

- a) "Preamplifier"
Using the toggle switch turns the preamplifier on and off.
- b) "Save current GPS position"
Using the toggle switch tags your current position in the map material.

2. Select the required function.


Calibrating the antenna




If you need to know technical specification about the antenna, for example for service or support, you can get the necessary information from the "Antenna Service Menu" provided in the R&S Cable Rider ZPH.

The "Antenna Service Menu" contains functionality to calibrate the antenna.

1. In the "Instrument Setup" dialog box, select the "Antenna Service Menu" item to activate the antenna service menu.

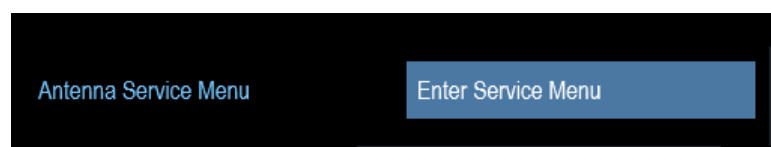

The R&S Cable Rider ZPH informs you that the antenna is disabled to determine the antenna information.

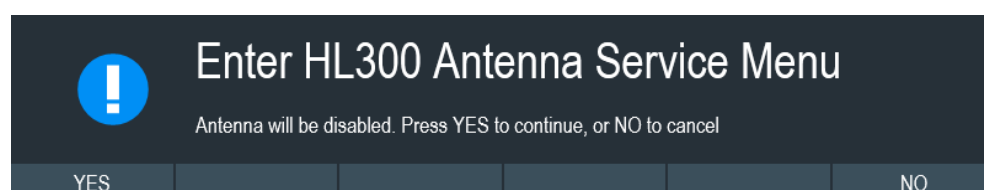

2. Select "YES" softkey.
The R&S Cable Rider ZPH tries to determine the antenna characteristics. It shows the results in a dialog box.

Current Antenna	Antenna Name	HL300
	Antenna Code	25
	Software Version	V3.00

3. Select the "Calibrate" softkey.

 Spectrum

Compass Calibration

An 8-point calibration will be carried out. While calibrating, the compass must be rotated further as instructed. Thereby the compass does not need exact positioning. A position tolerance of 15° will suffice.

The calibration must be handled carefully. Improper execution can lead to invalid compass values.


Calibration Result

Last Noise Score	---
Last Magnetic Environment	---
Calibration Count	---

Calibrate Exit

The R&S Cable Rider ZPH starts the calibration.

 For antenna calibration, it is necessary to move the antenna according to the direction as instructed on the screen.

 Spectrum

Compass Calibration

An 8-point calibration will be carried out. While calibrating, the compass must be rotated further as instructed. Thereby the compass does not need exact positioning. A position tolerance of 15° will suffice.

The calibration must be handled carefully. Improper execution can lead to invalid compass values.

Calibration Result

Last Noise Score	---
Last Magnetic Environment	---




Calibrate Compass

Position Compass arbitrarily. Press Continue to start the calibration.

Continue Cancel

4. When calibration completes, the R&S Cable Rider ZPH displays a "Calibration Successful" message.

The R&S Cable Rider ZPH displays the calibration result.

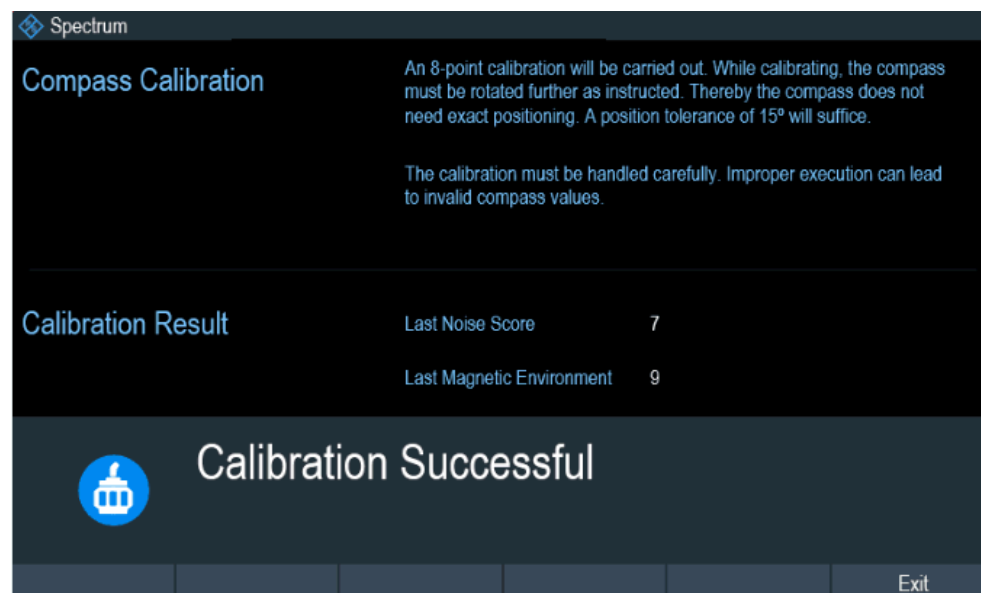

4.2.3 Using the GPS Receiver




R&S Cable Rider ZPH option

The R&S ZPH-B10 (order number 1321.0396.02) option is required to activate the internal built-in GPS receiver in model .02 to locate the exact position of the measurement.


Alternatively, for both model .02 and model .12, you can connect the GPS receiver (R&S HA-Z340, order number 1321.1392.02) to the USB connector.

When locating the exact position, the external GPS receiver takes precedence over the internal built-in GPS receiver.

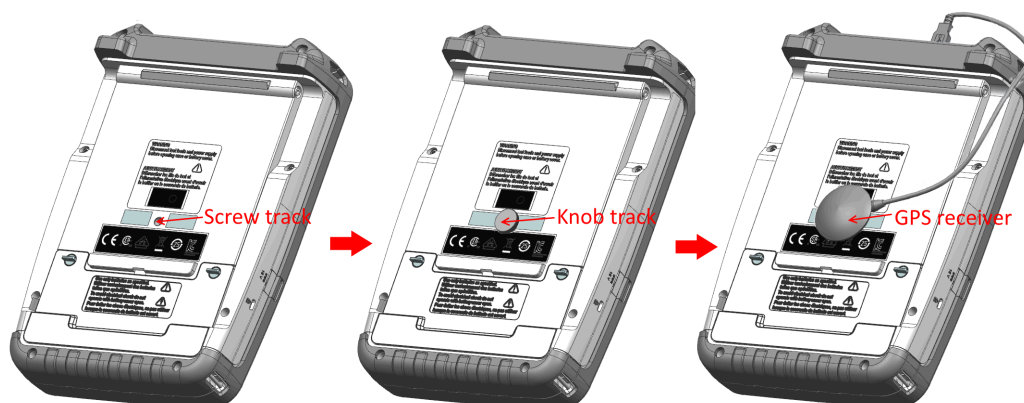**Location to secure GPS receiver (R&S HA-Z340)****Figure 4-2: Location of GPS receiver**

- Tighten the knob screw supplied with the GPS receiver to the screw track at the back of R&S Cable Rider ZPH.
- The GPS receiver can be conveniently attached to the knob screw as shown in [Figure 4-2](#).

The "Instrument Setup" dialog box provides all settings necessary to configure the GPS receiver.

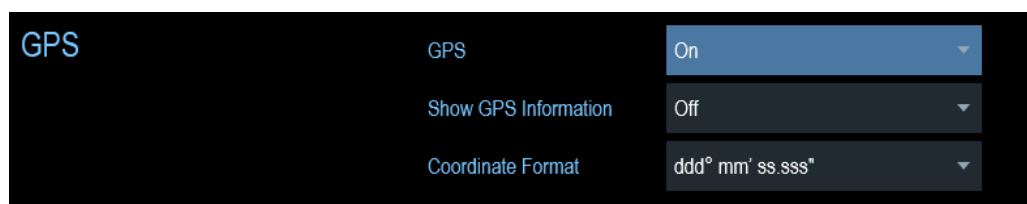**Enabling the GPS receiver**

1. In the "Instrument Setup" dialog box, select the "GPS" item.
A drop-down menu opens to turn the GPS receiver on or off.
2. Turn the GPS receiver on or off as required.

When "GPS" item is turned on, the R&S Cable Rider ZPH is ready to receive GPS data.

Displaying GPS information

1. In the "Instrument Setup" dialog box, select the "Show GPS Information" item.
A drop-down menu opens to turn the display of the GPS information on and off.
2. Turn the display of GPS information on or off as required.

When the "Show GPS Information" item is set on, the R&S Cable Rider ZPH displays the GPS coordinates and number of satellites in the [Measurement Result View](#) when sufficient connection is established to the GPS satellites.

GPS 1°20'20.022" N 103°57'53.238" E 52.5 m Satellites 9

When the satellite connection is lost, the GPS coordinates and number of satellites are displayed with a white bar.

GPS --- Satellites ---

When the GPS receiver is not connected or enabled, a message "GPS Not Connected" is displayed in the [Measurement Result View](#).


GPS Not Connected

The state of the satellite lock shown in the title bar is illustrated as follows.

- **GPS** indicates that the GPS receiver is enabled and that there is a fix connection with enough satellites for the GPS receiver to provide the coordinates.
- **GPS** indicates that the GPS receiver is enabled but that there is no fix connection to a satellite.
- **GPS** indicates that the GPS receiver is enabled but that there is no GPS receiver connection.
- The title bar shows no symbol if the GPS receiver is not enabled

Selecting the coordinate format

1. In the "Instrument Setup" dialog box, select the "Coordinate Format" item. A drop-down menu opens to select the coordinate format.

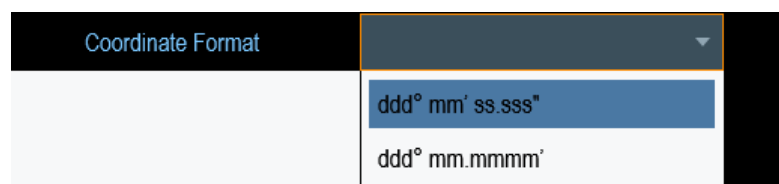

2. Select the desired format from the drop-down menu.

4.2.4 Configuring Date and Time

The R&S Cable Rider ZPH has an internal clock that can apply a date and timestamp. In the "Instrument Setup" dialog box, you can set both date and time.

Date and Time	Set Date	10/07/2015
	Set Time	18:38:48
	Time Zone	+00:00

Setting the date

1. In the "Instrument Setup" dialog box, select the "Set Date" item.
2. Enter the date you want with the numeric keys. The sequence depends on the selected date format. See ["Setting the date format"](#) on page 49.



3. Confirm the entry with the rotary knob.

Setting the time

1. In the "Instrument Setup" dialog box, select the "Set Time" item.
2. Enter the time you want with the numeric keys.



3. Confirm the entry with the rotary knob.
After you have entered the time, the R&S Cable Rider ZPH verifies the validity of the time. If it is not a valid time, it sets to the next valid time.

Selecting the time zone


1. In the "Instrument Setup" dialog box, select the "Time Zone" item.
2. Enter a positive or negative time offset relative to the system time with the numeric keys.



3. Confirm the entry with the rotary knob.
After you have confirmed the time zone, the R&S Cable Rider ZPH adjusts the displayed time accordingly without changing the system time.

4.2.5 Selecting Regional Settings

The regional setting allows you to select a different language and date format.

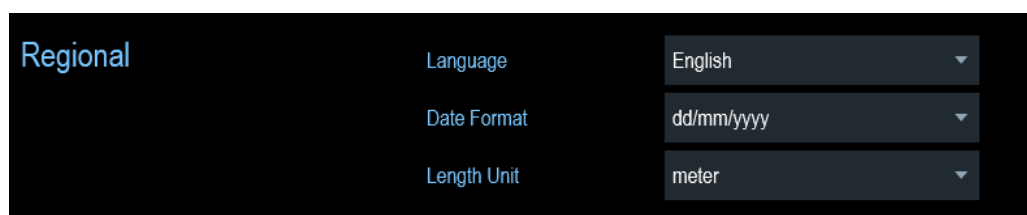

Selecting the language

The R&S Cable Rider ZPH supports several languages for the user interface.

The following is a list of languages that the instrument supports:

English	Spanish	Japanese	Russian
French	Italian	Chinese	Hungarian
German	Portuguese	Korean	Traditional Chinese

1. In the "Instrument Setup" dialog box, select the "Language" item.
A drop-down menu opens to select the language.



2. Select one of the languages from the drop-down menu.
3. Reboot the device to activate the choice of selected language.

Setting the date format

The R&S Cable Rider ZPH provides two different formats to display the date.

1. In the "Instrument Setup" dialog box, select the "Date Format" item.
A drop-down menu opens to select the date format.




2. Select the required date format from the drop-down menu.

Setting the length unit

The R&S Cable Rider ZPH provides two different formats to configure the cable length unit.


1. In the "Instrument Setup" dialog box, select the "Length Unit" item.
A drop- down menu opens to select the length unit.

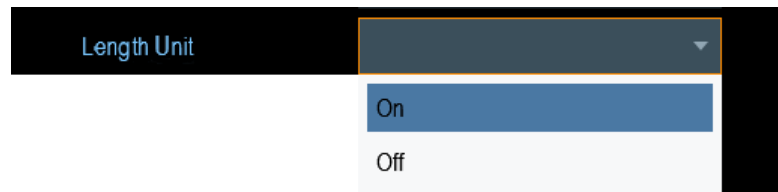

2. Select the required length unit from the drop-down menu.

4.2.6 Configuring the Display

The display setting configures the display characteristics and the touch interface.

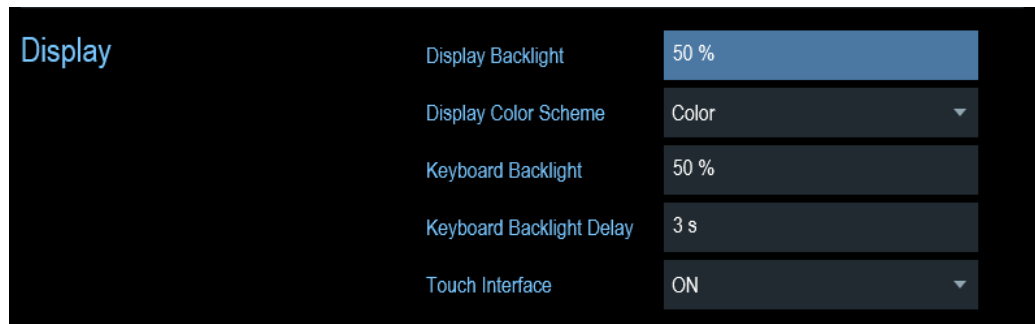

The display of the R&S Cable Rider ZPH is a TFT color LCD display.

The ideal brightness of the display depends on the intensity of the backlight. To strike a balance between battery operating time and screen display quality, set the backlight intensity to the minimum brightness needed.

To optimize the viewing angle, adjust the display color scheme settings. To achieve the maximum contrast, the screen can be switched from color display to black-and-white display.

The intensity of the keyboard backlight is adjustable with a time delay setting to turn off the backlight. The keyboard backlight remains on until the time specified by the "Keyboard Backlight Delay" or a subsequent key is pressed.

Adjusting the display backlight

1. In the "Instrument Setup" dialog box, select the "Display Backlight" item.
2. Enter the backlight intensity you want with the numeric keys.




The backlight intensity is a percentage from 0% to 100% with 100% being the brightest.

3. Confirm the entry with the rotary knob.

Adjusting the display color scheme

1. In the "Instrument Setup" dialog box, select the "Display Color Scheme" item. A drop-down menu opens to select the display color scheme.

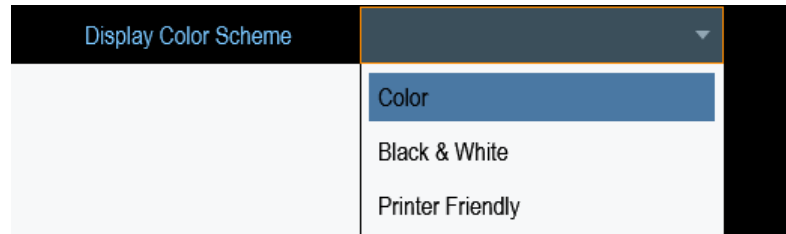

2. Select the desired color scheme from the drop-down menu.
 - a) "Color" selects a color display.
 - b) "Black & White" selects monochrome display.
 - c) "Printer Friendly" inverts the colors.

Adjusting the keyboard backlight

1. In the "Instrument Setup" dialog box, select the "Keyboard Backlight" item.
2. Enter the backlight intensity you want with the numeric keys.



The backlight intensity is a percentage from 0% to 100% with 100% being the brightest.

3. Confirm the entry with the rotary knob.

Adjusting the keyboard backlight delay

1. In the "Instrument Setup" dialog box, select the "Display Backlight" item.
2. Enter the time you want to turn off the keyboard backlight with the numeric keys.




The time delay has a range of 1s to 10s.

3. Confirm the entry with the rotary knob.

Activating the touchscreen interface

1. In the "Instrument Setup" dialog box, select the "Touch Interface" item.
2. Select "ON" to activate the touchscreen interface with R&S Cable Rider ZPH.

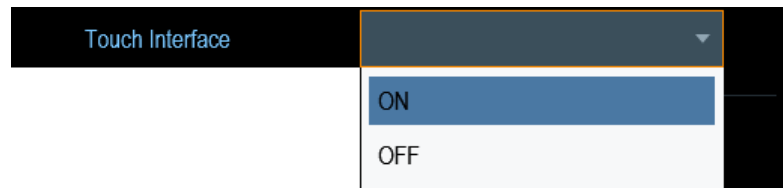


3. Select "OFF" to deactivate the touchscreen interface.

Note: If the touch interface is not activated, the [On-screen keyboard](#) is disabled.

4.2.7 Configuring the Audio Output

The audio settings control the audio output of the system.

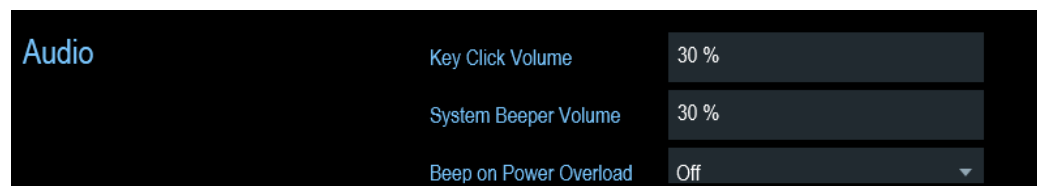

Setting the key click volume

The key click volume sets the volume of the sound that the R&S Cable Rider ZPH produces when you press a key or select a softkey.

1. In the "Instrument Setup" dialog box, select the "Key Click Volume" item.
2. Enter the volume you want with the numeric keys.



The key click volume is a percentage from 0% to 100% with 100% being the loudest.

3. Confirm the entry with the rotary knob.

Setting the system beeper volume

The system beeper volume sets the volume of the system beeper of the R&S Cable Rider ZPH used, i.e. if a message box pops up.

1. In the "Instrument Setup" dialog box, select the "System Beeper Volume" item.
2. Enter the volume you want with the numeric keys.



The system beeper volume is a percentage from 0% to 100% with 100% being the loudest.

3. Confirm the entry with the rotary knob.

Activating / Deactivating audio alert for power overload

In case the R&S Cable Rider ZPH detects an overload at one of its inputs, you can configure it to make a sound.


1. In the "Instrument Setup" dialog box, select the "Beep on Power Overload" item.
2. Select "Beep on Power Overload" to "On".
When this beeper turns on, the R&S Cable Rider ZPH makes a sound every time it detects an overload.



4.2.8 Configuring Power Supply

The "Current Power Source" shows the source that the R&S Cable Rider ZPH is powered by.

When you are using the battery to power up the R&S Cable Rider ZPH, the remaining "Battery Level" is displayed as a percentage with 100 % representing a full charge.

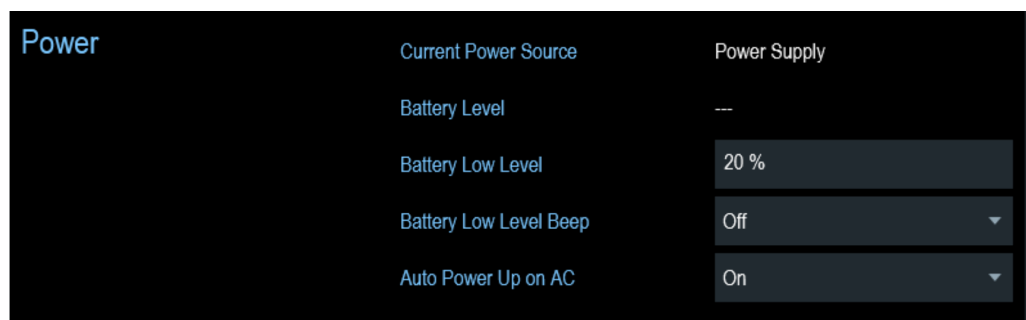


Setting the battery low level

The battery low level is a reminder that the remaining battery charge might be used up soon.

When the battery low level is reached, the battery symbol in the [Title bar](#) turns red and starts blinking. See [Chapter 3.1.1.5, "Battery Operation"](#), on page 22.

 1. In the "Instrument Setup" dialog box, select the "Battery Low Level" item.
2. Enter the charge level in percent of a fully charged battery with the numeric keys.




3. Confirm the entry with the rotary knob.

Activating / Deactivating audio alert for battery low-level state

The R&S Cable Rider ZPH also allows you to turn on an audio signal that indicates that the battery has reached its low-level state.

1. In the "Instrument Setup" dialog box, select the "Battery Low Level Beep" item.

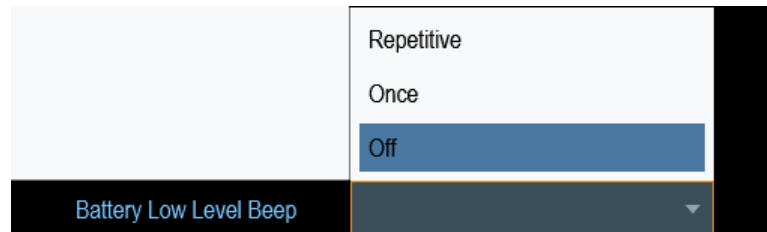

2. Select either "Repetitive" or "Once" to turn on the audio signal.
If you have selected "Once", the R&S Cable Rider ZPH beeps once if the battery runs out of power. For a continuous beep, select "Repetitive".
3. Select "Off" to turn off the beeper.

Auto power up

The R&S Cable Rider ZPH allows you to auto power up the instrument when supplying with an AC power, without pressing the [POWER] key button.

1. In the "Instrument Setup" dialog box, select the "Auto Power Up on AC" menu item.



2. Select "On" to turn on the auto power up mode.
On the next power up cycle, the R&S Cable Rider ZPH goes into the auto power up mode when supplying with an AC power.

4.2.9 Internal Alignment



R&S Spectrum Rider option


R&S ZPH-K35 (order number: 1321.1570.02) option is required to operate the R&S Cable Rider ZPH internal alignment.

- For model .12, both frequency clock and reference level adjustment are supported. Reference level adjustment is only possible if R&S ZPH-K1 (order number: 1334.5604.02) is available in the R&S Cable Rider ZPH.
- For model .02, only frequency clock adjustment is supported.




Operating mode

- Frequency clock alignment
The frequency clock alignment can only be performed in either CAT or "Spectrum" mode (if R&S ZPH-K1 is installed).
If wrong operating mode is detected, a warning message is displayed before alignment is performed.

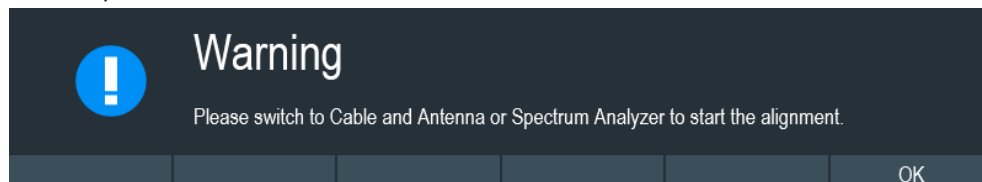


- Reference level alignment
The reference level alignment can only be performed in "Spectrum" mode.
If wrong operating mode is detected, a warning message is displayed before alignment is performed.

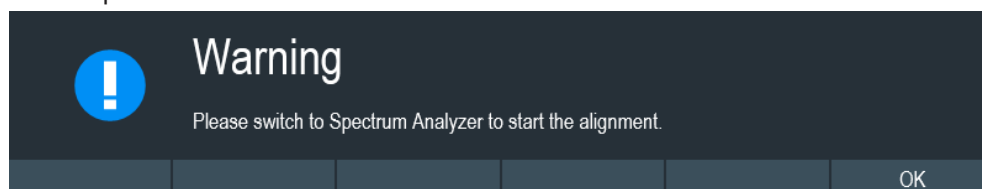


For more information on the operating mode of R&S Cable Rider ZPH, see [Chapter 5.3.4, "System Keys"](#), on page 95.

- In the "Instrument Setup" dialog box, select frequency clock or reference level "Align" item to perform alignment.

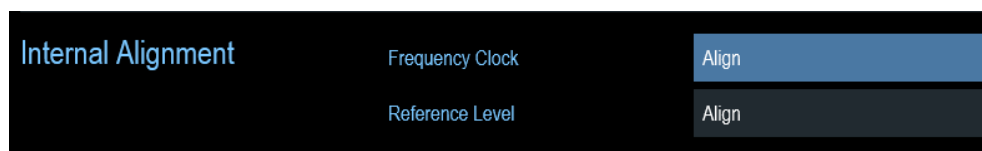

- The R&S Cable Rider ZPH displays the "Perform Alignment" dialog.

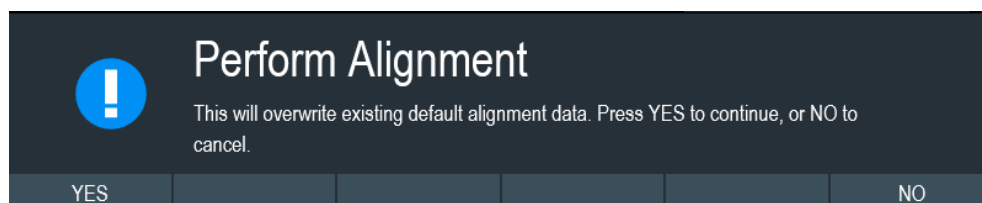

- Select "Yes" to overwrite existing default alignment data and proceed to perform alignment. The R&S Cable Rider ZPH displays the "Alignment" dialog. Depending on the selected alignment item, different input signal is required. See [Figure 4-3](#) and [Figure 4-4](#).

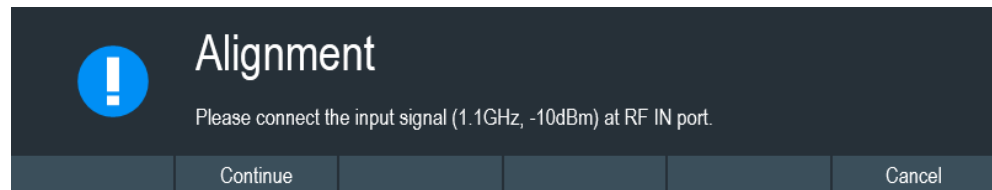


Figure 4-3: Input signal for frequency clock alignment


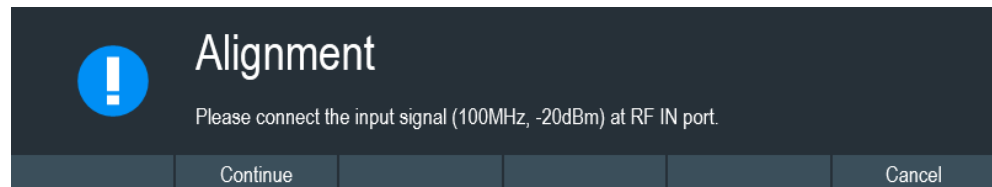


Figure 4-4: Input signal for reference level alignment

4. Connect an input signal of 1.1 GHz, -10dBm at the "RF IN" port for frequency alignment or 100 MHz, -20 dBm at the "RF IN" port for reference level alignment.
5. Select "Continue" to start the internal alignment on the instrument.
The R&S Cable Rider ZPH overwrites existing adjustment data and performs the internal alignment.
If wrong input signal is detected, the R&S Cable Rider ZPH displays a message of a failed alignment dialog.

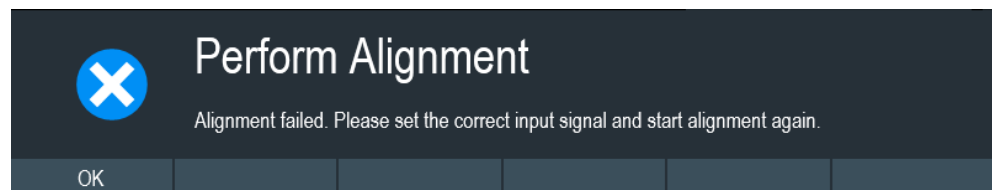

4.2.10 Performing Default Calibration


NOTICE

Factory Calibration


It is not possible to recover the overwritten default calibration performed in factory.

The first default calibration is performed in the factory. You can overwrite this default calibration. For more information, see [Chapter 7.1.7, "Calibrating Measurements"](#), on page 137.

1. In the "Instrument Setup" dialog box, select the "Perform Default Calibration" item.
2. Select "Calibrate" to perform the default calibration.

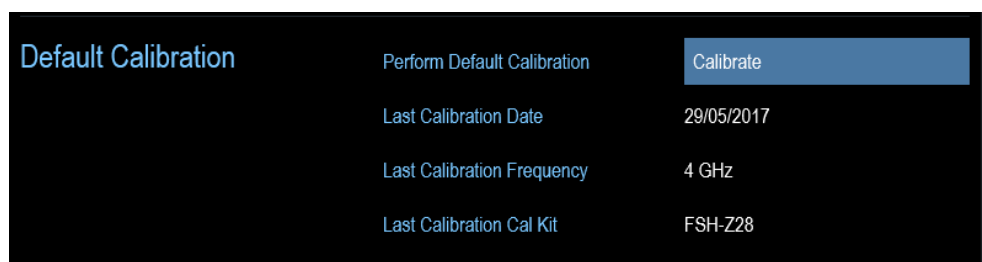

The R&S Cable Rider ZPH shows a warning message box.

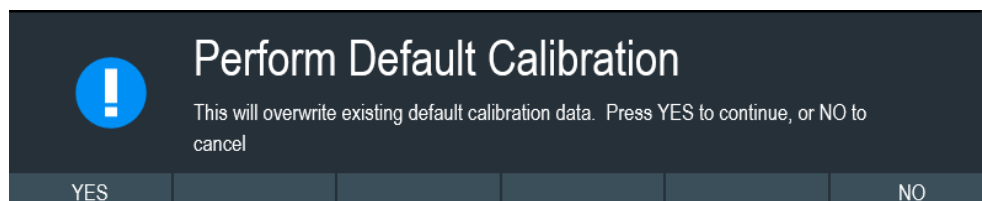

3. A corresponding dialog box opens for selection.
 - Select "Yes" to perform the default calibration.
 - Select "No" to cancel the calibration.
4. After calibration, the R&S Cable Rider ZPH updates the "Last Calibration Date", "Last Calibration Frequency", "Last Calibration" and "Last Cal Kit" information.


4.2.11 Configuring Calibration Kit Model

The calibration kit setting loads the selected calibration kit model from the file manager. For a list of supported calibration kits model by the R&S Cable Rider ZPH, see [Chapter 7.1.7.2, "Calibration Methods"](#), on page 138.

1. In the "Instrument Setup" dialog box, select the "Calibration Kit" item.



The R&S Cable Rider ZPH opens a file manager dialog to select the calibration kit model.

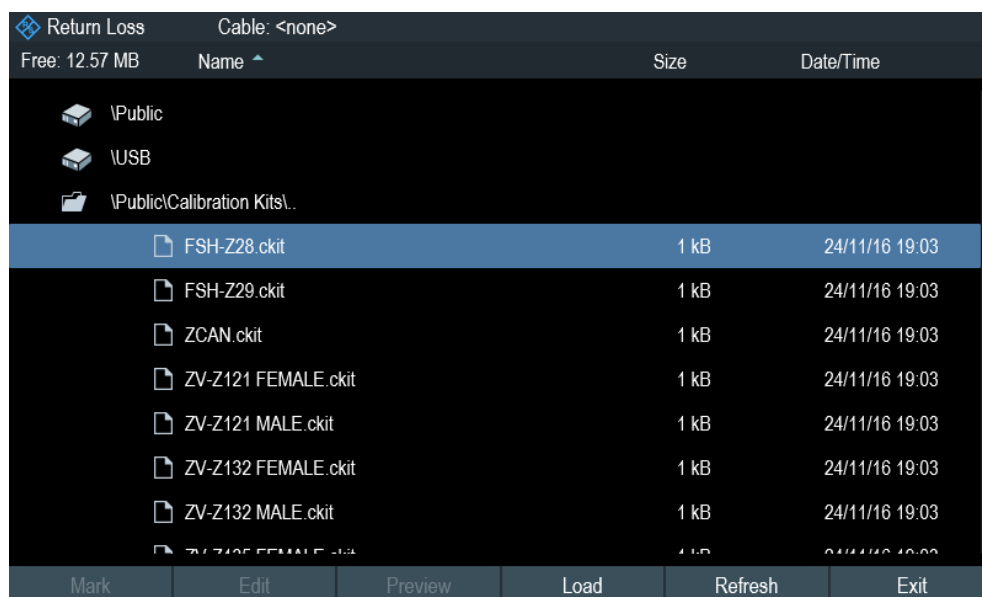

2. Select the calibration kit model that you require.

The R&S Cable Rider ZPH loads the selected calibration kit model which is taken in for consideration during the calibration.

For more information, see [Chapter 7.1.7.2, "Calibration Methods"](#), on page 138 and [Chapter 7.1.7.3, "Calibration Kit"](#), on page 140.

You can also define new calibration kit models with the R&S InstrumentView software and then transfer them to the R&S Cable Rider ZPH. For more information on creating the calibration kit models, refer to the documentation of the R&S InstrumentView software package.

4.2.12 Resetting the R&S Cable Rider ZPH

You can either preset the R&S Cable Rider ZPH or reset it to factory settings.

Presetting the R&S Cable Rider ZPH

The [PRESET] key resets the R&S Cable Rider ZPH to the default setup of the currently active operating mode.

This default setup allows you to define the instrument with a new configuration based on a defined measurement parameter without using parameters from a previous measurement unintentionally still being active.

- Press the [PRESET]  key.

Resetting the R&S Cable Rider ZPH

A "Reset to Factory Settings" resets the R&S Cable Rider ZPH to the factory defaults.

During a reset, the R&S Cable Rider ZPH restores the original configuration. It also deletes all customized datasets (limit lines, standards, channel tables, transducer

tables etc.). Instead, it will reinstall all the datasets that have been available after delivery.

**Risk of data loss**

All datasets you have saved are deleted during a factory reset.

**Calibration data**


After a factory reset, the R&S Cable Rider ZPH is loaded with the default factory calibration data.

See [Chapter 7.1.7.1, "Calibration States"](#), on page 138.

1. In the "Instrument Setup" dialog box, select the "Reset to Factory Settings" item.
2. Confirm the entry with the rotary knob.



The R&S Cable Rider ZPH initiates the reset procedure and shows a warning message box.

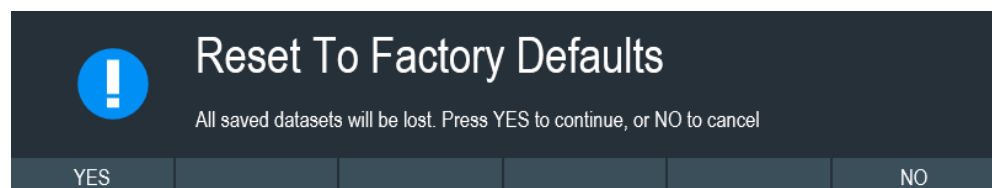

3. A corresponding dialog box opens for selection.
 - Select "Yes" to perform the reset. During the reboot, it shows a corresponding message.
 - Select "No" to cancel the reset.

4.3 Connecting the R&S Cable Rider ZPH to a PC

The R&S Cable Rider ZPH comes with the R&S InstrumentView software package. This software package features several tools that allow you to document measurement results, create and edit the different datasets necessary for the instrument.

The .NET Framework 2.0 (or higher) is required to run the software properly.

You can set up a connection between the R&S Cable Rider ZPH and R&S InstrumentView either via its [LAN port](#) or its [mini USB port](#).

You have to install the R&S InstrumentView software on the PC before you are able to establish a connection.

Download the latest R&S InstrumentView from <http://www.rohde-schwarz.com/product/zph.html>.



Firewall settings

If no connection can be established between the software and the R&S Cable Rider ZPH after successful configuration, check the firewall settings on your PC.

- [LAN Connection](#).....60
- [USB Connection](#).....64

4.3.1 LAN Connection

You can connect the R&S Cable Rider ZPH directly to the PC with a LAN cable. The [LAN port](#) is located behind a protective cap on the right side of the R&S Cable Rider ZPH.

You can set up the LAN connection in the "Instrument Settings" dialog box.

LAN	
MAC Address	00-0a-35-00-01-22
DHCP	Off
IP Address	172.17.75.1
Subnet Mask	255.255.255.0
Gateway	0.0.0.0

For a direct connection between a PC and the R&S Cable Rider ZPH, DHCP (Dynamic Host Configuration Protocol) has to be turned off (which is the default state).

1. In the "Instrument Settings" dialog box, select the "DHCP" item.
A drop-down menu opens to select the DHCP state.
2. Select "DHCP" to on or off as required.


DHCP
On
Off

Setting an IP address and subnet mask

To establish a connection, the PC and the R&S Cable Rider ZPH have to be in the same subnet.

Subnet mask

1. Identify the subnet mask of your PC, i.e. in the Microsoft Windows "TCP/IP Properties".

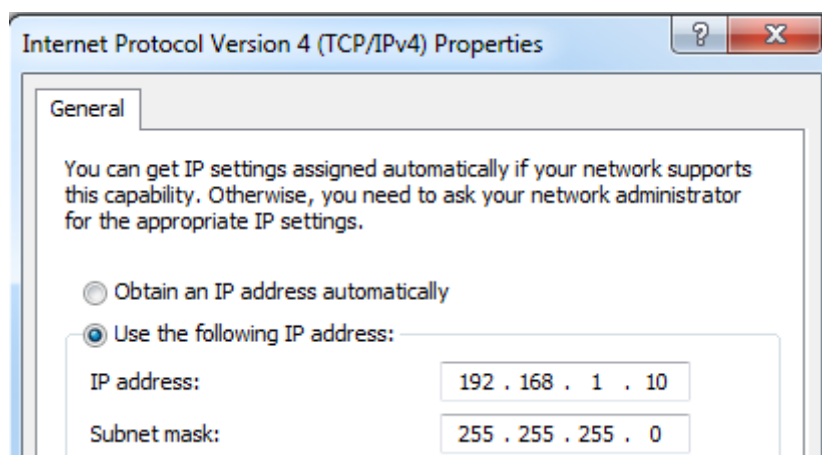

2. In the "Instrument Settings" dialog box, select the "Subnet Mask" item.
3. Enter the subnet mask of the PC with the numeric keys.



After you have matched the subnet mask, you can define the IP address. When both devices are in the same subnet, the first three digits of the IP address are usually the same. See example below:


Example:

IP address for PC: 192.168.1.10

IP address for R&S Cable Rider ZPH: 192.168.1.20

IP address

1. Identify the IP address of your PC, i.e. in the Microsoft Windows "TCP/IP Properties".

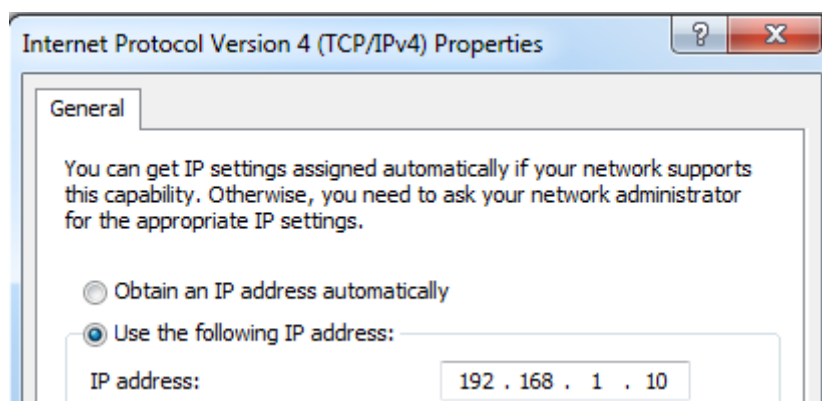


2. In the "Instrument Settings" dialog box, select the "IP Address" item.
3. Confirm the entry with the rotary knob.
4. Enter the IP address of the PC with the numeric keys.

IP Address


192.168.1.20

Configuring the R&S InstrumentView software package

1. Start the R&S InstrumentView software.
2. Select the "LAN" tab in the screen layout.

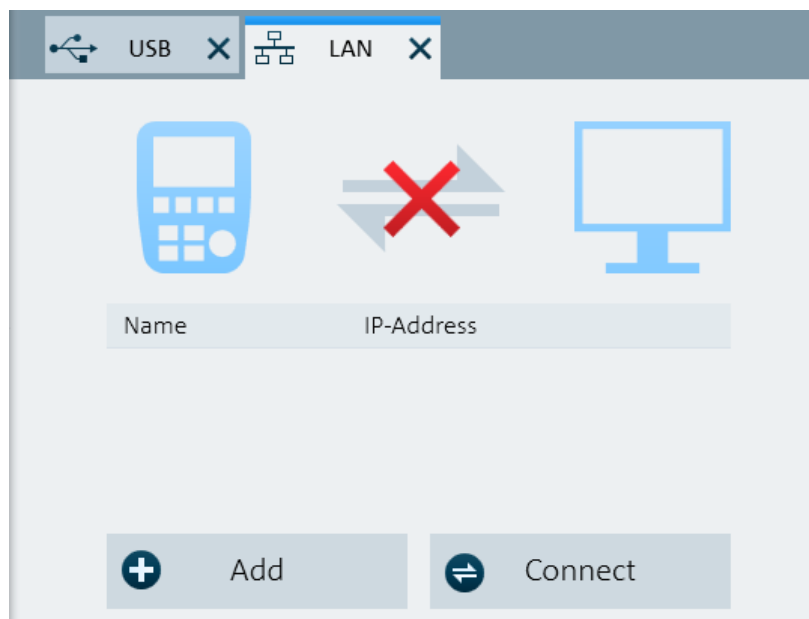


3. Select the "Add" button to create a new network connection.

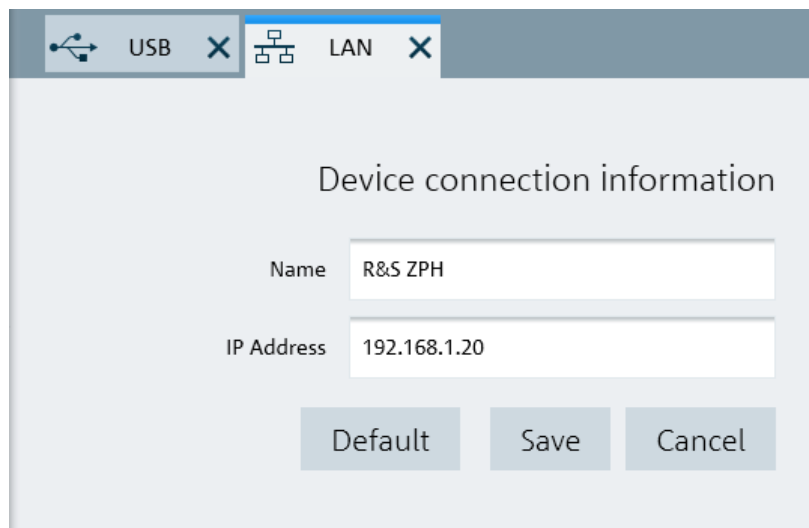

4. Specify a name for the new network connection, e.g. R&S Cable Rider ZPH.
5. Enter the IP address for the R&S Cable Rider ZPH (in this case 192.168.1.20).
6. Confirm the entry with the "Save" button.

The connection is now created and configured.

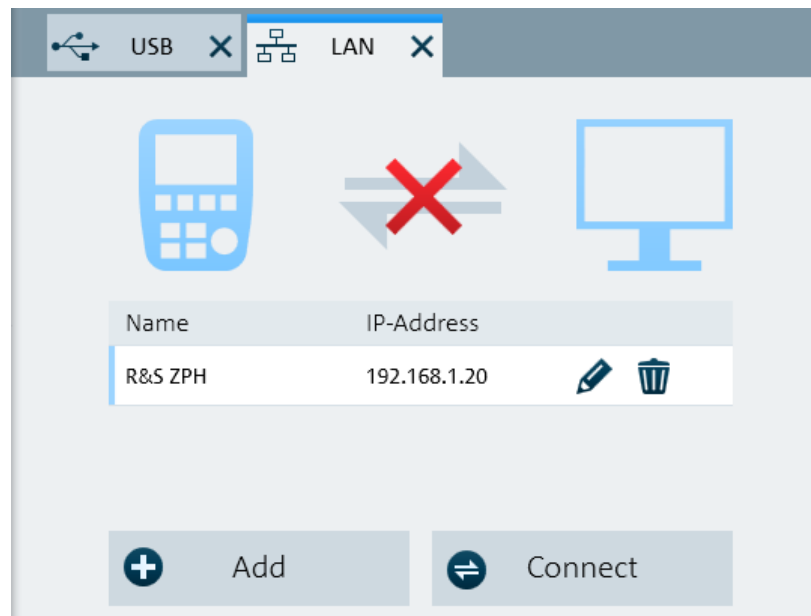

7. Select the new connection labeled R&S Cable Rider ZPH.
8. Select the "Connect" button to establish the connection.

Connecting the R&S Cable Rider ZPH in an existing LAN

You can either get the R&S Cable Rider ZPH IP address automatically from the DHCP server or manually assign a fixed address.

With manual allocation, a fixed IP address and subnet mask must be assigned to the R&S Cable Rider ZPH as described in [Chapter 4.3.1, "LAN Connection"](#), on page 60. After setting up the R&S Cable Rider ZPH, configure the R&S InstrumentView software with the assigned IP address as described in ["Configuring the R&S InstrumentView software package"](#) on page 62.




Free IP address

Contact your IT system administrator to get a free IP address.

In networks with a DHCP server, DHCP permits automatic allocation of the network configuration to the R&S Cable Rider ZPH connected via LAN cable. For this purpose, DHCP has to be active on the R&S Cable Rider ZPH.

DHCP is off by default. Turn it on like this:

1. In the "Instrument Setup" dialog box, select the "DHCP" item.
2. Select "DHCP" to "On" to activate DHCP.

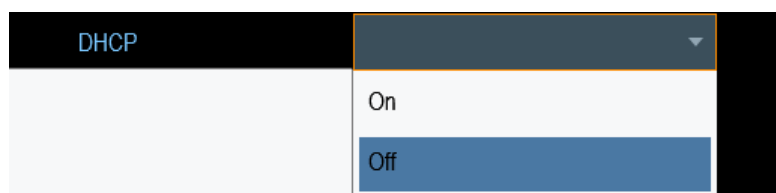

The R&S Cable Rider ZPH is now allocated an IP address and the subnet mask by the DHCP server. This can take several seconds.

The IP address and subnet mask are automatically set in the corresponding input fields and are no longer available for editing.

Configure the R&S InstrumentView software with the IP address and subnet mask as defined by the DHCP server. For more information, see [Chapter 4.3.1, "LAN Connection"](#), on page 60.


4.3.2 USB Connection

Alternatively, you can connect the R&S Cable Rider ZPH to the PC with a USB cable. The [mini USB interface](#) is located behind a protective cap on the right side of the R&S Cable Rider ZPH.

When you connect the R&S Cable Rider ZPH to a computer for the first time, Windows tries to install the new hardware automatically. The required drivers are installed along with the R&S InstrumentView software package.

When the drivers have been found on your system and the hardware has been successfully installed, Windows shows a corresponding message.

1. Connect the R&S Cable Rider ZPH via the mini USB port to your computer.
2. Start R&S InstrumentView on the PC.
3. Select the "USB" tab in the screen layout.

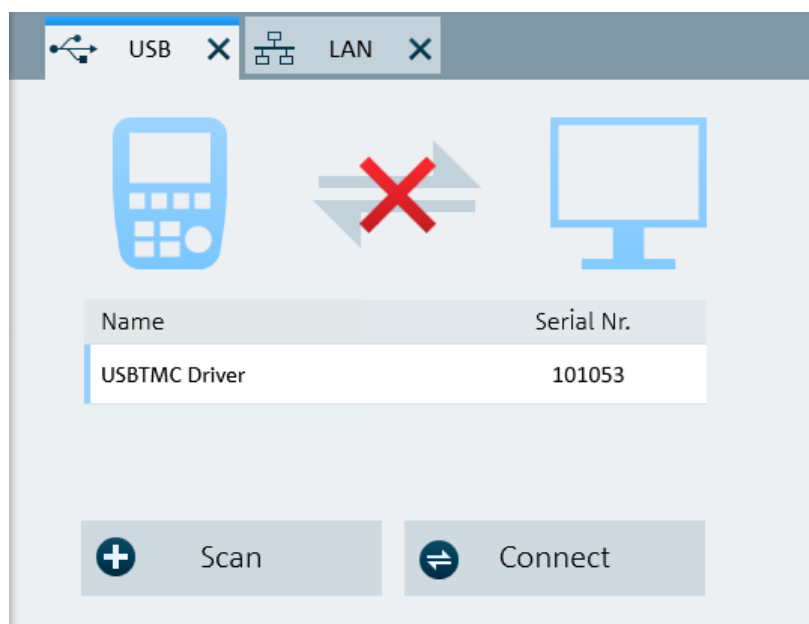

4. Select the "Scan" button to identify the R&S Cable Rider ZPH.
5. Confirm the selection with the "Connect" button.

4.4 Managing Options

For special measurement tasks, you can equip the R&S Cable Rider ZPH with various firmware options.

4.4.1 Enabling Options

To enable options, you have to enter a key code. The key code is based on the unique serial number of the R&S Cable Rider ZPH.

1. Press the [SETUP] key.
2. Select the "Installed Options" softkey.
A list of all available options and the current status of the options is displayed. See [Figure 4-5](#).

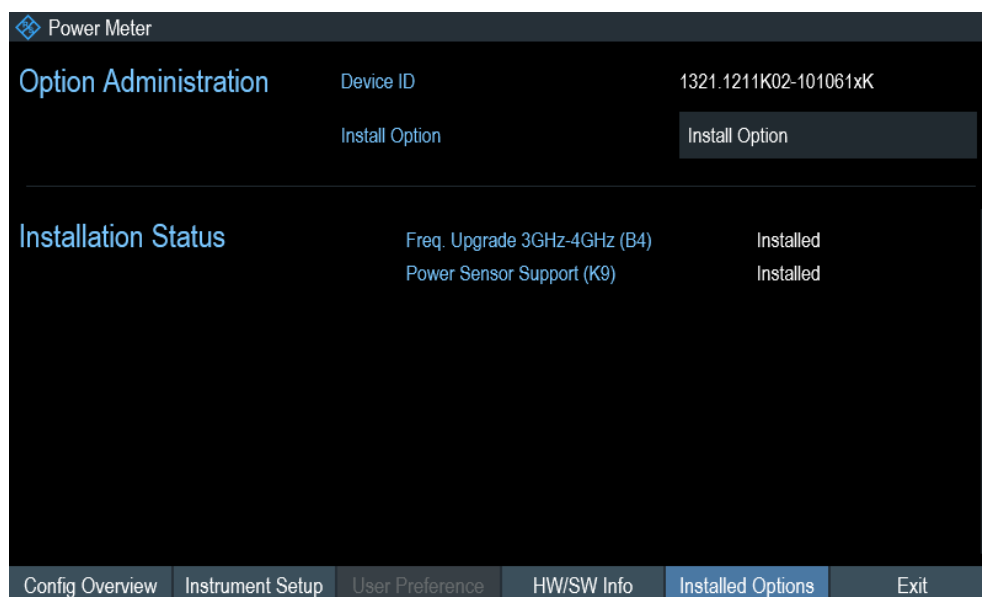


Figure 4-5: Installed option

3. Select the "Install Option" softkey from the dialog box.
The R&S Cable Rider ZPH opens an entry field to enter the option key.
4. Enter in the appropriate option key.
5. Confirm the entry with the rotary knob.
If you have entered the correct code, the instrument displays a message: "installation successful".
If you have entered an incorrect code, the instrument displays a message: "invalid key code!".
6. Enter the correct code again.

4.4.2 Checking Options

In the "Setup" menu, the R&S Cable Rider ZPH shows all options that are currently installed.

1. Press the [SETUP] key.
2. Select the "Installed Options" softkey.
The R&S Cable Rider ZPH shows a list of all available options and the current status of the option:
 - "Installed": This means that the option is installed and working.
 - "Demo": This means that the option is for demo purposes and it has an expiry date.

- "Removed:<option key>": This indicates that a portable license has been removed from the R&S Cable Rider ZPH and is ready to be transferred to another R&S Cable Rider ZPH.

4.4.3 Managing Options with R&S License Manager

If you are using the R&S Cable Rider ZPH in a local area network (LAN), you can manage the firmware options with a web browser (e.g. Microsoft Internet Explorer or Mozilla Firefox).

For more information on connecting the R&S Cable Rider ZPH to a LAN, see [Chapter 4.3.1, "LAN Connection"](#), on page 60.

After you have connected the R&S Cable Rider ZPH, open your web browser.

1. Enter the IP address of the R&S Cable Rider ZPH in the address bar of the web browser.



The browser will access the R&S License Manager. In this part of the R&S License Manager, you can install and activate licenses on the R&S Cable Rider ZPH.

This page features three areas:

- The first area shows the details of the connected device including the device ID and the IP address.

Connected Device

FPH	Device ID:	1321.1111 K02-900188-nK
FPH	IP Address:	10.113.10.184
Version: V1.00	Host Name:	localhost

- The second area provides functionality to install and activate licenses.

What do you want to do?

- [Install Registered License Keys and Activate Licenses](#) ⓘ
- [Register Licenses, Install License Keys and Activate Licenses](#) ⓘ
- [Reboot Device](#) ⓘ

– Install Registered License Keys and Activate Licenses

Follow this link if you have purchased a registered license. Registered licenses only work in combination with a specific device ID.

– Register Licenses, Install License Keys and Activate Licenses

Follow this link if you have purchased an unregistered license. Unregistered licenses are not connected to a specific device ID.

– Reboot Device

Follow this link to reboot the R&S Cable Rider ZPH.

– Online help icon ⓘ

Opens a detailed online help to the corresponding topic.

- The third area provides hints on using the license manager when you move the mouse over one of the options.

Help**Reboot Device:**

Many devices need to be rebooted, before newly installed license keys can activate the licenses on these devices.

Use "Reboot Device" to allow the R&S License Manager to remotely reboot a device, which is accessible via LXI. You will be requested to select the Device ID of the applicable device.

If you already have one or more R&S Cable Rider ZPH equipped with options, you can manage the licenses of these options on the license manager web page.

2. Select the **Manage Licenses** button.

The browser will access another part of the R&S License Manager. In this part of the license manager, you can manage licenses already installed on your R&S Cable Rider ZPH.

This page features two areas:

- The first area provides functionality to manage licenses already installed on a device.

What do you want to do?

- [Register Licenses](#) ⓘ
- [Unregister License](#) ⓘ ⓘ
- [Move Portable License](#) ⓘ

- **Register Licenses**

Follow this link if you have purchased an unregistered license. Unregistered licenses only work in combination with a specific device ID.

- **Unregister License**

Follow this link if you have installed a portable license. Portable licenses work in combination with several device IDs. However, you have to unregister it on one device before you can use it on another.

- **Move Portable License**

Follow this link if you want to move a portable license. Moving a portable license is possible without unregistering the license.

- Online help icon ⓘ

Opens a detailed online help to the corresponding topic.

- The second area provides hints on using the R&S License Manager when you move the mouse over one of the options.


After you have followed one of the links, follow the instructions displayed in the browser. If you encounter any problems during the licensing procedure, you can access the online help at any time with the online help icon ⓘ. The online help contains an extensive description of all functionality that the license manager features.

4.5 Identifying Cable Faults

One of the basic measurement tasks for the R&S Cable Rider ZPH is to find cable faults with the distance-to-fault (DTF) measurement.

Test setup

The test setup requires an R&S Cable Rider ZPH, an RF cable (for example R&S FSH-Z320, order number 1309.6600.00) and a calibration standard (for example R&S FSH-Z28/Z29, order number 1300.7810.03 / 1300.7610.03 or R&S ZN-Z103 order number 3586.9392.00)).

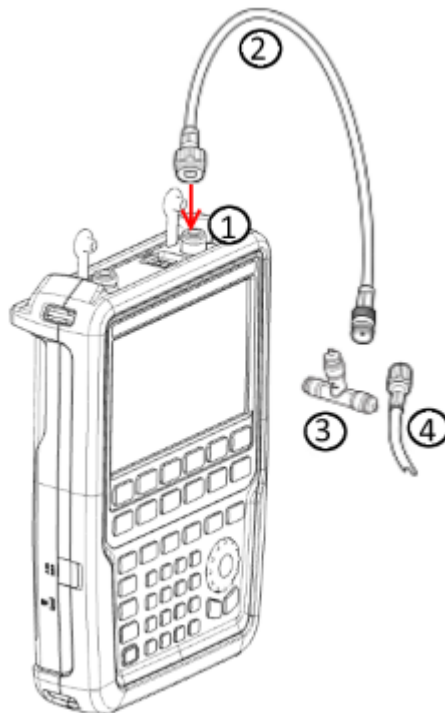

- 1 = RF input (port 1)
- 2 = RF cable
- 3 = Calibration standard
- 4 = Test cable (DUT)

- Connect the RF test cable to the RF input of the R&S Cable Rider ZPH.



You should use the RF cable. Otherwise, measurement results may be invalid.

Starting the measurement

1. Press the [MODE] key.
2. Select the "Cable & Antenna" softkey.

The R&S Cable Rider ZPH switches its operating mode.

By default, the R&S Cable Rider ZPH shows the magnitude of the reflection (S11). You can also measure the distance to fault or the cable loss.

3. Press the [MEAS] key.
4. Select the "DTF" softkey.
The R&S Cable Rider ZPH opens a submenu to select the measurement format.
5. Select the "Return Loss" or "SWR" menu item.
The R&S Cable Rider ZPH starts the distance-to-fault measurement and displays the result in the respective measurement format.

Setting the frequency and bandwidth

To get the best results, you should adjust the center frequency to that of the DUT and set the measurement bandwidth.



Measurement bandwidth


The measurement bandwidth for R&S Cable Rider ZPH model .02 is fixed at 10 kHz.

1. Press the [FREQ/DIST] key.
2. Select the "DTF Center Freq" softkey.
The R&S Cable Rider ZPH opens an input field to specify the center frequency.
3. Enter the center frequency you required.
4. Press the [DTF/BW] key.
5. Select the "Bandwidth" softkey.
6. Enter 100 kHz as the measurement bandwidth.

Specifying the cable model and cable length

To perform cable tests, you have to specify the type of the cable and its approximate length.

1. For model .02, press the [DTF CONFIG] key.
For model .12, press the [DTF/BW] key.
2. Select the "Cable Config" softkey.
The R&S Cable Rider ZPH opens a file manager dialog box to select the cable model.

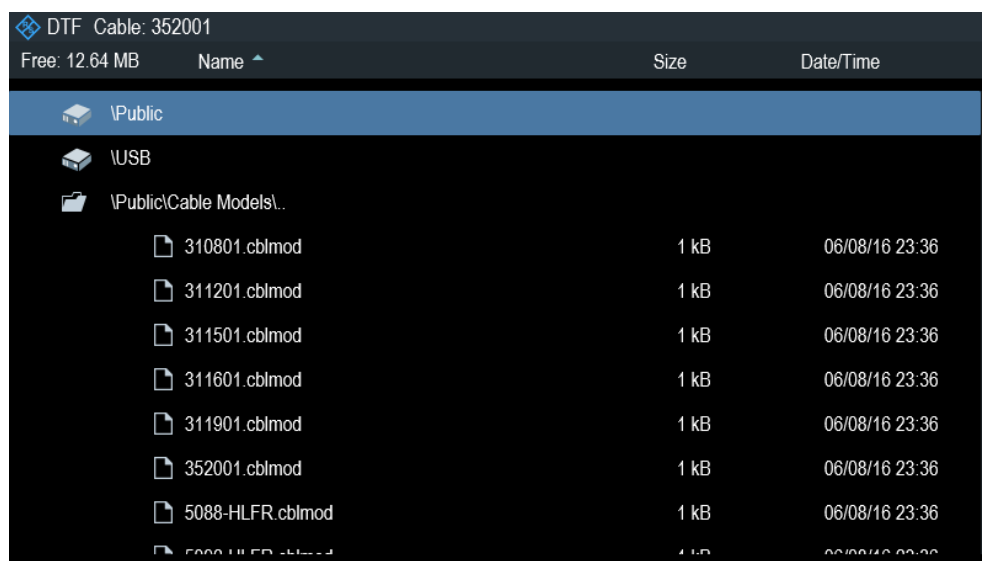

3. Select the cable model that you require from the list of cables.
The R&S Cable Rider ZPH loads the cable model that will be taken in for consideration during the distance-to-fault measurement.

You can also define new cable models on the R&S Cable Rider ZPH or with the R&S InstrumentView software and then transfer them to the R&S Cable Rider ZPH. For more information, see [Chapter 7.2.1.3, "Creating a Cable Model"](#), on page 144.

In addition to the cable model, you should also specify the maximum distance to the cable end.

1. Press the [FREQ/DIST] key.
2. Select the "Stop Dist" softkey.
The R&S Cable Rider ZPH opens an input field to specify the cable length.
3. Enter the maximum distance of the cable you are testing.

The range is from 3 m (10 ft) to 1500 m (4921 ft). The unit depends on the regional settings. It is either meter or feet. For more information, see ["Setting the length unit"](#) on page 49.

The R&S Cable Rider ZPH uses the cable length to determine the ideal span for the measurement and to scale the horizontal axis. For best results, the cable should be specified 20% to 50% longer than the actual cable length.

Calibrating the test setup




Using the calibration kit (R&S FSH-Z28 or R&S FSH-Z29), the R&S Cable Rider ZPH performs a "Full 1-Port" calibration over its entire span with 2501 sweep points. Thus, it is not necessary to perform a new calibration after changing the frequency range or cable length.

The R&S Cable Rider ZPH stores the calibration data in its memory. Thus, the calibration is valid after you change the operating mode or after you turn off the R&S Cable Rider ZPH.


Before connecting the cable, you should calibrate the R&S Cable Rider ZPH to get the best measurement results.

The R&S Cable Rider ZPH provides several calibration methods for cable measurements. For more information on the methods refer to the [Chapter 7.1.7.2, "Calibration Methods"](#), on page 138.

1. For model 02. press the [CAL] key.
For model 12, press the [CAL/SPAN] key.
2. Select the "Full 1-Port" softkey.
The R&S Cable Rider ZPH displays the selected calibration kit.

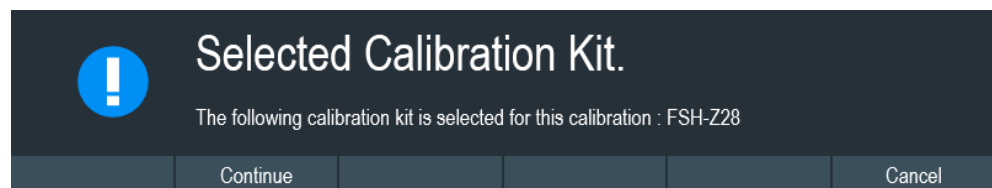

3. Select "Continue" to proceed with the selected calibration kit or "Cancel" to end the calibration.
The R&S Cable Rider ZPH prompts you to connect a "Short", "Open" or a "Load" to the measurement cable.

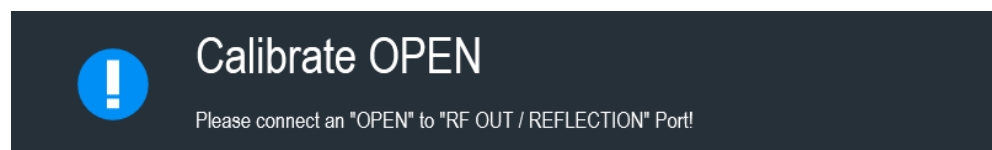


4. Firmly connect a "Short", "Open" or a "Load" to the output end of the cable.
5. Proceed with the "Continue" softkey to start the calibration.
After finishing the calibration routine, the R&S Cable Rider ZPH displayed the message "Calibration done".
The R&S Cable Rider ZPH is now calibrated and a "(cal)" status is displayed next to the measurement format, i.e. **S11 (cal) Loss**. See [Measurement Trace Window](#).
6. Connect the cable under test back to the measurement cable.
The R&S Cable Rider ZPH shows the cable characteristics over the cable's entire length. With a marker, you can easily detect the distance to the cable fault.

In addition to the distance to fault measurement, the R&S Cable Rider ZPH also features a reflection measurement, for example to test impedance matching.

Using markers

The R&S Cable Rider ZPH uses markers to read out signal levels and frequencies. Markers are always positioned on the trace. Both the level and frequency at their current positions are displayed on the screen.

- Press the [MARKER] key.
The R&S Cable Rider ZPH activates a marker and puts it on the maximum value on the trace.

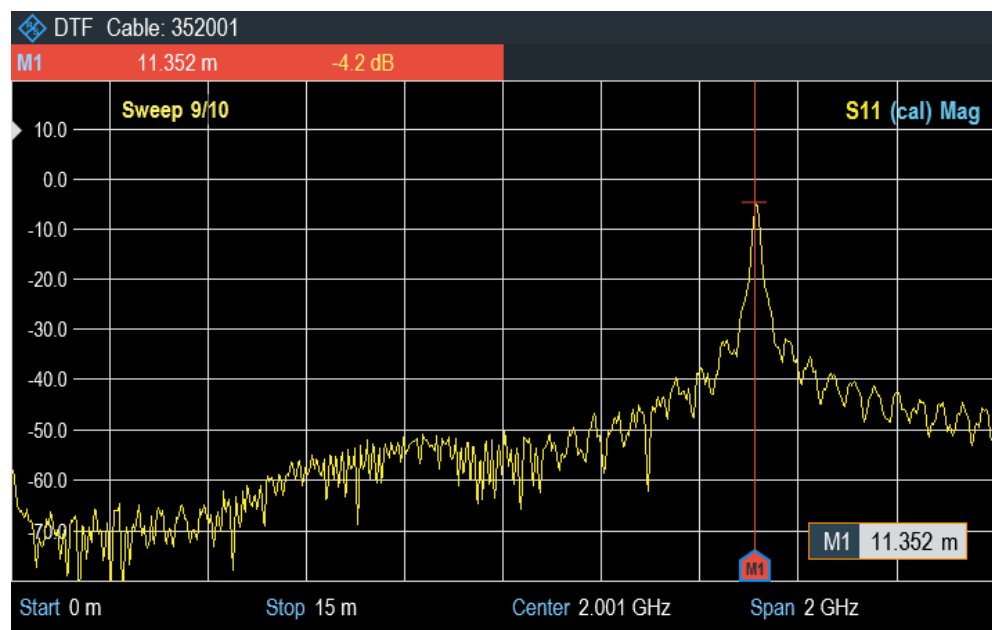

A red vertical line represents the position of the marker on the horizontal axis (e.g. the frequency).

A small red horizontal dash represents the marker position on the vertical axis (e.g. the level).


The R&S Cable Rider ZPH shows the marker position and measurement in the [Measurement Trace Result](#).

Measuring the cable loss

In addition to the distance to the cable fault, you might also be interested in the loss that the cable has over a particular frequency span.

1. Press the [MEAS] key.
2. Select the "Cable Loss" softkey.
The R&S Cable Rider ZPH now shows how much power is lost for a particular frequency span.

Using markers, you can determine the magnitude of the cable loss for any particular frequency.

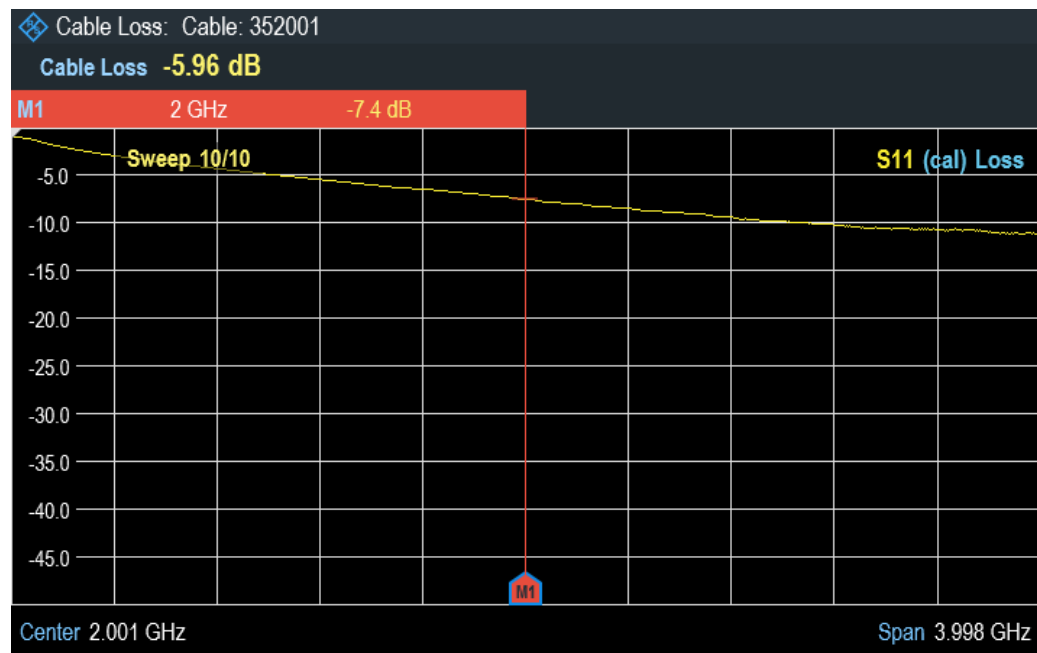

4.6 Measuring Transmissions



Measuring transmissions is only available with model .12.

This measurement example measures the transmission characteristics of a lowpass filter.

Test setup

To measure the transmission, connect the input of the filter to the generator output and the output of the filter to the RF input.

Setting the frequency span

Before calibrating the R&S Cable Rider ZPH, you should define the frequency range of the filter.

1. Select the [FREQ/DIST] key.
2. Select the "Start" or the "Stop" softkey.
The R&S Cable Rider ZPH opens an input field to specify the start frequency or stop frequency.

3. Enter 10 MHz as the start frequency.
The R&S Cable Rider ZPH adjusts the frequency range according to your settings.
4. Select the "Stop" softkey.
The R&S Cable Rider ZPH opens an input field to specify the stop frequency.
5. Enter 200 MHz as the stop frequency.
The R&S Cable Rider ZPH adjusts the frequency range according to your settings.

Note that the distance from start to stop frequency has to be equal to the span. The R&S Cable Rider ZPH adjusts the values if you enter a frequency range that is not the same as the span.

Calibrating the measurement

For transmission measurements you have to perform a 2-port normalization to get the best results.

1. Press the [CAL/SPAN] key.
2. Select the "Normalize Trans" softkey.
The R&S Cable Rider ZPH prompts you to replace the "DUT" by a "THROUGH" connection.



Calibrate THROUGH

For calibration, please replace the "DUT" by a "THROUGH" connection.!

3. Firmly connect a "Through" connection on both ports.
4. Proceed with "Continue" softkey to start the calibration.
After finishing the calibration routine, the R&S Cable Rider ZPH displayed the message "Calibration done".




Calibration done!

The R&S Cable Rider ZPH is now calibrated and a "(cal)" status is displayed next to the measurement format, i.e. **S21 (nprm) Mag**. See [Measurement Trace Window](#).

Transmission measurement

Reconnect the filter to the port of the R&S Cable Rider ZPH.

1. Press the [MEAS] key.
2. Select the "Transmission" softkey.
The R&S Cable Rider ZPH now shows the (corrected) characteristics of the low-pass filter.

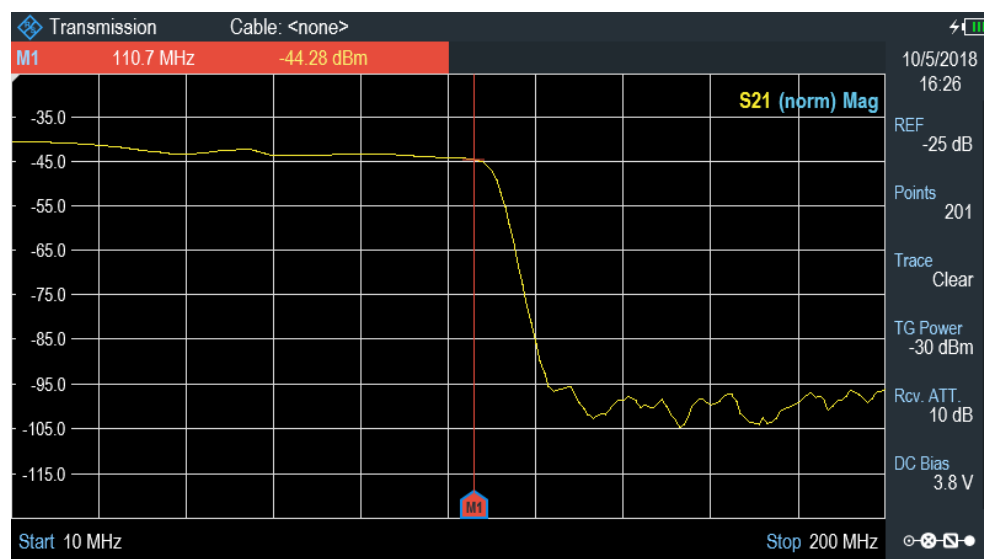

4.7 Using the Spectrum Analyzer



R&S Cable Rider ZPH option

R&S ZPH-K1, Spectrum analysis (W TG) (1334.5604.02) option is required to operate the R&S Cable Rider ZPH in the spectrum analyzer mode.

R&S ZPH-K1 is only available with model .12.

This chapter provides a short overview of the first steps of the measurements you can perform with the R&S Cable Rider ZPH.

- [Attenuating the Signal](#).....76
- [Using the Preamplifier](#).....78
- [Measuring CW Signals](#).....78
- [Measuring Harmonics](#).....81

4.7.1 Attenuating the Signal


You can attenuate the signal to a suitable level either manually or automatically.

In case of automatic attenuation, the level of attenuation at the RF input depends on the current reference level. The R&S Cable Rider ZPH provides two ways of automatic attenuation.

For the highest possible sensitivity, it provides the "Auto Low Noise" attenuation mode. For the lowest possible intermodulation, it provides the "Auto Low Distortion" mode.

The main difference between the two modes is that the attenuation level is 5 dB to 10 dB higher in case of "Auto Low Distortion" than it is for "Auto Low Noise". In the default state, "Auto Low Distortion" is active.

1. Press the [MODE] key.
2. Select the "Spectrum Analyzer" softkey.
The R&S Cable Rider ZPH opens the spectrum analyzer measurement menu.
3. Select the "Spectrum" menu item.
The R&S Cable Rider ZPH activates the mode for spectrum analyzer measurements.
4. Press the [SCALE/AMPT] key.
5. Select the "Att/Amp/Imp" softkey.
6. Select either the "Auto Low Noise" or "Auto Low Distortion" menu item.
The R&S Cable Rider ZPH shows the current attenuation level in the "Parameter view". The currently active menu item has a blue background and the selected parameters is indicated with a blue dot in the menu item.

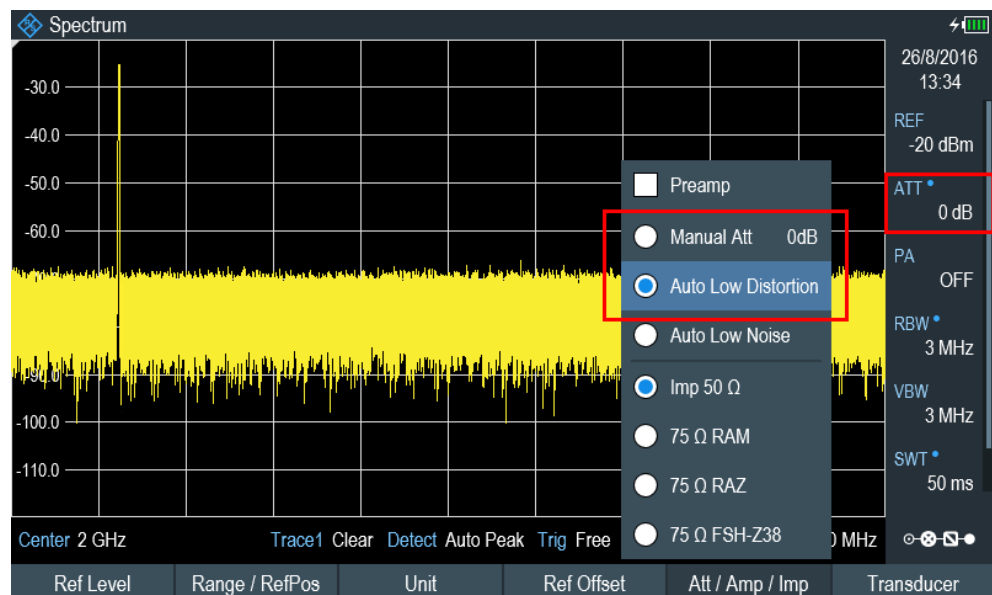

You can also set the attenuation manually. The R&S Cable Rider ZPH provides attenuation in the range from 0 dB to 40 dB in 5 dB steps.

7. Press the [SCALE/AMPT] key.
8. Select the "Att/Amp/Imp" softkey.
9. Select the "Manual Att" menu item.
The R&S Cable Rider ZPH opens an entry box to define the attenuation. Two methods are provided to fill in the input fields:

- Directly with the number keys
- Using rotary knob

While you can enter any number you want with the number keys, using the rotary knob is coupled to a certain step size usually.

If you use the rotary knob to change the attenuation, i.e. the step size is 5 dB.

10. Enter the attenuation you need.


The R&S Cable Rider ZPH shows the current attenuation level in the "Parameter View".

4.7.2 Using the Preamplifier

The R&S Cable Rider ZPH has an optional preamplifier (R&S ZPH-B22, order number 1334.5627.02) to increase sensitivity. Depending on the frequency, the gain of the amplifier is in the range from 15 dB to 20 dB and increases the sensitivity by 10 dB to 15 dB.

In the signal path, the preamplifier comes after the input protection circuit and before the RF attenuator of the R&S Cable Rider ZPH to provide excellent sensitivity when the preamplifier is switched on.

1. Press the [SCALE/AMPT] key.
2. Select the "Att/Amp/Imp" softkey.
3. Enable or disable the "Preamp" checkbox to turn on or off the preamplifier of the R&S Cable Rider ZPH.

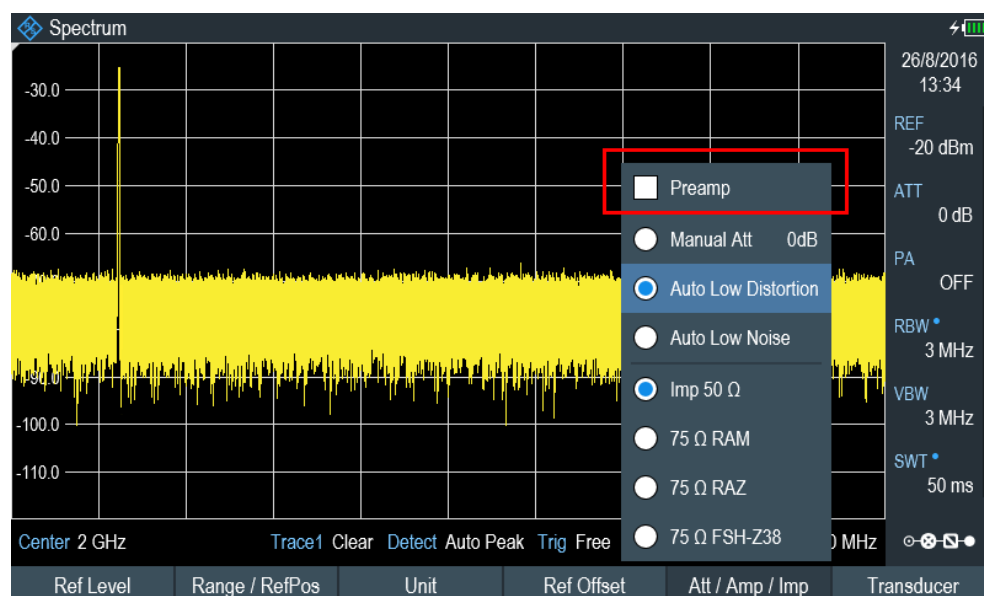

The magnitude of amplification depends on the reference level. This coupling to the reference level makes sure that the dynamic range is at an optimum.

4.7.3 Measuring CW Signals

A basic task for spectrum analyzer is to measure the level and frequency of sinewave signals. The following examples illustrate an effective way of performing these measurements.

A signal generator, e.g. R&S SMBV provides the signal source.

Test setup


Connect the RF output of the signal generator to the RF input of the R&S Cable Rider ZPH.

Signal generator settings:

- Frequency: 500 MHz
- Level: -25 dBm

Measuring the level

1. Press the [PRESET] key.
The R&S Cable Rider ZPH is reset to its default state.
After the preset, the R&S Cable Rider ZPH displays the frequency spectrum over its full frequency span.
At 500 MHz, the generator signal is displayed as a vertical line. To analyze the generator signal at 500 MHz in more detail, reduce the frequency span.
2. Press the "Center" softkey at the "Parameter view".
The R&S Cable Rider ZPH opens an entry box to define the center frequency.
3. Enter a center frequency of 500 MHz.
The signal is now in the center of the display.
4. Press the "Span" softkey at the "Parameter view".
The R&S Cable Rider ZPH opens an entry box to specify the span.
5. Enter a span of 20 MHz.
The R&S Cable Rider ZPH now displays the generator signal with a higher resolution.

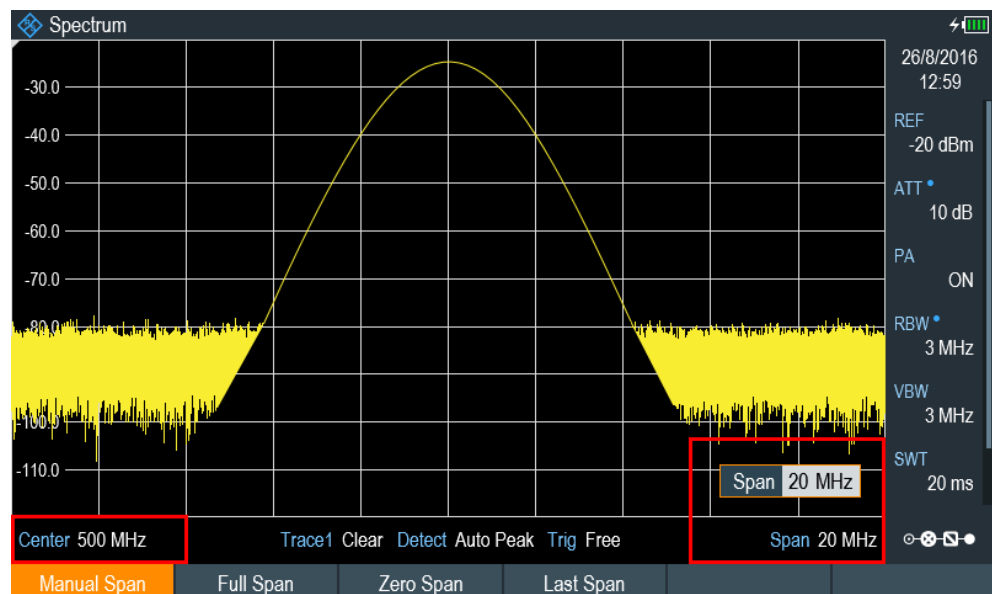

Setting the reference level

The level at the top of the measurement diagram is called the reference level. To obtain the best dynamic range from the R&S Cable Rider ZPH, you should use its full level range. That means that the maximum level value should be at or close to the top of the measurement diagram (= reference level).


1. Press the "REF" softkey at the "Parameter view".
The R&S Cable Rider ZPH opens an entry box to enter the reference level.
2. Enter a reference level of -25 dBm.
The R&S Cable Rider ZPH reduces the reference level by 5 dB.

The maximum trace value is close to the maximum scale value of the measurement diagram. The increase in the displayed noise floor is minimal. The difference between the signal maximum and the displayed noise (i.e. the dynamic range) has, however, been increased.

Using markers

The R&S Cable Rider ZPH has markers to read out signal levels and frequencies. Markers are always positioned on the trace. Both the level and frequency at their current positions are displayed on the screen.

- Press the [MARKER] key.
The R&S Cable Rider ZPH activates a marker and puts it on the maximum value on the trace. The coordinates of the marker are shown in a table above the measurement diagram.
A red vertical line represents the position of the marker on the horizontal axis (i.e. the frequency). A small red horizontal dash represents the marker position on the vertical axis (i.e. the level).

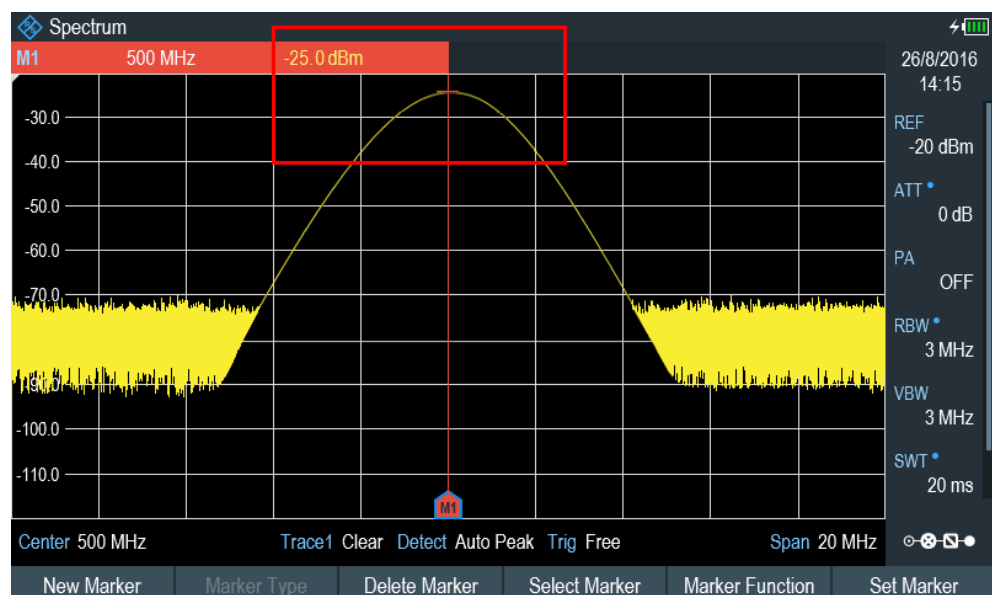


Measuring the frequency

The trace consists of 711 measurement points (frequency points). The marker is always positioned on one of these measurement points. The R&S Cable Rider ZPH calculates the marker frequency from the frequency of the measurement point, the center frequency and the frequency span that have been set. The measurement-point resolution, and consequently the accuracy of the marker frequency readout, therefore depend on the frequency span that has been selected.

The R&S Cable Rider ZPH has a frequency counter to increase the accuracy of the marker-frequency readout. It completes the sweep, then counts the frequency at the marker position.

1. Press the "Marker Function" softkey at the "Parameter view".
2. Select the "Frequency Count" from the menu item.

The measurement result of the frequency counter is displayed in the "Measurement result view". When the frequency counter is active, the resolution of the frequency readout is always 0.1 Hz, regardless of the span. The accuracy is determined by the internal reference frequency which is far more exact than the pixel-oriented marker readout.

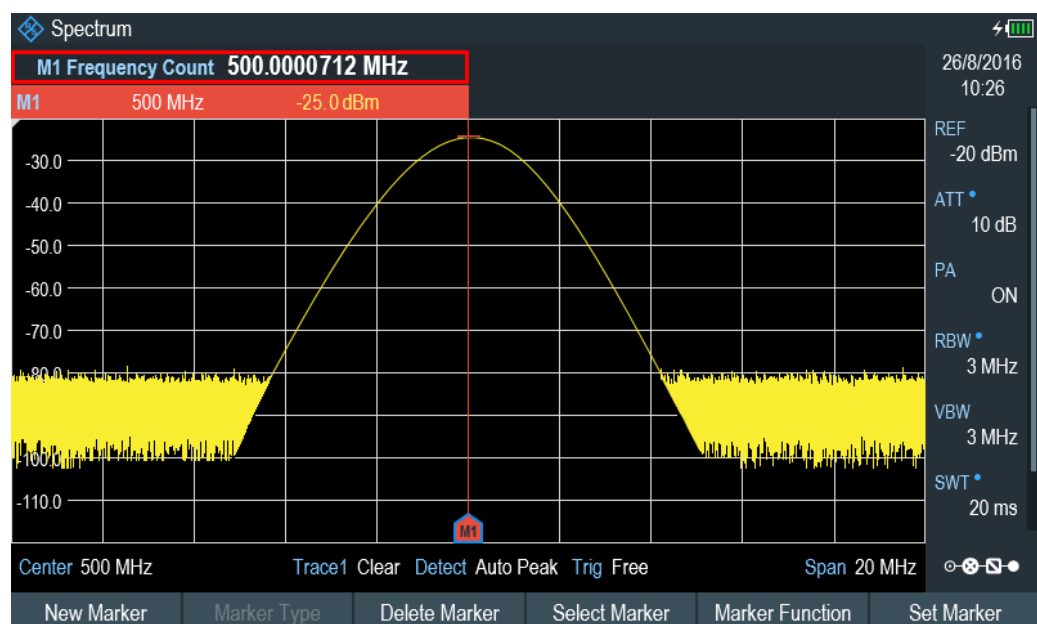

4.7.4 Measuring Harmonics

A spectrum analyzer is ideal to measure harmonic levels or harmonic ratios, because it can resolve different signals in the frequency domain.

With marker functions, you can speed up the measurement tasks.

A signal generator, e.g. R&S SMBV provides the signal source.

Test setup


Connect the RF output of the signal generator to the RF input of the R&S Cable Rider ZPH.

Signal generator settings:

- Frequency: 100 MHz
- Level: -20 dBm

Detecting harmonics

1. Press the [PRESET] key.
The R&S Cable Rider ZPH is reset to its default state.
After the preset, the R&S Cable Rider ZPH displays the frequency spectrum over its full frequency span.
At 100 MHz, the generator signal is displayed as a vertical line. In addition, you can see the harmonics as smaller vertical lines at frequencies that are multiples of 100 MHz. To measure the second harmonic ratio, decrease the span.
2. Press the [FREQ/DIST] key.
3. Select the "Start" softkey at the "Measurement footer bar".
The R&S Cable Rider ZPH opens an entry box to enter the start frequency.
4. Enter a start frequency of 50 MHz.
5. Confirm the entry with one of the unit keys.
6. Select the "Stop" softkey at the "Measurement footer bar".
The R&S Cable Rider ZPH opens an entry box to enter the stop frequency.
7. Enter a stop frequency of 250 MHz.
8. Confirm the entry with one of the unit keys.
The R&S Cable Rider ZPH displays the frequency spectrum in the range from 50 MHz to 250 MHz. This frequency range visualizes the signal itself at 100 MHz and the second harmonic at 200 MHz.

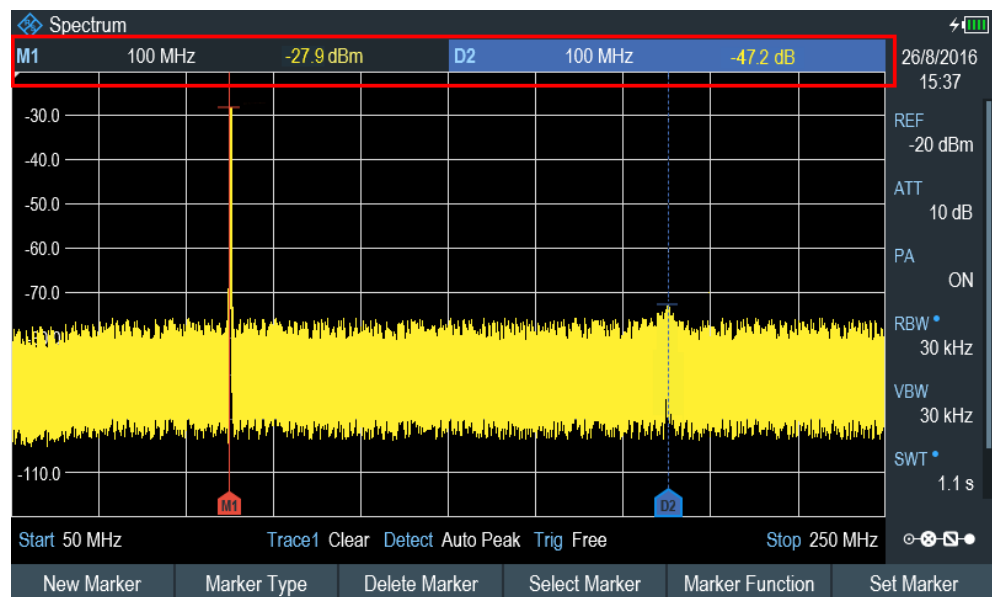

To measure the harmonic ratio, set the marker on the signal and a delta marker on the second harmonic.

9. Press the [MARKER] key.
The R&S Cable Rider ZPH sets a marker on the trace maximum. The trace maximum corresponds to the signal.
10. Select the "New Marker" softkey.
The R&S Cable Rider ZPH activates a delta marker and places it on the next trace maximum. This corresponds to the second harmonic.
The harmonic ratio is the vertical distance of the marker and the delta marker. The R&S Cable Rider ZPH displays this value in the [Measurement Result View](#).

4.8 Using a Power Sensor



R&S Cable Rider ZPH option

R&S ZPH-K9 (order number: 1321.0409.02) option is required to operate the R&S Cable Rider ZPH in the power sensor mode.

For highly accurate power measurements, you can connect one of the power sensors that are supported by the R&S Cable Rider ZPH.

For a list of R&S Cable Rider ZPH supported power sensor, refer to [Chapter 9.1, "Using a Power Sensor"](#), on page 253.

You can connect the list of supported power sensors to the USB port of the R&S Cable Rider ZPH. This connector allows you to control the power sensor and supplies it with power. For more information, see ["USB type A connector"](#) on page 28.

4.8.1 Measuring the Power with a Power Sensor

For more information about the characteristics of the supported power sensors, refers to their datasheet.

NOTICE

Risk of damaging the power sensor

Because of high input power,

- The continuous power applied to the power sensor's input must not exceed 400 mW (26 dBm).
- Use an attenuator for measurements on high-power transmitters.

However, brief power peaks $\leq 10 \mu\text{s}$ up to 1 W (30 dBm) are permissible.

Test setup

Connect the power sensor cable to the USB port of R&S Cable Rider ZPH. If the power sensor is having the binder connector (i.e R&S FSH-Z1, R&S FSH-Z18), the FSH-Z101 adaptor cable is needed.



- 1 = Supported power sensor (e.g R&S FSH-Z1, R&S NRP-Z11)
- 2 = Power sensor connector (DUT)
- 3 = USB binder adaptor (R&S FSH-Z101)
- 4 = USB port connector

Measuring the power

1. Press the [MODE] key.
2. Select the "Power Meter" softkey.
The R&S Cable Rider ZPH switches its operating mode.

If the R&S Cable Rider ZPH recognizes a power sensor, it sets up a connection via the USB interface. After a few seconds, the R&S Cable Rider ZPH shows the measured power.

If no power sensor has been connected or is not connected appropriately, the R&S Cable Rider ZPH shows nothing.


If there are communication problems between the R&S Cable Rider ZPH and the power sensor, the R&S Cable Rider ZPH displays an error message that indicates a possible cause.

For more information on the error messages, see [Table 9-1](#).


Zeroing the power sensor

To compensate internal offsets of the power meter, a [Zeroing the power sensor](#) for the power sensor is required before starting the measurement.


1. Select the "Zero" softkey.
Do not to apply any signals to the power sensor while zeroing is active.
A popup message box is displayed to provide instructions during the zeroing of the power sensor.

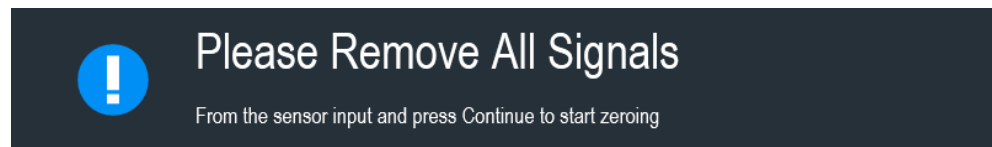

2. Disconnect the power sensor from any signal sources.
3. Select the "Continue" softkey to start zeroing.
The R&S Cable Rider ZPH starts the zeroing process.

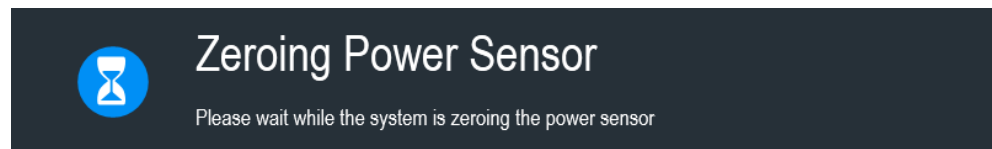

 4. Wait for the zeroing process to finish.
After zeroing is done, the R&S Cable Rider ZPH displays the message "Power sensor zero done" and again shows the power sensor softkey menu.



5. Connect the DUT to the power sensor.
The R&S Cable Rider ZPH shows the measured power level in dBm. For more information, see [Chapter 9.1, "Using a Power Sensor"](#), on page 253.

Set the frequency

To get the best results, enter the frequency of the signal under test.

1. Select the "Freq" softkey.
The R&S Cable Rider ZPH opens an entry box to enter the frequency.

2. Enter the frequency of the signal.
3. Confirm the entry with one of the unit keys.

The R&S Cable Rider ZPH transfers the new frequency to the power sensor which then corrects the measured power readings.

4.8.2 Measuring Power and Return Loss

With the directional power sensors R&S FSH-Z14 and R&S FSH-Z44, you can measure the power in both directions.

When you connect the directional power sensor between the source and the load, the R&S Cable Rider ZPH measures the power from the source to load (forward power) and from the load to source (reverse power).

The ratio between the forward and reverse power is a measure of the load matching. The R&S Cable Rider ZPH displays it as the return loss or standing wave ratio.

The power sensors for the R&S Cable Rider ZPH have an asymmetrical design. Therefore, they have to be inserted into the test setup in such a way that the "Forward" arrow on the sensor points toward the load (in the direction of the power flux).

When measuring high powers, pay strict attention to the following instructions to avoid personal injury and to prevent the power sensor from being destroyed.

CAUTION


Danger of skin burns and damage to the instrument

- Never exceed the permissible continuous power.
- See diagram on the rear of the sensor for the permissible continuous power.
- Turn off the RF power to connect the sensor.
- Screw the RF connectors tightly.

Test setup

Connect the power sensor cable to the USB port of R&S Cable Rider ZPH. If the power sensor is having the binder connector (i.e R&S FSH-Z14, R&S FSH-Z44), the FSH-Z144 adaptor cable is needed. Insert the directional power sensor between the source and the load.

The power sensors for the R&S Cable Rider ZPH have an asymmetrical design. Hence, you have to insert them into the test setup in such a way that the "Forward" arrow (1→2) on the sensor points toward the load (= in the direction of the power flux).

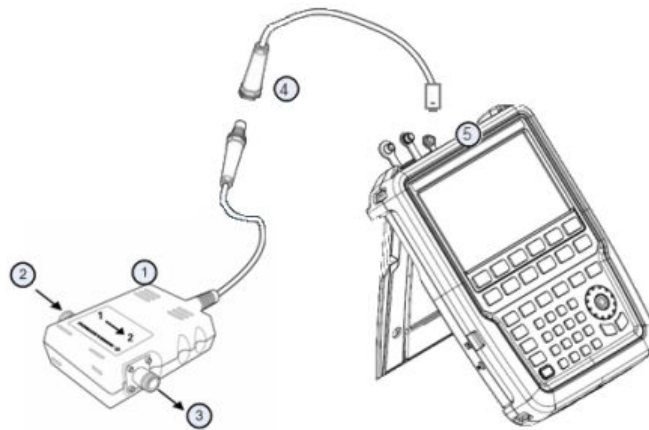

- 1 = Directional power sensor R&S FSH-Z14 or Z44
2 = Source
3 = Load
4 = USB binder adaptor (R&S FSH-Z144)
5 = USB port connector

Measuring the power

1. Press the [MODE] key.
2. Select the "Power Meter" softkey.

As soon as the R&S Cable Rider ZPH recognizes the power sensor, it displays the type of the directional power sensor that is connected in the [Title bar](#). After a few seconds, it also shows the forward power and return loss currently measured at the load.

Zeroing the power sensor

Before performing the power measurement, you should zeroing the power sensor.

After zeroing is done, the R&S Cable Rider ZPH displays the message "Power sensor zero done" and again shows the power sensor softkey menu.

- Connect the R&S FSH-Z14 or R&S FSH-Z44 between the source and the load. The R&S Cable Rider ZPH displays the measured forward power in dBm and the SWR of the load. See [Figure 9-2](#).

To get the best results, you should also define the frequency of the signal. For more information, see [Chapter 9.2, "Using a Directional Power Sensor"](#), on page 258.

4.9 Saving and Recalling Results and Settings



Storage device

If both USB flash drive and micro-SD card are connected to the instrument, the USB flash drive takes precedent over SD card as a storage device.

If both storage devices are not connected, the internal memory of the instrument is used for storage.

The R&S Cable Rider ZPH can store measurement results and settings in the internal memory, removable micro-SD card or on a USB flash drive via the USB interface.

Results and settings are always stored together, allowing them to be interpreted in context when recalled. The R&S Cable Rider ZPH can store at least 100 data records in the internal memory which are differentiated by their names.

The R&S Cable Rider ZPH provides two [USB ports](#) and one [micro-SD card slot](#).

For more information on saving measurement results and settings, see [Chapter 5.9.1, "Saving Datasets"](#), on page 109.

For more information on recalling measurement results and settings, see [Chapter 5.9.2, "Restoring Datasets"](#), on page 111.

5 Instrument Functions

The following chapters provide information about the basic functionality and the user interface of the R&S Cable Rider ZPH.

• Touchscreen Gesture Element	89
• On-screen Keyboard	94
• Front Panel Keys	95
• Presetting the R&S Cable Rider ZPH	100
• Configuring Measurements	101
• Working Directory	102
• Saving On Events	102
• Taking Screenshots	105
• Managing Datasets	107
• Updating the Firmware	114
• Installing Firmware Options	114


5.1 Touchscreen Gesture Element

To enhance greater flexibility and user experience in the user interaction with R&S Cable Rider ZPH, special touchscreen gestures are introduced. The following illustrated the list of special gestures that R&S Cable Rider ZPH provides.

• Change Center Frequency	89
• Change Reference Level	90
• Change Span	90
• Add Marker	91
• Move Marker	91
• Delete All Markers	92
• Hide or Unhide Measurement Result View Display	92
• Preview Screenshot	93
• Skip Wizard Measurement	93


5.1.1 Change Center Frequency

Swipe left or right horizontally in the trace window to adjust the center frequency of the spectrum measurement. Alternatively, select the "Center" softkey in the [Parameter View](#) to adjust the center frequency or press the [FREQ/DIST] key on the front panel to display the "Center Freq" softkey label for adjustment.

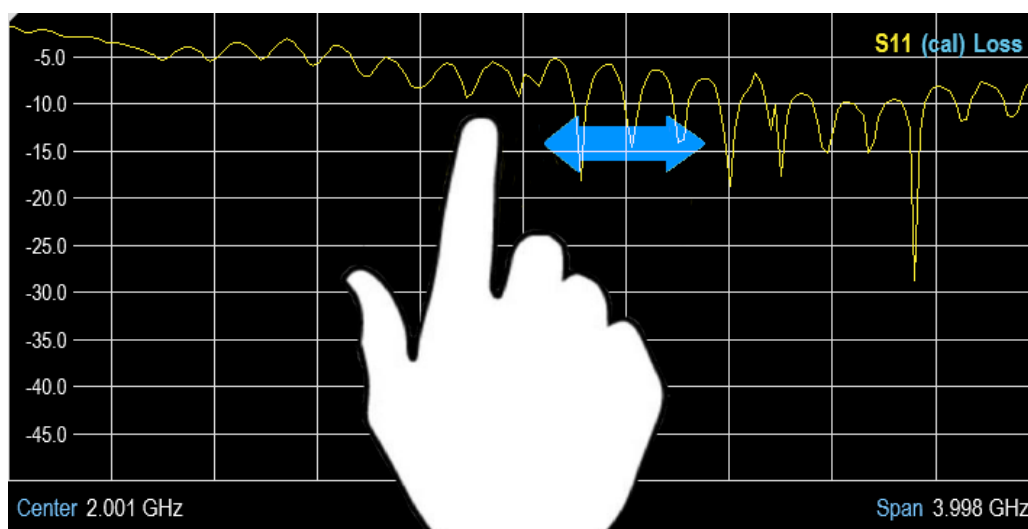


5.1.2 Change Reference Level

Swipe up or down vertically in the trace window to adjust the reference level of the spectrum measurement. Alternatively, select the "REF" softkey in the [Parameter View](#) to adjust the reference level or press the [SCALE] / [SCALE/AMPT] key on the front panel to display the "Ref Level" softkey label for adjustment.

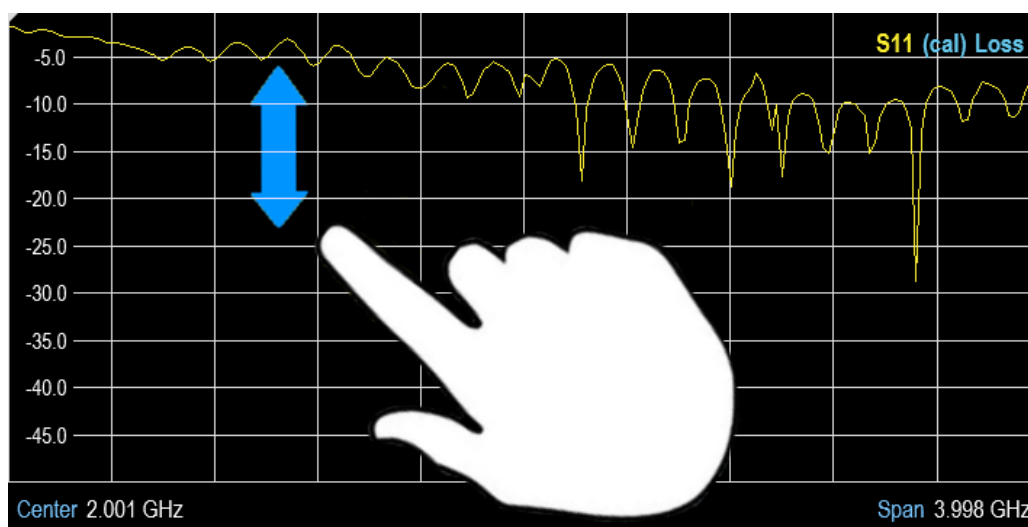

5.1.3 Change Span


Pinch or stretch two fingers horizontally to adjust the span of the spectrum measurement. Alternatively, select the "Span" softkey in the [Parameter View](#) to adjust the span of the spectrum measurement or press the [FREQ/DIST] key on the front panel and select the "Span" softkey label for adjustment.

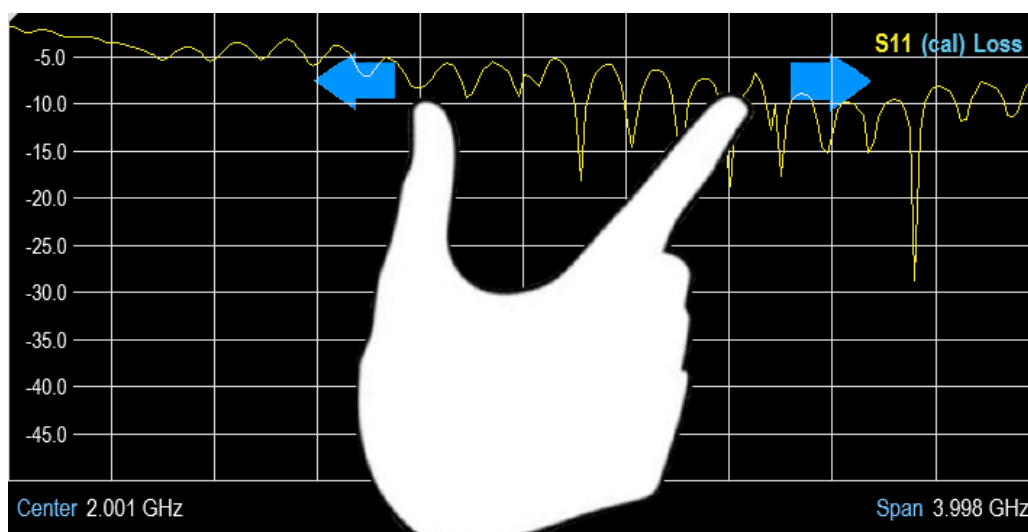

5.1.4 Add Marker


Double tap in the trace window to create a marker on the spectrum measurement. The marker is placed on the trace where the double tap gesture is performed.

Alternatively, press the [MARKER] key on the front panel and select the "New Marker" from the softkey label to create a marker on the spectrum measurement.

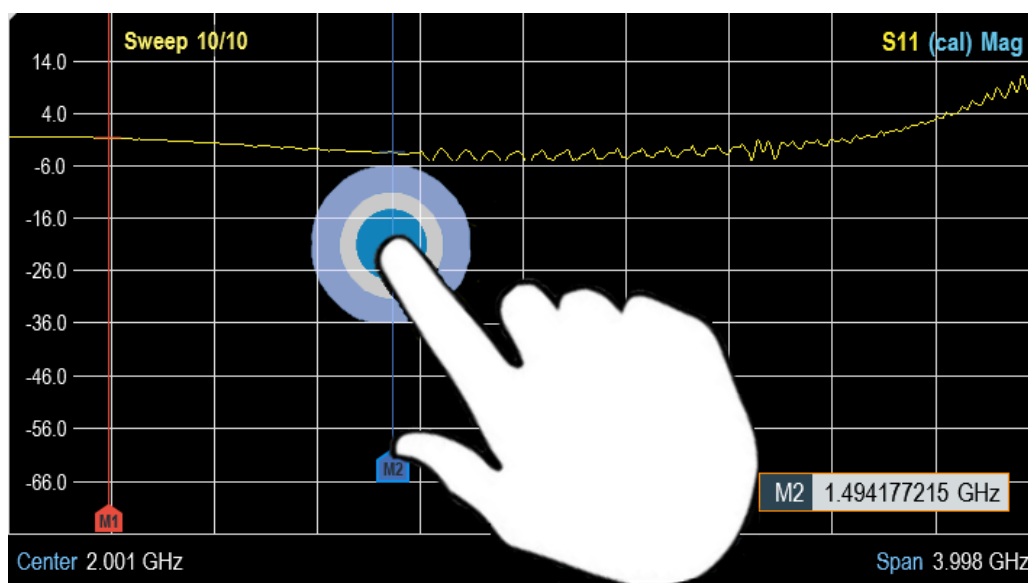


5.1.5 Move Marker

Tab and drag on the marker icon to change the marker position in the trace window. Alternatively, select the marker label in the [Measurement Result View](#) to adjust the marker position on the spectrum measurement or press the [MARKER] key on the front panel and select the "Select Marker" softkey label for adjustment.

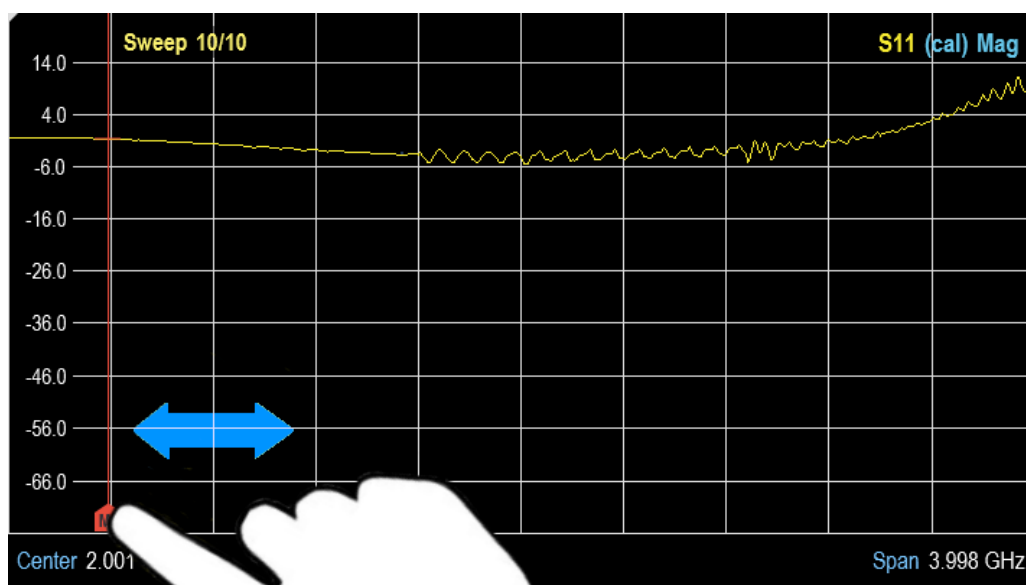


5.1.6 Delete All Markers

Draw an "X" on the trace window to delete all markers from the spectrum measurement. Alternatively, press the [MARKER] key on the front panel and select the "Delete Marker" from the softkey label to delete all markers from the spectrum measurement.

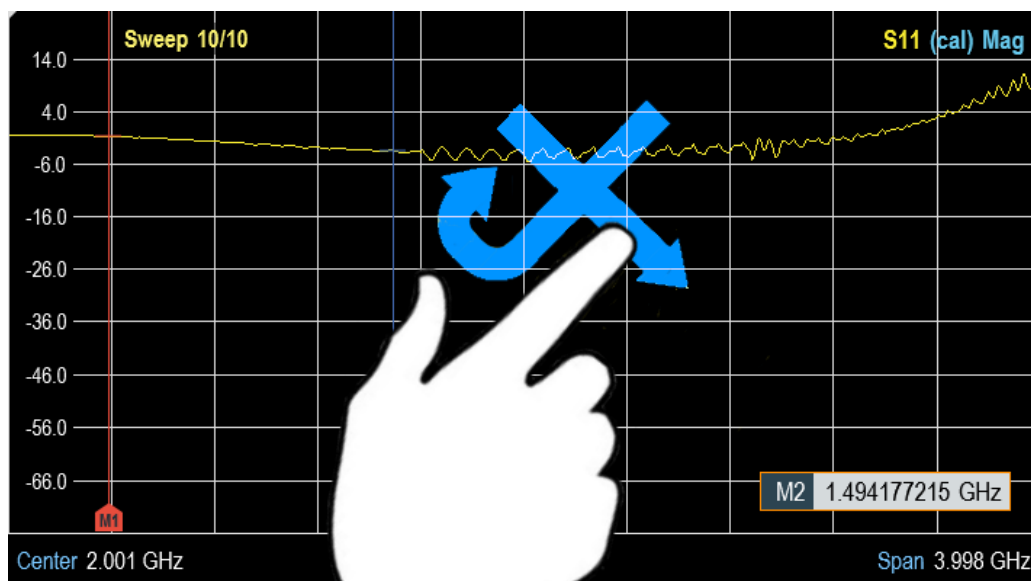


5.1.7 Hide or Unhide Measurement Result View Display

Swipe up or down vertically on the [Measurement Result View](#) window to hide or unhide the results display window.

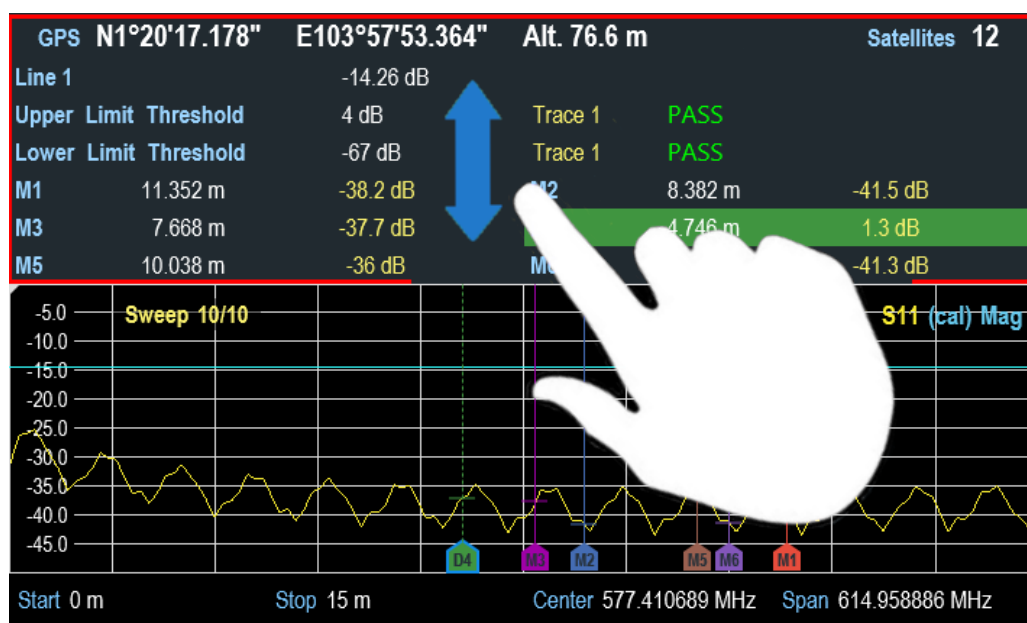


5.1.8 Preview Screenshot

Swipe horizontally to the left or right direction in the trace window to preview the screenshot. Alternatively, select the "Prev" or "Next" softkey to preview the screenshot.

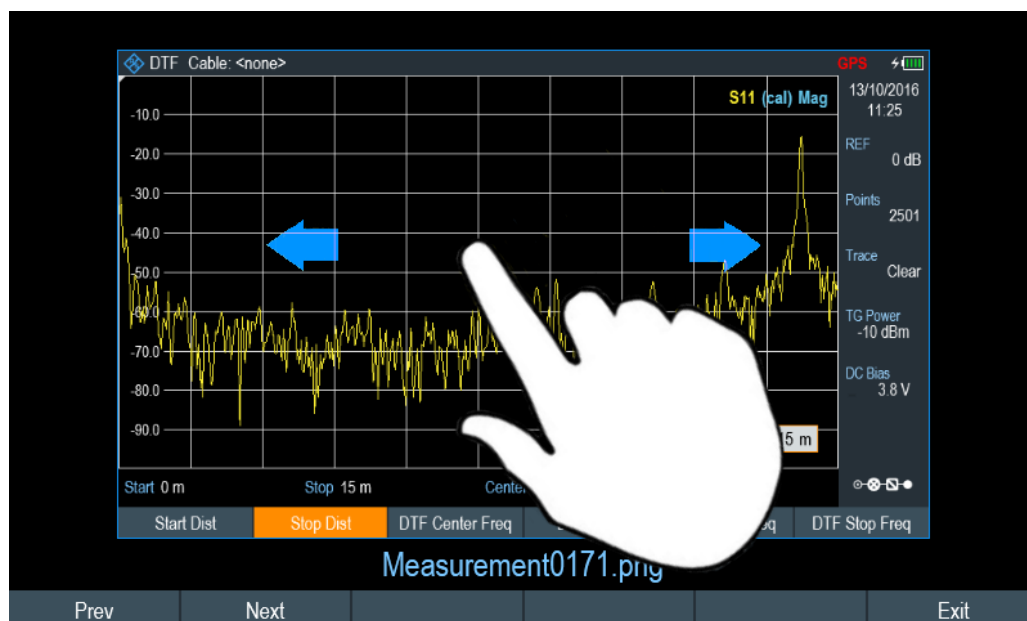

5.1.9 Skip Wizard Measurement

Swipe horizontally to the left direction to skip a wizard measurement. Alternatively, select the "Skip" softkey to skip the measurement.

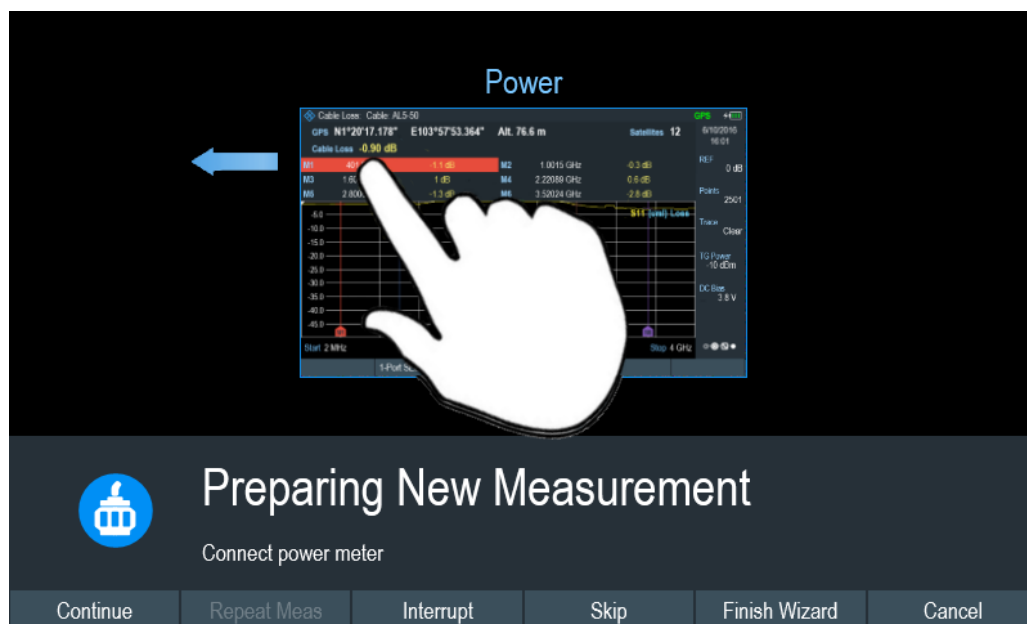

5.2 On-screen Keyboard


The on-screen keyboard is an additional means of interacting with the instrument. It provides convenience of usage with the touchscreen input.

Accessing the on-screen keyboard is only available for text-based entry, e.g. save or open a filename.



Touchscreen interface

If the [touchscreen interface](#) is not activated, the on-screen keyboard is disabled.

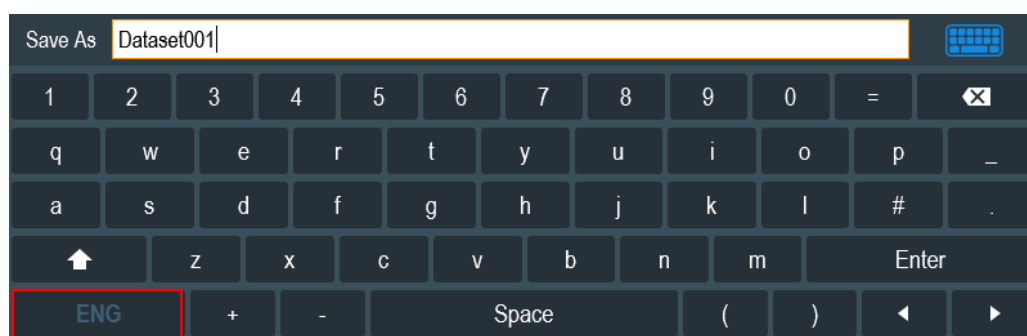

The on-screen keyboard display can be switched on and off using the on-screen keyboard  icon highlighted at the top right-hand corner.

5.3 Front Panel Keys

The following chapter illustrates the function of the front panel keys.

5.3.1 POWER Key

The [POWER]  key is located on the lower left of the front panel. It starts up and shuts down the instrument.

See [Chapter 3.1.2, "Switching the Instrument On and Off"](#), on page 24.

See also [Chapter 3.2.1, "Front View"](#), on page 26.

5.3.2 Screenshot Key

The screenshot  key provides a quick way to capture screenshot of the current screen at anytime.

For more information, see [Chapter 5.8, "Taking Screenshots"](#), on page 105.

5.3.3 Softkey

The six softkeys on the front panel are used to access the softkey label. See [Chapter 3.2.1, "Front View"](#), on page 26.



The softkey label is function-specific depending on the key selected on the front panel of the instrument. See [Chapter 5.3.5, "Function Keys"](#), on page 96.

5.3.4 System Keys

System keys configure the instrument to a predefined state, change basic settings, configure evaluation setting and provide save and recall functions.




SYSTEM keys	Descriptions
PRESET	Resets the instrument to the default state.
SETUP	Provides basic instrument configuration functions: • Date, time, display, audio and regional configuration • Battery low indicator • LAN interface • Disabling and enabling of options • Information about instrument configuration including firm-ware version and system error messages
MODE	Provides the selection between applications. • Spectrum Analyzer (for model .12 only) • Cable & Antenna • Power Meter
LINES	Configures display lines and limit lines.
SAVE RECALL	Provides a file manager function to facilitate the saving and recalling of result and instrument settings.

5.3.5 Function Keys



The keypad [DTF/BW], [CAL/SPAN] and [SCALE/AMPT] for model .12 are displayed as [DTF CONFIG], [CAL] and [SCALE] for model .02.

Function keys provide access to the most common measurement settings and functions in the instrument.

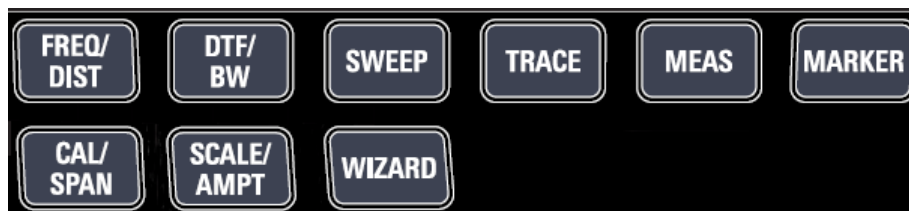

FUNCTION keys	Descriptions
FREQ/DIST	Mode-dependent button. Sets the center frequency, frequency span, start and stop frequencies for the frequency range under consideration. It also set the cable length under measurement.
CAL CAL/SPAN	The [CAL] or [CAL/SPAN] key provides the following functions: • Perform calibration on the R&S Cable Rider ZPH. • Selection of calibration kit models and calibration types (user or factory) for measurement. For more information, see Chapter 7.1.7, "Calibrating Measurements" , on page 137. For model .12, the [CAL/SPAN] key also set the frequency span to be analyzed.

FUNCTION keys	Descriptions
SCALE SCALE/AMPT	The [SCALE] or [SCALE/AMPT] key sets the reference level of the measurement. It also performs auto scaling of the reference level. For model .12, the [SCALE/AMPT] key provides the following functions: • Sets the reference level, the displayed dynamic range, the RF attenuation and the unit for the level display. • Sets the level offset and the input impedance. • Activates the preamplifier (R&S ZPH-B22, order number 1334.5627.02). • Set transducer tables to compensate primary and secondary RF path losses.
WIZARD	Performs a sequence of standardized and recurring measurements. See Chapter 6, "Working with the Measurement Wizard", on page 115.
DTF Config DTF/BW	The [DTF Config] or [DTF/W] key provide the following functions: • Configure the cable model used in the measurement. • Display "DTF List" with reference to the "DTF List Threshold" setting. See Chapter 7.2, "Configuring Cable and Antenna Tests", on page 143. The [DTF/W] key sets the resolution bandwidth and the video bandwidth.
SWEEP	Set number of sweep points for measurement. Up to a maximum of 2501 sweep points is configurable Selects continuous measurement or single measurement. For model .12, the [SWEEP] key also provides the functionality to set the sweep time as well as trigger mode, trigger threshold and trigger delay of the external trigger signal in SPECTRUM mode.
TRACE	Configures the measured data acquisition and the analysis of the measurement data.

FUNCTION keys	Descriptions
MEAS	This key provides functionality to select and configure measurement such as: • DTF • Return Loss • SWR • Cable Loss • Transmission (for model .12) • Smith • Phase For model .12, the key also provides functionality to select and configure the followings measurements in SPECTRUM mode: • Spectrum • Channel Power • Occupied bandwidth (OBW) • Measurement of time domain power (Time Domain Power) • Spectrum emission mask measurement (Spectrum Emission Mask) • Measurement of multicarrier adjacent channel power (Ch Power ACLR) • Harmonics distortion • AM modulation depth (AM Mod Depth) • Spectrogram • Spectrogram Playback • Isotropic Antenna
MARKER	Sets and positions the absolute and relative measurement markers (markers and delta markers). Marker positioning using peak, next peak, minimum level, reference level and center frequency. Marker search limit function for model .12 in SPECTRUM mode. Enable or disable checkbox for "View List" function. For model .12, it also provides the following marker functions in SPECTRUM mode: • Marker mode function which provides capability to measure noise, measure frequency using frequency counter and measure bandwidth using the N dB down setting. • Marker display setting using the frequency or channel table. • AM and FM marker demodulation.

5.3.6 Keypad

The keypad is used to enter alphanumeric parameters, including the corresponding units.



It contains the following keys:

Type of key	Description
Alphanumeric keys	Enter numbers and (special) characters in edit dialog boxes.
Decimal point	Inserts a decimal point "." at the cursor position.
Sign key	Changes the sign of a numeric parameter. In the case of an alphanumeric parameter, inserts a "-" at the cursor position.
Unit keys (GHz/-dBm MHz/ dBm, kHz/dB and Hz/dB)	These keys add the selected unit to the entered numeric value and complete the entry. In the case of level entries (e.g. in dB) or dimensionless values, all units have the value "1" as multiplying factor. Thus, they also act like an enter key function.
CANCEL key	Closes all kinds of dialog boxes, if the edit mode is not active. Quits the edit mode, if the edit mode is active. In dialog boxes that contain a "Cancel" button it activates that button. For "Edit" dialog boxes the following mechanism is used: • If data entry has been started, it retains the original value and closes the dialog box. • If data entry has not been started or has been completed, it closes the dialog box.
BACK key	If an alphanumeric entry has already been started, this key deletes the character to the left of the cursor. Note: If an entry is confirmed with enter, this key restores the value entered before. This action can be used to toggle for example between two frequencies.

5.3.7 Navigation Controls

The rotary knob provides navigation controls in the display or within dialog boxes.



The rotary knob has several functions:

- Increments (clockwise direction) or decrements (counter-clockwise direction) the instrument parameters at a defined step width in the case of a numeric entry
- Shifts markers, limit lines and display line on the screen
- Acts like a cursor key in dialog boxes or softkey submenus.
- Moves the scroll bar vertically if the scroll bar is in focused
- Acts as an enter key when pressed

5.4 Presetting the R&S Cable Rider ZPH



Before you prepare a measurement, it is recommended to preset the R&S Cable Rider ZPH. During a preset, the R&S Cable Rider ZPH resets all settings to their default state. Restoring the default configuration has the advantage that old settings do not affect measurements.


The default setup is specific to the operating mode.

- ▶ Press the [PRESET] key.
The R&S Cable Rider ZPH restores its default setup.


You can load or discard a previous calibration data during a preset.

You can also define your own default settings via a dataset. This dataset is then loaded after pressing the [PRESET] key instead of the factory default.

1. Press the [SETUP] key.
2. Select the "User Preference" softkey.
3. In the "User Preferences" dialog box, select the "Preset Dataset" item.
The R&S Cable Rider ZPH displays the file manager dialog box to select the dataset that contains the settings you would like to have as the preset settings.

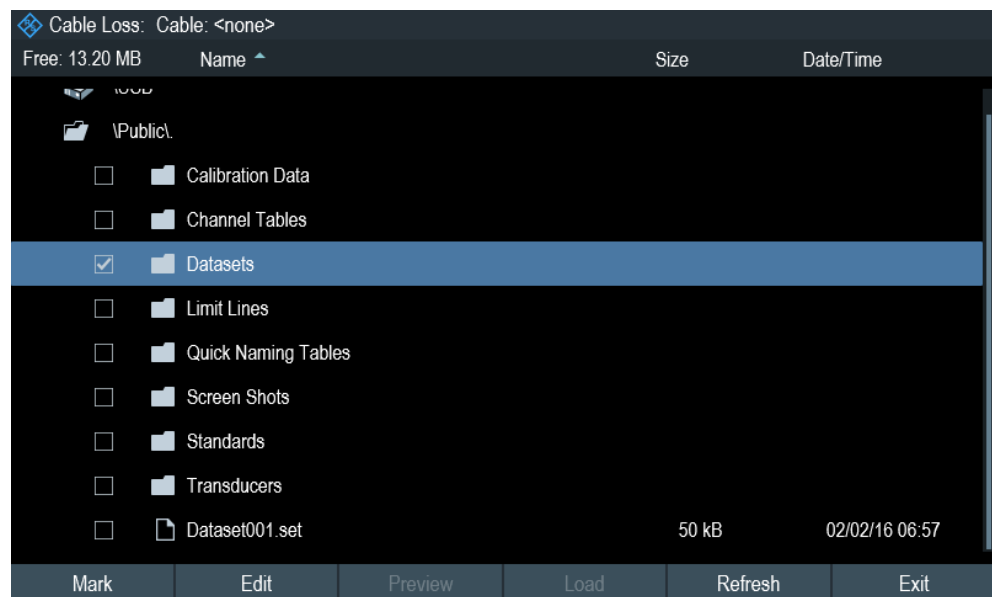

4. Select the dataset with the settings you want and press "Load" softkey.
5. In the "User Preferences" dialog box, select the "Preset Mode" item. A drop-down menu opens to select the preset mode.
6. Select the "User Defined" to load the dataset defined in the "Preset Dataset". The R&S Cable Rider ZPH now loads the settings of the dataset after you press [PRESET.]
7. Select "Discard Calibration Data" to define usage of calibration data after preset. A drop-down menu opens to select the usage of calibration data.
8. Select "On" to apply calibration data or "Off" to discard calibration data after preset. Depending on the selection, the R&S Cable Rider ZPH loads or discards the calibration data after preset.

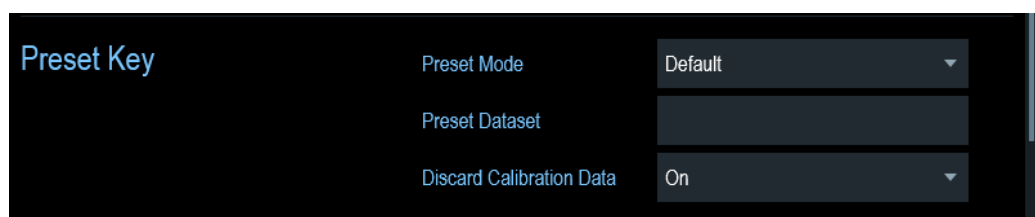

5.5 Configuring Measurements



The [Configuration Overview](#) dialog box provides an overview of the current configuration of the R&S Cable Rider ZPH. In addition, you can also change the configuration in this dialog box.

1. Press the [SETUP] key.


2. Select the "Config Overview" softkey.
3. Select one of the dialog boxes and change the settings as you like.

Note that the contents of the "Config Overview" dialog box are customized for each operating mode of the R&S Cable Rider ZPH. Therefore, the order and number of displayed settings is different in each mode.

5.6 Working Directory

Using the "Working Directory", you can customize the folder directory to save the screenshots and datasets captured during measurement.

1. Press the [SETUP] key.
2. Select the "User Preference" softkey.
3. In the "User Preferences" dialog box, select the "Using working directory" item.
4. Select "On" to activate the customize folder directory or "Off" to use the default storage device in the R&S Cable Rider ZPH. See ["Data storage devices"](#) on page 109.
5. Define the folder name in the "Working directory" item.

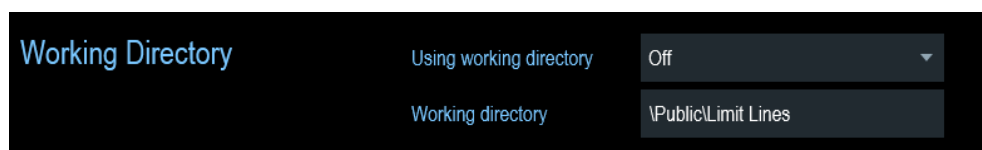

5.7 Saving On Events



"Save On Event" is not available in the following mode:

- [Cable and Antenna Test Mode](#)
- [Power Meter](#)
- [Modulation Analysis](#)




"Saving On Event" is only available with mode .12.

The R&S Cable Rider ZPH provides functionality that automatically saves measurement information if a certain situation or event occurs.

Saving events is possible in all operating modes.

1. Press the [SETUP] key.
2. Select the "User Preference" softkey.
3. Select the "Save On Event" menu item.
A drop- down menu to disable or enable the "Save On Event" opens.

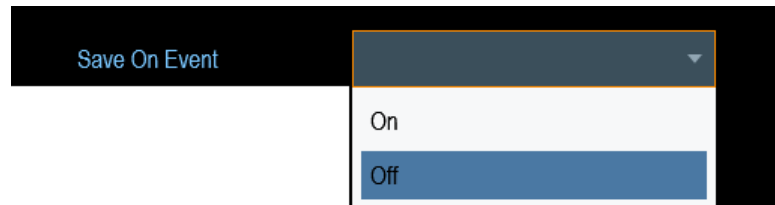

4. Select "On" to enable the "Save On Event" menu item.
The R&S Cable Rider ZPH turns on automatic event recognition. You can select one of several events that trigger the storage of measurement data. See ["Event types"](#) on page 103.

Data types

You can select several data types to save when an event occurs.

- A screenshot of the sweep that contains the event (.png or .jpg file)
- A dataset of the sweep that contains the event (.set file)
- The GPS coordinates of the location where the event happens (.gpx file).

1. Press the [SETUP] key.
2. Select the "User Preference" softkey.
3. Select the "Capture Screen", "Capture Dataset" or "Capture GPX" menu item and turn it on or off.
If the setting is turns "On", the corresponding information is included in the saved data.
See [Chapter 5.8, "Taking Screenshots"](#), on page 105.



Timing of the data capture

The R&S Cable Rider ZPH evaluates the measured data after a sweep is done and thus detects and saves an event only after a sweep has been completed.

Event types

To use the "Save on Event" functionality, you have to select an event type that triggers the capture of the selected data. The R&S Cable Rider ZPH supports several event types.




Single sweeps and sweep time

It is not possible to save measurement data in single sweep mode because the R&S Cable Rider ZPH only performs one sweep and then stops.

The time interval must be longer than the sweep time. If the time interval is shorter, the R&S Cable Rider ZPH is not able to save data because a sweep has to be complete before the R&S Cable Rider ZPH is able to save the data.

1. Press the [SETUP] key.
2. Select the "User Preference" softkey.
3. Select the "Event Source" menu item.
A drop-down menu to select the event trigger source opens.

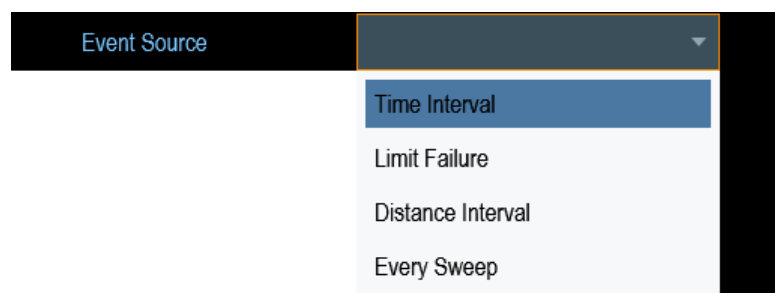

- a) "Time interval"
You can define the duration of the time interval via the "Time Interval" menu item.
- b) "Limit failure"
Saves measurement data if a limit line is violated.
The R&S Cable Rider ZPH provides different modes for handling limit check failures. You can select one via the "Limits Save Mode".
 - "Start On Failure": starts to save measurement data if a limit line is violated.
 - "Stop On Failure": stops to save measurement data if a limit line is violated.
 - "Save Only Failure": saves only the sweeps that actually fail a limit check.
- c) "Distance interval"
Saves measurement data after you have covered a certain distance.
You can define the distance that is covered before the measurement data is saved via the "Distance Interval" menu item.
- d) "Every sweep"
Saves the data of all measurement sweeps that are performed.


Storage device



To use the "Save on Event" functionality, you need either an SD card or a USB stick to store the data. The internal memory is probably not sufficient.

1. Press the [SETUP] key.

2. Select the "User Preference" softkey.
3. Select the "Recording Storage" menu item.
A drop-down menu to select the recording storage media opens.

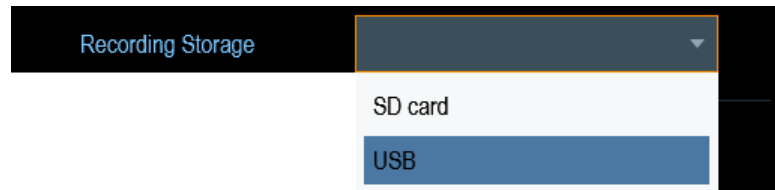

4. Select the desired storage media.

5.8 Taking Screenshots



You can take and store a screenshot of the current screen anytime with the screenshot key.

- ▶ Press the screenshot key.
The R&S Cable Rider ZPH takes the screenshot.

If available, the R&S Cable Rider ZPH stores the screenshot on an external storage device (USB flash drive or micro-SD card). If both are connected, the R&S Cable Rider ZPH uses the USB flash drive.

If no external device is available, the R&S Cable Rider ZPH stores the screenshot in its internal memory until the internal memory is full. In that case, you can transfer the screenshots with the R&S InstrumentView software to your computer.



Saving screenshot and dataset at the same time

Depending on the "Capture" settings configured in the "User Preference" menu, using the screenshot key also saves a dataset in addition to the screenshot.

For more information, see [Chapter 5.9, "Managing Datasets"](#), on page 107.


Screenshot filename and file format

All screenshots get a default filename "Screenshot####". The files also get numbers (####) in an ascending order, beginning with 0000. You can select a default filename and a starting number in the "User Preference" menu.

The file format of screenshots is either *.png or *.jpg, depending on your configuration in the "User Preference" menu.

1. Press the [SETUP] key.
2. Select the "User Preference" softkey.
3. Select the "Default Filename" and "Filename Counter Starts At" items and assign a filename and number as you wish.

4. Select the "Capture Screen Format" items to select the screenshot file format.

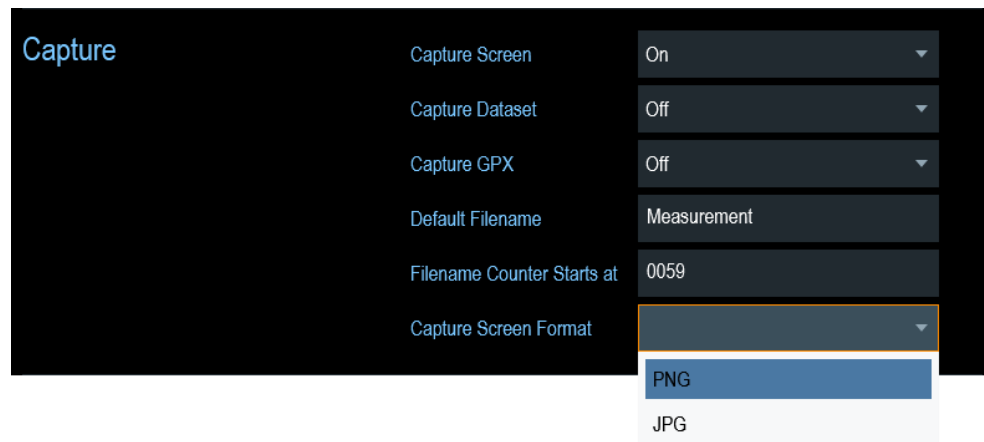

Previewing screenshots

The R&S Cable Rider ZPH provides functionality to preview screenshot.



Special touchscreen gesture

You can swipe horizontally to the left or right direction to preview the screenshot. See [Chapter 5.1.8, "Preview Screenshot"](#), on page 93.

1. Press the [SAVE/RECALL] key.
2. Select the "File Manager" softkey.
The R&S Cable Rider ZPH opens the file manager to select a screenshot for the preview.
3. Select the screenshot for preview.
4. Select the "Preview" softkey to preview the screenshot.
5. Select the "Prev" or "Next" softkey to preview the screenshots available in the selected folder.
The filename of the previewed screenshot is displayed below the screenshot. See [Figure 5-1](#) and [Chapter 5.9.2.1, "Previewing a Dataset"](#), on page 112.
6. Select the "Exit" softkey to return to the file manager.

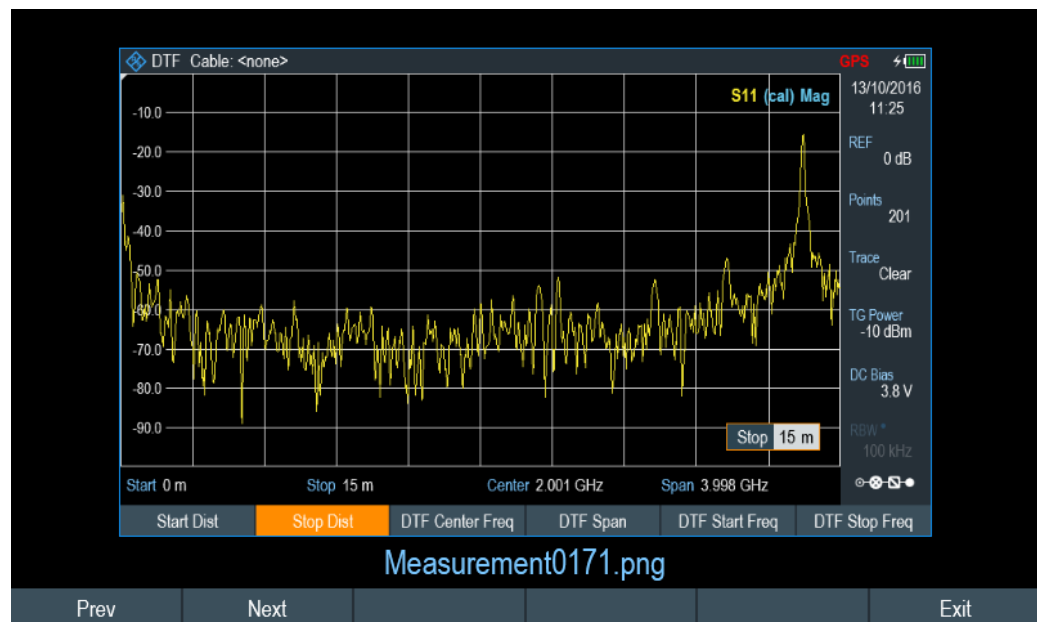


Figure 5-1: Preview screenshot

5.9 Managing Datasets



The R&S Cable Rider ZPH provides functionality to manage (e.g. save, restore) datasets available in its internal memory or an external storage device.

Datasets

The R&S Cable Rider ZPH supports various types of datasets. The instructions below primarily describe the management of datasets that you create on the R&S Cable Rider ZPH during measurements, for example measurement results and configurations. Note that these datasets have the file extension `.set`.

Datasets with the file extension `.set` are an image of measurement results and configurations. Thus, you can subsequently reproduce the context of the measurement.

Using the R&S InstrumentView software, you can use the datasets for documentation purposes or post-processed it for a more detailed analysis later on. Note that datasets also contain calibration data if calibration has been performed.

Templates

The R&S Cable Rider ZPH also supports various other types of datasets or templates. Such templates mainly contain additional requirements for a particular measurement, like limit lines or channel tables.


Creating and editing of these templates are only possible with the functionality provided by the R&S InstrumentView software package. Note that the file extension depends on the application of the template (for example, a template containing a channel table has the extension `.chntab`).

For more information on working with templates and datasets, refer to the documentation of the R&S InstrumentView software package.

Data synchronization

The R&S InstrumentView features data synchronization that matches the data available between the R&S Cable Rider ZPH and the PC.

1. Select "File Transfer" from the "Instrument" menu.
The software opens the "File Transfer" dialog box.
2. Select the "Template & Result"  synchronization button to process data synchronization between the computer and instrument.
This data synchronization updates all files that have been created or edited with the R&S InstrumentView software package to the instrument and vice versa. (Note that template can only be created and edited in the PC, see ["Templates"](#) on page 107).
3. Alternatively, data can be transferred in a single direction using the  direction button between the PC and instrument and vice versa.

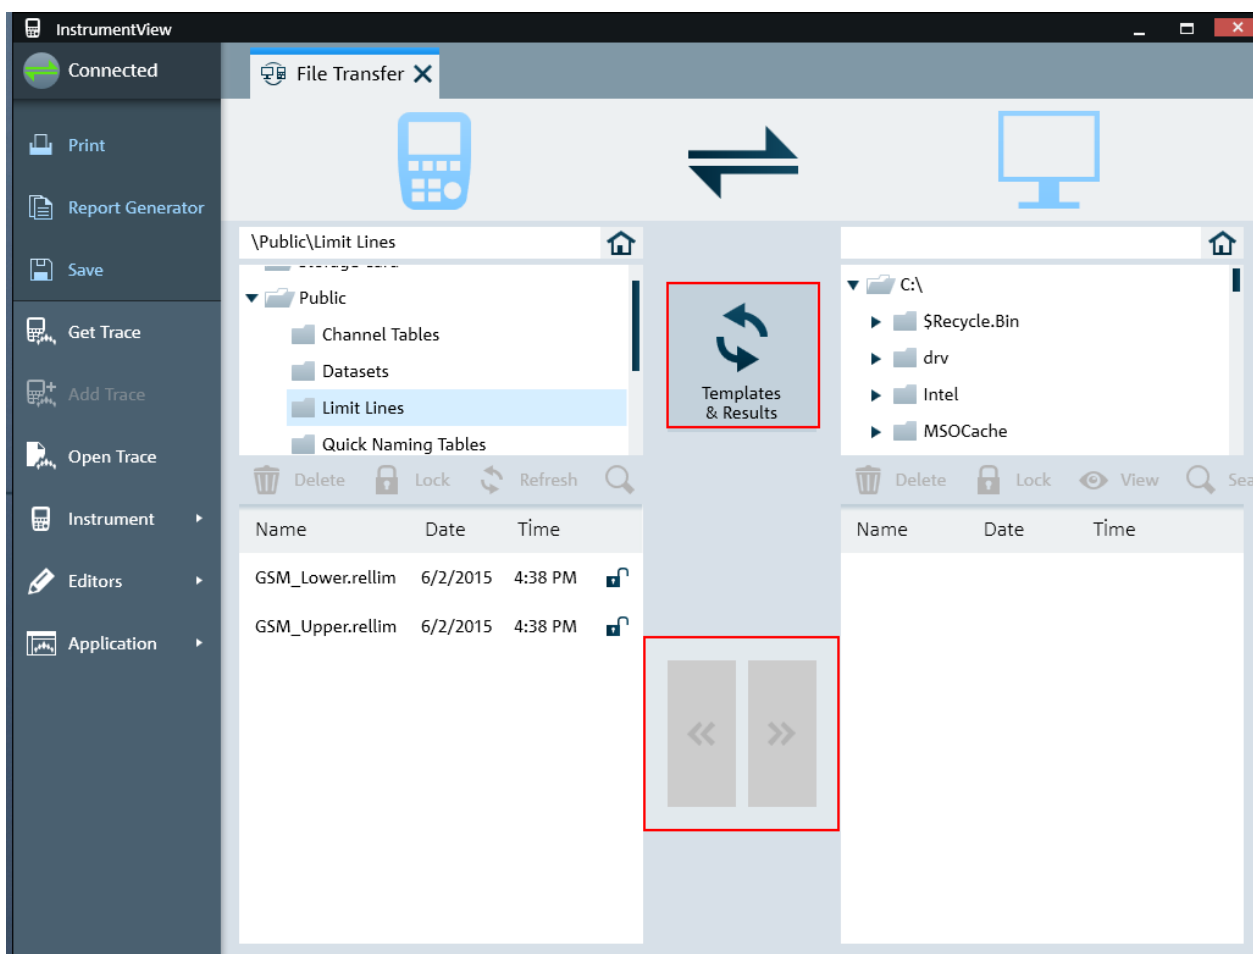

• Saving Datasets	109
• Restoring Datasets	111
• Deleting Datasets	113


5.9.1 Saving Datasets

The R&S Cable Rider ZPH allows you to save the data that is analyzed at any time.

1. Press the [SAVE/RECALL] key.

2. Select the "Save" softkey.

The R&S Cable Rider ZPH opens the "Save Dataset" dialog box.

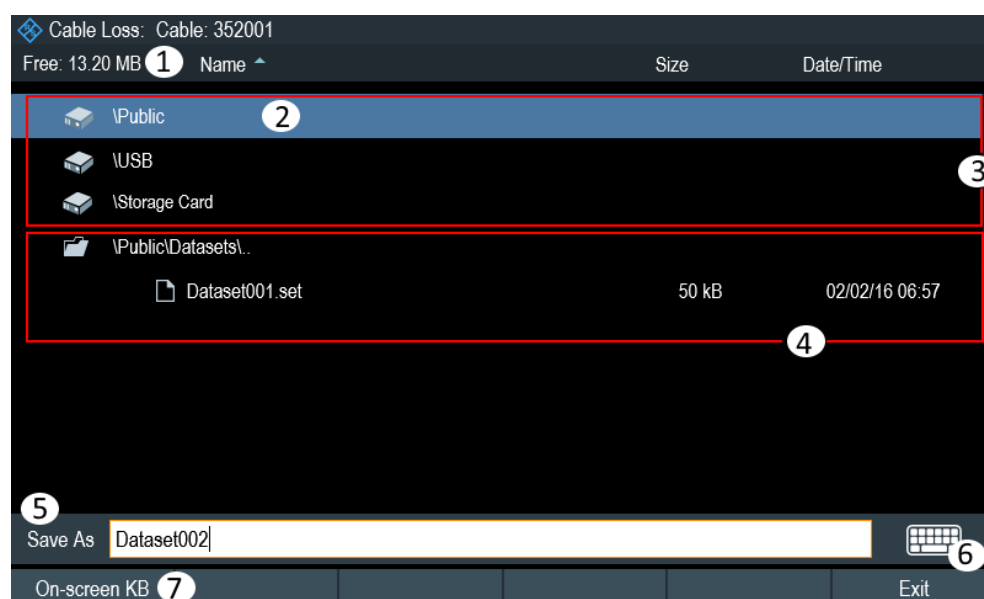

1 = Remaining memory on selected data storage device

2 = Currently selected data storage

3 = Available data storage

4 = Currently folder structure of the selected data storage

5 = Dataset name input field

6 = [On-screen Keyboard](#) icon

7 = File manager softkey menu

Data storage devices



Storage device

If both USB flash drive and micro-SD card are connected to the instrument, the USB flash drive takes precedent over SD card as a storage device.

If both storage devices are not connected, the internal memory of the instrument is used for storage.

The folder structure shows all the available data storage devices. Possible storage devices are the internal memory of the R&S Cable Rider ZPH, micro-SD card or USB flash drive.

The default storage device depends on which devices are connected to the R&S Cable Rider ZPH. See "[Storage device](#)" on page 109.

The internal memory provides approximately 20 MB of data, therefore the number of datasets you save on the R&S Cable Rider ZPH is limited. Each dataset needs about 100 kB of memory, but this value can vary.

If you are using an external storage device, the number of datasets you can save is limited only by the size of the storage device.

R&S Cable Rider ZPH shows the remaining memory on the storage device in the dialog box.

1. Select the storage device you want to save the data.

2. Select the folder you want to save the data.

3. Enter a filename in the corresponding input field.

The default filename for datasets is `Dataset###.set` with a new number in ascending order for each new dataset. The file extension for datasets is `.set`.

If you enter another name, the R&S Cable Rider ZPH uses that name and assigns a new number to the filename if you save the data set the next time. This function allows you to assign consecutive dataset filename without entering a new name every time you want to save a dataset.

You can define the dataset filename at the "User Preference" dialog box. Select the "Default Dataset Name" and enter the filename in the entry box.

4. Press the rotary knob to confirm the entry.

The R&S Cable Rider ZPH saves the dataset.

5.9.1.1 Alternative Ways to Save Datasets

Using the screenshot key , the R&S Cable Rider ZPH provides an alternative and more convenient way to save dataset.

1. Press the [SETUP] key.

2. Select the "User Preference" softkey.

3. Configure the "Default Filename", "Filename Counter Starts at" and "Capture Screen Format" menu items.

The screenshot key  saves a screenshot of the display and the selected data of the current measurement based on the filename syntax defined in the "Default Filename", "Filename Counter Starts at" and "Capture Screen Format" menu items.

5.9.1.2 Renaming Filename


If necessary, you can rename files or file directories directly on the R&S Cable Rider ZPH.

1. Press the [SAVE/RECALL] key.
2. Select the "File Manager" softkey.
The R&S Cable Rider ZPH opens the file manager.
3. Select the files or file directories in the file manager.
Alternatively, press the "Mark" softkey to select the desired files or files directories.
4. Select the "Edit" softkey.
The R&S Cable Rider ZPH displays a submenu for selection.
5. Select the "Rename" menu item to rename the files or file directories.
The R&S Cable Rider ZPH opens an input field to change the name of the selected files or file directories.



5.9.2 Restoring Datasets

You can preview and load previous saved measurement results with the recall function of the R&S Cable Rider ZPH. This function also provides easy access to previous measurement settings so that you do not have to set up the R&S Cable Rider ZPH again.

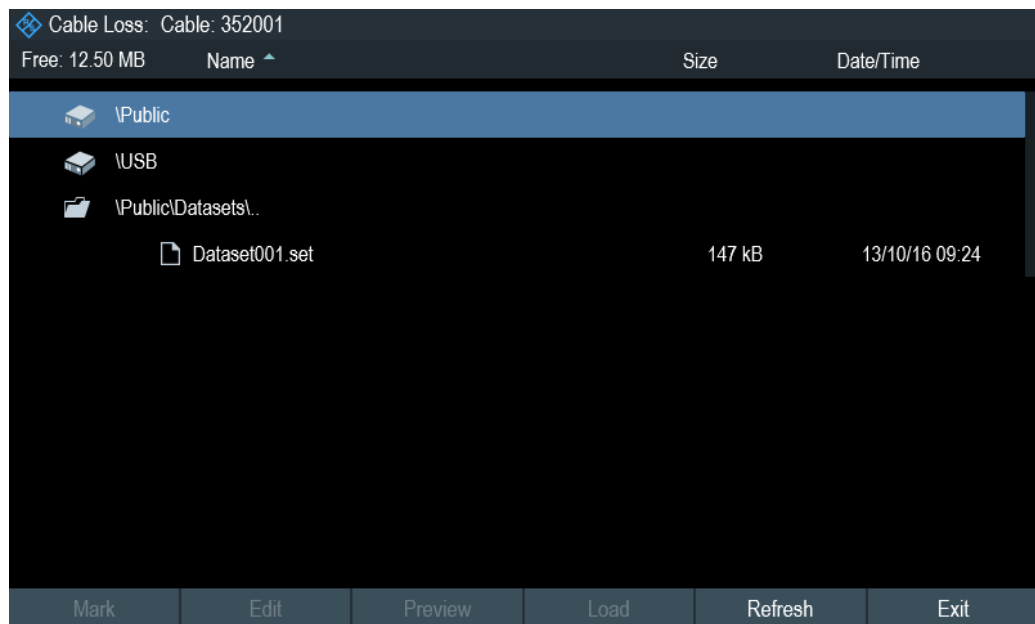

1. Press the [SAVE/RECALL] key.
2. Select the "Recall" softkey.
The R&S Cable Rider ZPH opens the "Recall Dataset" dialog box.
3. Select the storage device and file directory you want to load the dataset.
The R&S Cable Rider ZPH restores the configuration that the dataset contains.

By default, the most recently saved dataset is highlighted. If you need another dataset, navigate to the file directory or storage device that contains the dataset you need.

5.9.2.1 Previewing a Dataset

The R&S Cable Rider ZPH provides the function to preview datasets. The preview function allows you to take a quick look at the screenshot and its corresponding measurement settings. During preview, the R&S Cable Rider ZPH does not yet activate the measurement settings of that dataset.

1. Press the [SAVE/RECALL] key.
2. Select the "File Manager" softkey.
3. Browse through the available datasets and select the desired dataset.
4. Select the "Preview" softkey.
The R&S Cable Rider ZPH shows a preview of the measurement results and the measurement settings contained in the selected dataset.
5. Select the "Prev" or "Next" softkey to preview the datasets available in the selected folder.
The filename of the previewed dataset is displayed at the bottom of the screen layout. See [Figure 5-2](#).

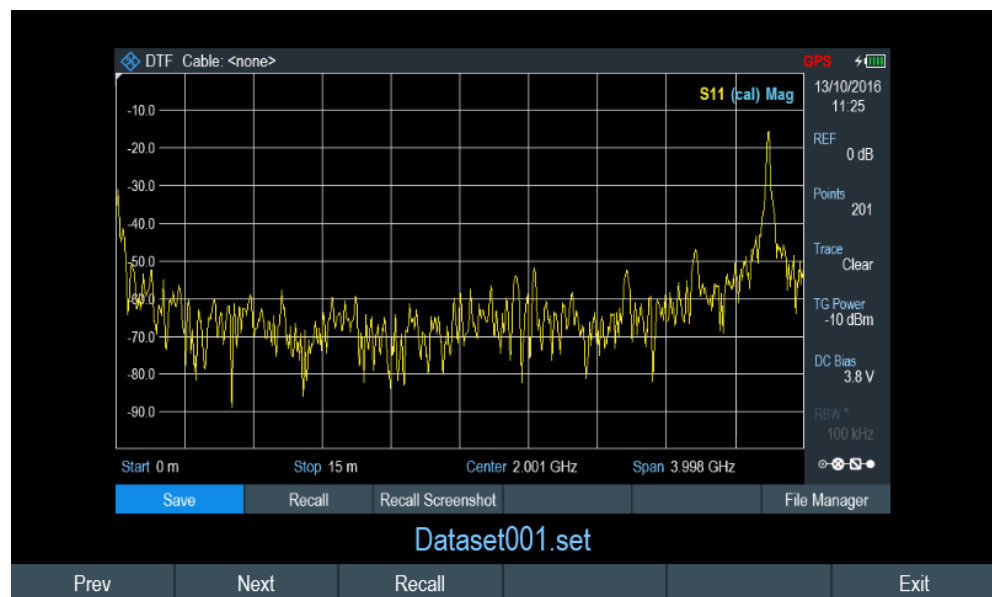


Figure 5-2: Preview dataset

6. Select the "Recall" softkey to load the dataset
Alternatively, select the "Exit" softkey to return to the file manager.

5.9.2.2 Loading a Dataset

If you find a dataset whose settings you need for your current measurement task, you can load it.

- Select the "Load" softkey.
The R&S Cable Rider ZPH loads the dataset and adjusts its measurement settings according to the dataset.
See also [Chapter 5.9.2.1, "Previewing a Dataset"](#), on page 112.

5.9.3 Deleting Datasets

If you have to delete a dataset, you can do so with the file manager.

1. Press the [SAVE/RECALL] key.
2. Select the "File Manager" softkey.
The R&S Cable Rider ZPH opens the file manager.
3. Select the desired files or file directories in the file manager.
Alternatively, press the "Mark" softkey to select the desired files or files directories.
4. Select the "Edit" softkey.
The R&S Cable Rider ZPH displays a submenu for selection.
5. Select the "Delete" menu item to delete the files or file directories.

Before deleting, the R&S Cable Rider ZPH shows a warning message that you need to confirm.

6. Select "Yes" to delete the selected files or file directories.
The R&S Cable Rider ZPH deletes the selected files or file directories from its memory.

5.10 Updating the Firmware

You can download new firmware versions from the R&S Cable Rider ZPH website.

<http://www.rohde-schwarz.com/product/zph.html>

The website also provides release notes for each new firmware version. The release notes include instructions on how to perform a firmware update.

5.11 Installing Firmware Options

You can equip the R&S Cable Rider ZPH with several firmware options to enable additional operating modes or special measurements.

For more information, see [Chapter 4.4, "Managing Options"](#), on page 65.

6 Working with the Measurement Wizard



When testing antennas and making measurement which involves complex signals, it is often necessary to perform a sequence of standardized and recurring measurements, often in an environment that is not easily accessible. To make sure that measurements are performed as required and to avoid a constant adjustment of parameters, the R&S Cable Rider ZPH features a measurement wizard.

The measurement wizard allows you to combine several individual measurement configurations to a sequence of measurements (or measurement set). As all relevant parameters have been set before the actual measurement and cannot be changed once the measurement procedure has begun, the wizard is a good way to avoid mistakes and save time when setting up measurements.

Note that it is necessary to install and use the R&S InstrumentView software package if you want to configure the measurement steps and parameters in the measurement wizard.

This chapter describes the functionality of the measurement wizard. You can use the wizard for measurements in all the operating modes.

For details on the individual measurements you can perform with the wizard, refer to the corresponding chapters.

- [Chapter 7, "Cable and Antenna Test Mode"](#), on page 126
- [Chapter 8, "Spectrum Analyzer Mode"](#), on page 167
- [Chapter 9, "Power Meter"](#), on page 253
- [Chapter 10, "Using the Internal Power Meter"](#), on page 263
- [Chapter 11, "Performing Pulse Power Measurements"](#), on page 266
- [Chapter 12, "Modulation Analysis "](#), on page 274
- [Chapter 13, "Interference Analyzer"](#), on page 293

You can use the wizard for measurements in all operating modes.

Note that it is necessary to install and use the R&S InstrumentView software package if you want to access the measurement wizard.

6.1 Performing and Configuring Measurements

Before you can use the measurement wizard, you have to define a measurement set using the "Wizard Set Editor" in the R&S InstrumentView software package.

The R&S InstrumentView software package is delivered with the R&S Cable Rider ZPH. The latest version is also available for download on the R&S Cable Rider ZPH website at <http://www.rohde-schwarz.com/product/zph.html>.

After creating the measurement wizard set using the R&S InstrumentView, transfer the file to the R&S Cable Rider ZPH.

For more information of the "Wizard Set Editor", see the R&S InstrumentView manual.

Load the measurement wizard

Now that the measurement set is available on the R&S Cable Rider ZPH, you can perform the measurement wizard.

1. Press the [Wizard] key.
The R&S Cable Rider ZPH opens the wizard dialog box. See [Figure 6-1](#).

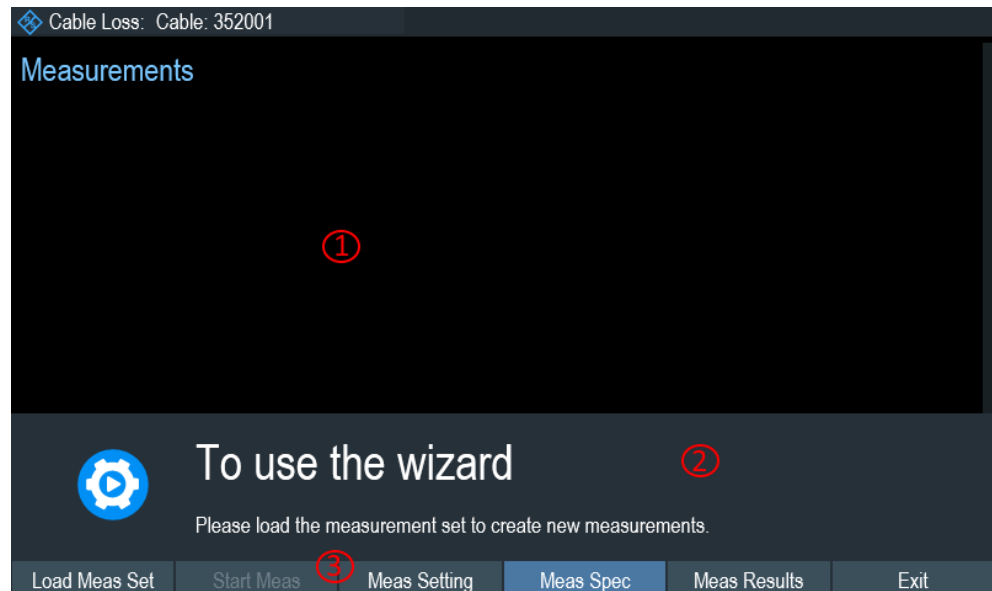


Figure 6-1: Wizard dialog box

- 1 = Measurement wizard dialog box
- 2 = Measurement wizard message box
- 3 = [Softkeys](#) menu of measurement wizard application

2. Select the "Load Meas Set" softkey.
The R&S Cable Rider ZPH opens the file manager to select the measurement wizard set.
3. Select the desired measurement wizard set from the file manager.
4. Select the "Load" softkey to confirm the selection.
The R&S Cable Rider ZPH loads the measurement wizard set.

Measurement Setting

The parameters highlighted in the measurement setting dialog are configurable during the start of the measurement. See [Figure 6-2](#).

1. Select the "Meas Setting" softkey.
The R&S Cable Rider ZPH opens the "Meas Setting" dialog box.
2. Select the desired menu item in the "Meas Setting" dialog box.
Note that some of the parameters are read-only information. See [Table 6-1](#).

Return Loss Cable: <none>

General

Measurement Definition

User

No. of Steps to Perform

Description

Site

Site Name

Comments

GPS Position not connected

Cable Definition

Use Wizard Cable Settings

Cable Model

Clear Cable Model

Cable Length

Calibration Settings

Default Calibration

Use Stored Calibrations

Figure 6-2: Measurement setting dialog

Table 6-1: Measurement setting parameters

Measurement parameters		Descriptions
General	User	Name of the person that performs the measurement.
	Measurement Definition	Name of the measurement wizard set. This field is a read-only field that shows the measurement name as defined in the R&S InstrumentView software package.
	Number of Steps to Perform	Number of individual measurements in the measurement sequence as defined with the R&S InstrumentView software package. The field allows you to reduce the number of individual measurements and perform only those measurements that are necessary. If you reduce the number of measurements, the R&S Cable Rider ZPH omits the last measurement in the sequence. You can edit this field only if you turned on the "Allow Variable Number of Sequence Steps" in the "Wizard Set Editor" of the R&S InstrumentView software.
	Descriptions	Short description of the measurement task. This field is a read-only field that shows the description as defined with the R&S InstrumentView software.
Site	Site Name	Location of the measurement.

Measurement parameters		Descriptions
	Comments	Comments about the measurement, e.g. the external conditions during the measurement.
	GPS Position	Displays the GPS information. See Chapter 4.2.3, "Using the GPS Receiver" , on page 45.
Cable Definition	Use Wizard Cable Settings	Select the usage of cable characteristics as defined in the measurement set. Select "On" to use the predefined cable characteristics or "Off" to redefine the cable model and cable length in R&S Cable Rider ZPH. In the case, if "On" is selected, the parameters below will be locked.
	Cable Model	Cable model that you perform the measurement on. You can define a cable model with the R&S Cable Rider ZPH software, but can also change the cable model on short notice, if necessary. See Chapter 7.2.1.3, "Creating a Cable Model" , on page 144.
	Clear Cable Model	Deactivates the currently active cable model. See Chapter 7.2.1.2, "Clear Cable Model" , on page 144.
	Cable Length	Length of the cable that you perform the measurement on.
Cable Settings	Default Calibration	Calibration that was defined when creating the wizard set in the R&S InstrumentView software.
	Use Stored Calibrations	If set to "On", the wizard uses the calibration stored in the R&S Cable Rider ZPH. If set to "Off", the wizard uses the calibration defined in the R&S InstrumentView software.

Measurement specification

The measurement specification dialog box displays the measurement step sequences and the individual performed measurement status. See [Figure 6-3](#).

- Select the "Meas Spec" softkey.
The R&S Cable Rider ZPH opens the "Meas Spec" dialog box.



Figure 6-3: Measurement specification dialog box

1 = Measurement step in a wizard set

2 = Individual measurement step status

Performing a Sequence of Measurements



Calibration data

The R&S Cable Rider ZPH adds the calibration data of each calibration you perform to a calibration data folder available on its internal memory. Each dataset in the calibration data folder is unique for a particular calibration method and a particular measurement configuration.

Note that the calibration is only valid for the instrument it has been performed on.

Before you start a measurement sequence with the measurement wizard, the R&S Cable Rider ZPH compares the contents of the calibration data folder to the measurement configurations and required calibration methods in the measurement sequence.

- If the R&S Cable Rider ZPH has already been calibrated for a particular configuration, it restores that data. Another calibration is not necessary.
- If the R&S Cable Rider ZPH has not been calibrated for a particular configuration yet, calibration becomes necessary. The new calibration data is added to the calibration data folder.

Therefore, calibration is necessary only for calibration methods that have not been used for a particular measurement configuration before.

However, it is recommended to perform calibration regularly to keep measurements as accurate as possible.

You can delete obsolete calibration data from the folder:

\Public\Calibration Data

Now that you have updated all [Measurement setting parameters](#) concerning the measurement task, you can start the measurement procedure.



Figure 6-4: Perform wizard measurement dialog box

- 1 = Image of a measurement step defined in the R&S InstrumentView software package.
 2 = Wizard message box
 3 = See [Table 6-2](#)

1. Select the "Start Meas" softkey.

If you have not yet calibrated the R&S Cable Rider ZPH for the measurement, it asks you to perform the calibration routine. The stages of the calibration depend on the defined calibration routine. See [Chapter 7.1.7, "Calibrating Measurements"](#), on page 137 and ["Calibration data"](#) on page 119.

After having successfully calibrated the R&S Cable Rider ZPH, it starts to go through the measurements that are part of the measurement wizard set. The sequence of the measurements is defined in the R&S InstrumentView.

Before the start of each measurement, the R&S Cable Rider ZPH displays a message "Preparing New Measurement" in the wizard message box.

The message box contains information and instructions on how to prepare and perform the measurement that you have defined in the R&S InstrumentView software.

2. At each measurement step, you have several options:

- Select the "Continue" softkey.

The R&S Cable Rider ZPH finishes the current measurement and opens the measurement wizard dialog box. See [Figure 6-5](#)

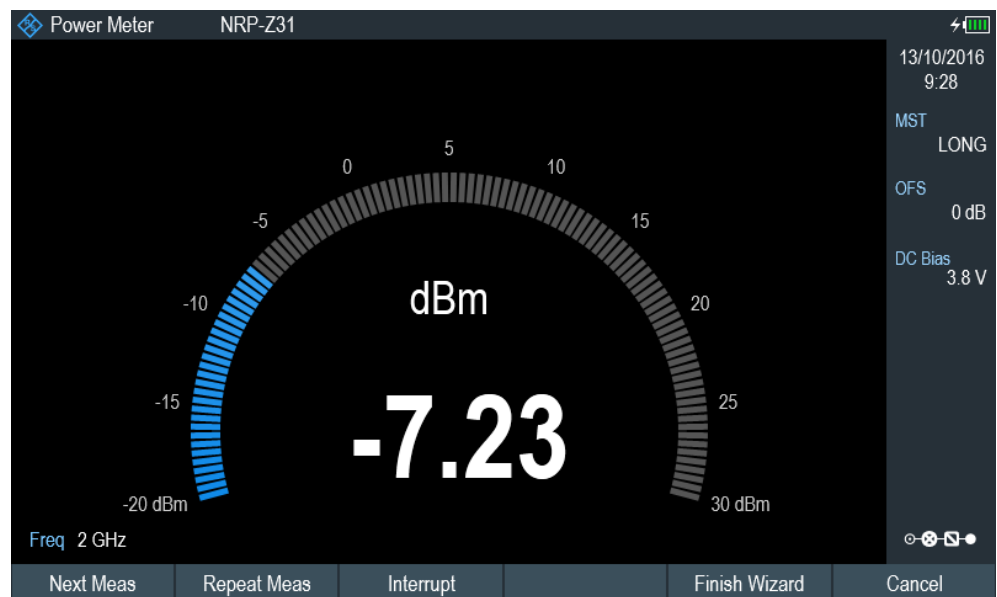


Figure 6-5: Measurement wizard dialog

- Select the "Next Meas" softkey to proceed to the next measurement step in the measurement sequence.
- Select the "Repeat Meas" softkey if the result does not match your expectation and you want to validate the result again.
- Select the "Interrupt" softkey if the result does not match your expectation and you want to find the origin of the problem by using a different settings or measurement than those defined in the wizard.
- Select the "Finish Wizard" softkey to end the measurement sequence.
- Select the "Cancel" softkey if at any time the result does not match your expectation and you want to abort the measurement.

The R&S Cable Rider ZPH prompts you to save measurement result and exit the wizard measurement.

- Select the "Interrupt" softkey.

The R&S Cable Rider ZPH opens the wizard interrupt dialog box.

There are three selections in the wizard interrupt dialog box, you can either:

- Select the "Leave Menu" softkey to proceed and perform the necessary reconfiguring of the measurement. The R&S Cable Rider ZPH goes to the current measurement environment which you can analyze the measurement settings and make the necessary reconfiguration on the measurements.

After you have completed the reconfiguration on the measurement, press [WIZARD] key to return back to the wizard interrupt dialog box

- Select the "Resume Sequence" softkey to resume back to the measurement.
- Select the "Cancel" softkey to abort the wizard measurement.
- Select the "Skip" softkey.


The R&S Cable Rider ZPH skips a single measurement step and continue the subsequent measurement step.

Note: Alternatively, you can swipe horizontally to the left direction to skip a wizard measurement. See [Chapter 5.1.9, "Skip Wizard Measurement"](#), on page 93.


- Select the "Cancel" softkey.

The R&S Cable Rider ZPH displays a message "Cancel Incomplete Wizard Sequence" in the wizard message box.

Select "YES" to abort the wizard measurement or "NO" to continue.

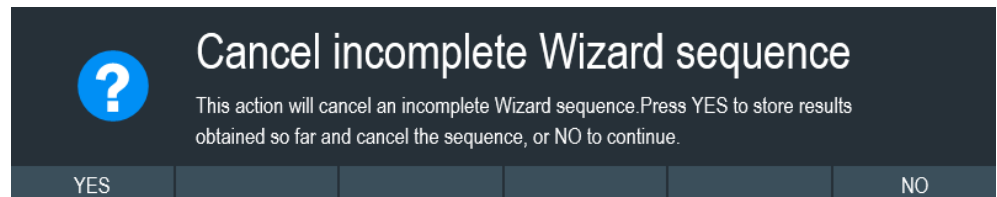

This is followed with a message prompt to save measurement result. The R&S Cable Rider ZPH displays a message "Save Wizard Measurement Results" in the wizard message box.

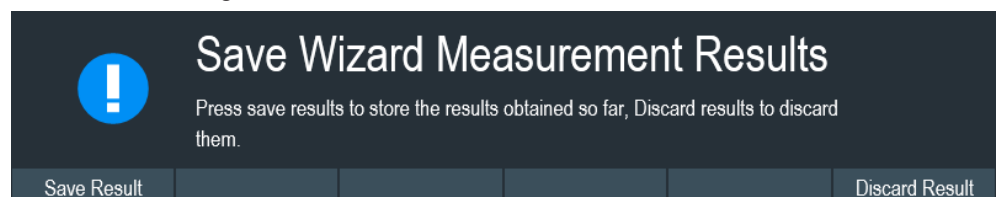

Select "Save Result" to save the measurement results or "Discard Result" to discard the measurement results.

3. After each measurement is completed, the R&S Cable Rider ZPH displays a message "Measurement Done" in the wizard message box.

Select the "Continue" softkey to proceed to the next measurement step (if any).



Note: Changing cable characteristics. If necessary, you can define different cable characteristics (cable model and length) after each individual measurement. This is useful, for example, if you want to do the same measurements on different cables at one go.

This feature is available when you activated the "Prompt User to Change Cable Settings" in the "Wizard Set Editor" of the R&S InstrumentView software.

When this function is activated, the R&S Cable Rider ZPH asks you to select new cable characteristics during the preparation of a measurement.

- Select the "Yes" softkey if changes are required and select new cable characteristics before proceeding with the measurement.
- Press the "No" softkey if changes are not required and proceed with the measurement.

4. After all the measurements are completed, the R&S Cable Rider ZPH displays a message "All Measurements Done" in the wizard message box.
 Select the "Continue" softkey. The R&S Cable Rider ZPH prompts you to save or discard the measurement results.
 Select the "Save Result" softkey to save the results on the selected storage device or "Discard Result" softkey to discard all the measurement results.



All Measurements Done

Table 6-2: Softkey in the measurement wizard

Softkey	Description
Next Meas	The R&S Cable Rider ZPH proceeds to perform the measurement.
Continue	The R&S Cable Rider ZPH finishes the current measurement and begins with the next measurement by showing the necessary preparation instruction.
Repeat Meas	Repeat the current measurement
Interrupt	If you interrupt the measurement sequence, you can change the different settings or measurements as if wizard is not in used. The R&S Cable Rider ZPH keeps the results of measurement you have already performed. When you finished reconfigured the measurement, you can resume back to the measurement sequence.
Skip	Skip a single measurement step and continue the subsequent measurement step Skipping individual measurements is possible when you turn on "Allow to skip measurements and finish wizard sequence" in the "Wizard Set Editor" of the R&S InstrumentView software package.
Cancel	Abort wizard measurement. The R&S Cable Rider ZPH displays a message "Cancel Immediate Wizard Sequence" in the message box. If wizard measurement is aborted, the R&S Cable Rider ZPH displays a message "Save Wizard Measurement Results" in the message box. If wizard measurement result is saved, the R&S Cable Rider ZPH returns to the last saved measurement result trace window. If the result is discarded, the R&S Cable Rider ZPH returns to the measurement dialog box.
Exit	Exit wizard measurement.

Softkey	Description
Finish Wizard	Ends the measurement sequence and returns to the "Measurement Wizard" dialog box. The results of the measurements you have already finished are kept in the memory of the R&S Cable Rider ZPH. Ending the sequence is possible when you turn on "Allow to skip measurements and finish wizard sequence" in the "Wizard Set Editor" of the R&S InstrumentView software package.
Save Result	Save result of the measurements performed in the wizard set. See "Measurements Result" on page 124
Discard Result	Discard measurement results.

Measurements Result



Limited internal memory

If you have to store the results on the internal memory, make sure that there is enough space left to store them or else the results might get lost. If the space is not enough, you can delete old data with the file manager.

For more information, see [Deleting Datasets](#).



Measurement wizard results

All the measurement wizard results are stored in the wizard result folder during the process of the measurement wizards. These stored results will not be saved until you do a [Save Result](#) at the end of the wizard measurement.

The results for a measurement set consist of several files, each file corresponding to one of the performed measurements. For easy evaluation, the R&S Cable Rider ZPH includes the name of the measurement as defined in the wizard dialog or R&S InstrumentView.

All result files that belong to a measurement set are stored in the same directory. The directory is named after the measurement name and site. The syntax is 'site-name_measurement_#'.

The R&S Cable Rider ZPH adds numbers in ascending order to the files and directories if you perform a measurement or measurement set more than once.

6.2 Evaluating Results

The R&S InstrumentView software package provides functionality to evaluate results and compile measurement reports. However, before you can start to evaluate the results you have to download the results to your computer. See ["Data synchronization"](#) on page 108.

The report generator function in R&S InstrumentView allows you to create measurement reports for the full measurement set or a selection of dataset only. You can also perform simple tasks like activating or deactivating markers that have been set during the measurement.

1. Select the "Report Generator" menu item in the R&S InstrumentView
The R&S InstrumentView opens the "Report Generator" dialog box that provides all functionality to manage measurement sets.
2. Select the measurement sets that you want to include in the report.
3. Select the reporting parameters checkmarks that you want to show in the report, e.g. checkmark to show marker data.
4. Select the "Generate" button to create the report.

For more information on the report generator function, see the R&S InstrumentView user manual.

7 Cable and Antenna Test Mode

The cable and antenna test (CAT) mode provides functionality to measure cables and antennas of transmission equipment in wireless telecommunication systems.

In a perfect system, the signal would arrive at the antenna without any losses and be transmitted with the required power and frequency. In reality, however, you can encounter many possible mechanical defects in the system that cause a deterioration of the transmission quality. See [Figure 7-1](#) for the typical defects in a transmission system.

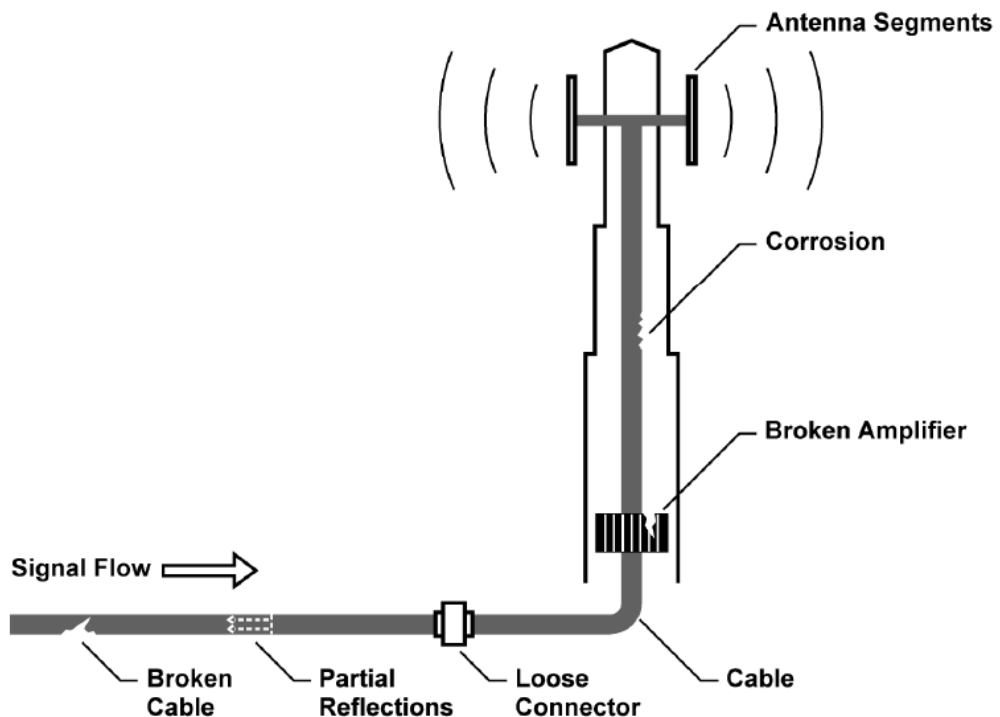


Figure 7-1: Typical defects in a transmission system

The R&S Cable Rider ZPH provides the necessary functionality to test the system equipment for its characteristics and identify faults when it is being installed or maintained.

- [Retrun Loss Measurements](#)
- [SWR](#)
- [Distance to Fault Measurements](#)
- [1-Port Cable Loss Measurements](#)
- [Transmission Measurements](#)
- [Smith Chart](#)
- [Phase Measurement](#)

Test setup



Signal Source

For model .02, an internal fixed signal source at -10 dBm is available.

For model .12, a tracking generator is available. See [Chapter 7.2.4, "Configuring the Tracking Generator"](#), on page 152.

A typical test setup to test cables and antennas includes the R&S Cable Rider ZPH, an RF cable (R&S FSH-Z320, order number 1309.6600.00), a calibration standard (R&S FSH-Z28/Z29, order number 1300.7810.03 / 1300.7610.03 or R&S ZN-Z103 order number 3586.9392.00) and the cable under test. See [Chapter 7.1.7.2, "Calibration Methods"](#), on page 138.

Cable and antenna tests also require a signal source which is already part of the R&S Cable Rider ZPH hardware. The signal source transmits a reference signal to the test port.

1. Connect the RF cable to the RF input.
2. Connect the test cable to the RF cable.
3. For measurement on DUTs that need an external voltage supply (e.g. power amplifiers), you can use the internal DC bias which is only available with model .12.
Select the "DC Bias" softkey.
The R&S Cable Rider ZPH opens an input field to specify the DC bias voltage.
4. Enter the desire voltage.
For more information, see ["Configuring the BIAS output port"](#) on page 40.

By default, the R&S Cable Rider ZPH is in the CAT mode after you have turned it on. To switch to the CAT mode from another operating mode, proceed as follows.

1. Press the [MODE] key.
2. Select the "Antenna & Cable" softkey.
The R&S Cable Rider ZPH starts the antenna and cable test (CAT) mode.

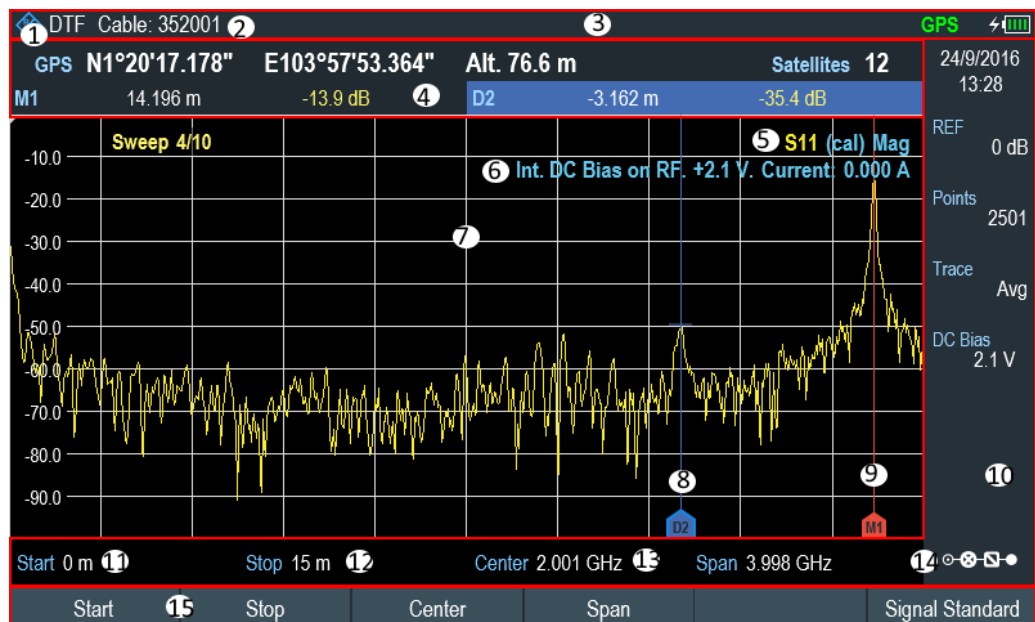


Figure 7-2: Screen layout of cable and antenna test mode

- 1 = Measurement type
- 2 = Cable model
- 3 = Title bar
- 4 = Measurement result view
- 5 = Calibration status line: (S-matrix, calibration status, measurement format)
- 6 = Internal DC bias status: (connector type, voltage, current)
- 7 = Measurement trace window
- 8 = Delta marker
- 9 = Marker
- 10 = Parameter view
- 11 = Cable start length
- 12 = Cable stop length
- 13 = Cable frequency information
- 14 = Config Overview
- 15 = CAT softkey menu

- [Performing Cable and Antenna Measurements](#)..... 128
- [Configuring Cable and Antenna Tests](#)..... 143
- [Analyzing Measurement Results](#)..... 155

7.1 Performing Cable and Antenna Measurements

In order to get an idea about the problems in a transmission system that is as accurate as possible, the R&S Cable Rider ZPH features several measurements. Each measurement shows a different aspect of the cable characteristics.

- [Reflection Measurements](#)..... 129
- [Distance to Fault Measurements](#)..... 130
- [1-Port Cable Loss Measurement](#)..... 132
- [Transmission Measurements](#)..... 133

• Smith Chart	134
• Phase Measurement	136
• Calibrating Measurements	137

7.1.1 Reflection Measurements

The reflection measurement (S11) is a good way to get an idea if the transmission system works properly. If unusual amounts of signal power are being reflected, you can guess that there is something wrong in the system.

A reference signal is transmitted along the transmission system, and this signal is reflected back by a discontinuity along the transmission line, usually by an impedance mismatch. This reflected signal is measured and compared with the reference signal to determine the loss of power.

The reflection measurement can be performed in the following measurement formats:

- **Magnitude (return loss in dB)**
Return loss is power loss in dB, measured over the specified frequency range of the transmission system. The return loss is the default measurement mode in R&S Cable Rider ZPH.
- **SWR**
The standing wave ratio, SWR provides the ratio of the maximum and minimum AC voltages along the transmission line caused by the reflections.

1. Press the [MEAS] key
2. Select the "SWR" or "Return Loss" softkey.
The R&S Cable Rider ZPH starts the reflection measurement over its entire frequency range with the selected measurement format.

Figure 7-3 shows an example of a reflection measurement in magnitude and SWR format without any major faults in the cable or the antenna.

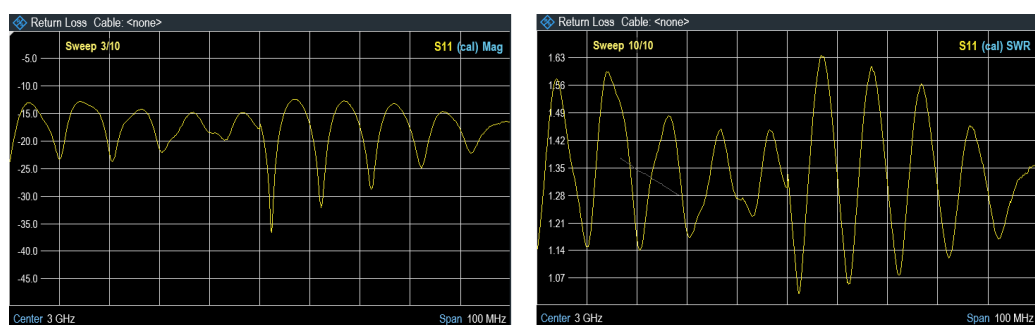


Figure 7-3: Reflection measurement

You can perform reflection measurements on the complete system or on individual components of the system. If you measure while two or more system components are connected, the results of the reflection measurement are an aggregate over these components. Therefore you can only see the aggregated magnitude of the reflected power in a specified frequency range.

To draw conclusions about which component is affected and to determine the location of the fault, you need to perform further analysis using other measurements.

7.1.2 Distance to Fault Measurements

The distance to fault (DTF) measurement determines the exact location of possible faults in a transmission system. If you connect the end of the cable to the R&S Cable Rider ZPH, the DTF measurement shows you the exact distance to the fault (in meter or feet), regardless by what the fault is caused. In addition, the measurement shows the degree of the fault in dB. From this information, you can determine the component that has the fault and its seriousness.

In order to determine the distance to a cable fault, the R&S Cable Rider ZPH measures the reflections of the cable under test in the frequency domain. The R&S Cable Rider ZPH first determines the magnitude of the reflections for a particular frequency by comparing the phase of the reflected signal and a reference signal created by the signal source. It then performs an inverse fast fourier transformation (IFFT) on the signal that has been received. In combination with the characteristics of the cable model, the R&S Cable Rider ZPH is able to determine the distance the reflections have been traveling.

Because of its sensitivity by first measuring in the frequency domain and subsequent IFFT, the measurement is able to locate faults in a cable accurately. To keep this accuracy, the R&S Cable Rider ZPH also accounts for any attenuation that occurs over distance in a cable.

If you are measuring the cable only, make sure to terminate the other end into a load.

The DTF measurement can be performed in the following measurement formats:

- Magnitude (return loss in dB)
- SWR

1. Press the [MEAS] key.

2. Select the "DTF" softkey.

The R&S Cable Rider ZPH displays the submenu to select the measurement format.

3. Select "Return Loss" or "SWR".

The R&S Cable Rider ZPH calculates the distance to cable faults.

Figure 7-4 shows an example of a DTF measurement in magnitude and SWR measurement format. The peaks that the trace shows at the marker positions are possible faults. Depending on the distance, you can also get an idea of the component that is defective.

Marker 1, M1 for example, shows a defect in the cable. Marker 2, M2 shows a fault at the end of the cable, probably a bad or loose connection.

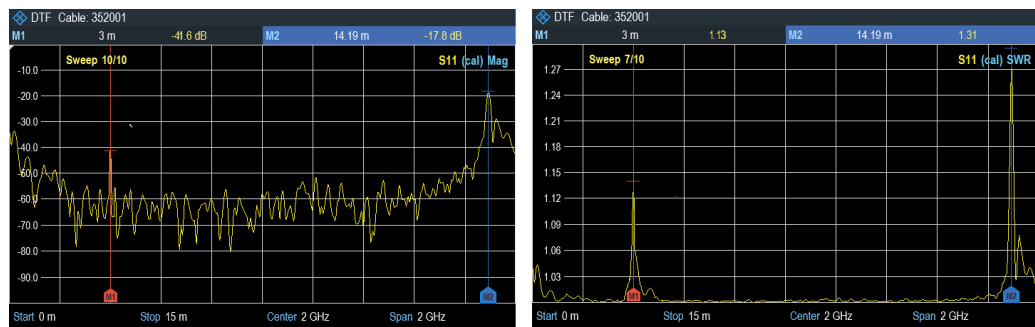


Figure 7-4: Distance to fault measurement

Split screen

Using split screen, you can display the DTF measurement in both time and frequency domain. The main DTF measurement is displayed in the upper screen window (time domain) and the reflection measurement is displayed in the lower screen window (frequency domain). The Y-axis on both screen window depends on the selected measurement format (Magnitude or SWR) in DTF measurement.

The marker and limit line controls are independent for each screen window. The markers or limit lines shown in the [Measurement result result](#) are measurement performed by the selected screen window. See [Figure 7-5](#).

1. Press the [MEAS] key.
2. Select the "DTF" softkey.
The R&S Cable Rider ZPH displays the submenu to select the measurement format.
3. Enable the checkbox for "Split Screen" menu item.
The R&S Cable Rider ZPH displays the DTF measurement in the top screen window and the reflection measurement in the bottom screen window.
4. Tap on the desire trace window to select the screen window.
The selected screen window is highlighted with a blue frame around the screen window. Alternatively, you can select the trace to identify the screen window.
5. Press [TRACE] key.
6. Select the "Select Trace" softkey to toggle between the screen window.
The selected screen window is highlighted with a blue frame around the screen window.

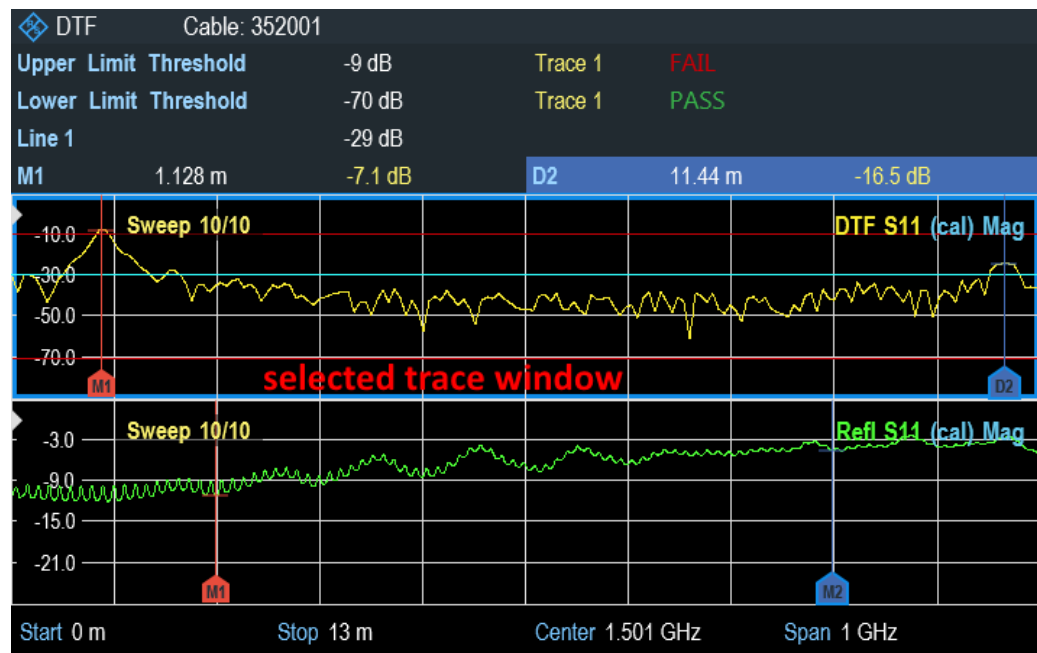


Figure 7-5: Split screen for DTF measurement

7.1.3 1-Port Cable Loss Measurement



(Short + Open) / 2 measurement format

When the (Short + Open) / 2 format is selected, additional calibration steps are required to terminate the end of the cable under test with a short and open before the cable loss measurement is performed.



(Short + Open) / 2

Please connect a "SHORT" to the end of the cable under test.

The cable loss measurement evaluates the power attenuation of a cable over a specified frequency range in dB. The amount of power that gets absorbed depends on the frequency and length of the cable.

The 1-port cable loss measurement can be performed in the following measurement format:

- Normal
- (Short + Open) / 2

1. Press the [MEAS] key.
2. Select the "Cable Loss" softkey.

The R&S Cable Rider ZPH displays a submenu to select measurement format.

3. Select "Normal" or "(Short + Open) / 2" menu item.

The R&S Cable Rider ZPH evaluates the cable loss over its entire frequency (span) in dB.

The numerical result is the average cable loss over the specified span. [Figure 7-6](#) shows the typical results of a cable loss measurement with a steadily declining loss over the selected frequency range and several maximums and minimums.

By default, the R&S Cable Rider ZPH evaluates the cable loss over its entire frequency range (full span of the R&S Cable Rider ZPH). When you reduce the span, make sure to define a span that is appropriate for the measurement, especially for high center frequencies, and consider the cable length and the wavelength of the selected center frequency. For a typical cable loss trace, you should select a span that is large enough to evaluate at least one peak and one minimum. Otherwise, the result might not be valid.

If the cable loss is constant over a large span (for example in case of low center frequencies), you can select any span.

However, if the cable loss is greater than 20 dB, you are better off using the (Transmission) S21 measurement, because the cable loss measurement might yield invalid results.

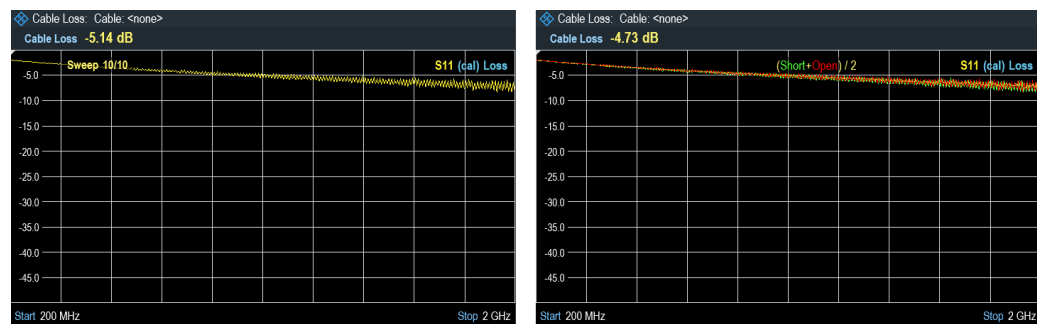


Figure 7-6: 1-port cable loss measurement

7.1.4 Transmission Measurements



Transmission measurement (S21) is only available with model .12.


You can use transmission measurement to test if a radio signal can travel through the line without losses. This type of forward transmission measurement helps to find faults by displaying the magnitude of the reflections in dB in a specified frequency range.

Typically you perform transmission measurements on a filter to test if it works according to the datasheet or test the isolation of two antennas (e.g. two receiving antennas or a receiving and a transmitting antenna).

For more information on the test setup and settings, see [Chapter 4.6, "Measuring Transmissions"](#), on page 74.

1. Press the [MEAS] key.
2. Select the "Transmission" softkey.
The R&S Cable Rider ZPH start the forward transmission measurement over its entire frequency range.


Shows the results of a transmission measurement on a lowpass filter. The results show that the characteristics of how the filter performs.

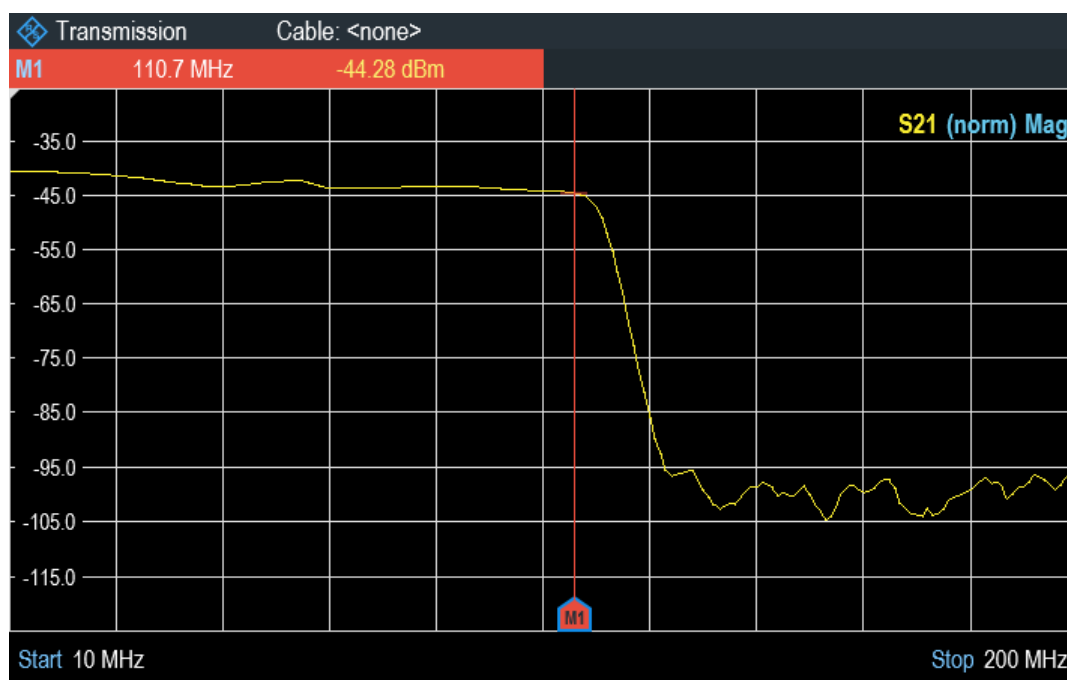

7.1.5 Smith Chart

The smith chart is a circular diagram that primarily shows the impedance or reflection characteristics of a DUT.

1. Press the [MEAS] key.
2. Select the "Smith" softkey.
The R&S Cable Rider ZPH shows the reflection of the DUT in smith chart.

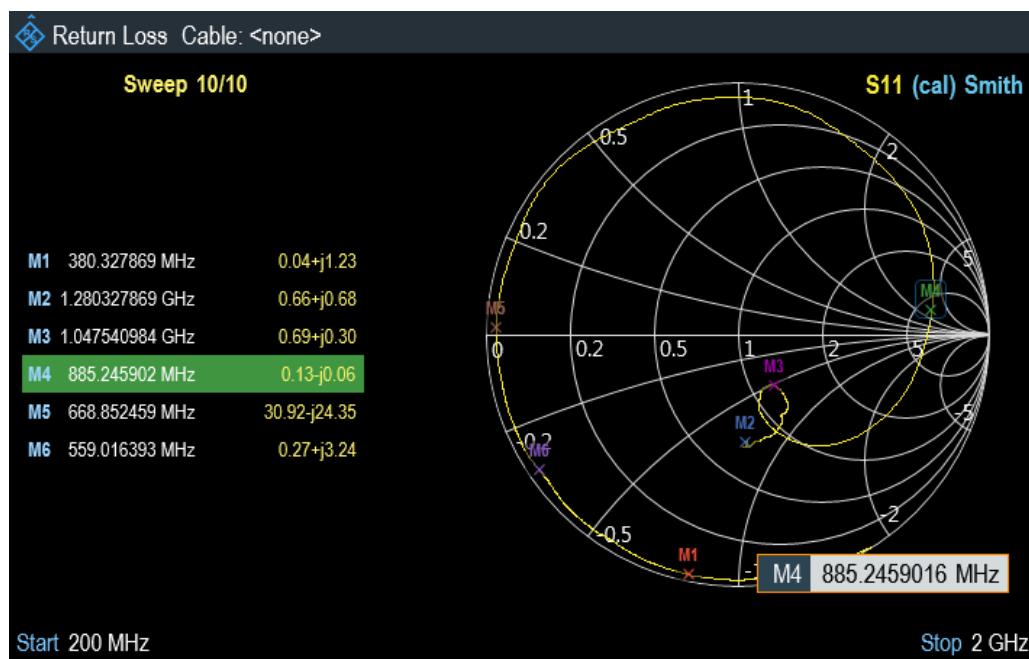

Using markers

In addition to the standard marker functionality, the smith chart also features several marker output formats.

Marker output format	Descriptions
"dB Magnitude + Phase"	Shows the magnitude (in dB) and the phase at the current marker position.
"Lin Magnitude + Phase (Rho)"	Shows the converted magnitude (in %) and the phase (in rho) at the current marker position.
"Real + Imag (Rho)"	Shows the real and imaginary components at the current marker position.
"R + jX"	Shows the real and imaginary components of the impedance at the marker position. The imaginary component is converted to inductance or capacitance. Marker frequency and sign are taken into account.
"G + jB"	Shows the real and imaginary components of the admittance at the marker position. The imaginary component is converted to inductance or capacitance. Marker frequency and sign are taken into account.
"(R + jX) / Z0"	Shows the real and imaginary components of the standardized impedance.
"(G + jB) / Y0"	Shows the real and imaginary components of the standardized admittance.

- Press the [MARKER] key.
The R&S Cable Rider ZPH activates a marker and opens the marker softkey menu. Like usual traces, you can move the marker around with the rotary knob or enter a specific marker position.

By default, the marker position is specified by the marker frequency and complex resistance in Ω . The complex resistance in that case is calculated according to : (real component) + j (imaginary component).

1. Select the "Marker Mode" softkey.
The R&S Cable Rider ZPH displays the marker mode submenu.
2. Select the marker format that you require.
The R&S Cable Rider ZPH adjusts the marker information accordingly.
See ["Using markers"](#) on page 135.

Selecting the reference impedance

The default reference impedance (the matching point in the center of the smith chart) is 50 Ω . It is, however, also possible to perform reflection measurements on networks with another impedance.

1. Press the [MARKER] key.
2. Select the "Marker Mode" softkey.
The R&S Cable Rider ZPH displays the marker mode submenu.
3. Select the "Ref Impedance" menu item.
The R&S Cable Rider ZPH opens an input field to select the reference impedance.
4. Enter the reference impedance you require.
The value is from 1 m Ω to 10 k Ω .

7.1.6 Phase Measurement


The phase measurement shows the phase characteristics of the DUT in degrees. The diagram is a Cartesian diagram with a linear vertical axis. The horizontal axis represents the measured frequency range.

In the default state, the R&S Cable Rider ZPH shows the phase only from -200° to +200°. In that case, the R&S Cable Rider ZPH displays measurement results correctly only if the phase difference between two adjacent test points is less than 180°.

You can unwrap the phase to expand the range of the phase.

1. Press the [MEAS] key.
2. Select the "Phase" softkey.
The R&S Cable Rider ZPH performs the phase measurement of the DUT.
3. Select the "Wrap" or "Unwrap" softkey.
4. Select the "Others" softkey to access the settings for "Electrical Length", "Elect Length Offset" and "Auto Length".
 - "Electrical Length" - Enable or disable the check box to display the electrical length of the DUT.

- "Elect Length Offset" - Offset length is used in compensation of the phase shift of S11.
- "Auto Length" - Take the "Electrical Length" and apply it as an "Elect Length Offset", i.e. if the "Elect Length Offset" is zero, the current "Electrical Length" value is added to the "Elect Length Offset" value.

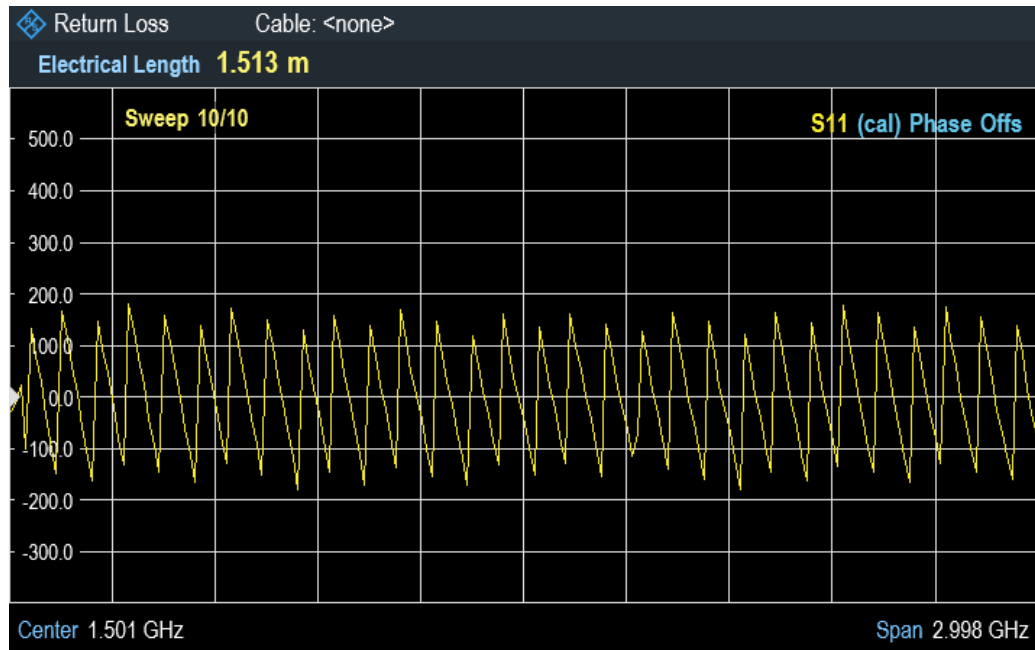

7.1.7 Calibrating Measurements

In its default state, the R&S Cable Rider ZPH uses factory calibration. Factory calibration is a full 1-port calibration over the current frequency range (i.e. span) of the R&S Cable Rider ZPH. When factory calibration is active, the status line reads (dcal). In many cases, this calibration already provides accurate results.

To get the best and most accurate results, you have to calibrate the measurement. The R&S Cable Rider ZPH provides several calibration methods. You will need one of the available calibration standards R&S FSH-Z28 / Z29 (order number: 1300.7810.03 / 1300.7610.03) or [calibration kit](#), R&S ZN-Z103 (order number: 3586.9392.00).

To successfully calibrate the test setup, you have to connect the calibration standard at the reference plane, usually the output of the RF measurement cable.

Calibration is performed over the R&S Cable Rider ZPH entire frequency range (full span). This full span calibration eliminates the need for recalibration when you change a parameter or select a different cable or DUT.

Calibration also remains valid after turning off the R&S Cable Rider ZPH or changing into another operating mode as calibration data is saved in the internal memory of the R&S Cable Rider ZPH. If you save the measurement in a dataset, calibration data is part of that dataset. When you restore the dataset and perform the same measurement

again, you do not have to recalibrate the R&S Cable Rider ZPH. See [Chapter 5.4, "Presetting the R&S Cable Rider ZPH"](#), on page 100.

7.1.7.1 Calibration States

The R&S Cable Rider ZPH features several calibration states that it displays in the status line. The possible states depend on the calibration type (see below).

- (dcal)
The calibration data uses the default calibration. The default calibration is a "Full 1-port" calibration performed in the factory during production. It is stored in the memory and can be restored after a preset or self-alignment. Default calibration can also be performed in the "Instrument Setup " dialog box. See [Chapter 4.2.10, "Performing Default Calibration"](#), on page 56.
- (cal)
The calibration data uses the user calibration. To get in this state, a "Full 1-port " or "Full 2-port" is performed. See also the [automated calibration](#).
- (norm)
The R&S Cable Rider ZPH is using normalization. To get in this state, the "Easy 1-port" or "Normalize Trans" is performed.
- (norm int)
The R&S Cable Rider ZPH interpolates the correction data between the reference points of the calibration. Interpolation is used when you change one of the frequency parameters (start, stop or center frequency). In that case, the distribution of the measurement points is different to the distribution during calibration. This could result in an increasing measurement uncertainty.

7.1.7.2 Calibration Methods



Full 2-Port calibration is only available with model .12.

The following user calibration types are available in antenna and cable test mode.

- Full 2-Port
Both RF ports are calibrated for a complete set of measurements. The calibration routine therefore requires the connection of the standards load, open and short to both test ports, and a through connection of the RF ports. The influences of the test setup and of the isolation between the RF ports are thereby determined and taken into account in the subsequent measurement of the device under test.
The "Full 2-Port" calibration is actually the combination of "Full 1-Port" + "Normalize Trans" calibration.
- Full 1-Port
RF input port is calibrated for measurements on that port. The calibration routine requires the calibration standards open, short and load to be connected one after another.
- Easy 1-Port

RF input port is calibrated for measurements on that port. The calibration procedure requires no calibration standards as the R&S Cable Rider ZPH calibrates an open connection only.

- **Normalize Trans**

Only available with model .12.

Both RF ports are calibrated for transmission measurements. The calibration routine requires only a through connection. In the subsequent measurement, the isolation between the test ports is not taken into account, a possible cross-talk between the test ports in the test setup is not eliminated.

User calibration

After a user calibration is performed, the R&S Cable Rider ZPH allows you the option to select applying user calibration (cal or norm) or factory calibration (dcal) data on the measurement.

1. For model 02. press the [CAL] key.
For model 12, press the [CAL/SPAN] key.
2. Select the "User Calibration" softkey.
Depending on the current calibration state. the R&S Cable Rider ZPH toggle between the user calibration (cal or norm) and factory calibration (dcal) state.
Note: The calibration state is displayed at the top right-hand corner on the trace window. See [Chapter 7.1.7.1, "Calibration States"](#), on page 138.

Calibration unit, R&S ZN-Z103

Equipped with the calibration kit, R&S ZN-Z103, you can perform an automatic "Full 1-Port" calibration across the entire frequency range. Unlike the manual calibration, this calibration unit performs the calibration standard open, short and load to RF input of the R&S Cable Rider ZPH without making any connection change during the calibration procedure.


Detection of the calibration kit is by means of the USB interface connection to the R&S Cable Rider ZPH. See [Figure 7-8](#).

When the calibration kit is detected, the R&S Cable Rider ZPH displayed the information in the [Figure 7-7](#).



Figure 7-7: Calibration kit information on title bar

1. For model 02. press the [CAL] key.
For model 12, press the [CAL/SPAN] key.
The R&S Cable Rider ZPH displayed the message "Calibration unit detected".

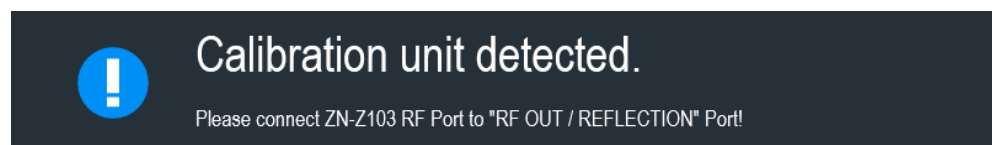

2. Connect the calibration kit, R&S ZN-Z103 to "RF OUT/ REFLECTION" port of the R&S Cable Rider ZPH.
3. Select "Continue" to start the calibration.
The R&S Cable Rider ZPH performs the full 1-port calibration for a "Short", "Open" or a "Load" connection automatically.

After completed the calibration routine, the R&S Cable Rider ZPH displayed the message "Calibration done!". The [status line](#) now shows "(Cal)" to indicate a successful calibration.

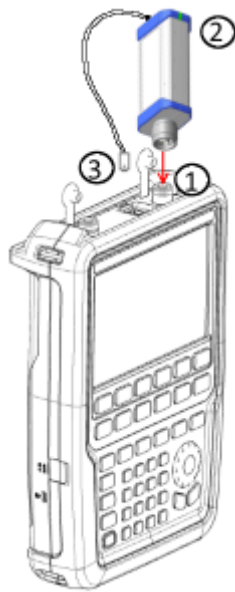


Figure 7-8: Calibration kit, R&S ZN-Z103

- 1 = RF input
- 2 = Calibration kit, R&S ZN-Z103
- 3 = USB interface of calibration kit, R&S ZN-Z103

7.1.7.3 Calibration Kit



When calibration unit, R&S ZN-Z103 is used for the calibration procedure, its calibration model will supersede the calibration kit model selected.

The calibration kit model provides the "Open", "Short", and "Load" parameters that are to be taken into consideration when performing a calibration with the corresponding calibration kit. The R&S Cable Rider ZPH supports the following calibration models:

- R&S FSH-Z28
- R&S FSH-Z29
- R&S ZCAN
- R&S ZV-Z121 Male / Female

- R&S ZV-Z132 Male / Female
 - R&S ZV-Z135 Male / Female
 - R&S ZV-Z170 Male / Female
1. For model 02. press the [CAL] key.
For model 12, press the [CAL/SPAN] key.
 2. Select the "Calibration Kits" softkey.
The R&S Cable Rider ZPH opens a file manager dialog to select the calibration kit model.
 3. Select the calibration kit model that you require.
The R&S Cable Rider ZPH loads the selected calibration kit model during the calibration procedure.

See alternative method in [Chapter 4.2.11, "Configuring Calibration Kit Model"](#), on page 57.

7.1.7.4 Performing a Full 2-Port Calibration



Cancel calibration

You can abort the calibration any time by pressing the "Cancel" softkey.



Full 1-Port calibration

"Full 1-Port" calibration is similar to "Full 2-Port" calibration, except that "THROUGH" calibration is not performed.

The procedure below shows a full 2-port calibration routine. All other calibration methods basically work the same way, except for the type and number of calibration standards you are going to need.


1. Disconnect the DUT from the RF cable.
After disconnecting the DUT, the R&S Cable Rider ZPH is ready for calibration.
2. For model 02. press [CAL] key.
For model 12, press [CAL/SPAN] key.
3. Select the "Full 2-Port" softkey.
The R&S Cable Rider ZPH prompts you to connect an "Open" to the "RF OUT / REFLECTION" port.




Calibrate OPEN

Please connect an "OPEN" to "RF OUT / REFLECTION" Port!

4. Firmly connect the "Open" of the calibration standard to the "RF OUT / REFLECTION" port.
5. Select the "Continue" softkey to start the calibration.
The R&S Cable Rider ZPH calibrates the "Open".
6. Next, the R&S Cable Rider ZPH prompts you to connect a "Short" to the "RF OUT / REFLECTION" port.
7. Disconnect the "Open" of the calibration standard. Firmly connect the "Short" of the calibration standard to the "RF OUT / REFLECTION" port.

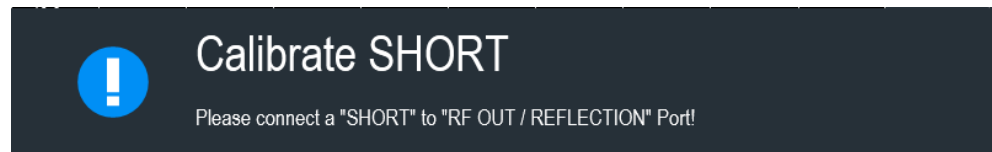


8. Select the "Continue" softkey to start the calibration.
The R&S Cable Rider ZPH calibrates the "Short".
9. Next, the R&S Cable Rider ZPH prompts you to connect a "Load" to the "RF OUT / REFLECTION" port.
10. Disconnect the "Short" of the calibration standard. Firmly connect the "Load" of the calibration standard to the "RF OUT / REFLECTION" port.

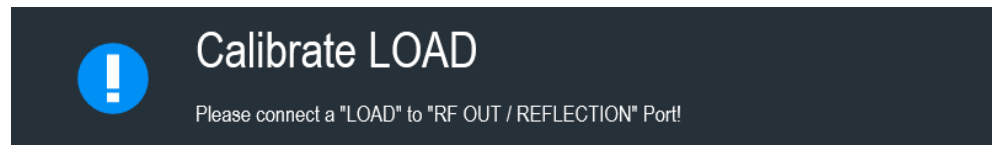

11. Select the "Continue" softkey to start the calibration.
The R&S Cable Rider ZPH calibrates the "Load".
12. Next, the R&S Cable Rider ZPH prompts you to replace the "DUT" by a "THROUGH" connection.
13. Disconnect the "LOAD" of the calibration standard. Firmly connect the "Through" connection between the RF ports.



14. Select the "Continue" softkey to start the calibration.
The R&S Cable Rider ZPH calibrates the "THROUGH".
After finishing the calibration routine, the R&S Cable Rider ZPH displayed the message "Calibration done". The [status line](#) now shows a "(Cal)" to indicate a successful calibration.

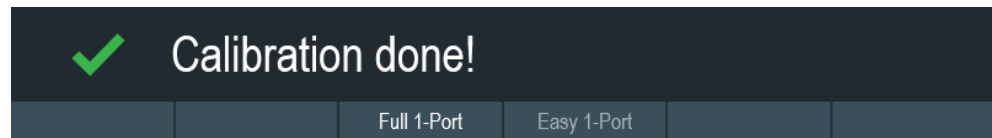

7.2 Configuring Cable and Antenna Tests

For valid measurement results, you need to specify the characteristics of the cable under test like cable model or the frequency usage range.

7.2.1 Selecting the Cable Mode


To determine the speed of propagation, and therefore the precise distance to any faults, you have to specify the cable model that you want to test.

The R&S Cable Rider ZPH already comes with an assortment of predefined cable models that you can use without doing anything. If you want to test a cable that is not listed, you can also define cable models manually, either directly on the R&S Cable Rider ZPH or with the "Cable Model Editor" of the R&S InstrumentView software package that is delivered with the R&S Cable Rider ZPH.

For more information of the "Cable Model Editor", see R&S InstrumentView user manual.

7.2.1.1 Selecting a Predefined Cable Model

1. For model .02, press the [DTF CONFIG] key.
For model .12, press the [DTF/BW] key.
2. Select the "Cable Config" softkey.
The R&S Cable Rider ZPH opens a submenu to select the cable model.
3. Select the "Cable Model" menu item.
The R&S Cable Rider ZPH opens the file manager to select a cable model.

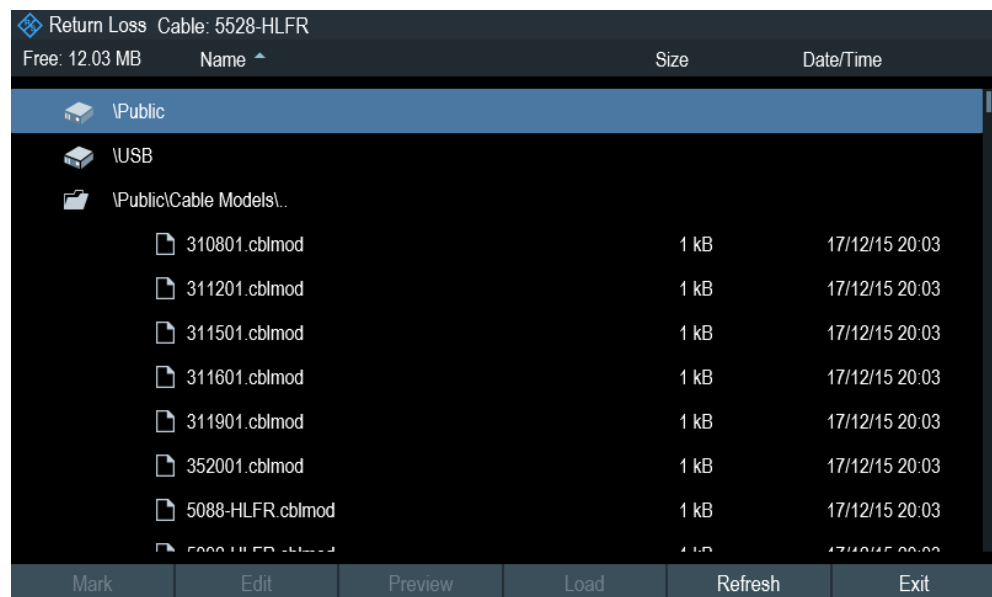

4. Select the cable mode that you are testing.
The R&S Cable Rider ZPH loads the selected cable mode. Note that the selected cable mode is also displayed in the [title bar](#).

7.2.1.2 Clear Cable Model

1. For model .02, press the [DTF CONFIG] key.
For model .12, press the [DTF/BW] key.
2. Select the "Cable Config" softkey.
The R&S Cable Rider ZPH opens a submenu to select the cable model.
3. Select the "Clear Model" softkey.
The R&S Cable Rider ZPH unload the cable model from the measurement.

7.2.1.3 Creating a Cable Model



Temporary cable model

When you change any cable parameters or load another cable model, the temporary cable model data is lost and you have to define it again if you have to perform further measurements.

The R&S Cable Rider ZPH provides two ways to define customized cable models.

The first way is to define a cable model with the "Cable Model Editor" that is part of the R&S InstrumentView software package. The R&S InstrumentView is delivered with the R&S Cable Rider ZPH. With this software, you can define a cable model on a computer and then transfer it to the instrument.

For more information, see [Chapter 5.9, "Managing Datasets"](#), on page 107.

If you do not have access to a computer, but still need a cable model that is not stored on the R&S Cable Rider ZPH, you can also define the characteristics of a cable temporarily on the R&S Cable Rider ZPH itself. It is not possible to save these cable characteristics in a dataset, they are lost when you change them or load another cable model.

1. For model .02, press the [DTF CONFIG] key.
For model .12, press the [DTF/BW] key.
2. Select the "Cable Config" softkey.
The R&S Cable Rider ZPH opens a submenu to select the cable model.
3. Select the "User Settings" menu item.
The R&S Cable Rider ZPH opens a submenu to specify the user settings for the cable model.
4. Select the "Frequency" menu item.
The R&S Cable Rider ZPH opens an input field to specify the frequency.
5. Enter the frequency of the cable you are measuring.
6. Repeat from step 3 to configure the setting for the cable velocity and cable loss.
You can now perform measurements using the temporary cable definition.
See ["Temporary cable model"](#) on page 144.

After you have defined the cable characteristics, you still have to activate the use of the customized cable.

1. Select the "Cable Config" softkey.
The R&S Cable Rider ZPH opens a submenu to select the cable model.
2. Enable the checkbox to turn on the "User Model" menu item.
The R&S Cable Rider ZPH uses the customized cable model.

7.2.1.4 Working with a DTF List



"DTF List" and "DTF Threshold" are only available in the distance to fault (DTF) measurement.

The DTF list shows the results of the distance to fault measurement in numerical form.

1. For model .02, press the [DTF CONFIG] key.
For model .12, press the [DTF/BW] key.
2. Select the "DTF List" softkey.
The R&S Cable Rider ZPH opens a table that lists the peaks it has found during the measurement.



DTF Cable: <none>

Threshold -43.0 dB

Peak ①	Distance ②	Return Loss ③
1	13.87 m	-42.78 dB
2	13.92 m	-42.11 dB
3	13.99 m	-41.73 dB
4	14.2 m	-14.11 dB
5	14.4 m	-41.83 dB
6	14.45 m	-42.13 dB
7	14.51 m	-42.10 dB

Threshold -43.00 dB

Cable Config DTF Meas Overview DTF List DTF List Threshold Exit

1 = Shows the peak the results refer to

2 = Shows the distance from the measurement plane to the peak.

3 = Shows the magnitude of the peak.

To limit the information in the list, you can define a new threshold level for the DTF list, so that only the peaks above a certain level are included in the list.

1. For model .02, press the [DTF CONFIG] key.
For model .12, press the [DTF/BW] key.
2. Select the "DTF List Threshold" softkey.
The R&S Cable Rider ZPH opens a submenu to specify the threshold in dB.
3. Enter the threshold you require.
The R&S Cable Rider ZPH now only shows the peaks that are above the level you have entered.

DTF Meas Overview

The "DTF Meas Overview" softkey displays the [Configuration Overview](#) of the DTF measurement.

For more information, see [Chapter 4.1.4.1, "Configuration Overview"](#), on page 36.

7.2.2 Configuring the Horizontal Axis

The [FREQ/DIST] key contains all necessary functions to define the frequency and distance parameters when performing cable measurements. The contents of the menu depend on the currently selected measurement.



Dedicated DTF frequency

The "Dedicated DTF Frequency" menu item defines whether the frequency (DTF Start Freq, DTF Stop Freq, DTF Center Freq, DTF Span) settings in DTF measurement are coupled to frequency (Start, Stop, Center, Span) settings in other measurements in CAT mode. When set "Off", the frequency (start, stop, span) settings are coupled across all measurements in CAT mode.

See ["Setting a dedicated DTF frequency"](#) on page 148.

7.2.2.1 Setting the Frequency Range for DTF Measurements

In the default setting, the R&S Cable Rider ZPH automatically selects a center frequency of 1 GHz and a distance of 50 m. The R&S Cable Rider ZPH optimizes the settings for the best resolution, if you change the stop distance.

If you have to keep the current frequency settings, it is best to define a manual span.

Setting the frequency span

When setting the frequency range, it is best to first set the span and then the center frequency.

There are three different span modes in the DTF measurement:

- **Manual**
Setting for span is defined manually. However, the maximum span that can be set depends on the maximum cable distance defined.
- **Auto**
The best span is automatically calculated for the best length resolution.
- **Coupled**
The frequency parameters are coupled with the [Return Loss](#) measurement, with the maximum cable distance adjusted for the best resolution. This mode is useful when you switch between the [Return Loss](#) and [DTF](#) measurements.

1. Press the [FREQ/DIST] key.
2. Select the "DTF Span" softkey.
The R&S Cable Rider ZPH opens a submenu to specify the frequency span. By default, the R&S Cable Rider ZPH automatically calculates the best span ("Auto Span") for the best length resolution. If the required span is too large for the current center frequency, the R&S Cable Rider ZPH sets the center frequency to the smallest possible frequency.
3. Select the "Manual Span" menu item.
The R&S Cable Rider ZPH opens an input field to specify the frequency span.
4. Enter the span you require.
The R&S Cable Rider ZPH sets the new span. Note that the maximum span you can set depends on the maximum cable distance you have defined and is never greater than the span calculated by the "Auto Span" function. The minimum span that you can set is 10 MHz.

Setting the displayed frequency range

After you have selected the span, you can set a particular frequency range whose results the R&S Cable Rider ZPH displays.

In the default configuration, the R&S Cable Rider ZPH adjusts the "DTF start" and "DTF stop" frequency according to the span and the center frequency. The distance from center frequency to the start and stop frequency is the same. Alternatively, you can directly set a "DTF start" and "DTF stop" frequency.

1. Press the [FREQ/DIST] key.
2. Select the "DTF Center Freq" softkey.
The R&S Cable Rider ZPH opens an input field to specify the center frequency.
3. Enter the center frequency you require.
The R&S Cable Rider ZPH adjusts the frequency range according to span and center frequency.
4. Select the "DTF Start Freq" or the "DTF Stop Freq" softkey.
The R&S Cable Rider ZPH opens an input field to specify the start frequency or stop frequency.
5. Enter the start frequency or stop frequency you require.
The R&S Cable Rider ZPH adjusts the frequency range according to your settings. Note that the distance from start to stop frequency has to be equal to the span. The R&S Cable Rider ZPH adjusts the values if you enter a frequency range that is not the same as the span.

Setting a dedicated DTF frequency

You can configure a dedicated DTF frequency to be used in the DTF measurement. With this configuration, the DTF frequency setting will remain unchanged when there is a frequency change in other measurements in the CAT mode.

1. Press the [SETUP] key.
2. Select the "User Preference" softkey.
3. Select the "Dedicated DTF Frequency" item.
A drop-down menu opens to select the dedicated DTF frequency setting.
4. Select "On" to configure a dedicated DTF frequency.
See ["Dedicated DTF frequency"](#) on page 147.

7.2.2.2 Setting the Start and Stop Distance for DTF Measurements

The start and stop distance define the scaling of the horizontal axis.

In the default setting, the horizontal axis starts at 0 m and covers the maximum or stop distance you have set. By adjusting the start and stop distance, you can zoom in to a particular section of the cable for further analysis.

1. Press the [FREQ/DIST] key.
2. Select the "Start Dist" or "Stop Dist" softkey.
The R&S Cable Rider ZPH opens an input field to specify the start distance or stop distance.
3. Enter the distance you want the display to start from and to end at.
In auto span mode, the R&S Cable Rider ZPH adjusts the frequency settings in order to get the best display resolution.
If you have set the span manually, the R&S Cable Rider ZPH zooms in to the section of the cable you have defined. The results maintain their accuracy in that case.

7.2.2.3 Setting the Frequency Range for CAT Measurements (except DTF)

If you measure the reflection, transmission or cable loss, the displayed frequency range is defined by the span, the center frequency or start and stop frequencies.

Defining the span

The span you should select depends on the frequency band you are analyzing and the frequency range you need information about.

The minimum span for both measurements is 10 Hz, the maximum span depends on the R&S Cable Rider ZPH and is either 2.998 GHz or 3.998 GHz (R&S ZPH-B4 option).

1. Press the [FREQ/DIST] key.
2. Select the "Span" softkey.
The R&S Cable Rider ZPH opens an input field to specify the frequency span.
3. Enter the span you require.
The R&S Cable Rider ZPH sets the span you have entered.

Setting the displayed frequency range


In the default configuration, the R&S Cable Rider ZPH adjusts the start and stop frequency according to the span and the center frequency, with the center frequency being in the middle of the horizontal axis. Alternatively, you can directly set the start and stop frequency.

1. Press the [FREQ/DIST] key.
2. Select the "Center" softkey.
The R&S Cable Rider ZPH opens an input field to specify the center frequency.
3. Enter the center frequency you require.
Alternatively, set the frequency range independent of span and center frequency.
4. Select the "Start" softkey and enter a start frequency
5. Select the "Stop" softkey and enter a stop frequency.

7.2.2.4 Selecting a Signal Standard for CAT Measurements (except DTF)

When you perform the reflection, cable loss, smith chart or phase measurement, the R&S Cable Rider ZPH provides several configurations for measurements on a particular signal standard. When you select one of these standards, the R&S Cable Rider ZPH loads the corresponding parameters like center frequency or span.

1. Press the [FREQ/DIST] key.
2. Select the "Signal Standard" softkey.
The R&S Cable Rider ZPH opens a submenu to select the signal standard.
3. Select either the "Select Uplink" or "Select Downlink" menu items.
The R&S Cable Rider ZPH opens the file manager to select the signal standard.
4. Select the standard you require.
The R&S Cable Rider ZPH load the settings of the standard you selected.

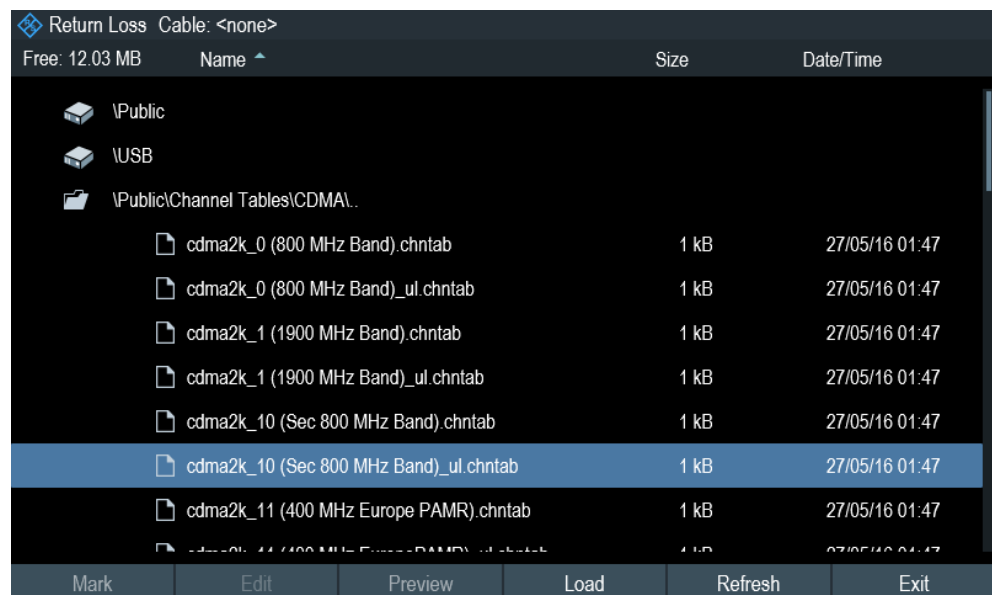

7.2.3 Configuring the Vertical Axis

The [SCALE] or [SCALE/AMPT] key contains menu on settings related to the level display.

7.2.3.1 Setting the Reference Value

The reference value defines the amplitude of the reference line. The R&S Cable Rider ZPH indicates the position of the reference value with a white triangle ▴ at the vertical axis.

When you change the reference value, the R&S Cable Rider ZPH adjusts the labels of the vertical axis. Changing the reference value results a change in the vertical position of the trace. It does not change the position of the reference line.

1. For model .02, press the [SCALE] key.
For model .12, press the [SCALE/AMPT] key.
2. Select the "REF" softkey.
The R&S Cable Rider ZPH opens an input field to specify the reference level.
3. Enter the reference level you require or move the reference level with the rotary knob.
The R&S Cable Rider ZPH sets up the display accordingly.

7.2.3.2 Defining the Display Range

The display range defines the scale of the vertical axis and therefore the amplitude between the two horizontal grid lines. The unit depends on the measurement format.

When you change the display range, you can increase or decrease the amplitude the R&S Cable Rider ZPH displays and, e.g. include signal parts that are outside the displayed screen area. The position of the reference value and the trace does not change.

1. For model .02, press the [SCALE] key.
For model .12, press the [SCALE/AMPT] key.
2. Select the "Range" softkey.
The R&S Cable Rider ZPH opens a submenu to select the range setting.
3. Select one of the menu items to select the display range that you require.

7.2.3.3 Adjusting the Vertical Axis Automatically



"100 dB Scale" is only available for S21 measurement (model .12).

The R&S Cable Rider ZPH provides an automatic scaling algorithm to optimize the results display. The R&S Cable Rider ZPH does this by determining the minimum and maximum trace values and adjust the vertical axis according to these values.

1. For model .02, press the [SCALE] key.
For model .12, press the [SCALE/AMPT] key.
2. Select the "Auto Scale" softkey.
The R&S Cable Rider ZPH performs the automatic adjustment of the vertical axis. You can also do a reset on the vertical axis by performing a full scale setting.
3. Select the "50 dB Scale" or "100 dB Scale" softkey.
Depending on the selection, the R&S Cable Rider ZPH performs the reset scaling of the vertical axis to display a full scale from 0 dB to -50 dB or 0 dB to -100 dB.

7.2.3.4 Setting the Reference Position

The reference position defines the position of the reference line in the diagram. The reference position is a linear value between "0" and "10". Each value represents one horizontal grid line of the diagram. The "0" value corresponds to the top grid line and the "10" corresponds to the bottom grid line.

When you change the reference position, the R&S Cable Rider ZPH also shifts the position of the trace by the magnitude of the reference position change. It has no effect on the reference value itself.

1. For model .02, press [SCALE] key.
For model .12, press [SCALE/AMPT] key.
2. Select the "Range" softkey.
The R&S Cable Rider ZPH opens a submenu to select the range setting.
3. Select the "Ref Position" menu item.
The R&S Cable Rider ZPH opens an input field to specify the reference position.
4. Enter the reference position you require.
The R&S Cable Rider ZPH moves the trace accordingly.

7.2.3.5 Setting the Attenuation



Attenuation setting is only available for model .12 in Transmission (S21) measurement.

The R&S Cable Rider ZPH provides functions to attenuate the signal at the RF input.

1. Press the [SCALE/AMPT] key.
2. Select the "Receiver Att" softkey.
The R&S Cable Rider ZPH opens an input field to specify the attenuation level.
3. Enter the attenuation of the signal at the RF input.
You can set an RF attenuation in the range from 0 dB to 30 dB in 5 dB steps.

7.2.4 Configuring the Tracking Generator



Tracking generator is only available for model .12.

**Tracking generator output level**

Using an output level of 0 dBm (or a receiver attenuation of 0 dB) for S12 or S21 measurements can cause an overload at the RF input. It is therefore recommended to use an output level of -10 dBm (default) or lower for these measurements. This especially applies to measurements on amplifiers.

1. Press the [SCALE/AMPT] key.
2. Select the "TG Power" softkey.
The R&S Cable Rider ZPH opens an input field to specify the output level.
3. Enter the desired output level of the signal in dBm.

7.2.5 Setting the Measurement Bandwidth



Bandwidth setting is only available with model .12 in Transmission (S21) measurement.

The measurement bandwidth determines the noise figure of the receiver. Small bandwidths result in higher measurement dynamics for S21 measurements. However, small bandwidths cause longer measurement times because of the settling time of the filter.

Possible bandwidths are between 10 Hz and 1 MHz in a 1-3 sequence.

1. Press the [DTF/BW] key.
In its default state, the R&S Cable Rider ZPH selects the bandwidth automatically ("Auto Bandwidth"). In that state, the bandwidth is coupled to the span.
The default setting is a compromise between measurement speed and good performance.
2. Press the "Bandwidth" softkey.
The R&S Cable Rider ZPH opens a submenu to select the bandwidth setting.
3. Select the "Manual Bandwidth".
The R&S Cable Rider ZPH opens an input field to specify the resolution bandwidth ("RBW") setting.
4. Enter the measurement bandwidth you require.
As an indicator that the "RBW" is no longer coupled to the span, the R&S Cable Rider ZPH displays a blue dot in front of the "RBW" item in the hardware settings.

7.2.6 Setting the Measurement Sweep

The [SWEEP] key provides menu to control the response on how the measurement results are presented.

7.2.6.1 Selecting the Sweep Mode

The sweep mode is the way the R&S Cable Rider ZPH performs the measurement.

In its default state, the R&S Cable Rider ZPH measures continuously. In this mode, the R&S Cable Rider ZPH automatically repeats the sweep in the defined range of the horizontal axis and updates the trace accordingly after it has finished with one sweep.

Single sweep mode performs the sweep in the defined span once, then the R&S Cable Rider ZPH goes into an idle state. If the trace averaging is set, the R&S Cable Rider ZPH performs the sweep a certain number of times (depending on the number of averages you have set) over the defined span and then stops measuring.

1. Press the [SWEEP] key.
2. Select the "Single Sweep" or "Continuous Sweep" softkey.
The R&S Cable Rider ZPH performs the sweep respectively.

For more information on trace setting, see [Chapter 7.3.1, "Working with Traces"](#), on page 155.

7.2.6.2 Changing the Number of Measurement Points

The number of (measurement) points defines the number of measurements performed during a sweep. Thus, it indirectly sets the frequencies of those measurements. The distance from one measurement point to the next depends on the currently set frequency range (span divided by number of points). However, the measurement points are spread evenly over the selected frequency range.

The number of points also defines the resolution and, therefore, the accuracy of the measurement and affects the measurement time. In the default state, the R&S Cable Rider ZPH evaluates 201 measurement points. This number allows for fast measurement times and sufficient accuracy. For measurements with a higher or lower frequency resolution, you can change the number of measurement points. Note that measurement times increase if you set a higher number of measurement points.

1. Press the [SWEEP] key.
2. Select the "Points" softkey.
The R&S Cable Rider ZPH opens an input field to specify the number of measurement points. Up to 2501 measurement points is possible for measurement.
3. Enter the number of measurement points you require.
The R&S Cable Rider ZPH sets the number of measurement points used for the measurement.

7.2.6.3 Measurements Hold

The R&S Cable Rider ZPH provides a hold function that stops the display update and leaves room for further analysis of the measurement results.

1. Press the [SWEEP] key.
2. Select the "Hold" softkey.
The R&S Cable Rider ZPH interrupt the display update.
To resume the display update, select the "Hold" softkey again.

7.3 Analyzing Measurement Results

7.3.1 Working with Traces

The R&S Cable Rider ZPH provides several trace modes. The trace mode defines the way the R&S Cable Rider ZPH writes the trace.

For more information on the sweep mode, see [Chapter 7.2.6.1, "Selecting the Sweep Mode"](#), on page 154.

There are two ways how the R&S Cable Rider ZPH write the trace:

- **Clear/Write**
This is the default trace mode. In this mode, the trace is overwritten after each sweep.
- **Average**
In this mode, the trace is the result of the moving average over several sweeps. You can define the number of sweeps to be (moving) averaged.

1. Press the [TRACE] key.
2. Select the "Trace Mode" softkey.
The R&S Cable Rider ZPH opens a submenu to select the trace mode.
3. Select the "Clear/Write" or "Average" menu item.

7.3.1.1 Working with Memory Traces

The R&S Cable Rider ZPH can transfer a trace to the trace memory and also display the current trace and the trace in the trace memory for comparison. The saved trace is always displayed in a lighter yellow to distinguish it from the current trace. See [Figure 7-9](#).

1. Press the [TRACE] key.
2. Select the "Trace ►Memory" softkey.
The R&S Cable Rider ZPH transfers the trace to the trace memory.
3. Select the "Show Memory" softkey.
The R&S Cable Rider ZPH displays the saved trace in lighter yellow.

You can remove the memory trace by pressing the "Show Memory" softkey again.

The memory traces are bit-mapped into the picture memory. Therefore, when the memory trace is recalled, it will not be adapted to any modifications of the reference level or span that may have been made in the meantime.

When you load a dataset, the R&S Cable Rider ZPH stores the corresponding trace in the trace memory. You can view that trace with the "Show Memory" softkey.

7.3.1.2 Using Trace Mathematics

Trace mathematics subtract the memory trace from the live trace and vice versa and then display the results. After you transfer a trace to the trace memory, you can perform the trace mathematics function.

1. Press the [TRACE] key.
2. Select the "Trace Math" softkey.
The R&S Cable Rider ZPH opens a submenu to select the trace math operation.
3. Select the "Trace-Memory" or "Memory-Trace" menu item.
The R&S Cable Rider ZPH calculates and shows the resulting trace.
4. To turn off trace mathematics, select the "Off" menu item.

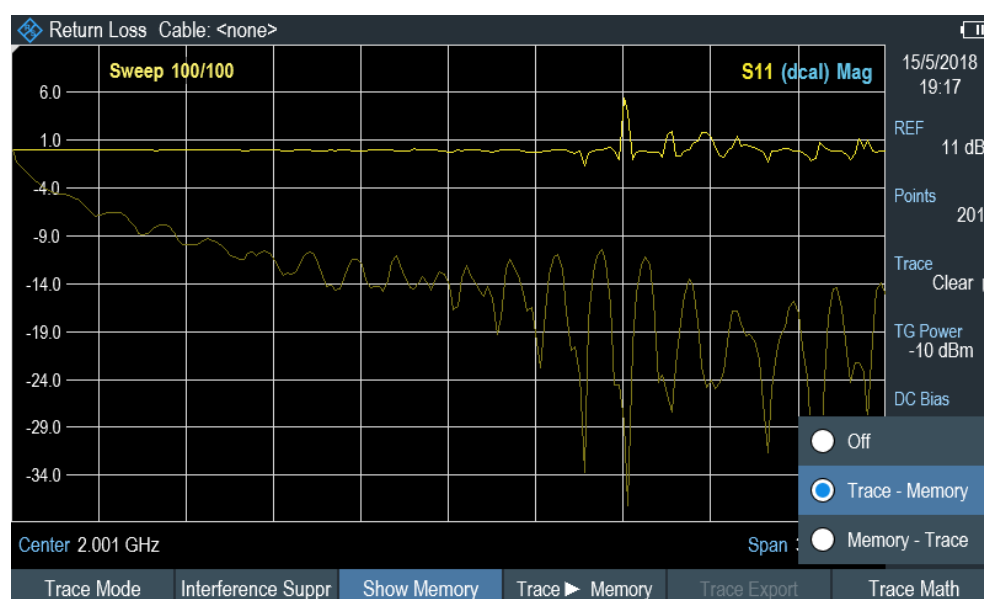


Figure 7-9: Trace memory

7.3.1.3 Using Trace Export

Stores the trace data to a file. The trace data is exported to either a *.csv or *.slp file formats.

1. Press the [TRACE] key.
2. Select the "Trace Export" softkey.

The R&S Cable Rider ZPH opens the file manager to save the trace data.

3. Specify the filename for the trace data in the "Save As" entry field.
4. Press the rotary knob to save the file.
The R&S Cable Rider ZPH saves the trace data.

7.3.2 Using Markers

The [Measurement Result View](#) shows the horizontal position of all markers and the corresponding vertical value.

You can select any marker in the [Measurement Result View](#) for further marker function using the marker softkey menu.

7.3.2.1 Using Markers and Deltamarkers

The R&S Cable Rider ZPH has six markers, five of which can be used as either markers or delta markers.

The markers cannot leave the trace and indicate the horizontal and vertical coordinates of the point they are positioned on. The horizontal position of a marker is shown by a vertical line which extends from the top to the bottom of the measurement diagram. The marker list above the diagram area shows the exact coordinates of all markers in use.

When measuring the distance-to-fault, the horizontal unit is meter or feet. For all other measurements the horizontal axis is the frequency axis. The unit of the vertical axis is dB for distance-to-fault and cable loss measurements and dBm for all others.

The position of a delta marker is indicated by a dashed line to distinguish it from a normal marker. The delta marker level is always a relative to the main marker level and so the delta marker level unit is always dB. The delta marker frequency is always relative to the main marker – in other words, the delta marker frequency is the frequency difference between the frequency at the point marked by the main marker and the frequency at the point marked by the delta marker.

To measure complex signals, you can activate up to six markers. Marker 1 is always a normal marker and the reference of all delta markers. Markers 2 to 6 are either markers or delta markers depending on your setup.

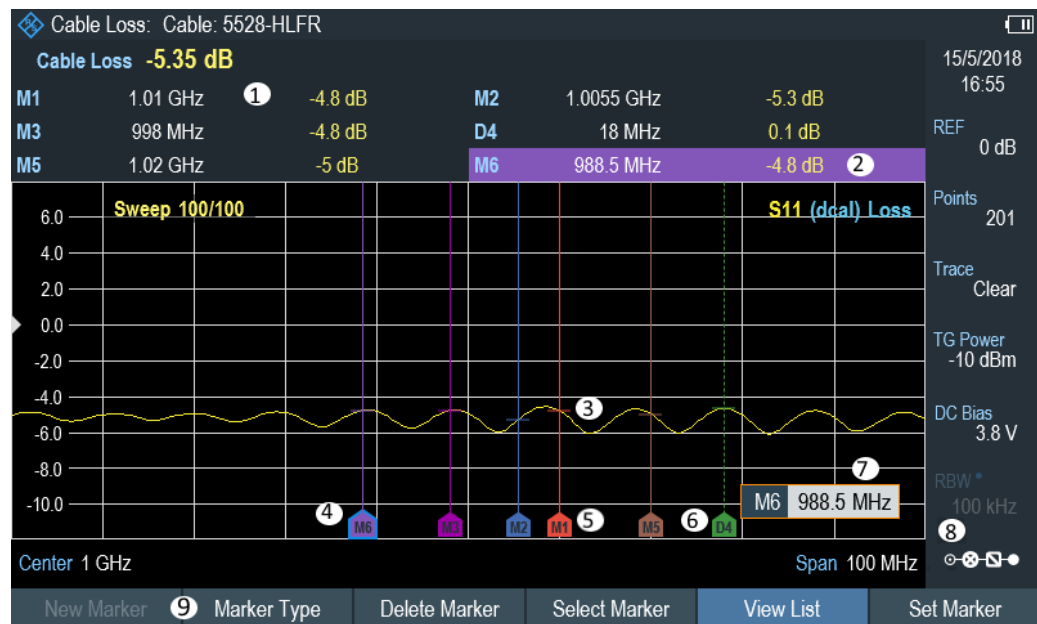


Figure 7-10: Screen layout with active markers

- 1 = Measurement Result View
- 2 = Marker (solid line)
- 3 = Delta marker (dotted line)
- 4 = Active marker label (see highlighted line on the marker list as well as the marker label)
- 5 = Marker label: M(x)
- 6 = Delta marker label: D(x)
- 7 = Marker input field
- 8 = Marker menu
- 9 = Parameter View

Positioning Markers



Special touchscreen gesture

Double tap on the touchscreen to position new marker on the trace window. The first marker that is positioned on the trace window is always the main marker, the following markers added on the trace window are the delta markers.

Tab and drag on the marker icon to change the marker position.

See [Chapter 5.1.4, "Add Marker"](#), on page 91 and [Chapter 5.1.5, "Move Marker"](#), on page 91.

1. Press the [MARKER] key.
If no marker has been activated, the R&S Cable Rider ZPH automatically activates the main marker and positions it on the maximum level that has been measured. In addition, the marker frequency input field opens.
You can perform the following actions:
 - Tab and drag on the marker icon to change the marker position.
 - Position the marker with the rotary knob

When positioning the marker with the rotary knob, the step size is one pixel.

- Enter a marker position with the number keys and confirm the entry with one of the unit keys.
2. Confirm the marker position by pressing the rotary knob.
The marker input field closes.

Positioning a Delta Marker

When a normal marker is already in use, you can add delta markers.



Special touchscreen gesture

Double tap on the touchscreen to position the delta marker on the trace window.

See [Chapter 5.1.4, "Add Marker"](#), on page 91.

1. Press the [MARKER] key.
2. Select the "New Marker" softkey.
The R&S Cable Rider ZPH activates a delta marker and positions it on the next maximum level that has been measured. In addition, the delta marker input field opens.
The R&S Cable Rider ZPH adds the delta marker to the marker list and shows the marker position relative to the normal marker (M1).
You can perform the following actions:
 - Enter a delta marker position with the number keys and confirm the entry with one of the unit keys.
 - Change the delta marker position with the rotary knob.
3. Confirm the delta marker position by pressing the rotary knob.
The delta marker input field closes.
4. To add more markers, press the "New Marker" softkey several times until you have the number of markers you want in the display.

Selecting the Marker Type

When you add new markers, they are delta markers by default. Their coordinates are relative to the first marker (M1). You can turn delta markers into normal markers if you need absolute information about the marker position.

1. Press the [MARKER] key.
2. Select the delta marker you want to convert in the [Measurement Result View](#).
Alternatively, select the "Select Marker" softkey to select the delta marker you want to convert.
3. Select the "Marker Type" softkey.
The delta marker turns into a normal marker. Its label changes accordingly (e.g. D2 to M2) and its coordinates are now absolute values.

Automatic Positioning of Markers

The R&S Cable Rider ZPH offers functions that make setting the markers easier or allow to make instrument settings on the basis of the current marker position:

1. Press the [MARKER] key.
2. Select the affected marker in the [Measurement Result View](#).
Alternatively, select the "Select Marker" softkey to select the affected marker.
3. Select the "Set Marker" softkey.
The R&S Cable Rider ZPH opens a submenu to select the marker automatic positioning settings.
4. Select the marker automatic position that you require.
The R&S Cable Rider ZPH positions the marker accordingly.

The R&S Cable Rider ZPH provides the following selections for automatic positioning of markers:

- "Set To Peak"
The peak function places the active marker or the delta marker on the highest level value of the trace.
- "Set To Next Peak"
The Next Peak function places the active marker or delta marker on the next highest level value of the trace, relative to its current position.
- "Set To Minimum"
The minimum function places the active marker or delta marker on the lowest value of the trace.
- "All Marker To Peak"
This function place all the active markers to the peak values of the trace.
- "Search Range"
See ["Using Marker Search Limits"](#) on page 161.

Removing Markers

Remove markers any time you want from the trace window.

Removing selected markers



Deactivating markers

If you delete main marker ("M1"), all delta markers that are relative to that marker are also deleted.

1. Select the marker you want to delete in the [Measurement Result View](#).
Alternatively, select the "Select Marker" softkey to select the marker you want to delete.
2. Select the "Delete Marker" softkey.
The R&S Cable Rider ZPH opens a submenu to select the marker deletion.

3. Select the "Delete Selected" menu item.
The R&S Cable Rider ZPH deletes the marker.

Removing delta markers only

1. Press the [MARKER] key.
2. Select the "Delete Marker" softkey.
The R&S Cable Rider ZPH opens a submenu to select the marker deletion.
3. Select the "Delete All Delta" menu item.
The R&S Cable Rider ZPH deletes all delta markers.

Removing all markers at the same time.



Special touchscreen gesture

Draw an "X" on the trace window to delete all markers and delta markers on the trace window.

See [Chapter 5.1.6, "Delete All Markers"](#), on page 92.


1. Press the [MARKER] key.
2. Select the "Delete Marker" softkey.
The R&S Cable Rider ZPH opens a submenu to select the marker deletion.
3. Select the "Delete All" menu item.
The R&S Cable Rider ZPH deletes all markers and delta markers.

Using Marker Search Limits

The R&S Cable Rider ZPH allows you to use only a limited section of the trace for the marker automatic positioning functions. See ["Automatic Positioning of Markers"](#) on page 160. The R&S Cable Rider ZPH provides setting to define two search range limits.

1. Press the [MARKER] key.
2. Select the "Set Marker" softkey.
The R&S Cable Rider ZPH opens a submenu to select the marker positioning.
3. Select the "Search Range" menu item.
The R&S Cable Rider ZPH opens the marker search limits softkey menu.
4. Select "Search Range 1" or "Search Range 2" softkey to define the two search range limit respectively.
The R&S Cable Rider ZPH opens a submenu to define the lower and upper limit of the search range.
5. Select the "Lower Limit" menu item.
The R&S Cable Rider ZPH opens an input field to define the lower limit
6. Enter the limit you require.

7. Confirm the entry with one of the unit keys.
If the span is wide enough, the R&S Cable Rider ZPH displays a blue and green line to indicate the limit line for "Search Range 1" and "Search Range 2" respectively. By default, the search limit range is over the whole span.

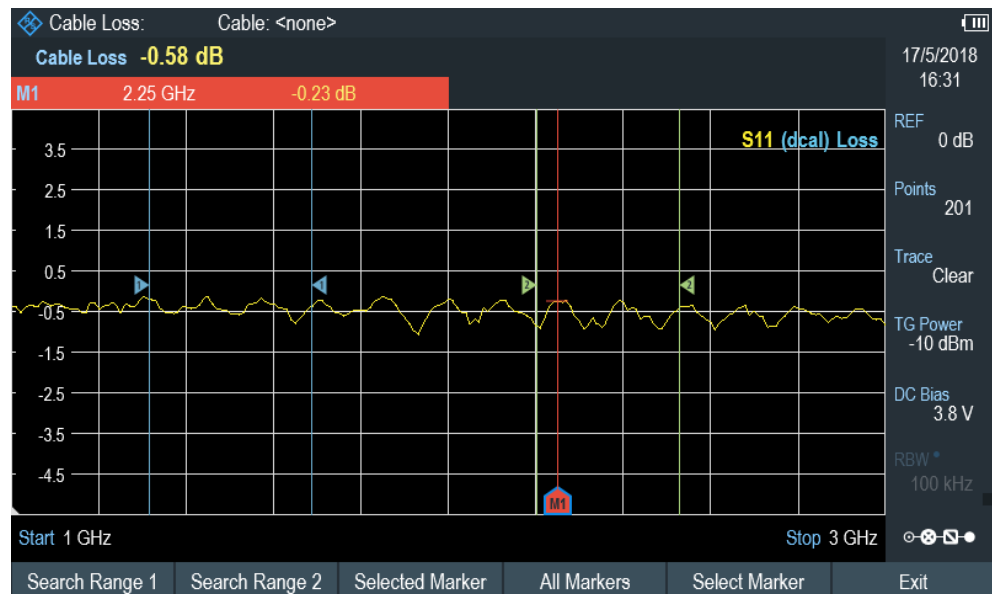

8. Define the "Upper Limit" menu item the same way.
9. Select the marker you want to apply the search limit range in [Measurement Result View](#).
Alternatively, select the "Select Marker" softkey.
10. Select the "Selected Marker" softkey.
The R&S Cable Rider ZPH opens the submenu to select the search range menu items.
11. Select "Search Range 1" or "Search Range 2" menu item.
The R&S Cable Rider ZPH activates the selected search range limit of the selected marker.

Deactivating marker search limits

1. Press the "Selected Marker" softkey.
The R&S Cable Rider ZPH opens the submenu to select the search range menu items.
2. Select the "Search Range Off" menu item.
The R&S Cable Rider ZPH turns off the marker search limit function for the selected marker.
3. To turn off the marker search limits function for all markers, select "All Markers" softkey and repeat the above steps

View List

You can hide or un-hide the display of the [Measurement Result View](#).



Special touchscreen gesture

Swipe up or down vertically on the [Measurement Result View](#) to hide or unhide the marker list.

See [Chapter 5.1.7, "Hide or Unhide Measurement Result View Display"](#), on page 92.

1. Press the [MARKER] key.
2. Select the "View List" softkey.
The R&S Cable Rider ZPH hide or un-hide the [Measurement Result View](#), depending on its original state.

7.3.3 Using Display Line

Like markers, display line helps you to determine the level of the signal.

A display line is a blue straight line that runs horizontally and corresponds to a certain level value. You can move the display line to each pixel in the display. This means that the accuracy and exact vertical position of the display line depends on the resolution of the vertical axis.

With a display range of 100 dB, for example, each pixel corresponds to 0.3 dB. In that case, the accuracy of the display line is 0.3 dB. If you enter a value with a higher resolution, the R&S Cable Rider ZPH rounds that value. See [Figure 4-1](#).

You can also move the display line with the rotary knob. The step size for movement with the rotary knob is one pixel.

1. Press the [LINES] key.
2. Select the "Display Line" softkey.
The R&S Cable Rider ZPH displays the display line as a blue horizontal line. It shows the vertical position of the line in a table above the diagram area.
When you activate the display line, the R&S Cable Rider ZPH also opens an input field to define the vertical position of the line.
3. Enter the level value you need.
The R&S Cable Rider ZPH positions the display line accordingly.
Alternatively, you can also move the display line with the rotary knob.

7.3.4 Using Limit Lines

Limit lines help you to identify if a signal complies with certain level characteristics.

A limit line is made up out of two or more points that are connected to a line. Each of the points that define the shape of the limit line consists of two coordinates. One coordinate defines the horizontal position (e.g. frequency), the other one the vertical posi-

tion. With the R&S Cable Rider ZPH, you can build limit lines that consist of up to 1000 points.

Values that define the horizontal characteristics of the limit line can be either absolute values (e.g. frequency in MHz) or relative values whose reference is the center of the measurement trace (e.g. the center frequency). Relative values are of advantage if you, for example, measure modulated output signals and you change the center frequency but need the limit line to remain the same. Absolute limit lines have the file extension ".abslim" while relative limit lines have the file extension ".rellim"

Values that define the vertical characteristics are always level values in dB. If the scaling of the vertical axis is currently a linear one (units V or W), the R&S Cable Rider ZPH automatically switches to a logarithmic scaling after you turn on the limit line.

After turning on a limit line, the R&S Cable Rider ZPH checks if the signal violates the shape of the limit line. If one or more signal levels exceed the limit value, the R&S Cable Rider ZPH features several indicators that the limit check has failed.

- A general message in the diagram header that indicates if the signal violates the limit line, including the trace that violates the limit: **Trace 1 FAIL**
- An audio signal that sounds every time a limit is violated

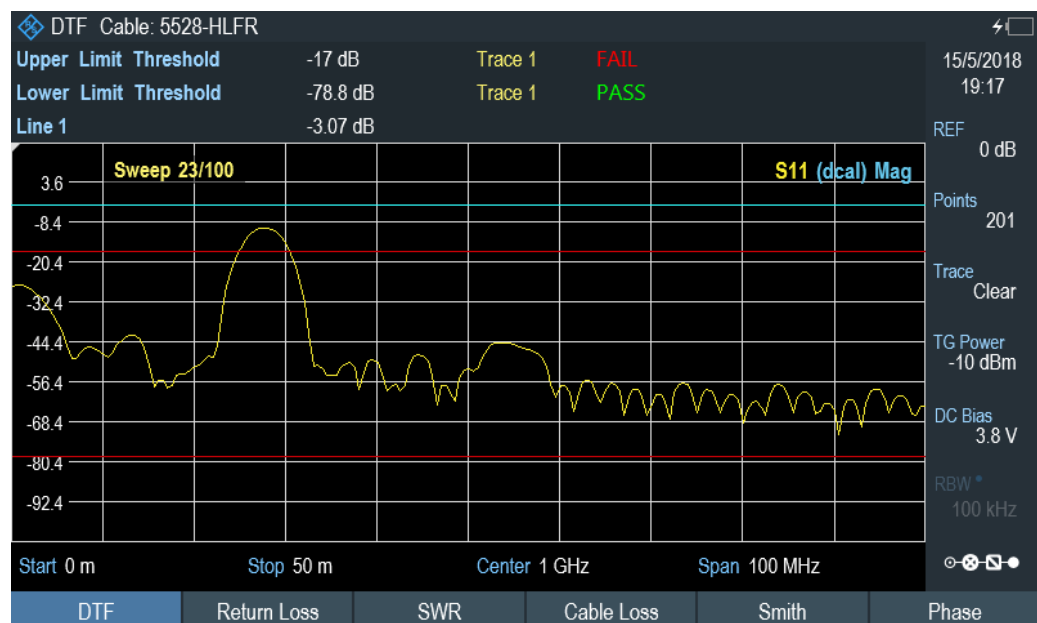


Figure 7-11: Upper and lower Limit Lines

You can create and edit limit lines with the R&S InstrumentView software and then transfer them into the internal memory of the R&S Cable Rider ZPH. The number of limit lines you can store in the memory depends on other datasets available on the R&S Cable Rider ZPH or if you are using an external storage device (e.g. memory stick).

For more information on limit lines, see [Chapter 5.9, "Managing Datasets"](#), on page 107.

7.3.4.1 Selecting a Limit Line

Before selecting a limit line, you need to decide if you want to use it as an upper or lower limit line. In case of upper limit lines, the R&S Cable Rider ZPH checks if the signal is above the limit line. In case of lower limit lines, the R&S Cable Rider ZPH checks if the signal is below the limit line.

You also have to make sure that the limit line is compatible to the scale of the horizontal axis.

1. Press the [LINES] key.
2. Depending on the application, press the "Upper Limit" or "Lower Limit" softkey.
3. Select the "Load From File" menu item.
The R&S Cable Rider ZPH opens the file manager to select the limit line.
4. Select one of the available limit lines.
5. Press the "Load" softkey.
The R&S Cable Rider ZPH activates the limit line. In the diagram, the limit line is displayed as a red line. See [Figure 7-11](#).
If you have already selected a limit line, you can turn the limit line on and off with the "Show Limit Lines" softkey.

Alternatively, you can define a threshold that works like a limit line. A threshold is a simple horizontal limit line.

1. Press the "Upper Limit" or "Lower Limit" softkey.
2. Select the "Set Threshold" menu item.
The R&S Cable Rider ZPH opens an input field to define the threshold.
3. Enter the threshold you require.
The R&S Cable Rider ZPH displays the line and performs a limit check for that threshold.



Threshold line and display line

Like the display line, a threshold line is a straight horizontal line. The difference is that the R&S Cable Rider ZPH performs a limit check for threshold lines, but not for display lines.

A failed limit check may be an issue if you want to create a measurement report, because measurements with failed limits are not included in this report.

Using a display line, you can use a line and are able to create a measurement report at the same time, regardless if any limits have been violated or not.

The process of turning off a limit line completely is similar to that of selecting a line.

1. Press the "Show Limit Lines"
The R&S Cable Rider ZPH hides the limit line.

2. To remove the limit lines, select the "Upper Limit" or "Lower Limit" softkey.
3. Select the "Remove" softkey.
The R&S Cable Rider ZPH removes the limit line.

7.3.4.2 Performing Limit Checks



Limit violation

Note that a limit check fails only if the signal exceeds the limit line. If the signal level is the same as the limit value, the limit check passes.

If limit lines are active, the R&S Cable Rider ZPH automatically checks the trace for limit violations after each frequency sweep. As long as the signal does not violate the limit line, the R&S Cable Rider ZPH shows a "Pass" message in the measurement diagram. When one single value (i.e. one pixel) is outside of the limits, the R&S Cable Rider ZPH displays a "Fail" message in the diagram area and, in addition, sounds a beep.

A limit check relates only to the frequency range defined by the limit line, not the span.

Audio signal

You can turn the acoustic signal that sounds in case of a limit violation on and off.

- Select the "Audio Beep" menu item.
Once selected, the audio beep is active, the R&S Cable Rider ZPH beeps each time a limit is violated.

8 Spectrum Analyzer Mode



R&S Cable Rider ZPH option

R&S ZPH-K1 (order number 1334.5604.02) option is required to operate the R&S Cable Rider ZPH in the spectrum analyzer mode.

This mode is only available with model .12.



Equipped with R&S ZPH-K1, the R&S Cable Rider ZPH provides you the capacity to perform spectrum measurement. This measurement mode provides the functionality to perform measurements in the frequency domain, e.g. to identify the power of signals.

1. Press the [MODE] key.
2. Select the "Spectrum Analyzer" softkey.
The R&S Cable Rider ZPH opens a submenu to select the measurement mode.
3. Select the "Spectrum" menu item.
The R&S Cable Rider ZPH switches to the spectrum measurement mode.

- [Performing Spectrum Measurements](#)..... 167
- [Configuring Spectrum Measurements](#).....210
- [Working with Channel Tables](#).....248
- [Using Transducer Factors](#).....249

8.1 Performing Spectrum Measurements



In addition to basic spectrum measurements, the R&S Cable Rider ZPH provides several specific measurements. These measurements, also in combination with one of the available accessories, allow you to perform advanced and more complex measurement tasks.

8.1.1 Measuring Basic Signal Characteristics

Basic spectrum measurements determine the spectrum of a signal in the frequency domain or keep track of a signal in the time domain. They provide a basic overview of the input signal characteristics.

Frequency domain

In the frequency domain, the R&S Cable Rider ZPH analyzes the input signal characteristics over a particular span. You can use it, for example, to obtain basic measurement results like peak levels and the shape of the spectrum.

The horizontal axis shows the frequency, the vertical axis shows the signal levels.

The measurement in the frequency domain is the default measurement mode.

Time domain

In the time domain, the R&S Cable Rider ZPH analyzes the characteristics of a signal at a particular frequency over time. The span during time domain measurements is zero (zero span mode). You can use time domain measurements, for example to monitor the characteristics of a signal.

The horizontal axis shows the time, the vertical axis shows the signal levels.

To perform a time domain measurement, you have to set the span to zero manually.

8.1.2 Measuring the Channel Power of Continuously Modulated Signals

The channel power measurement selectively measures the power of modulated signals. Unlike a power meter that performs measurements over its entire frequency range, the channel power measurement measures the power of a specific transmission channel. Other signals in the frequency spectrum do not show in the results.

When measuring the spectrum within a channel, the R&S Cable Rider ZPH uses a resolution bandwidth that is small compared to the channel bandwidth. It then determines the total power of the channel by integrating the results on the trace. The R&S Cable Rider ZPH takes the following parameters into account:

- display mode (absolute or relative)
- detector
- resolution bandwidth

That means that you can compare the result to the result that would have been obtained from a thermal power meter. The small resolution bandwidth acts like a narrow channel filter and so prevents out-of-channel emissions from affecting the result.

1. Press the [MEAS] key.
2. Select the "Meas Mode" key.
The R&S Cable Rider ZPH opens a submenu to select the measurement mode.
3. Select the "Channel Power" menu item.
The R&S Cable Rider ZPH starts to measure the channel power.
4. By default, the 3GPP WCDMA standard is active. Two vertical lines show the channel bandwidth.

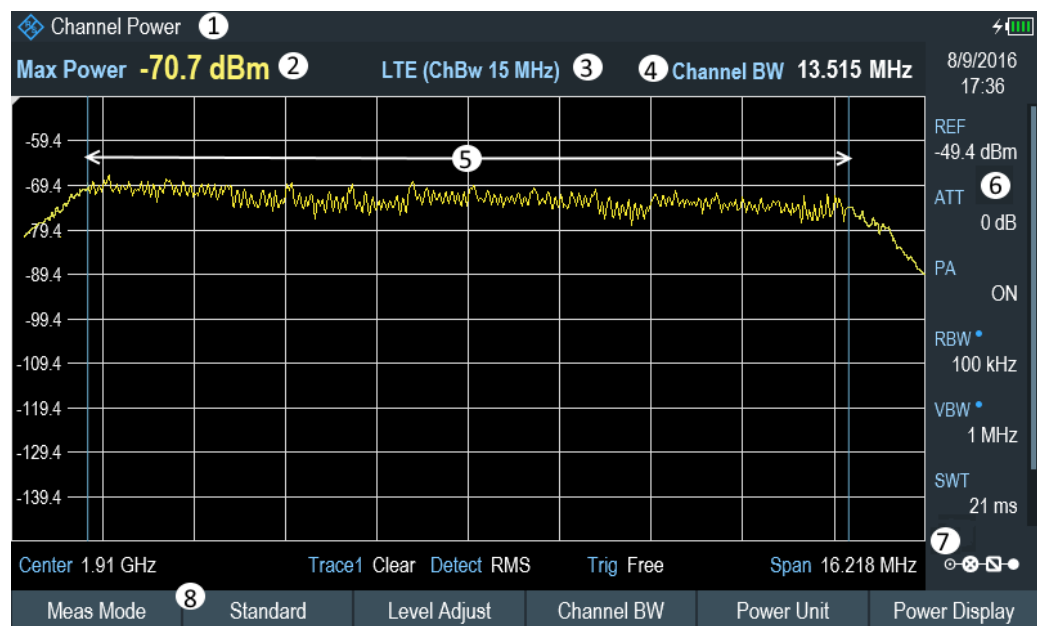


Figure 8-1: Screen layout for channel power measurements

- 1 = Measurement mode
- 2 = Channel power numerical
- 3 = Measurement standard
- 4 = Channel bandwidth
- 5 = Channel bandwidth graphical (blue lines)
- 6 = [Parameter view](#)
- 7 = [Config Overview](#)
- 8 = Channel power measurement softkey menu

8.1.2.1 Selecting the Standard

If you need to perform measurements that are conformed to a telecommunications standard, you can activate one of the predefined standards that are already stored in the R&S Cable Rider ZPH memory. However, you can create new configurations to perform measurements on other standards as well.

1. Press the [MEAS] key.
2. Select the "Standard" softkey.
The R&S Cable Rider ZPH opens a file manager dialog box to select the standard.
3. Select one of the available standards.
The R&S Cable Rider ZPH loads the configuration of the selected standard. It automatically sets the optimal span, resolution bandwidth, video bandwidth, sweep time and detector for the standard.

You can create and edit standards with the R&S InstrumentView software and transfer them to the R&S Cable Rider ZPH via the USB or the LAN interface. The number of standards the R&S Cable Rider ZPH can store in its memory depends on the number of other data sets stored on the R&S Cable Rider ZPH.

For more information, see [Chapter 5.9, "Managing Datasets"](#), on page 107.

8.1.2.2 Setting the Reference Level

The reference level is the power level that the R&S Cable Rider ZPH expects at the RF input. When selecting the reference level, make sure that you do not overload the R&S Cable Rider ZPH by applying a signal whose power exceeds the maximum reference level.

As the power is measured with a small resolution bandwidth compared to the signal bandwidth, it is still possible to overload the R&S Cable Rider ZPH, even if the trace is within the measurement diagram. To prevent an overload, perform the measurement with the largest resolution bandwidth possible using the peak detector. If you set these parameters, it is not possible for the trace to exceed the reference level.

To simplify operation and to prevent incorrect measurements, the R&S Cable Rider ZPH has an automatic routine for setting the reference level.

1. Press the [MEAS] key.

2. Select the "Level Adjust" softkey.

The R&S Cable Rider ZPH performs a measurement to determine the optimal reference level.

It uses a resolution bandwidth of 3 MHz, a video bandwidth of 3 MHz and the peak detector. After finishing the automatic measurement, the R&S Cable Rider ZPH sets the optimal reference level.



Adjusting level for measurement.

8.1.2.3 Setting the Channel Bandwidth

The channel bandwidth specifies the frequency range around the center frequency, over which the R&S Cable Rider ZPH performs the power measurement.

1. Press the [MEAS] key.

2. Select the "Channel BW" softkey.

The R&S Cable Rider ZPH opens an input field to specify the channel bandwidth.

3. Enter the channel bandwidth you required.

The R&S Cable Rider ZPH sets the appropriate span for the channel bandwidth that you have entered (span = 1.2 x channel bandwidth). This ensures that no incorrect channel power measurements are made.

The minimum channel bandwidth that you can set is 833 Hz at a span of 1 kHz.

8.1.2.4 Changing the Span

Usually, the span the R&S Cable Rider ZPH sets yields optimal results. But sometimes you also need to see the spectrum outside the current span to detect other signal components that you need to include in the measurement. Therefore, you can adjust the span to up to 10 times the channel bandwidth and hence still be able to see the spectrum outside the measurement channel.

1. Press the [CAL/SPAN] key.
2. Select the "Manual Span" softkey.
The R&S Cable Rider ZPH opens an input field to define the span manually.
3. Enter the span you need.
The largest possible span for the channel power measurement is ten times the channel bandwidth. At larger spans, the result of the channel power measurement would be increasingly imprecise, because too few points of the trace would be in the channel you are measuring.

8.1.2.5 Measuring the Maximum Channel Power

If signal levels fluctuate significantly, you can define the maximum channel power with the "Max Hold" function.

1. Press the [MEAS] key.
2. Select the "Power Display" softkey.
The R&S Cable Rider ZPH opens a submenu to select channel power measurement mode.
3. Select the "Max Hold" menu item.
The power display (see item 2 of [Figure 8-1](#)) switches from [Power] to "Max Power".
If you want to deactivate the "Max Hold" function and return to the normal power display, activate "Clear/Write".
4. To deactivate the "Max Hold" function, press the "Power Display" softkey.
5. Select the "Clear/Write" menu item.
The power display returns to "Power" display.

8.1.2.6 Unit for Power Display

The R&S Cable Rider ZPH can apply different units to the power output. The default unit is dBm.

1. Press the [MEAS] key.
2. Select the "Power Unit" softkey.
The R&S Cable Rider ZPH opens a submenu to select the power unit.

3. Select the unit you require from the submenu.
The R&S Cable Rider ZPH displays the power level in the selected unit.

8.1.3 Measuring the Occupied Bandwidth

The proper operation of a transmission network requires that all transmitters adhere to the bandwidths assigned to them. The occupied bandwidth is defined as the bandwidth that contains a specified percentage of the entire power of the transmitter.

Numerous standards require an occupied bandwidth of 99 which is also the default setting. If you need another percentage for the occupied bandwidth, you can set values from 10 % to 99.9 %.

After entering the channel bandwidth, the R&S Cable Rider ZPH automatically selects the measurement parameters so that you can attain the best result.

1. Press the [MEAS] key.
2. Select the "Meas Mode" softkey.
3. The R&S Cable Rider ZPH opens a submenu to select the measurement mode.
4. Select the "Occupied BW" menu item.
The R&S Cable Rider ZPH starts to measure the occupied bandwidth.
Two vertical lines show the occupied bandwidth.

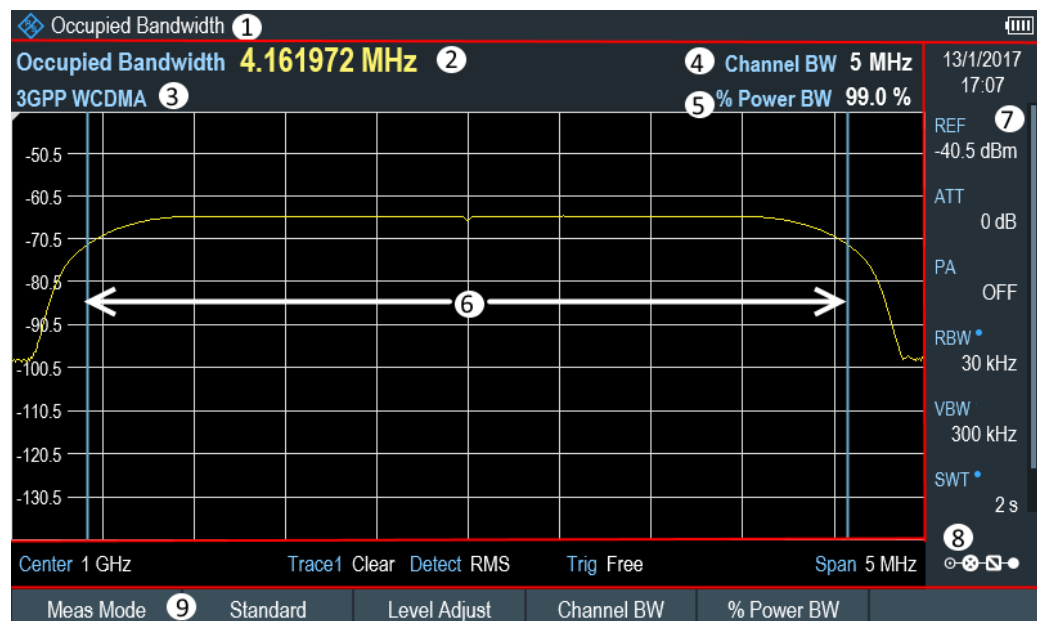


Figure 8-2: Screen layout for the occupied bandwidth

- 1 = Occupied bandwidth measurement mode
- 2 = Occupied bandwidth numerical
- 3 = Measurement standard
- 4 = Channel bandwidth
- 5 = Power percentage

- 6 = Occupied bandwidth graphical (blue lines)
- 7 = [Parameter view](#)
- 8 = [Configuration overview](#)
- 9 = Occupied bandwidth measurement softkey menu

8.1.3.1 Selecting a Standard

If you need to perform measurements that are conformed to a telecommunications standard, you can activate one of the predefined standards that are already stored in the R&S Cable Rider ZPH memory. However, you can also use the R&S InstrumentView to create new configurations to perform measurements on other standards as well. For more information on creating new configurations, see "Using Standards" in the R&S InstrumentView.

1. Press the [MEAS] key.
2. Select the "Standard" softkey.
The R&S Cable Rider ZPH opens the "File Manager" dialog to select the standard.
3. Select one of the available standards.
4. Confirm the selection with the "Load" softkey.
The R&S Cable Rider ZPH loads the configuration of the selected standard. It automatically sets the optimal span, resolution bandwidth, video bandwidth, sweep time and detector for the standard.

You can create and edit standards with the R&S InstrumentView and transfer them to the R&S Cable Rider ZPH via the USB or the LAN interface. The number of standards the R&S Cable Rider ZPH can store in its memory depends on the number of other data sets stored on the R&S Cable Rider ZPH.

For more information, see the [Chapter 5.9, "Managing Datasets"](#), on page 107.

If you make changes to the settings or create datasets, note that:

- The span is always coupled to the channel bandwidth. Changes to either of those automatically adjust the other (= 5 x channel bandwidth).
- The resolution bandwidth should be between 1 % and 4 % of the channel bandwidth. This ensures that the occupied bandwidth is measured with high accuracy.
- The video bandwidth must be at least three times the resolution bandwidth. This prevents incorrect results due to the compression of signal peaks by the video filter.
- You use the RMS detector if possible. This ensures that the power measurement is always correct irrespective of the waveform being investigated.
- The sweep time must be set so that the result is stable. If you increase the sweep time, the R&S Cable Rider ZPH also increases the integration time for the RMS detector and thus ensures more stable measured values.

8.1.3.2 Setting the Reference Level

The reference level is the power level that the R&S Cable Rider ZPH expects at the RF input. When selecting the reference level, make sure that you do not overload the R&S Cable Rider ZPH by applying a signal whose power exceeds the maximum reference level.

As the power is measured with a small resolution bandwidth compared to the signal bandwidth, it is still possible to overload the R&S Cable Rider ZPH, even if the trace is within the measurement diagram.

To prevent an overload, perform the measurement with the largest resolution bandwidth possible using the peak detector. If you set these parameters, it is not possible for the trace to exceed the reference level.

To simplify operation and to prevent incorrect measurements, the R&S Cable Rider ZPH has an automatic routine for setting the reference level.

1. Press the [MEAS] key.
2. Select the "Level Adjust" softkey.
The R&S Cable Rider ZPH performs a measurement to determine the ideal reference level.
It uses a resolution bandwidth of 1 MHz, a video bandwidth of 1 MHz and the peak detector. After finishing the automatic measurement, the R&S Cable Rider ZPH sets the ideal reference level.

8.1.3.3 Setting the Channel Bandwidth

The channel bandwidth specifies the frequency range around the center frequency, over which the R&S Cable Rider ZPH performs the power measurement.

1. Press the [MEAS] key.
2. Select the "Channel BW" softkey.
The R&S Cable Rider ZPH opens an input field to define the channel bandwidth.
3. Enter the channel bandwidth you need.
The R&S Cable Rider ZPH sets the appropriate span for the channel bandwidth that you have entered (span = 5 x channel bandwidth). This ensures that no incorrect channel power measurements are made.
The minimum channel bandwidth that you can set is 2 kHz at a span of 1 kHz.

8.1.3.4 Defining the Percentage of Occupied Bandwidth

By default, the power percentage inside the occupied bandwidth is 99 %, a number most standards require. If you measure standards that specify another power percentage you can change that value.

1. Press the [MEAS] key.

2. Select the "% Power BW" softkey.
The R&S Cable Rider ZPH opens an input field to define the power percentage.
3. Enter the power percentage you need.
The value you enter here is the power percentage that has to be inside the channel bandwidth relative to the power over the total span (the percentage of the total power).
The R&S Cable Rider ZPH now displays the occupied bandwidth graphically in the trace window and numerically above the trace window.

8.1.3.5 Changing the Span

The span that the R&S Cable Rider ZPH usually sets yields optimal results. But sometimes you also need to see the spectrum outside the current span to detect other signal components that you need to include in the measurement. Therefore, you can adjust the span to up to ten times the channel bandwidth and still be able to see the spectrum outside the measurement channel.

1. Press the [CAL/SPAN] key.
In the default configuration, "Auto Span" is active. The R&S Cable Rider ZPH automatically sets the optimal span for the channel power measurement.
2. Select the "Manual Span" softkey.
The R&S Cable Rider ZPH opens an input field to define the span manually.
3. Enter the span you need.
The largest possible span for the channel power measurement is ten times the channel bandwidth. At larger spans, the result of the channel power measurement would be increasingly imprecise, because too few points of the trace occur in the channel to be measured.
4. Select the "Auto Span" softkey.
The R&S Cable Rider ZPH again calculates the span automatically.

8.1.4 Power Measurements on TDMA Signals

When TDMA (time division multiple access) methods are used, e.g. for GSM, several users share a channel. Each user is assigned a period of time or timeslot. With the TDMA power measurement, you can determine the power over one of the timeslots allocated to the user.

The TDMA power measurement is a measurement in the time domain (span = 0 Hz). You can start it on an external or video trigger and specify the power measurement time.

To prevent incorrect power measurements in the time domain, make sure that the whole signal is within the selected resolution bandwidth. If the resolution bandwidth is too small, the displayed power will be lower than the actual power.

1. Press the [MEAS] key.

2. Select the "Meas Mode" softkey.
The R&S Cable Rider ZPH opens a submenu to select the measurement mode.
3. Select the "TDMA Power "menu item.
The R&S Cable Rider ZPH starts to measure the TDMA power.
Two vertical lines define the measurement range.

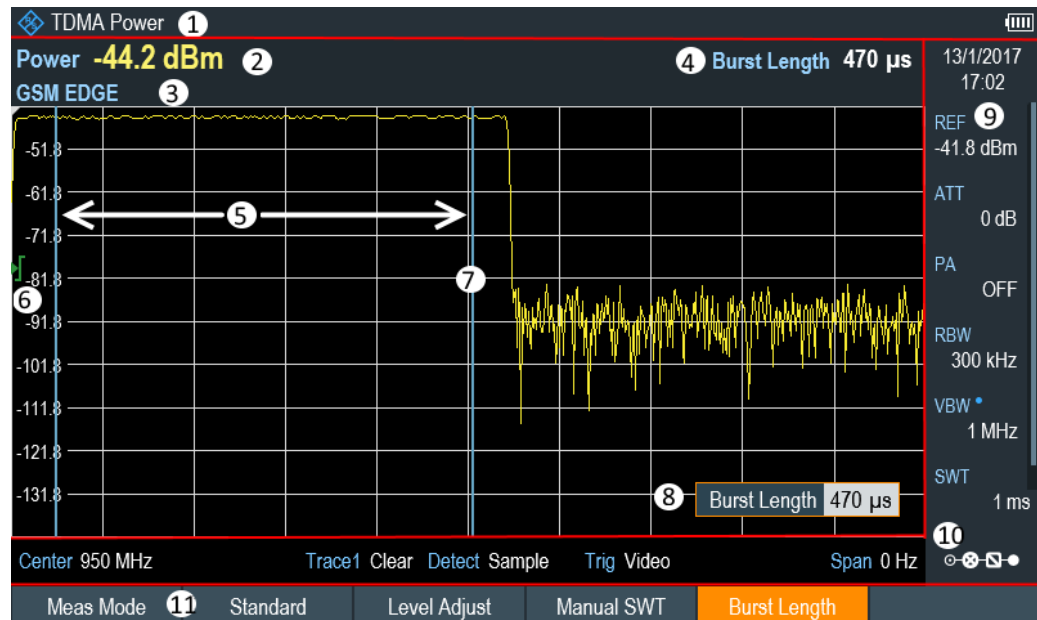


Figure 8-3: Screen layout for TDMA power measurements

- 1 = TDMA power measurements mode
- 2 = TDMA power
- 3 = Measurement standard
- 4 = Measurement time
- 5 = Measurement limits
- 6 = Trigger level
- 7 = Trigger delay
- 8 = Measurement time input entry
- 9 = [Parameter view](#)
- 10 = [Configuration overview](#)
- 11 = TDMA power measurement softkey

8.1.4.1 Selecting a Standard

For more information on selecting a standard, see [Chapter 8.1.3.1, "Selecting a Standard"](#), on page 173.

8.1.4.2 Setting the Burst Length

The burst length is the measurement time that the R&S Cable Rider ZPH used to perform the TDMA power measurement. The burst length can be equal or less than the sweep time.

1. Press the [MEAS] key.
2. Select the "Burst Length" softkey.
The R&S Cable Rider ZPH opens an input field to define the burst length.
3. Enter the length of the burst you need.
The R&S Cable Rider ZPH performs the measurement over the time you have entered.
If the measurement time you have entered was greater than the sweep time, the R&S Cable Rider ZPH sets a burst length equal to the sweep time. To work with a greater burst length, you have to increase the sweep time first.
The minimum burst length is the time corresponding to one trace pixel (= sweep time / 711).

8.1.4.3 Setting the Reference Level

The reference level is the power level that the R&S Cable Rider ZPH expects at the RF input. When selecting the reference level, make sure that you do not overload the R&S Cable Rider ZPH by applying a signal whose power exceeds the maximum reference level.

As the resolution bandwidths of the R&S Cable Rider ZPH are implemented digitally after the A/D converter, the signal level at the A/D converter can be higher than the level indicated by the trace, depending on the selected resolution bandwidth.

To prevent the A/D converter from being overloaded, the signal must be measured at the widest resolution bandwidth and video bandwidth with the peak detector. The trace maximum then determines the best reference level.

To simplify operation and to prevent incorrect measurements, the R&S Cable Rider ZPH has an automatic routine for setting the reference level.

1. Press the [MEAS] key.
2. Select the "Level Adjust" softkey.
The R&S Cable Rider ZPH performs a measurement to determine the ideal reference level.
It uses a resolution bandwidth of 3 MHz, a video bandwidth of 3 MHz and the peak detector. After finishing the automatic measurement, the R&S Cable Rider ZPH sets the ideal reference level.

8.1.4.4 Using a Trigger

When measuring a burst, it is often to set a trigger before measurement is taken.

If a trigger is active, the R&S Cable Rider ZPH uses the video trigger for TDMA measurements by default. The video trigger level is at 50 % of the range of the vertical axis but is variable. This means, the R&S Cable Rider ZPH triggers a measurement if the rising edge of the burst exceeds this 50 % line.

If the DUT features some sort of trigger equipment, you can also use an external trigger to trigger measurements.

1. Connect the DUT trigger output to the R&S Cable Rider ZPH trigger input.
2. Press the [SWEEP] key.
3. Select the "Trigger" softkey.
The R&S Cable Rider ZPH opens a submenu to select the trigger setting.
4. Select either the "External Rise" or "External Fall" menu item (rising or falling edge).
The R&S Cable Rider ZPH activates the trigger and shows the results of the measurement.

It may be that the burst is not completely visible on the display. To correct that and make the whole burst visible, you can set a trigger delay.

1. Select the "Trigger" softkey.
The R&S Cable Rider ZPH opens a submenu to select the trigger setting.
2. Select the "Trigger Delay" softkey.
The R&S Cable Rider ZPH opens an input field to define the trigger delay.
3. Adjust the trigger delay until the burst is visible inside the vertical lines that show the measurement range.

8.1.5 Measuring the Adjacent Channel Leakage Ratio (ACLR)

The Adjacent Channel Leakage Ratio (ACLR) measurement is a method to measure the power over more than one transmission channel and also evaluate the power of the adjacent (or alternate) channels of the transmission channel. The ACLR performs measurements according to a specific channel configuration, e.g. a particular radio-communications standard.

1. Press the [MEAS] key.
2. Select the "Meas Mode" softkey.
The R&S Cable Rider ZPH opens a submenu to select the measurement mode.
3. Select the "ACLR" menu item.
The R&S Cable Rider ZPH starts to measure the adjacent channel leakage ratio.

In principle, the ACLR measurement works like the channel power measurement in that it determines the spectrum within the channel using a resolution bandwidth that is small compared to the channel bandwidth. In addition to the channel bandwidth, the ACLR measurement is also defined by the channel spacing, the bandwidth of adjacent channels and the adjacent channel spacing.

The R&S Cable Rider ZPH supports measurements on up to 12 carrier channels and 12 adjacent channels to either side of the carrier. When measuring more than one car-

rier or adjacent channels, the R&S Cable Rider ZPH shows the powers of each channel in a list below the marker list. The channel itself is marked by red (transmission channels) or green (adjacent channels) vertical lines.

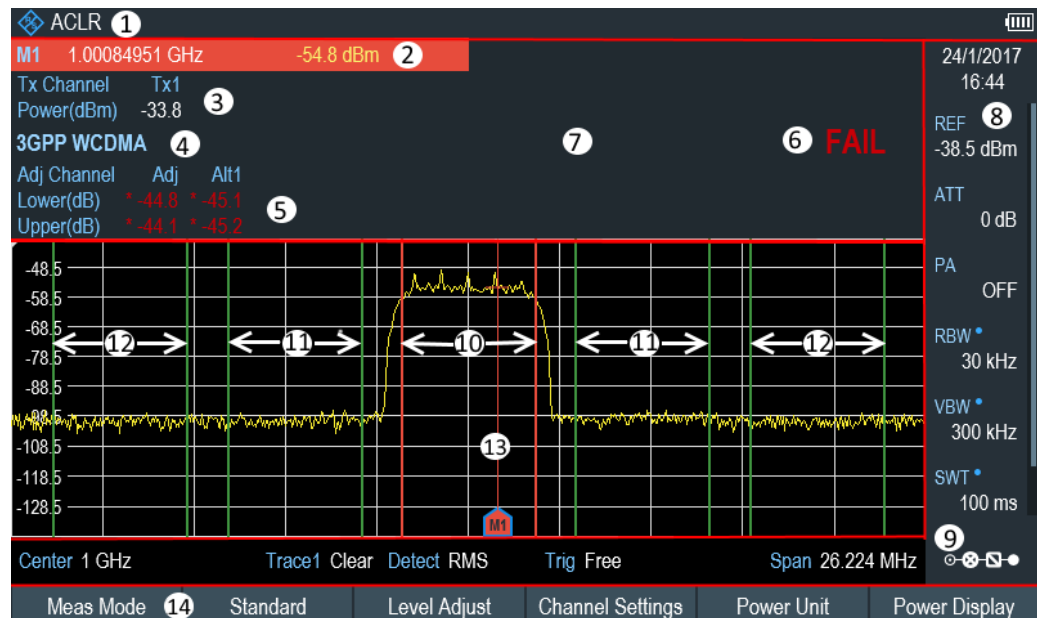


Figure 8-4: Screen layout for ACLR measurements

- 1 = ACLR measurement mode
- 2 = Marker information
- 3 = Tx channel power measurement
- 4 = Measurement standard
- 5 = Adjacent channel power measurement
- 6 = Limit check information
- 7 = [Measurement Result View](#)
- 8 = [Parameter view](#)
- 9 = [Configuration overview](#)
- 10 = Tx channel (red line)
- 11 = Adjacent channel (green line)
- 12 = Alternate channel (green lines)
- 13 = Marker
- 14 = ACLR softkey menu

The predefined standards are the same as for channel power measurements (3GPP WCDMA, cdmaOne and CDMA2000 1x systems). However, you can also customize the settings to set up the R&S Cable Rider ZPH for other radiocommunication standards. You can define the settings directly on the R&S Cable Rider ZPH or define and manage them using the R&S InstrumentView software.

When customizing settings, make sure to consider the following points to get valid and accurate measurement results:

- Reference level
Make sure not to overload the R&S Cable Rider ZPH as the power is measured with a resolution bandwidth that is small in comparison with the signal bandwidth. As with channel power measurements, automatically set the reference to an optimal level with the "Level Adjust" softkey.

- **Setting the span**
The frequency span must at least cover the carriers and the adjacent channels plus a measurement margin of about 10 % to get valid results.
If the span is automatically calculated by the R&S Cable Rider ZPH with the "Auto Span" function, the span is calculated as follows:
 - $(\text{No. of transmission channels} - 1) \times \text{transmission channel spacing} + 2 \times \text{transmission channel bandwidth} + \text{measurement margin}$
 with the measurement margin being approx. 10 % of the value obtained by adding the channel spacing and the channel bandwidth.



Selecting the frequency span

If the frequency span is too large in comparison to the channel bandwidth (or the adjacent-channel bandwidths) being examined, only a few points on the trace are available per channel. This reduces the accuracy of the waveform calculation for the channel filter used, which has a negative effect on the measurement accuracy. It is therefore strongly recommended that the formulas mentioned be taken into consideration when selecting the frequency span.

- **Setting the resolution bandwidth:**
The RBW should not be too high or too small to get both an acceptable measurement speed and a suppression of spectral components outside the channels. As a rule of thumb, it is recommended to set it to about 1 % to 4 % of the channel bandwidth.
You can select a larger resolution bandwidth if the spectrum within the channel to be measured and around it has a flat characteristic. In the standard setting, e.g. for standard cdmaOne at an adjacent channel bandwidth of 30 kHz, a resolution bandwidth of 30 kHz is used. This yields correct results since the spectrum in the neighborhood of the adjacent channels normally has a constant level.
For standard NADC/IS136 this would not be possible, for example, since the spectrum of the transmit signal penetrates into the adjacent channels and a too large resolution bandwidth causes a too low selection of the channel filter. The adjacent-channel power would thus be measured too high.
If the RBW is automatically calculated by the R&S Cable Rider ZPH with the "Auto RBW" function, the RBW is calculated as follows:
 - $\text{RBW} \geq 1 / 40 \text{ of channel bandwidth}$
 The R&S Cable Rider ZPH then selects the maximum possible resolution bandwidth resulting from the available RBW steps (1, 3).
- **Setting the video bandwidth**
To obtain correct power measurements, the video signal must not be limited in bandwidth. A restricted bandwidth of the logarithmic video signal would cause signal averaging and thus result in a too low indication of the power (-2.51 dB at very low video bandwidths). Therefore, the VBW should be at least three times the resolution bandwidth.
If the VBW is automatically calculated by the R&S Cable Rider ZPH with the "Auto VBW" function, the VBW is calculated as follows:
 - $\text{VBW} \geq 3 \times \text{RBW}$

The R&S Cable Rider ZPH then selects the smallest possible VBW with regard to the available step size.

- **Selecting the detector:**
It is best to use the RMS detector. This detector correctly indicates the power irrespective of the characteristics of the signal to be measured. The whole IF envelope is used to calculate the power for each measurement point. The IF envelope is digitized using a sampling frequency which is at least five times the resolution bandwidth which has been selected. Based on the sample values, the power is calculated for each measurement point using the following formula:

$$P_{RMS} = \sqrt{\frac{1}{N} \cdot \sum_{i=1}^N s_i^2}$$

with

S_i = linear digitized video voltage at the output of the A/D converter

N = number of A/D converter values per measurement point

P_{RMS} = power represented by a measurement point

When the power has been calculated, the power units are converted into decibels and the value is displayed as a measurement point.

In principle, the sample detector would be possible as well. Due to the limited number of measurement points used to calculate the power in the channel, the sample detector would yield less stable results.

8.1.5.1 Selecting a Standard

For more information on selecting a standard, see [Chapter 8.1.3.1, "Selecting a Standard"](#), on page 173.

8.1.5.2 Configuring the Measurement

In addition to creating and editing standards with the R&S InstrumentView software, the R&S Cable Rider ZPH also provides functionality to set up a measurement configuration.

Setting the number of transmission channels

1. Press the [MEAS] key.
2. Select the "Channel Settings" softkey.
The R&S Cable Rider ZPH opens a submenu to select the channel settings.
3. Select the "Tx Channels" menu item.
The R&S Cable Rider ZPH opens an input field to define the number of transmission channels.
4. Enter the number of transmission channels you need for the measurement.

Setting the number of adjacent channels

1. Select the "Channel Settings" softkey.
The R&S Cable Rider ZPH opens a submenu to select the channel settings.
2. Select the "Adj Channels" menu item.
The R&S Cable Rider ZPH opens an input field to define the number of adjacent channels.
3. Enter the number of adjacent / alternate channels you need for the measurement.
The borders of Tx channels are displayed red in the trace diagram, the borders of adjacent and alternate channels are displayed green.

Setting the channel bandwidth

The channel bandwidth specifies the frequency range around the center frequency, over which the R&S Cable Rider ZPH performs the power measurement.

1. Press the [MEAS] key.
2. Select the "Channel BW" softkey.
The R&S Cable Rider ZPH opens a dialog box to specify the channel bandwidth for all channels.

TX / ACLR Channel Bandwidth			
TX	3.84 MHz		
Adj	3.84 MHz	Alt6	3.84 MHz
Alt1	3.84 MHz	Alt7	3.84 MHz
Alt2	3.84 MHz	Alt8	3.84 MHz
Alt3	3.84 MHz	Alt9	3.84 MHz
Alt4	3.84 MHz	Alt10	3.84 MHz
Alt5	3.84 MHz	Alt11	3.84 MHz
Done			

3. Select the desired channel input field to change the bandwidth setting.
4. Enter the channel bandwidth you need.
5. Select "Done" to apply the changes.

The R&S Cable Rider ZPH sets the appropriate span for the channel bandwidth that you have entered according to the criteria described above. This ensures that no incorrect channel power measurements are made.

The minimum channel bandwidth that you can set is 833 Hz at a span of 1 kHz.

Setting the channel spacing

In the R&S Cable Rider ZPH, the channel spacing is defined as the distance between the center frequency of the transmission channel and the center frequency to the next transmission channel or the distance between the center frequency of the transmission channel and the center frequency of the adjacent channel.



Specific channel spacing definitions

Note that some radiocommunication standards, e.g. CDMA2000 DS / MC1 / MC3 and IS95 B / C, IS97 B / C, IS98 B / C, define the channel spacing differently, namely the distance from the center of the transmission channel to the closest border of the adjacent channel. The R&S Cable Rider ZPH does not consider these specifics. It always regards the channel spacing as the distance between the center of a channel and the center of its neighboring channel.

1. Press the [MEAS] key.
2. Select the "Channel Tx Spacing" softkey to define the transmission channel spacing or "Channel Adj Spacing" softkey to define the adjacent / alternative channel spacing.

The R&S Cable Rider ZPH opens a dialog box to define the spacing for all transmission channels or adjacent / alternate channels.

Channel	Spacing
Tx1-2	5 MHz
Tx2-3	5 MHz
Tx3-4	5 MHz
Tx4-5	5 MHz
Tx5-6	5 MHz
Tx6-7	5 MHz
Tx7-8	5 MHz
Tx8-9	5 MHz
Tx9-10	5 MHz
Tx10-11	5 MHz
Tx11-12	5 MHz

Channel	Spacing
Alt1	5 MHz
Alt2	5 MHz
Alt3	5 MHz
Alt4	5 MHz
Alt5	5 MHz
Alt6	5 MHz
Alt7	5 MHz
Alt8	5 MHz
Alt9	5 MHz
Alt10	5 MHz
Alt11	5 MHz

3. Select the desired channel input field to change the spacing bandwidth.
 4. Enter the channel spacing you need.
 5. Select "Done" to apply the changes.
- The R&S Cable Rider ZPH now takes the new values into account for future measurements.

When performing measurements on multi-carrier signals, you can define the spacing of the transmission (Tx) channels to one another. By default, the R&S Cable Rider ZPH assumes equal spacing between all Tx channels in the system. Therefore, the spacing you enter for the first two Tx channels is automatically applied to all other Tx channels.

If you do measurements on systems with a different channel spacing for each Tx channel, you can also set the channel spacing for each Tx channel separately by entering the respective number in the fields.

If the spacings are not equal, the channel distribution according to the center frequency is as follows:

- Odd number of TX channels
The middle TX channel is centered to center frequency.
- Even number of TX channels
The two TX channels in the middle are used to calculate the frequency between those two channels. This frequency is aligned to the center frequency.

Adjacent or alternate channel spacing is also available for single-carrier measurements. The R&S Cable Rider ZPH can perform measurements on up to 12 adjacent channels. Usually the first adjacent channel to the Tx channel is referred to as the adjacent channel (ADJ). All others are called alternate channels (ALT1 to ALT11).

By default, the R&S Cable Rider ZPH assumes that the distance of the adjacent channels to each other is the same. In that case, you only have to enter the first spacing value. The R&S Cable Rider ZPH then calculates all higher adjacent channels from that value. If you change the spacing of one of the higher channels, the R&S Cable Rider ZPH only updates the channel spacings above the one you have changed, but not those below.

8.1.5.3 Normalization of Measurement Results

By default, the power of the channels and adjacent channels is displayed in the unit dBm. It is also possible to display the power density of the signal to, for example, measure the signal/noise power density or obtain the signal to noise ratio.

1. Press the [MEAS] key.
2. Select the "Power Display" softkey
The R&S Cable Rider ZPH opens a submenu to select the power display settings.
3. Enable the "Channel Pwr/Hz" checkbox.
The R&S Cable Rider ZPH activates normalization and switches the unit from dBm to dBm/Hz.
The channel power density in dBm/Hz corresponds to the power inside a bandwidth of 1 Hz and is calculated as follows:
a) $\text{channel power density} = \text{channel power} - \log_{10}(\text{channel bandwidth})$

8.1.5.4 Displaying Absolute and Relative Results

You can set up the result display to either show the absolute power of the adjacent channels or the power relative to one of the transmission channels.

1. Select the "Power Display" softkey
The R&S Cable Rider ZPH opens a submenu to select the power display settings.

2. Select either the "Absolute" menu item to display the absolute results or the "Relative" menu item to display the power relative to one of the transmission channels.

8.1.5.5 Selecting the Reference Channel

When determining relative power values for the adjacent channels, you can set a specific transmission channel as the reference channel.


1. Press the "Channel Settings" softkey.
The R&S Cable Rider ZPH opens a submenu to select the power display settings.
2. Select the "ACLR Ref Setting" menu item.
The R&S Cable Rider ZPH displays new softkeys to determine the reference channel.
The following methods are available:
 - "Tx Channel"
Select a specific transmission channel by entering its number as the reference.
 - "Min Pwr Tx Ch"
The channel with the lowest power level is the reference channel.
 - "Max Pwr Tx Chan"
The channel with the highest power level is the reference channel.
 - "Low High Chan"
The outer left-hand transmission channel is the reference channel for the lower adjacent channels. The outer right-hand transmission channel is the reference channel for the upper adjacent channels.
3. Select the desired softkey to determine the reference channel.

8.1.5.6 Setting and Checking the Limits

Limit checks in ACLR measurement mode are independent of limit line handling. You can define a limit for each of the adjacent channels. Limits for adjacent channels can be set either in absolute or relative terms.

Defining relative and absolute limits

1. Press the [MEAS] key.
2. Select the "Channel Settings" softkey.
The R&S Cable Rider ZPH opens a submenu to select the channel settings.
3. Select the "Channel Limit Relative" or the "Channel Limit Absolute" menu item.
The R&S Cable Rider ZPH opens a dialog box to define the relative or absolute limits for each adjacent channel.

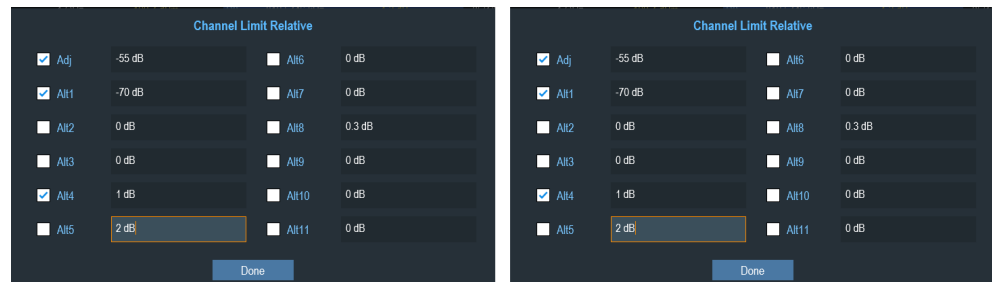

4. Select the desired channel input field to change the limit.
5. Enter the limit value you need.
6. Select the channel checkbox to activate the channel limit.
7. Select "Done" to apply the changes.
The R&S Cable Rider ZPH applies the limit checks on the ACLR measurement.
8. To deactivate the limit check for a specific channel, select the desired channel checkbox to deactivate it.

Performing a limit check

1. Select the "Channel Settings" softkey.
The R&S Cable Rider ZPH opens a submenu to select the channel settings.
2. Select the checkbox for "Check Channel Limits" menu item.
The R&S Cable Rider ZPH automatically performs limit checks.
The results of the limit check are displayed in the [Screen Layout and Elements](#). If a result fails the limit check, the power level reading turns red and has an asterisk (*) in front of its power level.

```
Lower(dB)  * -44.8 * -45.1
Upper(dB)  * -44.1 * -45.2
```

8.1.6 Measuring the Spectrum Emission Mask

The Spectrum Emission Mask (SEM) measurement is a method to detect spurious emissions or intermodulation products of a signal. When performing a SEM measurement, the R&S Cable Rider ZPH checks the signal against a spectral mask to see whether the signal complies with a specific standard or not. Therefore, the R&S Cable Rider ZPH provides predefined spectrum emission masks for various telecommunications standards.

However, you can define your own spectral masks with the R&S InstrumentView software to perform measurements in frequency ranges other than the predefined ones. To learn how to define Spectrum Emission Masks, refer to the R&S InstrumentView manual.

1. Press the [MEAS] key.

2. Select the "Meas Mode" softkey.
3. The R&S Cable Rider ZPH opens a submenu to select the measurement mode.
4. Select the "Spectrum Emission Mask" menu item.
The R&S Cable Rider ZPH starts to measure the spectrum emission mask.

Note that the frequency range of the actual measurement depends on the start and stop frequency you have set on the R&S Cable Rider ZPH. Correct measurement results are therefore only possible if the frequency ranges of the SEM are inside the current span of the R&S Cable Rider ZPH.

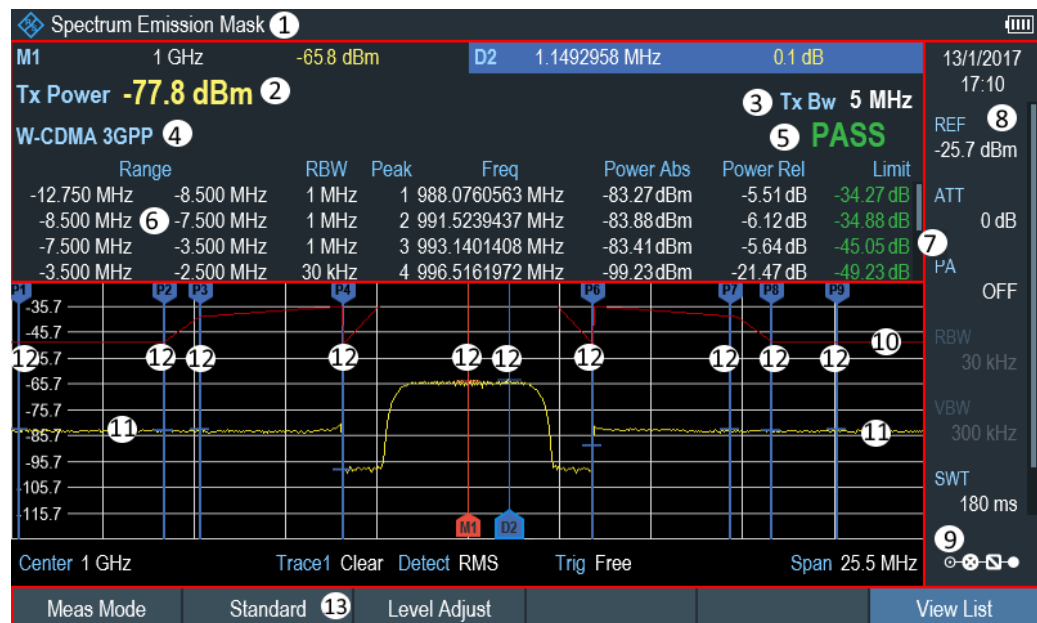


Figure 8-5: Screen layout for the SEM measurement

- 1 = SEM measurement mode
- 2 = Tx power measurement
- 3 = Tx bandwidth
- 4 = Measurement standard
- 5 = Limit check result
- 6 = SEM measurement list
- 7 = Scroll bar for SEM measurement list
- 8 = [Parameter view](#)
- 9 = [Configuration overview](#)
- 10 = Spectrum emission mask (red line)
- 11 = Trace (yellow line)
- 12 = Peak (P<x>) and normal marker (M<x> and D<y>)
- 13 = SEM softkey menu

Markers in the SEM measurement

In addition to the normal marker functionality of the R&S Cable Rider ZPH, the SEM measurement provides special markers labeled P1 to Px.

The R&S Cable Rider ZPH activates and positions these special markers automatically after displaying the trace. Each of these markers marks the peak level in each SEM

subrange. Thus, the number of markers depends on the number of subranges defined for the Spectrum Emission Mask and in turn depends on the standard you are measuring against.

The numerical marker information (frequency and level) for these markers is part of the SEM list.

Markers P1 to Px are fix and always remain on the peak level of the corresponding subrange. If you would like to analyze other locations on the trace, use normal marker and deltamarker functionality. For more information, see [Chapter 8.2.8, "Using Markers"](#), on page 234.

8.1.6.1 Selecting a Standard

For more information on selecting a standard, see [Chapter 8.1.3.1, "Selecting a Standard"](#), on page 173.

8.1.6.2 Optimizing Measurement Settings

After selecting the standard and applying the signal to the R&S Cable Rider ZPH, you can optimize measurement settings to avoid overloading the R&S Cable Rider ZPH.

- Select the Adjust Setting softkey.
The R&S Cable Rider ZPH performs a measurement to determine the ideal reference level and span.

8.1.6.3 Viewing the Results in a Table

You can add a table to the display that shows the measurement results in numerical form.

1. Press the [MEAS] key.
2. Select the "View List " softkey.

The R&S Cable Rider ZPH displays the [Measurement Result View](#).

Note: You can select "View List" to hide or unhide the [Measurement Result View](#)

If the list contains more than four entries, you can pan through the list or use the rotary to navigate the other results. Note that scrolling works only if there is no active input field.

Range		RBW	Peak	Freq	Power Abs	Power Rel	Limit
-12.750 MHz	-8.500 MHz	1 MHz	1	987.4654930 MHz	-83.14 dBm	-39.08 dB	-34.14 dB
-8.500 MHz	-7.500 MHz	1 MHz	2	991.5239437 MHz	-83.76 dBm	-39.69 dB	-34.76 dB
-7.500 MHz	-3.500 MHz	1 MHz	3	992.5295775 MHz	-83.26 dBm	-39.19 dB	-44.26 dB
-3.500 MHz	-2.500 MHz	30 kHz	4	996.5161972 MHz	-99.22 dBm	-55.15 dB	-49.22 dB

Measurement items	Descriptions
Tx Power	Power level of the transmission channel.
Tx Bandwidth	Bandwidth of the transmission channel.

Measurement items	Descriptions
PASS / FAIL information	If the signal is within the limits of the spectral mask, the R&S Cable Rider ZPH shows PASS , if not, it shows FAIL .
Range [Hz]	Frequency range. The first number is the start frequency, the second number the stop frequency of each defined frequency range. The character following the number indicates the unit (k = kHz, M = MHz, G = GHz)
RBW [Hz]	Resolution bandwidth the corresponding frequency range is measured with.
Peak	Number of the peak marker (Px).
Freq [Hz]	Frequency of the peak level that has been measured in each frequency range
Power Abs	Absolute peak power in the corresponding frequency range.
Power Rel	Relative peak power in relation to the channel power of the reference channel.
Δ Limit	Minimum distance from the limit line to the trace in the corresponding frequency range. Negative values or a zero indicate a passed SEM limit check, positive values indicate a violation of the limit check.

8.1.7 Measuring the Harmonic Distortion

The Harmonic Distortion measurement is an easy way to identify the harmonics of a DUT. In addition to the graphic display of the harmonics, this measurement mode also calculates the Total Harmonic Distortion (THD) and shows the results.

You can perform a Harmonic Distortion measurement in frequency sweep (span > 0) and zero span mode (span = 0). When starting the measurement, the R&S Cable Rider ZPH looks for the first harmonic of the signal (= the highest signal) in the defined frequency range. It then adjusts the frequency axis so that all harmonics are visible. In zero span mode, the center frequency remains the same.

1. Press the [MEAS] key.
2. Select the "Meas Mode" softkey.
The R&S Cable Rider ZPH opens a submenu to select the measurement mode.
3. Select the "Harmonic Distortion" menu item.
The R&S Cable Rider ZPH starts to measure the harmonic distortion.

The search for harmonics starts as soon as you enter the Harmonic Distortion measurement. Upon entering the measurement, the R&S Cable Rider ZPH automatically adjusts the settings in order to display the selected number of harmonics (default = 2) on the screen.

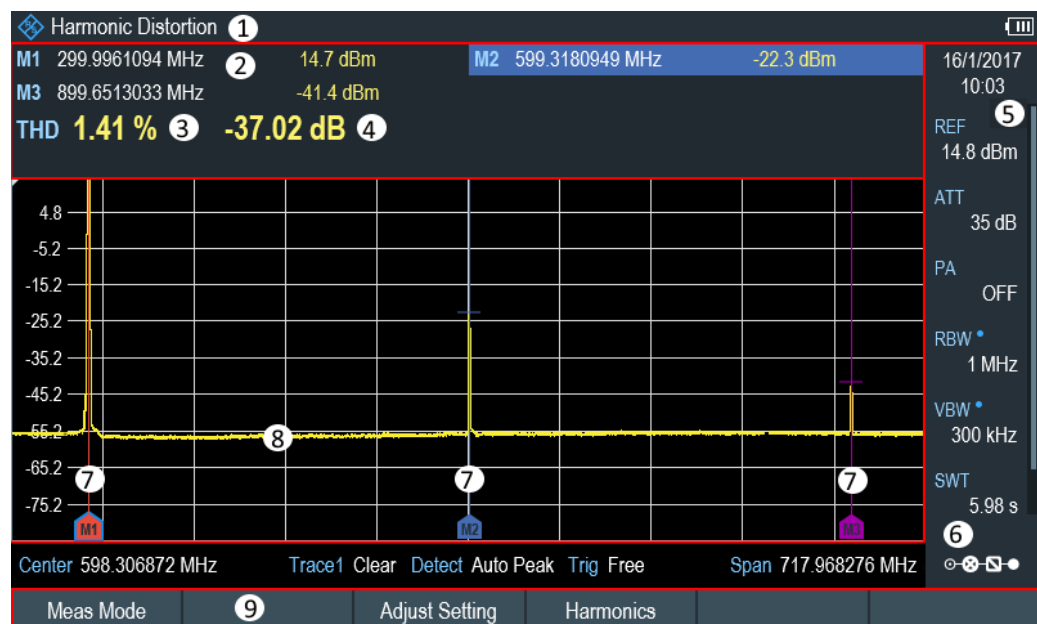


Figure 8-6: Screen layout for the harmonic distortion measurement

- 1 = Harmonics measurement mode
- 2 = Harmonics list
- 3 = Total harmonics distortion in %
- 4 = Total harmonics distortion in dB
- 5 = [Parameter view](#)
- 6 = [Configuration overview](#)
- 7 = Markers indicating harmonics (blue lines)
- 8 = Trace
- 9 = Harmonic distortion softkey menu

8.1.7.1 Defining the Number of Harmonics

By default, the R&S Cable Rider ZPH shows the signal and its first harmonic. Each harmonic is indicated by a marker that the R&S Cable Rider ZPH places on the harmonic (here M1 and M2). Note that all of the markers that have been set are normal markers that show the absolute frequency of the harmonic.

At the same time, the R&S Cable Rider ZPH also calculates the values for the total harmonic distortion (THD) and shows the results in a box above the trace diagram. The values are output in % and dB.

If you want to see more than one harmonic, the R&S Cable Rider ZPH can show up to six harmonics.

1. Press the [MEAS] key.
2. Select the "Harmonics" softkey.
The R&S Cable Rider ZPH opens an input field to define the number of harmonics.
3. Enter the number of harmonics you would like to see.

8.1.7.2 Optimizing the Display of Harmonics

The R&S Cable Rider ZPH places the markers on the other harmonics even if they are outside of the display range.

1. Press the [MEAS] key.
2. Select the "Adjust Settings" softkey.
The R&S Cable Rider ZPH performs a measurement to determine the ideal reference level, frequency and span in order to display all harmonics.

8.1.7.3 Activating the Harmonics List

To see the exact frequency of the harmonic, you can activate the marker list that shows the value for each harmonic or marker.

1. Press the [MARKER] key.
2. Select the "Set Marker" softkey.
The R&S Cable Rider ZPH opens a submenu to set the view list.
3. Select the checkbox for the "View List" menu item.
The R&S Cable Rider ZPH displays the marker list that contains the values for each harmonic.

8.1.8 Measuring the AM Modulation Depth

The AM Modulation Depth measurement analyzes AM modulated signals and calculates the modulation depth of the signal using the measurement results. Note that the measurement works properly only if you apply an AM modulated signal.

1. Press the [MEAS] key.
2. Select the "Meas Mode" softkey.
The R&S Cable Rider ZPH opens a submenu to select the measurement mode.
3. Select the "AM Modulation Depth" menu item.
The R&S Cable Rider ZPH starts to measure the AM modulation depth.

After you have started the measurement, the R&S Cable Rider ZPH places three markers on the trace. The first marker is placed on the peak power level. The R&S Cable Rider ZPH assumes that position as the level of the carrier. The second and third markers are delta markers. These are placed symmetrically on the adjacent peak values to the left and right of the carrier.

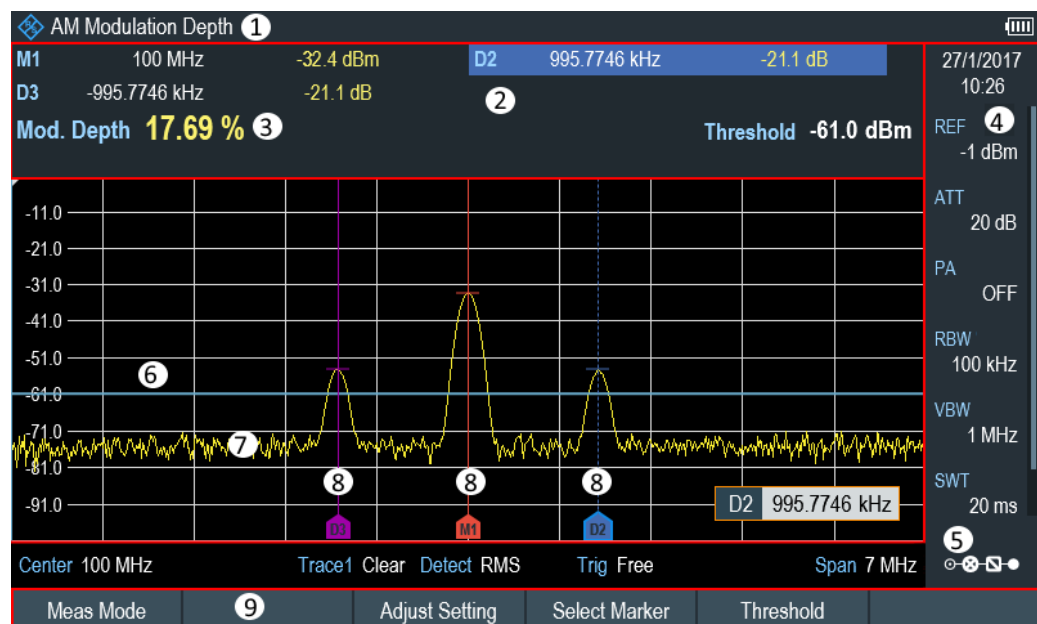


Figure 8-7: Screen layout for the AM modulation depth measurement

- 1 = AM modulation depth measurement mode
- 2 = [Measurement Result View](#)
- 3 = Modulation depth
- 4 = [Parameter view](#)
- 5 = [Configuration overview](#)
- 6 = Threshold line (blue line)
- 7 = Trace
- 8 = Markers
- 9 = AM modulation depth softkey menu

By default, delta marker 2 is active for editing. If you move the delta marker to another position, the other delta marker will be moved by the same distance relative to the normal marker. Note that this happens only if you move delta marker 2 (D2). When moving delta marker 3 (D3), only this marker is repositioned.

From the values of the markers, the R&S Cable Rider ZPH then calculates the AM modulation depth. The AM modulation depth is the ratio between the power values at the reference marker and at the delta markers. When the powers of the two AM side bands are not the same, the R&S Cable Rider ZPH uses the mean value of the two sideband values.

If the R&S Cable Rider ZPH is unable to find any AM modulated carriers, it shows the message:



8.1.8.1 Setting a Threshold

You can set a threshold that defines the minimum power level the signal must have. If the power of the signal is below the threshold, the R&S Cable Rider ZPH will not set the markers and therefore will not calculate the modulation depth.

1. Press the [MEAS] key.
2. Select the "Threshold" softkey.
The R&S Cable Rider ZPH opens an input field to set the threshold.
3. Enter the threshold value you need.
The threshold is represented as a horizontal blue line in the diagram area.

8.1.8.2 Optimizing the Settings

To get the best results, you can use the automatic adjustment routine that the R&S Cable Rider ZPH offers.

1. Press the [MEAS] key.
2. Select the "Adjust Setting" softkey.
The R&S Cable Rider ZPH performs a sweep and repeats the peak search sequence for the three markers.

8.1.8.3 Activating the Marker List

To see the exact frequency of the carrier and its sidebands, you can activate the marker list that shows the value for each marker.

1. Press the [MKR] key.
2. Select the "Set Marker" softkey.
The R&S Cable Rider ZPH opens a submenu to select the marker function.
3. Select the checkbox for View List menu item.
The R&S Cable Rider ZPH displays the marker list that contains the values for carrier and sideband.

8.1.9 Working with the Spectrogram Result Display



R&S Cable Rider ZPH option

R&S ZPH-K15 (order number: 1334.5640.02) option is required to operate the R&S Cable Rider ZPH in the interference analysis mode.

For more information, see [Chapter 13, "Interference Analyzer"](#), on page 293.

This mode is only available with model .12.

Equipped with option R&S ZPH-K15, you can view measurement results in a spectrogram.

The spectrogram result display shows the spectral density of a signal in the frequency domain and over time simultaneously.

Like other result displays, the horizontal axis represents the frequency span. The vertical axis represents time. Time in the spectrogram runs chronologically from top to bottom. Therefore, the top of the diagram is the present. A third dimension shows the amplitude for each frequency by mapping different colors to every power level. The result is therefore a two-dimensional diagram.

The color the R&S Cable Rider ZPH assigns to a power level that was measured depends on:

- Color table
- Spectrogram reference level
- Spectrogram level range

The spectrogram consists of horizontal lines, each of one pixel height, which is called frames. In the default state, a frame is added to the spectrogram after each sweep. This means that the amount of data in a frame depends on the sweep time. As the spectrogram in the R&S Cable Rider ZPH runs from top to bottom, the outdated time-line moves down one position, so that the present frame is always on top of the diagram.

Therefore, the sequence of frames is chronological.

1. Press the [MEAS] key.
2. Select the "Meas Mode" softkey.
The R&S Cable Rider ZPH opens a submenu to select the measurement mode.
3. Select the "Spectrogram" menu item.
The R&S Cable Rider ZPH starts the spectrogram result display.

By default, the spectrogram result display consists of two windows. The upper window shows the measured spectrum as a trace line. The lower window shows the measurement results in a spectrogram. The chronological information in the spectrogram is restricted by the internal memory of the R&S Cable Rider ZPH. The R&S Cable Rider ZPH stores 1024 frames or spectrums that have been measured in its memory. As the height of the display is smaller, some of the data becomes invisible after a time.

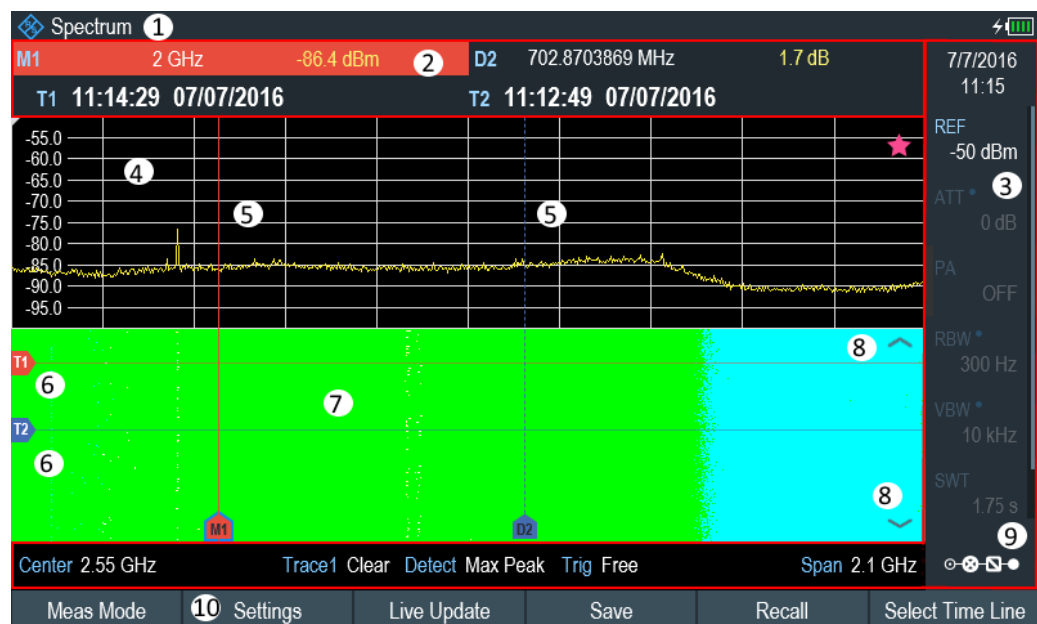


Figure 8-8: Screen layout for the spectrogram

- 1 = Operating mode
- 2 = [Measurement result view](#)
- 3 = [Parameter view](#)
- 4 = Spectrum result display (optional)
- 5 = Marker / delta marker (vertical lines)
- 6 = Time lines T1 and T2 (horizontal lines)
- 7 = Spectrogram
- 8 = Scroll direction
- 9 = [Configuration overview](#)
- 10 = Spectrogram softkey menu

8.1.9.1 Controlling the Spectrogram Update

The spectrogram starts running when you enter the spectrogram mode. By default, the spectrogram is running in a continuous sweep mode.

If you are in single sweep mode, the R&S Cable Rider ZPH does not add a line to the spectrogram until you initiate the next single sweep.

You can stop the update of the spectrogram in continuous sweep mode.

1. Press the [MEAS] key.
2. Select the "Hold" softkey.
Note that in continuous sweep mode, the measurement in the spectrum result display does not stop. The trace in the upper window still updates continuously but the spectrogram view stops.
3. Select the "Hold" softkey again.
The R&S Cable Rider ZPH resumes updating the spectrogram.

The spectrogram result display is filled with results until you change a measurement setting. When a setting is changed, the spectrogram clears the existing result and starts to fill again.

You can also clear the spectrogram manually.

1. Press the [MEAS] key.
2. Select the "Clear" softkey.

Couple spectrogram level and range settings to spectrum

Changes in the spectrogram level and range can also be reflected in the spectrum mode and vice versa.

1. Press the [MEAS] key.
2. Select the "Settings" softkey.
3. Select the "Display" softkey.
4. Select the "Couple to Spectrum" menu item to enable the checkbox.
The R&S Cable Rider ZPH menu item is marked by an [X].
The spectrogram reference level and level range are now coupled to the spectrum.

8.1.9.2 Browsing through the Signal History

There are two ways to view parts of the measurement result history that have moved outside the visible area of the spectrogram.

1. Press the [MEAS] key.
2. Select the "Settings" softkey.
3. Select the "Display" softkey.
The R&S Cable Rider ZPH opens a submenu that contains the display settings for selection.
4. Select the "Full Screen" menu item to enable the checkbox.
The R&S Cable Rider ZPH menu item is marked by an [X].
The R&S Cable Rider ZPH now uses the full diagram area of the screen for the spectrogram. The number of lines in the spectrogram and therefore the displayed time period now becomes more than doubles.
5. To evaluate the measurement result, scroll up and down on the spectrogram scrollbar icon (see item 8 of [Figure 8-8](#)) to the frame that you are interested to view.

Scrolling through the spectrogram

Swipe up or down vertically in the spectrogram window to view the spectrogram history.

Alternatively, you can use the keypad [2] and [8] on the R&S Cable Rider ZPH to scroll through the spectrogram history.

The scrollbar icon on the right side of the spectrogram indicates the position of the spectrogram part currently displayed on the screen:

- A single down arrow in the right lower corner of the spectrogram indicates that the uppermost frame still represents the most recently recorded trace.
- Two arrows (one up, one down) indicate that the spectrogram area displayed is somewhere in the middle of the available history.
- A single up arrow in the upper right corner of the spectrogram indicates that the lowest line of the spectrogram represents the end of the history buffer.

8.1.9.3 Configuring the Display


As colors are an important part of the spectrogram, the R&S Cable Rider ZPH offers various ways to customize the display for best viewing results.

The first and most obvious way to configure the display is to select a different color scheme.

1. Press the [MEAS] key.
2. Select the "Settings" softkey.
3. Select the "Display" softkey.
The R&S Cable Rider ZPH opens a submenu that contains the display settings for selection.
4. Select the "Color Table" menu item.
The R&S Cable Rider ZPH opens a submenu that contains several color schemes.
 - "Default"
 - "Green-Yellow"
 - "Green-Blue"
 - "Black-White"
 - "Red-Purple"
 - "Blue-Black"

The following examples are based on the "Green-Blue" color scheme.

1. Select the color scheme that you are most comfortable with.
The R&S Cable Rider ZPH adjusts the screen colors according to your selection. It is possible that the color distribution is not ideal in the current configuration. There are two important parameters that are required to adjust for an optimal spectrogram display.
 - Reference level
By adjusting the reference level, you can eliminate amplitudes from the color map that are not part of the signal.

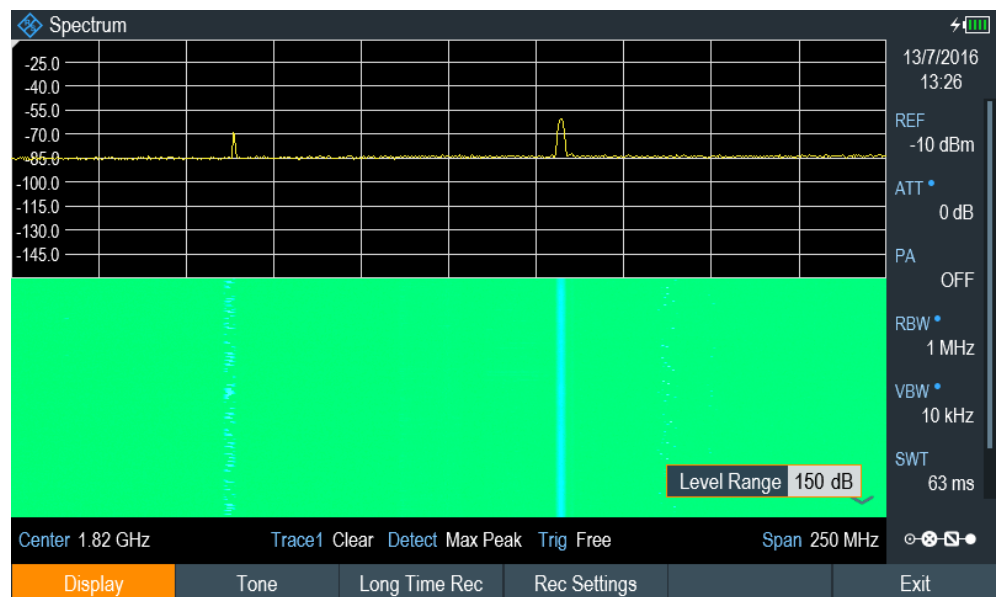


Example: If a spectrogram reference level is at -10 dBm, the signal parts with an amplitude of -10 dBm would be blue in the spectrogram. For signal parts with a very small amplitude, it is dark green. Everything in between is a shade of the colors between. As the colors are distributed over a very large range (150dBm), it is likely that you cannot distinguish details in the signal that you have measured.

Therefore, you should adjust the color map to the overall shape of the signal that you are measuring. With the maximum amplitude of about -45 dBm and the minimum amplitude of about -85 dBm, the amplitude range is about 40 dB. With these settings in a "Green-Blue" color scheme, the spectrogram is made up exclusively of green colors and it's not easy to distinguish amplitude levels. To get a better result, change the spectrogram reference level to a level near the maximum power level that has been measured first.


2. Select the "Display" softkey.
The R&S Cable Rider ZPH opens a submenu that contains the display settings for selection.
3. Select the "Reference Level" menu item.
The R&S Cable Rider ZPH opens an input field to define the reference level. The reference level should be near the maximum level that has been measured while the spectrogram was running. In the example, the reference level should be at about -40 dBm.
4. Enter the reference level.
The R&S Cable Rider ZPH now shifts the reference level of the spectrogram to the value that you have entered.
Note that the spectrogram reference level does not affect the spectrum result display, and the spectrum reference level ("Amplitude" menu) does not affect the spectrogram. In the screenshot, the spectrum trace is therefore exactly the same as in the previous picture.

The result however, still does not show signal differences in detail. The only thing that happened is that the colors have shifted, in the example to yellow, because the color that corresponds to the reference level has shifted from green to blue. All other colors that are part of the color scheme are still unused, because the spectrogram level range is still the same (150 dB).

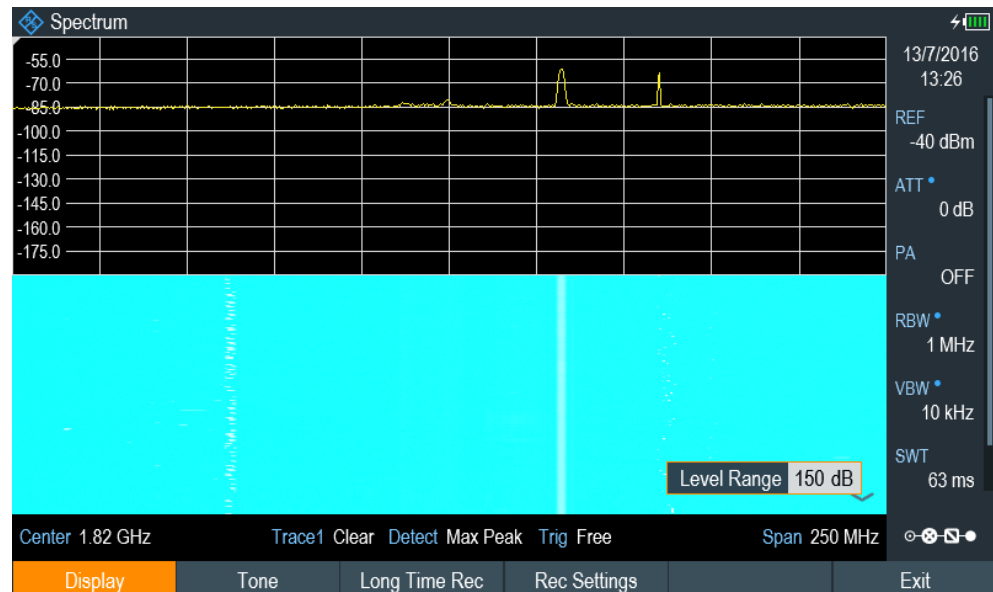

5. Select the "Display" softkey.
The R&S Cable Rider ZPH opens a submenu that contains the display settings for selection.
6. Select the "Level Range" menu item.
The R&S Cable Rider ZPH opens an input field to define the level range.
In this example, the level range of the signal is from about -45 dBm to about -85dBm which is about 40dB to 45dB.
7. Set the "Level Range" to 45 dB.
The level range is now adjusted, the R&S Cable Rider ZPH is able to map its complete color range to the level range of the signal.
The USB signal parts with a low amplitude are in a shade of green while signal parts with a high amplitude are blue.
The best way to display a spectrogram is therefore to reduce the level range until the lowest signal part is mapped to the lower end of the color map and the highest signal part to the upper end of the color map.
In a last step, you can configure the spectrogram in a way that it only shows signal peaks in color and the noise floor in black. To get such a result, you have to reduce the level range, until the noise floor is outside the displayed range.
8. Instead of entering a level range of 45 dB, enter a level range of 40 dB.
This level provides a high contrast between signal parts that are above the noise floor that is drawn in black.
To show details of the noise floor and exclude the peak levels, you have to lower the spectrogram reference level until it is just above the noise floor.


The R&S Cable Rider ZPH will then display the signal parts that are above the reference level in only one color, which is the color at the upper border of the color map.

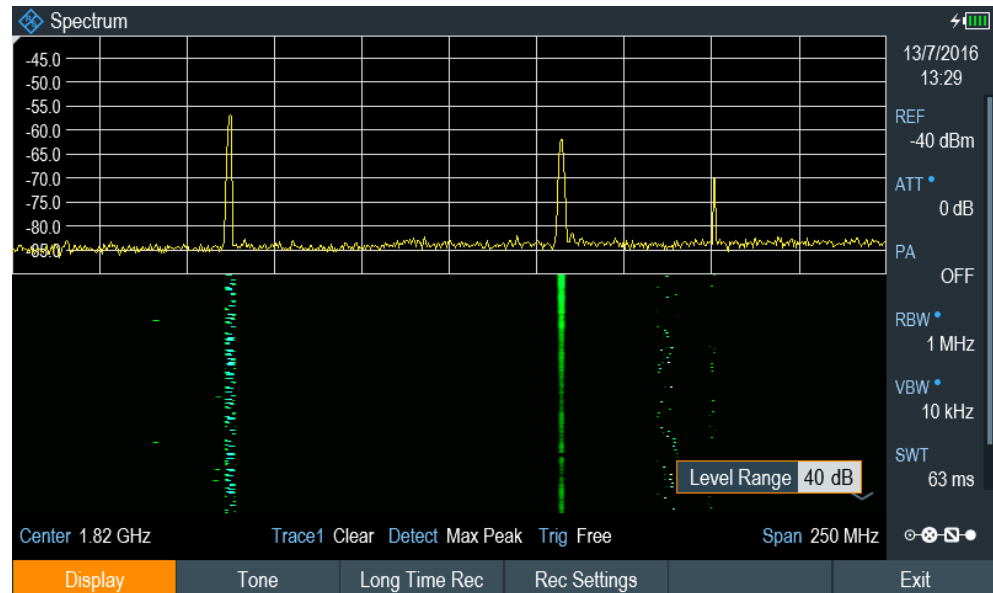

Auto range

Alternatively, you can perform an auto range action to adjust the reference range and the reference level of the spectrogram for optimal display.

1. Press the [MEAS] key.
2. Select the "Settings" softkey.
3. Select the "Display" softkey.
The R&S Cable Rider ZPH opens a submenu that contains the display settings for selection.
4. Select the "Auto Range" softkey.
The R&S Cable Rider ZPH performs an auto range to adjust the reference range and the reference level of the spectrogram for optimal display.
Note: The auto range function shows a reference level of -18.8dBm and level range of 84.3581dB for the above example.

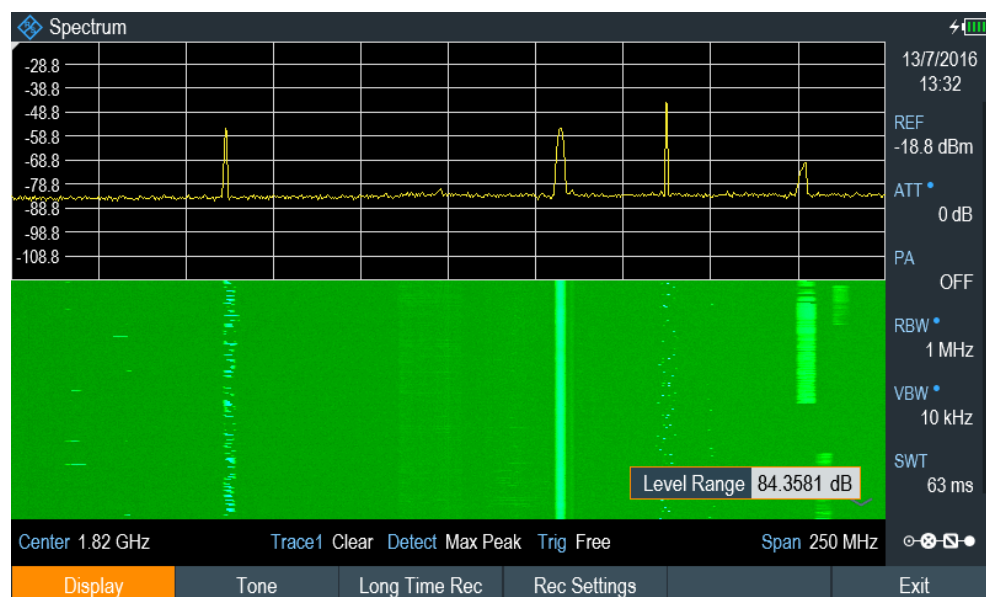


8.1.9.4 Recording a Spectrogram

You can save the data of the spectrogram for documentation or for further analysis of the recorded data.

1. Press the [MEAS] key.
2. Select the "Settings" softkey.
3. Select the "Rec Settings" softkey.

The R&S Cable Rider ZPH displays a dialog box to configure the recording parameters for spectrogram.

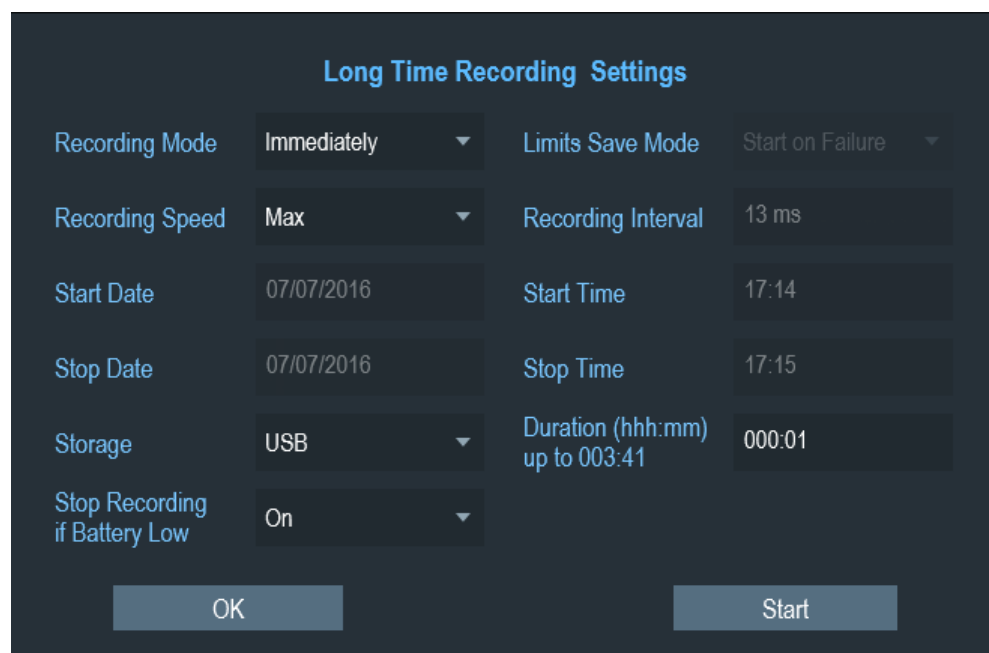

The dialog box is titled "Long Time Recording Settings". It contains several configuration options arranged in two columns. The first column includes "Recording Mode" (set to "Immediately"), "Recording Speed" (set to "Max"), "Start Date" (07/07/2016), "Stop Date" (07/07/2016), "Storage" (set to "USB"), and "Stop Recording if Battery Low" (set to "On"). The second column includes "Limits Save Mode" (set to "Start on Failure"), "Recording Interval" (13 ms), "Start Time" (17:14), "Stop Time" (17:15), and "Duration (hhh:mm) up to 003:41" (set to 000:01). At the bottom, there are two buttons: "OK" and "Start".

Figure 8-9: Long time recording settings dialog box

Long time recording settings	Descriptions
"Recording Mode"	There are three selections for the recording mode: "Timer", "Immediately" and "Limits Failure" When "Long Time Recording Settings" is enabled with recording mode "Timer", the configured "Start Date"/ "Start Time" and "Stop Date"/ "Stop Time" and "Duration" determine the time window in which the spectrogram data is recorded. The setting for "Limits Save Mode" is disabled. When "Long Time Recording Settings" is enabled with recording mode "Start Immediately", spectrogram data recording starts immediately and "Duration" determines when the recording of the spectrogram data stopped. The settings of "Start Date", "Start Time" and "Stop Date" and "Stop Time" is disabled. When "Long Time Recording Settings" is enabled with recording mode "Limits Failure", the "Limits Save mode" determines when data is recorded. The settings for "Start Date", "Start Time" and "Stop Date" and "Stop Time" is disabled. By default, "Timer" is selected.
"Recording Speed"	There are two selections for the recording speed: "Max" and "Manual". If recording speed is set to "Manual", the recording interval is configurable. By default, "Max" is selected.
"Start Date"	Start date format: dd/mm/yy.
"Stop Date"	Stop date format: dd/mm/yy.
"Storage"	Two storage types are supported: "Storage Card" and "USB". By default, "USB" is selected.

Long time recording settings	Descriptions
"Stop Recording if Battery Low"	The recording of the spectrogram data is stopped and an automatic save of the recorded spectrogram data is performed when a battery low detection is triggered. By default: "On" is selected.
"Limits Save Mode"	There are three selections for the limits save mode: "Start on Failure", "Stop on Failure" and "Save only Failures". By default, "Start on Failure" is selected. When "Start on Failure" is selected, the spectrogram data recording starts with the first detected failure and stops when manually stopped or storage is full. When "Stop on Failure" is selected, the spectrogram data recording starts immediately and the detection of a failure determines the moment the recording is stopped. The failure trace is the last trace stored in the spectrogram file. When "Save on Failures" is selected, the spectrogram data recording of only failures starts immediately and stops when manually stopped.
"Recording Interval"	This is only configurable when the "Recording Speed" is set to "Manual". It is the time difference taken between two traces of saved spectrogram data. The minimum recording interval is the current sweep time and maximum recording interval is 1000s.
"Start Time"	This is only configurable when the "Recording Mode" is set to "Timer". When the "Recording Mode" is set to "Immediately", the "Start Time" is set to current time. Start time format: "hhh:mm".
"Stop Time"	This is only configurable when the "Recording Mode" is set to "Timer". When the "Recording Mode" is set to Immediately, the "Stop Time" is set to current time + duration. Stop time format: "hhh:mm".
"Duration (hhh:mm) up to 003:41"	This is only configurable when the "Recording Mode" is set to "Timer" or Immediately. The maximum duration is displayed before the recording is started. The maximum value for the duration is 999:59 or the maximum duration possible on the storage medium if there is insufficient memory is available for this maximum value. Duration format: "hhh:mm" (e.g. 072:00 for 72 hours).
"OK"	Press "OK" to apply the configuration for spectrogram recording.
"START"	Press "START" to apply the configuration and immediately starts the spectrogram recording.

4. Select "OK" to apply the configurations for the spectrogram recording.
5. If you want to start the spectrogram recording immediately, select the "Start" button.

The R&S Cable Rider ZPH immediately starts the spectrogram recording.

Note1: There is a recording icon  on the top right corner of the spectrum to indicate that the spectrogram recording is in process.

Note2: The recording of the spectrogram data stops according to the settings configured in [Figure 8-9](#).

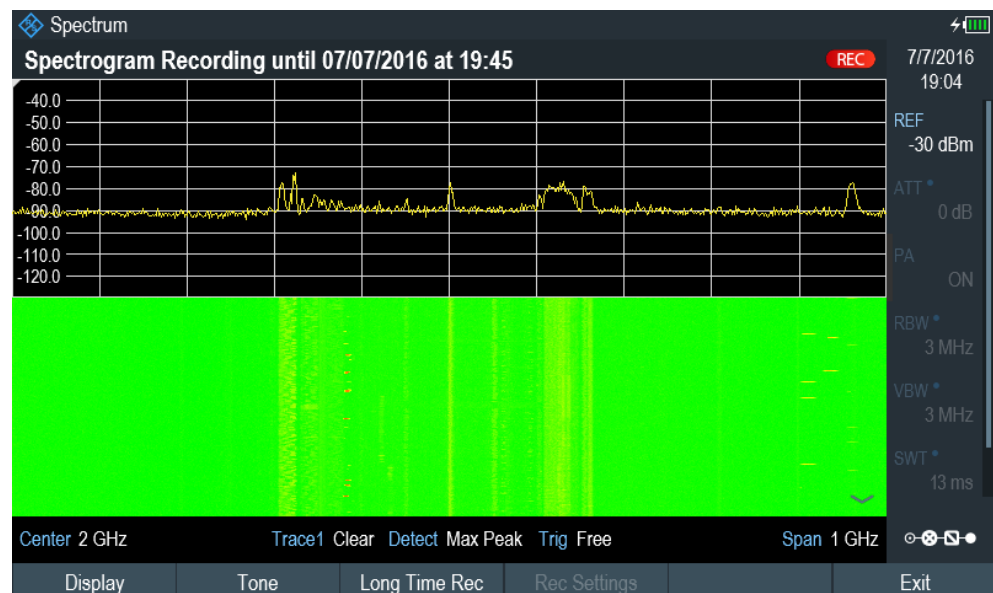


Figure 8-10: Spectrogram recording

6. If you want to stop the spectrogram recording prematurely, press the "Long Time Rec" softkey.
7. When the recording completes, the spectrogram recording data is automatically saved in the folder:
`Spectrogram Recording results>SPG_yyyymmdd_hhmmss>SPG_###.spm`
 with ascending numbers.
 The R&S Cable Rider ZPH displays "Recording successfully completed" with information of the recorded spectrogram data stored.

Storing spectrogram SPG_001.spm



Recording successfully completed

Results saved in \USB\Spectrogram Recording Results\SPG_20160711_142526

After the spectrogram is saved, you can replay it any time you want.

The number of spectrograms that you can store on the R&S Cable Rider ZPH internal memory depends on the other datasets that are currently on the R&S Cable Rider ZPH.

8. Alternatively, you can start a spectrogram recording at anytime.
Press [MEAS] key.
9. Select "Settings" softkey.

10. Select "Long Time Rec" softkey to start a spectrogram recording.

8.1.9.5 Playback of a Spectrogram

If you have recorded a spectrogram and save it in the internal memory of the R&S Cable Rider ZPH, a USB stick or an SD card, you can view the results of that measurement later.

1. Select the "Playback" softkey.
Or
2. Select the "Meas Mode" softkey.
3. Select the "Spectrogram Playback" menu item.

Recalling a previously stored spectrogram


1. Select the "Recall" softkey.
A list of all saved data sets opens.
Go to the "storage media > Spectrogram Recording Results" and select the spectrogram recorded data ending with a *.spm filename extension.
2. Confirm your selection with the "Load" softkey.
The R&S Cable Rider ZPH loads the spectrogram and shows the data in the display.
In general, you can perform the same things on a recalled spectrogram as in the spectrogram recording mode, e.g. customize the display to your needs.
In addition to that functionality, it is possible to view not only the spectrum that belongs to the currently selected spectrogram frame, but also the spectrum of all frames that are in the memory.

Working with time lines in playback mode

To find a particular point in time and display the corresponding spectrum, you can use two time-lines (T1 and T2):

When entering the playback mode, the R&S Cable Rider ZPH displays the two time-lines in the spectrogram.

The first time-line (T1) corresponds to an absolute time value, the second time-line (T2) is a time relative to the first time-line. Both time-lines are positioned on the most recent spectrogram line at the top of the result display. (Note in this example that the second time-line (T2) is hidden behind the first time-line (T1)).

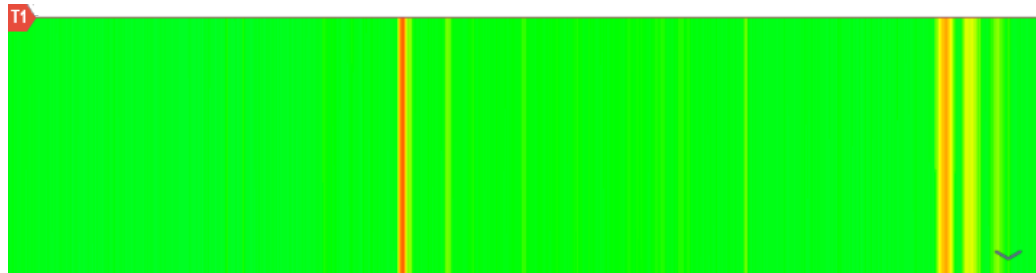

You can now select a specific spectrogram frame that is in the memory of the R&S Cable Rider ZPH.

1. Select the "Select Time Line" softkey.
The R&S Cable Rider ZPH opens an input field to define the position of the first time-line (T1).
2. Position the time line by entering a number or moving it with the rotary knob.
Entering the value "0" sets the time line marker on the most recent frame. The maximum value that you can enter is "1024". This is the maximum number of frames that the R&S Cable Rider ZPH can store in its memory.
Note that not all frames are visible on the screen. If a frame is part of the history outside the visible area, the time line is also not visible and you have to scroll through the spectrogram to be able to see it again. See ["Scrolling through the spectrogram"](#) on page 196.

The upper window displays the spectrum of the frame at the time-line position. By moving the time-line, you can thus browse through the history of spectra stored in memory.

In the marker information field, the R&S Cable Rider ZPH shows the timestamp of the time-line.

The timestamp of the first time-line (T1) is always referred to the top-most frame (e.g. a timestamp of 00:00:50:000 means that the data was measured 50 seconds before the topmost frame).

1. Select the "Select Time Line" softkey again.
The R&S Cable Rider ZPH opens an input field to define the position of the second time-line (T2).
2. Enter a number with the number keys or use the rotary knob to adjust the time line.
The R&S Cable Rider ZPH positions the second time line on the selected frame.
Again it shows the timestamp of the time line in the marker information field (ΔT value). For the second time line (T2), the information is relative to the first one (T1). This means that the timestamp of the second time line can be negative, if you have set it on a frame above the first time-line.

If you scroll the time line through the frames of the spectrogram with the rotary knob, the R&S Cable Rider ZPH shows the spectrum corresponding to the selected frame in the upper window of the display.

You can use the spectrogram playback for a detailed analysis of the signal levels over time and compare signal details in the spectrum result display, e.g. with the help of markers.

In addition to the time line (horizontal marker), you can also use (vertical) markers in the spectrogram.

With the help of the marker and the time line, you are able to find the exact moment when a specific event has occurred in the spectrum.

1. Press the [MARKER] key.
The R&S Cable Rider ZPH activates a marker and sets it on the peak level of the currently displayed spectrum.
2. Use the rotary knob to move the marker on the horizontal axis to the frequency you want to analyze or enter the frequency directly with the number keys.
3. Select the "Select Time Line" softkey and browse through the spectrograms using the rotary knob until the spectrum of interest is displayed in the upper window.
The timestamp of the selected time-line gives you a precise indication on when the event shown in the spectrum occurred.



For more information on marker functionality, see [Chapter 8.2.8, "Using Markers"](#), on page 234.

Switching back to active spectrogram recording

To resume recording of a new spectrogram:

- Select the "Live Update" softkey at any time you are in playback mode.
The R&S Cable Rider ZPH switches back to perform live measurements.

8.1.10 Using Isotropic Antennas

The R&S Cable Rider ZPH supports measurements with an isotropic antenna.

Depending on the measuring frequency requirement, you can order the isotropic antenna in the following list:

- R&S TSEMF-B1, 30 MHz to 3 GHz (order number: 1074.5719.02)
- R&S TSEMF-B2, 700MHz to 6 GHz (order number: 1074.5702.02)
- R&S TSEMF-B3, 9kHz to 200 MHz (order number: 1074.5690.02)

To work with the isotropic antenna, you need a USB adapter (TSEMF-CV, order number 1158.9250.02) to connect the antennas control cable via the USB interface of the R&S Cable Rider ZPH.

Test setup

The test setup consists of an R&S Cable Rider ZPH and one of the isotropic antennas. The necessary cables are provided with the antennas.



- 1 = Supported isotropic antenna (e.g. R&S TSEMF-B12)
2 = Isotropic RF connector
3 = USB adapter TSEMF-CV connecting to the isotropic antenna control cable
4 = USB port connector

1. Connect the RF cable with the N coaxial connector to the RF input port.
2. Connect the antenna control cable to the USB interface of the R&S Cable Rider ZPH via the USB adapter TSEMF-CV.

If the R&S Cable Rider ZPH detects the isotropic antenna, the accessory name "Isotropic Antenna" is displayed in the [title bar](#).

Start the measurement

1. Press the [MEAS] key.
2. Select the "Meas Mode" softkey.
The R&S Cable Rider ZPH opens a submenu to select the measurement mode.
3. Select the "Isotropic Antenna" menu item.
After you have turned on the isotropic antenna, the R&S Cable Rider ZPH uses the isotropic antenna for all measurements.

Note: When you turn on the isotropic antenna without selecting a transducer factor, the R&S Cable Rider ZPH displays the file manager dialog to select a transducer factor. When the isotropic antenna is turn off, the transducer factor is unloaded.

Using transducer factors

The isotropic antenna is like a transducer. It has a characteristic frequency response and it is necessary to correct the measurement results by these characteristics.

The transducer factors (*.isotrd) for each of the supported isotropic antennas are provided with the R&S Cable Rider ZPH. The factors contain typical correction values for all three antenna elements and the correction values for the cable.

1. Press the [SCALE/AMPT] key.
2. Select the "Transducer" softkey.
3. Select the "Select Primary" menu item.
The R&S Cable Rider ZPH opens a file manager dialog box to select the transducer factor.
4. Select the transducer factor you need.
The R&S Cable Rider ZPH shows the name of the active transducer on the display (e.g. "Pri Tran TSEMF-B2_typical").

If you are using the extension cable (R&S TS-EMFZ2, order number: 1166.5708.04) , you have to take this into account as a secondary transducer.

1. Press the [SCALE/AMPT] key.
2. Select the "Transducer" softkey.
3. Select the "Select Secondary" menu item.
The R&S Cable Rider ZPH opens a file manager dialog box to select the transducer factor with the unit dB.
4. Select the transducer factor for the extension cable.
The R&S Cable Rider ZPH shows the name of the active transducer on the display (e.g. "Sec Tran TSEMFZ2").

For more information, see [Chapter 8.4, "Using Transducer Factors"](#), on page 249.

You can create and edit transducer factor with the R&S InstrumentView software package and then transfer them into the internal memory of the R&S Cable Rider ZPH. Each transducer factor can consist of up to 1000 reference values.

Display of the antenna directions

An isotropic antenna consists of three orthogonal elements. Each of these elements measures the field strength from a different direction (x-, y- and z-axis).



Decrease of measurement speed

The R&S Cable Rider ZPH performs a measurement on each of the three antenna axes, the update rate of the results decreases slightly.

You can select to display different aspects of the measurement.

1. Select the "Meas Mode" softkey.
2. Select the "Isotropic Antenna" menu item.
The R&S Cable Rider ZPH opens a new menu to select the measurement aspect.
 - "Auto"
Shows the total field strength over all three antenna axes.
The displayed result is a combination of the results for each antenna element. After measuring each of the three directions individually, the R&S Cable Rider ZPH calculates the total field strength (E_r) based on the results for each antenna element.
$$E_r = \sqrt{E_x^2 + E_y^2 + E_z^2}$$
 - "X"
Shows the field strength measured on the antenna's x-axis only.
 - "Y"
Shows the field strength measured on the antenna's y-axis only.
 - "Z"
Shows the field strength measured on the antenna's z-axis only.

Direct current output

The BNC and RF connector can be configured as in internal DC bias port to provide direct current output for active equipment under test. When the internal DC bias port is activated, the status of the internal DC bias connector, voltage and current setting is displayed at the right-hand corner of the trace window.

For more information, see [Internal DC bias connection..](#)


8.2 Configuring Spectrum Measurements

Basic measurement settings that are common to many measurement tasks, regardless of the application or operating mode, are described here. If you are performing a specific measurement task, using an operating mode other than Signal and Spectrum Ana-

lyzer mode, or an application other than the Spectrum application, check the specific application or mode description for settings that may deviate from these common settings.

• Configuration Overview	211
• Configuring the Horizontal Axis	212
• Configuring the Vertical Axis	215
• Configuring the Tracking Generator	220
• Setting Bandwidths	221
• Configuring and Triggering the Sweep	224
• Working with Traces	229
• Using Markers	234
• Using Display Lines	245
• Using Limit Lines	245

 8.2.1 Configuration Overview



The "Configuration Overview" provides an overview on the most important currently defined settings for the spectrum measurement. See [Chapter 4.1.4.1, "Configuration Overview"](#), on page 36. It is displayed when you select the "Config Overview" icon, which is available at the bottom of "Parameter View". See [Chapter 4.1.4, "Parameter View"](#), on page 35.



The "Configuration Overview" provides quick access and allows easy configuration on the parameters that affect the spectrum measurement from input to signal processing to output and signal analysis by stepping through each of the following dialog boxes:

- "Input"
See [Chapter 8.2.3.7, "Setting the Input Impedance"](#), on page 219.
- "Amplitude"
See [Chapter 8.2.3, "Configuring the Vertical Axis"](#), on page 215.
- "Frequency"
See [Chapter 8.2.2, "Configuring the Horizontal Axis"](#), on page 212.

- "Bandwidth"
See [Chapter 8.2.5, "Setting Bandwidths"](#), on page 221.
- "Analysis"
See [Chapter 8.2.7, "Working with Traces"](#), on page 229.
- "Trigger"
See [Chapter 8.2.6.3, "Working with Trigger Functionality"](#), on page 226

To configure settings

Select any of the six configuration dialog boxes to open the corresponding dialog box.
See [Table 4-2](#).

8.2.2 Configuring the Horizontal Axis



The [FREQ/DIST] key contains all necessary functions to configure the horizontal axis for spectrum measurements.

The contents of the menu depend on the currently selected measurement.

Usually, the horizontal axis contains frequency information in spectrum mode. You can specify the frequency in terms of the center frequency or by defining a start and stop frequency for a particular span.

If you know the frequency of the signal you are measuring, it is best to match the center frequency to the signal's frequency. If you are investigating signals, e.g. harmonics, that are within a particular frequency range, the best option is to enter a start and stop frequency to define the span.

- [Defining the Center Frequency](#).....212
- [Defining a Frequency Step Size](#).....213
- [Setting a Frequency Offset](#).....213
- [Defining a Start and Stop Frequency](#).....214
- [Setting the Span](#).....214

8.2.2.1 Defining the Center Frequency

The center frequency represents the frequency at the center of the horizontal axis in the diagram area.

1. Press the [FREQ/DIST] key.
2. Select the "Center Freq" softkey.
The R&S Cable Rider ZPH opens an input field to define the center frequency.
3. Enter the center frequency you need.
The frequency you have entered becomes the new center frequency.

**Special touchscreen gesture**

Alternatively, define the center frequency by swiping horizontally across the touchscreen to change the center frequency.

See [Chapter 5.1.1, "Change Center Frequency"](#), on page 89.

While adjusting the center frequency, you may obtain a value that is outside the R&S Cable Rider ZPH maximum span. If this happens, the R&S Cable Rider ZPH automatically reduces the span.

8.2.2.2 Defining a Frequency Step Size

If you set the center frequency with the rotary knob, the distance of each step that you take depends on the span. With the rotary knob, the smallest possible step is a pixel. As the trace consists of 711 pixels, each step is equal to 1/711 of the span.

You can set another step size.

1. Press the [FREQ/DIST] key.
2. Select the "CF Step Size" softkey.
The R&S Cable Rider ZPH opens a submenu that contains possible step sizes.
 - "0.1 x Span"
The step size equals 10 % of the span or 1 division of the horizontal axis.
 - "step = Center"
The step size equals the center frequency.
This step size is ideal for measurements on harmonics. When you increase or decrease the center frequency, the center frequency automatically moves to the next harmonic.
 - "Manual"
An entry box is displayed to define the value.
This step size makes it easy to investigate a spectrum with frequencies at constant intervals.
3. Select the step size you need from the menu.
The R&S Cable Rider ZPH adjusts the step size accordingly.

If you set the step size to 10 % of the span or to the center frequency, the R&S Cable Rider ZPH sets the step size internally. Manually defining the step size opens an input field to define the step size.

8.2.2.3 Setting a Frequency Offset

For measurements on frequency converters such as satellite downconverters, it is often convenient to reference the results to the frequency before conversion. For this purpose, the R&S Cable Rider ZPH offers a frequency offset that arithmetically shifts the center frequency to higher or lower frequencies. Thus, the R&S Cable Rider ZPH displays the input frequency of the DUT.

Positive frequency offset is possible in the range from 1 Hz to 100 GHz, in steps of 1 Hz. The maximum negative frequency offset depends on the start frequency you have set. The start frequency, taking into account the frequency offset, is always ≥ 0 Hz.

1. Press the [FREQ/DIST] key.
2. Select the "Freq Offset" softkey.
The R&S Cable Rider ZPH opens an input field to set the frequency offset.
3. Enter the frequency offset you need.
The R&S Cable Rider ZPH adds the frequency offset to the center frequency you have set. A blue dot at the center frequency display indicates that a frequency offset has been set.

8.2.2.4 Defining a Start and Stop Frequency

Defining a start and a stop frequency is best suited for example, for measurements on harmonics or signals whose exact frequency is unknown.

1. Press the [FREQ/DIST] key.
2. Select the "Start Freq" softkey.
The R&S Cable Rider ZPH opens an input field to define the start frequency.
3. Enter the start frequency you need.
4. Set a stop frequency with the "Stop Freq" softkey.
The R&S Cable Rider ZPH adjusts the horizontal axis according to your input, beginning with the start frequency and ending with the stop frequency.
If you have entered a stop frequency that is outside the maximum frequency range, the R&S Cable Rider ZPH sets the stop frequency to the possible maximum.
The softkey label of the "Parameter View" changes from "Center" and "Span" to "Start" and "Stop".

8.2.2.5 Setting the Span



The span is the frequency range around the center frequency that a spectrum analyzer displays on the screen. The span you should select depends on the signal and the measurement that you are performing. A rule of thumb is that it should be at least twice the bandwidth occupied by the signal.

The available span for frequency domain measurements depends on the instrument model and installed option.

Model	Frequency upgrade option	Order number for frequency upgrade option
Model 02 - 2MHz to 3.0 GHz	R&S ZPH-B4, 2 MHz to 4 GHz	1321.0380.02

If you set a span of 0 Hz (zero span), the R&S Cable Rider ZPH performs measurements in the time domain.

1. Select the "Span" softkey on the "Parameter view" to define the span.
Alternatively, press the [CAL/SPAN] key.
The R&S Cable Rider ZPH opens an input field to define the span.
2. Enter the span you need.
The R&S Cable Rider ZPH adjusts the span of the horizontal axis.



Special touchscreen gesture

Alternatively, pinch and stretch on the touchscreen to change the span parameter.
See [Chapter 5.1.3, "Change Span"](#), on page 90.

If you have to switch between full span and a smaller span, you can do so without having to enter the numeric values.

1. Press the [CAL/SPAN] key.
2. Select the "Full Span" softkey.
The R&S Cable Rider ZPH displays the spectrum over its entire frequency range.
3. Select the "Last Span" softkey.
The R&S Cable Rider ZPH restores the span that you have set just before displaying the entire frequency range.

Time domain measurements

You can also activate time domain measurements without having to enter the value manually. When measuring in the time domain, the span is 0 Hz. In that state, the R&S Cable Rider ZPH measures the signal at the current center frequency only. Instead of displaying the spectrum, the R&S Cable Rider ZPH shows the signal power over a certain time period. The horizontal axis becomes the time axis. The display always starts at 0 s and stops after the currently set sweep time.

1. Press the [CAL/SPAN] key.
2. Select the "Zero Span" softkey.
The R&S Cable Rider ZPH sets a span of 0 Hz and performs the measurement in the time domain.

8.2.3 Configuring the Vertical Axis



All relevant settings to configure the vertical axis are available in the amplitude menu. You can access it via the [AMPT] key.

• Setting the Reference Level	216
• Setting a Display Range	217
• Selecting the Display Unit	217
• Setting a Reference Offset	217
• Setting the RF Attenuation	218
• Using the Preamplifier	219
• Setting the Input Impedance	219
• Using Transducer Factors	220

8.2.3.1 Setting the Reference Level

The reference level is represented graphically by the grid line at the top of the diagram.

The reference level sets the input signal gain up to the display stage. If the reference level is low, the gain is high. That means that even weak signals are displayed clearly.

If you are measuring strong signals, you have to set a high reference level to prevent an overload of the signal path of the analyzer and to keep the signal within the display range. If you are measuring the spectrum of a composite signal, make sure that the reference level is high enough to cover all signals and that all signals are within the measurement diagram.

1. Press the [SCALE/AMPT] key.
2. Select the "Ref Level" softkey.
The R&S Cable Rider ZPH opens an input field to define the reference level.
3. Enter the reference level you require.
If you change the reference level, the R&S Cable Rider ZPH adjusts the position of the trace as you make the changes.



Special touchscreen gesture

Alternatively, define the reference level by swiping vertically across the touchscreen to change the reference level.

See [Chapter 5.1.2, "Change Reference Level"](#), on page 90.

By default, the reference level corresponds to the grid line at the top of the diagram. You can also change the position of the reference level to another grid line if you have a signal that would otherwise overlap with the top of the diagram area. The R&S Cable Rider ZPH indicates the current reference level position with a triangle at the corresponding grid line on the vertical axis. See index 9 on [Chapter 4.1, "Screen Layout and Elements"](#), on page 32.

1. Press the [SCALE/AMPT] key.
2. Select the "Range / Ref Pos" softkey.
The R&S Cable Rider ZPH opens a submenu.
3. Select the "Ref Position 10..." menu item.
The R&S Cable Rider ZPH opens an input field to define the reference position.

4. Enter the number of the grid line you want the reference level to position at.
The range is from 0 to 10. "0" corresponds to the lowest grid line, "10" corresponds to highest grid line.

8.2.3.2 Setting a Display Range

The display range determines the scaling or resolution of the vertical axis. In the default state, the display range is a logarithmic scaling over a 100 dB. This corresponds to 10 dB per grid division. The R&S Cable Rider ZPH provides other display ranges that either increase or decrease the resolution of the vertical axis.

However, increasing resolution does not increase the accuracy of, for example, the marker level readout, but only makes it easier to read values off the trace.

You can also select a linear scale for the vertical axis. In that case, the power levels are expressed as a percentage of the reference level. Linear scaling is useful to display AM modulated carriers in the time domain, for example.

1. Press the [SCALE/AMPT] key.
2. Select the "Range / Ref Pos" softkey.
The R&S Cable Rider ZPH opens a submenu to select the display range.
3. Select the display range you need.
The R&S Cable Rider ZPH adjusts the vertical axis accordingly.

8.2.3.3 Selecting the Display Unit

By default, the vertical axis (and therefore the reference level) is scaled in dBm. However, the units dBmV, dBV, Watt and Volt are also available. Selecting the right unit is relevant for the marker level display because the unit of the marker level is the same as the reference level.

1. Press the [SCALE/AMPT] key.
2. Select the "Unit" softkey.
The R&S Cable Rider ZPH opens a submenu to select the display unit.
3. Select one of the available units.
The R&S Cable Rider ZPH adjusts the vertical axis accordingly.

8.2.3.4 Setting a Reference Offset

You can define a reference offset for the reference level. With a reference offset, you can increase the reference level by a certain amount. This is useful, for example, if an attenuator or amplifier has been inserted before the RF input. The R&S Cable Rider ZPH automatically takes the loss or gain into account when the level is displayed and no manual calculations are necessary. A loss introduced at the RF input must be entered as a positive number and a gain as a negative number.

1. Press the [SCALE/AMPT] key.
2. Select the "Ref Offset" softkey.
The R&S Cable Rider ZPH opens an entry box to define input field.
3. Enter the offset you need.
The R&S Cable Rider ZPH includes the offset in puts in the measurement.
To indicate an offset other than 0, the R&S Cable Rider ZPH puts a blue dot at the "REF" field displays in the "Parameter View".

8.2.3.5 Setting the RF Attenuation

RF attenuation adjusts the input range inside the analyzer. It is coupled directly to the reference level. If you have set a high reference level, RF attenuation is turned on in 10 dB steps according to the table below so that the input mixer always remains in the linear range.

The R&S Cable Rider ZPH provides three attenuation modes.

- **Auto Low Distortion**
If this mode is active, the R&S Cable Rider ZPH sets the RF attenuation 10 dB higher according to the table below, making the stress of the input mixer 10 dB less at the specified reference level. If the spectrum is densely occupied with signals, e.g. in a television cable network, the input mixer reduces the R&S Cable Rider ZPH inherent spurious products. However, the inherent noise display of the R&S Cable Rider ZPH increases due to the increased attenuation in front of the input mixer.
- **Auto Low Noise**
If this mode is active, the R&S Cable Rider ZPH sets the RF attenuation 10 dB lower. This increases the sensitivity of the R&S Cable Rider ZPH, which means that the inherent noise display decreases due to the lower attenuation in front of the input mixer.
- **Manual**
Manual selection of the attenuation.

You can check the status of the RF attenuation and the preamplifier in the "Configuration Overview" dialog and in the "Parameter View" area.

Reference Level	Preamplifier OFF RF Attenuation		Preamplifier ON RF Attenuation	
	Low Noise	Low Distortion	Low Noise	Low Distortion
<=-40 dBm	0 dB	0 dB	0 dB	0 dB
-39 dBm to -35 dBm	0 dB	0 dB	0 dB	5 dB
-34 dBm to -30 dBm	0 dB	0 dB	0 dB	10 dB
-29 dBm to -25 dBm	0 dB	0 dB	0 dB	15 dB
-24 dBm to -20 dBm	0 dB	0 dB	0 dB	20 dB
-19 dBm to -15 dBm	0 dB	5 dB	5 dB	25 dB

Reference Level	Preamplifier OFF		Preamplifier ON	
	RF Attenuation		RF Attenuation	
-14 dBm to -10 dBm	0 dB	10 dB	10 dB	30 dB
-9 dBm to -5 dBm	5 dB	15 dB	15 dB	35 dB
-4 dBm to 0 dBm	10 dB	20 dB	20 dB	40 dB
1 dBm to 5 dBm	15 dB	25 dB	25 dB	40 dB
6 dBm to 10 dBm	20 dB	30 dB	30 dB	40 dB
11 dBm to 15 dBm	25 dB	35 dB	35 dB	40 dB
16 dBm to 20 dBm	30 dB	40 dB	40 dB	40 dB
21 dBm to 25 dBm	35 dB	40 dB	40 dB	40 dB
26 dBm to 30 dBm	40 dB	40 dB	40 dB	40 dB

1. Press the [SCALE/AMPT] key.
2. Select the "Att / Amp / Imp" softkey.
3. Select either the "Auto Low Distortion" or the "Auto Low Noise" menu item.
The R&S Cable Rider ZPH sets the attenuation according to the table above.
4. Select the "Manual Att" for manual entry of the RF attenuation.
Alternatively, you can select the "ATT" softkey on the "Parameter View" to enter manually for the RF attenuation.
The R&S Cable Rider ZPH opens an entry box to set the RF attenuation. You can set the attenuation from 0 dB to 40 dB in 5 dB steps.
To indicate a manual attenuation, the R&S Cable Rider ZPH puts a blue dot at the "ATT" displays on the "Parameter View".

8.2.3.6 Using the Preamplifier

To increase the input sensitivity, the R&S ZPH-B22 provides an integrated 20 dB pre-amplifier after the input mixer.

In the default state of the R&S Cable Rider ZPH, the preamplifier is turned off. If you want to measure signals with low powers, you can turn it on.

1. Press the [SCALE/AMPT] key.
2. Select the "Att / Amp / Imp" softkey.
3. Enable or disable the checkbox to turn on or off the "Preamp" menu item.
The R&S Cable Rider ZPH turns the preamplifier on and off.

8.2.3.7 Setting the Input Impedance

In the default state, the input impedance is 50 Ω .

The R&S Cable Rider ZPH can also handle 75 Ω systems. The R&S Cable Rider ZPH does not select a 75 Ω RF input. Instead it selects a 75 Ω matching pad connected at the RF input. The 50/75 Ω matching pad R&S RAZ is recommended for 75 Ω matching (see recommended accessories). The R&S Cable Rider ZPH automatically considers the conversion factor when a value of 75 Ω is set.

1. Press the [SCALE/AMPT] key.
2. Select the "Att / Amp / Imp" softkey.
3. Select the impedance you need.
You can also use other matching pads (e.g. R&S RAM or R&S FSH-Z38) by activating transducer factors.

8.2.3.8 Using Transducer Factors

For more information, see [Chapter 8.4, "Using Transducer Factors"](#), on page 249.

8.2.4 Configuring the Tracking Generator

The tracking generator provides a stimulus signal in the spectrum measurement mode.

Configuring the signal source

You can select the type of generator source in three different ways.

- "Tracking"
Output frequency depends on current measurement frequency.
 - "CW"
Output frequency can be defined.
 - "Coupled CW"
Output frequency is coupled to the current measurement center frequency.
1. Press [MEAS] key.
 2. Select "Source" softkey.
The R&S Cable Rider ZPH opens the signal source menu.
 3. Select "Source Mode" softkey.
The R&S Cable Rider ZPH opens the submenu that contains the signal source selection.
 4. Select the required signal source.
 - If selected signal source is "Tracking", the R&S Cable Rider ZPH opens an input field to specify the tracking generator offset frequency, "TG Offset".
 - If selected signal source is "CW", the R&S Cable Rider ZPH opens an input field to specify the continuous waveform frequency, "CW Freq".

- If selected signal source is "Coupled CW", the R&S Cable Rider ZPH coupled the output signal source frequency with the current measurement center frequency

Defining the level of the stimulus signal

You can define the level of the stimulus signal an absolute level in terms of dBm as

1. Select the "Source Level" softkey.
The R&S Cable Rider ZPH opens an input field to specify the source level.
2. Enter the required source level.

Note that the actual output level you measure can deviate from the value you enter and may not be linear over the frequency range of the measurement. It is recommend to always normalize or calibrate a measurement to compensate for any level variations caused by the tracking generator. For more information about calibration, see [Chapter 7.1.7, "Calibrating Measurements"](#), on page 137.



Tracking generator output level

Using a tracking generator attenuation of 0 dB for S12 or S21 measurements can cause an overload at the RF input. It is therefore recommended to use an output level of -10 dBm (default) or lower for these measurements.

This especially applies to measurements on amplifiers.

Turning the tracking generator on and off

1. Select the "Source Mode" softkey.
The R&S Cable Rider ZPH opens the submenu that contains the signal source selection.
2. Select "Off" menu item.
The R&S Cable Rider ZPH turns off the signal source.

8.2.5 Setting Bandwidths

The bandwidth menu contains all settings to set up filter bandwidths available in the R&S Cable Rider ZPH. You can access it with the [BW] key.

- [Setting the Resolution Bandwidth](#)..... 221
- [Setting the Video Bandwidth](#)..... 223

8.2.5.1 Setting the Resolution Bandwidth



The resolution bandwidth in a spectrum analyzer determines the frequency resolution for frequency domain measurements and therefore determines how well it can separate adjacent frequencies. The measurement result observed depends on the pass-band of a resolution filter.

The resolution bandwidth (RBW) has several effects on measurements.

- To be able to display two or more signals whose frequencies are close together separately, you need a (resolution) filter whose bandwidth is small enough. The frequency difference between two sinusoidal carriers cannot be less than the selected resolution bandwidth if the carriers are to be resolved, for example.
- The bandwidth of the resolution filter also affects the noise that is displayed by the R&S Cable Rider ZPH. The smaller the bandwidth, the less noisy the results are. The rule is, that if you increase or decrease the bandwidth by a factor of 3, the noise goes down or up by 5 dB. If you change the bandwidth by a factor of 10, the displayed noise changes by 10 dB.
- The resolution bandwidth affects the speed of the measurement. If you want to display the true spectrum, the resolution filters have to settle at all frequencies that are of interest. Narrow band filters have a longer settling time compared to wide ones. Therefore the sweep time increases the smaller the resolution bandwidth gets. The rule is, that if you reduce the bandwidth by a factor of 3, the sweep time goes up by a factor of 9. If you reduce the bandwidth by a factor of 10, the sweep time goes up by a factor of 100.

The R&S Cable Rider ZPH has resolution bandwidths from 1 Hz to 3 MHz in a 1-3-10 sequence.

In the R&S Cable Rider ZPH's default state, the resolution bandwidth is coupled to the span, i.e. if you change the span, the R&S Cable Rider ZPH adjusts the resolution bandwidth. Therefore, you do not have to set the resolution bandwidth manually in many cases, because the R&S Cable Rider ZPH automatically sets the resolution bandwidth if you change the span.

1. Press the [DTF/BW] key.
By default, the resolution bandwidth is coupled to the span.
2. Select the "Manual RBW" softkey.
The R&S Cable Rider ZPH opens an input field to define the resolution bandwidth.
3. Enter the resolution bandwidth you need.
The R&S Cable Rider ZPH uses the resolution bandwidth you have entered for the measurement.
If the resolution bandwidth is no longer coupled to the span, the R&S Cable Rider ZPH puts a blue dot at the "RBW" displays on the "Parameter View".
4. Select the "Auto RBW" softkey to again couple the resolution bandwidth to the span.



Automatic adjustment of the sweep time

In its default mode, the R&S Cable Rider ZPH automatically adjusts the sweep time as soon as you change the resolution bandwidth. This adjustment makes sure that the settling time required for the selected resolution filter is properly taken into account. The maximum allowed sweep time is 1000 s. For narrow resolution filters this value would be exceeded for large spans. To avoid this situation, the R&S Cable Rider ZPH adjusts the span automatically as soon as the maximum sweep time is reached.


8.2.5.2 Setting the Video Bandwidth

The video bandwidth (VBW) basically smoothes the trace by reducing the noise and therefore making power levels easier to see.

The noise reduction is a result of the video filter. This lowpass filter defines the video bandwidth and filters the higher frequency parts of the voltage from the signal. Video voltage is the (DC) voltage that results from the IF signal passing through the envelope detector which removes the IF components and outputs the envelope only. This output is also known as the video signal.

The figure below shows that process on an AM modulated signal in the time domain.

In case of an AM modulated signal, the envelope (or video) signal contains a DC component that corresponds to the level of the carrier. The video signal also contains an AC component whose frequency is the same as the AM frequency.

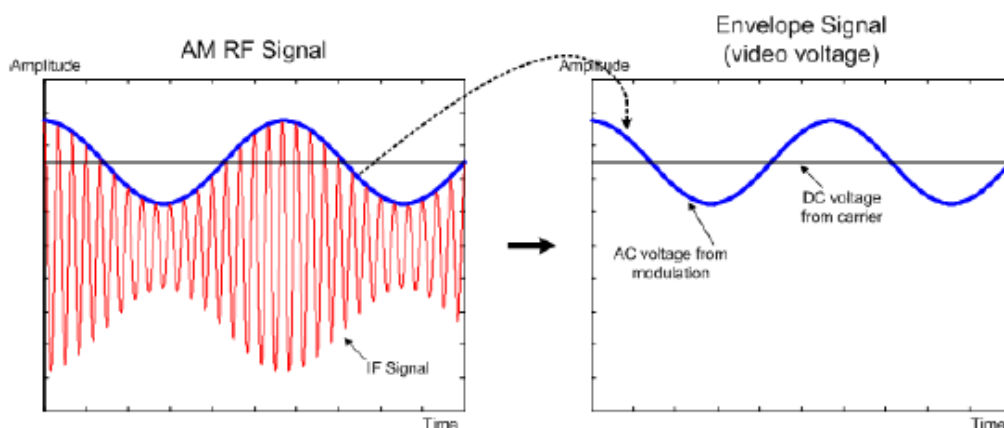

If the bandwidth of the video filter is less than the frequency of the AC component, it is suppressed depending on its maximum frequency. If the AM component should be displayed truly, the cutoff frequency of the filter has to be greater than the modulation frequency.

If there is noise on the sine signal, the modulation signal can be thought of as noise. If the video bandwidth is reduced, the high-frequency noise components above the cutoff frequency of the video filter is rejected. The smaller the video bandwidth, the smaller the noise amplitude at the video filter output.

The R&S Cable Rider ZPH provides video bandwidths from 1 Hz to 3 MHz in a 1-3-10 sequence. In its default state, the video bandwidth is coupled to the resolution band-

width and is the same as the resolution bandwidth. If you change the resolution bandwidth, the R&S Cable Rider ZPH adjusts the video bandwidth accordingly.

The effects of the video bandwidth on measurements are as follows.

- If you are performing measurements on modulated signals, the video bandwidth must be sufficiently large so that significant modulation components are not rejected ($\geq$ RBW)
- If you want to keep signals free of noise, you should select the smallest video bandwidth possible ($\leq 0.1 \times$ RBW)
- If you are performing measurements on pulsed signals, the video bandwidth should be at least three times greater than the resolution bandwidth so that the pulse edges are not distorted

Like the resolution bandwidth, the video bandwidth has an effect on sweep speed. Before each measurement, the video filter has to settle.

1. Press the [DTF/BW] key.
By default, the resolution bandwidth is coupled to the span.
2. Select the "Manual VBW" softkey.
The R&S Cable Rider ZPH opens an input field to define the video bandwidth.
3. Enter the video bandwidth you need.
The R&S Cable Rider ZPH uses the video bandwidth you have entered for the measurement. If the video bandwidth is no longer coupled to the resolution bandwidth, the R&S Cable Rider ZPH puts a blue dot at the "VBW" displays on the "Parameter View".
4. Select the "Auto VBW" softkey again to couple the video bandwidth to the RBW.

8.2.6 Configuring and Triggering the Sweep

You can find all necessary settings to configure the sweep itself in the sweep menu. To access it, press the [SWEEP] key.

- [Setting the Sweep Time](#)..... 224
- [Selecting the Sweep Mode](#)..... 225
- [Working with Trigger Functionality](#)..... 226

8.2.6.1 Setting the Sweep Time



The sweep time is the time it takes the R&S Cable Rider ZPH to get the results that are contained in one trace.

In the frequency domain (span > 0), the sweep time is the time it takes the R&S Cable Rider ZPH to measure the spectrum in the specified span. To avoid the display of spurs in the spectrum, the sweep time has to meet some conditions.

- The sweep time depends on the resolution bandwidth. If the sweep time is too short, the resolution filter has no time to settle. In that case, the displayed level is

too low. For more information, see [Chapter 8.2.5.1, "Setting the Resolution Bandwidth"](#), on page 221.

- The sweep depends on the span. If you increase the span, you also have to increase the sweep time.

In its default state, the R&S Cable Rider ZPH couples the sweep time to the span and the resolution bandwidth to avoid invalid settings. If the coupling is active, the R&S Cable Rider ZPH always sets the shortest possible sweep time to make sure that the display of the spectrum is correct and valid.

The R&S Cable Rider ZPH requires a minimum sweep time of 20 ms for every 600 MHz of span. If you increase the span, the R&S Cable Rider ZPH will also increase the sweep time.

In the time domain (span = 0), the R&S Cable Rider ZPH shows the video voltage over time. The horizontal axis becomes a time axis that starts at 0 s and ends at the sweep time that you selected. The range of the sweep time in the time domain is from 34 μ s to 1000 s.

1. Press the [SWEEP] key.
In the default state, "Auto SWT" is active.
2. Select the "Manual SWT" softkey.
The R&S Cable Rider ZPH opens an input field to set the sweep time.
3. Enter the sweep time you need.
If the video bandwidth is no longer coupled to the span or the resolution bandwidth, the R&S Cable Rider ZPH puts a blue dot at the "SWT" displays on the "Parameter View".

8.2.6.2 Selecting the Sweep Mode

The sweep mode is the way the R&S Cable Rider ZPH performs the measurement.

In its default state, the R&S Cable Rider ZPH measures continuously. In this mode, the R&S Cable Rider ZPH automatically repeats the sweep in the defined range of the horizontal axis (frequency or time) and updates the trace accordingly after it has finished with one sweep.

In some cases, it may be sufficient to get the results over a single sweep only, e.g. if a particular trigger condition is met. In single sweep mode, the R&S Cable Rider ZPH performs the sweep a certain number of times (depending on the number of averages you have set) over the defined range of the horizontal axis (frequency or time) and then stops measuring. It performs another sweep only after you tell it to. For more information on setting the number of sweeps included in a single sweep, see [Chapter 8.2.7.1, "Selecting the Trace Mode"](#), on page 229.

1. Press the [SWEEP] key.
2. Select the "Single Sweep" softkey.
The R&S Cable Rider ZPH activates single sweep mode.
3. Select the "Cont Sweep" softkey.

The R&S Cable Rider ZPH again starts to measure continuously.

8.2.6.3 Working with Trigger Functionality

If you have to perform measurements according to certain signal conditions, you can use a trigger. A trigger responds to certain events. If a trigger is active, the R&S Cable Rider ZPH starts to measure if the trigger conditions are met. The trigger can be generated either externally or internally. The R&S Cable Rider ZPH provides the following trigger functions.

Selecting the trigger source

1. Press the [SWEEP] key.
2. Select the "Trigger" softkey.
The R&S Cable Rider ZPH opens a submenu to select the trigger source.
3. Select the trigger source you need.
The R&S Cable Rider ZPH activates the trigger.

The R&S Cable Rider ZPH provides the following trigger functions.

- **Free Run**
A new sweep starts on completion of the previous sweep. This sweep mode is the default state of the R&S Cable Rider ZPH.
- **Video Trigger**
A sweep starts when the video voltage exceeds a particular level. The video trigger is available only in the time domain (span = 0).
In the frequency domain, the R&S Cable Rider ZPH would never start a measurement with the video trigger because there is no guarantee that there is a signal that generates video voltage present at the start frequency.
- **External Trigger** (rising or falling slope)
A sweep starts on the rising edge (RISE) or on the falling edge (FALL) of an external trigger signal. The external trigger signal is fed in via the BNC connector "Ext Trigger". See details of connector in [BNC connector](#). The switching threshold is 1.4 V, i.e. a TTL signal level.
- **Gated Trigger**
When the gated trigger is active, a gate signal that is applied to the R&S Cable Rider ZPH trigger input controls the sweep. The R&S Cable Rider ZPH starts measuring when the applied gate signal becomes active and the set gate delay has expired, and it interrupts the measurement as soon as the defined gate length is reached. With the gate signal becoming active the next time the measurement is resumed etc.
Pulsed signals can be measured by this method, if the gate delay and gate length are selected in a way that the measurement is only performed while the pulse is active. Gated measurements are possible in the frequency domain (span > 0) and the time domain (span = 0).

Including a Delay Time

When you are using a video trigger in the time domain or an external trigger, you can delay the start of the measurement with respect to the trigger event by entering a delay time. In this way, you can include time differences between the trigger event and the measurement.

The range of the trigger delay is from 0 s to 100 s. The resolution depends on the sub-range.

Trigger Delay	Resolution
0 ms to 1 ms	10μ
1 ms to 10 ms	100 μ
10 ms to 100 ms	1 ms
100 ms to 1 s	10 ms
1s to 10s	100 ms
10s to 100s	1 s

1. Press the [SWEEP] key.
2. Select the "Trigger" softkey.
3. Select the "Trigger Delay" menu item.
The R&S Cable Rider ZPH opens an input field to define the trigger delay.
4. Enter the delay time you need.

Defining the Trigger Level

When you are using the video trigger, you have to define a trigger level. The trigger level is a percentage of the reference level. A trigger level of 100 % is the same as the reference level. A trigger level of, e.g. 50 % corresponds to the middle of the vertical axis. The R&S Cable Rider ZPH indicates the video trigger level with a triangle.

1. Press the [SWEEP] key.
2. Select the "Trigger" softkey.
3. Select the "Video" menu item.
The R&S Cable Rider ZPH opens an input field to define the trigger level.
4. Enter the trigger level.
The R&S Cable Rider ZPH shows the trigger level by adding a horizontal line to the diagram area.

Performing Gated Sweeps

After the gate settings are configured, it is possible to perform a gated sweep measurement.

Example:

Using a signal source, i.e R&S SMU to generate an LTE signal at 500 MHz (TDD duplexing, Downlink (OFDMA), 1 frame sequence length). Connect the signal source RF output to the RF input connector of the R&S Cable Rider ZPH.

1. Press the [SWEEP] key.
2. Select the "Trigger" softkey.
3. Select the "Gated Trigger" menu item.
To get appropriate results, you have to set the gate delay and gate length in a way that the measurement is active during the interesting part of the signal. You can also modify the sweep time to match the horizontal axis to the length of the signal and thus set the gate delay and gate length parameters more accurately.
The gate delay parameter defines the time between the trigger event and the beginning of the actual measurement. The gate length defines the duration of the measurement, before it is interrupted and the next gate signal is anticipated to resume the measurement.
4. Press the [SWEEP] key.
5. Select the "Trigger" softkey.
6. Select the "Gate Settings" menu item.
The R&S Cable Rider ZPH opens a softkey submenu to control the gate settings. At the same time, the R&S Cable Rider ZPH switches into time domain, as indicated in the display. See [Figure 8-11](#) (time domain).
7. Select the "Manual SWT" softkey and set the sweep time in a way that the portion of interest of the signal is visible on the screen.
8. Select the "Gate Delay" softkey.
The R&S Cable Rider ZPH opens an input field to define the trigger delay.
9. Enter the delay time you need.
The measurement now starts after the delay time has passed.
10. Select the "Gate Length" softkey.
The R&S Cable Rider ZPH opens an input field to define the gate length.
11. Enter the length of the gate.
The R&S Cable Rider ZPH now measures over the period of the gate length. After the gate has closed, the R&S Cable Rider ZPH waits with the measurement until the next gate signal happens.
The delay time and gate length are represented by vertical blue lines in the diagram area.
12. After setting the gate delay and gate length, exit the gate settings menu with any of the [function keys](#).
The R&S Cable Rider ZPH returns to the frequency domain provided it was active before setting up the gated trigger. The original span is restored. The R&S Cable

Rider ZPH is ready to perform measurements with an accurately set gate. See [Figure 8-11](#) (frequency domain).



Figure 8-11: Gate trigger measurement

- 1 = Gate trigger settings mode
- 2 = Gate delay
- 3 = Gate length
- 4 = RF frequency
- 5 = Gate trigger softkeys menu
- 6 = Span 0 Hz (time domain)
- 7 = Measurement of LTE signal within the gate length

8.2.7 Working with Traces

The trace menu contains all functions available to customize the trace display.

- [Selecting the Trace Mode](#)..... 229
- [Selecting the Detector](#)..... 230
- [Working with a Second Trace](#)..... 232
- [Working with Memory Traces](#)..... 233
- [Using Trace Mathematics](#)..... 234

8.2.7.1 Selecting the Trace Mode



The R&S Cable Rider ZPH provides several trace modes. The trace mode defines the way the R&S Cable Rider ZPH writes the trace.

1. Press the [TRACE] key.
2. Select the "Trace Mode" softkey to set the trace mode.
3. Select the trace mode you want to work with.
If you have selected the average trace mode ("Average: 10" menu item), the R&S Cable Rider ZPH opens an input field to set the number of sweeps the R&S Cable Rider ZPH includes in the averaging.
4. Enter the number of sweeps to include in the averaging.
In continuous sweep mode, the R&S Cable Rider ZPH now calculates the moving average over the number of sweeps you have specified. In single sweep mode, it stops the measurement after finishing the sweeps and averages the traces.

The R&S Cable Rider ZPH provides the following trace modes.

- **Clear/Write**
In its default state, the R&S Cable Rider ZPH overwrites the trace after each sweep.
You can apply all detectors in this mode.
- **Average**
The trace is the result of the moving average over several sweeps.
The R&S Cable Rider ZPH calculates the (moving) average of the power levels for each pixel over a particular number of sweeps in the range from 2 to 999.
Averaging reduces the effects of noise, but has no effects on sine signals. Using the trace averaging therefore is a good way to detect signals in the vicinity of noise.
You can apply all detectors in this mode.
- **Max Hold**
The trace shows the maximum power levels that have been measured at each pixel.
To overwrite a max hold trace, change a parameter in a way that the results cannot be compared any more (e.g. the span). Using the max hold trace mode is a good way to detect intermittent signals or the maximum values of fluctuating signals, for example.
Using the max hold trace mode automatically activates the max peak detector.
- **Min Hold**
The trace shows the minimum power levels that have been measured at each pixel.
To overwrite a min hold trace, change a parameter in a way that the results cannot be compared any more (e.g. the span). Using the min hold trace mode is a good way to highlight signals within noise or suppress intermittent signals.
Using the min hold trace mode automatically activates the min peak detector.
- **View**
The view trace mode freezes the current trace and aborts the measurement.
Using the view trace mode is a good way to evaluate the trace, for example with markers.

8.2.7.2 Selecting the Detector

The number of measurement results collected in a single sweep usually is very high, especially if the span is large. However, the display of the R&S Cable Rider ZPH can display only 711 results in horizontal direction, as it is limited by the number of pixels that are available on the display. Therefore, it has to combine measurement results to fit them on the display. In that case, one pixel represents a frequency range = span / 711.

The detector determines the way the R&S Cable Rider ZPH combines and displays the results for one pixel. The data base is the video voltage of the analyzer.

1. Press the [TRACE] key.
2. Select the "Detector" softkey.
The R&S Cable Rider ZPH displays the submenu to select the trace detector.

3. Select the detector you want to use.
If the "Auto Detector" selection is active, the selection of the trace detector follows [Table 8-1](#).

The R&S Cable Rider ZPH provides several types of detectors.

- **Auto Peak**
If the auto peak detector is active, the R&S Cable Rider ZPH displays both the maximum and the minimum power levels that were measured in the frequency range covered by a pixel.
Therefore, the auto peak detector loses no information. If a signal power level fluctuates (e.g. noise), the width of the trace depends on the magnitude of the signal fluctuation. The auto peak detector is the default detector.
- **Max Peak**
If the max peak detector is active, the R&S Cable Rider ZPH displays only the maximum power levels that were measured in the frequency range covered by a pixel.
The max peak detector is useful for measurements on pulse or FM signals, for example.
- **Min Peak**
If the max peak detector is active, the R&S Cable Rider ZPH displays only the minimum power level that were measured in the frequency range covered by a pixel.
The min peak detector displays sine signals with the correct level and suppresses noise. Therefore it is useful to find sine signals in the vicinity of noise.
- **Sample**
If the sample detector is active, the R&S Cable Rider ZPH shows one random power level that was measured in the frequency range covered by a pixel.
The sample detector is useful for measurements in the time domain (span = 0 Hz) as it provides the only way to represent the timing of the video signal correctly.
In the frequency domain, the sample detector is a good way to measure noise power because noise usually has a uniform spectrum with a normal amplitude distribution.
Signals may get lost if you are using the sample detector for measurements with a span that is greater than "RBW * 711".
- **RMS**
If the RMS detector is active, the R&S Cable Rider ZPH measures the spectral power over one pixel. In case of power measurements, the RMS detector always shows the true power of a signal, regardless of the shape of the signal.
The RMS detector is best for measurements on digitally modulated signals because it provides stable and true power readings. In combination with a high sweep time, you can increase the display stability even more because the measurement time for each pixel increases.
Noise measurements also provide stable results if you apply the RMS detector in combination with a high sweep time.
However, the bandwidth occupied by the signal to be measured should at least equal the frequency covered by a trace pixel or the selected resolution bandwidth (whichever is larger). Otherwise, the power the R&S Cable Rider ZPH shows is too low because there are spectral components within the frequency range covered by the pixel that do not originate from the signal you want to observe (e.g. noise).

To get the true power, the video bandwidth (VBW) should also be greater than the resolution bandwidth (RBW). Otherwise, an averaging effect caused by video bandlimiting comes into play before the RMS value is calculated.

The R&S Cable Rider ZPH provides automatic selection of the detector. In that case, the R&S Cable Rider ZPH selects the detector that is most suitable for the current trace mode.

Table 8-1: Auto selection of trace detector

Trace Mode	Detector
Clear/Write	Auto Peak
Average	Sample
Max Hold	Max Peak
Min Hold	Min Peak

If you select the detector manually, the detector is independent of the trace mode.

8.2.7.3 Working with a Second Trace

In spectrum mode, you can use up to two traces. All two traces are based on the same settings, except the trace settings like the trace mode or the detector. You can use the second trace to compare, for example, four different detector settings.

In the default state, only trace 1 is active.

1. Press the [TRACE] key.
2. Select the "Show" softkey.
3. Select the "Enable Trace 2" menu item.

The R&S Cable Rider ZPH shows the second trace. The second trace is in a different color. To show that the second trace is active, the R&S Cable Rider ZPH displays the current active trace "Trace 1" or "Trace 2" on the "Parameter View".

Trace1 Min

Trace2 Clear

After you have activated the second trace, this trace becomes the active one. All actions (like changing the detector or trace mathematics) apply to the active trace.

4. Select the "Select Trace" softkey.
Trace 1 becomes the active trace.



You can put both traces into the internal memory of the R&S Cable Rider ZPH and restore them later. Note that the memory trace 1 and memory trace 2 have a lighter tone color.

8.2.7.4 Working with Memory Traces

You can save the image of both traces to the memory of the R&S Cable Rider ZPH and later restore it and compare it to a live trace. The memory trace is always colored white to distinguish it from the live trace.



Measurement settings

Because the memory trace is just a bitmap, any modifications to measurement settings like span or reference level are not reflected in the memory trace.

When you save a data set, the R&S Cable Rider ZPH also stores the associated trace in the trace memory. If you restore it at a later time, you can display the memory trace as if it is a normal memory trace.

1. Press the [TRACE] key.
2. Select the trace you want to store in the trace memory with the "Select Trace" softkey.
3. Select the "Trace►Memory" softkey.
The R&S Cable Rider ZPH saves the active trace.
4. Select the "Show" softkey.
5. Select the "Enable Memory 1" menu item.

The R&S Cable Rider ZPH shows the corresponding memory trace. If active, it labels the "Memory <x>" menu item with an active radio button.

8.2.7.5 Using Trace Mathematics

Trace mathematics subtract the memory trace from the live trace and vice versa and then display the results.

1. Press the [TRACE] key.
2. Select the "Trace►Memory" softkey.
3. Select the "Show" softkey.
4. Select the "Trace Math" softkey.
5. Select the "Trace-Memory" or ""Memory-Trace"" menu item.
6. The R&S Cable Rider ZPH calculates and shows the resulting trace.
7. To turn off trace mathematics, select the "Off" menu item.

8.2.8 Using Markers

The spectrum analyzer mode provides marker and deltamarker functionality. In addition, you can use several marker functions.

• Using Markers and Deltamarkers.....	234
• Positioning Markers.....	235
• Positioning a Delta Marker.....	236
• Selecting the Marker Type.....	237
• Automatic Positioning of Markers.....	237
• Removing Markers.....	237
• Using Marker Search Limits.....	238
• Using Marker Functions.....	240

8.2.8.1 Using Markers and Deltamarkers



The R&S Cable Rider ZPH has six markers, five of which can be used as either markers or delta markers.

The markers cannot leave the trace and indicate the horizontal and vertical coordinates of the point they are positioned on. The horizontal position of a marker is shown by a vertical line which extends from the top to the bottom of the measurement diagram. The marker list above the diagram area shows the exact coordinates of all markers in use.

The position of a delta marker is indicated by a dashed line to distinguish it from a normal marker. The delta marker level is always a relative to the main marker level and so the delta marker level unit is always dB. The delta marker frequency is always relative to the main marker. The delta marker frequency is the frequency difference between

the frequency at the point marked by the main marker and the frequency at the point marked by the delta marker.

To measure complex signals, you can activate up to six markers. Marker 1 is always a normal marker and the reference of all delta markers. Markers 2 to 6 are either markers or delta markers depending on your setup.

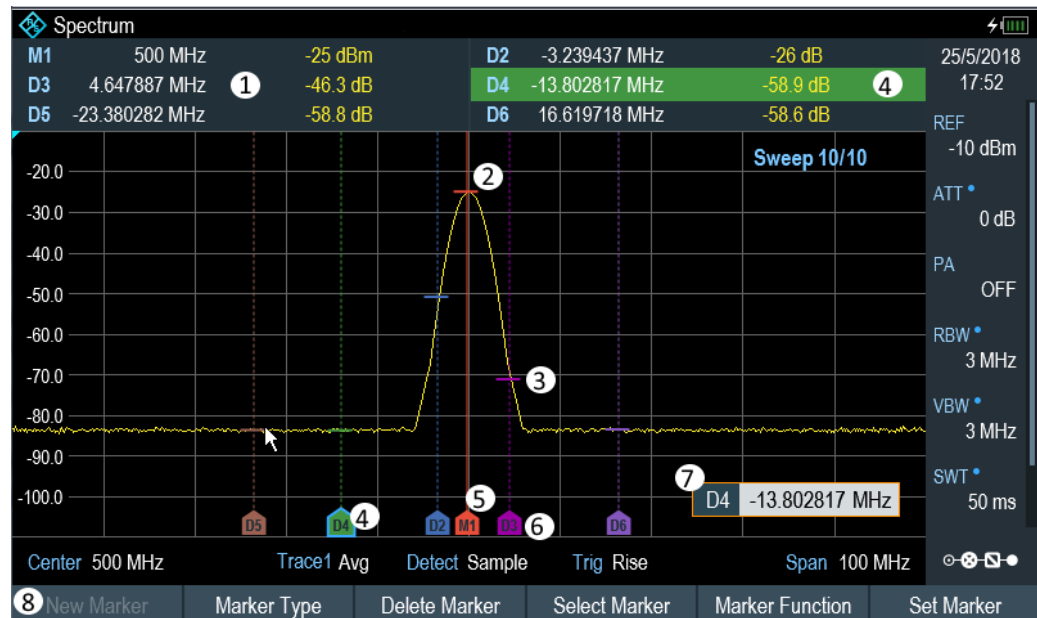


Figure 8-12: Screen layout with active markers

- 1 = Measurement Result View
- 2 = Marker (solid line)
- 3 = Delta marker (dotted line)
- 4 = Active marker label (see highlighted line on the marker list as well as the marker label)
- 5 = Marker label: M(x)
- 6 = Delta marker label: D(x)
- 7 = Marker input field
- 8 = Marker menu

8.2.8.2 Positioning Markers

1. Press the [MARKER] key.

The marker menu opens.

If no marker has been activated, the R&S Cable Rider ZPH automatically activates the main marker and positions it on the maximum level that has been measured. In addition, the marker frequency input field opens.

You can perform the following actions:

- Position the marker with the rotary knob
When positioning the marker with the rotary knob, the step size is one pixel.
- Enter a marker position with the number keys and confirm the entry with one of the unit keys.

2. Confirm the marker position by pressing the rotary knob.
The [Measurement Result View](#) shows the horizontal position of all markers and the corresponding vertical value. You can select any marker in the [Measurement Result View](#) for further marker function using the marker softkey menu. You can also use rotary knob to select any of the markers displayed in the [Measurement Result View](#).

**Special touchscreen gesture**

Alternatively, double tap on the touchscreen to position the marker on the trace window. The first marker that is positioned on the trace window is the main marker, the following markers added on the trace window are the delta markers.

See [Chapter 5.1.4, "Add Marker"](#), on page 91.

8.2.8.3 Positioning a Delta Marker

When a normal marker is already in use, you can add delta markers.

1. Press the [MARKER] key.
The marker menu opens.
2. Select the "New Marker" softkey.
The R&S Cable Rider ZPH activates a delta marker and positions it on the next maximum level that has been measured. In addition, the delta marker input field opens.
The R&S Cable Rider ZPH adds the delta marker to the marker list and shows the marker position relative to the normal marker (M1).
You can perform the following actions:
 - Enter a delta marker position with the number keys and confirm the entry with one of the unit keys.
 - Change the delta marker position with the rotary knob.
3. Confirm the delta marker position by pressing the rotary knob.
The delta marker input field closes.
4. To add more markers, press the "New Marker" softkey several times until you have the number of markers you want in the display.

**Special touchscreen gesture**

Alternatively, double tap on touchscreen to position the delta marker on the trace window.

See [Chapter 5.1.4, "Add Marker"](#), on page 91.

8.2.8.4 Selecting the Marker Type

When you add new markers, they are delta markers by default. Their coordinates are relative to the first marker (M1). You can turn delta markers into normal markers if you need absolute information about the marker position.

1. Select the delta marker you want to convert in the [Measurement Result View](#).
The selected marker is highlighted in the [Measurement Result View](#) and its corresponding label in the trace window turns focus with a blue frame around the marker label. The R&S Cable Rider ZPH opens a marker input field.
Alternatively, you can press the [MARKER] key to select the delta marker you want to convert with the "Select Marker" softkey
2. Select the "Marker Type" softkey.
The delta marker turns into a normal marker. Its label changes accordingly (e.g. D2 to M2) and its coordinates are now absolute values.

8.2.8.5 Automatic Positioning of Markers

The R&S Cable Rider ZPH offers functions that make setting the markers easier or allow to make instrument settings on the basis of the current marker position:

1. Press the [MARKER] key.
2. Select the "Set to Peak", "Set to Next Peak" or "Set to Minimum" softkey.
The R&S Cable Rider ZPH positions the marker accordingly.

The R&S Cable Rider ZPH provides the following selections for automatic positioning of markers:

- "Set to Peak"
The peak function places the active marker or the delta marker on the highest level value of the trace.
- "Set to Next Peak"
The Next Peak function places the active marker or delta marker on the next highest level value of the trace, relative to its current position.
- "Set to Minimum"
The minimum function places the active marker or delta marker on the lowest value of the trace.

8.2.8.6 Removing Markers

Remove markers any time you want from the trace window.

Removing selected markers

1. Select the marker you want to delete in the [Measurement Result View](#).
Alternatively, you can select the marker you want to delete with the "Select Marker" softkey

The selected marker is highlighted in the [Measurement Result View](#) and its corresponding label in the trace window turns focus with a blue frame around the marker label. The R&S Cable Rider ZPH opens a marker input field.

2. Select the "Delete Marker" softkey.
3. Select the "Delete Selected" menu item.
4. Confirm the selection by pressing the rotary knob.
The R&S Cable Rider ZPH deletes the marker.



Deactivating markers

If you delete marker 1 (M1), all delta markers that are relative to that marker are also deleted.

Removing delta markers only

1. Select the delta marker you want to delete in the [Measurement Result View](#).
Alternatively, press the [MARKER] key.
2. Select the "Delete Marker" softkey.
3. Select the "Delete All Delta" menu item.
4. Confirm the selection by pressing the rotary knob.
The R&S Cable Rider ZPH deletes all delta markers.

Removing all markers at the same time.

1. Press the [MARKER] key.
2. Select the "Delete Marker" softkey.
3. Select the "Delete All" menu item.
4. Confirm the selection by pressing the rotary knob.
The R&S Cable Rider ZPH deletes all markers and delta markers.



Special touchscreen gesture

Alternatively, draw an "x" on the trace window to delete all markers and delta markers on the trace window.

See [Chapter 5.1.6, "Delete All Markers"](#), on page 92.

8.2.8.7 Using Marker Search Limits

The R&S Cable Rider ZPH allows you to use only a limited section of the trace for the "Set to Peak", "Set to Next Peak" and "Minimum" functions.

1. Press the [MARKER] key.

2. Select the "Set Marker" softkey.
3. Select the "Search Range" menu item.
The R&S Cable Rider ZPH opens the marker search limits softkey menu.
4. Select the "Select Marker" to define the marker position.
The R&S Cable Rider ZPH opens an input field to define the marker position.
5. Enter a desired marker position.
6. Confirm the entry with one of the unit keys.
7. Select "Selected Marker" if you want to apply the marker search limit on the selected marker.
The R&S Cable Rider ZPH displays the "Selected Marker" menu.
8. Select the "Search Range Off" menu item.
The R&S Cable Rider ZPH activates the marker search limits for the selected marker.
By default, the search limit range is over the whole span.
9. Select the "Lower Limit" menu item from "Search Range 1" section item.
The R&S Cable Rider ZPH opens an input field to define the lower limit of the search range for "Search Range 1" section item.



10. Enter the lower limit.
11. Confirm the entry with one of the unit keys.
12. Define the upper search limit the same way for "Search Range 1" section item.
13. Define the lower and upper search limit the same way for "Search Range 2" section item.

Deactivating marker search limits

1. Press the "Selected Marker" softkey.
2. Select the "Search Range Off" menu item.
3. Confirm the selection by pressing the rotary knob.
The R&S Cable Rider ZPH turns off the marker search limit function for the selected marker.
4. To turn off the marker search limits function for all markers, select "All Markers" softkey and repeat the above steps

8.2.8.8 Using Marker Functions

In addition to the frequency and level readout, the R&S Cable Rider ZPH provides several, more complex, marker functions in spectrum analyzer mode.



Marker function frequency

Marker functions are only applied to the marker position at center frequency.




Deactivating marker functions

Selecting a marker function again while it is still active will turn that marker function off.

Measuring the Noise Power Density

The marker noise function calculates the noise power density at the marker position in dBm/Hz. The R&S Cable Rider ZPH includes several variables in the calculation of the noise power density, including the trace pixel values, the resolution bandwidth, the detector and the level display mode (absolute or relative). To stabilize the noise power display, the R&S Cable Rider ZPH uses the pixel the marker is on and four pixels to the right and four pixels to the left of the marker pixel.

Noise power density can provide useful information when you are measuring noise or digitally modulated signals. However, you get valid results only if the spectrum in the vicinity of the marker has a flat frequency response. When measuring the noise power density on discrete signals, results are not valid.

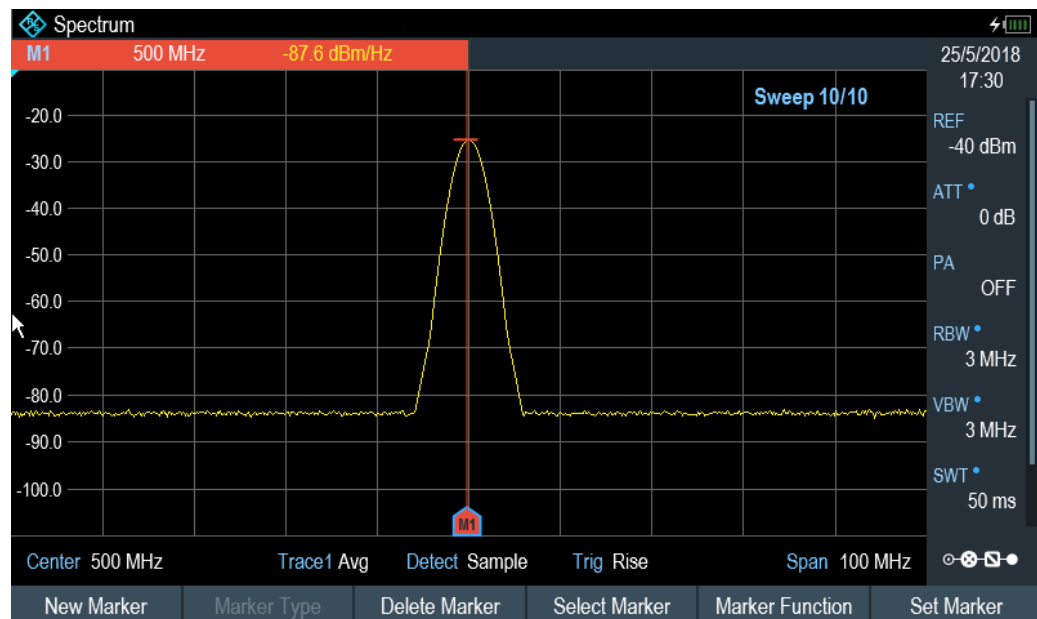

1. Press the [MARKER] key
2. Select the "Marker Function" key
3. Enable the "Noise" checkbox menu item.

The R&S Cable Rider ZPH shows the level at the marker frequency in dBm/Hz. If you are using a delta marker for the measurement, the results have the unit dBc/Hz with marker 1 being the reference.

Measuring the Frequency


The R&S Cable Rider ZPH provides a frequency counter. The frequency counter accurately measures the frequency at the marker position.

When calculating the horizontal position of the marker, the R&S Cable Rider ZPH includes the current span, center frequency and the frequency of the pixel the marker is on. As the trace only has 711 pixels, the marker position is just an approximation, especially if the span is very wide.

With the frequency counter, however, you can get a more accurate result of the horizontal marker position. If the frequency counter is active, the R&S Cable Rider ZPH stops the measurement at the marker position for a short time and measures the frequency using the internal reference frequency.

The accuracy of the results therefore depends only on the accuracy of the internal reference frequency (TCXO). The frequency counter has a resolution of 0.1 Hz and therefore provides far more accurate results. Despite the accuracy, the measurement is still fast (because of a special algorithm for the I/Q baseband signal).

The frequency counter only gives accurate readings for sine signals that are at least 20 dB above the noise floor. If the S/N ratio is less, noise affects the results.

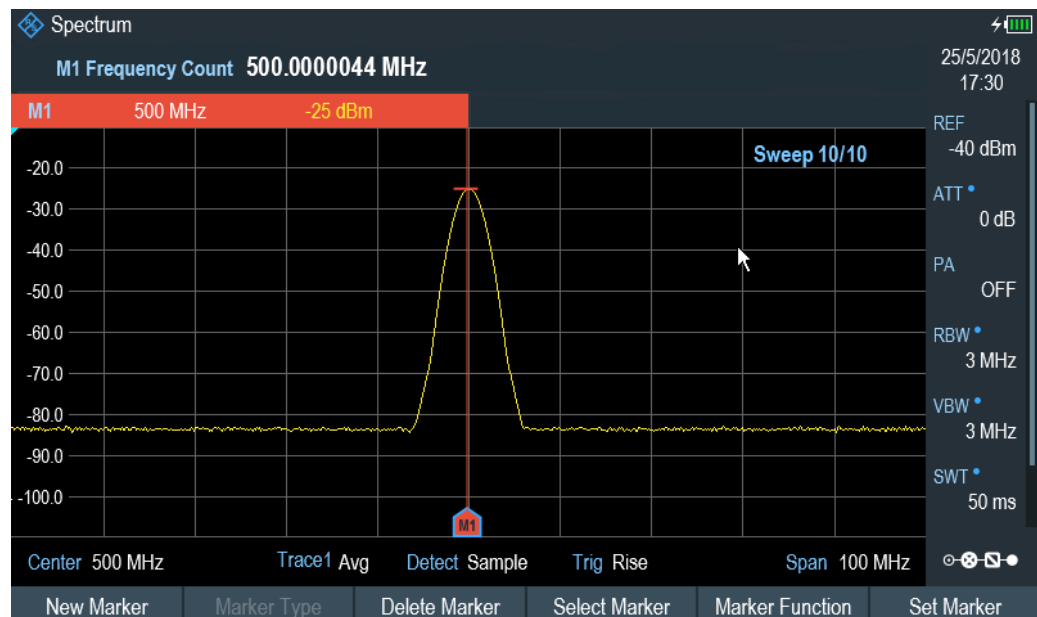


1. Press the [MARKER] key.
2. Select the "Marker Function" softkey.
3. Select the "Frequency Count" checkbox menu item.
The R&S Cable Rider ZPH displays the counted marker frequency with a resolution of 0.1 Hz.

Measuring the Signal Bandwidth

The "n dB Down" marker function places two temporary markers to the left and to the right of the reference marker and measures the bandwidth between the two temporary markers. The function therefore is a good way to measure the bandwidth of a signal or the bandwidth of a filter, for example. The temporary markers are represented as two vertical lines.

The distance to the reference marker is by default 3 dB below the reference marker. You can also adjust this value manually. Entering a positive value sets the temporary markers below the reference marker. If it is, for any reason, not possible to calculate the frequency spacing, dashes are displayed instead of a value.

Upon entering a negative value, the function turns into an "n dB Up" function. You can use an "n dB Up" function, for example, for measurements on notch filters.

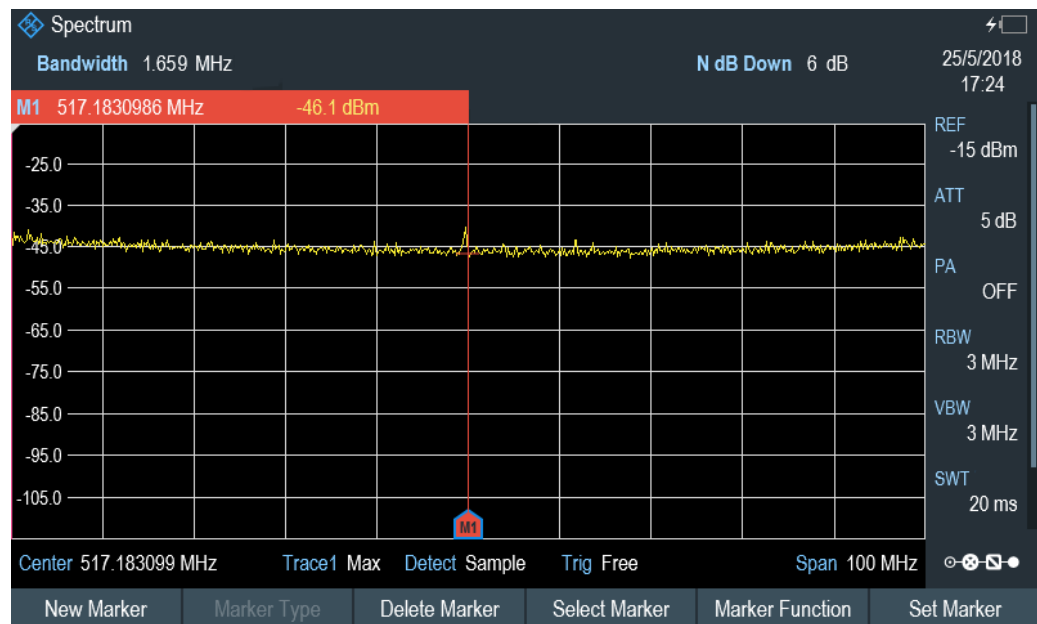

1. Press the [MARKER] key.
2. Select the "Marker Function" softkey.
3. Select the "n dB Down" menu item.
The R&S Cable Rider ZPH displays two temporary markers on the left and on the right of the reference marker, "M1". It also shows the bandwidth between the n dB down markers. You can then adjust the distance of the temporary markers.
4. Select the "Marker Function" softkey.
5. Select the "n dB Down" menu item.
The R&S Cable Rider ZPH opens an input field.
6. Enter a different distance of 6 dB.
The R&S Cable Rider ZPH again shows the temporary markers, this time with a broader bandwidth.

Demodulating Signals

The R&S Cable Rider ZPH features an AM and FM demodulator to demodulate and monitor audio signals. It demodulates the signal at the marker frequency.

You can listen to the demodulated signal with the internal speaker or headphones that you can connect to the 3.5 mm headphone jack on the top of the R&S Cable Rider ZPH. See [Headphone jack](#).

When demodulating an AM modulated signal, the R&S Cable Rider ZPH turns the video voltage into an audible sound. You should therefore set the reference level to about the level of the signal that you are demodulating.

If you perform measurements in the time domain, the R&S Cable Rider ZPH demodulates continuously. In the frequency domain, you can define a time period the R&S

Cable Rider ZPH demodulates the signal at the marker frequency. The frequency sweep then stops at the marker frequency for that time before finishing the sweep.

1. Press the [MARKER] key.
2. Select the "Marker Function" key.
3. Select the "AM" or "FM" demodulation scheme you require from the menu.
The R&S Cable Rider ZPH starts to demodulate the signal.



Demodulating signals

If you turn on the demodulator, the R&S Cable Rider ZPH automatically turns off the noise marker or the frequency counter.

Defining the demodulation time period

1. Press the [MARKER] key.
2. Select the "Marker Function" softkey.
3. Select the "Time" menu item.
The R&S Cable Rider ZPH opens an input field to define the demodulation time.
4. Enter the demodulation time you need.
The range is from 100 ms to 500 s. In time domain, the R&S Cable Rider ZPH demodulates continuously, i.e. the demodulation time is not relevant.

Controlling the volume

1. Press the [MARKER] key.
2. Select the "Marker Function" softkey.
3. Select the "Volume" menu item.
The R&S Cable Rider ZPH opens an input field to define the demodulation volume.
4. Enter the volume you are comfortable with.
The demodulation volume is a percentage (0 % to 100 %) with 100 % being full volume.
For more information on general volume control, see [Chapter 4.2.7, "Configuring the Audio Output"](#), on page 52.

Mute function

- ▶ Select the speaker icon to mute  or unmute  the volume.
The speaker icon is located at the top right-hand corner of the trace window. It appears only when "Marker Function" is set to "AM" or "FM" demodulation scheme.

8.2.9 Using Display Lines



Like markers, display lines help you to determine the level of the signal.

A display line is a straight line that runs horizontally and corresponds to a certain level value. You can move the display line to each pixel in the display. This means that the accuracy and exact vertical position of the display line depends on the resolution of the vertical axis. With a display range of 100 dB, for example, each pixel corresponds to 0.3 dB. In that case, the accuracy of the display line is 0.3 dB. If you enter a value with a higher resolution, the R&S Cable Rider ZPH rounds that value.

You can also move the display line with the rotary knob. The step size for movement with the rotary knob is one pixel.

1. Press the [LINES] key.
2. Select the "Display Line" softkey.
The R&S Cable Rider ZPH displays the display line as a blue horizontal line. It shows the vertical position of the line in a table above the diagram area.
When you activate the display line, the R&S Cable Rider ZPH also opens an input field to define the vertical position of the line.
3. Enter the level value you need.
The R&S Cable Rider ZPH positions the display line accordingly.
Alternatively, you can also move the display line with the rotary knob.

8.2.10 Using Limit Lines

Limit lines help you to identify if a signal complies with certain level characteristics.

A limit line is made up out of two or more points that are connected to a line. Each of the points that define the shape of the limit line consists of two coordinates. One coordinate defines the horizontal position (e.g. frequency), the other one the vertical position. With the R&S Cable Rider ZPH, you can build limit lines that consist of up to 1000 points.

Values that define the horizontal characteristics of the limit line can be either absolute values (e.g. frequency in MHz) or relative values whose reference is the center of the measurement trace (e.g. the center frequency). Relative values are of advantage if you, for example, measure modulated output signals and you change the center frequency but need the limit line to remain the same. Absolute limit lines have the file extension ".abslim" while relative limit lines have the file extension ".rellim"

Values that define the vertical characteristics are always level values in dB. If the scaling of the vertical axis is currently a linear one (units V or W), the R&S Cable Rider ZPH automatically switches to a logarithmic scaling after you turn on the limit line.

After turning on a limit line, the R&S Cable Rider ZPH checks if the signal violates the shape of the limit line. If one or more signal levels exceed the limit value, the R&S Cable Rider ZPH features several indicators that the limit check has failed.

- A general message in the diagram header that indicates if the signal violates the limit line, including the trace that violates the limit: 

- An audio signal that sounds every time a limit is violated

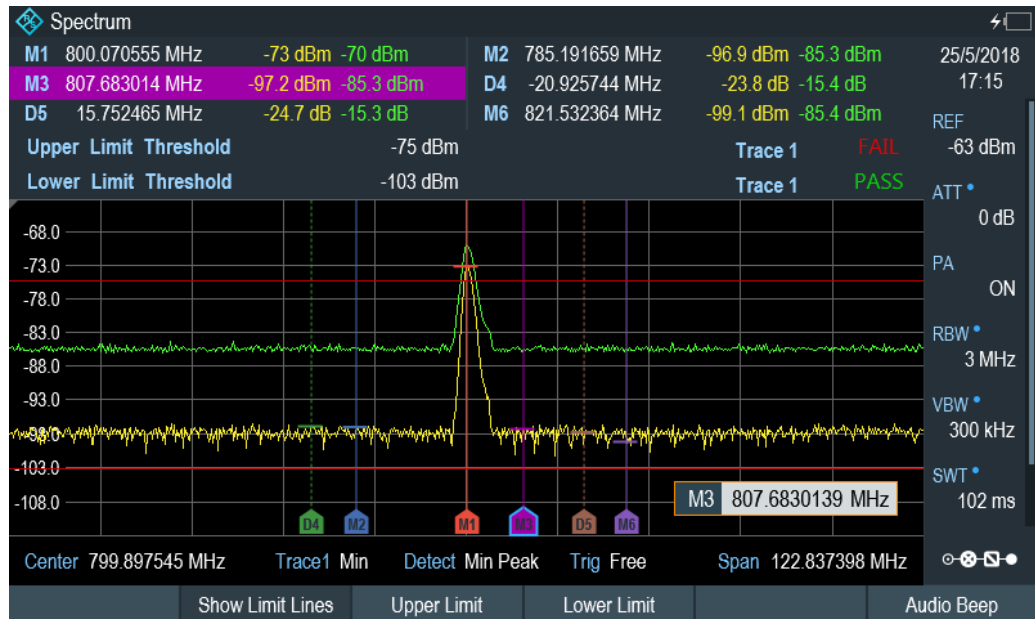


Figure 8-13: Upper and lower Limit Lines

You can create and edit limit lines with the R&S InstrumentView software and then transfer them into the internal memory of the R&S Cable Rider ZPH. The number of limit lines you can store in the memory depends on other datasets available on the R&S Cable Rider ZPH or if you are using an external storage device (e.g. memory stick).

For more information on limit lines, see [Chapter 5.9, "Managing Datasets"](#), on page 107.

- [Selecting a Limit Line](#).....246
- [Performing Limit Checks](#).....247

8.2.10.1 Selecting a Limit Line

Before selecting a limit line, you need to decide if you want to use it as an upper or lower limit line. In case of upper limit lines, the R&S Cable Rider ZPH checks if the signal is above the limit line. In case of lower limit lines, the R&S Cable Rider ZPH checks if the signal is below the limit line.

You also have to make sure that the limit line is compatible to the scale of the horizontal axis.

1. Press the [LINES] key.
2. Depending on the application, press the "Upper Limit" or "Lower Limit" softkey.
3. Select the "Load From File" menu item.
The R&S Cable Rider ZPH opens the "File Manager" dialog to select the limit line.
4. Select one of the available limit lines.

5. Select the "Load" softkey.

The R&S Cable Rider ZPH activates the limit line. In the diagram, the limit line is displayed as a red line. See [Figure 8-13](#).

If you have already selected a limit line, you can turn the limit line on and off with the "Show Limit Lines" softkey.

Alternatively, you can define a threshold that works like a limit line. A threshold is a simple horizontal limit line.

1. Select the "Upper Limit" or "Lower Limit" softkey.

2. Select the "Set Threshold" menu item.

The R&S Cable Rider ZPH opens an input field to define the threshold.

3. Enter the threshold you need.

The R&S Cable Rider ZPH displays the line and performs a limit check for that threshold.



Threshold line and display line

Like the display line, a threshold line is a straight horizontal line. The difference is that the R&S Cable Rider ZPH performs a limit check for threshold lines, but not for display lines.

A failed limit check may be an issue if you want to create a measurement report, because measurements with failed limits are not included in this report.

Using a display line, you can use a line and are able to create a measurement report at the same time, regardless if any limits have been violated or not.

The process of turning off a limit line completely is similar to that of selecting a line.

1. Press the "Show Limit Lines" softkey.

The R&S Cable Rider ZPH hides the limit line.

2. To remove the limit lines, select the "Upper Limit" or "Lower Limit" softkey.

3. Select the "Remove" softkey.

The R&S Cable Rider ZPH removes the limit line.

8.2.10.2 Performing Limit Checks

If limit lines are active, the R&S Cable Rider ZPH automatically checks the trace for limit violations after each frequency sweep. As long as the signal does not violate the limit line, the R&S Cable Rider ZPH shows a "Pass" message in the measurement diagram. As soon as one single value (i.e. one pixel) is outside of the limits, the R&S Cable Rider ZPH displays a "Fail" message in the diagram area and, in addition, sounds a beep.

A limit check relates only to the frequency range defined by the limit line, not the span.

Audio signal

You can turn the acoustic signal that sounds in case of a limit violation on and off.

- ▶ Select the "Audio Beep" menu item.
Once selected, the audio beep is active, the R&S Cable Rider ZPH beeps each time a limit is violated.



Limit violation

Note that a limit check fails only if the signal exceeds the limit line. If the signal level is the same as the limit value, the limit check passes.

8.3 Working with Channel Tables

Almost all transmission systems divide their assigned frequency ranges into channels. Each channel corresponds to a specific frequency. To keep the handling of such systems simple, you can use channel tables instead of entering frequencies manually.

The R&S Cable Rider ZPH already comes with an assortment of channel tables that you can use without doing anything. If you want to test transmission standards that are not listed, you can also build channel tables manually with the "Channel Table Editor" of the R&S InstrumentView software package that is delivered with the R&S Cable Rider ZPH. To use one of the edited channels, you have to copy the channel table to the R&S Cable Rider ZPH.

For more information on channel table, see [Chapter 5.9, "Managing Datasets"](#), on page 107.

Selecting a channel table

1. Press the [FREQ/DIST] key.
2. Select the "Freq Mode" softkey.
The R&S Cable Rider ZPH opens a submenu that contains the channel menu items.
3. Select the "Channel Downlink" or "Channel Uplink" menu item.
The R&S Cable Rider ZPH opens the "File Manager" dialog to select a channel table.
4. Select one of the available channel tables.
After activating the channel table, the R&S Cable Rider ZPH is set up according to the information contained in the channel table. Instead of a center frequency, the R&S Cable Rider ZPH shows the currently active channel number including the name of the channel. The center frequency of a channel is defined in the channel table and is the frequency corresponding to the selected channel.

Defining a downlink or uplink channel

It is important to note whether the channel number is assigned in the uplink or downlink channel.

1. Press the [FREQ/DIST] key.
2. Select the "Freq Mode" softkey.
The R&S Cable Rider ZPH opens a submenu that contains the channel menu items.
3. Select the "Set to Downlink " or "Set to Uplink" menu item.
The R&S Cable Rider ZPH maps the channel number to the appropriate uplink or downlink channel table.

Selecting a channel

Entering a center, start or stop frequency is not possible anymore. Instead you select a channel. The R&S Cable Rider ZPH then adjusts the center, start and stop frequency according to the channel table.

1. Press the [FREQ/DIST] key.
2. Select the "Center Frequency" softkey.
The R&S Cable Rider ZPH opens an input field to select the channel.
3. Enter the channel you want to perform measurements on.
The R&S Cable Rider ZPH changes the channel according to the channel table.
Channel numbers are assigned to frequencies as follows:
 - The first channel is assigned a channel number and a frequency.
 - All subsequent channels have ascending numbers.
 - The frequency spacing between channels is fixed. It can also be negative, i.e. the center frequency of the R&S Cable Rider ZPH decreases with ascending channel number.
 - In transmission systems containing gaps in the frequency range (as in the case of television, for example), a channel table can comprise multiple ranges.

8.4 Using Transducer Factors

The frequency-dependent transducer factor of transducers and antennas can be directly considered in the measurement result. A transducer factor consists of a numeric value and a unit. The R&S Cable Rider ZPH corrects the level values of the trace by the values of the transducer. At the same time, the unit of the transducer is assigned to the level axis. When field-strength measurements are performed with the aid of antennas, for instance, the electrical field strength is directly indicated in dB μ V/m on the R&S Cable Rider ZPH. A transducer factor can also be used to correct a frequency-dependent attenuation, e.g. of a cable between DUT and RF input of the R&S Cable Rider ZPH.

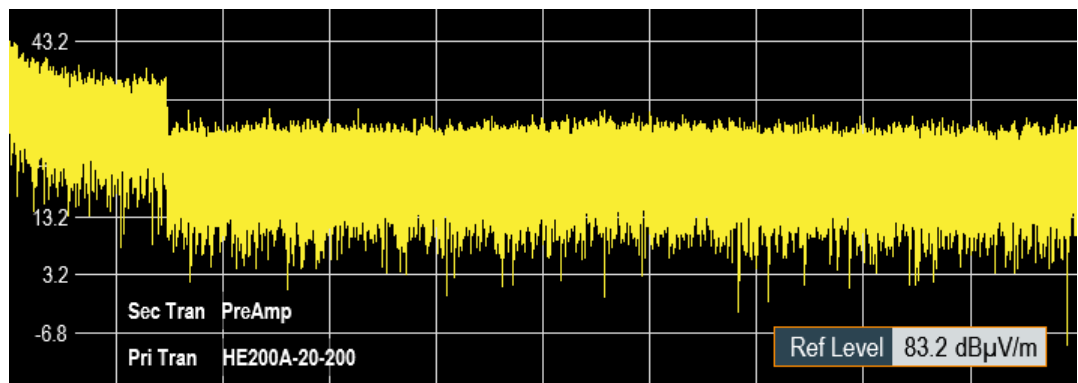


Figure 8-14: Transducer factors displayed

You can create and edit transducer factor with the R&S InstrumentView software package and then transfer them into the internal memory of the R&S Cable Rider ZPH. Each transducer factor may consist of up to 1000 reference values.

For more information on transducer factors, see [Chapter 5.9, "Managing Datasets"](#), on page 107.

Interpolation between the values is performed with the aid of a modified spline algorithm. Even if only relatively few values such as maxima, minima and turning points are available, this algorithm can easily simulate the correction factors of common transducers. Two transducers can be switched on at a time. The second transducer must be assigned the unit dB. The R&S Cable Rider ZPH adds the two transducers to a total transducer.

Units supported for transducer factors:

- dB
- dBμV/m
- dBμA/m
- W/m²

The unit dB does not change the unit set on the R&S Cable Rider ZPH. It can be used, for instance, to compensate for frequency-dependent loss and gain at the input of the R&S Cable Rider ZPH. The units dBμV/m and dBμA/m convert the output power of an antenna into electric or magnetic field strength. The unit W/m² is used to calculate and display the power flux density.

For example, to compensate for the cable loss between the transducer and the RF input, the R&S Cable Rider ZPH can use two transducers at the same time. One of them must have the unit dB, however, i.e. it must correspond to one loss or gain value.

1. Press the [SCALE/AMPT] key.
2. Select the "Transducer" softkey.



Transducer factor availability

Transducer factors are not available for measurements with the tracking generator or the Power Sensors. The "Transducer" softkey is therefore inactive.

You can select two transducer factors, a primary transducer and a secondary transducer. If a transducer factor is active, the checkbox next to the "Primary" or "Secondary" menu is enabled.

1. Select the "Select Primary" menu item.
The R&S Cable Rider ZPH opens the "File Manager" to select the transducer factor.
2. Select the transducer factor you need.
The R&S Cable Rider ZPH shows the name of the active transducer on the display (e.g. "Sec Tran PreAmp", "Pri Tran HE200A-20-200").
See [Figure 8-14](#).

An example would be the transducer factor of the R&S HE200-A antenna that is defined between 200 MHz and 500 MHz. The R&S Cable Rider ZPH therefore displays the noise in this frequency range as a function of frequency incremented by the transducer factor. Outside the transducer range, the R&S Cable Rider ZPH sets the transducer factor at zero, i.e. measurements in this range do not yield conclusive results.

You can select a second transducer factor with the "Select Secondary" menu item. The secondary transducer factor in that case is added to the first. The unit of the second transducer factor must always be the relative unit dB as otherwise an addition would not be useful. When you select a secondary transducer factor, the dialog box shows only those transducer factors that have dB as their unit.

- [Unit for Measurements with Transducers](#)..... 251
- [Setting the Reference Level](#).....252
- [Frequency Range of Transducer](#)..... 252
- [Data Sets Containing Transducer Factors](#)..... 252

8.4.1 Unit for Measurements with Transducers

If the unit of the transducer is dB, the units dBm, dBmV or dBμV remain unchanged. The linear units Volt and Watt are not permissible. They are deactivated in the units menu.

If the unit of the transducer is dBμV/m or dBμA/m, this unit is also used for the R&S Cable Rider ZPH level display. This means that both the level axis of the diagram and the level at the marker position are assigned the unit of the transducer. If dBμV/m is selected as the transducer unit, a switch to absolute level indication in V/m is possible.

1. Press the [SCALE/AMPT] key.
2. Select the "Unit" softkey.
3. Select the "V" menu item.

If you are using a transducer with the unit dB μ A/m, it is not possible to select another unit. Level indication is entirely in dB μ A/m.

8.4.2 Setting the Reference Level

The transducer shifts the trace by its value as a function of frequency. Positive transducer values increase the level, negative values reduce it. To ensure that the trace is always within the diagram, the R&S Cable Rider ZPH adjusts the reference level accordingly. The reference level is shifted by the maximum transducer value in the positive or negative direction.

8.4.3 Frequency Range of Transducer

If the set frequency range is wider than the span in which a transducer is defined, the R&S Cable Rider ZPH assumes the transducer values outside the defined range to be zero.

8.4.4 Data Sets Containing Transducer Factors

The R&S Cable Rider ZPH stores data sets together with any transducer factors that may have been active for the measurement in question. When such a dataset is recalled, the associated transducer factor(s) are switched on as well. Transducer factors recalled as part of a data set do however not appear in the list of transducer factors.

9 Power Meter



R&S Cable Rider ZPH option

R&S ZPH-K9 (order number: 1321.0415.02) option is required to operate the R&S Cable Rider ZPH in the power meter mode.

For highly accurate power measurements, you can connect a power sensor to the R&S Cable Rider ZPH and perform measurements.

- [Using a Power Sensor](#)..... 253
- [Using a Directional Power Sensor](#)..... 258

9.1 Using a Power Sensor

The power sensor function turns the R&S Cable Rider ZPH into a wideband power meter. It then always measures the power of the whole signal in the frequency range of the power sensor. In most cases, the signal shape has no effect on the measurement.

The power sensor measures the power in the frequency range defined in the data sheet of the power sensor. This means that you can measure both sine signals and modulated signals precisely over a large dynamic range.

For a complete list of supported power sensors, refer to the data sheet.

If you are using one of the NRP power sensors, you also need a passive USB adapter (R&S NRP-Z4) to connect the power sensor to the R&S Cable Rider ZPH.

For more information on the characteristics of the supported power sensors, see the following:

- The datasheet of the R&S Cable Rider ZPH.
- The website for R&S power sensors.

http://www.rohde-schwarz.com/en/products/test_and_measurement/power_volt_meter/NRPZ.html

1. Press the [MODE] key.
2. Select the "Power Meter" softkey
The R&S Cable Rider ZPH activates the mode for power measurements.

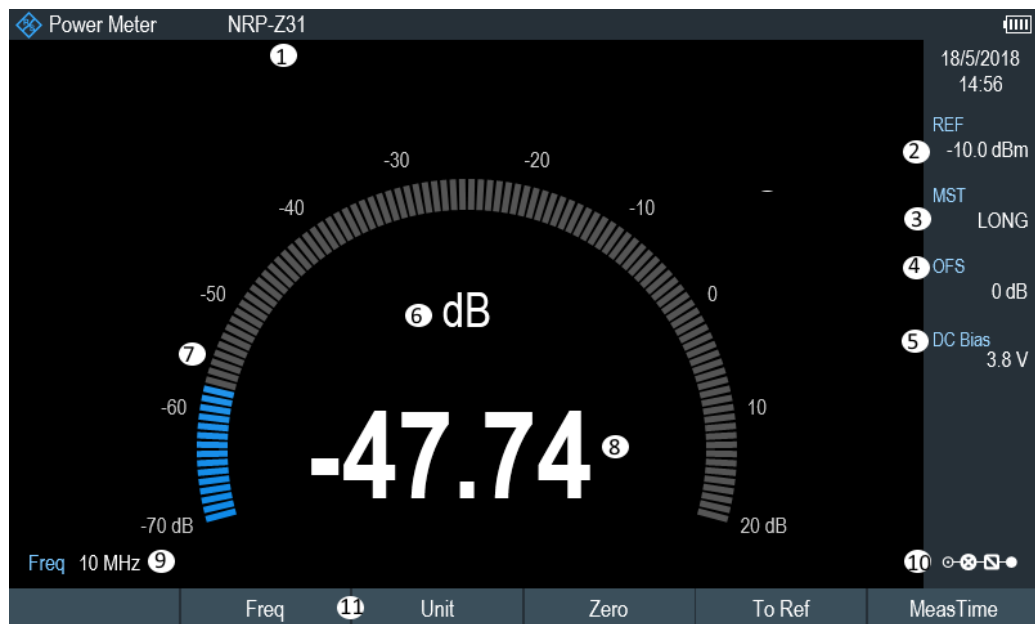


Figure 9-1: Screen layout of the power meter mode

- 1 = Connected power sensor model
- 2 = Reference for relative power measurements
- 3 = Measurement time
- 4 = Power offset
- 5 = DC bias voltage (only for model .12)
- 6 = Power measurement unit
- 7 = Analog readout of the measured power
- 8 = Readout of the measured power
- 9 = Measurement frequency
- 10 = Configuration overview icon
- 11 = Power sensor softkey menu

9.1.1 Connecting a Power Sensor

The R&S Cable Rider ZPH controls and powers the power sensors via the USB interface on the top of the instrument. See ["USB type A connector"](#) on page 28.

If you are using the R&S FSH-Z1 and R&S-FSH-Z18 power sensors, connect the power sensor cable to the FSH-Z144 (USB to binder adapter) before connecting it to the USB interface of the R&S Cable Rider ZPH.

For the test setup of the power sensor, see ["Test setup"](#) on page 84.

After connecting the power sensor to the R&S Cable Rider ZPH, you can connect the DUT to the N-connector of the power sensor.

NOTICE**Risk of damage to the power sensor**

Before you start to work with the power sensor, make sure that the continuous power applied to the input of the power sensor does not exceed a certain level.

Refer to the documentation of the power sensor for more information on the maximum input power.

If the R&S Cable Rider ZPH recognizes a power sensor, it sets up a connection via the interface and after a few seconds shows the measured power. It displays the type of the power sensor in the display header.

If no power sensor has been connected or it is not connected appropriately, the R&S Cable Rider ZPH shows nothing.

If there are communication problems between the R&S Cable Rider ZPH and the power sensor, the R&S Cable Rider ZPH displays one of the following error messages that indicate the possible cause.

Table 9-1: Error message for power sensor

Message	Cause	Remedy
Error in zeroing: signal at sensor	A signal was present at the power sensor when zeroing was performed.	Unscrew the power sensor from the device under test and repeat zeroing.
Warning: Input overloaded	The power at the input of the power sensor exceeds the permitted power (23 dBm = 200 mW).	Reduce the power at the sensor input.
Power sensor hardware error	Communication error between the R&S Cable Rider ZPH and the power sensor.	Unscrew the sensor from the R&S Cable Rider ZPH and check the connectors. If the problem persists, contact a Rohde & Schwarz service center.
Power sensor error	The power sensor signals an error to the R&S Cable Rider ZPH	Contact a Rohde & Schwarz service center.
Unknown power sensor model connected	The R&S Cable Rider ZPH cannot identify the device connected to the power sensor interface.	

9.1.2 Performing and Configuring Measurements

After you have connected a power sensor, the R&S Cable Rider ZPH immediately starts to measure the signal power.

Defining the center frequency or wavelength

Power sensors have a memory containing correction values that are dependent on the frequency or wavelength. Hence, measurement results are the most accurate for signals whose frequency or wavelength you know.

Center frequency

Note that the R&S Cable Rider ZPH maintains the center frequency that you have set in another operating mode. In that case, it uses that frequency as the power sensor frequency.

If you want to perform measurements on another known signal, you can change the power sensor frequency manually.

1. Select the "Freq" softkey.
The R&S Cable Rider ZPH opens an input field to define the frequency opens.
2. Enter the frequency of the signal.
The R&S Cable Rider ZPH transfers the new frequency to the power sensor which then corrects the measured power readings.

Wavelength


Wavelength is typically used in the measurement result for optical power sensor measurement. The R&S Cable Rider ZPH supports the wavelength: 850 nm, 1300 nm, 1310 nm, 1490 nm, 1550 nm, 1610 nm, 1625 nm for measurement.

1. Select the "wavelength" softkey.
The R&S Cable Rider ZPH opens a submenu for the selection of wavelength settings.
2. Select the required wavelength for measurement.
The R&S Cable Rider ZPH transfers the new wavelength to the power sensor which then corrects the measured power readings.

Zeroing the power sensor

Offset voltages and currents have most effect on the power readout when measuring low powers. You can compensate for these offsets by zeroing the power sensor.

Do not apply power during the zeroing process, as the power sensor cannot distinguish between external powers and internal offsets.

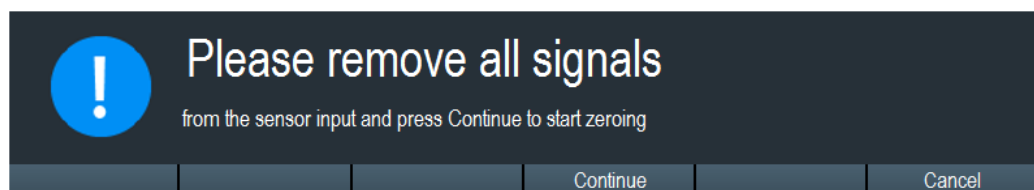

1. Select the "Zero" softkey.
2. The R&S Cable Rider ZPH asks you not to apply any signals to the power sensor during the zeroing process.
3. Disconnect the power sensor from any signal sources.
4. Select the "Continue" softkey to start zeroing.

5. Select "Cancel" softkey to abort zeroing, for example, if you cannot disconnect the signal source.

The R&S Cable Rider ZPH immediately starts power sensor zeroing.

While zeroing is in progress, the R&S Cable Rider ZPH shows the message "Zeroing power sensor, please wait while the system is zeroing the power sensor".

When zeroing is over, the R&S Cable Rider ZPH displays the message "✓ Power sensor zero done".



Power sensor zero done

Selecting the unit for the power readout

The R&S Cable Rider ZPH can display measured power in relative units (dBm) or in absolute units (W, mW, μ W, nW and ρ W). It is also possible to set a reference level in dB.

1. Select the "Unit" softkey.
A submenu to select the unit opens.
2. Select the unit you require.
The R&S Cable Rider ZPH adjusts the result display accordingly.

Setting the reference level

If you have selected the unit dB Rel, the R&S Cable Rider ZPH opens an input field to set the reference level. The R&S Cable Rider ZPH shows the currently set reference level in the diagram header.

1. Enter the reference level you require.
Alternatively, you can set the current level readout as the reference level.
2. Select the "To Ref" softkey.
The R&S Cable Rider ZPH sets the current result as the reference level.
It then displays the measured level relative to the reference level in dB. The unit is automatically set to dB Rel.

Setting the averaging time

The averaging time determines the length of the measurement. The longer the averaging time, the more stable the display, particularly if signals have low power or are noisy.

The averaging time is either "Short", "Normal" or "Long".

- A short measurement time provides stable and accurate results for stationary sine signals with high levels (> -40 dBm). It is also appropriate for measurements that require a high repetition rate.
- A normal measurement time increases the stability of results for signals with low levels or modulated signals.
- A long measurement time is appropriate for signals with very low-power levels (< -50 dBm)

To eliminate noise and the effects of noise on the measurement effectively, use the R&S FSH-Z1 power sensor.

1. Select the "MeasTime" softkey.
2. Select the measurement time most suitable for your test setup.

Taking additional loss or gain into account

At high powers that cause the power sensor maximum input level to be exceeded or at very low levels that are below the R&S Cable Rider ZPH minimum sensitivity, the R&S Cable Rider ZPH can take additional loss or gain between the DUT and the power sensor into account. These differences are defined in terms of an offset in dB relative to the measured level. A positive offset corresponds to a loss and a negative offset corresponds to a gain.

The R&S Cable Rider ZPH shows the current offset in the diagram header.

1. Select the "OFS" softkey.
The R&S Cable Rider ZPH opens an input field to define the reference offset.
2. Enter the offset you require.
The R&S Cable Rider ZPH takes the offset value into account in the power or level display.

9.2 Using a Directional Power Sensor

For power measurements in both directions (forward and reverse), you can connect directional power sensors to the R&S Cable Rider ZPH. The R&S Cable Rider ZPH supports the following directional power sensors:

- R&S FSH-Z14
- R&S FSH-Z44

With a directional power sensor, the R&S Cable Rider ZPH measures the power of a signal from source to load (forward power) and from load to source (reverse power). The ratio of forward and reverse power is a measure of the load matching. The R&S Cable Rider ZPH displays the results as the return loss or the standing wave ratio.

1. Press the [MODE] key.
2. Select the "Power Meter" softkey
The R&S Cable Rider ZPH activates the mode for power measurements.

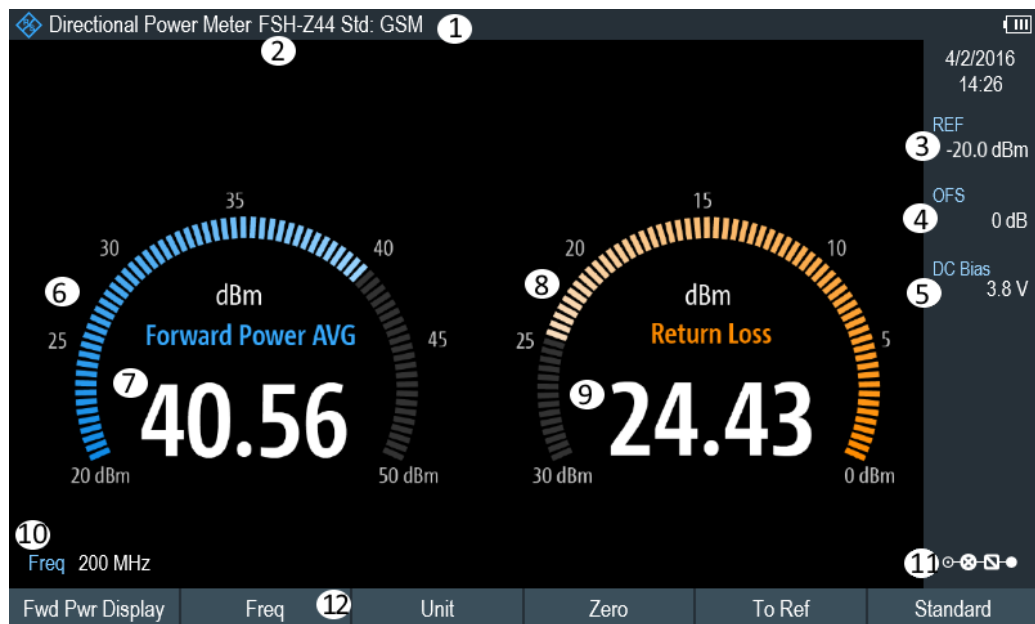


Figure 9-2: Screen layout of the directional power mode

- 1 = Selected transmission standard
- 2 = Connected power sensor model
- 3 = Reference for relative power measurements
- 4 = Power offset
- 5 = DC bias voltage (only for model .12)
- 6 = Analog readout of the forward power
- 7 = Readout of the forward power
- 8 = Analog readout of the matching value
- 9 = Readout of the matching value
- 10 = Measurement frequency
- 11 = Configuration overview icon
- 12 = Directional power sensor "MEAS" softkey menu

9.2.1 Connecting a Directional Power Sensor

The R&S Cable Rider ZPH controls and powers the directional power sensors via a special interface on the top of the instrument.

Connect the power sensor cable via the USB to binder adapter to the USB port of R&S Cable Rider ZPH. The power sensor itself is located between the source and the load of the test setup.

For the test setup of the directional power sensor, see ["Test setup"](#) on page 84.

If the R&S Cable Rider ZPH recognizes a power sensor, it sets up a connection via the interface and after a few seconds shows the results. It displays the type of the power sensor in the display header. If an error occurs, the R&S Cable Rider ZPH shows a corresponding message.

For more information, see [Chapter 9.1.1, "Connecting a Power Sensor"](#), on page 254.

9.2.2 Performing and Configuring Measurements

After you have connected a power sensor, the R&S Cable Rider ZPH immediately starts to measure the signal power.

When measuring high powers, pay strict attention to the following instructions to avoid personal injury and to prevent the power sensor from being destroyed.

CAUTION

Risk of skin burns and / or damage to the R&S Cable Rider ZPH

Measuring high powers may lead to skin burns and / or damage to the R&S Cable Rider ZPH. You can avoid it by:

- Never exceeding the permissible continuous power. The permissible continuous power is indicated on a diagram on the back of the power sensor.
 - Turning off the RF power when connecting the power sensor.
 - Connecting the RF connectors tightly.
-

Defining the center frequency

To get the most accurate results, you should synchronize the frequency to that of the signal.

Note that the R&S Cable Rider ZPH maintains the center frequency that you have set in another operating mode. In that case, it uses that frequency as the power sensor frequency.

If you want to perform measurements on another known signal, you can change the power sensor frequency manually.

1. Select the "Freq" softkey.
The R&S Cable Rider ZPH opens an input field to define the frequency opens.
2. Enter the frequency of the signal.
The R&S Cable Rider ZPH transfers the new frequency to the power sensor which then corrects the measured power readings.

Zeroing the power sensor

For more information, see ["Zeroing the power sensor"](#) on page 256.

Setting the power measurement weighting mode

For forward power display, the R&S Cable Rider ZPH provides both average power and peak envelope power.

1. Press the [MEAS] key.
2. Select the "Fwrd Pwr Display" softkey.
3. Select the weighting mode you require.

The R&S Cable Rider ZPH indicates the weighting mode at the forward power heading.

- "Average" = average power
- "Peak Envelope" = peak envelope power

Selecting the unit for the power readout

When using a directional power sensor, the R&S Cable Rider ZPH displays the forward power as a logarithmic level value in dBm (relative value) or as a linear value in W or mW (absolute value). In addition, you can define a reference level relative to which the R&S Cable Rider ZPH indicates the level difference in dB. Load matching is indicated as return loss in dB or as voltage standing wave ratio (VSWR). In addition, the absolutely reflected power can be displayed in W, or the reflected level in dBm.

For more information, see ["Selecting the unit for the power readout"](#) on page 257.

Setting the reference level

If you have selected the unit dB Rel for the forward power, the R&S Cable Rider ZPH opens an input field to set the reference level. The R&S Cable Rider ZPH shows the currently set reference level in the diagram header.

For more information, see ["Setting the reference level"](#) on page 257.

Selecting a standard

To ensure that true results are output when measuring modulated signals, the R&S Cable Rider ZPH offers the possibility of taking correction values into account for several common telecommunications standards.

1. Select the "Standard" softkey.
A menu to select a standard opens.
2. Select the standard you require.
The R&S Cable Rider ZPH takes the selected standard into account. The currently active standard is displayed in the display header.

Taking additional attenuation into account

When the directional power sensor is connected to a test point not directly but via a cable, the influence of cable attenuation can be taken into account. For this purpose, the cable attenuation for the measurement frequency in question is to be entered is based on the following condition:

Condition for setting cable attenuation

- As a positive dB value if the power and matching are to be measured at the source and the cable is connected between the source and the power sensor
- As a negative dB value if the power and matching are to be measured at the load and the cable is connected between the load and the power sensor

The directional power sensor then corrects the power and matching values to produce the results that would have been obtained if it had been directly connected to the test point.

1. Select the "OFS" softkey.
The R&S Cable Rider ZPH opens an input field to define the reference offset.
2. Enter the offset you require.
The R&S Cable Rider ZPH takes the offset value into account in the power (level) and matching results.

If high powers are applied that exceed the maximum input level of the R&S FSH-Z14 or R&S FSH-Z44, a directional coupler or an attenuator has to be connected ahead of the power sensor.

In such cases, the coupling attenuation of the directional coupler or the attenuation value of the attenuator are entered as positive dB values (see [condition to set cable attenuation](#)) into the R&S Cable Rider ZPH to ensure true measured power readout. In both cases, a termination or an attenuator of sufficient power-handling capacity has to be connected to the power sensor at the load end. The matching readout is irrelevant in such case since it is likewise corrected by taking into account the attenuation value of the termination or attenuator.

10 Using the Internal Power Meter



R&S Cable Rider ZPH option

R&S ZPH-K19 (order number: 1321.0409.02) option is required to operate the R&S Cable Rider ZPH in the internal power mode.

With the installation of internal power meter option, the R&S Cable Rider ZPH also supports power measurements without using a power sensor. In that case, you can connect the DUT directly to the R&S Cable Rider ZPH and still perform accurate channel power measurements.




Signal source output for model .02

When the "SigGen On" softkey is activated, the R&S Cable Rider ZPH provides a signal source which you can use to perform a quick cable loss measurement on DUT. See [Activating signal source for model .02](#).

Test setup

Connect the DUT to the RF input shown below:

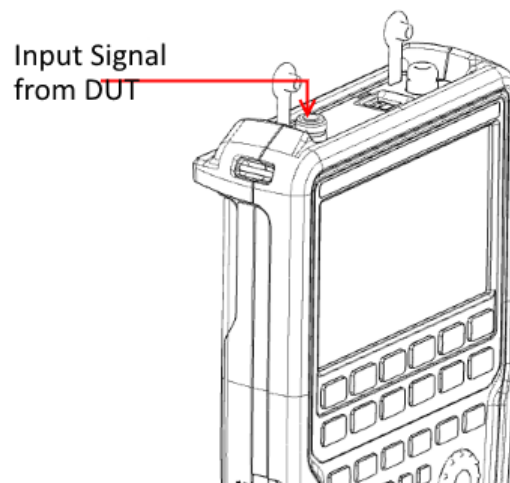

Measuring the power

1. Press the [MODE] key.
2. Select the "Power Meter" softkey.
The R&S Cable Rider ZPH switches its operating mode and shows the measured power level in dBm.

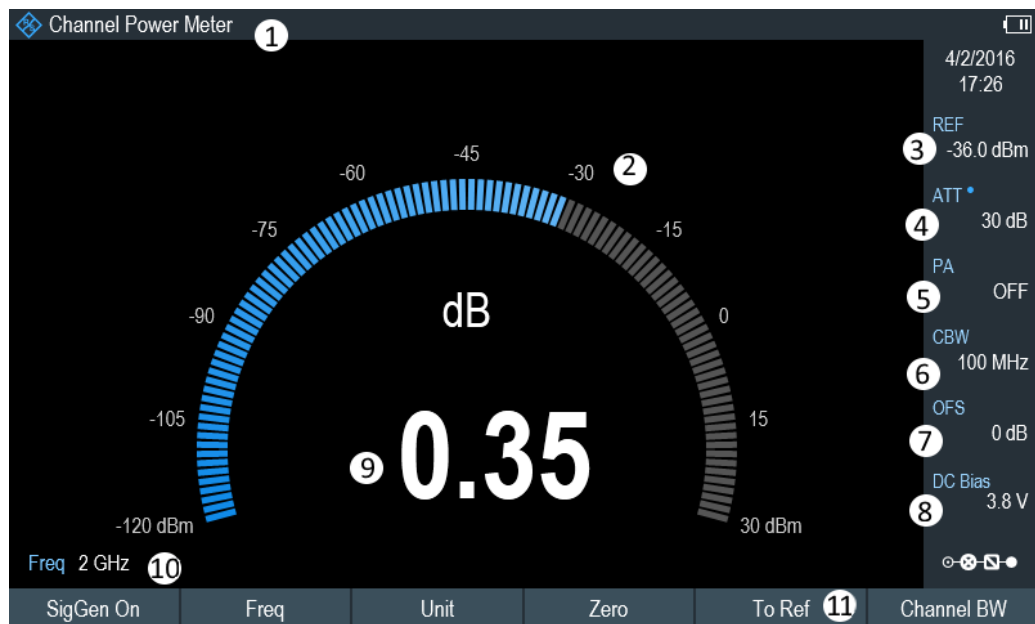


Figure 10-1: Internal power meter measurement

- 1 = "Channel Power Meter" mode for model .12 or "Power Meter" mode for model .02
- 2 = Readout of the measured power
- 3 = Reference for relative power measurements
- 4 = RF attenuation setting (only for model .12)
- 5 = Preamplifier state (only for model .12)
- 6 = Measurement channel bandwidth (only for model .12)
- 7 = Power offset
- 8 = DC bias voltage (only for model .12)
- 9 = Analog readout of the measured power
- 10 = Measurement frequency
- 11 = Power measurement softkey menu ("Zero" and "Channel BW" only available for model .12, "SigGen On" only available for model .02)

Performing and configuring power measurements

The configuration of power measurements without a power sensor is similar to measurement with a power meter.

The following features are available:

- Defining the frequency
- Zeroing the measurement (only with model .12)
- Selecting the unit
- Defining the reference level
- Taking additional loss or gain into account
- DC bias voltage (only for model .12)

For more information, see [Chapter 9.1.2, "Performing and Configuring Measurements"](#), on page 255.

Defining the channel bandwidth for model .12

For model .12, the R&S Cable Rider ZPH provides additional setting to select the channel bandwidth.

1. Press the [MEAS] key.
2. Select the "Channel BW" softkey.
The R&S Cable Rider ZPH opens an input field to define the channel bandwidth.
3. Enter the channel bandwidth you require.
The R&S Cable Rider ZPH performs a measurement on the selected channel.
Note that it is not possible to change the measurement time, resolution bandwidth and frequency span.

Activating signal source for model .02

For model .02, the R&S Cable Rider ZPH provides the setting to enable or disable the built-in signal source in the power meter mode.

Once the signal source is enabled, you can output a signal source of -10 dBm at the designated frequency from the RF output connector.

- Select the "SigGen On" softkey.
The R&S Cable Rider ZPH output a signal source of -10 dBm at the RF output connector.

11 Performing Pulse Power Measurements



R&S Cable Rider ZPH option

R&S ZPH-K29 (order number: 1321.0421.02) option is required to operate the R&S Cable Rider ZPH in the pulse power meter mode.

When you equip the R&S Cable Rider ZPH with the pulse power measurement option and connect one of the wideband power sensors available from Rohde & Schwarz (R&S NRP-Z81, -Z85 or -Z86), you can perform pulse power measurements with your R&S Cable Rider ZPH.

Like the normal power meter application, the pulse power application measures the power of the whole signal in the frequency range of the (wideband) power sensor.

1. Press the [MODE] key.
2. Select the "Power Meter" softkey
The R&S Cable Rider ZPH activates the mode for power measurements.

Connecting the power sensor

You can connect the wideband power sensors to the USB port of the R&S Cable Rider ZPH. For more information, see [Chapter 9.1.1, "Connecting a Power Sensor"](#), on page 254.

The measurement starts as soon as the power sensor is connected.

Numerical result display

1. Press the [MEAS] key.
2. Select the "Meas Mode" softkey.
3. Select the "Average" menu item.

The layout and contents of the numerical result display are the same as those described in [Figure 9-1](#).

Graphical result display (Power vs Time)

The graphical representation of the results is a special feature only available with the firmware option R&S ZPH-K29.

1. Press the [MEAS] key.
2. Select the "Meas mode" softkey.
3. Select the "Power vs Time" menu item.

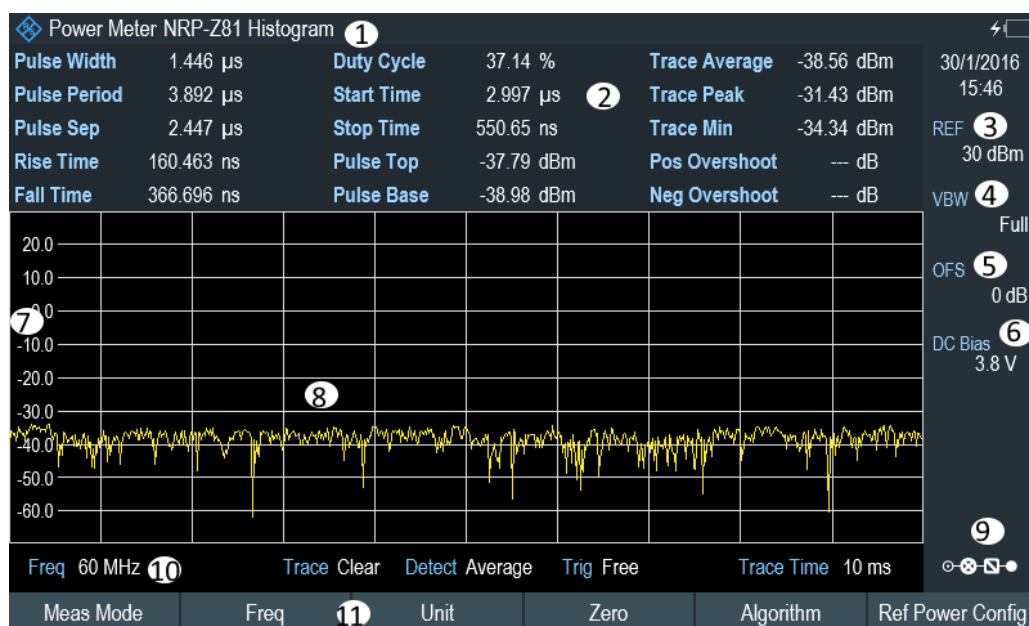


Figure 11-1: Power vs time display

- 1 = Connected power sensor model and type of algorithm for power calculation
- 2 = Numerical results showing the pulse characteristics
- 3 = Reference for relative power measurements
- 4 = Video bandwidth
- 5 = Power offset
- 6 = [Configuring the BIAS output port](#) (only for model .12)
- 7 = Scale of the x-axis
- 8 = Diagram showing the pulse characteristics in a graphical format (trace display)
- 9 = Measurement frequency
- 10 = Configuring overview icon
- 11 = Softkey menu of the pulse power measurement application

The following power characteristics are calculated and displayed as numerical values. See [Figure 11-2](#) for a graphical representation of the parameters.

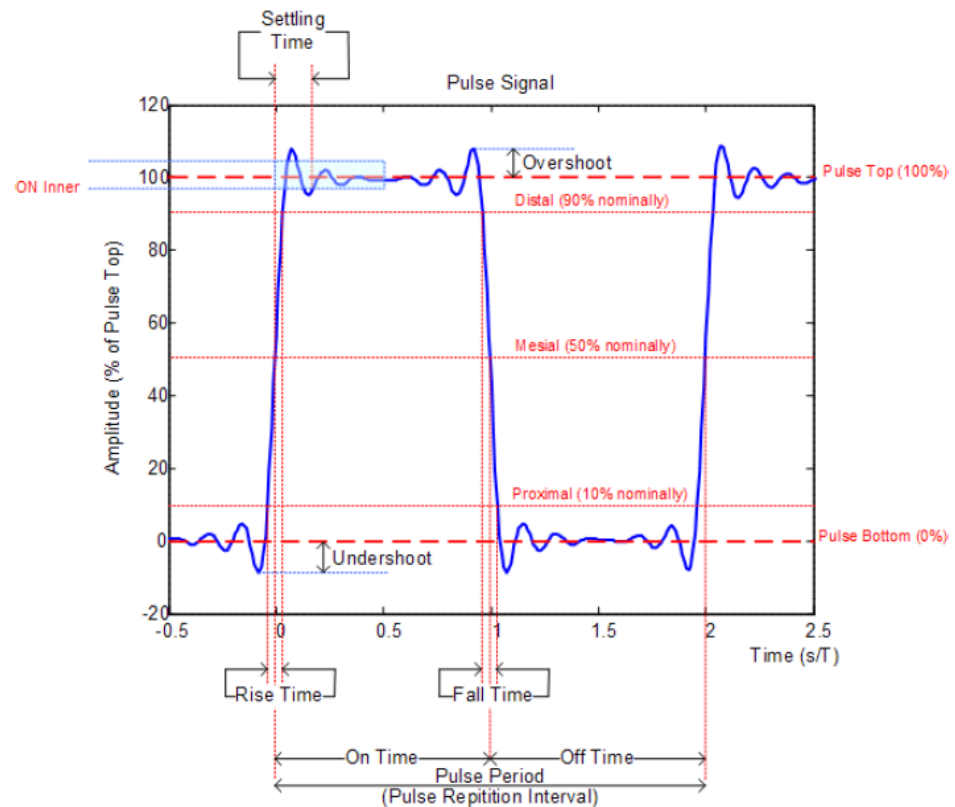


Figure 11-2: Graphical representation of pulse characteristic

Pulse characteristic	Description
Pulse Width	Time that the pulse remains at the top level ("ON"). This is the time between the first positive edge and the subsequent negative edge of the pulse in seconds, where the edges occur at crossings of the mid threshold.
Pulse Period	Time that is elapsing from the beginning of one pulse to the beginning of the next pulse.
Pulse Off Time	Time in the displayed trace that is not occupied by the pulse.
Rise Time	Time required for the pulse to transition from the base to the top level. This is the difference between the time at which the pulse exceeds the lower and upper thresholds.
Fall Time	Time required for the pulse to transition from the top to the base level. This is the difference between the time at which the pulse drops below the upper and lower thresholds.
Duty Cycle	Ratio of the "Pulse Width" to "Pulse Repetition Interval" expressed as a percentage (requires at least two measured pulses).

Pulse characteristic	Description
Start Time	Time offset, relative to the beginning of the trace (0 sec), where the pulse begins (start of the rise time).
Stop Time	Time offset, relative to the beginning of the trace (0 sec), where the pulse stops (end of the fall time).
Pulse Top	Median pulse ON power. The value of this parameter is used as a reference (100%) to determine other parameter values such as the rising / falling thresholds.
Pulse Base	Median pulse OFF power. The value of this parameter is used as a reference (0 %) to determine other parameter values such as the rising / falling thresholds.
Trace Avg	Average power of the signal displayed in the diagram.
Trace Peak	Maximum power of the signal displayed in the diagram.
Trace Min	Minimum power of the signal displayed in the diagram.
Positive Overshoot	Height of the local maximum after a rising edge, divided by the pulse amplitude. The result is a percentage of the pulse amplitude.
Negative Overshoot	Height of the local minimum after a rising edge, divided by the pulse amplitude. The result is a percentage of the pulse amplitude.

11.1 Configuring the Numerical Result Display

The functions available for the numerical result display are the same as those available for normal power sensor measurements.

For more information, see [Chapter 9.1.2, "Performing and Configuring Measurements"](#), on page 255.

11.2 Configuring the Power vs Time Result Display

The R&S Cable Rider ZPH allows you to configure several aspects of the power vs time result display and the way the pulse is measured.

- [Determining Pulse Characteristics](#)..... 270
- [Selecting the Video Bandwidth](#)..... 271
- [Averaging Traces](#)..... 271
- [Triggering Measurements](#)..... 272

• Selecting the Result Unit	273
• Scaling the Y-Axis	273
• Using Markers	273

11.2.1 Determining Pulse Characteristics

Selecting an algorithm for base and top power calculation

The R&S Cable Rider ZPH provides several methods (or algorithms) to calculate the base and top power of a pulse.

- "Histogram"
Calculates the top and base power of the pulse by analyzing the histogram of the trace data. The level of the pulse top calculated by the mean value of all points representing the pulse top. Similarly the level of the pulse base is calculated by the points representing the pulse base.
This algorithm is recommended for analyzing most of the pulse signals
- "Integration"
Calculates the top power of the pulse by fitting a rectangle pulse of the same energy into the pulse signal as a reference.
This algorithm is recommended for modulated pulse signals or when the pulse energy must be taken into account, for example when you want to compare the measurement result with that of a thermal power sensor.
- "Peak"
Assumes that the peak power of the pulse is also the top level of the pulse.

The top and base power is also the reference point for the calculation of pulse timing characteristics.

1. Press the [MEAS] key.
2. Select the "Algorithm" softkey.
3. Select the algorithm you prefer for your measurement.
The R&S Cable Rider ZPH adjusts the results accordingly.

Defining reference levels for pulse timing calculation

To calculate pulse timing parameters, like the rise and fall time of the pulse, you have to define several reference levels. All reference levels are a percentage of the pulse amplitude, either expressed in terms of power (Watt) or voltage (Volt).

The "Low Reference Power" and "High Reference Power" are required to calculate the fall and rise times of the measured pulse. The "Low Reference Power" defines the level at the start of the rising edge and the level at the end of the falling edge of the pulse. The "High Reference Power" defines the level at end of the rising edge and the level at the start of the falling edge.

The "Reference Power" is required to calculate the pulse width, its start time and its stop time.

1. Press the [MEAS] key.
2. Select the "Ref Power Config" softkey.
3. Define the reference levels as required.

You can always reset the reference levels to their default value with the "Set to Default" menu item.

All the reference levels can be relative to the power or the voltage of the signal. Depending on this selection, different measurement points are being analyzed, so the results may be different.

1. Press the [MEAS] key.
2. Select the "Ref Power Config" softkey.
3. Select either the "Power" or the "Voltage" menu item as the reference.

11.2.2 Selecting the Video Bandwidth

When you are using a wideband power sensor, you can change the video bandwidth used for the measurement. The main effect of using a small video bandwidth is that it reduces the displayed inherent noise.

Using a small video bandwidth thus increases the measurement sensitivity and allows you to accurately determine the pulse peak power even for weak pulses. Reducing the video bandwidth also increases the trigger sensitivity of the power sensor.

Note that the video bandwidth should not be smaller than the RF bandwidth of the measured signal. Otherwise, measurement results may become invalid.

11.2.3 Averaging Traces

Selecting the trace mode

The Power vs Time result display provides two trace modes.

- The "Clear / Write" mode overwrites the trace data after each measurement.
- The "Average" mode forms an average over several measurements and displays the data according to the selected detector.
When you select this mode, you can define the number of measurements over which the trace data is calculated. When you select this mode, you can define the number of measurements over which the trace data is calculated.

1. Select the "Trace" softkey
2. Select the trace mode you prefer for the measurement.

Selecting the detector

When you are averaging traces, you can also select a detector. The detector defines the way the measured data is evaluated and which data is displayed.

In the Power vs Time result display, you can select the "Average" detector or the "Max Peak" detector. The "Average" detector displays the averaged measurement data, while the "Max Peak" detector displays the highest values that have been measured on each pixel.

1. Select the "Detect" softkey.
2. Select the detector you prefer.

11.2.4 Triggering Measurements

In its default state, the R&S Cable Rider ZPH starts a measurement on completion of the previous measurement ("Free Run" measurements).

However, you can also perform triggered measurements with the power sensor. When you choose to do so, the trigger event (the moment when the actual measurement starts) is either a rising slope in the signal or a falling slope ("Positive" or "Negative" trigger).

1. Press the [SWEEP] key.
2. Select the "Trigger" softkey.
3. Select either the "Positive" or "Negative" menu item.
The R&S Cable Rider ZPH stops measuring the signal until a trigger event occurs.

In case of triggered measurements, you have to define a trigger level by which the signal must rise or fall in order to be recognized.

1. Press the [SWEEP] softkey.
2. Select the "Trigger" softkey.
3. Select either the "Trigger Level" menu item and define a trigger level.

In addition, you can define a trigger delay time. The trigger delay time defines a time that must pass after the trigger event has occurred before the measurement starts. A negative trigger delay time is called a pre-trigger.

1. Press the [SWEEP] softkey.
2. Select the "Trigger" softkey.
3. Select either the "Trigger Delay" menu item and define a delay time.
When a trigger event occurs, the R&S Cable Rider ZPH takes the delay time into account when drawing the trace.

11.2.5 Selecting the Result Unit

In the pulse measurement application, the R&S R&S Cable Rider ZPH can display measured power in relative units (dBm) or in absolute units (W).

1. For model .02, press the [SCALE] key.
For model .12, press the [SCALE/AMPT] key.
2. Select the "Unit" softkey.
3. Select the unit you prefer.
The R&S Cable Rider ZPH adjusts the y-axis accordingly.

11.2.6 Scaling the Y-Axis

For more information, see [Chapter 7.2.3, "Configuring the Vertical Axis"](#), on page 150.

11.2.7 Using Markers

The Power vs Time diagram supports markers.

For more information, see [Chapter 7.3.2, "Using Markers"](#), on page 157 (note that the marker functions are not available in the "Power Meter" mode).

12 Modulation Analysis



R&S Cable Rider ZPH option

R&S ZPH-K7 (order number: 1334.5633.02) option is required to operate the R&S Cable Rider ZPH in both analog and digital demodulation mode.

This mode is only available with model .12.

12.1 Analog Demodulation

The Analog Demodulation measurement analyzes the AM or FM modulated signals and calculates the [analog modulation parameters](#) using the measurement results. Note that the measurement works properly only if you apply an amplitude or frequency modulated signal. This firmware option provides the necessary measurement functions to analyze amplitude and frequency modulated signals.

The digital signal processing in the R&S Cable Rider ZPH is used for demodulating amplitude and frequency modulated signals.

By sampling (digitization) already at the IF and digital down-conversion to the base-band (I/Q), the demodulator achieves maximum accuracy and temperature stability. There is no evidence of typical errors of an analog down-conversion and demodulation like AM to FM conversion and vice versa, deviation error, frequency response or frequency drift at DC coupling.

1. Press [MODE] key.
The R&S Cable Rider ZPH opens the mode menu.
2. Select the "Spectrum Analyzer" softkey.
The R&S Cable Rider ZPH opens a submenu that contains the spectrum analyzer measurement menu items.
3. Select the "Analog Demod" menu item.
The R&S Cable Rider ZPH activates the mode for analog modulation.
See index 1 of [Figure 12-1](#).
4. Press the [MEAS] key.
The R&S Cable Rider ZPH opens the analog demodulation measurement menu.
The measurements are performed in two analog demodulation domains: "AM Domain" or "FM Domain" and the measurement readings are available in two different selections: "Mod Trace" and "Mod Summary".
5. Select the analog demodulation domain you require and measurement selection to view the measurement readings.
The R&S Cable Rider ZPH displays the respective analog modulation measurement. See examples in [Figure 12-1](#)

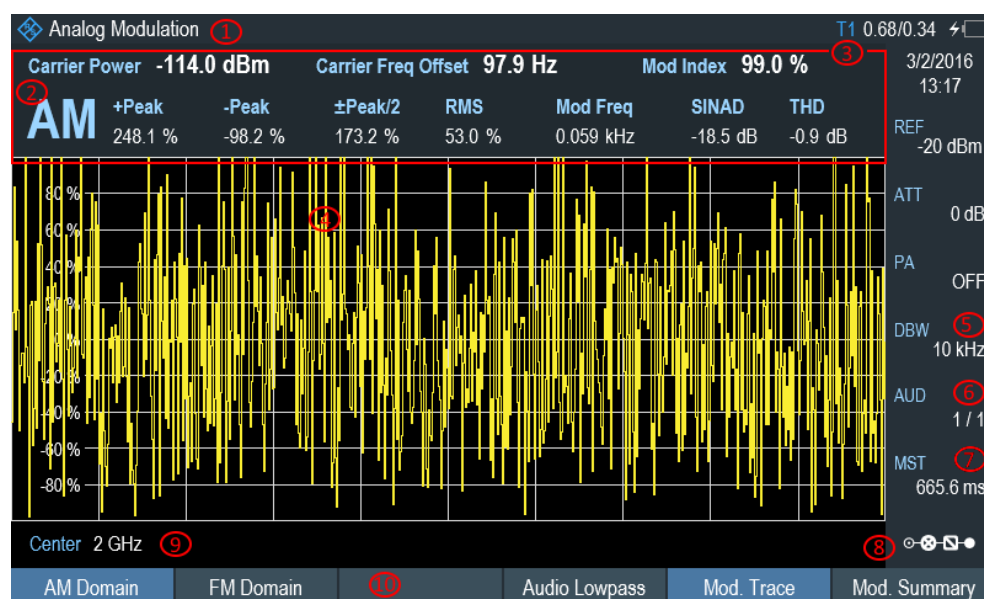


Figure 12-1: AM Domain

- 1 = Title Bar
- 2 = AM or FM modulation
- 3 = Analog Modulation Parameters
- 4 = Modulation trace window
- 5 = Demodulation Bandwidth
- 6 = Audio lowpass filter
- 7 = Measurement time
- 8 = Configuration Overview
- 9 = Carrier frequency
- 10 = Softkey menu of analog modulation measurement. See Chapter 12.1.3.1, "Analog Modulation", on page 280.

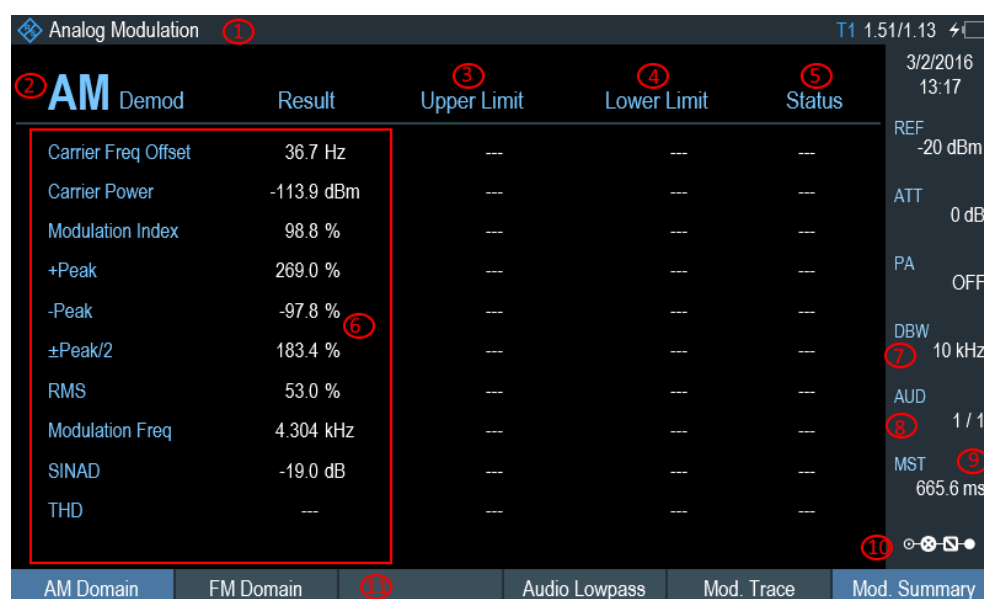


Figure 12-2: AM Summary

- 1 = [Title Bar](#)
- 2 = AM or FM modulation
- 3 = [Upper Limit](#)
- 4 = [Lower Limit](#)
- 5 = "PASS" or "FAIL" result of the limit test
- 6 = [Analog Modulation Parameters](#)
- 7 = [Demodulation Bandwidth](#)
- 8 = [Audio lowpass filter](#)
- 9 = [Measurement time](#)
- 10 = [Configuration Overview](#)
- 11 = Softkey menu of analog modulation measurement. See [Chapter 12.1.3.1, "Analog Modulation"](#), on page 280.

The following analog modulation parameters are calculated:

Table 12-1: Analog Modulation Parameters

Label	Description
Carrier Power	Shows the power of the carrier without modulation in dBm.
Carrier Freq Offset	Shows the deviation of the calculated carrier frequency to the ideal carrier frequency in Hz.
Mod Index (AM domain)	Shows the difference in amplitude the carrier signal is modulated with.
Freq Deviation (FM domain)	Shows the frequency deviation that the carrier signal is modulated with.
Modulation Rate	Shows the modulation rate in %. Modulation rate = (Frequency Deviation / Reference Deviation) * 100 %
+Peak -Peak	Shows the minimum and maximum frequency deviation (FM signals) or modulation depth (AM signals).
±Peak/2	Shows the average frequency deviation (FM signals) or modulation depth (AM signals). $(+Peak + -Peak) / 2$
RMS	Shows the root mean square of the frequency deviation (FM signals) or modulation depth (AM signals).
Mod Freq	Shows the modulation frequency.

Label	Description
SINAD	Signal-to-noise and distortion Measures the ratio of the total power to the power of noise and harmonic distortions. The noise and harmonic power is calculated inside the AF spectrum span. The DC offset is removed before the calculation. $SINAD[dB] = 20 \cdot \log \left[\frac{\text{total power}}{\text{noise} + \text{distortion power}} \right]$
THD	Total harmonic distortion Measures the ratio of the harmonics to the fundamental and harmonics. All harmonics inside AF spectrum are considered up to the tenth harmonic. $THD[dB] = 20 \cdot \log \left[\frac{\sqrt{\sum_{i=2}^{\infty} U_i^2}}{\sqrt{\sum_{i=1}^{\infty} U_i^2}} \right]$

12.1.1 Demodulation Bandwidth

The demodulation bandwidth is not the 3 dB bandwidth but the useful bandwidth which is distortion-free for phase and amplitude. See [Table 12-2](#).

Therefore the following formulas apply:

- AM: demodulation bandwidth $\geq 2 \times$ modulating frequency
- FM (CARSON's rule): demodulation bandwidth $\geq 2 \times$ (frequency deviation + highest modulating frequency)



If the center frequency of the analyzer is not set exactly to the signal frequency, the demodulation bandwidth must be selected larger by the carrier offset, in addition to the requirement described above.

In general, the demodulation bandwidth should be as narrow as possible to improve the S/N ratio. The residual FM caused by noise floor and phase noise increases dramatically with the bandwidth, especially with FM.

12.1.2 Sample Rate, Measurement Time and Audio Lowpass Filter

Depending on the sample rate, the maximum demodulation bandwidths listed in the [Table 12-2](#) can be obtained during the measurement. The permissible value range of the measurement time depends on the selected demodulation bandwidth and audio lowpass filter.

Example: AM modulation with a modulating frequency of 1kHz

1. Calculate the demodulation bandwidth you require.
Demodulation Bandwidth = 2 x 1 kHz
2. Select the minimum demodulation bandwidth from table [Table 12-2](#).
As a result, the demodulation bandwidth of "3000" is selected from the table. This shows that a minimum measurement time of 1.31 seconds is required to capture 3125 of sample rate.
3. Select the appropriate audio lowpass filter from [Table 12-3](#).
4. Depending on the sample rate and modulating frequency range, "DBW/1" is selected as the audio lowpass filter.
5. If a faster measurement time is desired, e.g. 6 ms, the audio lowpass, "DBW/10" should be selected to fulfill the requirement on the modulating frequency.

Table 12-2: Relationship on Demodulation Bandwidth, Sample Rate and Measurement Time

Demodulation Bandwidth <= (kHz), "Manual DBW"	Output Sample Rate	Measurement Time (ms), "MST"
2000000	2500000	1
989000	1250000	3
650000	964000	4
500000	625000	6
300000	391000	10
200000	250000	16
100000	125000	32
50000	62500	65
30000	36250	112
20000	25000	163
10000	12500	327
5000	6250	655
3000	3125	1310

Table 12-3: Selection of Audio Lowpass Filter

Selection of Audio Lowpass, DPD (Digital Predistortion) filter	Output Sample Rate	Modulating Frequency (Hz)	
		Maximum Frequency	Minimum Frequency
"DBW/1"	2500000	1000000	6100
	1250000	500000	3050
	964000	325000	2350
	625000	250000	1520

Selection of Audio Lowpass, DPD (Digital Predistortion) filter	Output Sample Rate	Modulating Frequency (Hz)	
		Maximum Frequency	Minimum Frequency
	391000	150000	950
	250000	100000	610
	125000	50000	300
	62500	25000	150
	36250	15000	80
	25000	10000	60
	12500	5000	30
	6250	2500	10
	3125	1500	0
"DBW/10"	250000	100000	60
	125000	50000	300
	96400	32500	230
	62500	25000	150
	39100	15000	90
	25000	10000	60
	12500	5000	30
	6250	2500	10
	3625	1500	0
	2500	1000	0
	1250	500	0
	625	250	0
	312	150	0
"DBW/30"	75757	30303	180
	37878	15152	90
	29212	9848	70
	18939	7576	40
	11848	4545	20
	7575	3030	10
	3787	1515	0
	1893	758	0
	1098	455	0
	757	303	0

Selection of Audio Lowpass, DPD (Digital Predistortion) filter	Output Sample Rate	Modulating Frequency (Hz)	
		Maximum Frequency	Minimum Frequency
	378	152	0
	189	76	0
	94	45	0
"DBW/100"	25000	10000	60
	12500	5000	30
	9640	3250	20
	6250	2500	10
	3910	1500	0
	2500	1000	0
	1250	500	0
	625	250	0
	362	150	0
	250	100	0
	125	50	0
	62	25	0
	31	15	0

12.1.3 Performing and Configuring Measurements

After the "Analog Modulation" mode is activated, the R&S Cable Rider ZPH immediately starts to measure the modulated signals.

12.1.3.1 Analog Modulation

The analog modulation is performed in the AM Domain or FM Domain and the measurement readings are selectable in the "Mod Trace" and "Mod Summary" setting.

- **AM Domain**
Measurement is performed on the amplitude modulated signal monitors at the carrier frequency.
 - Modulation Trace
Measurement is performed and displayed in the trace window.
 - Modulation Summary
Measurement is performed and displayed in the summary window.
- **FM Domain**
Measurement is performed on the frequency modulated signal monitors at the carrier frequency.

- Modulation Trace
Measurement is performed and displayed in the trace window.
 - Modulation Summary
Measurement is performed and displayed in the summary window.
1. Press [MEAS] key.
The R&S Cable Rider ZPH opens the analog modulation menu.
 2. Select the analog modulation domain you require ("AM Domain" or "FM Domain") and the required measurement setting ("Mod. Trace" or "Mod. Summary") softkey to perform the measurement.
See index 9 of [Figure 12-1](#).

12.1.3.2 Defining the Horizontal Axis

The frequency defines the carrier frequency of the modulated signals.

Carrier Frequency

For more information, see [Chapter 8.2.2.1, "Defining the Center Frequency"](#), on page 212.

Carrier Frequency Step Size

For more information, see [Chapter 8.2.2.2, "Defining a Frequency Step Size"](#), on page 213.

12.1.3.3 Defining the Vertical Axis

Reference Level

For more information, see [Chapter 8.2.3.1, "Setting the Reference Level"](#), on page 216.

Modulation Depth

The vertical axis of the AM Domain displays the modulation depth of the amplitude modulated signal.

1. Press [MEAS] key.
2. Select the "AM Domain" softkey
3. Press [SCALE/AMPT] key
4. Select the "Dev per Division".
A drop-down menu to select the step interval on the modulation depth opens.
5. Select the step interval on the modulation depth you require.

Frequency Deviation

The vertical axis of the FM Domain displays the frequency deviation of the frequency modulated signal.

1. Press [MEAS] key.
2. Select the "FM Domain" softkey
3. Press [SCALE/AMPT] key
4. Press the "Dev per Division".
A drop-down menu to select the step interval on the frequency deviation opens.
5. Select the step interval on the frequency deviation you require.

Scale Adjustment

The scale adjustment is only available in the "FM Domain" of "Mod Trace" measurement.

1. Press [DTF/BW] key.
2. Select the "Scale Adjust" softkey.
The R&S Cable Rider ZPH performs an auto adjustment on the vertical axis in the FM Domain of "Mod Trace" measurement.

RF Attenuation

For more information, see [Chapter 8.2.3.5, "Setting the RF Attenuation"](#), on page 218.

Preamplifier

For more information, see [Chapter 8.2.3.6, "Using the Preamplifier"](#), on page 219.

12.1.3.4 Defining Demodulation Bandwidth and Audio Lowpass Filter

Demodulation Bandwidth

The demodulation bandwidth defines the useful bandwidth used in the modulated signals.

1. Press [DTF/BW] key.
2. Select the "Manual DBW" softkey.
The R&S Cable Rider ZPH opens an input field to select the demodulation bandwidth.
3. Rotate the rotary knob to select the demodulation bandwidth you require.
See [Chapter 12.1.1, "Demodulation Bandwidth"](#), on page 277 and [Table 12-2](#).

Reference Deviation

The reference deviation is available only in the FM domain, the maximum of reference deviation setting is (demodulation bandwidth) /2.

1. Press [DTF/BW] key.
2. Select the "Reference Deviation" softkey.
The R&S Cable Rider ZPH opens an input field to select the reference deviation.
3. Select the reference deviation you require.
See [Table 12-1](#) .

Audio Lowpass

The "Audio Lowpass", a DPD (Digital Predistortion) designed filter is used to fine-tuned the measurements demodulated signals.

1. Press [MEAS] key.
The R&S Cable Rider ZPH opens the analog modulation measurement menu.
2. Select the analog modulation domain you require, "AM Domain" or "FM Domain" softkey.
3. Select the "Audio Lowpass" softkey
A drop-down menu to select the audio lowpass filter opens.
4. Select the audio lowpass filter you require.
See [Table 12-3](#).

12.1.3.5 Defining FM Broadcast

Depending on the country-specific requirements, it maybe necessary to suppress the display of higher frequency component of the modulation signal.



FM Broadcast

The FM broadcast is only enabled with the [demodulation bandwidth](#) setting at 200 kHz or 300 kHz.

1. Press [DTF/BW] key.
2. Select the "FM Broadcast" softkey.
A drop-down menu to select the filter opens.
3. Select the filter setting you require.

12.1.3.6 Limit Settings

The limit line available in the AM and FM summary measurement allows you to perform limit check on the measurements.

The limit line file is created using the "Ama AM Limits" or "Ama FM Limits" editor in the R&S InstrumentView software package.

For information on the analog modulation limit line editor, see R&S InstrumentView software manual.

1. Press [LINES] key.
2. Select the "Select Limits" softkey.
The R&S Cable Rider ZPH opens the "File Manager" dialog to select the limit line file.
3. Select the limit line file you require from the file manager.
Note: The limit line is edited using the Ama AM or FM limit line editor from R&S InstrumentView software package.
4. Select the "Load" softkey.
The R&S Cable Rider ZPH activates and loads the limit line values in the table.
See [Figure 12-2](#).
5. Select the "Audio Beep" to turn on or off the acoustic audio signal for the limit line check status.
See index 5 of [Figure 12-2](#).
See also "Audio signal" on page 248.
6. Select the "Clear Limits" to unload the limit line file.

12.2 Digital Demodulation

The Digital Demodulation measurement analyzes the Amplitude Shift Keying (ASK) and Frequency Shift Keying (FSK) modulated signals and calculates the digital modulation parameters. The results are displayed in four different [display mode](#) diagrams: "Eye Diagram", "Symbols", "Modulation Depth" for ASK or "Modulation Deviation" for FSK and "Modulation Error".

The firmware option R&S ZPH-K7 provides the necessary measurement functions to analyze ASK and FSK modulated signals.

Example:

ASK signal modulated with a carrier frequency 500MHz, using root cosine filter with roll factor of 0.5 and symbol rate of 10ksym/s is generated. External reference signal from the generator is connector to the R&S Cable Rider ZPH.

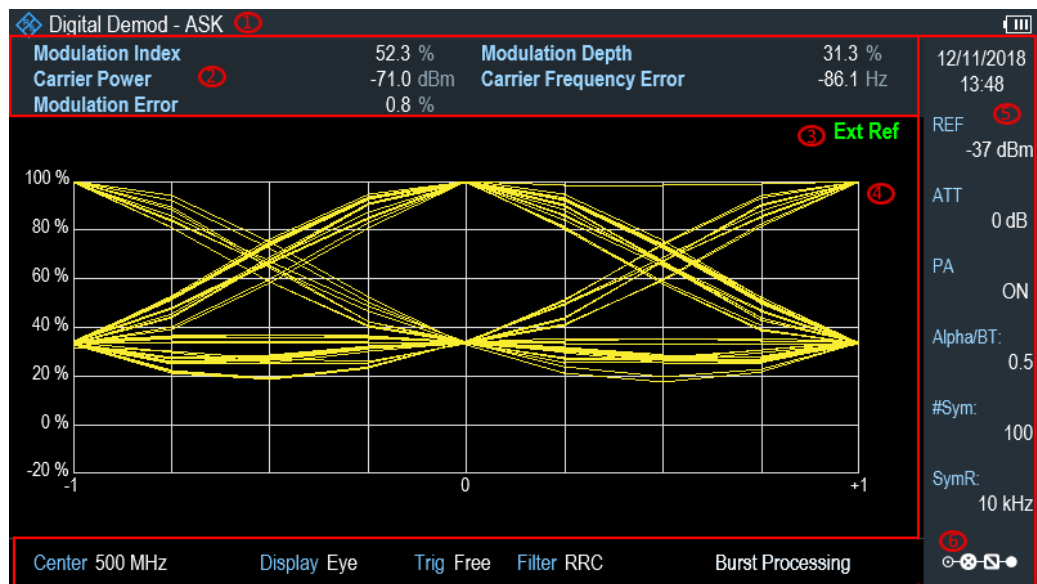


Figure 12-3: Eye diagram of an ASK modulated signal

- 1 = Operating mode domain
- 2 = ASK or FSK modulated parameters
- 3 = External reference signal
- 4 = Trace diagram displaying the selected display mode in ASK or FSK modulation domain
- 5 = Parameter View
- 6 = Configuration Overview

Table 12-4: ASK and FSK modulation parameters



Label	Description
Frequency Deviation	Frequency deviations between the measured signal and reference signal.
Carrier Frequency Drift	Drift in the carrier frequency of the measured signal.
Magnitude Error	Difference between the measured magnitude and the magnitude of the reference signal.
Modulation Index	See modulation depth in Table 12-5.
Carrier Power	Measured carrier power signal.
Modulation Error	Modulation deviation between measured signal and reference signal.
Modulation Depth	See modulation depth in Table 12-5.
Carrier Frequency Error	Mean carrier frequency offset in Hz.





- Press [MODE] key.
The R&S Cable Rider ZPH opens the mode menu.
- Select the "Digital Demod" softkey.
The R&S Cable Rider ZPH activates the mode for digital demodulation.
- Press the [MEAS] key.
The R&S Cable Rider ZPH opens the digital demodulation measurement menu.

The measurements are performed in two digital demodulation domains:

- "ASK": Demodulates 2ASK signals.
ASK is a digital modulation scheme that changes the amplitude of the carrier to transmit different values (or symbols). Each value corresponds to a different amplitude. In the case of 2ASK signal, the binary values of 1 and 0 are transmitted with a certain fixed amplitude and reduced amplitude respectively. Often the amplitude of the "1" and "0" signal is respectively at 100 % and close to 0 % of the nominal carrier amplitude (OOK = on-off-keying). The R&S Cable Rider ZPH detects the different amplitudes, demodulates the signal and retrieves the original sequences of the digital symbols. For proper demodulation, you have to match the center frequency of the R&S Cable Rider ZPH to the ASK carrier frequency.
 - "FSK": Demodulates 2FSK signals.
FSK is a digital modulation scheme that changes the frequency of the carrier to transmit different values (or symbols). Each value corresponds to a different frequency. In the case of 2FSK signal, the binary values of 0 and 1 are transmitted with a certain frequency f_1 and f_2 respectively. For proper demodulation, you have to set a center frequency that is the arithmetic mean of f_1 and f_2 .
4. Select the modulation domain of the signal you want to demodulate ("ASK" or "FSK" softkey).
 5. Select the "Display Mode" softkey to view the measurement readings.
The R&S Cable Rider ZPH opens a submenu to select the display mode. See [Table 12-5](#).
 6. The R&S Cable Rider ZPH demodulates the signal and displays the measurement results in the selected display mode. See [Table 12-5](#) and [Table 12-4](#).

Table 12-5: Display mode for ASK and FSK demodulation

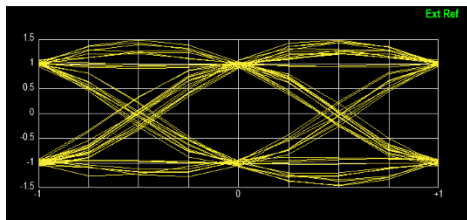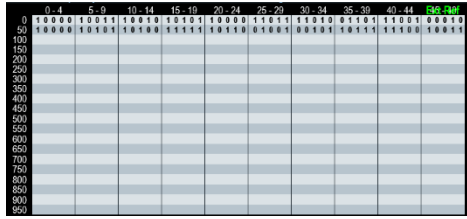Display mode	Description
	Eye diagram shows the modulation accuracy, it analyzes the transitions from one modulation state to the other. An open "eye" indicates little distortion in the signal transmission. A closed "eye" indicates poor signal quality with signal due to clock jitter, interference, poorly synchronized of the phase-locking circuitry or reflection due to imperfect termination. With bit rate increases, timing error also increases, reducing the size of the eye opening which increases the potential of data error.
	Symbol diagram shows the streams of symbols of binary digits transmitted in the signal.

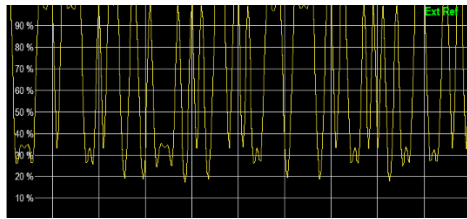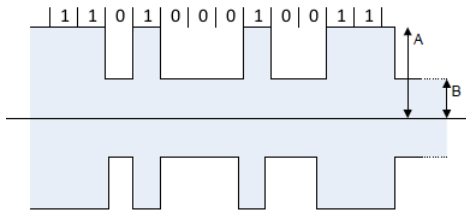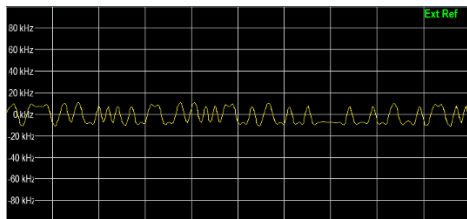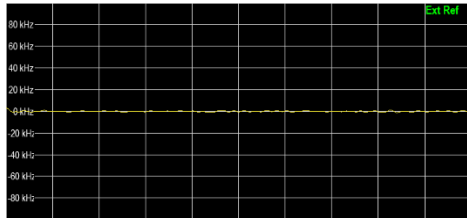Display mode	Description
	The modulation depth diagram displays the modulation depth of the signal. The modulation depth indicates the amplitude drop during low state amplitudes (binary 1 = high state or modulated signal, binary 0 = low state or unmodulated signal). The high state amplitude is normalized to 100%. The modulation depth is the amount that the amplitude drops during the low state in %. The modulation depth is therefore a value < 100 %. Another way to express the amplitude variations of an ASK modulated signal is the modulation index. The R&S Cable Rider ZPH displays the modulation index as a numeric result in the measurement result view.  $\text{Modulation index} = \frac{(A - B)}{(A + B)}$ $\text{Modulation depth} = \frac{B}{A}$
	The modulation deviation diagram shows the frequency shift of the FSK signal. The frequency shift (or frequency deviation) is the frequency difference between the mark (binary 1) and space (binary 0) frequencies representing the binary digits.
	The modulation error diagram shows the modulation error over time (% for ASK and Hz for FSK). The modulation error shows the deviation of the measured symbols from the ideal symbol locations. The ideal symbol locations are defined in a reference signal.

12.2.1 Measurement Configuration

A digital modulation system needs a transmit filter to limit the bandwidth of the transmitted signal. The receiver needs to know the characteristics of that filter to demodulate the signal. Sometimes, an additional receive filter is necessary for proper demodulation. Other demodulation parameters like the symbol rate, roll factor of the filter and frequency deviation in the case for FSK modulated signal are also required for a proper demodulation of the signal. Demodulation parameters like oversampling factor, refer-

ence filter or measurement filter, are automatically selected by the R&S Cable Rider ZPH.

1. Press [MEAS] key.
The R&S Cable Rider ZPH opens the measurement menu.
2. Select the "Demod Parameters " softkey.
The R&S Cable Rider ZPH opens a submenu that contains the demodulation parameters.

Selecting the filter type and roll-off factor of the measurement filter

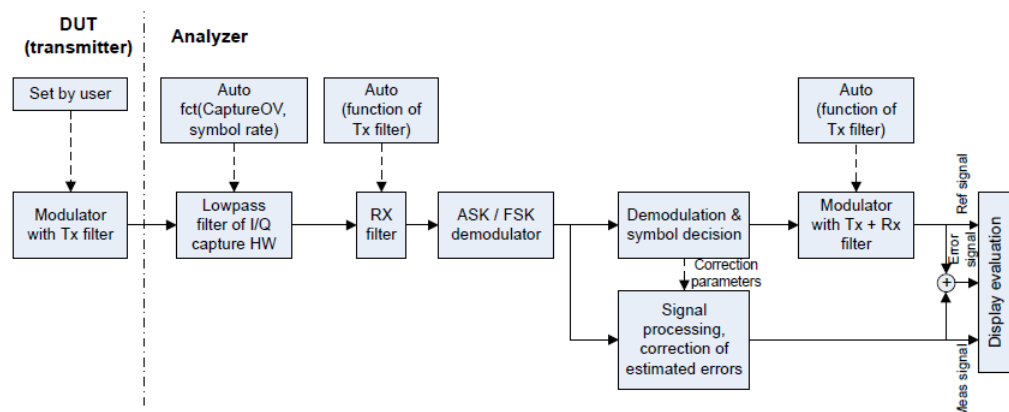


Figure 12-4: Block diagram of measurement filter

1. Select the "Filter Type" softkey.
Alternatively, select "Filter" in the [Parameter View](#) to select the filter.
The R&S Cable Rider ZPH opens a submenu that contains the different type of filter for selection.
 - "Root Raised Cosine" - Frequently used in the transmitter and receive filter to perform matched filtering. It helps to remove the Inter-symbol interferences and also to improve the use of spectral efficiency
 - "Raised Cosine" - The combined response of two RRC is the result of a raised cosine filter
 - "Gaussian" - Typically used in the FSK modulation
 - "Unfiltered" - No filter used
2. Select the required filter type.
3. Select the "Demod Parameters " softkey.
The R&S Cable Rider ZPH opens a submenu that contains the demodulation parameters.
4. Select the "Alpha/BT" to define the roll-off factor of the filter.
Alternatively, select "Alpha/BT" on the [Parameter View](#) to define the roll-off factor of the filter.
The R&S Cable Rider ZPH opens an entry box to enter the roll-off factor.

For Raised Cosine or Root Raised Cosine filter, the filter bandwidth is defined in term of the alpha value.

For Gaussian filter, the filter bandwidth is defined in terms of the BT value.

Defining the symbol rate and number of signal symbols

The symbol rate defines the number of symbols that are transmitted per time unit (Hz) from the transmitter. See [Figure 12-4](#).

1. Select the "Demod Parameters " softkey.
The R&S Cable Rider ZPH opens a submenu that contains the demodulation parameters.
2. Select the "Symbol Rate" to define the symbol rate of the measuring signal.
Alternatively, select the "SymR" on the [Parameter View](#) to define the symbol rate.
The R&S Cable Rider ZPH opens an entry box to enter the symbol rate.
3. Select the "Demod Parameters " > "Number of symbols" to view the number of modulated symbols.
Alternatively, select "#Sym " on the [Parameter View](#) to view the number of modulated symbols.
The R&S Cable Rider ZPH displays the number of modulated symbols in the "Symbols" display mode. See [Table 12-5](#).

Turning burst processing on and off

Burst processing is a tool similar to a trigger that automatically detects the beginning and end of a burst in the capture buffer.

A burst is not detected in the following conditions:

- If the burst power is below a certain threshold
- If the burst is too short
- If the time between bursts is too short

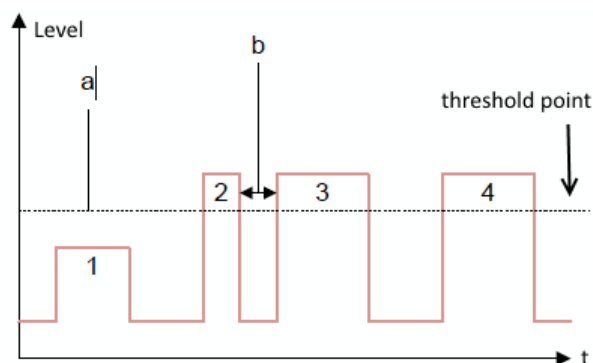


Figure 12-5: Burst signal conditions

a = Minimum required signal level

b = Time between bursts

1 = No burst detected as the signal level is below threshold point

- 2 = No burst detected as the burst period is too short
 3 = No burst detected as the burst interval is too short
 4 = Burst detected as the signal level is above threshold point, burst period and time interval between burst is long enough

When the burst is detected, the R&S Cable Rider ZPH tries to demodulate the signal based on the demodulation parameters that you have set and display the results.

1. Select the "Demod Parameters " softkey.
The R&S Cable Rider ZPH opens a submenu that contains the demodulation parameters.
2. Select the "Burst Processing" to activate the burst processing of the measuring signal.
The R&S Cable Rider ZPH looks for probable bursts in the capture buffer and demodulates the signal.
Alternatively, select the "Burst Processing" on the [Parameter View](#) to activate the burst processing of the measuring signal.
When the burst processing is activated, the R&S Cable Rider ZPH changes the font color of the "Burst Processing" from white to blue.

Selecting a standard

Two measuring standards are available for FSK modulation with the following modulation parameters:

Measuring standards	Filter characteristics	Symbol rate, Number of symbols
Bluetooth LE	Gaussian filter, BT 0.5	1 Mhz, 400 symbols
Tire pressure	No filter	18.9 kHz, 500 symbols

1. Select the "Standard" softkey to open the measurement menu.
The R&S Cable Rider ZPH opens a submenu that contains the measurement standards.
2. Select the required standard.
 - "Bluetooth LE" - Measurements on bluetooth low energy devices
 - "Tire Pressure" - Measurements on devices that check the tire pressure of cars
 - "Off" - Measurements on other signals

12.2.2 Frequency Configuration

For proper demodulation of signals, the carrier frequency of the modulation signal should be set correctly on the R&S Cable Rider ZPH. If carrier frequency is unknown, a search can be performed on the frequency spectrum supported by the R&S Cable Rider ZPH and zoom into the area where the carrier maybe located.

For more information frequency configuration, see [Chapter 8.1.1, "Measuring Basic Signal Characteristics"](#), on page 167, [Chapter 8.1.2, "Measuring the Channel Power of](#)

[Continuously Modulated Signals](#)", on page 168 and [Chapter 8.2, "Configuring Spectrum Measurements"](#), on page 210.

1. Press the [FREQ/DIST] key.
2. Select the "Center Freq" softkey.
The R&S Cable Rider ZPH opens an input field to define the center frequency input.

12.2.3 Amplitude Configuration

For more information on the amplitude configuration, see [Chapter 8.2.3, "Configuring the Vertical Axis"](#), on page 215.

Defining the position of the reference for ASK signals

In the graphical result displays, the reference position on the y-axis can be adjusted to see the signal in greater details. By default, the maximum reference position is set to 100%.

1. Press [AMPT] key.
The R&S Cable Rider ZPH opens the amplitude menu.
2. Select the "Ref Position" menu item.
The R&S Cable Rider ZPH opens an input field to define the reference position in term of percentage.
3. Enter the required value.
The R&S Cable Rider ZPH adjusts the y-axis and the position of the trace accordingly.

Adjusting the display range for ASK and FSK signals

The R&S Cable Rider ZPH display range is divided into 10 grid sections, you can define the deviation per grid section.

1. Press [AMPT] key.
The R&S Cable Rider ZPH opens the amplitude menu.
2. Select the "Deviation Per Division" menu item.
The R&S Cable Rider ZPH opens an input field to define the deviation.
3. Enter the required deviation.
The R&S Cable Rider ZPH adjusts the scale of the y-axis accordingly.

12.2.4 Sweep and Trigger Configuration

The sweep and trigger menu provides settings to control the measurement and the way data is captured.

For more information, see [Chapter 8.2.6, "Configuring and Triggering the Sweep"](#), on page 224.

Selecting the sweep mode

In its default state, the R&S Cable Rider ZPH measures continuously. In this mode, the R&S Cable Rider ZPH demodulates the signal until you stop it deliberately. The measurement results are updated accordingly.

In single mode, the R&S Cable Rider ZPH demodulates the signal over one sweep. Subsequent update of measurement results starts only when you deliberately initiate it.

1. Press [SWEEP] key.
The R&S Cable Rider ZPH opens the sweep menu.
2. Select the sweep mode.
 - "Cont Sweep": Demodulates signal continuously
 - "Single Sweep": Demodulates signal over one sweep
3. Select the required sweep mode.

Selecting the trigger settings

In addition to the trigger settings available in the spectrum mode, the Digital Demodulation measurement provides an I/O power trigger source.

The I/Q power trigger initiates a measurement when the magnitude of the sampled I/Q data exceeds a certain level.

1. Press [SWEEP] key.
The R&S Cable Rider ZPH opens the sweep menu.
2. Select the "Trigger" menu item.
The R&S Cable Rider ZPH opens a submenu to select the trigger settings.
3. Select the "Trigger" menu item.
The R&S Cable Rider ZPH opens a submenu to select the trigger settings.
4. Select the "IQ Power" menu item.
The R&S Cable Rider ZPH opens an input field to define the trigger level.
5. Define an appropriate trigger level.
To make sure that the trigger initiates a measurement, it is recommended to set a trigger level 6 dB lower than the actual expected trigger level.
Take note also on the detection of burst signal. See [Turning burst processing on and off](#).

13 Interference Analyzer



R&S Cable Rider ZPH option

R&S ZPH-K15 (order number: 1334.5640.02) option is required to operate the R&S Cable Rider ZPH in the interference analysis mode.

R&S ZPH-K16 (order number: 1334.5656.02)) option is required to operate the R&S Cable Rider ZPH in the signal strength mapping mode.

This mode is only available with model .12.

In wireless systems, interference causes low data rates, dropped calls and poor voice quality, often making it impossible to establish or maintain a connection.

Equipped with firmware option R&S ZPH-K15 and R&S ZPH-K16, you can track down the source of interferences with your R&S Cable Rider ZPH. These options provide tools and means to make the search for interferers as comfortable as possible.

To measure interferences, you need a directional antenna like the R&S HL300 (order number 4097.3005.02), R&S HE300 (order number 4067.5900.02). or R&S HE400 (order number 4104.6000.02).

The interference analyzer provides several measurement modes.

13.1 Interference Analysis

In the interference analysis mode, you can perform both spectrogram and triangulation measurement functions.

For more information, see [Working with the spectrogram display](#) and [Triangulation](#).

Triangulation

If only R&S ZPH-K15 is installed, the "Triangulation" measurement is available when "MODE" key follow by "Spectrum Analyzer" key is pressed.

If both R&S ZPH-K15 and R&S ZPH-K16 are installed, the "Triangulation" measurement is available when [MODE] key follows by "Spectrum Analyzer" and "Maps" softkey are pressed.

1. Press "Meas Mode" softkey if R&S ZPH-K16 is installed.
2. Select the "Triangulation" menu item.
The R&S Cable Rider ZPH enters the triangulation measurement mode.

For more information , see [Chapter 13.3, "Working with Maps"](#), on page 294.

13.2 Signal Strength Mapping

In the signal strength mapping mode, the R&S Cable Rider ZPH provides two map measurements for selection: [Outdoor mapping](#) and [Indoor mapping](#).

1. Press the [MODE] key.
2. Select the "Spectrum Analyzer" softkey.
The R&S Cable Rider ZPH opens a submenu that contains the spectrum analyzer measurement menu items.
3. Select the "Maps" menu item.
The R&S Cable Rider ZPH enters the map application.
4. Press the [MEAS] softkey.
5. Select the "Meas Mode" softkey.
The R&S Cable Rider ZPH opens a submenu that contains the two map measurements for selection.

Outdoor mapping

- ▶ Select the "Outdoor Mapping" menu item.
The R&S Cable Rider ZPH enters the outdoor mapping mode.
For more information, see [Chapter 13.3, "Working with Maps"](#), on page 294 and [Chapter 13.3.5.1, "Outdoor Mapping"](#), on page 307.

Indoor mapping

- ▶ Select the "Indoor Mapping" menu item.
The R&S Cable Rider ZPH enters the indoor mapping mode.
For more information, see [Chapter 13.3, "Working with Maps"](#), on page 294 and [Chapter 13.3.5.3, "Indoor Mapping"](#), on page 314.

13.3 Working with Maps

Equipped with option R&S ZPH-K16, you can make spectrum measurements and save the position of these measurements on the map. Using the triangulation method, you can determine the source of interference on the map.

To make full use of the functions available in map mode, you need a GPS receiver and an antenna (for example R&S HL300, this antenna already contains a GPS receiver).

To work with small scale map like floor plan, the "Indoor Mapping" provides the functionality to measure the signal strength indoors using an antenna (for example R&S HL300).


• Transferring Maps	295
• Transferring Indoor Maps.....	296
• Displaying Maps.....	297
• Measuring Interference.....	304
• Collecting Map Data.....	307
• Analyzing Geographic Data.....	317
• Analyzing Indoor Data	318

13.3.1 Transferring Maps



Map folder

The map folder contains the individual map data. You can create an arbitrary map folder name to store the map data, otherwise the R&S Cable Rider ZPH may not be able to find the map data.

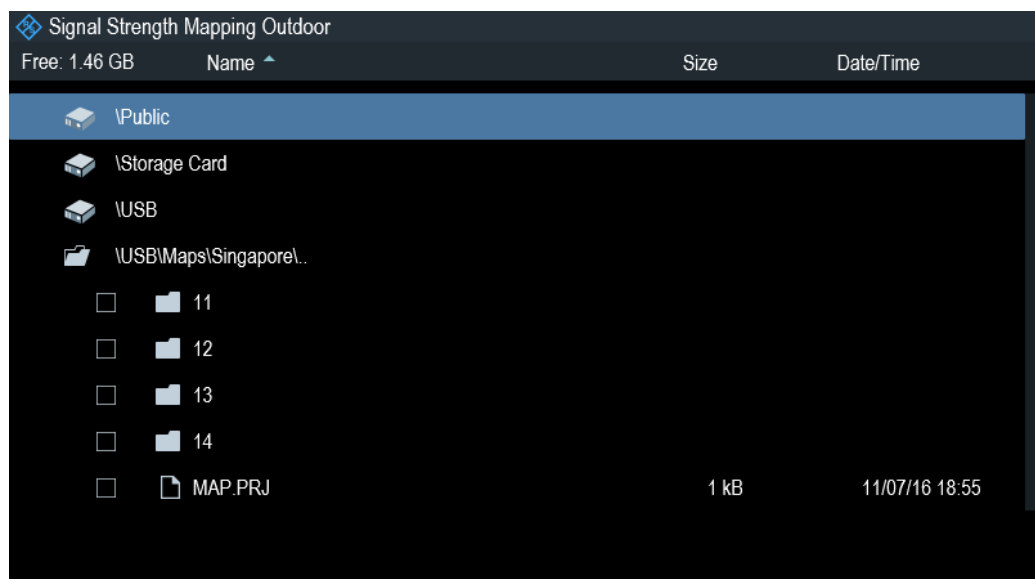

The R&S Cable Rider ZPH contains only a world map. If you want to make measurements on a more detailed map, you have to download and install the maps on the R&S Cable Rider ZPH. The R&S Cable Rider ZPH supports the map material supplied by the OpenStreetMap project (<http://www.openstreetmap.org>).

The easiest way for you to transfer the maps to the R&S Cable Rider ZPH is to use the R&S OpenStreetMap Wizard (OSM Wizard) application. The OSM Wizard is available for download at the product homepage <http://www.rohde-schwarz.com/product/zph.html>.

The OSM Wizard establishes a connection to the Open Street Maps database on the Internet and thus it needs an Internet connection. The tool allows you to select the area that you need for your measurements and download the corresponding maps. After the corresponding maps are downloaded, copy the map data and stored it to an **arbitrary folder name** in the USB stick.

For more information on how to download and save maps, refer to the documentation of the OSM Wizard. The documentation is written as part of the software.

13.3.2 Transferring Indoor Maps


Before you can use the features of the indoor mapping application, you have to create an indoor map (for example a floor plan). These maps are created with features available in the R&S InstrumentView software package, and are based on an image of the area you would like to measure. The image source can be one of the common file formats (for example ".jpg", ".png" or ".tif").

1. Start the R&S InstrumentView software.
2. Start the "Map Creator" menu item in the "Preparation" menu.
The R&S InstrumentView opens the indoor map editor.
3. Select the "Open Image" button in the map editor to open the image file.
The R&S InstrumentView opens a dialog box to select an image file.

Note: You can zoom in and out of the indoor map using the mouse wheel.

4. Select the image file of the area you want to measure.
If you need a small part of the image, you have to edit it with an image manipulation program before loading it into the R&S InstrumentView software.
5. Select the "Generate Map" button.
The R&S InstrumentView creates a map data from the image you used.
6. Select a new folder to save the map data.

Note: When generating a new map data, a new folder should be created to avoid deleting the existing content of the folder.

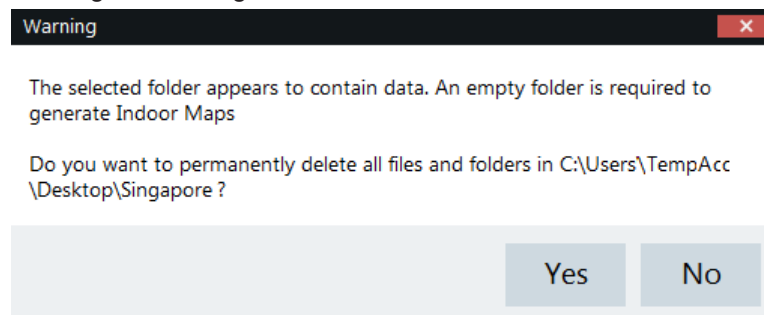

7. Copy the folder containing the map data to the USB stick.
8. Insert the USB stick to the USB connector of the R&S Cable Rider ZPH.

In addition to creating a map, you can also specify the exact geographical location of the area you are measuring. To do so, you have to specify three GPS reference points of the area. Enter the corresponding latitude and longitude data in the corresponding fields available in the "Create Map" dialog box and move these three GPS reference icons,  displayed in the preview of the map to the corresponding locations. For more information, see "Map Creator" in the R&S InstrumentView.

When you create a GPS referenced map, it provides some useful features:


- The map created is automatically rotated with the north side faces up.
- The R&S Cable Rider ZPH calculates and displays the distance between measurement points (in meters or feet, depending on the regional settings).
- You are able to embed the collected data into maps with a larger scale. Thus, you are able to, for example, combine measurement data recorded with the "Outdoor Mapping" application and data recorded with the "Indoor Mapping" application in a single map.

For more information, see [Chapter 13.3.5, "Collecting Map Data"](#), on page 307.

13.3.3 Displaying Maps

After you have downloaded or created the maps, save them to a USB flash drive, which you can use with the R&S Cable Rider ZPH.

1. Press [MEAS] key.
2. Select "Meas Mode" softkey.
The R&S Cable Rider ZPH opens a submenu that contains the measurement function for selection.
3. Select the "Outdoor Mapping" menu item.
The R&S Cable Rider ZPH provides the outdoor mapping measurement functions.
4. Select the "Map" softkey.
The R&S Cable Rider ZPH opens a menu that contains all the maps that you have stored on the USB flash drive. (The map names correspond to the folder names for every area you have saved, see ["Map folder"](#) on page 295).

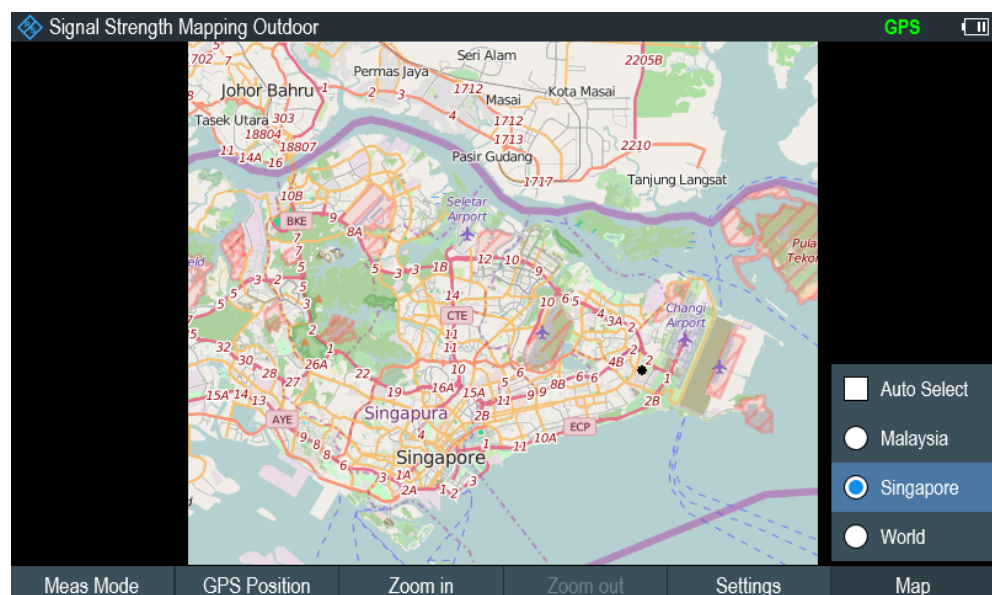

5. Select the maps of the area you need.

In the "Outdoor Mapping" operating mode, the "Auto Select" menu item automatically selects the map that is most fitting to your current location. Using the automatic selection requires a GPS receiver.

In the "Indoor Mapping" operating mode, the "Auto Select" menu is only available if the R&S Cable Rider ZPH could not find any indoor maps.

Screen layout of the map display

The screen layout of the map display is customizable. You can customize the screen layout and display information that you need.

- Select the "Settings" softkey.

The R&S Cable Rider ZPH opens a menu that contains the screen elements ("Power Bar ", "Power Result" and "Hardware Settings") to display in the screen layout. If no screen element is selected, the R&S Cable Rider ZPH shows the map only. The following illustrates the screen layout of the map display.

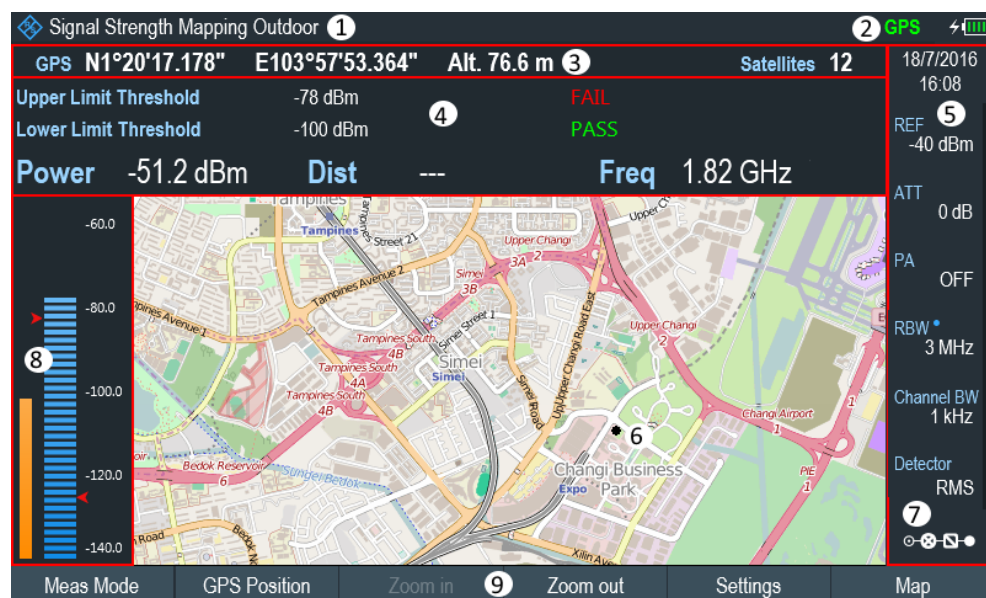


Figure 13-1: Map display

- 1 = Current type of measurement mode
- 2 = Connected device information. The R&S Cable Rider ZPH supports HA-Z340 GPS, HL300 HE300 and HE400. When device is connected, green shows connection established, red shows connection not established and red with a cross-line shows that device is enabled but there is no connection.
- 3 = GPS information including compass information, GPS connection quality and triangulation results.
- 4 = Power results (including distance between measurement locations and carrier frequency display) and limit results
- 5 = [Parameter view](#)
- 6 = Map area including tags representing the current measurement locations.
- 7 = [Configuration overview](#)
- 8 = Power bar including the noise squelch level and limits threshold indicator
- 9 = Current measurement mode softkey menu.

• Adding and Removing Elements.....	299
• Zooming In and Out of the Map.....	299
• Aligning the Triangulation and Outdoor Mapping Mode.....	300
• Aligning the Indoor Mapping Mode.....	300
• Selecting Colors for Map Locations.....	301

13.3.3.1 Adding and Removing Elements

The result display is made up out of several elements that you can add or remove as you like.

1. Press the [MEAS] key.
2. Select the "Settings" softkey.
3. Select the "Show" softkey.
The R&S Cable Rider ZPH opens a submenu that contains the result display settings for selection.
4. Select the element you want to add or remove.
 - "GPS Information"
Enable or disable the display of "GPS" menu item ("GPS information", "Satellites", "Compass")
 - "Compass Information"
Enable or disable the display of "Compass" information. The compass information is available with the R&S HL300, R&S HE300 and R&S HE400 antenna.
 - "Power Bar"
Enable or disable the power bar information (including the noise squelch level)
 - "Power Result"
Enable or disable the power result
 - "Hardware Settings"
Enable or disable the display of the [Parameter view](#)

13.3.3.2 Zooming In and Out of the Map

If you have downloaded different zoom levels of your maps, or if you have created a large (or very small) indoor map, you can change the scale of the map to get a more detailed view or a more general overview.

Note that the original size of indoor maps depends on the size of the image these maps are based on.

1. Press the [MEAS] key.
2. Select the "Zoom In" softkey to decrease the scale of the map.
3. Select the "Zoom Out" softkey to decrease the scale of the map.

13.3.3.3 Aligning the Triangulation and Outdoor Mapping Mode

The R&S Cable Rider ZPH provides several tools to align the map. These tools are useful if you want your current location to be in the center of the display or if you have moved out of the visible map area.

Using the touchscreen gesture

Use the touchscreen gesture to navigate on the map area:

- Swipe in your desired direction (horizontally, vertically or diagonally) to navigate the position on the map.
- Pinch or stretch two fingers horizontally to adjust the zoom span of the map area and use.

Manual alignment

Alternatively, you can use the keypad keys on the R&S Cable Rider ZPH to navigate the position in the map.

- Press [2] key to navigate the position upward on the map.
- Press [4] key to navigate the position to the left side on the map.
- Press [6] key navigate the position to the right side on the map.
- Press [8] key navigate the position downward on the map.

You can move the maps until you reach the borders of the downloaded content. Note that the borders of the maps might be different for different scales.

Automatic alignment

For most automatic map alignment functions, you have to establish a GPS connection.

1. Press the [MEAS] key.

2. Select the "GPS Position" softkey.

The R&S Cable Rider ZPH displays a softkey menu that provides various functions to control and work with GPS data.

- Select the "Go To" softkey (Outdoor Mapping Mode).
 - "Current Position"
Moves your current position to the center of the display once.
 - "Saved Position"
Moves your saved position to the center of the display once.
- "Go To Triangulation" softkey (Triangulation Mode)
Moves the location of the triangulation result to the center of the display.

13.3.3.4 Aligning the Indoor Mapping Mode

The R&S Cable Rider ZPH automatically aligns the map when you move the cross-hairs icon  displayed on the map. The cross-hairs icon represents your current position on the map.

Moving the cross-hairs icon is necessary to define another measurement location. This is only possible by manually changing the position of the cross-hairs icon.

Using the touchscreen gesture

For more information on the touchscreen gesture, see ["Using the touchscreen gesture"](#) on page 300.

You can use the touchscreen gesture to move large steps on the current position of the map and fine-tuning the position further with the keypad keys (see ["Manual alignment"](#) on page 300).

Using the keypad

See ["Manual alignment"](#) on page 300.

You can move the cross-hairs icon representing your position until you reach the borders of the indoor map.

When you are using the keypad to move the cross-hairs icon, you can also specify the distance (pixels) the cross-hairs icon moves on a single press of the cursor key.

1. Select the "Settings" softkey.
2. Select the "Cursor Sensitivity" menu item.
The R&S Cable Rider ZPH opens an entry field for input.
3. Enter a number between 1 and 64 in the input field.
The number you enter corresponds to the number of pixels each movement of the cross-hairs icon covers (for example "1" moves the cross-hairs icon one pixel in the selected direction).

13.3.3.5 Selecting Colors for Map Locations

For more information on measurements performance on maps in general, see [Chapter 13.3.5, "Collecting Map Data"](#), on page 307.

Default behavior of geotags in triangulation

By default, all geotags (including all the labels associated with that geotag) have the same color (black). Depending on the type of geotag, you can assign different colors to the geotags.

Note that changing the color of a geotag also changes the color of the azimuth line.

To differentiate your current and saved position, you can define a different color to that geotag.

1. Press the [MEAS] key.
2. Select the "Settings" softkey.
3. Select the "Colors" softkey.

The R&S Cable Rider ZPH opens a submenu that contains the different types of geotag ("Current Position Color", "Saved Positions Color", "Triangulation") for selection.

4. Select the geotag of your choice.

The R&S Cable Rider ZPH opens a submenu to select the color.

5. Select the color of your choice.

The R&S Cable Rider ZPH applies the selected color to the associated geotag.

In addition to the geotag, you can also define a custom color for the triangulation results. The R&S Cable Rider ZPH displays triangulation results as circle with a dot in the middle. See [Figure 13-2](#).

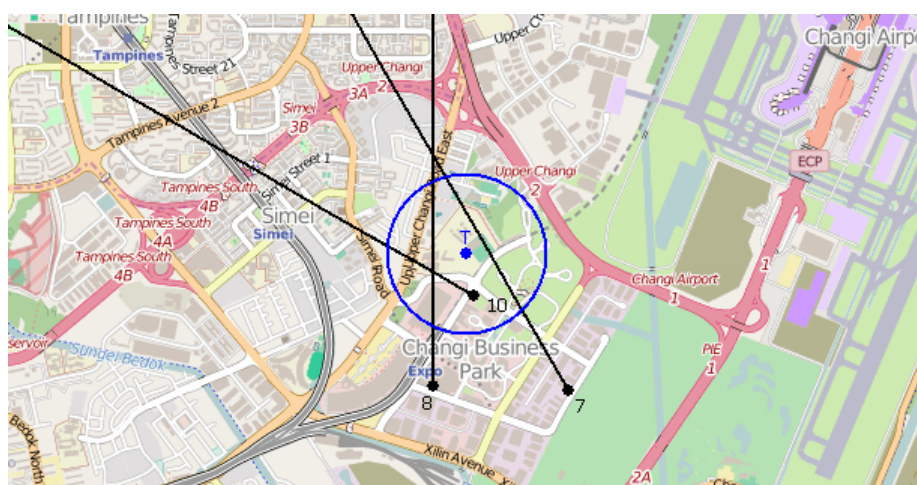


Figure 13-2: Display the geotag of triangulation result

By default, the circles and dot are blue. You can change the color of the triangulation tag as follows.

1. Press the [MEAS] key.
2. Select the "Settings" softkey.
3. Select the "Triangulation Color" menu item.
The R&S Cable Rider ZPH opens a submenu to select the color.
4. Select the color of your choice.
The R&S Cable Rider ZPH applies the selected color to the triangulation tag.

Default behavior of geotag in indoor and outdoor mapping



By default, the current position tag is displayed as black. This color is the only color selectable for the current position tag.

In indoor and outdoor mapping, a colored dot is added to the map when you make a measurement and save the result at that location. The color represents the signal level at that location.

The following shows the default color of the geotag signal strength on the map.

- Red color: Signal reception is bad.
- Yellow color: Signal reception is average.
- Green color: Signal reception is good.

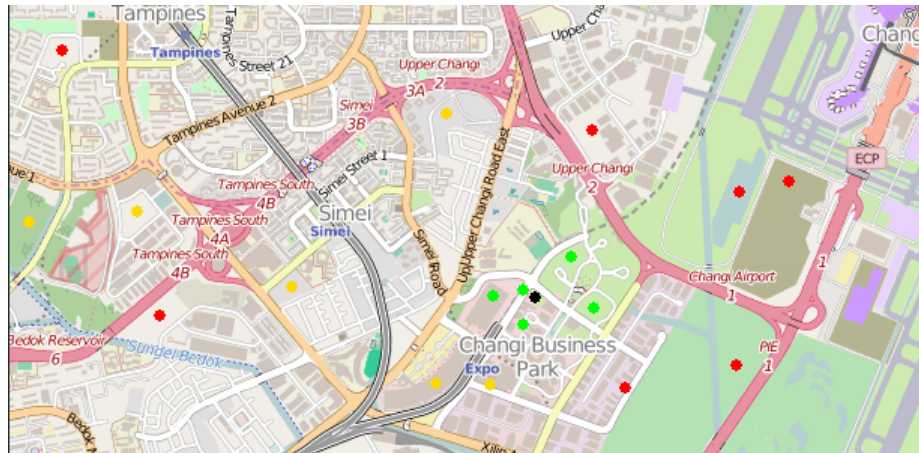


Figure 13-3: Display the geotag in outdoor mapping

To change the default color of the geotag signal strength, do the following:

1. Press the [MEAS] key.
2. Select the "Settings" softkey.
3. Select the "Colors" softkey.
The R&S Cable Rider ZPH opens a submenu to select the different coverage conditions and its associate level definition.
4. Select the "Good Coverage Color", "Average Coverage Color" or "Bad Coverage Color" menu item to change the color representation of these coverage conditions.
The R&S Cable Rider ZPH opens a submenu to select the color.
5. Select a color of your choice.
6. Select the "Colors" softkey.
7. Select the "Good Coverage Level", "Average Coverage Level" or "Bad Coverage Level" menu item to change the level representation of these coverage conditions.
The R&S Cable Rider ZPH opens an input field to define the level entry associated with the coverage conditions.



Superimposed geotags

If one or more geotags superimpose each other, you can define rules as to which tag (or its color) is displayed.

- Press the [MEAS] key.
- Select the "Settings" softkey.
- Select the "Colors" softkey.
- Select the "Default indicator " menu item.
The R&S Cable Rider ZPH opens a submenu to select the rule for displaying the tag:
 - Best: the tag with the best signal level is displayed.
 - Average: the tag with the average level is displayed.
 - Worst: the tag with the lowest signal level is displayed.

13.3.4 Measuring Interference

Interference measurements usually require an antenna to localize the source of interferers. The R&S Cable Rider ZPH supports several antenna models.

- R&S HL300
- R&S HE300
- R&S HE400

Connected the antenna to the R&S Cable Rider ZPH at the USB interface and the RF input.

You can control the antenna functionality in several ways in the general setup of the R&S Cable Rider ZPH. For more information, see the [Chapter 4.2.2, "Configuring Antennas"](#), on page 41.

- [Selecting an Antenna Model](#)..... 304
- [Using an Audio Signal to Locate Interferers](#).....305
- [Using Limits](#).....306

13.3.4.1 Selecting an Antenna Model

There are two ways to select the antenna model for interference measurement.

- Configure the antenna model in the instrument setup dialog, see [Chapter 4.2.2, "Configuring Antennas"](#), on page 41.
- Configure the antenna model in the "Triangulation" mode. See ["Setup antenna model in the triangulation mode"](#) on page 304

Setup antenna model in the triangulation mode

1. Press the [MEAS] key.
2. Select the "Meas Mode" softkey.

The R&S Cable Rider ZPH opens a submenu to select the measurement mode.

3. Select the "Traingulation" mode.
The R&S Cable Rider ZPH enters the triangulation measurement mode.
4. Select the "Settings" softkey.
5. Select the "GPS Settings" softkey.
The R&S Cable Rider ZPH opens a submenu to select the different GPS settings.
6. Enable or disable the GPS or compass setting associated with the antenna type.

The currently selected antenna model is displayed in the [title bar](#). The color of the label indicates the state of the satellite lock of the GPS receiver of the antenna model.

For more information on the GPS receiver states, ["Displaying GPS information"](#) on page 46.

13.3.4.2 Using an Audio Signal to Locate Interferers

You can configure the R&S Cable Rider ZPH to play back an audio signal when it receives a signal. The audio signal changes its volume and frequency, depending on the strength of the received signal.

1. Press the [MEAS] key.
2. Select the "Settings" softkey.
3. Select the "Tone" softkey.
The R&S Cable Rider ZPH opens a submenu to select the different tone parameters settings.
4. Select the "Tone" checkbox.
The R&S Cable Rider ZPH turns on the audio signal.

The R&S Cable Rider ZPH allows you to define various aspects of this audio signal.

Defining a squelch level

The squelch level defines the signal level above which the audio signal starts to play.

1. Press the [MEAS] key.
2. Select the "Settings" softkey.
3. Select the "Squelch Level" softkey.
The R&S Cable Rider ZPH opens an input field to define the squelch level.
4. Enter a squelch level in dBm.
The R&S Cable Rider ZPH displays the squelch level graphically in the power bar element of the user interface.

Defining the threshold of the audio signal

The audio signal has a specific frequency that is coupled to a specific signal level, the threshold. As the signal you are receiving during a measurement becomes stronger or weaker, the audio signal changes its frequency:

- When the signal becomes stronger, the frequency of the audio signal gets higher
- When the signal becomes weaker, the frequency of the audio signal gets lower

You can define the threshold of the base tone.

1. Press the [MEAS] key.
2. Select the "Settings" softkey.
3. Select the "Threshold Tone Frequency" softkey.
The R&S Cable Rider ZPH opens an input field to define the threshold.
4. Enter a threshold level in dBm as required.

Note that it may be possible that the audio signal frequency becomes so high or low that it is no longer audible.

Defining the gain of the audio signal

The change of frequency of the audio signal is a constant change of frequency. It is either one octave per 20 dB or one octave per 40 dB.

1. Press the [MEAS] key.
2. Select the "Settings" softkey.
3. Select the "Tone Gain" softkey.
The R&S Cable Rider ZPH opens a submenu to define the octave settings.
4. Select the gain setting you prefer.

Defining the volume of the audio signal

The R&S Cable Rider ZPH allows you to adjust the volume of the audio signal.

1. Press the [MEAS] key.
2. Select the "Settings" softkey.
3. Select the "Tone Volume" softkey.
The R&S Cable Rider ZPH opens an input field to define the volume.
4. Define a volume.
The volume is a percentage from 0% to 100% with 100% being the loudest.

13.3.4.3 Using Limits

The R&S Cable Rider ZPH allows you to define limits within which the signal level must be in order to be recognized as a signal.

1. Press the [LINE] key.
2. Select the "Upper Limit" or "Lower Limit" softkey.
The R&S Cable Rider ZPH opens an input field to define the limits. Signals that are above the upper limit and below the lower limit are ignored. Only the signals within these boundaries are considered in the analysis.
The limits that you have defined are displayed in the power bar as red triangles.
See item 8 of [Figure 13-1](#).

13.3.5 Collecting Map Data



Geotag

A geotag is a tag for a particular location that contains information about that location. This information includes, for example, GPS coordinates, the time of the measurement or level that has been measured. You can evaluate the geotag information directly onsite or save the information for later evaluation.

With the geotagging functionality, you can mark locations where you have performed a measurement. Thus, you are able to analyze the geographical distribution of the received signal strength. This allows you to analyze, for example, the coverage conditions around a base station's coverage area.

In the map display, a geotag is displayed as a dot with [color indication](#) to show the signal strength measured in that location. Equipped with option R&S ZPH-K15, the geotag provides also an azimuth reading which shows a straight line. This straight line represents the direction you are facing.

The azimuth is the deviation from the direction you are facing and the north. It is a number in degrees. For example, if you are looking east, the azimuth would be 90°. The application shows the azimuth as a straight black line, beginning at your location and pointing in the direction you are facing. The azimuth line is always displayed when you are using the functionality of the R&S ZPH-K15, even if you are just walking around without saving any data.

The R&S Cable Rider ZPH provides three map applications: [triangulation](#), [outdoor mapping](#) and [indoor mapping](#). The following chapters describe the various ways how map data can be collected and display in these map applications.

- [Outdoor Mapping](#)..... 307
- [Triangulation](#)..... 312
- [Indoor Mapping](#)..... 314

13.3.5.1 Outdoor Mapping

In the outdoor mapping application, you perform the collection of geographical data with directional antenna a R&S HA-Z340 GPS receiver. The GPS receiver is not required if the R&S HL300, R&S HE300 and R&S HE400 antenna are used.

You can save a geotag of your current position or create a geotag of any other position that you would like to save.

Creating geotags manually

1. Press the [MEAS] key.
2. Select "GPS Position" softkey.
3. Select "Save" softkey.
The R&S Cable Rider ZPH opens a submenu to select the different geotags saving options.
4. Select the "Current Position" menu item.
The R&S Cable Rider ZPH creates a geotag of your current position. A geotag created this way is based on the coordinates of the GPS receiver and it includes the azimuth.

Alternatively, create a geotag of an arbitrary location.

1. Select "Manual Position and Azimuth" menu item.
The R&S Cable Rider ZPH displays the "GPS Position" dialog box.

2. Enter the GPS data and location information.
The R&S Cable Rider ZPH creates a geotag with the geographic data you have entered.

Creating geotags automatically

The R&S Cable Rider ZPH is able to save geographic information automatically if you are using the "Save on Event" functionality. Depending on the trigger event (time, limit failure, distance, every sweep event), geographic information with measurement are saved on the map for further analysis. See [Figure 13-4](#).

For more information, see [Chapter 5.7, "Saving On Events"](#), on page 102.

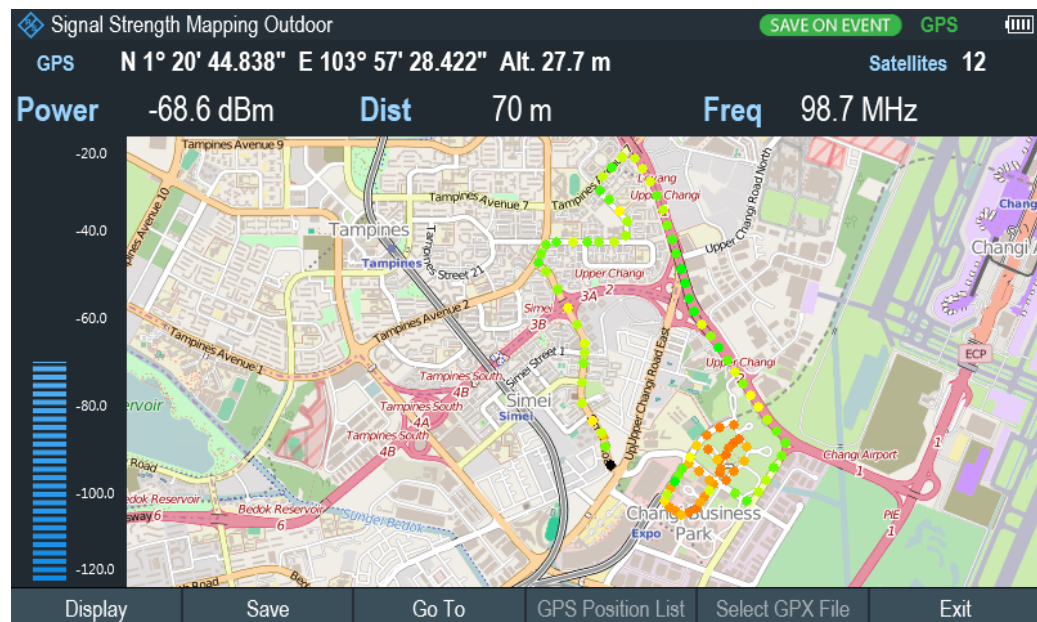


Figure 13-4: Save On Event map measurement

The R&S Cable Rider ZPH adds all geotags that you create to the "GPS Position List", see ["Managing geotags"](#) on page 309.

1. Press the [MEAS] key.
2. Select the "Settings" softkey
3. Select the "Save on Event" softkey.
The R&S Cable Rider ZPH opens a submenu to activate the "Save on Event" function and define the "Event Source".
4. Select the "Event Source" menu item to define the event that triggers data storage.
The R&S Cable Rider ZPH opens a submenu to select the different event types.
For more information, see ["Event types"](#) on page 103.
5. Activate the "Save on Event" menu item.
The R&S Cable Rider ZPH turns on the "Save on Event" functionality.

Managing geotags

The application features a "GPS Position List" that allows you to manage and edit geotags. The "GPS Position List" contains all geotags that you have created.

1. Select the "GPS Position" softkey.
2. Select the "GPS Position List" softkey.
The R&S Cable Rider ZPH opens the GPS position list dialog box.

The R&S Cable Rider ZPH opens a list of geotags that you have saved. In this list, the R&S Cable Rider ZPH shows some basic information about the geotag.

Signal Strength Mapping Outdoor ①

Nr	Include ②	Latitude	Longitude ③	Level ④	Name ⑤
1	☐	N 1° 20' 19.70016"	E 103° 57' 51.90012"	-76.2 dBm	rs
2	☒	N 1° 20' 0.20004"	E 103° 57' 45.10008"	-76.5 dBm	cbp
3	☒	N 1° 19' 59.70000"	E 103° 58' 12.79992"	-76.4 dBm	goodyear-co
4	☐	N 1° 20' 19.70016"	E 103° 57' 51.90012"	-54.2 dBm	rs
5	☒	N 1° 20' 17.46600"	E 103° 57' 52.83000"	-62.1 dBm	⑥

⑦

Include ⑧ View ⑨ Delete ⑩ Delete All ⑪ Exit ⑫

Figure 13-5: GPS position list

- 1 = Outdoor mapping measurement mode
- 2 = Checkbox to include the geotag on the map display
- 3 = GPS information ("Latitude", "Longitude") of the geotag location
- 4 = Signal strength of the measurement
- 5 = Name of the geotag location
- 6 = Selected geotag in the GPS position list
- 7 = GPS position list
- 8 = Select "Include" softkey to enable or disable the geotag checkbox
- 9 = Select "View" softkey to display complete information of the geotag, see [Figure 13-6](#)
- 10 = Select "Delete" softkey to remove the selected geotag
- 11 = Select "Delete all" softkey to remove all the listed geotag
- 12 = Select "Exit" softkey to quit from the GPS position list

In addition to the basic information, the geotag also consists information e.g. the antenna model used, timestamp of the measurement saved, frequency, bandwidth and level saved.

1. Select one of the geotags available in the list.
2. Select "View" softkey.
The R&S Cable Rider ZPH opens a dialog box that consists the complete information of the selected geotag.

Signal Strength Mapping Outdoor ①	
Position 4 ②	
Name	rs
Description	
Instrument	FPH
Antenna	[Unknown]
File	\\USB\\Outdoor Mapping\\OutdoorMapping.gpx
Date (timestamp)	19/07/2016
Time (timestamp)	15:21:52.817
Frequency ③	2.11232 GHz
Bandwidth	3 MHz
Level	-54.2 dBm
Latitude	N 1° 20' 19.70016"
Longitude	E 103° 57' 51.90012"
Azimuth	0 °
Azimuth Type	Manual
GPS fix	
GPS fix Quality (HDOP/VDOP/PDOP)	
GPS Number of Satellites	
Previous ④	Next ⑤
Edit ⑥	Exit ⑦

Figure 13-6: Complete geotag information dialog box

- 1 = Outdoor mapping measurement mode
- 2 = Item number in the GPS position list
- 3 = Complete information of the selected geotag
- 4 = Select "Previous" softkey to view the previous item number in the GPS position list
- 5 = Select "Next" softkey to view the next item number in the GPS position list
- 6 = Select "Edit" softkey to edit the "Name" and "Description" of the geotag information
- 7 = Select "Exit" softkey to quit from the view

The R&S Cable Rider ZPH allows you to change the name and description anytime you want. All other geotag information is unchangeable after it has been saved.

1. Select "Edit" softkey.

The R&S Cable Rider ZPH opens a dialog box to change the geotag information.

Note: Only the "Name" and "Description" field are editable in the dialog box, all other information saved are locked.

2. Enter the "Name" or "Description" in the input field.

Displaying geotags

You can also display as many geotags as you want on the map. See [Figure 13-3](#).

1. Select the "GPS Position" softkey.
2. Select the "GPS Position List" softkey.
The R&S Cable Rider ZPH opens the "GPS position list" dialog box.
3. Select the geotag you want to display or remove from the map.
The R&S Cable Rider ZPH highlights the geotag selected. See item 6 in [Figure 13-5](#).
4. Select the "Include" softkey to check or uncheck the selected geotag.
The R&S Cable Rider ZPH displays or removes the geotag items accordingly on the map.

13.3.5.2 Triangulation

With option R&S ZPH-K15, the R&S Cable Rider ZPH is able to locate the source of interference using the triangulation method.

To perform triangulation, you have to create at least two or three geotags with azimuth information. After creating the geotags (see ["Creating geotags manually"](#) on page 308), display them on the map (see [Figure 13-7](#)). Based on these geotags, the R&S Cable Rider ZPH calculates the point at which the azimuth lines of the geotags intersect. This intersection point represents the source of the interference.

If necessary, you can assign a different azimuth for the current position of GPS coordinates.

1. Select the "GPS Position" softkey.

2. Select the "Save" softkey.
The R&S Cable Rider ZPH opens a submenu to select the different geotags saving options.
3. Select the "Azimuth Only" menu item.
The R&S Cable Rider ZPH opens an input field to change the azimuth (the GPS data itself is not changed). Note that the azimuth line is updated in real time when you change its angle.

Perform triangulation

Triangulation is performed to calculate and determine the source of interference.

1. Select the "GPS Position" softkey.
2. Select the "GPS Position List" softkey.
The R&S Cable Rider ZPH opens the "GPS position list" dialog box.
3. Select two or three geotags and display them on the map.
See [Figure 13-7](#).
4. Select the "GPS Position" softkey.
5. Select the "Triangulation" softkey.
The R&S Cable Rider ZPH calculates the intersection point of the geotags you have selected. The result is displayed on the map as a dot that is surrounded by a circle. See [Figure 13-2](#).
By default, the dot and circle are blue. However, you can assign a different color to the triangulation results. See ["Default behavior of geotags in triangulation "](#) on page 301.

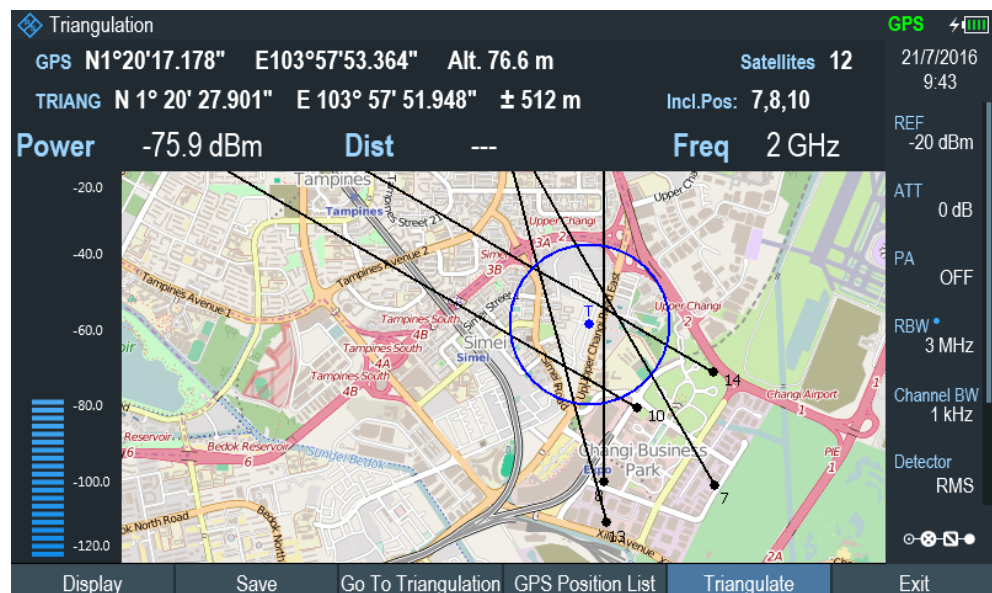


Figure 13-7: Triangulation result

Adding the triangulation result to the GPS position list

1. Select the "GPS Position" softkey.
2. Select the "Save" softkey.
The R&S Cable Rider ZPH opens a submenu to select the different geotags saving options.
3. Select the "Triangulation" menu item.
The R&S Cable Rider ZPH opens an input field to enter a name and description for the triangulation geotag.
4. Enter a name and description.
5. Select the "Save" button to save the new geotag.
The R&S Cable Rider ZPH creates a geotag in the "GPS Position List".
For more information on the "GPS Position List", see ["Managing geotags"](#) on page 309.

13.3.5.3 Indoor Mapping

When you enter the "Indoor Mapping" application, the R&S Cable Rider ZPH always shows the signal strength at the top of the display or in the power bar at the left side of the display. See [Figure 13-1](#).

The method to collect data in the indoor mapping is similar to that of collecting geotags in large-scale map mode.

When you perform a measurement at a particular spot on the map, the application creates a tag (represented by a colored dot) and draws it on the map at your current location. The color of the dot represents the signal strength received at that location, see [Chapter 13.3.3.5, "Selecting Colors for Map Locations"](#), on page 301.

Creating tags

You can create a tag on any place of the map. To do so, you first have to move the cross-hairs on the map display to the position you are currently at. For more information, see [Chapter 13.3.3.4, "Aligning the Indoor Mapping Mode"](#), on page 300.



Figure 13-8: Tags on indoor mapping

When the cross-hairs is at the correct location, proceed as follows to save the measured data.

1. Press the rotary knob to confirm the measured data.
The R&S Cable Rider ZPH creates a tag at your current position, represented by a colored dot on the map. This tag is saved to the "Indoor Position List".
Alternatively, you can do the following option to save the measured data.
2. Press the [MEAS] key.
3. Select the "Indoor Position" softkey.
The R&S Cable Rider ZPH opens a submenu to select the different geotags saving options.
4. Select the "Capture Position" softkey.
The R&S Cable Rider ZPH creates a tag in the "Indoor Position List".
See ["Managing tags"](#) on page 315.

Managing tags

The application features an "Indoor Position List" that allows you to manage and edit tags in the list. The "Indoor Position List" contains all the tags that you have created.

1. Press the [MEAS] key.
2. Select the "Indoor Position" softkey.
3. Select the "Indoor Position List" menu item.

The R&S Cable Rider ZPH opens a dialog box which contains a list of tags that you have saved. In this list, the R&S Cable Rider ZPH shows some basic information about the geotag.

Signal Strength Mapping Indoor					
Nr	Include	Latitude	Longitude	Level	Name
1	☒	N 0° 0' 1.51598"	E 0° 0' 0.52142"	-76.7 dBm	
2	☒	N 0° 0' 2.16293"	E 0° 0' 0.51177"	-76.8 dBm	
3	☒	N 0° 0' 1.99878"	E 0° 0' 0.92697"	-76.7 dBm	
4	☒	N 0° 0' 2.07603"	E 0° 0' 3.32165"	-76.6 dBm	
5	☒	N 0° 0' 2.62642"	E 0° 0' 3.46649"	-76.7 dBm	
6	☒	N 0° 0' 2.44296"	E 0° 0' 2.66504"	-76.7 dBm	
7	☒	N 0° 0' 2.57814"	E 0° 0' 1.63668"	-76.6 dBm	
8	☒	N 0° 0' 0.42969"	E 0° 0' 1.39046"	-76.6 dBm	
9	☒	N 0° 0' 1.64634"	E 0° 0' 2.08569"	-61.3 dBm	
10	☒	N 0° 0' 1.10561"	E 0° 0' 1.57875"	-61.6 dBm	
11	☒	N 0° 0' 0.80144"	E 0° 0' 1.95050"	-61.8 dBm	
12	☒	N 0° 0' 1.16837"	E 0° 0' 0.88352"	-61.7 dBm	
13	☒	N 0° 0' 0.81110"	E 0° 0' 1.24562"	-61.3 dBm	
14	☒	N 0° 0' 1.99395"	E 0° 0' 2.51055"	-61.5 dBm	
15	☒	N 0° 0' 4.07047"	E 0° 0' 4.44460"	-61.4 dBm	
Include		View	Delete	Delete All	Exit

For information of the items in the "Indoor Position List", see [Figure 13-5](#).

To view the complete information of the list:

1. Select one tag in the list.
2. Select the "View" softkey.
The R&S Cable Rider ZPH displays the complete information of the tag.
In addition to the signal information, the details of the tag also contain information about the measurement. This information includes, for example, the frequency, measured level or time of the measurement.

The R&S Cable Rider ZPH allows you to change the name and description anytime you want. All other tag information is unchangeable after saved.

- Select the "Edit" softkey.
The R&S Cable Rider ZPH opens input fields to change the name and description of the location.

Displaying tags

A tag is represented by a dot on the map. You can add or remove tags as you like.

1. Select the "Indoor Position" softkey.
The R&S Cable Rider ZPH opens a submenu to select the different tag saving options.

2. Select the "Indoor Position List" menu item.
3. Select the tag you want to remove or includes.
4. Select the "Include" softkey.
The R&S Cable Rider ZPH unchecks / checks the checkbox at the "Include" column and removes / adds it on the map

Saving measurement data

When you are done with the measurement, you can save the measurement data in a .gpx file for later evaluation in the R&S InstrumentView or other applications like Google Earth.

1. Press the [MEAS] key.
2. Select the "Indoor Position" softkey.
3. Select the "Save Results" menu item.
The R&S InstrumentView stores the measurement data in a GPX file (it does not matter if you have specified any GPS data in your map). When you are done with the measurement, you can save the measurement data in a .gpx file for later evaluation in the R&S InstrumentView or other applications like Google Earth.

Restoring measurement data previously recorded

In the same way, you can also restore a GPX file that you have saved previously.

1. Press the [MEAS] key.
2. Select the "Indoor Position" softkey.
3. Select the "Select GPX File" menu item.
The R&S Cable Rider ZPH restores the measurement data saved in the selected GPX file. You can then add or remove tags as required.
If you have specified the GPS reference points for the indoor map, you can also load the measurement data into a different map. (For example, a larger scale floor plan of a building or embed the indoor data into an outdoor map).
To do so, load a different map via the "Map" softkey and load the corresponding GPX data. If the map and GPX data are not compatible, the R&S Cable Rider ZPH will not display the measurement data stored in the GPX file.
Note that you have to load the map first before restoring the GPX file.
If the GPX data is not compatible with the currently displayed map or does not contain any GPS information, the R&S Cable Rider ZPH shows a corresponding message.

13.3.6 Analyzing Geographic Data

The R&S InstrumentView software package provides an interface that allows you to export and review your recorded data with Google Earth. This interface trans-

forms .gpx files into ".kmz" files (required by Google Earth). It also contains a plug-in that illustrates the signal levels measured at the GPS coordinates that you have added to the .gpx file.

For more information on the conversion of .gpx file to ".kmx" files, see "GPX Conversion" in the R&S InstrumentView.

Include	Latitude	Longitude	Level	Name	Description
☒	1° 19.4395' N	103° 56.1076' E	-53.4 dBm		
☒	1° 20.6597' N	103° 56.2003' E	-57.4 dBm		
☒	1° 19.9853' N	103° 54.8356' E	-76.5 dBm		
☒	1° 19.2593' N	103° 55.4794' E	-49 dBm		
☒	1° 20.5104' N	103° 55.5309' E	-51.9 dBm		
☒	1° 20.0625' N	103° 56.6947' E	-76.6 dBm		
☒	1° 19.1049' N	103° 56.7565' E	-76.6 dBm		
☒	1° 19.6146' N	103° 57.1891' E	-58.1 dBm		
☐	1° 24.0267' N	103° 53.7078' E	-76.5 dBm		
☒	1° 20.3283' N	103° 57.8650' E	-76.2 dBm	rs	ref
☒	1° 20.0033' N	103° 57.7517' E	-76.5 dBm	cbp	
☒	1° 19.9950' N	103° 58.2133' E	-76.4 dBm	goodyear-co	
☐	1° 20.3283' N	103° 57.8650' E	-54.2 dBm	rs	
☒	1° 20.2911' N	103° 57.8805' E	-62.1 dBm		
☒	1° 19.9950' N	103° 58.2133' E	-75.4 dBm	Goodyear	

Figure 13-9: Combination of multiple GPS lists

13.3.7 Analyzing Indoor Data

The R&S InstrumentView software package provides an interface that allows you to export and review your recorded data with external tools. This interface transforms the measurement data into an image or a CSV file. For more information on the indoor data analysis tool, see "Map Analysis" in the R&S InstrumentView.

When you add GPS reference information to the indoor map, it is also possible to export the data collected indoors as a .kmz file and import it into Google Earth. For more information, see [Chapter 13.3.6, "Analyzing Geographic Data"](#), on page 317.

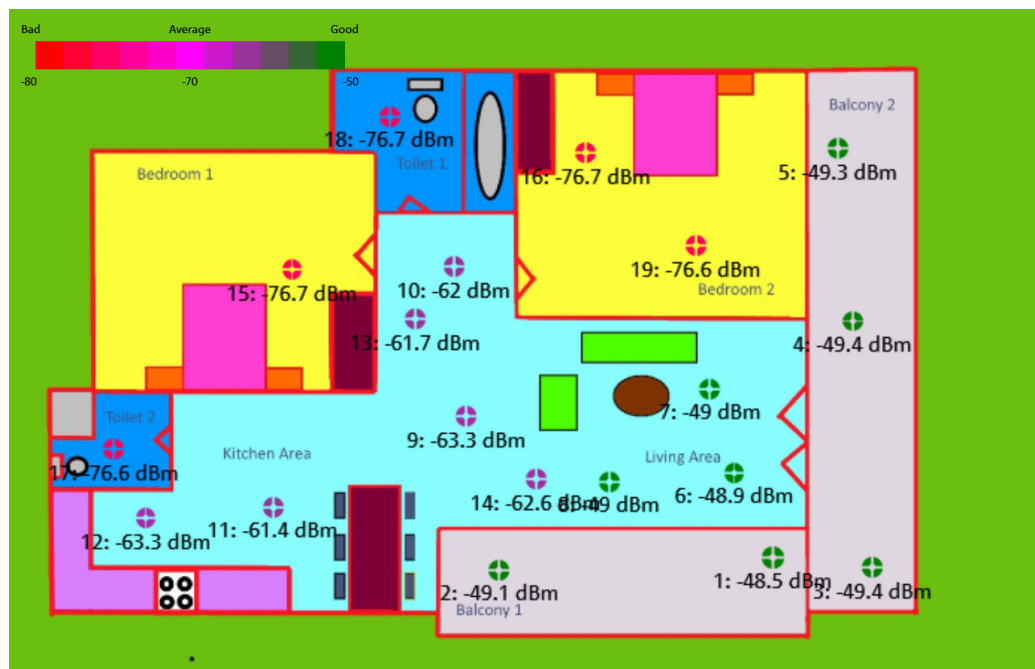


Figure 13-10: Indoor mapping with signal strength and indices displayed.

14 Remote Commands

The commands required to perform measurements in the Cable and Antenna Test application in a remote environment are described here.

• Interfaces and Protocols	320
• Setting Up the Remote Control Connection	323
• Instrument Model and Command Processing	324
• SCPI Command Structure and Syntax	327
• Command Sequence and Command Synchronization	336
• Remote Control - Commands	336

14.1 Interfaces and Protocols

The R&S Cable Rider ZPH supports two different interfaces for remote control.

- [LAN Interface](#): The protocol is based on TCP/IP and supports the VXI-11 standard
- [USB Interface](#)

The connectors are located at the side of the instrument and permit a connection to a controller for remote control via a local area network (LAN) or directly via USB.

SCPI



SCPI (Standard Commands for Programmable Instruments) commands - messages - are used for remote control. Commands that are not taken from the SCPI standard follow the SCPI syntax rules. The instrument supports the SCPI version 1999. The SCPI standard is based on standard IEEE 488.2 and aims at the standardization of device-specific commands, error handling and the status registers. The tutorial "Automatic Measurement Control - A tutorial on SCPI and IEEE 488.2" from John M. Pieper (order number 0002.3536.00) offers detailed information on concepts and definitions of SCPI.

The requirements that the SCPI standard places on command syntax, error handling and configuration of the status registers are explained in detail in the following sections. Tables provide a fast overview of the bit assignment in the status registers. The tables are supplemented by a comprehensive description of the status registers.

VISA

VISA is a standardized software interface library providing input and output functions to communicate with instruments. The I/O channel (LAN or USB) is selected at initialization time by means of a channel-specific resource string. For more information about VISA refer to its user documentation.

The programming examples for remote control, are all written in Microsoft® VISUAL BASIC®. Access to the VISA functions require the declaration of the functions and constants before their use in the project. This can be accomplished either by adding the modules VISA32.BAS and VPPTYPE.BAS or a reference to the VISA32.DLL to the project.

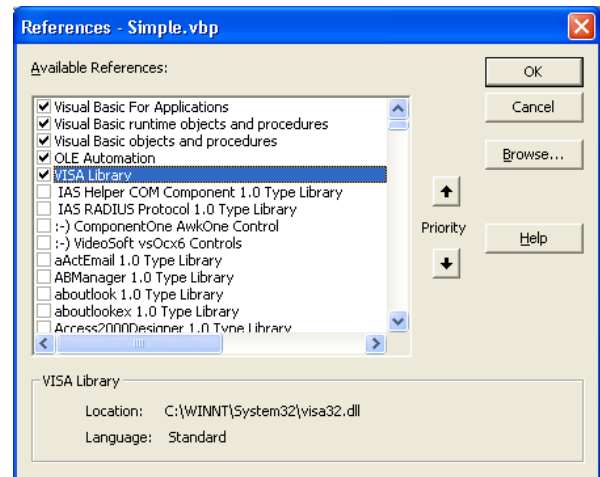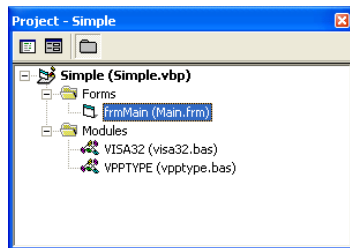

The modules VISA32.BAS and VPPTYPE.BAS can be found in the following location:
 <VXIppnPPath>\WinNT\Include (typically C:\VXIppnP\WinNT\Include).



Resetting the R&S Cable Rider ZPH

Manual operation is designed for maximum possible operating convenience. In contrast, the priority of remote control is the "predictability" of the device status. Therefore, control programs should always define an initial device status (e.g. with the command *RST) and then implement the required settings.

14.1.1 LAN Interface

To be integrated in a LAN, the instrument is equipped with a standard LAN interface, consisting of a connector, a network interface and protocols (VXI-11).

Instrument access via VXI-11 is usually achieved from high level programming platforms by using VISA as an intermediate abstraction layer. VISA encapsulates the low level VXI-11 (LAN) or USB function calls and thus makes the transport interface transparent for the user. The necessary VISA library is available as a separate product. For details, contact your local R&S sales representative.

14.1.2 USB Interface

For remote control via the USB connection, the PC and the instrument must be connected via the USB interface. The required driver comes with the R&S InstrumentView software package and is automatically installed on the PC with the software package.

The driver addressed the instrument via the USB interface with the fix IP address 172.16.10.10.

In addition, a remote control connection via the SCPI interface requires the VISA library to be installed on the PC.

14.1.3 Protocols

VXI-11 Basics

The VXI-11 standard is based on the ONC-RPC protocol which in turn relies on TCP/IP as the network/transport layer. The TCP/IP network protocol and the associated network services are preconfigured. TCP/IP ensures connection-oriented communication, where the order of the exchanged messages is adhered to and interrupted links are identified. With this protocol, messages cannot be lost.

Remote control of an instrument via a network is based on standardized protocols which follow the OSI reference model (see Fig. below).

Application	SCPI
Presentation	XDR (VXI-11)
Session	ONC-RPC
Transport	TCP / UDP
Network	IP
Data Link	Ethernet/802.3
Physical	802.3/10BASE-T

Figure 14-1: Example for LAN remote control based on the OSI reference model

Based on TCP/UDP, messages between the controller and the instrument are exchanged via open network computing (ONC) - remote procedure calls (RPC). With XDR (VXI-11), legal RPC messages are known as VXI-11 standard. Based on this standard, messages are exchanged between the controller and the instrument. The messages are identical with SCPI commands. They can be organized in four groups:

- Program messages (control command to the instrument).
- Response messages (values returned by the instrument).
- Service request (spontaneous queries of the instrument).
- Low-level control messages (interface messages).

A VXI-11 link between a controller and an instrument uses three channels: core, abort and interrupt channel. Instrument control is mainly performed on the core channel (program, response and low-level control messages). The abort channel is used for immediate abort of the core channel; the interrupt channel transmits spontaneous service requests of the instrument. Link setup itself is very complex. For more details, refer to the VXI-11 specification.

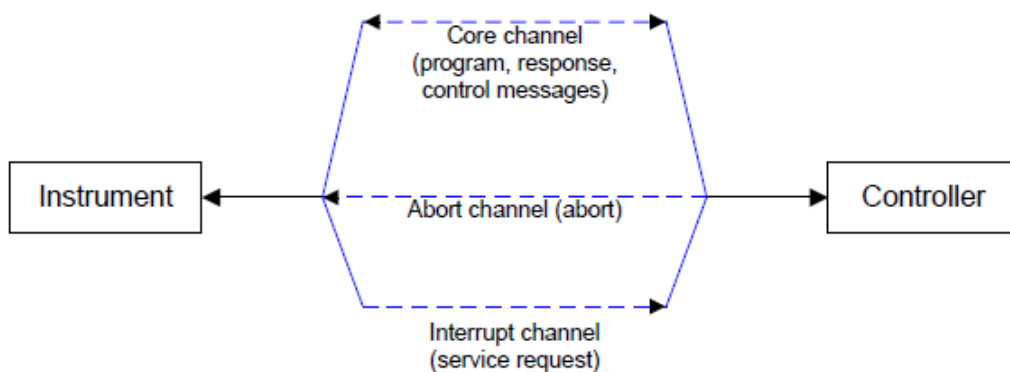


Figure 14-2: VXI-11 channels between instrument and controller

The number of controllers that can address an instrument is practically unlimited in the network. In the instrument, the individual controllers are clearly distinguished. This distinction continues up to the application level in the controller, i.e. two applications on a computer are identified by the instrument as two different controllers.

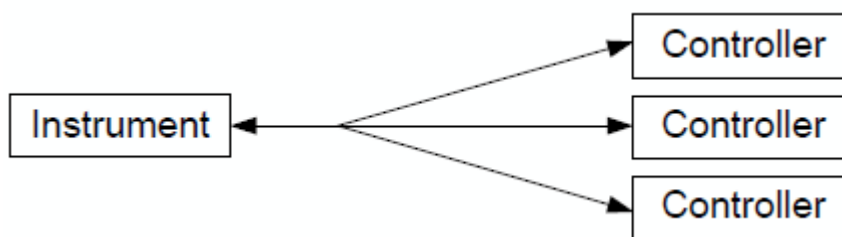


Figure 14-3: Remote control via LAN from several controllers

The controllers can lock and unlock the instrument for exclusive access. This regulates access to the instrument of several controllers.

14.2 Setting Up the Remote Control Connection

14.2.1 Preparing for Remote Control

The short and simple operating sequence below shows how to put the instrument into operation and quickly set its basic functions. The current IP address for LAN operation is shown in the SETUP – Instrument Setup Menu. In case of USB connection, the IP address is fixed to 172.16.10.10.

Refer [Chapter 4.3, "Connecting the R&S Cable Rider ZPH to a PC"](#), on page 59 for instructions on how to change the IP address.

- Connect the instrument to the LAN or directly to the controller via USB.
- Switch on the instruments.
- Write and start the following program on the controller:

```

- status = viOpenDefaultRM(defaultRM)
  'open default resource manager
- status = viOpen(DefaultRM, "TCPIP::172.16.10.10", 0, 0,
  vi)
  'in case of USB connection
- status = viopen(DefaultRM, "TCPIP::xxx.xxx.xxx.xxx", 0, 0,
  vi)
  'in case of a LAN connection, with xxx.xxx.xxx.xxx = IP address
- cmd = "*RST;*CLS"
- status = viWrite(vi, Cmd, Len(Cmd), retCount)
  'reset instrument and clear status registers
- cmd = "FREQ:CENT 100MHz"
- status = viWrite(vi, Cmd, Len(Cmd), retCount)
  'set center frequency to 100 MHz
- cmd = "FREQ:SPAN 10MHz"
- status = viWrite(vi, Cmd, Len(Cmd), retCount)
  'set span to 10 MHz
- cmd = "DISP:TRAC:Y:RLEV -10dBm"
- status = viWrite(vi, Cmd, Len(Cmd), retCount)
  'set reference level to -10 dBm
- viclose vi
- viclose default RM

```

The instrument now performs a sweep in the frequency range of 95 MHz to 105 MHz.

Changing the IP Address

In order to operate the instrument via remote control, it must be accessed via LAN (IP address) or USB (fixed IP address). If the factory-set remote control address does not fit in the network environment, it can be changed.

Refer [Chapter 4.3, "Connecting the R&S Cable Rider ZPH to a PC"](#), on page 59 for instructions on how to change the IP address.

14.3 Instrument Model and Command Processing

The block diagram in [Figure 14-4](#) shows how SCPI commands are serviced in the instrument. The individual components work independently and simultaneously. They communicate with each other by means of so-called "messages".

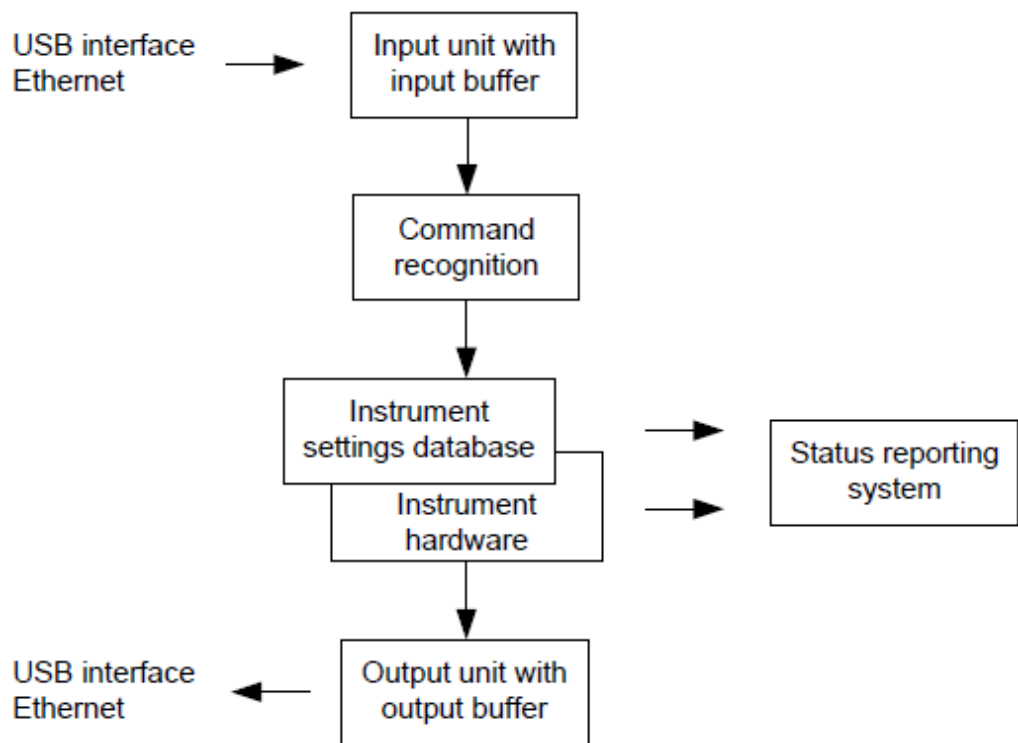


Figure 14-4: Instrument model in the case of remote control

- [Input Unit](#).....325
- [Command Recognition](#).....325
- [Data Base and Instrument Hardware](#).....326
- [Status Reporting System](#)..... 326
- [Output Unit](#)..... 326

14.3.1 Input Unit

The input unit receives commands character by character from the controller and collects them in the input buffer. The input unit sends a message to the command recognition as soon as the input buffer is full or as soon as it receives a delimiter, <PROGRAM MESSAGE TERMINATOR>, as defined in IEEE 488.2, or the interface message DCL.

If the input buffer is full, the traffic is stopped and the data received up to then are processed. Subsequently the traffic is continued. If, however, the buffer is not yet full when receiving the delimiter, the input unit can already receive the next command during command recognition and execution. The receipt of DCL clears the input buffer and immediately resets the command recognition.

14.3.2 Command Recognition

The command recognition analyses the data received from the input unit. It proceeds in the order in which it receives the data. Only DCL is serviced with priority, for exam-

ple GET (Group Execute Trigger) is only executed after the commands received before. Each recognized command is immediately transferred to the internal instrument settings data base but not executed immediately.

The command recognition detects syntax errors in the commands and transfers them to the status reporting system. The rest of a program message after a syntax error is analyzed further if possible and serviced. After the syntax test, the value range of the parameter is checked, if necessary.

If the command recognition detects a delimiter, it passes the command to an execution unit that performs the instrument settings. In the meantime, the command recognition is ready to process new commands (overlapping execution). A DCL command is processed in the same way.

14.3.3 Data Base and Instrument Hardware

Here the expression "instrument hardware" denotes the part of the instrument fulfilling the actual instrument function - signal generation, measurement etc. The controller is not included. The term "data base" denotes a database that manages all the parameters and associated settings required for setting the instrument hardware.

Setting commands lead to an alteration in the data set. The data set management enters the new values (e.g. frequency) into the data set, however, only passes them on to the hardware when requested by the command recognition. This only takes place at the end of a program message.

The data are checked for compatibility with the current instrument settings before they are transmitted to the instrument hardware. If the execution is not possible, an "execution error" is signaled to the status reporting system. The corresponding settings are discarded.

Before passing on the data to the hardware, the settling bit in the STATUS:OPERation register is set (refer to section "[STATUS:OPERation Register](#)" on page 529). The hardware executes the settings and resets the bit again as soon as the new state has settled. This fact can be used to synchronize command servicing.

Queries induce the data set management to send the desired data to the output unit.

14.3.4 Status Reporting System

For detailed information, refer to [Status Reporting System](#).

14.3.5 Output Unit

The output unit collects the information requested by the controller, which it receives from the data base management. The output unit processes the information according to the SCPI rules and makes it available in the output buffer.

If the instrument is addressed as a talker without the output buffer containing data or awaiting data from the data base management, the output unit sends error message

"Query UNTERMINATED" to the status reporting system. No data are sent to the controller, the controller waits until it has reached its time limit. This behavior is defined by IEEE 488.2 and SCPI.

14.4 SCPI Command Structure and Syntax

SCPI describes a standard command set for programming instruments, irrespective of the type of instrument or manufacturer. The goal of the SCPI consortium is to standardize the device-specific commands to a large extent. For this purpose, a model was developed which defines the same functions inside a device or for different devices. Command systems were generated which are assigned to these functions. Thus it is possible to address the same functions with identical commands. The command systems are of a hierarchical structure.

SCPI is based on standard IEEE 488.2, i.e. it uses the same syntactic basic elements as well as the common commands defined in this standard. Part of the syntax of the device responses is defined with greater restrictions than in standard IEEE 488.2 (see [Chapter 14.4.4, "Responses to Queries"](#), on page 335).



Remote command examples

Not all commands used in the following examples are implemented in the instrument.

• Structure of a Command	327
• Parameters	332
• Structure of a Program Message	334
• Responses to Queries	335

14.4.1 Structure of a Command

The commands consist of a so-called header and, in most cases, one or more parameters. Header and parameter are separated by a "white space" (ASCII code 0 to 9, 11 to 32 decimal, e.g. blank). The headers may consist of several key words. Queries are formed by directly appending a question mark to the header.

• Common Commands	327
• Device-Specific Commands	328
• Overview of Syntax Elements	331

14.4.1.1 Common Commands

Common commands consist of a header preceded by an asterisk "*" and one or several parameters, if any.

Table 14-1: Examples

Command	Operation	Description
*RST	RESET	Resets the device.
*ESE 253	EVENT STATUS ENABLE	Sets the bits of the EVENT STATUS ENABLE register.
*ESR?	EVENT STATUS QUERY	Queries the contents of the EVENT STATUS register.

14.4.1.2 Device-Specific Commands

- [Hierarchy](#).....328
- [Multiple keywords](#).....329
- [Optional Keywords](#).....329
- [Long and Short Form](#).....329
- [Parameter](#).....330
- [Special Characters](#).....330
- [Numeric Suffix](#).....331

Hierarchy

Device-specific commands are of hierarchical structure. The different levels are represented by combined headers. Headers of the highest level (root level) have only one key word. This key word denotes a complete command system.

Example:

SENSe

This key word denotes the SENSe command system.

For commands of lower levels, the complete path has to be specified, starting on the left with the highest level, the individual key words being separated by a colon ":".

Example:

SENSe:FREQuency:SPAN 10MHZ

This command lies in the third level of the SENSe system. It sets the frequency span.

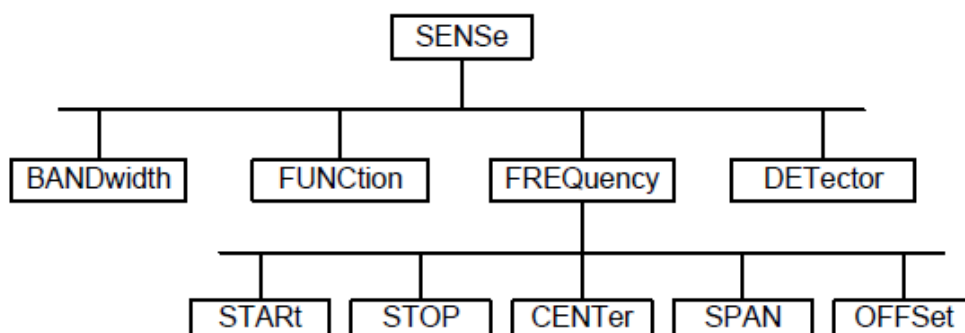


Figure 14-5: Tree structure the SCPI command systems using the SENSe system as example

Multiple keywords

Some key words occur in several levels within one command system. Their effect depends on the structure of the command, i.e. at which position in the header of a command they are inserted.

Example:

```
SOURce:FM:POLarity NORMal
```

This command contains key word `POLarity` in the third command level. It defines the polarity between modulator and modulation signal.

Example:

```
SOURce:FM:EXTernal:POLarity NORMal
```

This command contains key word `POLarity` in the fourth command level. It defines the polarity between modulation voltage and the resulting direction of the modulation only for the external signal source indicated.

Optional Keywords

Some command systems permit certain key words to be inserted into the header or omitted. These key words are marked by square brackets in the description. The full command length must be recognized by the instrument for reasons of compatibility with the SCPI standard. Some commands are considerably shortened by these optional key words.

Example:

```
[SENSe]:BANDwidth[:RESolution]:AUTO
```

This command couples the resolution bandwidth of the instrument to other parameters. The following command has the same effect:

```
BANDwidth:AUTO
```



Optional keywords with numeric suffixes

Do not omit an optional keyword if it includes a numeric suffix that is relevant for the effect of the command.

Example:

```
DISPlay[:WINDow<1..4>]:MAXimize <Boolean>
```

Command `DISP:MAX ON` refers to window 1.

In order to refer to a window other than 1, you must include the optional `WINDow` parameter with the suffix for the required window.

```
DISP:WIND2:MAX ON
```

 refers to window 2.

Long and Short Form

The key words feature a long form and a short form. Either the short form or the long form can be entered, other abbreviations are not permitted.

Example:

```
STATus:QUEStionable:ENABle 1
```

is equivalent to

```
STAT:QUES:ENAB 1
```

**Upper and lower case notation of commands**

Upper-case and lower-case notation only serves to distinguish the two forms in the manual, the instrument itself does not distinguish upper-case and lower-case letters.

Parameter

The parameter must be separated from the header by a "white space". If several parameters are specified in a command, they are separated by a comma ",". A few queries permit the parameters MINimum, MAXimum and DEFault to be entered. Refer to [Chapter 14.4.2, "Parameters"](#), on page 332 for a detailed description of the various parameters.

Example:

```
SENSe:FREQuency:STOP? MAXimum
```

Response: 3.5E9

This query requests the maximal value for the stop frequency.

Special Characters

- **Vertical stroke |**

A vertical stroke in parameter definitions indicates alternative possibilities in the sense of "or". The effect of the command differs, depending on which parameter is used.

Example

- `DISPlay:FORMat SINGLE | SPLit`

If parameter `SINGLE` is selected, full screen is displayed, in the case of `SPLIT`, split screen is displayed.

A selection of key words with an identical effect exists for several commands. These keywords are indicated in the same line; they are separated by a vertical stroke. Only one of these keywords needs to be included in the header of the command. The effect of the command is independent of which of the keywords is used.

- `SENSe:BANDwidth|BWIDth[:RESolution]`

The two following commands with identical meaning can be created. They set the frequency of the fixed frequency signal to 1 kHz:

```
SENSe:BAND 1
```

```
SENSe:BWID 1
```

- **Square Brackets []**

Key words in square brackets can be omitted when composing the header. The full command length must be accepted by the instrument for reasons of compatibility with the SCPI standards.

Example

- [SENSe:]BANDwidth|BWIDth[:RESolution] or SENS:BAND:RES

is equivalent to

BAND

Parameters in square brackets can be incorporated optionally in the command or omitted as well

- MMEMory:NETWork:MAP<string>,<string>[,<string>,<string>,<boolean>]

Entries in square brackets are optional or can be omitted.

- **Braces { }**

Parameters in curly brackets are optional and can be inserted once or several times, or omitted.

Example

- SENSE:LIST:FREQuency <numeric_value>{,<numeric_value>}

The following are valid commands:

SENS:LIST:FREQ 10

SENS:LIST:FREQ 10,20

SENS:LIST:FREQ 10,20,30,40

Numeric Suffix

If a device features several functions or features of the same kind, e.g. inputs, the desired function can be selected by a suffix added to the command. Entries without suffix are interpreted like entries with the suffix 1. Optional keywords must be specified if they select a function with the suffix.

Example:

SYSTem:COMMUnicate:SERial2:BAUD 9600

This command sets the baud rate of a second serial interface.

**Suffix counting**

In case of remote control, suffix counting may differ from the numbers of the corresponding selection used in manual operation. SCPI prescribes that suffix counting starts with 1. Suffix 1 is the default state and used when no specific suffix is specified.

Some standards define a fixed numbering, starting with 0. With GSM, for instance, slots are counted from 0 to 7. In the case of remote control, the slots are selected with the suffixes 1 to 8. If the numbering differs in manual operation and remote control, it is indicated with the respective command.

14.4.1.3 Overview of Syntax Elements

The following table offers an overview of the syntax elements.

Syntax Element	Description
:	The colon separates the key words of a command. In a program message, the separating semicolon marks the uppermost command level.
;	The semicolon separates two commands within a program message. It does not alter the path.
,	The comma separates several parameters of a command.
?	The question mark forms a query.
*	The asterisk marks a common command.
"	Quotation marks introduce a string and terminate it.
#	The hash symbol # introduces binary, octal, hexadecimal and block data. • Binary: #B10110 • Octal: #O7612 • Hex: #HF3A7
" "	A "white space" (ASCII-Code 0 to 9, 11 to 32 decimal, e.g. blank) separates header and parameter.

14.4.2 Parameters

For most commands, a parameter needs to be supplemented. The parameter has to be separated from the header by a "white space".

The type of parameter required for each command and the allowed range of values are specified in the command description.

- [Numeric Values](#)..... 332
- [Special Numeric Values](#)..... 333
- [Boolean Parameters](#)..... 333
- [Text](#)..... 333
- [Strings](#)..... 334
- [Block Data](#)..... 334

14.4.2.1 Numeric Values

Numeric values can be entered in any form, i.e. with sign, decimal point and exponent. Values exceeding the resolution of the instrument are rounded up or down. The mantissa may comprise up to 255 characters, the exponent must lie inside the value range -32000 to 32000. The exponent is introduced by an "E" or "e". Entry of the exponent alone is not permissible. In the case of physical quantities, the unit can be entered. Permissible unit prefixes are G (giga), MA (mega), MOHM and MHZ are also possible), K (kilo), M (milli), U (micro) and N (nano). If the unit is missing, the basic unit is used.

Example:

SENSe:FREQuency:STOP 1.5GHz = SENSe:FREQuency:STOP 1.5E9

14.4.2.2 Special Numeric Values

The texts MINimum, MAXimum, DEFault, UP and DOWN are interpreted as special numeric values. In case of a query, the numeric value is returned.

- MIN/MAX
MINimum and MAXimum denote the minimum and maximum value.
- DEF
DEFault denotes a preset value which has been stored in the EPROM. This value conforms to the default setting, as it is called by the *RST command
- UP/DOWN
UP, DOWN increases or reduces the numerical value by one step. The step width can be specified via an allocated step command for each parameter which can be set via UP, DOWN.
- INF/NINF
INFinity, Negative INFinity (NINF) Negative INFinity (NINF) represent the numerical values -9.9E37 or 9.9E37, respectively. INF and NINF are only sent as device response.
- NAN
Not A Number (NAN) represents the value 9.91E37. NAN is only sent as device response. This value is not defined. Possible causes are the division of zero by zero, the subtraction of infinite from infinite and the representation of missing values.

Example:

Setting command: `SENSe:FREQuency:STOP MAXimum`

Query: `SENSe:FREQuency:STOP?`, Response: `3.5E9`

14.4.2.3 Boolean Parameters

Boolean parameters represent two states. The ON state (logically true) is represented by ON or a numerical value unequal to 0. The OFF state (logically untrue) is represented by OFF or the numerical value 0. The numerical values are provided as response for query.

Example:

Setting command: `CALCulate:MARKer:STATe ON`

Query: `CALCulate:MARKer:STATe?`, Response: `1`

14.4.2.4 Text

Text parameters observe the syntactic rules for key words, i.e. they can be entered using a short or long form. Like any parameter, they have to be separated from the header by a white space. In the case of a query, the short form of the text is provided.

Example:

Setting command: `INPut:COUPling GROund`

Query: `INPut:COUPling?`, Response: `GRO`

14.4.2.5 Strings

Strings must always be entered in quotation marks (' or ").

Example:

`SYSTem:LANGuage "SCPI"` or `SYSTem:LANGuage 'SCPI'`

14.4.2.6 Block Data

Block data are a transmission format which is suitable for the transmission of large amounts of data. A command using a block data parameter has the following structure:

Example:

`HEADer:HEADer #45168xxxxxxxx`

ASCII character # introduces the data block. The next number indicates how many of the following digits describe the length of the data block. In the example, the four following digits indicate the length to be 5168 bytes. The data bytes follow. During the transmission of these data bytes all end or other control signs are ignored until all bytes are transmitted.

14.4.3 Structure of a Program Message

A program message may consist of one or several commands. It is terminated by the program message terminator which is the NL (New Line) character for LAN and USB connections.

Several commands in a program message must be separated by a semicolon ";". If the next command belongs to a different command system, the semicolon is followed by a colon. A colon ":" at the beginning of a command marks the root node of the command tree.

Example:

`CALL InstrWrite(analyzer, "SENSe:FREQuency:CENTer 100MHz;:INPut:ATTenuation 10")`

This program message contains two commands. The first one is part of the `SENSe` command system and is used to determine the center frequency of the instrument. The second one is part of the `INPut` command system and sets the input signal attenuation. If the successive commands belong to the same system, having one or several levels in common, the program message can be abbreviated. For that purpose, the second command after the semicolon starts with the level that lies below the common levels. The colon following the semicolon must be omitted in this case.

Example:

```
CALL InstrWrite(analyzer, "SENSe:FREQuency:STArT 1E6;;SENSe:
FREQuency:STOp 1E9")
```

This program message is represented in its full length and contains two commands separated from each other by the semicolon. Both commands are part of the SENSe command system, subsystem FREQuency, i.e. they have two common levels.

When abbreviating the program message, the second command begins with the level below SENSe:FREQuency. The colon after the semicolon is omitted. The abbreviated form of the program message reads as follows:

```
CALL InstrWrite(analyzer, "SENSe:FREQuency:STArT 1E6;STOp 1E9")
```

However, a new program message always begins with the complete path.

Example:

```
CALL InstrWrite(analyzer, "SENSe:FREQuency:STArT 1E6")
CALL InstrWrite(analyzer, "SENSe:FREQuency:STOp 1E9")
```

14.4.4 Responses to Queries

A query is defined for each setting command unless explicitly specified otherwise. It is formed by adding a question mark to the associated setting command. According to SCPI, the responses to queries are partly subject to stricter rules than in standard IEEE 488.2.

- The requested parameter is transmitted without header.

Example

```
INPut:COUPling?
```

Response: DC

- Maximum values, minimum values and all further quantities, which are requested via a special text parameter are returned as numerical values.

Example

```
SENSe:FREQuency:STOp? MAX
```

Response: 3.5E9

- Numerical values are output without a unit. Physical quantities are referred to the basic units or to the units set using the Unit command.

Example

```
SENSe:FREQuency:CENTer?
```

Response: 1E6 (for 1 MHz)

- Truth values <Boolean values> are returned as 0 (for OFF) and 1 (for ON).

Example

```
SENSe:BANDwidth:AUTO?
```

Response: 1 (for ON)

- Text (character data) is returned in a short form.

Example

```
SYSTem:COMMunicate:SERial:CONTrol:RTS?
```

Response: STAN (for standard)

14.5 Command Sequence and Command Synchronization

What has been said above makes clear that all commands can potentially be carried out overlapping. In order to prevent an overlapping execution of commands, one of the commands `*OPC`, `*OPC?` or `*WAI` must be used. All three commands cause a certain action only to be carried out after the hardware has been set. By suitable programming, the controller can be forced to wait for the respective action to occur.

For more information, see [Table 14-2](#)

Table 14-2: Synchronization using `*OPC`, `*OPC?` and `*WAI`

Command	Action	Programming the controller
<code>*OPC</code>	Sets the Operation Complete bit in the ESR after all previous commands have been executed.	- Setting bit 0 in the ESE - Setting bit 5 in the SRE - Waiting for service request (SRQ)
<code>*OPC?</code>	Stops command processing until 1 is returned. This is only the case after the Operation Complete bit has been set in the ESR. This bit indicates that the previous setting has been completed.	Sending <code>*OPC?</code> directly after the command whose processing should be terminated before other commands can be executed.
<code>*WAI</code>	Stops further command processing until all commands sent before <code>*WAI</code> have been executed.	Sending <code>*WAI</code> directly after the command whose processing should be terminated before other commands are executed.

For a couple of commands, the synchronization to the end of command execution is mandatory in order to obtain the desired result. The affected commands require either more than one measurement in order to accomplish the desired instrument setting (e.g. auto range functions), or they require a longer period of time for execution. If a new command is received during execution of the corresponding function, this may either lead to either to an aborted measurement or to incorrect measurement data.

The following list includes the commands, for which a synchronization via `*OPC`, `*OPC?` or `*WAI` is mandatory:

Table 14-3: Commands with mandatory synchronization (overlapping commands)

Command	Purpose
<code>INIT</code>	start measurement (sweep)
<code>INIT:CONT OFF</code>	Set to single sweep
<code>CALC:MARK:FUNC:xx?</code>	All Marker function queries

14.6 Remote Control - Commands

The following chapters provide a detailed description of all the remote control commands currently available for the R&S Cable Rider ZPH and its firmware options.

Each section describes the commands for one of the operating modes available in the R&S Cable Rider ZPH, beginning with the description of common commands required to operate the instrument. The structure is based on that of the R&S Cable Rider ZPH user manual.

- [Chapter 14.6.1, "Common Commands"](#), on page 338
- [Chapter 14.6.2, "Remote Commands of the Cable and Antenna Analyzer"](#), on page 341
- [Chapter 14.6.3, "Remote Commands of the Spectrum Analyzer"](#), on page 387
- [Chapter 14.6.4, "Remote Commands of the Analog Modulation"](#), on page 459
- [Chapter 14.6.5, "Remote Commands of the Digital Modulation"](#), on page 473
- [Chapter 14.6.6, "Remote Commands of the Power Meter"](#), on page 492

Each section is subdivided into various tasks required to perform measurements with the R&S Cable Rider ZPH, also based on the structure of the R&S Cable Rider ZPH user manual. Some commands like those for controlling markers or configuring the frequency axis are available for all operating modes. In that case, you can find a list of these commands in the corresponding section.



Availability of commands

The cable and antenna test modes are implemented in the basic unit. For the other modes, the corresponding options are required.

Following the remote control commands required to perform specific measurements, you can find a description of general commands used to set up and control basic instrument functions. These commands are independent of the operating mode. Therefore they are listed separately.

- [Chapter 14.6.7, "File Management"](#), on page 498
- [Chapter 14.6.8, "Making and Storing Screenshots"](#), on page 504
- [Chapter 14.6.9, "Configuring Data Capture"](#), on page 505
- [Chapter 14.6.10, "Saving Events"](#), on page 507
- [Chapter 14.6.11, "Configuring the Instrument"](#), on page 509
- [Chapter 14.6.12, "Status Reporting System"](#), on page 524

All chapters begin with a list of commands available in the context of that chapter. Following that list, you can find a detailed description of all the commands.

All individual descriptions contain:

- Complete notation and syntax of the command
- Description of the effects of the command
- A list of all parameters available for that command or the type of data the command returns in case of query commands
- An example of how a program message would look like
- The *RST value

An alphabetical list of all available commands is provided at the end of this manual.

14.6.1 Common Commands

The common commands are taken from the IEEE 488.2 (IEC 625-2) standard. A particular command has the same effect on different devices. The headers of these commands consist of an asterisk "*" followed by three letters. Some of the common commands refer to the [Chapter 14.6.12, "Status Reporting System"](#), on page 524.

List of Common Commands

*CLS.....	338
*ESE.....	338
*ESR?.....	338
*IDN?.....	339
*IST?.....	339
*OPC.....	339
*OPT?.....	339
*RST.....	339
*SRE.....	340
*STB?.....	340
*TRG.....	340
*TST?.....	340
*WAI.....	340

*CLS

Clear status

Sets the status byte (STB), the standard event register (ESR) and the `EVENT` part of the `QUESTIONable` and the `OPERation` registers to zero. The command does not alter the mask and transition parts of the registers. It clears the output buffer.

Usage: Setting only

*ESE <Value>

Event status enable

Sets the event status enable register to the specified value. The query returns the contents of the event status enable register in decimal form.

Parameters:

<Value> Range: 0 to 255

*ESR?

Event status read

Returns the contents of the event status register in decimal form and subsequently sets the register to zero.

Return values:

<Contents> Range: 0 to 255

Usage: Query only

***IDN?**

Identification

Returns the instrument identification.

Usage: Query only

***IST?**

Individual status query

Returns the contents of the IST flag in decimal form. The IST flag is the status bit which is sent during a parallel poll.

Return values:

<ISTflag> 0 | 1

Usage: Query only

***OPC**

Operation complete

Sets bit 0 in the event status register when all preceding commands have been executed. This bit can be used to initiate a service request. The query form writes a "1" into the output buffer as soon as all preceding commands have been executed. This is used for command synchronization.

***OPT?**

Option identification query

Queries the options included in the instrument. For a list of all available options and their description refer to the data sheet.

Usage: Query only

***RST**

Reset

Sets the instrument to a defined default status. The default settings are indicated in the description of commands.

The command is equivalent to `SYSTem:PRESet`.

Usage: Setting only

***SRE** <Contents>

Service request enable

Sets the service request enable register to the indicated value. This command determines under which conditions a service request is triggered.

Parameters:

<Contents> Contents of the service request enable register in decimal form.
Bit 6 (MSS mask bit) is always 0.
Range: 0 to 255

***STB?**

Status byte query

Reads the contents of the status byte in decimal form.

Usage: Query only

***TRG**

Trigger

Triggers all actions waiting for a trigger event. In particular, *TRG generates a manual trigger signal. This common command complements the commands of the TRIGger subsystem.

Usage: Event

***TST?**

Self-test query

Initiates self-tests of the instrument and returns an error code

Note: If you start a self-test remotely, then select the "Local" softkey while the test is still running, the instrument only returns to the manual operation state after the test is completed. In this case, the self-test cannot be aborted.

Return values:

<ErrorCode> **integer > 0 (in decimal format)**
An error occurred.
0
No errors occurred.

Usage: Query only

***WAI**

Wait to continue

Prevents servicing of the subsequent commands until all preceding commands have been executed and all signals have settled (see also command synchronization and *OPC).

Usage: Event

14.6.2 Remote Commands of the Cable and Antenna Analyzer

This section provides a detailed description of all remote control commands required to configure and perform measurements in Cable and Antenna Test (CAT) mode.

• Configuring the Horizontal Axis.....	341
• Configuring the Vertical Axis.....	345
• Setting the Bandwidth.....	350
• Performing Measurements.....	351
• Working with Traces.....	352
• Using Markers.....	355
• Using Display Lines and Limit Lines.....	369
• Configuring and Using Measurement Functions.....	377

14.6.2.1 Configuring the Horizontal Axis

The following commands configure the horizontal (frequency) axis of the active display.



Commands independent of the operating mode

Note that some of the commands for configuring the horizontal axis are also valid for other operating modes. If a command is available in another mode, it is indicated by the list in the respective section.

List of commands

[SENSe:]FREQuency:CENTer.....	341
[SENSe:]FREQuency:CENTer:STEP.....	342
[SENSe:]FREQuency:CENTer:STEP:LINK.....	342
[SENSe:]FREQuency:SPAN.....	342
[SENSe:]FREQuency:SPAN:AUTO.....	343
[SENSe:]FREQuency:START.....	343
[SENSe:]FREQuency:STOP.....	343
[SENSe:]FREQuency:SETTings:COUPling:ENABLE.....	344
CALCulate<1...2>:DTF:DISTance:START.....	344
CALCulate<1...2>:DTF:DISTance:STOP.....	344

[SENSe:]FREQuency:CENTer <CenterFrequency>

This command defines the center frequency of the R&S Cable Rider ZPH.

In spectrum analyzer mode, the command also defines the measuring frequency for time domain measurements (span = 0).

Parameters:

<CenterFrequency> Range: Depends on the operating mode and is specified in the data sheet.

*RST: $f_{max} / 2$ with f_{max} = maximum frequency

Default unit: MHz

Example:

FREQ:CENT 100MHz

Defines a center frequency of 100 MHz.

[SENSe:]FREQuency:CENTer:STEP <Stepsize>

This command defines the center frequency step size.

Parameters:

<Stepsize>

Range: 1 Hz to f_{max}

*RST: - (AUTO 0.1*SPAN is switched on)

Default unit: MHz

Example:

FREQ:CENT:STEP 120MHz

Defines a CF step size of 120 MHz.

[SENSe:]FREQuency:CENTer:STEP:LINK <CouplingState>

This command couples and decouples the center frequency step size to the span.

For time domain measurements, the command couples the step size to the resolution bandwidth.

Parameters:

<CouplingState>

CENTERf | DIVTen | OFF

CENTERf

Sets the step size equal to the center frequency.

DIVTen

Couples the step size to the span (10 %).

OFF

Turns off the coupling (manual step size).

*RST: DIVTen

Example:

FREQ:CENT:STEP:LINK DIVT

Couples the step size to 10% of the span.

[SENSe:]FREQuency:SPAN <FrequencySpan>

This command defines the frequency span.

If you set a span of 0 Hz, the R&S Cable Rider ZPH starts a measurement in the time domain.

Parameters:

<FrequencySpan> Range: Specified in the data sheet.
 *RST: fmax with fmax = maximum frequency
 Default unit: GHz

Example:

FREQ:SPAN 10MHz
 Defines a span of 10 MHz.

[SENSe:]FREQuency:SPAN:AUTO <State>

This command turns on or off the automatic calculation of the ideal span.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

FREQ:SPAN:AUTO ON
 Turns on the automatic span determination.

[SENSe:]FREQuency:STARt <StartFrequency>

This command defines the start frequency for measurements in the frequency domain (span > 0).

Parameters:

<StartFrequency> Range: Depends on the operating mode and is specified in the datasheet.
 *RST: 0 Hz
 Default unit: GHz

Example:

FREQ:STAR 20MHz
 Defines a start frequency of 20 MHz.

[SENSe:]FREQuency:STOP <StopFrequency>

This command defines the stop frequency for measurements in the frequency domain (span > 0).

Parameters:

<StopFrequency> Range: Depends on the operating mode and is specified in the datasheet.
 *RST: fmax
 Default unit: GHz

Example:

FREQ:STOP 2000MHz
 Defines a stop frequency of 2 GHz.

[SENSe:]FREQuency:SETTings:COUPling:ENABle <State>

This command couples or decouples the frequency settings of the DTF measurement to the other Cable and Analyzer measurements.

Parameters:

<State>

ON | 1

Frequency settings are coupled. When you change the frequency or span in the DTF measurement, they also change in the other Cable and Analyzer measurements (reflection, transmission and cable loss).

ON | 1

Frequency settings of the DTF measurement are independent. When you change the frequency or span in the DTF measurement, they do not change in the other VNA measurements (reflection, transmission and cable loss).

*RST: ON

Example:

FREQ:SETT:COUP:ENAB OFF

Decouple frequency and span.

CALCulate<1...2>:DTF:DISTance:STARt <DtfDistanceStart>

This command defines the start distance of the cable measurement.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2>

1...2

Parameters:

<DtfDistanceStart>

Numeric value in the range from 3 m (10 ft) to 1500 m (4921 ft)
The unit is either meter or feet, depending on your selection.

*RST: 3 m (10 ft)

Default unit: m

Example:

CALC:DTF:DIST:STAR 50m

Sets the starting point of the measurement to 50 m.

CALCulate<1...2>:DTF:DISTance:STOP <DtfDistanceStop>

This command defines the end point of the cable measurement.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2>

1...2

Parameters:

<DtfDistanceStop> Numeric value in the range from 3 m (10 ft) to 1500 m (4921 ft)
The unit is either meter or feet, depending on your selection.

*RST: 1500 m (4921 ft)

Default unit: m

Example:

CALC:DTF:DIST:STOP 500m

Sets the end point of the measurement to 500 m.

14.6.2.2 Configuring the Vertical Axis

The following commands configure the vertical (level) axis and level parameters of the active display.

**Commands independent of the operating mode**

Note that some of the commands for configuring the vertical axis are also valid for other operating modes. If a command is available in another mode, it is indicated by the list in the respective section.

List of commands

DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:ADJust.....	345
DISPlay<1...2>:LOSS:REFerence.....	346
DISPlay<1...2>:LOSS:REFerence:POSition.....	346
DISPlay<1...2>:LOSS:Y:SCALe.....	346
DISPlay<1...2>:MAGNitude:REFerence.....	347
DISPlay<1...2>:MAGNitude:REFerence:POSition.....	347
DISPlay<1...2>:MAGNitude:Y:SCALe.....	347
DISPlay<1...2>:MAGNitude:Y:SPACing.....	348
DISPlay<1...2>:PHASe:REFerence.....	348
DISPlay<1...2>:PHASe:UNWRap.....	348
DISPlay<1...2>:VSWR:Y:SCALe:MINimum.....	349
DISPlay<1...2>:VSWR:Y:SCALe:MAXimum.....	349
DISPlay<1...2>:VSWR:Y:SCALe.....	349
SOURce:TG:ATTenuation.....	350

DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:ADJust

This command automatically scales the vertical axis for optimum display results.

This command is an event and therefore has no query and no *RST value.

The numeric suffix at DISPlay and TRACe are irrelevant for this command.

Example:

DISP:TRAC:Y:ADJ

Adjusts the y-axis.

Usage:

Event

DISPlay<1...2>:LOSS:REFerence <RefLevel>

This command defines the reference level for the cable loss measurement format.

The numeric suffix at DISPlay is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<RefLevel> Numeric value in the range from -100 dB to 100 dB.

*RST: 0 dB

Default unit: dB

Example: DISP:LOSS:REF 10

Defines a reference level of 10 dB.

DISPlay<1...2>:LOSS:REFerence:POSition <RefPosition>

This command defines the position of the reference value in the diagram for the cable loss measurement format.

Each step shifts the reference position one grid line up or down.

The numeric suffix at DISPlay is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<RefPosition> Numeric value in the range from 0 to 10.

*RST: 10

Example: DISP:LOSS:REF:POS 5
Moves the reference to the fifth grid line from the bottom.

DISPlay<1...2>:LOSS:Y:SCALe <DisplayRange>

This command defines the display range of the vertical axis for the cable loss measurement format.

The numeric suffix at DISPlay is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<DisplayRange> Numeric value in the range from 1 dB to 100 dB.

*RST: 100 dB

Default unit: dB

Example: DISP:LOSS:Y:SCAL 20
Defines a display range of 20 dB

DISPlay<1...2>:MAGNitude:REFerence <RefLevel>

This command defines the reference value for the magnitude measurement format.

The numeric suffix at DISPlay is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<RefLevel> Numeric value in the range from -80 dB to 30 dB
 *RST: 0 dB
 Default unit: dB

Example:

DISP:MAGN:REF -10
 Defines a reference level of -10 dB.

DISPlay<1...2>:MAGNitude:REFerence:POSition <RefPosition>

This command defines the position of the reference value in the diagram for the magnitude measurement format.

Each step shifts the reference position one grid line up or down.

The numeric suffix at DISPlay is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<RefPosition> Numeric value in the range from 0 to 10.
 *RST: 10

Example:

DISP:MAGN:REF:POS 5
 Moves the reference to the fifth grid line from the bottom.

DISPlay<1...2>:MAGNitude:Y:SCALE <DisplayRange>

This command defines the display range of the vertical axis for the magnitude measurement format.

Note that you have to set a logarithmic scaling before you can use this command with [DISPlay<1...2>:MAGNitude:Y:SPACing](#) on page 348.

The numeric suffix at DISPlay is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<DisplayRange>

Numeric value in the range from 1 dB to 150 dB.

The number you enter is rounded up to the next possible display range. For example, if you enter 9, the R&S Cable Rider ZPH automatically sets the display range to 10.

*RST: 100 dB

Default unit: dB

Example:

DISP:MAGN:Y:SCAL 50 DB

Defines a display range of 50 dB.

DISPlay<1...2>:MAGNitude:Y:SPACing <ScalingType>

This command selects the scaling of the vertical axis for the magnitude measurement format.

The numeric suffix at DISPlay is irrelevant for this command.

Suffix:

<1...2>

1...2

Parameters:

<ScalingType>

LINear | LOGarithmic

LINear

Selects a linear scale (%).

LOGarithmic

Selects a logarithmic scale (dB).

*RST: LOGarithmic

Example:

DISP:MAGN:Y:SPAC LIN

Selects linear scaling.

DISPlay<1...2>:PHASe:REFerence <RefLevel>

This command sets the reference value for the phase measurement format.

The numeric suffix at DISPlay is irrelevant for this command.

Suffix:

<1...2>

1...2

Parameters:

<RefLevel>

Numeric value in the range from -100000° to 100000°.

*RST: 0 dB

Example:

DISP:MAGN:REF -10

Sets the reference level to -10 dB

DISPlay<1...2>:PHASe:UNWRap <State>

This command removes the restriction limiting the value range to +/- 180°.

The numeric suffix at DISPlay is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<State> ON | OFF
*RST: OFF

Example:

DISP:PHAS:UNWR ON
Activates the phase unwrap.

DISPlay<1...2>:VSWR:Y:SCALe:MINimum <DisplayRange>

This command defines the bottom value of the vertical axis for the VSWR measurement format.

The numeric suffix at DISPlay is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<DisplayRange> Numeric value in the range from 1.0 to 70.
*RST: 1.0

Example:

DISP:VSWR:Y:SCAL:MIN 3
Defines a bottom value of 3 for the vertical axis.

DISPlay<1...2>:VSWR:Y:SCALe:MAXimum <DisplayRange>

This command defines the top value of the vertical axis for the VSWR measurement format.

The numeric suffix at DISPlay is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<DisplayRange> Numeric value in the range from 1.1 to 71.
*RST: 21

Example:

DISP:VSWR:Y:SCAL:MAX 25
Defines a top value of 25 for the vertical axis.

DISPlay<1...2>:VSWR:Y:SCALe <DisplayRange>

This command defines the bottom value of the vertical axis for the VSWR measurement format.

The numeric suffix at DISPlay is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<DisplayRange> Numeric value in the range from 1.1 to 71.
 The number you enter is rounded up to the next possible display range. For example, if you enter 5, the R&S Cable Rider ZPH automatically sets the display range to 1...6.

*RST: 1...21

Example:

DISP:VSWR:Y:SCAL 50
 Defines a display range of 1...71.

SOURce:TG:ATTenuation <OutputLevel>

This command defines the relative output level of the tracking generator.

Parameters:

<OutputLevel> Range: 0 to 40
 *RST: 0
 Default unit: DB

Example:

SOUR:TG:ATT 40
 Sets the attenuation to 40 dB and therefore an output level of – 40 dBm

14.6.2.3 Setting the Bandwidth

The following commands configure the filter bandwidths of the R&S Cable Rider ZPH. Note that both groups of commands (BANDwidth and BWIDth) are the same.

List of commands

[SENSe:]BANDwidth[:RESolution].....	350
[SENSe:]BWIDth[:RESolution].....	351
[SENSe:]BANDwidth[:RESolution]:AUTO.....	351
[SENSe:]BWIDth[:RESolution]:AUTO.....	351

[SENSe:]BANDwidth[:RESolution] <ResolutionBW>

This command defines the resolution bandwidth.

Parameters:

<ResolutionBW> Range: 1 Hz to 3 MHz
 *RST: - (AUTO is set to ON)
 Default unit: GHz

Example:

BAND 100 kHz
 Sets the resolution bandwidth to 100 kHz.

[SENSe:]BWIDth[:RESolution] <ResolutionBW>

This command defines the resolution bandwidth.

Parameters:

<ResolutionBW> Range: 1 Hz to 3 MHz
 *RST: - (AUTO is set to ON)
 Default unit: GHz

Example:

BWID 100 kHz
 Sets the resolution bandwidth to 100 kHz.

[SENSe:]BANDwidth[:RESolution]:AUTO <State>

This command couples and decouples the resolution bandwidth to the span.

Parameters:

<State> ON | OFF
 *RST: ON

Example:

BAND:AUTO OFF
 Decouples the resolution bandwidth from the span.

[SENSe:]BWIDth[:RESolution]:AUTO <State>

This command couples and decouples the resolution bandwidth to the span.

Parameters:

<State> ON | OFF
 *RST: ON

Example:

BWID:AUTO OFF
 Decouples the resolution bandwidth from the span.

14.6.2.4 Performing Measurements

The following commands control the actual measurement process.

List of commands

INITiate:CONTinuous.....	351
[SENSe:]SWEep:POINts.....	352

INITiate:CONTinuous <State>

This command selects the sweep mode.

Parameters:

<State> ON | OFF
 ON
 Selects continuous sweeps.

OFF

Selects single sweep.

***RST:** ON**Example:**

INIT:CONT OFF

Turns on single sweep mode.

[SENSe:]SWEep:POINts <NrofPoints>

This command queries the number of measurement points in a single sweep.

This command is a query and therefore has no *RST value.

Parameters:

<NrofPoints> Returns the number of sweep points.

Example:

SWE:POIN?

Returns the number of sweep points.

14.6.2.5 Working with Traces

The following commands set up the trace and the various functions associated with it, e.g. trace mathematics or the selection of the detector.

List of commands

CALCulate<1...2>:MATH<1...2>:COPY:MEMory<1...3>.....	352
DISPlay<1...2>[:WINDow]:TRACe<1...2>:MEMory<1...3>[:STATe].....	353
DISPlay<1...2>[:WINDow]:TRACe<1...2>:MODE.....	353
FORMat[:DATA].....	354
UNIT<1...2>:LENGth.....	354
TRACe<1...2>[:DATA]?.....	355

CALCulate<1...2>:MATH<1...2>:COPY:MEMory<1...3> [<MemorySlot>]

This command stores the selected trace into the memory trace of the R&S Cable Rider ZPH.

This command is an event and therefore has no query and no *RST value.

The numeric suffix at CALCulate and MEMory are irrelevant for this command.

The numeric suffix at MATH selects the number of the trace.

Suffix:

<1...2> 1...2

<1...2> 1...2

<1...3> 1...3

Parameters:

<MemorySlot>

Example:

CALC:MATH:COPY:MEM

Usage: Setting only

Copies the trace into the memory.

DISPlay<1...2>[:WINDow]:TRACe<1...2>:MEMory<1...3>[:STATe] <State>

This command turns the memory trace on and off.

The numeric suffix at DISPlay and MEMory are irrelevant for this command.

The numeric suffix at TRACe selects the number of the trace.

Suffix:

<1...2> 1...2

<1...2> 1...2

<1...3> 1...3

Parameters:

<State> ON | OFF

*RST: OFF

Example:

DISP:TRAC:MEM ON

Activates the memory trace.

DISPlay<1...2>[:WINDow]:TRACe<1...2>:MODE <DisplayMode>

This command selects the trace mode.

If you are using the average, max hold or min hold trace mode, you can set the number of measurements with [SENSe:] SWEep:COUNT<SweepCount>. Note that synchronization to the end of the average count is possible only in single sweep mode.

The numeric suffix at DISPlay is irrelevant for this command.

The numeric suffix at TRACe selects the number of the trace.

Parameters:

<DisplayMode> WRITe | AVERage | MINHold | MAXHold | VIEW | FREeze | INFinite

*RST: WRITe

You can turn off the trace with

DISPlay<1...2>[:WINDow]:TRACe<1...2>[:STATe] .

For more information, see chapter "Trace Mode".

Example:

SWE:CONT OFF

SWE:COUN 16

Turn on single sweep mode and sets the number of measurements to 16.

DISP:TRAC:MODE MAXH

Activates MAXHold mode for the trace.

INIT;*WAI

Starts the measurement and waits for the end of the 16 sweeps.

FORMat[:DATA] <Format>[, <>]

This command selects the data format that is used for transmission of trace data from the R&S Cable Rider ZPH to the controlling computer.

Note that the command has no effect for data that you send to the R&S Cable Rider ZPH. The R&S Cable Rider ZPH automatically recognizes the data it receives, regardless of the format.

Parameters:

<Format>

ASCII | REAL

ASCII

Returns the data in ASCII format, separated by commas.

REAL

Returns the data as 32-bit IEEE 754 floating point numbers in the "definite length block format".

*RST: ASCII

In REAL, 32 format, a string of return values would look like:

#42424<value 1><value 2>...<value n> with

#4 - representing the number of digits of the following number of data bytes (= 4 in this example);

2524 - representing the number of following data bytes (2524, corresponds to the 711 sweep points of the R&S Cable Rider ZPH.

<value> - representing 4-byte floating point value.

Example:

FORM ASC

Selects the ASCII data format.

UNIT<1...2>:LENGth <LengthUnit>

This command selects the length unit.

The numeric suffix at UNIT is irrelevant for this command.

Suffix:

<1...2>

1...2

Parameters:

<LengthUnit>

METer | FEET

METer

Selects meter as the length unit.

FEET

Selects feet as the length unit.

*RST: METer

Example:

UNIT:LENGth FEET

Selects feet as the length unit.

TRACe<1...2>[:DATA]? [<arg0>]

This command queries the trace data of the current measurement.

It also transfers data from a file to a particular trace.

With the command **FORMat [:DATA]** on page 354, you can set the data format.

With the command **CALCulate<1...2>:FEED** on page 468, you can select the result display.

The numeric suffix at TRACe is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<arg0> TRACe1 | TRACe2 | LIST | PHOLd | RAW

TRACe1

Queries the data of trace 1.

TRACe2

Queries the data of trace 2.

LIST

Queries the peak list of the measurement.

PHOLd

Queries the scanned peak hold list in the receiver mode measurement.

RAW

Queries the raw FSK/ASK data in the analog demodulation mode measurement.

The R&S Cable Rider ZPH returns 711 values. Each value corresponds to one pixel of a trace.

The unit depends on the measurement and the unit you have set with **UNIT<1...2>:POWER**.

Note: If you use the auto peak detector, the command reads out positive peak values only.

Example:

TRAC:DATA? TRACE1

Reads out the data for trace 1.

Usage:

Query only

14.6.2.6 Using Markers

The following commands control the operation of marker, delta markers and marker functions.

Markers and Delta Markers

The following commands are for setting and controlling markers and deltamarkers.

List of commands

CALCulate<1...2>:DELTamarker<1...6>[:STATe].....	356
CALCulate<1...2>:DELTamarker<1...6>:AOFF.....	356
CALCulate<1...2>:DELTamarker<1...6>:MAXimum[:PEAK].....	357
CALCulate<1...2>:DELTamarker<1...6>:MAXimum:NEXT.....	357
CALCulate<1...2>:DELTamarker<1...6>:MINimum[:PEAK].....	357
CALCulate<1...2>:DELTamarker<1...6>:X.....	357
CALCulate<1...2>:DELTamarker<1...6>:X:RELative.....	358
CALCulate<1...2>:DELTamarker<1...6>:Y?.....	358
CALCulate<1...2>:MARKer<1...6>[:STATe].....	359
CALCulate<1...2>:MARKer<1...6>:AOFF.....	359
CALCulate<1...2>:MARKer<1...6>:MAXimum[:PEAK].....	360
CALCulate<1...2>:MARKer<1...6>:MAXimum:NEXT.....	360
CALCulate<1...2>:MARKer<1...6>:MINimum[:PEAK].....	360
CALCulate<1...2>:MARKer<1...6>:MODE.....	360
CALCulate<1...2>:MARKer<1...6>:X.....	361
CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>[:STATe].....	362
CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>:LEFT.....	362
CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>:RIGHT.....	362
CALCulate<1...2>:MARKer<1...6>:Y?.....	363

CALCulate<1...2>:DELTamarker<1...6>[:STATe] <State>

This command turns delta markers on and off.

If you set the suffix at DELTmarker to 1, or use no suffix, the R&S Cable Rider ZPH interprets this as delta marker 2 because the first marker has to be a normal marker. If more than one normal marker (2 to 6) is already active, the command turns these markers into delta markers. If no delta marker is active yet, the command activates the delta marker and positions it on the trace maximum.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:DELT3 ON
 Turns on delta marker 3 or turn marker 3 into a delta marker.

CALCulate<1...2>:DELTamarker<1...6>:AOFF

This command turns off all active delta markers.

This command is an event and therefore has no query and no *RST value.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Example:

CALC:DELT:AOFF
 Turns off all delta markers.

Usage: Event

CALCulate<1...2>:DELTamarker<1...6>:MAXimum[:PEAK]

This command positions a delta marker on the current trace maximum.

If necessary, the corresponding delta marker is activated first.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Example: `CALC:DELT3:MAX`
Moves delta marker 3 to the maximum peak.

Usage: Event

CALCulate<1...2>:DELTamarker<1...6>:MAXimum:NEXT

This command positions a delta marker on the next smaller trace maximum.

If necessary, the corresponding delta marker is activated first.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Example: `CALC:DELT2:MAX:NEXT`
Moves delta marker 2 to the next smaller maximum peak.

Usage: Event

CALCulate<1...2>:DELTamarker<1...6>:MINimum[:PEAK]

This command positions a delta marker on the current trace minimum.

If necessary, the corresponding delta marker is activated first.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Example: `CALC:DELT3:MIN`
Moves delta marker 3 to the trace minimum.

Usage: Event

CALCulate<1...2>:DELTamarker<1...6>:X <FrequencyOrTime>

This command positions a delta marker on a particular coordinate on the horizontal axis.

Note that it is possible to place the marker outside the visible trace. In that case, this value is invalid.

If necessary, the corresponding delta marker is activated first.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTAmarker selects the deltamarker.

Parameters:

<FrequencyOrTime> Numeric value that indicates the coordinate on the horizontal axis.

Range: Maximum span.

Default unit: GHz

Example:

CALC:DELT:MOD REL

Delta marker positions are relative to marker 1.

CALC:DELT2:X 10.7MHz

Positions delta marker 2 10.7 MHz to the right of marker 1.

CALC:DELT2:X?

CALC:DELT2:X:REL?

Queries the absolute and relative position of delta marker 2.

CALCulate<1...2>:DELTAmarker<1...6>:X:RELative <FrequencyOrTime>

This command positions a delta marker on a position relative to the reference marker.

If necessary, the corresponding delta marker is activated first.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTAmarker selects the deltamarker.

Parameters:

<FrequencyOrTime> Defines the distance of the marker to the reference marker.

Range: Depends on the current scaling of the horizontal axis.

Default unit: GHz

Example:

CALC:DELT3:X:REL 5 kHz

Sets the delta marker at a distance of 5 kHz to the reference position.

CALCulate<1...2>:DELTAmarker<1...6>:Y?

This command queries the vertical position of a delta marker. The result is always a relative value in relation marker 1.

If necessary, the corresponding delta marker is activated first.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end between activating the delta marker and reading out the result. This is only possible in single sweep mode.

In spectrum analyzer mode, the unit depends on the unit you have set and the scaling of the vertical axis.

Parameter or measuring functions	Output unit
DBM DBPW DBUV DBMV DBUA	dB (lin/log)
WATT VOLT AMPere	dB (lin), % (log)

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTAmarker selects the deltamarker.

Parameters:

<MarkerPosition>

Example:

```
INIT:CONT OFF
CALC:DELT2 ON
Turns on single sweep mode and delta marker 2.
INIT;*WAI
Starts a sweep and waits for its end.
CALC:DELT2:Y?
Queries the position of delta marker 2.
```

Usage:

Query only

CALCulate<1...2>:MARKer<1...6>[:STATe] <State>

This command turns markers on and off.

If you do not use a suffix at MARKer, marker 1 is selected. If one or more delta markers (2 to 6) are already active, the command turns these delta markers into normal markers.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

```
CALC:MARK3 ON
Turns on marker 3.
```

CALCulate<1...2>:MARKer<1...6>:AOFF

This command turns off all active markers, delta markers and active marker measurement functions.

This command is an event and therefore has no query and no *RST value.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example:

```
CALC:MARK:AOFF
Switches off all markers.
```

Usage:

Event

CALCulate<1...2>:MARKer<1...6>:MAXimum[:PEAK]

This command positions a marker on the current trace maximum.

If necessary, the corresponding marker is activated first.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example: `CALC:MARK2:MAX`
 Moves marker 2 to the maximum peak.

Usage: Event

CALCulate<1...2>:MARKer<1...6>:MAXimum:NEXT

This command positions a marker on the next smaller trace maximum.

If necessary, the corresponding marker is activated first.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example: `CALC:MARK2:MAX:NEXT`
 Moves marker 2 to the next smaller maximum peak.

Usage: Event

CALCulate<1...2>:MARKer<1...6>:MINimum[:PEAK]

This command positions a marker on the current trace minimum.

If necessary, the corresponding marker is activated first.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example: `CALC:MARK2:MIN`
 Moves marker 2 to the trace minimum.

Usage: Event

CALCulate<1...2>:MARKer<1...6>:MODE <MarkerFormat>

This command selects the type of information a marker shows.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Suffix:
 <1...2> 1...2

<1...6>

1...6

Parameters:

<MarkerFormat> NORMal | RPDB | RPL | RSCalar | IMPedance | ADMittance | NIMPedance | NADMittance

See table below for supported parameters.

*RST: NORMal

ADMittance	admittance in complex format (real + imaginary)
IMPedance	impedance in complex format (real + imaginary)
NADMittance	standardized admittance in complex format (real + imaginary)
NIMPedance	standardized impedance in complex format (real + imaginary)
NORMal	normal marker
RPDB	reflection coefficient in complex format (magnitude (dB) + phase)
RPL	reflection coefficient in complex format (magnitude (lin) + phase)
RSCalar	reflection coefficient in complex format (real + imaginary)

CALCulate<1...2>:MARKer<1...6>:X <FrequencyOrTime>

This command positions a marker on a particular coordinate on the horizontal axis.

If one or more delta markers (2 to 6) are already active, the command turns these delta markers into normal markers.

Note that it is possible to place the marker outside the visible trace. In that case, this value is invalid.

If necessary, the corresponding delta marker is activated first.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<FrequencyOrTime> Indicates the coordinate on the horizontal axis.
The unit in spectrum analyzer mode depends on the measurement, e.g. Hz for measurements in the frequency domain and seconds for measurements in the time domain.

Range: Maximum span.

Default unit: GHz

Example:

CALC:MARK2:X 10.7MHz

Positions marker 2 to frequency 10.7 MHz.

CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>[:STATe] <State>

This command turns marker search limits on and off.

The search limit restricts the evaluation range of the trace when "set marker" functions are performed. For example, marker set to peak with command `CALCulate<1...2>:MARKer<1...6>:MAXimum[:PEAK]` on page 360 sets the marker only at the peak of the trace within the search limit.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<State> ON | OFF
*RST: OFF

Example: See `CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>:RIGHT` on page 362.

CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>:LEFT <SearchLimit>

This command defines the left limit of the marker search range.

To use the command, you first have to turn on search limits with `CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>[:STATe]` on page 362.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<SearchLimit> Sets the left marker search limit.
The unit in the spectrum analyzer mode depends on the measurement, e.g. Hz for measurements in the frequency domain and seconds for measurements in the time domain.
Range: Maximum span.
*RST: – (is set to the left diagram border when switching on search limits)
Default unit: GHz

Example: See `CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>:RIGHT` on page 362.

CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>:RIGHT <SearchLimit>

This command defines the right limit of the marker search range.

To use the command, you first have to turn on search limits with `CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>[:STATe]` on page 362.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<SearchLimit>

Sets the right marker search limit.

The unit depends on the measurement, e.g. Hz for measurements in the frequency domain and seconds for measurements in the time domain.

Range: Maximum span.

*RST: – (is set to the right diagram border when switching on search limits)

Default unit: GHz

Example:

CALC:MARK:X:SLIM ON

CALC:MARK:X:SLIM:LEFT 10MHz

CALC:MARK:X:SLIM:RIGH 100MHz

Turns on search limits and defines a search range from 10 MHz to 100 MHz.

CALCulate<1...2>:MARKer<1...6>:Y?

This command queries the absolute vertical position of a marker.

If necessary, the corresponding marker is activated first.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end between activating the delta marker and reading out the result. This is only possible in single sweep mode.

The unit of the return value depends on UNIT<1...2>:POWER.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<MarkerPosition>

Numeric value of the marker position.

Example:

INIT:CONF OFF

CALC:MARK2 ON

Turns on single sweep mode and marker 2.

INIT;*WAI

Starts a sweep and waits for the end.

CALC:MARK2:Y?

Queries the position of marker 2.

Usage:

Query only

Marker Functions

The following commands perform various kinds of analysis at the marker position.

List of commands

CALCulate<1...2>:MARKer<1...6>:COUNT:FREQUENCY?	364
CALCulate<1...2>:MARKer<1...6>:COUNT[:STATE]	364
CALCulate<1...2>:MARKer<1...6>:FREQUENCY:MODE	365
CALCulate<1...2>:MARKer<1...6>:FUNCTION:CENTer	365

CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation[:STATe].....	365
CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation:HOLD.....	366
CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation:SElect.....	366
CALCulate<1...2>:MARKer<1...6>:FUNCTION:LEVel:ONCE.....	366
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown.....	367
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:FREQuency?.....	367
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:RESult?.....	368
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:STATe.....	368
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NOISef[:STATe].....	368
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NOISe:RESult?.....	369
CALCulate<1...2>:MARKer<1...6>:FUNCTION:REFerence.....	369

CALCulate<1...2>:MARKer<1...6>:COUNT:FREQuency?

This command performs a frequency measurement at the marker position and returns the result.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end to make sure that the R&S Cable Rider ZPH actually reaches the frequency you want to measure. This is only possible in single sweep mode.

Before you can use the command, you have to turn on the frequency counter with [CALCulate<1...2>:MARKer<1...6>:COUNT\[:STATe\]](#) on page 364.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example: See [CALCulate<1...2>:MARKer<1...6>:COUNT\[:STATe\]](#) on page 364.

Usage: Query only

CALCulate<1...2>:MARKer<1...6>:COUNT[:STATe] <State>

This command turns the frequency counter at the marker position on and off.

You can read out the result with [CALCulate<1...2>:MARKer<1...6>:COUNT:FREQuency?](#) on page 364.

Frequency counting is possible only for one marker at a time. If it is activated for another marker, it is automatically deactivated for the previous marker.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end to make sure that the R&S Cable Rider ZPH actually reaches the frequency you want to measure. This is only possible in single sweep mode.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

```
INIT:CONT OFF
CALC:MARK ON
Turns on single sweep mode and marker 1.
CALC:MARK:COUN ON
Turns on the frequency counter for marker 1.
INIT;*WAI
CALC:MARK:COUN:FREQ?
Performs a measurement and queries the results of the frequency counter.
```

CALCulate<1...2>:MARKer<1...6>:FREQuency:MODE <Mode>

This command selects the marker frequency display mode.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<Mode> FREQuency | CHANnel

FREQuency
Sets the marker frequency mode to frequency input (in Hz).

CHANnel
Sets the marker frequency mode to channel input (as a channel number).

*RST: FREQ

Example:

```
CALC:MARK:FREQ:MODE FREQ
Selects the frequency display mode.
```

CALCulate<1...2>:MARKer<1...6>:FUNctio:n:CENTer

This command matches the center frequency to the frequency of a marker.

If you use a delta marker, the R&S Cable Rider ZPH turns it into a normal marker.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example:

```
CALC:MARK2:FUNC:CENT
Matches the center frequency to the frequency of marker 2.
```

Usage: Event

CALCulate<1...2>:MARKer<1...6>:FUNctio:n:DEModulation[:STATe] <State>

This command turns the audio demodulator on and off when the measurement hits a marker position.

With span > 0, you can define a hold time at the marker position with `CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation:HOLD` on page 366.

In zero span, the demodulation is on permanently.

The numeric suffix at `CALCulate` is irrelevant for this command. The numeric suffix at `MARKer` selects the marker.

Suffix:

<1...2> 1...2

<1...6> 1...6

Parameters:

<State> ON | OFF
*RST: OFF

Example: `CALC:MARK3:FUNC:DEM ON`
Switches on the demodulation for marker 3.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation:HOLD <HoldTime>

This command defines the hold time at the marker position for the demodulation with span > 0.

The numeric suffix at `CALCulate` is irrelevant for this command. The numeric suffix at `MARKer` selects the marker.

Parameters:

<HoldTime> Range: 100 ms to 500 s
*RST: 0.5 (DEModulation is set to OFF)
Default unit: s

Example: `CALC:MARK:FUNC:DEM:HOLD 3s`
Sets a hold time of 3 seconds.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation:SElect <DemodType>

This command selects the type of demodulation type for the audio demodulator.

The numeric suffix at `CALCulate` is irrelevant for this command. The numeric suffix at `MARKer` selects the marker.

Parameters:

<DemodType> AM | FM
*RST: AM

Example: `CALC:MARK:FUNC:DEM:SEL FM`
Selects FM demodulation.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:LEVel:ONCE

This command adjusts the reference level to the measured signal power.

This automatic routine makes sure that the signal power level does not overload the R&S Cable Rider ZPH or limits the dynamic range by too small an S/N ratio.

To determine the best reference level, the R&S Cable Rider ZPH aborts current measurements and performs a series of test sweeps. After it has finished the test, it continues with the actual measurement.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example: `CALC:MARK:FUNC:LEV:ONCE`
Initiates an automatic level adjust routine.

Usage: Event

CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown <MarkerDistance>

This command defines the distance of the n dB down markers to the reference marker.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<MarkerDistance> Distance of the temporary markers to the reference marker in dB.
*RST: 3 dB
Default unit: dB

Example: See `CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:STATe` on page 368

CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:FREQUENCY?

This command queries the horizontal position of the n dB down markers.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<Return values> <frequency1>, <frequency2>
<frequency1>
Absolute frequency of the n dB marker to the left of the reference marker in Hz.
<frequency2>
Absolute frequency of the n dB marker to the right of the reference marker in Hz.

Example: See `CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:STATe` on page 368

Usage: Query only

CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:RESult?

This command queries the frequency spacing or bandwidth of the n dB down markers.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<Return values> <Bandwidth>
Bandwidth in Hz.

Example: See [CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:STATe](#) on page 368.

Usage: Query only

CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:STATe <State>

This command turns the n dB Down marker function on and off.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `CALC:MARK:FUNC:NDBD:STAT ON`
Turns on the n dB marker function.
`CALC:MARK:FUNC:NDBD 3`
Positions two temporary markers 3 dB below a reference marker.
`CALC:MARK:FUNC:NDBD:FREQ?`
Queries the frequency position of the n dB Down markers; would return e.g. 1000000000, 2000000000.
`CALC:MARK:FUNC:NDBD:RES?`
Queries the measurement result; would return e.g. 1000000000.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:NOISe[:STATe] <State>

This command turns the noise measurement for all markers on and off.

You can query the results of the noise power density at the marker position with [CALCulate<1...2>:MARKer<1...6>:FUNCTION:NOISe:RESult?](#) on page 369.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<State> ON | OFF
*RST: OFF

Example: See `CALCulate<1...2>:MARKer<1...6>:FUNCTION:NOISe:RESult?` on page 369.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:NOISe:RESult?

This command queries the result of the noise measurement.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end before reading out the result. This is only possible in single sweep mode.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example:

```
INIT:CONT OFF
Turns on single sweep mode.
CALC:MARK2 ON
CALC:MARK2:FUNC:NOIS ON
Turns on marker 2 and assigns the noise measurement to that
marker.
INIT;*WAI
CALC:MARK2:NOIS:RES?
Performs the measurement and queries the noise marker
results.
```

Usage: Query only

CALCulate<1...2>:MARKer<1...6>:FUNCTION:REFerence

This command matches the reference level to the power level of a marker.

If you use a delta marker, the R&S Cable Rider ZPH turns it into a normal marker.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example:

```
CALC:MARK1:FUNC:REF
Matches the reference level to the power level of marker 1.
```

Usage: Event

14.6.2.7 Using Display Lines and Limit Lines

The following commands define the display lines and limit lines.

Display Lines

The following commands define the position of the display line.

List of commands

CALCulate<1...2>:DLINe.....	370
CALCulate<1...2>:DLINe:STATe.....	370

CALCulate<1...2>:DLINe <LinePosition>

This command defines the position of a display line.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<LinePosition> Numeric value with a variable range and unit.
You can use any unit you want, the R&S Cable Rider ZPH then converts the unit to the currently selected unit. If you omit a unit, the R&S Cable Rider ZPH uses the currently selected unit.

*RST: – (STATe to OFF)

Default unit: dBm

Example:

CALC:DLIN -20dBm

Sets the display line threshold to -20 dBm.

CALCulate<1...2>:DLINe:STATe <State>

This command turns display lines on and off.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:DLIN:STAT OFF

Turns on the display line.

Limit Lines

The following commands define limit lines and perform the corresponding limit checks.

List of commands

CALCulate<1...2>:LIMit<1...2>:BEEP[:STATe].....	371
CALCulate<1...2>:LIMit<1...2>:COMMeNt?.....	371
CALCulate<1...2>:LIMit<1...2>:DEFine.....	372
CALCulate<1...2>:LIMit<1...2>:DELete.....	373
CALCulate<1...2>:DLINe.....	373
CALCulate<1...2>:DLINe:STATe.....	373
CALCulate<1...2>:LIMit<1...2>:FAIL?.....	374

CALCulate<1...2>:LIMit<1...2>:STATe.....	374
CALCulate<1...2>:LIMit<1...2>:UNIT:X?.....	374
CALCulate<1...2>:LIMit<1...2>:UNIT[:Y]?.....	375
CALCulate<1...2>:LIMit<1...2>:LOWer:SElect.....	375
CALCulate<1...2>:LIMit<1...2>:UPPer:SElect.....	375
CALCulate<1...2>:LIMit<1...2>:LOWer:THReshold.....	376
CALCulate<1...2>:LIMit<1...2>:UPPer:THReshold.....	376

CALCulate<1...2>:LIMit<1...2>:BEEP[:STATe] <State>

This command turns the beeper that beeps if a limit line is violated on and off.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: CALC:LIM:BEEP ON
 Activates the audio beep.

CALCulate<1...2>:LIMit<1...2>:COMMeNt?

This command queries the description of a limit line.

This command is a query and therefore has no RST value.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2
 <1...2> 1...2

Example: CALC:LIM:COMM?
 Queries the description of limit line 1.

Usage: Query only

CALCulate<1...2>:LIMit<1...2>:DEFine <Name>, <Description>, <X-unit>, <X-scale>, <Y-unit>, <X0>, <Y0>, <X1>, <Y1>[, <X2>, <Y2>, <X3>, <Y3>, <X4>, <Y4>, <X5>, <Y5>, <X6>, <Y6>, <X7>, <Y7>, <X8>, <Y8>, <X9>, <Y9>, <X10>, <Y10>, <X11>, <Y11>, <X12>, <Y12>, <X13>, <Y13>, <X14>, <Y14>, <X15>, <Y15>, <X16>, <Y16>, <X17>, <Y17>, <X18>, <Y18>, <X19>, <Y19>, <X20>, <Y20>, <X21>, <Y21>, <X22>, <Y22>, <X23>, <Y23>, <X24>, <Y24>, <X25>, <Y25>, <X26>, <Y26>, <X27>, <Y27>, <X28>, <Y28>, <X29>, <Y29>, <X30>, <Y30>, <X31>, <Y31>, <X32>, <Y32>, <X33>, <Y33>, <X34>, <Y34>, <X35>, <Y35>, <X36>, <Y36>, <X37>, <Y37>, <X38>, <Y38>, <X39>, <Y39>, <X40>, <Y40>, <X41>, <Y41>, <X42>, <Y42>, <X43>, <Y43>, <X44>, <Y44>, <X45>, <Y45>, <X46>, <Y46>, <X47>, <Y47>, <X48>, <Y48>, <X49>, <Y49>, <X50>, <Y50>, <X51>, <Y51>, <X52>, <Y52>, <X53>, <Y53>, <X54>, <Y54>, <X55>, <Y55>, <X56>, <Y56>, <X57>, <Y57>, <X58>, <Y58>, <X59>, <Y59>, <X60>, <Y60>, <X61>, <Y61>, <X62>, <Y62>, <X63>, <Y63>, <X64>, <Y64>, <X65>, <Y65>, <X66>, <Y66>, <X67>, <Y67>, <X68>, <Y68>, <X69>, <Y69>, <X70>, <Y70>, <X71>, <Y71>, <X72>, <Y72>, <X73>, <Y73>, <X74>, <Y74>, <X75>, <Y75>, <X76>, <Y76>, <X77>, <Y77>, <X78>, <Y78>, <X79>, <Y79>, <X80>, <Y80>, <X81>, <Y81>, <X82>, <Y82>, <X83>, <Y83>, <X84>, <Y84>, <X85>, <Y85>, <X86>, <Y86>, <X87>, <Y87>, <X88>, <Y88>, <X89>, <Y89>, <X90>, <Y90>, <X91>, <Y91>, <X92>, <Y92>, <X93>, <Y93>, <X94>, <Y94>, <X95>, <Y95>, <X96>, <Y96>, <X97>, <Y97>, <X98>, <Y98>, <X99>, <Y99>]

This command defines the shape of a limit line.

After you have defined the shape of the limit line, you still have to activate it with [CALCulate<1...2>:LIMit<1...2>:UPPer:SElect](#) on page 375 before it takes effect.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Parameters:

<Name>	String containing the name of the limit line. Note: if a limit line with the same name already exists, it is over-written.
<Description>	String containing a comment for the limit line.
<X-unit>	HZ S M Unit of the x-axis.
<X-scale>	ABSolute RELative Scale of the x-axis.
<Y-unit>	DB DBM DBMV DBUV DBUA V VOLT W WATT DBUVm DBUam V_M W_M2 VSWR Unit of the y-axis.

<X0...X99>	Data points on the x-axis. Note: a limit line may consist of up to 100 horizontal data points.
<Y0...Y99>	Data points on the y-axis.
Example:	<pre>CALC:LIM:DEF 'Line','Example',HZ,ABS,DBM,10000000,-10, 10000000,0,20000000,0</pre> Defines a limit line with three data points.
Usage:	Setting only

CALCulate<1...2>:LIMit<1...2>:DELe

This command deletes a limit line.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Example:

```
CALC:LIM2:DEL
```


Deletes the second limit line.

CALCulate<1...2>:DLINe <LinePosition>

This command defines the position of a display line.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<LinePosition> Numeric value with a variable range and unit.
You can use any unit you want, the R&S Cable Rider ZPH then converts the unit to the currently selected unit. If you omit a unit, the R&S Cable Rider ZPH uses the currently selected unit.

*RST: – (STATe to OFF)
Default unit: dBm

Example:

```
CALC:DLIN -20dBm
```


Sets the display line threshold to -20 dBm.

CALCulate<1...2>:DLINe:STATe <State>

This command turns display lines on and off.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:<State> ON | OFF
*RST: OFF**Example:**CALC:DLIN:STAT OFF
Turns on the display line.**CALCulate<1...2>:LIMit<1...2>:FAIL?**

This command queries the result of a limit check.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end before reading out the result. This is only possible in single sweep mode.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Example:INIT;*WAI
CALC:LIM1:FAIL?
Performs a measurement and queries the result of the check for limit line 1.**Usage:**

Query only

CALCulate<1...2>:LIMit<1...2>:STATe <State>

This command turns a limit check on and off.

You can query the result of the limit check with [CALCulate<1...2>:LIMit<1...2>:FAIL?](#) on page 374.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Parameters:<State> ON | OFF
*RST: OFF**Example:**CALC:LIM1:STAT ON
Switches on the limit check for limit line 1.**CALCulate<1...2>:LIMit<1...2>:UNIT:X?**

This command queries the horizontal unit of a limit line.

This command is a query and therefore has no *RST value.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Example:

CALC:LIM1:UNIT:X?

Queries the x-unit of the first limit line.

Usage:

Query only

CALCulate<1...2>:LIMit<1...2>:UNIT[:Y]?

This command queries the vertical unit of a limit line.

This command is a query and therefore has no *RST value.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Example:

CALC:LIM1:UNIT?

Queries the y-unit of the first limit line.

Usage:

Query only

CALCulate<1...2>:LIMit<1...2>:LOWer:SElect <LimitLine>

This command selects the lower limit line.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Parameters:

<LimitLine> String containing the filename of the lower limit line.

Example:

CALC:LIM1:LOW:SEL 'GSM_Lower.rellim'

Selects the lower limit line.

Usage:

Setting only

CALCulate<1...2>:LIMit<1...2>:UPPer:SElect <LimitLine>

This command selects the upper limit line.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Parameters:

<LimitLine> String containing the filename of the upper limit line.

Example:

CALC:LIM1:UPP:SEL 'GSM_Upper.rellim'
Selects the upper limit line.

Usage:

Setting only

CALCulate<1...2>:LIMit<1...2>:LOWer:THReshold <Threshold>

This command defines the level of a lower threshold limit line.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Parameters:

<Threshold> Numeric value whose unit depends on the unit you have currently selected for the vertical axis.
Default unit: dBm

Example:

CALC:LIM1:LOW:THR -10DBM
Defines a threshold of -10 dBm.

CALCulate<1...2>:LIMit<1...2>:UPPer:THReshold <Threshold>

This command defines the level of an upper threshold limit line.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Parameters:

<Threshold> Numeric value whose unit depends on the unit you have currently selected for the vertical axis.
Default unit: dBm

Example: `CALC:LIM1:UPP:THR -10DBM`
Defines a threshold of -10 dBm.

14.6.2.8 Configuring and Using Measurement Functions

This chapter provides information on how to configure one-port measurements with the signal source. The structure follows the order of the actual operation sequence used when performing a measurement:

To perform the actual measurement, use the commands described in [Chapter 14.6.2.4, "Performing Measurements"](#), on page 351.

- [Selecting the Cable Characteristics](#)..... 377
- [Selecting the Measurement Mode](#)..... 378
- [Selecting the Measurement Format](#)..... 378
- [Reading Out Measurement Results](#)..... 380
- [Calibrating the Measurement](#)..... 382
- [Working with a DTF List](#)..... 385

Selecting the Cable Characteristics

The following commands define the cable characteristics for the cable you are testing.

List of commands

<code>CALCulate<1...2>:DTF:CABLe:LENGth</code>	377
<code>CALCulate<1...2>:DTF:CABLe:PRESet</code>	377

`CALCulate<1...2>:DTF:CABLe:LENGth <CableLength>`

This command sets the cable length.

Suffix:

`<1...2>` 1...2

Parameters for setting and query:

`<CableLength>` Numeric value in the range from 3 m to 1500 m.
 *RST: 20 m
 Default unit: M

Example: `CALCulate:DTF:CAB:LENG 2 M`
Sets the cable length to 2 meter.

`CALCulate<1...2>:DTF:CABLe:PRESet <CableModel>`

This command selects the cable model.

The numeric suffix at `CALCulate` is irrelevant for this command.

Suffix:

`<1...2>` 1...2

Parameters:

`<CableModel>` String containing the filename of the cable model.

Example: `CALC:DTF:CAB:PRES '5088-HLFR.CBLMOD'`
Selects the cable model from the file 5088-HLFR.CBLMOD

Selecting the Measurement Mode

The following commands select the measurement mode.

List of commands

[MEASurement<1...2>:MODE](#)..... 378

MEASurement<1...2>:MODE <MeasMode>

This command selects the measurement mode.

The numeric suffix at MEASurement is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<MeasMode> DTFault | REFlection | LOSS

DTFault

Selects the distance-to-fault measurement.

REFlection

Selects the reflection measurement (S11).

LOSS

Selects the cable loss measurement.

*RST: REFlection

Example: `MEAS:MODE LOSS`
Activates cable loss measurement.

Selecting the Measurement Format

The following commands select the measurement format in CAT mode.

List of commands

[CALCulate<1...2>:TRACe:VSWR:MAX\[:STATe\]](#).....378

[MEASurement<1...2>:FORMat](#)..... 379

[CALCulate<1...2>:TRACe:CABLe:LENGth:RESult?](#).....379

[CALCulate<1...2>:TRACe:CABLe:LENGth\[:STATe\]](#)..... 380

CALCulate<1...2>:TRACe:VSWR:MAX[:STATe] <State>

This command turns the display of the maximum and average VSWR on and off.

Use [CALCulate<1...2>:TRACe:VSWR:AVG:RESult?](#) on page 381 and [CALCulate<1...2>:TRACe:VSWR:MAX:RESult?](#) on page 382 to query the corresponding results.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:
 <1...2> 1...2

Parameters:
 <State> ON | OFF

ON
 Turns on the display of the maximum and average VSWR.

OFF
 Turns off the display of the maximum and average VSWR.

***RST:** OFF

Example: CALC:TRAC:VSWR:MAX:STAT ON
 Displays the VSWR results.

MEASurement<1...2>:FORMat <MeasFormat>

This command selects the measurement format.

The numeric suffix at MEASurement is irrelevant for this command.

Suffix:
 <1...2> 1...2

Parameters:
 <MeasFormat> MAGNitude | PHASe | VSWR | REFLection | SMITH | LOSS

MAGNitude
 Selects the magnitude format.

PHASe
 Selects the phase format.

VSWR
 Selects the VSWR format.

REFLection
 Selects the reflection coefficient format.

SMITH
 Selects the smith chart.

LOSS
 Selects the cable loss format.

***RST:** MAGNitude

Example: MEAS:FORM SMIT
 Displays the reflection in a Smith Chart.

CALCulate<1...2>:TRACe:CABLe:LENGth:RESult?

This command queries the results of the electrical cable length.

The numeric suffix at CALCulate is irrelevant for this command.

This command is a query and therefore has no *RST value.

Suffix:

<1...2> 1...2

Parameters:

<Return values> ELength
Numerical value in mm

Example:

CALC:TRAC:CABL:LENG:RES?
Queries the measurement result of the electrical cable length.

Usage:

Query only

CALCulate<1...2>:TRACe:CABLe:LENGth[:STATe] <State>

This command turns the electrical length format on and off.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<State> ON | OFF
*RST: OFF

Example:

CALC:TRAC:CABL:LENG ON
Activates the electrical cable length.

Reading Out Measurement Results

The following commands query various measurement results.

List of commands

CALCulate<1...2>:MARKer<1...6>:FUNCTION:DTF:PEAK:RESult?	380
CALCulate<1...2>:TRACe:CABLe:LOSS:RESult?	381
CALCulate<1...2>:TRACe:VSWR:AVG:RESult?	381
CALCulate<1...2>:TRACe:LIMit:VSWR:FAIL?	381
CALCulate<1...2>:TRACe:VSWR:MAX:RESult?	382

CALCulate<1...2>:MARKer<1...6>:FUNCTION:DTF:PEAK:RESult?

This command queries the DTF peak result on the marker position.

The numeric suffix at CALCulate is irrelevant for this command.

The numeric suffix at MARKer define the marker position.

Suffix:

<1...2> 1...2

<1...6> 1...6

Example:

CALC:MARK1:FUNC:DTF:PEAK:RES?
Return the DTF peak value at marker 1 postion.

Usage: Query only

CALCulate<1...2>:TRACe:CABLe:LOSS:RESult?

This command queries the cable loss measurement result.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<Return values> Cable loss in dB.

Example:

CALC:TRAC:CABL:LOSS:RES?
Returns the cable loss in dB.

Usage: Query only

CALCulate<1...2>:TRACe:VSWR:AVG:RESult?

This command queries the average VSWR measurement result.

The command is available when the calculation of the VSWR has been turned on with [CALCulate<1...2>:TRACe:VSWR:MAX\[:STATe\]](#) on page 378.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<Return values> Average VSWR (no unit)

Example:

CALC:TRAC:VSWR:MAX:STAT ON
CALC:TRAC:VSWR:AVG:RES?
Queries the average VSWR.

Usage: Query only

CALCulate<1...2>:TRACe:LIMit:VSWR:FAIL?

This command queries the results of the limit check for the VSWR measurement format.

The numeric suffix at CALCulate is irrelevant for this command.

This command is a query and therefore has no *RST value.

Suffix:

<1...2> 1...2

Parameters:

<Return values> 0 | 1
0
Limit check fail.

1

Limit check pass.

Example:

CALC:TRAC:LIM:VSWR:FAIL?

Queries the results of the limit check.

Usage:

Query only

CALCulate<1...2>:TRACe:VSWR:MAX:RESult?

This command queries the maximum VSWR measurement result.

The command is available when the calculation of the VSWR has been turned on with
 CALCulate<1...2>:TRACe:VSWR:MAX[:STATe] on page 378.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<Return values> Maximum VSWR (no unit)

Example:

CALC:TRAC:VSWR:MAX:STAT ON

CALC:TRAC:VSWR:MAX:RES?

Queries the maximum VSWR.

Usage:

Query only

Calibrating the Measurement

The following commands control calibration of cable measurements.

List of commands

CALibration<1...2>:ABORt.....	382
CALibration<1...2>:ATTenuation:STATus?.....	383
CALibration<1...2>:CONTinue?.....	383
CALibration<1...2>:MODE?.....	383
CALibration<1...2>:STARt?.....	384
CALibration<1...2>:STATus?.....	385

CALibration<1...2>:ABORt

This command aborts calibration.

The numeric suffix at CALibration is irrelevant for this command.

This command is an event and therefore has no query and no *RST value.

Suffix:

<1...2> 1...2

Example:

CAL:ABOR

Aborts calibration.

Usage: Event

CALibration<1...2>:ATTenuation:STATus?

This command queries the current calibration state.

The numeric suffix at CALibration is irrelevant for this command.

This command is a query and therefore has no *RST value.

Suffix:

<1...2> 1...2

Parameters:

<Return values>

<NORMalized>

Full calibration.

<APPRoximate>

Approximate calibration (caused by a change of attenuation, for example): measurement uncertainty must be anticipated

Example:

CAL:ATT:STAT?

Queries the calibration status of the R&S Cable Rider ZPH.

Usage: Query only

CALibration<1...2>:CONTinue?

This command resumes calibration after a calibration standard has been connected.

After the command has been sent, it returns instructions on what to do to continue the calibration process and finish it successfully.

The numeric suffix at CALibration is irrelevant for this command.

This command is a query and therefore has no *RST value.

Suffix:

<1...2> 1...2

Example:

CAL:CONT?

Resumes calibration and would return, e.g.:

'Connect Load to Port 1'

Connect the load before resuming calibration.

Usage: Query only

CALibration<1...2>:MODE?

This command queries the general current calibration state.

The numeric suffix at CALibration is irrelevant for this command.

This command is a query and therefore has no *RST value.

Suffix:	
<1...2>	1...2
Parameters:	
<Return values>	<0> Not calibrated <1> Calibrated
Example:	CAL:MODE? If current calibration state is not calibrated, a '0' is returned.
Usage:	Query only

CALibration<1...2>:START? <CalibrationType>

This command selects a calibration method and initiates calibration.

After the command has been sent, it returns instructions on what to do to continue the calibration process and finish it successfully.

The numeric suffix at CALibration is irrelevant for this command.

This command is a query and therefore has no *RST value.

Suffix:	
<1...2>	1...2
Parameters:	
<CalibrationType>	S11Cal S11easy S11Cal Full 1-Port calibration S11easy Easy 1-Port calibration (Port 1) (CAT mode only)
<Return values>	<Connect Open to Port 1> Connect the open to port 1 before resuming calibration. <Connect Short to port 1> Connect the short to port 1 before resuming calibration. <Connect Load to port 1> Connect the short to port 1 before resuming calibration. <Disconnect DUT from port 1> <Calibration done> Calibration has been finished. No further actions required.
Example:	CAL:STAR? S11easy Selects and initiates an Easy 1-Port calibration and would return e.g.: Calibration done Calibration has been finished. No further actions required.
Usage:	Query only

CALibration<1...2>:STATus?

This command queries if the R&S Cable Rider ZPH is fully calibrated for the current measurement.

The numeric suffix at CALibration is irrelevant for this command.

This command is a query and therefore has no *RST value.

Suffix:

<1...2> 1...2

Parameters:

<Return values> NORMalized | APPRoximate

NORMalized

Full factory or user calibration

APPRoximate

Approximate calibration: measurement uncertainty must be anticipated

Example:

CAL:STAT?

Queries the calibration status of the R&S Cable Rider ZPH.

Usage:

Query only

Working with a DTF List

The following commands configure the DTF peak list. The peak list is available for DTF measurements only.

List of commands

CALCulate<1...2>:DTF:CABLe:LENGth.....	385
CALCulate<1...2>:TRANsform:DTFault:PEAK:COUNt?.....	386
CALCulate<1...2>:TRANsform:DTFault:PEAK:DATA<1...10>?.....	386
CALCulate<1...2>:TRANsform:DTFault:PEAK:STATe.....	386
CALCulate<1...2>:TRANsform:DTFault:PEAK:THReshold.....	387
CALCulate<1...2>:MARKer<1...6>:FUNCTion:DTF:PEAK:THReshold.....	387

CALCulate<1...2>:DTF:CABLe:LENGth <CableLength>

This command sets the cable length.

Suffix:

<1...2> 1...2

Parameters for setting and query:

<CableLength> Numeric value in the range from 3 m to 1500 m.

*RST: 20 m

Default unit: M

Example:

CALCulate:DTF:CAB:LENG 2 M

Sets the cable length to 2 meter.

CALCulate<1...2>:TRANSform:DTFault:PEAK:COUNt?

The following commands configure the DTF peak list. The peak list is available for DTF measurements only.

The numeric suffix at CALibration is irrelevant for this command.

This command is a query and therefore has no *RST value.

Suffix:

<1...2> 1...2

Parameters:

<Return values> <DTFListEntries>

Example:

CALC:TRAN:DTF:PEAK:COUN?Z

Queries the number of values in the DTF list.

Usage:

Query only

CALCulate<1...2>:TRANSform:DTFault:PEAK:DATA<1...10>?

This command queries the DTF list.

The numeric suffix at CALibration is irrelevant for this command and the number suffix at DATA selects an entry in the DTF list.

This command is a query and therefore has no *RST value.

Suffix:

<1...2> 1...2

<1...10> 1...10

Parameters:

<Retrun values> <distance>,<return loss>

The number of values depends on the number of peaks that exceed the threshold you can set with [CALCulate<1...2>:TRANSform:DTFault:PEAK:THReshold](#) on page 387.

Example:

CALC:TRAN:DTF:PEAK:RES2?

Reads out the second result in the DTF peak list.

Usage:

Query only

CALCulate<1...2>:TRANSform:DTFault:PEAK:STATe <State>

This command turns the display of the DTF list on and off.

Suffix:

<1...2> 1...2

Parameters:

<State> ON | OFF

ON

DTF list turns on.

OFF

DTF list turns off.

Example:

`CALC:TRAN:DTF:PEAK ON`
Turns on the DTF peak list.

CALCulate<1...2>:TRANSform:DTFault:PEAK:THReshold <Threshold>

This command defines the threshold for the DTF list.

All values that exceed the threshold are in the DTF list. You can query the list with `CALCulate<1...2>:TRANSform:DTFault:PEAK:DATA<1...10>?` on page 386.

The numeric suffix at CALibration is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<Threshold> The unit depends on the measurement format.

Example:

`CALC:TRAN:DTF:PEAK:THR -20`
Sets the threshold to -20 dB.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:DTF:PEAK:THReshold <ThresholdLevel>

This command queries the DTF list.

All values that exceed the threshold are in the DTF list. You can query the list with `CALCulate<1...2>:TRANSform:DTFault:PEAK:DATA<1...10>?` on page 386.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Suffix:

<1...2> 1...2

<1...6> 1...6

Parameters:

<ThresholdLevel> Numeric value that sets the threshold level.
The unit depends on the measurement format.

Example:

`CALC:TRAN:DTF:PEAK:THR -20`
Sets the threshold to -20 dB.

14.6.3 Remote Commands of the Spectrum Analyzer

This section provides a detailed description of all remote control commands required to configure and perform measurements with the spectrum analyzer. These commands are available in spectrum analyzer mode only.



Availability of remote commands for spectrum measurements

Note that the listed remote commands take effect only if you have installed option R&S ZPH-K1 and after you have entered the spectrum analyzer operating mode.

This mode is available only with model .12.

• Configuring the Horizontal Axis.....	388
• Configuring the Vertical Axis.....	392
• Configuring the Tracking Generator.....	397
• Setting the Bandwidth.....	399
• Performing and Triggering Measurements.....	402
• Working with Traces.....	406
• Using Markers.....	411
• Using Display Lines and Limit Lines.....	425
• Configuring and Using Measurement Functions.....	433

14.6.3.1 Configuring the Horizontal Axis

The following commands configure the horizontal (frequency) axis of the active display.



Commands independent of the operating mode

Note that some of the commands for configuring the horizontal axis are also valid for other operating modes. If a command is available in another mode, it is indicated by the list in the respective section.

List of commands

[SENSe:]FREQUENCY:CENTer.....	388
[SENSe:]FREQUENCY:CENTer:STEP.....	389
[SENSe:]FREQUENCY:CENTer:STEP:LINK.....	389
[SENSe:]FREQUENCY:INPut:MODE<1..3>.....	389
[SENSe:]FREQUENCY:MODE.....	390
[SENSe:]FREQUENCY:OFFSet.....	390
[SENSe:]FREQUENCY:SPAN.....	391
[SENSe:]FREQUENCY:SPAN:AUTO.....	391
[SENSe:]FREQUENCY:SPAN:FULL.....	391
[SENSe:]FREQUENCY:START.....	391
[SENSe:]FREQUENCY:STOP.....	392

[SENSe:]FREQUENCY:CENTer <CenterFrequency>

This command defines the center frequency of the R&S Cable Rider ZPH.

In spectrum analyzer mode, the command also defines the measuring frequency for time domain measurements (span = 0).

Parameters:

<CenterFrequency> Range: Depends on the operating mode and is specified in the data sheet.

*RST: $f_{max} / 2$ with f_{max} = maximum frequency

Default unit: MHz

Example:

`FREQ:CENT 100MHz`

Defines a center frequency of 100 MHz.

[SENSe:]FREQuency:CENTer:STEP <Stepsize>

This command defines the center frequency step size.

Parameters:

<Stepsize> Range: 1 Hz to f_{max}

*RST: - (AUTO 0.1*SPAN is switched on)

Default unit: MHz

Example:

`FREQ:CENT:STEP 120MHz`

Defines a CF step size of 120 MHz.

[SENSe:]FREQuency:CENTer:STEP:LINK <CouplingState>

This command couples and decouples the center frequency step size to the span.

For time domain measurements, the command couples the step size to the resolution bandwidth.

Parameters:

<CouplingState> CENTERf | DIVTen | OFF

CENTERf

Sets the step size equal to the center frequency.

DIVTen

Couples the step size to the span (10 %).

OFF

Turns off the coupling (manual step size).

*RST: DIVTen

Example:

`FREQ:CENT:STEP:LINK DIVT`

Couples the step size to 10% of the span.

[SENSe:]FREQuency:INPut:MODE<1..3> <InputMode>

This command selects the frequency mode. Select the Channel frequency mode only if you want to work with channel tables. In this case, the input of the center frequency is not a frequency value, but a channel number.

Suffix:

<1..3> 1..3

Parameters:

<InputMode> CHANnel | FREQ

CHANnel

Sets the frequency input mode to selection of a channel.

FREQ

Sets the frequency input mode to frequency input (in Hz).

*RST: FREQ

Example:

FREQ:INP:MODE CHAN

Sets the frequency mode to work with channel tables.

[SENSe:]FREQuency:MODE <SweepMode>

This command sets the measurement domain (frequency or time).

In the time domain (CW and FIXed), set the frequency with:

[\[SENSe:\]FREQuency:CENTer](#) on page 341

In the frequency domain (SWEep), set the frequency with:

[\[SENSe:\]FREQuency:CENTer](#) on page 341[\[SENSe:\]FREQuency:SPAN](#) on page 342[\[SENSe:\]FREQuency:START](#) on page 343[\[SENSe:\]FREQuency:STOP](#) on page 343**Parameters:**

<SweepMode> SWEep | CW | FIXed | SCAN

SWEep

Selects the frequency domain (span > 0).

CW

Selects the time domain (span = 0).

FIXed

Selects the time domain (span = 0).

SCAN

Selects the frequency domain (span > 0).

*RST: SWEep

Example:

FREQ:MODE SWE

Activates frequency domain measurements.

[SENSe:]FREQuency:OFFSet <FreqOffset>

This command defines a frequency offset.

Parameters:

<FreqOffset> Range: -100 GHz to 100 GHz
 *RST: 0 Hz
 Default unit: GHz

Example:

FREQ:OFFS 1GHZ
 Defines a frequency offset of 1 GHz.

[SENSe:]FREQuency:SPAN <FrequencySpan>

This command defines the frequency span.

If you set a span of 0 Hz, the R&S Cable Rider ZPH starts a measurement in the time domain.

Parameters:

<FrequencySpan> Range: Specified in the data sheet.
 *RST: fmax with fmax = maximum frequency
 Default unit: GHz

Example:

FREQ:SPAN 10MHz
 Defines a span of 10 MHz.

[SENSe:]FREQuency:SPAN:AUTO <State>

This command turns on or off the automatic calculation of the ideal span.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

FREQ:SPAN:AUTO ON
 Turns on the automatic span determination.

[SENSe:]FREQuency:SPAN:FULL

This command restores the full span.

This command is an event and therefore has no query and no *RST value.

Example:

FREQ:SPAN:FULL
 Restores full span.

Usage:

Event

[SENSe:]FREQuency:START <StartFrequency>

This command defines the start frequency for measurements in the frequency domain (span > 0).

Parameters:

<StartFrequency> Range: Depends on the operating mode and is specified in the datasheet.
 *RST: 0 Hz
 Default unit: GHz

Example:

FREQ:STAR 20MHz
 Defines a start frequency of 20 MHz.

[SENSe:]FREQuency:STOP <StopFrequency>

This command defines the stop frequency for measurements in the frequency domain (span > 0).

Parameters:

<StopFrequency> Range: Depends on the operating mode and is specified in the datasheet.
 *RST: fmax
 Default unit: GHz

Example:

FREQ:STOP 2000MHz
 Defines a stop frequency of 2 GHz.

14.6.3.2 Configuring the Vertical Axis

The following commands configure the vertical (level) axis and level parameters of the active display.

**Commands independent of the operating mode**

Note that some of the commands for configuring the vertical axis are also valid for other operating modes. If a command is available in another mode, it is indicated by the list in the respective section.

List of commands

DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:ADJust.....	393
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y:SPACing.....	393
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe].....	393
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RLEVel.....	393
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RLEVel:OFFSet.....	394
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RPOSition.....	394
INPut:ATTenuation.....	394
INPut:ATTenuation:MODE.....	395
INPut:ATTenuation:AUTO.....	395
INPut:GAIN:STATe.....	395
INPut:IMPedance.....	396
[SENSe:]CORRection:TRANsducer<1...2>[:STATe].....	396
[SENSe:]CORRection:TRANsducer<1...2>:SELEct.....	396
[SENSe:]CORRection:TRANsducer<1...2>:UNIT?.....	396
UNIT<1...2>:POWER.....	397

DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:ADJust

This command automatically scales the vertical axis for optimum display results.

This command is an event and therefore has no query and no *RST value.

The numeric suffix at DISPlay and TRACe are irrelevant for this command.

Example: `DISP:TRAC:Y:ADJ`
Adjusts the y-axis.

Usage: Event

DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y:SPACing <ScalingType>

This command selects the scaling type of the vertical axis.

The numeric suffix at DISPlay and TRACe are irrelevant for this command.

Parameters:
<ScalingType> LINear | LOGarithmic
LINear
Selects a linear scale (%).
LOGarithmic
Selects a logarithmic scale.
*RST: LOGarithmic

Example: `DISP:TRAC:Y:SPAC LIN`
Selects linear scaling of the level axis.

DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe] <DisplayRange>

This command defines the display range of the vertical axis.

Note that you have to set a logarithmic scaling before you can use this command with `DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y:SPACing` on page 393. For a linear scale, you cannot modify the display range as it is fixed.

The numeric suffix at DISPlay and TRACe are irrelevant for this command.

Parameters:
<DisplayRange> Range: 1 dB to 150 dB
*RST: 100 dB
Default unit: dB

Example: `DISP:TRAC:Y 110dB`
Sets the display range to 110 dB.

DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RLEVel <RefLevel>

This command defines the reference level.

With a reference level offset $\neq 0$, the value range of the reference level is modified by the offset. You can set the offset with `DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RLEVel:OFFSet` on page 394.

The numeric suffix at DISPlay and TRACe are irrelevant for this command.

Parameters:

<RefLevel> Sets the reference level; the unit depends on `UNIT<1...2>:POWeR` on page 397.

Range: Specified in the data sheet.

*RST: -20 dBm

Default unit: dBm

Example:

`DISP:TRAC:Y:RLEV -60dBm`

Sets the reference level to -60 dBm.

DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RLEVel:OFFSet <RefLvlOffset>

This command defines a reference level offset.

The numeric suffix at DISPlay and TRACe are irrelevant for this command.

Parameters:

<RefLvlOffset> Sets the reference level offset.

Range: -100 dB to 100 dB

*RST: 0 dB

Default unit: dB

Example:

`DISP:TRAC:Y:RLEV:OFFS -10dB`

DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RPOStion <RefLvlPosition>

This command defines the position of the reference level on the display grid.

First, you have to set a logarithmic scale for the vertical axis with `DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y:SPACing` on page 393. For a linear scale, you cannot modify the reference position.

The numeric suffix at DISPlay and TRACe are irrelevant for this command.

Parameters:

<RefLvlPosition> Defines the reference position in %.

Range: 0 to 10

*RST: 10

Example:

`DISP:TRAC:Y:RPOS 5`

Sets the reference position to the 5th grid line.

INPut:ATTenuation <Attenuation>

This command defines the input attenuation.

The attenuation is coupled to the reference level. If you set the attenuation independently, the R&S Cable Rider ZPH turns off this coupling.

The R&S Cable Rider ZPH adjusts the reference level if it cannot be set for the current RF attenuation.

Parameters:

<Attenuation> Range: 0 dB to 40 dB
 *RST: 0 dB (AUTO is ON)
 Default unit: dB

Example:

INP:ATT 30dB
 Defines an attenuation of 30 dB and deactivates coupling to the reference level.

INPut:ATTenuation:MODE <AttenMode>

This command selects the attenuation mode.

Parameters:

<AttenMode> LDISTortion | LNOise
LDISTortion
 Selects "Auto Low Distortion" mode.
LNOise
 Selects "Auto Low Noise" mode.
 *RST: LDIS

Example:

INP:ATT:MODE LNO
 Sets the attenuation mode to Auto Low Noise.

INPut:ATTenuation:AUTO <State>

This command couples and decouples input attenuation to the reference level.

Parameters:

<State> ON | OFF
 *RST: ON

Example:

INP:ATT:AUTO ON
 Couples the attenuation set on the attenuator to the reference level.

INPut:GAIN:STATe <State>

This command turns the preamplifier on and off.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

INP:GAIN:STAT ON
 Activates the preamplifier

INPut:IMPedance <Impedance>

This command selects the nominal input impedance. The set impedance is taken into account in all level indications of results.

The setting 75 Ω should be selected, if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75 Ω / 50 Ω).

Parameters:

<Impedance> 50 | 75
 *RST: 50 Ω
 Default unit: Ohm

Example:

INP:IMP 75
 Sets the input impedance to 75 Ohms.

[SENSe:]CORRection:TRANsducer<1...2>[:STATe] <State>

This command turns a transducer factor on and off.

Before turning it on, you have to select a transducer factor with [\[SENSe:\]CORRection:TRANsducer<1...2>:SELeCt](#) on page 396.

The numeric suffix at TRANsducer specifies the primary or secondary transducer.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CORR:TRAN1 ON
 Activates the primary transducer.

[SENSe:]CORRection:TRANsducer<1...2>:SELeCt <TransducerName>

This command selects a transducer factor.

If <name> does not exist yet, a new transducer factor is created.

The numeric suffix at TRANsducer specifies the primary or secondary transducer.

Parameters:

<TransducerName> String containing the filename of the transducer factor.
 If the file does not exist, the R&S Cable Rider ZPH creates a new transducer factor.

Example:

CORR:TRAN2:SEL 'FSH-Z38.sectrd'
 Selects the FSH-Z38 secondary transducer factor.

[SENSe:]CORRection:TRANsducer<1...2>:UNIT?

This command queries the unit of the current transducer factor.

The numeric suffix at TRANsducer specifies the primary or secondary transducer.

Example: `CORR:TRAN2:UNIT?`
Queries the unit of the primary transducer.

Usage: Query only

UNIT<1...2>:POWer <Unit>

This command selects the unit of the vertical axis.

The availability of units depends on the operating mode and type of measurement.

The numeric suffix at UNIT is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<Unit> DBM | DBMV | DBUV | DUVE | DMVE | VEMF | DBUA | VOLT |
WATT | DUVM | DUAM | V | W | V_M | W_M2 | DB | RHO |
MRHO

Note that the availability of units depends on the operating mode.

*RST: DBM

Example: `UNIT:POW DBM`
Sets the power unit to dBm.

14.6.3.3 Configuring the Tracking Generator

The following commands configure the characteristics of the tracking generator of the R&S Cable Rider ZPH.

List of commands

<code>SOURce:TG:ATTenuation</code>	397
<code>SOURce:TG:AUTO</code>	398
<code>SOURce:TG:FREQuency</code>	398
<code>SOURce:TG:FREQuency:AUTO</code>	398
<code>SOURce:TG:FREQuency:OFFSet</code>	399
<code>SOURce:TG:POWer</code>	399
<code>SOURce:TG[:STATe]</code>	399

SOURce:TG:ATTenuation <OutputLevel>

This command defines the relative output level of the tracking generator.

Parameters:

<OutputLevel> Range: 0 to 40
*RST: 0
Default unit: DB

Example: `SOUR: TG: ATT 40`
Sets the attenuation to 40 dB and therefore an output level of – 40 dBm

SOURce: TG: AUTO <TgSourceMode>

This command turns the generation of a CW signal in zero span on and off.

In case of zero span, you can define a fixed frequency for the generated signal `SOURce: TG: FREQuency` and turn the tracking generator on and off (`SOURce: TG [ : STATE ]`).

Parameters:

<TgSourceMode> ON | OFF
*RST: OFF

Example: `SOUR: TG: AUTO ON`
Selects zero span measurement mode.

SOURce: TG: FREQuency <TgSourceFrequency>

This command defines the frequency of the generated signal.

Available when zero span has been turned on, for example with `SOURce: TG: AUTO`.

Parameters:

TgSrcFreq Frequency of the CW signal.
*RST: OFF
Default unit: Hz

Example: `SOUR: TG: AUTO ON`
`SOUR: TG: FREQ 500MHZ`
`SOUR: TG: POW -10`

Generates a CW signal with 500 MHz and a power of -10 dBm in zero span.

SOURce: TG: FREQuency: AUTO <TgAutoFrequency>

This command coupled the frequency of the CW signal as the center frequency of the current measurement.

Parameters:

<TgAutoFrequency> *RST: OFF
Default unit: Hz

Example: `SOUR: TG: AUTO ON`
`SOUR: TG: FREQ: AUTO ON`
Generates a CW signal with frequency coupled to the center frequency of the current measurement.

SOURce:TG:FREQuency:OFFSet <TgSourceFrequencyOffset>

This command defines a mathematical frequency offset for the tracking generator

Parameters:

TgSrcFreqOffset Frequency offset of the TG source.
 Range: 0 to 1.95
 *RST: 0
 Default unit: GHZ

Example:

SOUR:TG:FREQ:OFFS 1
 Generates a tracking generator signal with an offset frequency of 1 GHz.

SOURce:TG:POWer <TgOutputLevel>

This command defines the absolute output level of the tracking generator.

Parameters:

<TgOutputLevel> Numeric value in the range from 0 to -40 dBm.
 *RST: 0
 Default unit: dBm

Example:

SOUR:TG:POW -20
 Defines an output level of -20 dBm.

SOURce:TG[:STATe] <TgSourceState>

This command turns the tracking generator on and off.

Available when zero span has been turned on, for example with [SOURce:TG:AUTO](#).

Parameters:

<TgSourceState> ON | OFF
 *RST: OFF

Example:

SOUR:TG:AUTO ON
 SOUR:TG OFF
 Stops the generation of a CW signal.

14.6.3.4 Setting the Bandwidth

The following commands configure the filter bandwidths of the R&S Cable Rider ZPH. Note that both groups of commands ([BANDwidth](#) and [BWIDth](#)) are the same.

List of commands

[SENSe:]BANDwidth[:RESolution]	400
[SENSe:]BWIDth[:RESolution]	400
[SENSe:]BANDwidth[:RESolution]:AUTO	400
[SENSe:]BWIDth[:RESolution]:AUTO	400
[SENSe:]BANDwidth:VIDeo	401

[SENSe:]BWIDth:VIDeo.....	401
[SENSe:]BANDwidth:VIDeo:AUTO.....	401
[SENSe:]BWIDth:VIDeo:AUTO.....	401

[SENSe:]BANDwidth[:RESolution] <ResolutionBW>

This command defines the resolution bandwidth.

Parameters:

<ResolutionBW> Range: 1 Hz to 3 MHz
 *RST: - (AUTO is set to ON)
 Default unit: GHz

Example: BAND 100 kHz
 Sets the resolution bandwidth to 100 kHz.

[SENSe:]BWIDth[:RESolution] <ResolutionBW>

This command defines the resolution bandwidth.

Parameters:

<ResolutionBW> Range: 1 Hz to 3 MHz
 *RST: - (AUTO is set to ON)
 Default unit: GHz

Example: BWID 100 kHz
 Sets the resolution bandwidth to 100 kHz.

[SENSe:]BANDwidth[:RESolution]:AUTO <State>

This command couples and decouples the resolution bandwidth to the span.

Parameters:

<State> ON | OFF
 *RST: ON

Example: BAND:AUTO OFF
 Decouples the resolution bandwidth from the span.

[SENSe:]BWIDth[:RESolution]:AUTO <State>

This command couples and decouples the resolution bandwidth to the span.

Parameters:

<State> ON | OFF
 *RST: ON

Example: BWID:AUTO OFF
 Decouples the resolution bandwidth from the span.

[SENSe:]BANDwidth:VDeo <VideoBW>

This command defines the video bandwidth.

Parameters:

<VideoBW> Range: 1 Hz to 3 MHz
 *RST: - (AUTO is set to ON)
 Default unit: GHz

Example: BAND:VID 10kHz
 Sets the video bandwidth to 10 kHz.

[SENSe:]BWIDth:VDeo <VideoBW>

This command defines the video bandwidth.

Parameters:

<VideoBW> Range: 1 Hz to 3 MHz
 *RST: - (AUTO is set to ON)
 Default unit: GHz

Example: BWID:VID 10kHz
 Sets the video bandwidth to 10 kHz.

[SENSe:]BANDwidth:VDeo:AUTO <State>

This command couples and decouples the video bandwidth to the resolution bandwidth.

Parameters:

<State> ON | OFF
 *RST: ON

Example: BAND:VID:AUTO OFF
 Turns off video bandwidth coupling.

[SENSe:]BWIDth:VDeo:AUTO <State>

This command couples and decouples the video bandwidth to the resolution bandwidth.

Parameters:

<State> ON | OFF
 *RST: ON

Example: BWID:VID:AUTO OFF
 Turns off video bandwidth coupling.

14.6.3.5 Performing and Triggering Measurements

The following commands control the actual measurement process, including trigger functionality.

- [Performing the Measurement](#).....402
- [Triggering Measurements](#).....404

Performing the Measurement

The following commands initialize a measurement and setup the sweep.

List of commands

*WAI	402
ABORt	402
INITiate[:IMMediate]	402
[SENSe:]SWEEp:COUNT	403
INITiate:CONTinuous	403
[SENSe:]SWEEp:POINTS	403
[SENSe:]SWEEp:TIME	404
[SENSe:]SWEEp:TIME:AUTO	404

***WAI**

Wait to continue

Prevents servicing of the subsequent commands until all preceding commands have been executed and all signals have settled (see also command synchronization and [*OPC](#)).

Usage: Event

ABORt

This command aborts the current measurement and resets the trigger system.

This command is an event and therefore has no query and no *RST value.

Example: ABOR;
 INIT:IMM
 Aborts a measurement and starts a new one.

Usage: Event

INITiate[:IMMediate]

This command initiates a new measurement sequence.

With sweep count > 0 or average count > 0, this means a restart of the indicated number of measurements. With trace functions MAXHold, MINHold and AVERage, the previous results are reset on restarting the measurement.

In single sweep mode, synchronization to the end of the indicated number of measurements can be achieved with the command *OPC, *OPC? or *WAI. In continuous-sweep mode, synchronization to the sweep end is not possible since the overall measurement never ends.

This command is an event and therefore has no query and no *RST value.

Example: INIT:CONT OFF
 DISP:WIND:TRAC:MODE AVER
 Turns on single sweep mode and trace averaging.
 INIT;*WAI
 Starts the measurement and waits for the end of the sweep.

Usage: Event

[SENSe:]SWEep:COUNT <#ofSweeps>

This command defines the number of sweeps included in a single sweep. It also defines the number of sweeps the R&S Cable Rider ZPH uses to average traces or calculate maximum values.

The R&S Cable Rider ZPH performs one sweep for sweep count 0 or 1.

Parameters:

<#ofSweeps> Range: 1 to 999
 *RST: 10

Example: SWE:COUN 64
 Defines a sweep count of 64 sweeps.
 INIT:CONT OFF
 INIT;*WAI
 Turns on single sweep mode, starts the sweep and waits for its end.

INITiate:CONTInuous <State>

This command selects the sweep mode.

Parameters:

<State> ON | OFF
 ON
 Selects continuous sweeps.
 OFF
 Selects single sweep.
 *RST: ON

Example: INIT:CONT OFF
 Turns on single sweep mode.

[SENSe:]SWEep:POINTs <NrofPoints>

This command queries the number of measurement points in a single sweep.

This command is a query and therefore has no *RST value.

Parameters:

<NrofPoints> Returns the number of sweep points.

Example:

SWE:POIN?

Returns the number of sweep points.

[SENSe:]SWEep:TIME <SweepTime>

This command defines the sweep time.

If you set a sweep time with this command, the R&S Cable Rider ZPH decouples the sweep time from the span and the resolution and video bandwidths.

Parameters:

<SweepTime> Range: Specified in the datasheet.
*RST: - (AUTO is set to ON)
Default unit: s

Example:

SWE:TIME 10s

Sets the sweep time to 10 s.

[SENSe:]SWEep:TIME:AUTO <State>

This command couples and decouples the sweep time to the span and the resolution and video bandwidths.

Parameters:

<State> ON | OFF
*RST: ON

Example:

SWE:TIME:AUTO ON

Switches on the coupling to frequency span and bandwidths.

Triggering Measurements

The following commands set up trigger conditions if you are using a trigger for the measurement.

List of commands

[SENSe:]SWEep:EGATe.....	404
[SENSe:]SWEep:EGATe:HOLDoff.....	405
[SENSe:]SWEep:EGATe:LENGth.....	405
[SENSe:]SWEep:EGATe:TIME.....	405
TRIGger[:SEQuence]:LEVel:VIDeo.....	405
TRIGger[:SEQuence]:SLOPe.....	406
TRIGger[:SEQuence]:SOURce.....	406

[SENSe:]SWEep:EGATe <GateTrigger>

This command turns a gated trigger setting mode on and off.

Parameters:

<GateTrigger> ON | OFF
 *RST: OFF

Example:

SWE:EGAT ON
 Activates the gated trigger setting mode.

[SENSe:]SWEep:EGATe:HOLDoff <GateTriggerHoldOff>

This command defines the length of the gate delay.

Parameters:

<GateTriggerHoldOff> Range: 0 s to 100 s
 *RST: 0 s
 Default unit: s

Example:

SWE:EGAT:HOLD 2.5
 Sets a gate delay of 2.5 seconds.

[SENSe:]SWEep:EGATe:LENGth <GateTriggerLength>

This command defines the gate length.

Parameters:

<GateTriggerLength> Range: 10 μ s to 100 s
 *RST: 400 μ s
 Default unit: s

Example:

SWE:EGAT:LENG 2.5
 Sets a gate length of 2.5 seconds.

[SENSe:]SWEep:EGATe:TIME <GateTriggerLength>

This command defines the sweep time for the gated trigger.

Parameters:

<GateTriggerLength> *RST: 400 μ s
 Default unit: s

Example:

SWE:GATE:TIME 4ms
 Sets a sweep time of 4 ms for the gated trigger.

TRIGger[:SEQuence]:LEVel:VIDeo <VideoTrigLevel>

This command defines the level of the video trigger.

Video trigger is available for time domain measurements (span = 0).

Parameters:

<VideoTrigLevel> Range: 0 PCT to 100 PCT
 *RST: 50 PCT

Example: TRIG:LEV:VID 50PCT
Sets the trigger level to 50%.

TRIGger[:SEQuence]:SLOPe <TriggerSlope>

This command selects the slope of the trigger signal.

The trigger slope applies to all trigger sources.

Parameters:

<TriggerSlope> POSitive | NEGative
*RST: POSitive

Example: TRIG:SLOP NEG

TRIGger[:SEQuence]:SOURce <TriggerSource>

This command selects the trigger source.

Parameters:

<TriggerSource> IMMediate | EXTernal | VIDEo | IQPower | GATed

IMMediate

Selects Free Run measurements.

EXTernal

Selects an external trigger.

VIDeo

Selects the video trigger.

IQPower

Selects an IQ Power trigger.

Gated

Selects a gated trigger.

*RST: IMMediate

For more information, see chapter "Setting the Sweep".

Example: TRIG:SOUR EXT
Selects the external trigger input as source of the trigger signal.

14.6.3.6 Working with Traces

The following commands set up the trace and the various functions associated with it, e.g. trace mathematics or the selection of the detector.

List of commands

CALCulate<1...2>:MATH<1...2>[:EXPRession][:DEFine].....	407
CALCulate<1...2>:MATH<1...2>:COPY:MEMory<1...3>.....	407
CALCulate<1...2>:MATH<1...2>:STATe.....	408
DISPlay<1...2>[:WINDow]:TRACe<1...2>[:STATe].....	408
DISPlay<1...2>[:WINDow]:TRACe<1...2>:MEMory<1...3>[:STATe].....	408
DISPlay<1...2>[:WINDow]:TRACe<1...2>:MODE.....	408

FORMat:BORDer.....	409
FORMat[:DATA].....	409
[SENSe:]DETEctor<1...2>[:FUNCTion].....	410
[SENSe:]DETEctor<1...2>[:FUNCTion]:AUTO.....	410
TRACe<1...2>[:DATA]?.....	410

CALCulate<1...2>:MATH<1...2>[:EXPRession][:DEFine] <MathExpression>

This command defines the mathematical expression for relating traces to trace 1.

You have to activate trace mathematics with CALCulate<1...2>:MATH<1...2>:STATe on page 408 first.

The numeric suffix at CALCulate is irrelevant for this command.

The numeric suffix at MATH selects the number of the trace.

Parameters:

<MathExpression>	<list>
	(IMPLied - memory)
	Subtracts the trace in memory from the current trace.
	(memory - IMPLied)
	Subtracts the current trace from the trace in memory.

Example:

CALC:MATH (memory - IMPLied)
Selects the subtraction of the current trace from trace in the memory.

CALCulate<1...2>:MATH<1...2>:COPY:MEMory<1...3> [<MemorySlot>]

This command stores the selected trace into the memory trace of the R&S Cable Rider ZPH.

This command is an event and therefore has no query and no *RST value.

The numeric suffix at CALCulate and MEMory are irrelevant for this command.

The numeric suffix at MATH selects the number of the trace.

Suffix:

<1...2>	1...2
<1...2>	1...2
<1...3>	1...3

Parameters:

<MemorySlot>

Example:

CALC:MATH:COPY:MEM

Usage:

Setting only

Copies the trace into the memory.

CALCulate<1...2>:MATH<1...2>:STATe <State>

This command turns trace mathematics on and off.

The numeric suffix at CALCulate is irrelevant for this command.

The numeric suffix at MATH selects the number of the trace.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

CALC:MATH:STAT ON
Switches on the trace mathematics.

DISPlay<1...2>[:WINDow]:TRACe<1...2>[:STATe] <State>

This command turns a trace on and off.

The numeric suffix at DISPlay is irrelevant for this command.

The numeric suffix at TRACe selects the number of the trace.

Parameters:

<State> ON | OFF
*RST: ON for TRACe1, OFF for TRACe2

Example:

DISP:TRAC2 ON
Turns on the trace 2.

DISPlay<1...2>[:WINDow]:TRACe<1...2>:MEMory<1...3>[:STATe] <State>

This command turns the memory trace on and off.

The numeric suffix at DISPlay and MEMory are irrelevant for this command.

The numeric suffix at TRACe selects the number of the trace.

Suffix:

<1...2> 1...2
<1...2> 1...2
<1...3> 1...3

Parameters:

<State> ON | OFF
*RST: OFF

Example:

DISP:TRAC:MEM ON
Activates the memory trace.

DISPlay<1...2>[:WINDow]:TRACe<1...2>:MODE <DisplayMode>

This command selects the trace mode.

If you are using the average, max hold or min hold trace mode, you can set the number of measurements with `[SENSe:] SWEep:COUNT<SweepCount>`. Note that synchronization to the end of the average count is possible only in single sweep mode.

The numeric suffix at `DISPlay` is irrelevant for this command.

The numeric suffix at `TRACe` selects the number of the trace.

Parameters:

`<DisplayMode>` `WRITe` | `AVERAge` | `MINHold` | `MAXHold` | `VIEW` | `FREEze` | `INFinite`
 `*RST:` `WRITe`
 You can turn off the trace with
`DISPlay<1...2>[:WINDow]:TRACe<1...2>[:STATe]` .
 For more information, see chapter "Trace Mode".

Example:

```
SWE:CONT OFF
SWE:COUN 16
Turn on single sweep mode and sets the number of measurements to 16.
DISP:TRAC:MODE MAXH
Activates MAXHold mode for the trace.
INIT;*WAI
Starts the measurement and waits for the end of the 16 sweeps.
```

FORMat:BORDER `<TransferOrder>`

This command selects the format of binary data.

Parameters:

`<TransferOrder>` `NORMal` | `SWAPped`
 NORMal
 The most significant byte is transferred first (big endian).
 SWAPped
 The least significant byte is transferred first (little endian).
 `*RST:` `SWAPped`

Example:

```
FORM:BORD NORM
Changes the byte order to normal mode.
```

FORMat[:DATA] `<Format>[, <>]`

This command selects the data format that is used for transmission of trace data from the R&S Cable Rider ZPH to the controlling computer.

Note that the command has no effect for data that you send to the R&S Cable Rider ZPH. The R&S Cable Rider ZPH automatically recognizes the data it receives, regardless of the format.

Parameters:

`<Format>` `ASCIi` | `REAL`

ASCii

Returns the data in ASCII format, separated by commas.

REAL

Returns the data as 32-bit IEEE 754 floating point numbers in the "definite length block format".

*RST: ASCii

In REAL, 32 format, a string of return values would look like:

#42424<value 1><value 2>...<value n> with

#4 - representing the number of digits of the following number of data bytes (= 4 in this example);

2524 - representing the number of following data bytes (2524, corresponds to the 711 sweep points of the R&S Cable Rider ZPH.

<value> - representing 4-byte floating point value.

Example:

FORM ASC

Selects the ASCII data format.

[SENSe:]DETECTOR<1...2>[:FUNCTION] <Detector>

This command selects a detector function.

The numeric suffix at DETECTOR specifies the primary or secondary detector.

Suffix:

<1...2> 1...2

Parameters:

<Detector> POSitive | NEGative | SAMPlE | RMS | AVERAge | APEak

*RST: APE

For more information, see chapter "Detectors".

Example:

DET POS

Sets the primary detector to "positive peak".

[SENSe:]DETECTOR<1...2>[:FUNCTION]:AUTO <State>

This command couples and decouples the detector to the trace mode.

The numeric suffix at DETECTOR specifies the primary or secondary detector.

Parameters:

<State> ON | OFF

*RST: ON

Example:

DET:AUTO OFF

Turns off automatic detector selection for the primary detector.

TRACe<1...2>[:DATA]? [<arg0>]

This command queries the trace data of the current measurement.

It also transfers data from a file to a particular trace.

With the command `FORMat [:DATA]` on page 354, you can set the data format.

With the command `CALCulate<1...2>:FEED` on page 468, you can select the result display.

The numeric suffix at `TRACe` is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<arg0> TRACe1 | TRACe2 | LIST | PHOLd | RAW

TRACe1

Queries the data of trace 1.

TRACe2

Queries the data of trace 2.

LIST

Queries the peak list of the measurement.

PHOLd

Queries the scanned peak hold list in the receiver mode measurement.

RAW

Queries the raw FSK/ASK data in the analog demodulation mode measurement.

The R&S Cable Rider ZPH returns 711 values. Each value corresponds to one pixel of a trace.

The unit depends on the measurement and the unit you have set with `UNIT<1...2>:POWer`.

Note: If you use the auto peak detector, the command reads out positive peak values only.

Example:

TRAC:DATA? TRACE1

Reads out the data for trace 1.

Usage:

Query only

14.6.3.7 Using Markers

The following commands control the operation of marker, delta markers and marker functions.

Markers and Delta Markers

The following commands are for setting and controlling markers and deltamarkers.

List of commands

<code>CALCulate<1...2>:DELTamarker<1...6>[:STATE]</code>	412
<code>CALCulate<1...2>:DELTamarker<1...6>:AOFF</code>	412
<code>CALCulate<1...2>:DELTamarker<1...6>:MAXimum[:PEAK]</code>	413

CALCulate<1...2>:DELTamarker<1...6>:MAXimum:NEXT.....	413
CALCulate<1...2>:DELTamarker<1...6>:MINimum[:PEAK].....	413
CALCulate<1...2>:DELTamarker<1...6>:X.....	413
CALCulate<1...2>:DELTamarker<1...6>:X:RELative.....	414
CALCulate<1...2>:DELTamarker<1...6>:Y?.....	414
CALCulate<1...2>:MARKer<1...6>[:STATe].....	415
CALCulate<1...2>:MARKer<1...6>:AOFF.....	415
CALCulate<1...2>:MARKer<1...6>:MAXimum[:PEAK].....	416
CALCulate<1...2>:MARKer<1...6>:MAXimum:NEXT.....	416
CALCulate<1...2>:MARKer<1...6>:MINimum[:PEAK].....	416
CALCulate<1...2>:MARKer<1...6>:MODE.....	416
CALCulate<1...2>:MARKer<1...6>:X.....	417
CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>[:STATe].....	418
CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>:LEFT.....	418
CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>:RIGHT.....	418
CALCulate<1...2>:MARKer<1...6>:Y?.....	419

CALCulate<1...2>:DELTamarker<1...6>[:STATe] <State>

This command turns delta markers on and off.

If you set the suffix at DELTmarker to 1, or use no suffix, the R&S Cable Rider ZPH interprets this as delta marker 2 because the first marker has to be a normal marker. If more than one normal marker (2 to 6) is already active, the command turns these markers into delta markers. If no delta marker is active yet, the command activates the delta marker and positions it on the trace maximum.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:DELT3 ON
 Turns on delta marker 3 or turn marker 3 into a delta marker.

CALCulate<1...2>:DELTamarker<1...6>:AOFF

This command turns off all active delta markers.

This command is an event and therefore has no query and no *RST value.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Example:

CALC:DELT:AOFF
 Turns off all delta markers.

Usage:

Event

CALCulate<1...2>:DELTamarker<1...6>:MAXimum[:PEAK]

This command positions a delta marker on the current trace maximum.

If necessary, the corresponding delta marker is activated first.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Example: `CALC:DELT3:MAX`
 Moves delta marker 3 to the maximum peak.

Usage: Event

CALCulate<1...2>:DELTamarker<1...6>:MAXimum:NEXT

This command positions a delta marker on the next smaller trace maximum.

If necessary, the corresponding delta marker is activated first.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Example: `CALC:DELT2:MAX:NEXT`
 Moves delta marker 2 to the next smaller maximum peak.

Usage: Event

CALCulate<1...2>:DELTamarker<1...6>:MINimum[:PEAK]

This command positions a delta marker on the current trace minimum.

If necessary, the corresponding delta marker is activated first.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Example: `CALC:DELT3:MIN`
 Moves delta marker 3 to the trace minimum.

Usage: Event

CALCulate<1...2>:DELTamarker<1...6>:X <FrequencyOrTime>

This command positions a delta marker on a particular coordinate on the horizontal axis.

Note that it is possible to place the marker outside the visible trace. In that case, this value is invalid.

If necessary, the corresponding delta marker is activated first.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Parameters:

<FrequencyOrTime> Numeric value that indicates the coordinate on the horizontal axis.
 Range: Maximum span.
 Default unit: GHz

Example:

```
CALC:DELT:MOD REL
Delta marker positions are relative to marker 1.
CALC:DELT2:X 10.7MHz
Positions delta marker 2 10.7 MHz to the right of marker 1.
CALC:DELT2:X?
CALC:DELT2:X:REL?
Queries the absolute and relative position of delta marker 2.
```

CALCulate<1...2>:DELTmarker<1...6>:X:RELative <FrequencyOrTime>

This command positions a delta marker on a position relative to the reference marker.

If necessary, the corresponding delta marker is activated first.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Parameters:

<FrequencyOrTime> Defines the distance of the marker to the reference marker.
 Range: Depends on the current scaling of the horizontal axis.
 Default unit: GHz

Example:

```
CALC:DELT3:X:REL 5 kHz
Sets the delta marker at a distance of 5 kHz to the reference position.
```

CALCulate<1...2>:DELTmarker<1...6>:Y?

This command queries the vertical position of a delta marker. The result is always a relative value in relation marker 1.

If necessary, the corresponding delta marker is activated first.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end between activating the delta marker and reading out the result. This is only possible in single sweep mode.

In spectrum analyzer mode, the unit depends on the unit you have set and the scaling of the vertical axis.

Parameter or measuring functions	Output unit
DBM DBPW DBUV DBMV DBUA	dB (lin/log)
WATT VOLT AMPere	dB (lin), % (log)

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTAmarker selects the deltamarker.

Parameters:

<MarkerPosition>

Example:

```
INIT:CONT OFF
CALC:DELT2 ON
Turns on single sweep mode and delta marker 2.
INIT;*WAI
Starts a sweep and waits for its end.
CALC:DELT2:Y?
Queries the position of delta marker 2.
```

Usage:

Query only

CALCulate<1...2>:MARKer<1...6>[:STATe] <State>

This command turns markers on and off.

If you do not use a suffix at MARKer, marker 1 is selected. If one or more delta markers (2 to 6) are already active, the command turns these delta markers into normal markers.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

```
CALC:MARK3 ON
Turns on marker 3.
```

CALCulate<1...2>:MARKer<1...6>:AOFF

This command turns off all active markers, delta markers and active marker measurement functions.

This command is an event and therefore has no query and no *RST value.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example:

```
CALC:MARK:AOFF
Switches off all markers.
```

Usage:

Event

CALCulate<1...2>:MARKer<1...6>:MAXimum[:PEAK]

This command positions a marker on the current trace maximum.

If necessary, the corresponding marker is activated first.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example: `CALC:MARK2:MAX`
 Moves marker 2 to the maximum peak.

Usage: Event

CALCulate<1...2>:MARKer<1...6>:MAXimum:NEXT

This command positions a marker on the next smaller trace maximum.

If necessary, the corresponding marker is activated first.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example: `CALC:MARK2:MAX:NEXT`
 Moves marker 2 to the next smaller maximum peak.

Usage: Event

CALCulate<1...2>:MARKer<1...6>:MINimum[:PEAK]

This command positions a marker on the current trace minimum.

If necessary, the corresponding marker is activated first.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example: `CALC:MARK2:MIN`
 Moves marker 2 to the trace minimum.

Usage: Event

CALCulate<1...2>:MARKer<1...6>:MODE <MarkerFormat>

This command selects the type of information a marker shows.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Suffix:
 <1...2> 1...2

<1...6>

1...6

Parameters:

<MarkerFormat> NORMal | RPDB | RPL | RSCalar | IMPedance | ADMittance | NIMPedance | NADMittance

See table below for supported parameters.

*RST: NORMal

ADMittance	admittance in complex format (real + imaginary)
IMPedance	impedance in complex format (real + imaginary)
NADMittance	standardized admittance in complex format (real + imaginary)
NIMPedance	standardized impedance in complex format (real + imaginary)
NORMal	normal marker
RPDB	reflection coefficient in complex format (magnitude (dB) + phase)
RPL	reflection coefficient in complex format (magnitude (lin) + phase)
RSCalar	reflection coefficient in complex format (real + imaginary)

CALCulate<1...2>:MARKer<1...6>:X <FrequencyOrTime>

This command positions a marker on a particular coordinate on the horizontal axis.

If one or more delta markers (2 to 6) are already active, the command turns these delta markers into normal markers.

Note that it is possible to place the marker outside the visible trace. In that case, this value is invalid.

If necessary, the corresponding delta marker is activated first.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<FrequencyOrTime> Indicates the coordinate on the horizontal axis.
The unit in spectrum analyzer mode depends on the measurement, e.g. Hz for measurements in the frequency domain and seconds for measurements in the time domain.

Range: Maximum span.

Default unit: GHz

Example:

CALC:MARK2:X 10.7MHz

Positions marker 2 to frequency 10.7 MHz.

CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>[:STATe] <State>

This command turns marker search limits on and off.

The search limit restricts the evaluation range of the trace when "set marker" functions are performed. For example, marker set to peak with command `CALCulate<1...2>:MARKer<1...6>:MAXimum[:PEAK]` on page 360 sets the marker only at the peak of the trace within the search limit.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<State> ON | OFF
*RST: OFF

Example: See `CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>:RIGHT` on page 362.

CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>:LEFT <SearchLimit>

This command defines the left limit of the marker search range.

To use the command, you first have to turn on search limits with `CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>[:STATe]` on page 362.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<SearchLimit> Sets the left marker search limit.
The unit in the spectrum analyzer mode depends on the measurement, e.g. Hz for measurements in the frequency domain and seconds for measurements in the time domain.
Range: Maximum span.
*RST: – (is set to the left diagram border when switching on search limits)
Default unit: GHz

Example: See `CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>:RIGHT` on page 362.

CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>:RIGHT <SearchLimit>

This command defines the right limit of the marker search range.

To use the command, you first have to turn on search limits with `CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>[:STATe]` on page 362.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<SearchLimit>

Sets the right marker search limit.

The unit depends on the measurement, e.g. Hz for measurements in the frequency domain and seconds for measurements in the time domain.

Range: Maximum span.

*RST: – (is set to the right diagram border when switching on search limits)

Default unit: GHz

Example:

CALC:MARK:X:SLIM ON

CALC:MARK:X:SLIM:LEFT 10MHz

CALC:MARK:X:SLIM:RIGH 100MHz

Turns on search limits and defines a search range from 10 MHz to 100 MHz.

CALCulate<1...2>:MARKer<1...6>:Y?

This command queries the absolute vertical position of a marker.

If necessary, the corresponding marker is activated first.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end between activating the delta marker and reading out the result. This is only possible in single sweep mode.

The unit of the return value depends on UNIT<1...2>:POWER.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<MarkerPosition>

Numeric value of the marker position.

Example:

INIT:CONF OFF

CALC:MARK2 ON

Turns on single sweep mode and marker 2.

INIT;*WAI

Starts a sweep and waits for the end.

CALC:MARK2:Y?

Queries the position of marker 2.

Usage:

Query only

Marker Functions

The following commands perform various kinds of analysis at the marker position.

List of commands

CALCulate<1...2>:MARKer<1...6>:COUNT:FREQUENCY?	420
CALCulate<1...2>:MARKer<1...6>:COUNT[:STATE]	420
CALCulate<1...2>:MARKer<1...6>:FREQUENCY:MODE	421
CALCulate<1...2>:MARKer<1...6>:FUNCTION:CENTer	421

CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation[:STATe].....	421
CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation:HOLD.....	422
CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation:SElect.....	422
CALCulate<1...2>:MARKer<1...6>:FUNCTION:LEVel:ONCE.....	422
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown.....	423
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:FREQuency?.....	423
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:RESult?.....	424
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:STATe.....	424
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NOISef[:STATe].....	424
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NOISe:RESult?.....	425
CALCulate<1...2>:MARKer<1...6>:FUNCTION:REFerence.....	425

CALCulate<1...2>:MARKer<1...6>:COUNT:FREQuency?

This command performs a frequency measurement at the marker position and returns the result.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end to make sure that the R&S Cable Rider ZPH actually reaches the frequency you want to measure. This is only possible in single sweep mode.

Before you can use the command, you have to turn on the frequency counter with [CALCulate<1...2>:MARKer<1...6>:COUNT\[:STATe\]](#) on page 364.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example: See [CALCulate<1...2>:MARKer<1...6>:COUNT\[:STATe\]](#) on page 364.

Usage: Query only

CALCulate<1...2>:MARKer<1...6>:COUNT[:STATe] <State>

This command turns the frequency counter at the marker position on and off.

You can read out the result with [CALCulate<1...2>:MARKer<1...6>:COUNT:FREQuency?](#) on page 364.

Frequency counting is possible only for one marker at a time. If it is activated for another marker, it is automatically deactivated for the previous marker.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end to make sure that the R&S Cable Rider ZPH actually reaches the frequency you want to measure. This is only possible in single sweep mode.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

```
INIT:CONT OFF
CALC:MARK ON
Turns on single sweep mode and marker 1.
CALC:MARK:COUN ON
Turns on the frequency counter for marker 1.
INIT;*WAI
CALC:MARK:COUN:FREQ?
Performs a measurement and queries the results of the frequency counter.
```

CALCulate<1...2>:MARKer<1...6>:FREQuency:MODE <Mode>

This command selects the marker frequency display mode.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<Mode> FREQuency | CHANnel

FREQuency
Sets the marker frequency mode to frequency input (in Hz).

CHANnel
Sets the marker frequency mode to channel input (as a channel number).

*RST: FREQ

Example:

```
CALC:MARK:FREQ:MODE FREQ
Selects the frequency display mode.
```

CALCulate<1...2>:MARKer<1...6>:FUNctio:n:CENTer

This command matches the center frequency to the frequency of a marker.

If you use a delta marker, the R&S Cable Rider ZPH turns it into a normal marker.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example:

```
CALC:MARK2:FUNC:CENT
Matches the center frequency to the frequency of marker 2.
```

Usage: Event

CALCulate<1...2>:MARKer<1...6>:FUNctio:n:DEModulation[:STATe] <State>

This command turns the audio demodulator on and off when the measurement hits a marker position.

With span > 0, you can define a hold time at the marker position with `CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation:HOLD` on page 366.

In zero span, the demodulation is on permanently.

The numeric suffix at `CALCulate` is irrelevant for this command. The numeric suffix at `MARKer` selects the marker.

Suffix:

<1...2> 1...2

<1...6> 1...6

Parameters:

<State> ON | OFF
*RST: OFF

Example: `CALC:MARK3:FUNC:DEM ON`
Switches on the demodulation for marker 3.

`CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation:HOLD <HoldTime>`

This command defines the hold time at the marker position for the demodulation with span > 0.

The numeric suffix at `CALCulate` is irrelevant for this command. The numeric suffix at `MARKer` selects the marker.

Parameters:

<HoldTime> Range: 100 ms to 500 s
*RST: 0.5 (DEModulation is set to OFF)
Default unit: s

Example: `CALC:MARK:FUNC:DEM:HOLD 3s`
Sets a hold time of 3 seconds.

`CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation:SElect <DemodType>`

This command selects the type of demodulation type for the audio demodulator.

The numeric suffix at `CALCulate` is irrelevant for this command. The numeric suffix at `MARKer` selects the marker.

Parameters:

<DemodType> AM | FM
*RST: AM

Example: `CALC:MARK:FUNC:DEM:SEL FM`
Selects FM demodulation.

`CALCulate<1...2>:MARKer<1...6>:FUNCTION:LEVel:ONCE`

This command adjusts the reference level to the measured signal power.

This automatic routine makes sure that the signal power level does not overload the R&S Cable Rider ZPH or limits the dynamic range by too small an S/N ratio.

To determine the best reference level, the R&S Cable Rider ZPH aborts current measurements and performs a series of test sweeps. After it has finished the test, it continues with the actual measurement.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example: `CALC:MARK:FUNC:LEV:ONCE`
Initiates an automatic level adjust routine.

Usage: Event

CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown <MarkerDistance>

This command defines the distance of the n dB down markers to the reference marker.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<MarkerDistance> Distance of the temporary markers to the reference marker in dB.
*RST: 3 dB
Default unit: dB

Example: See `CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:STATe` on page 368

CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:FREQUENCY?

This command queries the horizontal position of the n dB down markers.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<Return values> <frequency1>, <frequency2>
<frequency1>
Absolute frequency of the n dB marker to the left of the reference marker in Hz.
<frequency2>
Absolute frequency of the n dB marker to the right of the reference marker in Hz.

Example: See `CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:STATe` on page 368

Usage: Query only

CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:RESult?

This command queries the frequency spacing or bandwidth of the n dB down markers.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<Return values> <Bandwidth>
Bandwidth in Hz.

Example: See [CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:STATe](#) on page 368.

Usage: Query only

CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:STATe <State>

This command turns the n dB Down marker function on and off.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<State> ON | OFF
*RST: OFF

Example: `CALC:MARK:FUNC:NDBD:STAT ON`
Turns on the n dB marker function.
`CALC:MARK:FUNC:NDBD 3`
Positions two temporary markers 3 dB below a reference marker.
`CALC:MARK:FUNC:NDBD:FREQ?`
Queries the frequency position of the n dB Down markers; would return e.g. 1000000000, 2000000000.
`CALC:MARK:FUNC:NDBD:RES?`
Queries the measurement result; would return e.g. 1000000000.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:NOISe[:STATe] <State>

This command turns the noise measurement for all markers on and off.

You can query the results of the noise power density at the marker position with [CALCulate<1...2>:MARKer<1...6>:FUNCTION:NOISe:RESult?](#) on page 369.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<State> ON | OFF
*RST: OFF

Example: See `CALCulate<1...2>:MARKer<1...6>:FUNCTION:NOISe:RESult?` on page 369.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:NOISe:RESult?

This command queries the result of the noise measurement.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end before reading out the result. This is only possible in single sweep mode.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example:

```
INIT:CONT OFF
Turns on single sweep mode.
CALC:MARK2 ON
CALC:MARK2:FUNC:NOIS ON
Turns on marker 2 and assigns the noise measurement to that
marker.
INIT;*WAI
CALC:MARK2:NOIS:RES?
Performs the measurement and queries the noise marker
results.
```

Usage: Query only

CALCulate<1...2>:MARKer<1...6>:FUNCTION:REFerence

This command matches the reference level to the power level of a marker.

If you use a delta marker, the R&S Cable Rider ZPH turns it into a normal marker.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example:

```
CALC:MARK1:FUNC:REF
Matches the reference level to the power level of marker 1.
```

Usage: Event

14.6.3.8 Using Display Lines and Limit Lines

The following commands define the display lines and limit lines.

Display Lines

The following commands define the position of the display line.

List of commands

CALCulate<1...2>:DLINe.....	426
CALCulate<1...2>:DLINe:STATe.....	426

CALCulate<1...2>:DLINe <LinePosition>

This command defines the position of a display line.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<LinePosition> Numeric value with a variable range and unit.
You can use any unit you want, the R&S Cable Rider ZPH then converts the unit to the currently selected unit. If you omit a unit, the R&S Cable Rider ZPH uses the currently selected unit.

*RST: – (STATe to OFF)

Default unit: dBm

Example:

CALC:DLIN -20dBm

Sets the display line threshold to -20 dBm.

CALCulate<1...2>:DLINe:STATe <State>

This command turns display lines on and off.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<State> ON | OFF

*RST: OFF

Example:

CALC:DLIN:STAT OFF

Turns on the display line.

Limit Lines

The following commands define limit lines and perform the corresponding limit checks.

List of commands

CALCulate<1...2>:LIMit<1...2>:BEEP[:STATe].....	427
CALCulate<1...2>:LIMit<1...2>:COMMeNt?.....	427
CALCulate<1...2>:LIMit<1...2>:DEFine.....	428
CALCulate<1...2>:LIMit<1...2>:DELete.....	429
CALCulate<1...2>:DLINe.....	429
CALCulate<1...2>:DLINe:STATe.....	429
CALCulate<1...2>:LIMit<1...2>:FAIL?.....	430

CALCulate<1...2>:LIMit<1...2>:STATe.....	430
CALCulate<1...2>:LIMit<1...2>:UNIT:X?.....	430
CALCulate<1...2>:LIMit<1...2>:UNIT[:Y]?.....	431
CALCulate<1...2>:LIMit<1...2>:LOWer:SElect.....	431
CALCulate<1...2>:LIMit<1...2>:UPPer:SElect.....	431
CALCulate<1...2>:LIMit<1...2>:LOWer:THReshold.....	432
CALCulate<1...2>:LIMit<1...2>:UPPer:THReshold.....	432

CALCulate<1...2>:LIMit<1...2>:BEEP[:STATe] <State>

This command turns the beeper that beeps if a limit line is violated on and off.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: CALC:LIM:BEEP ON
 Activates the audio beep.

CALCulate<1...2>:LIMit<1...2>:COMMeNt?

This command queries the description of a limit line.

This command is a query and therefore has no RST value.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2
 <1...2> 1...2

Example: CALC:LIM:COMM?
 Queries the description of limit line 1.

Usage: Query only

CALCulate<1...2>:LIMit<1...2>:DEFine <Name>, <Description>, <X-unit>, <X-scale>, <Y-unit>, <X0>, <Y0>, <X1>, <Y1>[, <X2>, <Y2>, <X3>, <Y3>, <X4>, <Y4>, <X5>, <Y5>, <X6>, <Y6>, <X7>, <Y7>, <X8>, <Y8>, <X9>, <Y9>, <X10>, <Y10>, <X11>, <Y11>, <X12>, <Y12>, <X13>, <Y13>, <X14>, <Y14>, <X15>, <Y15>, <X16>, <Y16>, <X17>, <Y17>, <X18>, <Y18>, <X19>, <Y19>, <X20>, <Y20>, <X21>, <Y21>, <X22>, <Y22>, <X23>, <Y23>, <X24>, <Y24>, <X25>, <Y25>, <X26>, <Y26>, <X27>, <Y27>, <X28>, <Y28>, <X29>, <Y29>, <X30>, <Y30>, <X31>, <Y31>, <X32>, <Y32>, <X33>, <Y33>, <X34>, <Y34>, <X35>, <Y35>, <X36>, <Y36>, <X37>, <Y37>, <X38>, <Y38>, <X39>, <Y39>, <X40>, <Y40>, <X41>, <Y41>, <X42>, <Y42>, <X43>, <Y43>, <X44>, <Y44>, <X45>, <Y45>, <X46>, <Y46>, <X47>, <Y47>, <X48>, <Y48>, <X49>, <Y49>, <X50>, <Y50>, <X51>, <Y51>, <X52>, <Y52>, <X53>, <Y53>, <X54>, <Y54>, <X55>, <Y55>, <X56>, <Y56>, <X57>, <Y57>, <X58>, <Y58>, <X59>, <Y59>, <X60>, <Y60>, <X61>, <Y61>, <X62>, <Y62>, <X63>, <Y63>, <X64>, <Y64>, <X65>, <Y65>, <X66>, <Y66>, <X67>, <Y67>, <X68>, <Y68>, <X69>, <Y69>, <X70>, <Y70>, <X71>, <Y71>, <X72>, <Y72>, <X73>, <Y73>, <X74>, <Y74>, <X75>, <Y75>, <X76>, <Y76>, <X77>, <Y77>, <X78>, <Y78>, <X79>, <Y79>, <X80>, <Y80>, <X81>, <Y81>, <X82>, <Y82>, <X83>, <Y83>, <X84>, <Y84>, <X85>, <Y85>, <X86>, <Y86>, <X87>, <Y87>, <X88>, <Y88>, <X89>, <Y89>, <X90>, <Y90>, <X91>, <Y91>, <X92>, <Y92>, <X93>, <Y93>, <X94>, <Y94>, <X95>, <Y95>, <X96>, <Y96>, <X97>, <Y97>, <X98>, <Y98>, <X99>, <Y99>]

This command defines the shape of a limit line.

After you have defined the shape of the limit line, you still have to activate it with [CALCulate<1...2>:LIMit<1...2>:UPPer:SElect](#) on page 375 before it takes effect.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Parameters:

<Name>	String containing the name of the limit line. Note: if a limit line with the same name already exists, it is over-written.
<Description>	String containing a comment for the limit line.
<X-unit>	HZ S M Unit of the x-axis.
<X-scale>	ABSolute RELative Scale of the x-axis.
<Y-unit>	DB DBM DBMV DBUV DBUA V VOLT W WATT DBUVm DBUam V_M W_M2 VSWR Unit of the y-axis.

<X0...X99> Data points on the x-axis.
Note: a limit line may consist of up to 100 horizontal data points.

<Y0...Y99> Data points on the y-axis.

Example: `CALC:LIM:DEF`
`'Line','Example',HZ,ABS,DBM,10000000,-10,`
`10000000,0,20000000,0`
Defines a limit line with three data points.

Usage: Setting only

CALCulate<1...2>:LIMit<1...2>:DELe

This command deletes a limit line.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:
<1...2> 1...2

<1...2> 1...2

Example: `CALC:LIM2:DEL`
Deletes the second limit line.

CALCulate<1...2>:DLINe <LinePosition>

This command defines the position of a display line.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:
<1...2> 1...2

Parameters:
<LinePosition> Numeric value with a variable range and unit.
You can use any unit you want, the R&S Cable Rider ZPH then converts the unit to the currently selected unit. If you omit a unit, the R&S Cable Rider ZPH uses the currently selected unit.
*RST: – (STATe to OFF)
Default unit: dBm

Example: `CALC:DLIN -20dBm`
Sets the display line threshold to -20 dBm.

CALCulate<1...2>:DLINe:STATe <State>

This command turns display lines on and off.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:<State> ON | OFF
*RST: OFF**Example:**CALC:DLIN:STAT OFF
Turns on the display line.**CALCulate<1...2>:LIMit<1...2>:FAIL?**

This command queries the result of a limit check.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end before reading out the result. This is only possible in single sweep mode.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Example:INIT;*WAI
CALC:LIM1:FAIL?
Performs a measurement and queries the result of the check for limit line 1.**Usage:**

Query only

CALCulate<1...2>:LIMit<1...2>:STATe <State>

This command turns a limit check on and off.

You can query the result of the limit check with [CALCulate<1...2>:LIMit<1...2>:FAIL?](#) on page 374.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Parameters:<State> ON | OFF
*RST: OFF**Example:**CALC:LIM1:STAT ON
Switches on the limit check for limit line 1.**CALCulate<1...2>:LIMit<1...2>:UNIT:X?**

This command queries the horizontal unit of a limit line.

This command is a query and therefore has no *RST value.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Example:

CALC:LIM1:UNIT:X?

Queries the x-unit of the first limit line.

Usage:

Query only

CALCulate<1...2>:LIMit<1...2>:UNIT[:Y]?

This command queries the vertical unit of a limit line.

This command is a query and therefore has no *RST value.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Example:

CALC:LIM1:UNIT?

Queries the y-unit of the first limit line.

Usage:

Query only

CALCulate<1...2>:LIMit<1...2>:LOWer:SElect <LimitLine>

This command selects the lower limit line.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Parameters:

<LimitLine> String containing the filename of the lower limit line.

Example:

CALC:LIM1:LOW:SEL 'GSM_Lower.rellim'

Selects the lower limit line.

Usage:

Setting only

CALCulate<1...2>:LIMit<1...2>:UPPer:SElect <LimitLine>

This command selects the upper limit line.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Parameters:

<LimitLine> String containing the filename of the upper limit line.

Example:

CALC:LIM1:UPP:SEL 'GSM_Upper.rellim'
Selects the upper limit line.

Usage:

Setting only

CALCulate<1...2>:LIMit<1...2>:LOWer:THReshold <Threshold>

This command defines the level of a lower threshold limit line.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Parameters:

<Threshold> Numeric value whose unit depends on the unit you have currently selected for the vertical axis.
Default unit: dBm

Example:

CALC:LIM1:LOW:THR -10DBM
Defines a threshold of -10 dBm.

CALCulate<1...2>:LIMit<1...2>:UPPer:THReshold <Threshold>

This command defines the level of an upper threshold limit line.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Suffix:

<1...2> 1...2

<1...2> 1...2

Parameters:

<Threshold> Numeric value whose unit depends on the unit you have currently selected for the vertical axis.
Default unit: dBm

Example: `CALC:LIM1:UPP:THR -10DBM`
Defines a threshold of -10 dBm.

14.6.3.9 Configuring and Using Measurement Functions

The R&S Cable Rider ZPH provides measurement functions that allow you to perform advanced measurements and can also be controlled remotely.

• Configuring Channel Tables	433
• Power Measurements	435
• Measuring the Channel Power	439
• Measuring the Occupied Bandwidth	440
• TDMA Measurements	442
• Measuring the Adjacent Channel Leakage Ratio	442
• Measuring the Harmonic Distortion	453
• Measuring the AM Modulation Depth	456
• Measuring the Spectrum Emission Mask	456
• Using an Isotropic Antenna	458

Configuring Channel Tables

The following commands configure the channel tables.

List of commands

[SENSe:]CHANnel<1...3>	433
[SENSe:]CHANnel:TABLE:SElect<1...4>	433
[SENSe:]CHANnel:TABLE:SElect:DOWNlink	434
[SENSe:]CHANnel:TABLE:SElect:UPLink	434
[SENSe:]CHANnel:TABLE:SET	435

[SENSe:]CHANnel<1...3> <ChannelNumber>

This command selects the channel to be analyzed.

You have to set the frequency mode with [\[SENSe:\]FREquency:INPut:MODE<1..3>](#) on page 389 to channel first.

The numeric suffix at CHANnel is irrelevant for this command.

Parameters:

<ChannelNumber> Numeric value that selects the number of the channel to be analyzed.
*RST: Depends on the channel table.

Example: See [\[SENSe:\]CHANnel:TABLE:SElect<1...4>](#) on page 433.

[SENSe:]CHANnel:TABLE:SElect<1...4> <ChannelTable>

This command selects a channel table configured for the link direction you have selected with [\[SENSe:\]CHANnel:TABLE:SET](#) on page 435.

Note that if you have previously selected a channel table with `[SENSe:]CHANnel:TABLE:SElect:DOWNlink` on page 434 or `[SENSe:]CHANnel:TABLE:SElect:UPLink` on page 434, this command replaces that file.

The numeric suffix at SElect is irrelevant for this command.

Suffix:

<1...4> 1...4

Parameters:

<ChannelTable> String containing the filename of the channel table.

*RST: ''

Example:

CHAN:TABL:SET UP

Selects channel table selection for uplink signals.

CHAN:TABL:SEL 'TV China.CHNTAB'

Loads the channel table with the name 'TV China' for the uplink.

CHAN:TABL:SEL 'TV Italy.chntab'

or

CHAN:TABL:SEL:UPL 'TV Italy.chntab'

Both commands replace the uplink channel table 'TV China' with 'TV Italy'.

Downlink channel tables are not affected by the commands sent so far.

FREQ:INP:MODE CHAN

CHAN 10

Select a particular uplink channel (e.g. #10) instead of a (center) frequency.

To select an additional downlink channel table, use either:

CHAN:TABL:SET DOWN

CHAN:TABL:SEL 'TV Italy.chntab'

or

CHAN:TABL:SEL:DOWN 'TV Italy.chntab'

[SENSe:]CHANnel:TABLE:SElect:DOWNlink <ChannelTable>

This command selects a channel table configured for downlink signals.

Parameters:

<ChannelTable> String containing the name of the channel table.

*RST: ''

Example:

See `[SENSe:]CHANnel:TABLE:SElect<1...4>` on page 433.

[SENSe:]CHANnel:TABLE:SElect:UPLink <ChannelTable>

This command selects a channel table configured for downlink signals.

Parameters:

<ChannelTable> String containing the name of the channel table.
 *RST: ''

Example:

See [SENSe:]CHANnel:TABLE:SElect<1...4>
 on page 433.

[SENSe:]CHANnel:TABLE:SET <Table>

This command selects the link direction for measurements with channel tables.

Parameters:

<Table> UP | DOWN
UP
 Selects the uplink.
DOWN
 Selects the downlink.
 *RST: UP

Example:

See [SENSe:]CHANnel:TABLE:SElect<1...4>
 on page 433.

Power Measurements

The following commands configure power measurements. To perform the actual measurement, use the commands described in section [Chapter 14.6.3.5, "Performing and Triggering Measurements"](#), on page 402.

List of commands

CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER:SElect.....	435
CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER[:STATe].....	436
CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER:PRESet.....	436
CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER:PRESet:CHECK?.....	437
CALCulate<1...2>:MARKer<1...6>:FUNCTION:LEVEL:ONCE.....	437
CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER:RESult?.....	437

CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER:SElect <MeasType>

This command selects a power measurement and turns the measurement on.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<MeasType> MCACpower | ACPower | CPOWER | OBANdwidth | OBWidth | TDMA
MCACpower | ACPower
 Adjacent Channel Leakage Ratio measurement (ACLR) aka adjacent channel power or multi carrier adjacent channel.
CPOWER
 Chanel power measurement.

OBANdwidth | OBWidth

Occupied Bandwidth measurement.

TDMA

TDMA power measurement.

Example:

`CALC:MARK:FUNC:POW:SEL CPOW`

Selects the channel power measurement.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWer[:STATe] <State>

This command turns a power measurement on and off.

You can select a power measurement with `CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWer:SElect` on page 435.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<State>

ON | OFF

ON

Turns the power measurement on.

OFF

Performs a basic spectrum measurement.

*RST: OFF

Example:

`CALC:MARK:FUNC:POW OFF`

Switches off the power measurement.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWer:PRESet <Standard>

This command selects one of the predefined configurations for a telecommunications standard. This command only works if you have turned on power measurements with `CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWer[:STATe]` on page 436.

The configuration for a standard is in line with the specifications and includes parameters like weighting filter, channel bandwidth and spacing, resolution and video bandwidth, as well as detector and sweep time.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<Standard>

String containing the filename of the standard.

Example:

`CALC:MARK:FUNC:POW:PRES '3GPP WCDMA.chpstd'`

Selects the 3GPP WCDMA standard for channel power measurements.

Usage:

Setting only

CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWer:PRESet:CHECK?

This command checks if the current settings are in line with the settings defined by the standard selected with `CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWer:PRESet` on page 436.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Note that the command only checks those parameters that are defined by the standard.

This command is a query and therefore has no *RST value.

Return Value	
0	The R&S Cable Rider ZPH settings violate a standard configuration
1	The R&S Cable Rider ZPH settings comply with the standard.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Example: `CALC:MARK:FUNC:POW:PRESet:CHECK?`
Queries compliance to the standard currently in use.

Usage: Query only

CALCulate<1...2>:MARKer<1...6>:FUNCTION:LEVel:ONCE

This command adjusts the reference level to the measured signal power.

This automatic routine makes sure that the signal power level does not overload the R&S Cable Rider ZPH or limits the dynamic range by too small an S/N ratio.

To determine the best reference level, the R&S Cable Rider ZPH aborts current measurements and performs a series of test sweeps. After it has finished the test, it continues with the actual measurement.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example: `CALC:MARK:FUNC:LEV:ONCE`
Initiates an automatic level adjust routine.

Usage: Event

CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWer:RESult? <arg0>

This command queries the results of power measurements.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end before reading out the result. This is only possible in single sweep mode.

Before you can use this command, you have to select the power measurement with [CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER:SElect](#) on page 435 and [CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER\[:STATE\]](#) on page 436.

This command is a query and therefore has no *RST value.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<arg0> MCACpower | ACPower | CPOWer | OBANdwidth | OBWidth | TDMA

MCACpower | ACPower

Returns the results for ACLR measurements.

The number of return values depends on the number of TX and adjacent channel. The order of return values is:

power of the transmission channel.

power of the lower adjacent channel.

power of the upper adjacent channel.

power of the lower alternate channel 1.

power of the upper alternate channel 2.

etc.

The unit of the return values depends on the scaling of the vertical axis:

logarithmic scaling returns the power in the currently selected unit (see [UNIT<1...2>:POWer](#) on page 397).

linear scaling returns the power in W.

CPOWer

Returns the results for channel power measurements.

The return value is the power of the channel. The unit depends on the scaling of the vertical axis:

logarithmic scaling returns the power in the currently selected unit (see [UNIT<1...2>:POWer](#) on page 397).

linear scaling returns the power in W.

OBANdwidth | OBWidth

Returns the results for measurements of the occupied bandwidth.

The return value is the occupied bandwidth in Hz.

TDMA

Returns the results for TDMA power measurements.

The return value is the power of the signal. The unit depends on the scaling of the vertical axis:

logarithmic scaling returns the power in the currently selected unit (see [UNIT<1...2>:POWer](#) on page 397).

linear scaling returns the power in W.

Example: `POW:BAND 90PCT`
 Defines the occupied bandwidth (90%).
`INIT:CONT OFF`
`INIT;*WAI`
`CALC:MARK:FUNC:POW:RES? OBW`
 Turns on single sweep mode, performs a measurement and queries the results.

Usage: Query only

Measuring the Channel Power

The following commands configure channel power measurements. To perform the actual measurement, use the commands described in section [Chapter 14.6.3.5, "Performing and Triggering Measurements"](#), on page 402.

List of commands

<code>CALCulate<1...2>:MARKer<1...6>:FUNCTION:CPOWer:BANDwidth</code>	439
<code>CALCulate<1...2>:MARKer<1...6>:FUNCTION:CPOWer:MODE</code>	439
<code>CALCulate<1...2>:MARKer<1...6>:FUNCTION:CPOWer:UNIT</code>	440
<code>CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWer:RESult:PHZ</code>	440

CALCulate<1...2>:MARKer<1...6>:FUNCTION:CPOWer:BANDwidth <ChannelBW>

This command defines the channel bandwidth for channel power measurements.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<ChannelBW> *RST: 3.84 MHz
 Default unit: GHz

Example: `CALC:MARK:FUNC:CPOW:BAND 4 MHZ`
 Sets the channel bandwidth to 4 MHz.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:CPOWer:MODE <DisplayMode>

This command selects the display mode for channel power measurements.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<DisplayMode> CLR | MAX
CLR
 Displays the currently measured value (Clear / Write).
MAX
 Displays the highest measured value (Max Hold).
 *RST: CLR

Example: `CALC:MARK:FUNC:CPOW:MODE CLR`
 Selects clear/write power display mode.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:CPOWER:UNIT <Unit>

This command selects the unit of the vertical axis for channel power measurements.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Suffix:

<1...2> 1...2

<1...6> 1...6

Parameters:

<Unit> DBM | DBMV | DBUV | DUVE | DMVE | VEMF | DBUA | VOLT |
WATT | DUVM | DUAM | V | W | V_M | W_M2

*RST: dBm

Example:

CALC:MARK:FUNC:CPOW:UNIT DBM

Sets the unit to dBm.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER:RESult:PHZ <State>

This command turns the display of the channel power per Hertz on and off.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<State> ON | OFF

*RST: dBm

Example:

CALC:MARK:FUNC:POW:RES:PHZ ON

Displays the measured Channel Power / Hz.

Measuring the Occupied Bandwidth

The following commands configure the measurement of the Occupied Bandwidth. To perform the actual measurement, use the commands described in section [Chapter 14.6.3.5, "Performing and Triggering Measurements"](#), on page 402.

List of commands

CALCulate<1...2>:MARKer<1...6>:FUNCTION:OBAN:BANDwidth.....	440
CALCulate<1...2>:MARKer<1...6>:FUNCTION:OBAN:BANDwidth:PCT.....	441
CALCulate<1...2>:MARKer<1...6>:FUNCTION:OBW:BANDwidth.....	441
CALCulate<1...2>:MARKer<1...6>:FUNCTION:OBW:BANDwidth:PCT.....	441

CALCulate<1...2>:MARKer<1...6>:FUNCTION:OBAN:BANDwidth <ChannelBW>

This command defines the channel bandwidth for occupied bandwidth measurements.

Instead of OBANwidth, you can also use the alias OBWidth.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<ChannelBW> *RST: 3.84 MHz
 Default unit: GHz

Example:

CALC:MARK:FUNC:OBW:BAND 1 MHZ
 Sets the channel bandwidth to 1 MHz.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:OBAN:BANDwidth:PCT
 <Percentage>

This command defines the percentage of the total power that defines the occupied bandwidth.

Instead of OBANwidth, you can also use the alias OBWidth.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<Percentage> Range: 10 PCT to 99.9 PCT
 *RST: 99 PCT

Example:

CALC:MARK:FUNC:OBW:BAND:PCT 95
 Sets the power percentage to 95%.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:OBW:BANDwidth <ChannelBW>

This command defines the channel bandwidth for occupied bandwidth measurements.

Instead of OBANwidth, you can also use the alias OBWidth

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Suffix:

<1...2> 1...2
 <1...6> 1...6

Parameters:

<ChannelBW> Numeric value in Hz.
 Default unit: 3.84 MHz

Example:

CALC:MARK:FUNC:OBW:BAND 1 MHZ
 Sets the channel bandwidth to 1 MHz

CALCulate<1...2>:MARKer<1...6>:FUNCTION:OBW:BANDwidth:PCT <Percentage>

This command defines the percentage of the total power that defines the occupied bandwidth.

Instead of OBANwidth, you can also use the alias OBWidth

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Suffix:

<1...2> 1...2

<1...6> 1...6

Parameters:

<Percentage> The numeric suffix at CALCulate is irrelevant for this command.

Example: CALC:MARK:FUNC:OBW:BAND:PCT 95
Sets the power percentage to 95%.

TDMA Measurements

The following commands configure TDMA measurements. To perform the actual measurement, use the commands described in section [Chapter 14.6.3.5, "Performing and Triggering Measurements"](#), on page 402.

List of commands

CALCulate<1...2>:MARKer<1...6>:FUNCTION:TDMA:BURSt..... 442

CALCulate<1...2>:MARKer<1...6>:FUNCTION:TDMA:BURSt <BurstLength>

This command defines the burst length of the TDMA signal.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<BurstLength> Range: Depends on the current sweep time.
*RST: 470 us
Default unit: s

Example: CALC:MARK:FUNC:TDMA:BURS 80 US
Sets the burst length to 80 us.

Measuring the Adjacent Channel Leakage Ratio

The following commands configure Adjacent Channel Leakage Ratio (ACLR) measurements. To perform the actual measurement, use the commands described in section [Chapter 14.6.3.5, "Performing and Triggering Measurements"](#), on page 402.

Configuring and Performing the ACLR Measurement

The following commands configure and perform the ACLR measurements.

List of commands

CALCulate<1...2>:MARKer<1...6>:FUNCTION:ACPower:UNIT..... 443
[SENSe:]POWer:ACHannel:ACPairs..... 443
[SENSe:]POWer:ACHannel:BANDwidth[:CHANnel]..... 443
[SENSe:]POWer:ACHannel:BANDwidth[:ACHannel]..... 444
[SENSe:]POWer:ACHannel:BANDwidth[:ALTErnate<1...11>]..... 444
[SENSe:]POWer:ACHannel:BWIDth[:CHANnel]..... 444
[SENSe:]POWer:ACHannel:BWIDth:ACHannel..... 444
[SENSe:]POWer:ACHannel:BWIDth:ALTErnate<1...11>..... 445
[SENSe:]POWer:ACHannel:MODE..... 445
[SENSe:]POWer:ACHannel:PRESet:RLEVel..... 446

[SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO.....	446
[SENSe:]POWer:ACHannel:REFerence:TXCHannel:MANual.....	446
[SENSe:]POWer:ACHannel:SPACing[:ACHannel].....	447
[SENSe:]POWer:ACHannel:SPACing:ALTerNate<1...11>.....	447
[SENSe:]POWer:ACHannel:SPACing:CHANnel<1...11>.....	447
[SENSe:]POWer:ACHannel:TXCHannel:COUNt.....	448

CALCulate<1...2>:MARKer<1...6>:FUNCTION:ACPower:UNIT <Unit>

This command selects the unit of the ACLR results.

The numeric suffix at CALCulate and MARKer are irrelevant for this command.

Suffix:

<1...2> 1...2

<1...6> 1...6

Parameters:

<Unit> DBM | DBMV | DBUV | DBUA | VOLT | WATT | DUVM | DUAM |
V | W | V_M | W_M2
*RST: 1

Example:

CALC:MARK:FUNC:ACP:UNIT DBM ACLR
Results are converted into the unit dBm.

[SENSe:]POWer:ACHannel:ACPairs <#ofAdjacentChannels>

This command defines the number of pairs of adjacent channels.

Parameters:

<#ofAdjCh> The number corresponds to a pair of adjacent channels, one
channel on the left and one on the right of the transmission
channel.
Range: 1 to 12
*RST: 1

Example:

See [SENSe:]POWer:ACHannel:TXCHannel:COUNt
on page 448.

[SENSe:]POWer:ACHannel:BANDwidth[:CHANnel] <TxChannelBandwidth>

This command defines the channel bandwidth of the transmission channels.

Instead of BANDwidth, you can also use the alias BWIDth.

Parameters:

<TxChBw> *RST: 14 kHz
Default unit: GHz

Example:

See [SENSe:]POWer:ACHannel:TXCHannel:COUNt
on page 448.

[SENSe:]POWER:ACHannel:BANDwidth[:ACHannel] <AdjChannelBandwidth>

This command defines the channel bandwidth of the adjacent channel.

The adjacent channel is the first pair of channels next to the transmission channels. If you set the channel bandwidth for these channels, the R&S Cable Rider ZPH sets the bandwidth of the alternate channels to the same value.

Instead of BANDwidth, you can also use the alias BWIDth.

Parameters:

<AdjChBw> *RST: 14 kHz
 Default unit: GHz

Example: See `[SENSe:]POWER:ACHannel:TXChannel:COUNT` on page 448.

[SENSe:]POWER:ACHannel:BANDwidth[:ALternate<1...11>]
 <AltChannelBandwidth>

This command defines the bandwidth of the alternate channels.

If you set the channel bandwidth for the first alternate channel, the R&S Cable Rider ZPH sets the bandwidth of the other alternate channels to the same value. The command works hierarchically: to set a bandwidth of the 10th and 8th channel, you have to set the bandwidth of the 8th channel first.

Instead of BANDwidth, you can also use the alias BWIDth.

The suffixat ALternate selects one of the 11 alternate channels.

Parameters:

```
<AltChBw>      *RST:      14 kHz
                  Default unit: GHz
```

Example: See `[SENSe:]POWER:ACHannel:TXChannel:COUNT` on page 448.

[SENSe:]POWER:ACHannel:BWIDth[:CHANnel] <TxChannelBandwidth>

This command defines the channel bandwidth of the transmission channels.

Instead of BWIDwidth, you can also use the alias BANDth.

Parameters:

<TxChBw> *RST: 14 kHz
 Default unit: GHz

Example: See `[SENSe:]POWER:ACHannel:TXChannel:COUNT` on page 448.

[SENSe:]POWER:ACHannel:BWIDth:ACHannel <AdjChannelBandwidth>

This command defines the channel bandwidth of the adjacent channel.

The adjacent channel is the first pair of channels next to the transmission channels. If you set the channel bandwidth for these channels, the R&S Cable Rider ZPH sets the bandwidth of the alternate channels to the same value.

Instead of BWIDwidth, you can also use the alias BANDth.

Parameters:

<AdjChBw> *RST: 14 kHz
 Default unit: GHz

Example:

See [SENSe:]POWER:ACHannel:TXChannel:COUNT on page 448.

[SENSe:]POWER:ACHannel:BWIDth:ALternate<1...11> <AltChannelBandwidth>

This command defines the bandwidth of the alternate channels.

If you set the channel bandwidth for the first alternate channel, the R&S Cable Rider ZPH sets the bandwidth of the other alternate channels to the same value. The command works hierarchically: to set a bandwidth of the 10th and 8th channel, you have to set the bandwidth of the 8th channel first.

Instead of BWIDwidth, you can also use the alias BANDth.

The suffix at ALternate selects one of the 11 alternate channels.

Suffix:

<1...11> 1...11

Parameters:

<AltChBw> *RST: 14 kHz
 Default unit: GHz

Example:

See [SENSe:]POWER:ACHannel:TXChannel:COUNT on page 448.

[SENSe:]POWER:ACHannel:MODE <AdjacentChannelMode>

This command selects the way the R&S Cable Rider ZPH displays the power of adjacent channels.

The number of adjacent and alternate channels has to be greater than 0 for the command to work.

Parameters:

<AdjChMode> ABSolute | RELative

ABSolute

Shows the absolute power of all channels..

RELative

Shows the power of adjacent and alternate channels in relation to the transmission channel.

Example:

POW:ACH:MODE ABS
 Shows absolute powers for all channels.

[SENSe:]POWer:ACHannel:PRESet:RLEVel

This command adjusts the reference level to the measured signal power.

This automatic routine makes sure that the that the signal power level does not overload the R&S Cable Rider ZPH or limit the dynamic range by too small a S/N ratio.

To determine the best reference level, the R&S Cable Rider ZPH aborts current measurements and performs a series of test sweeps. After it has finished the test, it continues with the actual measurement.

This command is an event and therefore has no *RST value and no query.

Example: `POW:ACH:PRESet:RLEV`
Initiates an ACP measurement and adjusts the reference level.

Usage: Event

[SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO <TxReferenceMode>

This command automatically selects a reference channel for relative ACLR measurements.

The number of transmission channels and adjacent / alternate channels has to be greater than 0 for the command to work.

Parameters:

<TxReferenceMode> MANual | MINimum | MAXimum | LHIGhest

MANual

Defines a reference channel for relative ACLR measurements. You need at least one channel for the command to work.

MINimum

Reference is the transmission channel with the lowest power.

MAXimum

Reference is the transmission channel with the highest power.

LHIGhest

Reference is the lowest transmission channel for lower adjacent channels and highest transmission channel for upper adjacent channels.

Example: `POW:ACH:REF:TXCH:AUTO MIN`
Sets the TX channel with the lowest power as reference channel.

**[SENSe:]POWer:ACHannel:REFerence:TXCHannel:MANual
<TxReferenceChannel>**

This command defines a reference channel for relative ACLR measurements.

The number of transmission channels and adjacent / alternate channels has to be greater than 0 for the command to work.

Parameters:

<TxRefCh> The actual value range depends on the number of active transmission channels.

Range: 1 to 12

*RST: 1

Example:

See [SENSe:]POWer:ACHannel:TXChannel:COUNT on page 448.

[SENSe:]POWer:ACHannel:SPACing[:ACHannel] <AdjChannelSpacing>

This command defines the spacing between the transmission channel and its adjacent channel.

A change of the adjacent channel spacing causes a change in the spacing of all alternate channels above the adjacent channel.

Parameters:

<AdjChannelSpacing>*RST: 14 kHz

Default unit: GHz

Example:

See [SENSe:]POWer:ACHannel:TXChannel:COUNT on page 448.

[SENSe:]POWer:ACHannel:SPACing:ALternate<1...11> <AltChannelSpacing>

This command defines the spacing between alternate channels.

If you set the channel spacing for the first alternate channel, the R&S Cable Rider ZPH sets the bandwidth of the other alternate channels to the same value. The command works hierarchically: to set a spacing of the 10th and 8th channel, you have to set the spacing of the 8th channel first.

The suffix at ALternate selects one of the 11 alternate channels.

Parameters:

<AltChannelSpacing> *RST: ALT1: 40 kHz; ALT2: 60 kHz; ALT3: 80 kHz etc.

Default unit: GHz

Example:

See [SENSe:]POWer:ACHannel:TXChannel:COUNT on page 448.

[SENSe:]POWer:ACHannel:SPACing:CHANnel<1...11> <TxChannelSpacing>

This command defines the spacing between transmission channels.

If you set the channel spacing for the first transmission channel, the R&S Cable Rider ZPH sets the bandwidth of the other transmission channels to the same value. The command works hierarchically: to set a spacing between the 9th and 10th and 8th and 9th channel, you have to set the spacing between the 8th and 9th channel first.

The suffix at CHANnel selects the transmission channel.

Parameters:

<TxChannelSpacing> *RST: 20 kHz
Default unit: GHz

Example:

See [SENSe:]POWer:ACHannel:TXChannel:COUNT
on page 448.

[SENSe:]POWer:ACHannel:TXChannel:COUNT <#ofTxChannels>

This command defines the number of transmission channels.

The command is available for measurements with span > 0.

Parameters:

<#ofTxChannels> Range: 1 to 12
*RST: 1

Example:

CALC:MARK:FUNC:POW:SEL CPOW

Selects the channel power measurement.

POW:ACH:TXCH:COUN 2

Defines 2 transmission channels.

POW:ACH:ACP 2

Defines 2 pairs of neighboring channels to the left and right of the TX channel(s).

POW:ACH:SPAC:CHAN2 20KHZ

Defines a distance of 20 kHz between the first and the second Tx channel.

POW:ACH:BAND:CHAN2 120KHZ

Defines a bandwidth of 120 kHz for the second TX channel.

POW:ACH:REF:TXCH:MAN 2

Selects the second Tx channel as reference channel.

POW:ACH:SPAC 10KHZ

Defines a distance of 10 kHz from the TX channel to the adjacent channel.

POW:ACH:BAND:ACH 120KHZ

Defines a bandwidth of 120 kHz for the adjacent channel.

POW:ACH:SPAC:ALT 20KHZ

Defines a distance of 20 kHz from the adjacent to the first alternate channel.

POW:ACH:BAND:ALT 120KHZ

Defines a bandwidth of 120 kHz for the first alternate channel.

ACLR Limit Check

The following commands configure and perform limit checks when measuring the adjacent channel power.

List of commands

CALCulate<1...2>:LIMit<1...2>:ACPower:STATe.....	449
CALCulate<1...2>:LIMit<1...2>:ACPower:ACHannel[:RELative].....	449
CALCulate<1...2>:LIMit<1...2>:ACPower:ACHannel[:RELative]:STATe.....	449

CALCulate<1...2>:LIMit<1...2>:ACPpower:ACHannel:ABSolute.....	450
CALCulate<1...2>:LIMit<1...2>:ACPpower:ACHannel:ABSolute[:STATe].....	450
CALCulate<1...2>:LIMit<1...2>:ACPpower:ACHannel:RESult?.....	450
CALCulate<1...2>:LIMit<1...2>:ACPpower:ALTernate<1...11>[:RELative].....	451
CALCulate<1...2>:LIMit<1...2>:ACPpower:ALTernate<1...11>[:RELative]:STATe.....	451
CALCulate<1...2>:LIMit<1...2>:ACPpower:ALTernate<1...11>:ABSolute.....	452
CALCulate<1...2>:LIMit<1...2>:ACPpower:ALTernate<1...11>:ABSolute[:STATe].....	452
CALCulate<1...2>:LIMit<1...2>:ACPpower:ALTernate<1...11>:RESult?.....	453

CALCulate<1...2>:LIMit<1...2>:ACPpower:STATe <State>

This command turns the limit check for ACLR measurements on and off.

You have to use `CALCulate<1...2>:LIMit<1...2>:ACPpower:ACHannel[:RELative]:STATe` on page 449 or `CALCulate<1...2>:LIMit<1...2>:ACPpower:ALTernate<1...11>[:RELative]:STATe` on page 451 in combination with this command to select the channels the limit check should be performed on.

The suffix at CALCulate and LIMit are irrelevant for this command.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

`CALC:LIM:ACP ON`
 Activates the limit check.

CALCulate<1...2>:LIMit<1...2>:ACPpower:ACHannel[:RELative] <RelativeLimit>

This command defines the relative limit of the adjacent channels. The reference value for the relative limit value is the measured channel power.

Note that the relative limit has no effect on the limit check if it is below the absolute limit value (see `CALCulate<1...2>:LIMit<1...2>:ACPpower:ACHannel:ABSolute` on page 450). This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

The suffix at CALCulate and LIMit are irrelevant for this command.

Parameters:

<RelativeLimit> Range: 0 dB to 100 dB
 Default unit: dB

Example:

`CALC:LIM:ACP:ACH 30`
 Defines a limit of 30 dB.

CALCulate<1...2>:LIMit<1...2>:ACPpower:ACHannel[:RELative]:STATe <State>

This command turns the relative limit check for the adjacent channels on and off.

You have to activate the general ACLR limit check before using this command with `CALCulate<1...2>:LIMit<1...2>:ACPpower:STATe` on page 449

The suffix at CALCulate and LIMit are irrelevant for this command.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

CALC:LIM:ACP:ACH:STAT ON
Activates the relative limit check.

CALCulate<1...2>:LIMit<1...2>:ACPower:ACHannel:ABSolute <AbsoluteLimit>

This command defines the absolute limit for the adjacent channels.

Note that the absolute limit has no effect on the limit check if it is below the relative limit (see [CALCulate<1...2>:LIMit<1...2>:ACPower:ACHannel\[:RELative\]](#) on page 449). This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

The suffix at CALCulate and LIMit are irrelevant for this command.

Suffix:

<1...2> 1...2
<1...2> 1...2

Parameters:

<AbsoluteLimit> Range: -500 dBm to 500 dBm
Default unit: dBm

Example:

CALC:LIM:ACP:ACH:ABS -30
Sets the absolute limit to -30 dBm.

CALCulate<1...2>:LIMit<1...2>:ACPower:ACHannel:ABSolute[:STATe] <State>

This command turns the absolute limit check for the adjacent channel on and off.

You have to activate the general ACLR limit check before using this command with [CALCulate<1...2>:LIMit<1...2>:ACPower:STATe](#) on page 449 first.

The suffix at CALCulate and LIMit are irrelevant for this command.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

CALC:LIM:ACP:ACH:ABS:STAT ON
Activates the absolute limit check.

CALCulate<1...2>:LIMit<1...2>:ACPower:ACHannel:RESult?

This command queries the result of the limit check of the adjacent channels.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end before reading out the result. This is only possible in single sweep mode.

This command is a query and therefore has no *RST value.

The suffix at CALCulate and LIMit are irrelevant for this command.

Parameters:

<return values> Consists of two values, one for the lower and one for the upper adjacent channel.

FAILED

Limit check failed.

PASSED

Limit check passed.

Example:

CALC:LIM:ACP:ACH:RES?

Queries the limit check results. The command would return, e.g. FAILED, FAILED Upper and lower alternate channels violate a limit.

Usage:

Query only

**CALCulate<1...2>:LIMit<1...2>:ACPower:ALTernate<1...11>[:RELative]
<RelativeLimit>**

This command defines the relative limit of the alternate channels. The reference value for the relative limit value is the measured channel power.

Note that the relative limit has no effect on the limit check if it is below the absolute limit value (see CALCulate<1...2>:LIMit<1...2>:ACPower:ALTernate<1...11>:ABSolute on page 452). This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

The suffix at CALCulate and LIMit are irrelevant for this command.

The suffix at ALTernate selects one of the 11 alternate channels.

Parameters:

<RelativeLimit> Range: -500 dB to 500 dB
Default unit: dB

Example:

CALC:LIM:ACP:ALT3 30

Defines a limit of 30 dB for the third alternate channel.

**CALCulate<1...2>:LIMit<1...2>:ACPower:ALTernate<1...11>[:RELative]:STATe
<State>**

This command turns the relative limit check for an alternate channels on and off.

You have to activate the general ACLR limit check before using this command with CALCulate<1...2>:LIMit<1...2>:ACPower:STATe on page 449 first.

The suffix at CALCulate and LIMit are irrelevant for this command.

The suffix at ALTernate selects one of the 11 alternate channels.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:LIM:ACP:ALT3:STAT ON
 Activates the relative limit check for the third alternate channel.

CALCulate<1...2>:LIMit<1...2>:ACPower:ALTernate<1...11>:ABSolute
 <AbsoluteLimit>

This command defines the absolute limit for the alternate channels.

Note that the absolute limit has no effect on the limit check if it is below the relative limit (see [CALCulate<1...2>:LIMit<1...2>:ACPower:ALTernate<1...11>\[:RELative\]](#) on page 451). This mechanism allows automatic checking of the absolute basic values of adjacent-channel power as defined in mobile radio standards.

The suffix at CALCulate and LIMit are irrelevant for this command.

The suffix at ALTernate selects one of the 11 alternate channels.

Suffix:

<1...2> 1...2
 <1...2> 1...2
 <1...11> 1...11

Parameters:

<AbsoluteLimit> Range: -500 dBm to 500 dBm
 Default unit: dBm

Example:

CALC:LIM:ACP:ALT3:ABS -30
 Sets the absolute limit to -30 dBm for the third alternate channel.

CALCulate<1...2>:LIMit<1...2>:ACPower:ALTernate<1...11>:ABSolute[:STATe]
 <State>

This command turns the absolute limit check for an alternate channel on and off.

You have to activate the general ACLR limit check before using this command with [CALCulate<1...2>:LIMit<1...2>:ACPower:STATe](#) on page 449 first.

The suffix at CALCulate and LIMit are irrelevant for this command.

The suffix at ALTernate selects one of the 11 alternate channels.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:LIM:ACP:ALT3:ABS:STAT ON
 Activates the absolute limit check for the third alternate channel.

CALCulate<1...2>:LIMit<1...2>:ACPower:ALTernate<1...11>:RESult?

This command queries the result of the limit check of the alternate channels.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end before reading out the result. This is only possible in single sweep mode.

This command is a query and therefore has no *RST value.

The suffix at CALCulate and LIMit are irrelevant for this command.

The suffix at ALTernate selects one of the 11 alternate channels.

Example:

CALC:LIM:ACP:ALT2:RES?

Queries the limit check results for the second alternate channels. The command would return, e.g. FAILED, FAILED Upper and lower alternate channels violate a limit.

Usage:

Query only

ACLR Result Query

The following commands query results specific to the adjacent channel power measurement.

List of commands

CALCulate<1...2>:MARKer<1...6>:FUNCTION:TXPower:RESult? 453

CALCulate<1...2>:MARKer<1...6>:FUNCTION:TXPower:RESult?

This command queries the total TX channel power. Use [CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER:RESult?](#) on page 437 to query the power of each TX channel.

The suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<Return values> <Power>
The power is either the peak power or the channel power, depending on the selected standard.

Example:

CALC:MARK:FUNC:TXP:RES?

Queries the total channel power over all TX channels.

Usage:

Query only

Measuring the Harmonic Distortion

The following commands configure Harmonic Distortion measurements.. To perform the actual measurement, use the commands described in section [Chapter 14.6.3.5, "Performing and Triggering Measurements"](#), on page 402.

List of commands

CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics[:STATe].....	454
CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:DISTortion?.....	454
CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:LIST?.....	454
CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:NHARmonics.....	455
CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:PRESet.....	455

CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics[:STATe] <State>

This command turns the harmonic distortion measurement on and off.

The suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<State> ON | OFF
 *RST: OFF

Example: See [CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:PRESet](#) on page 455.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:DISTortion? <ThdType>

This command queries the total harmonic distortion of the signal.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end before reading out the result. This is only possible in single sweep mode.

This command is a query and therefore has no *RST value.

The suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<ThdType> TOTAL
 <Distortion%>,<DistortiondB>
 Pair of values, one showing the THD in %, one in dB.

Example: See [CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:PRESet](#) on page 455.

Usage: Query only

CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:LIST?

This command queries the position of the harmonics.

To get a valid result, you should perform a complete sweep in single sweep mode before querying the results.

This command is a query and therefore has no *RST value.

The suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<Return values> returns one value for every harmonic.
 The first value is the absolute power of the first harmonic. The levelunit depends on the unit you have set with the [UNIT<1...2>:POWER](#) on page 397 command. The other values are power levels relative to the first harmonic. The unit for these is dB.
 The total number of return values depends on the number of harmonics you have set with [CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:NHARmonics](#) on page 455.

Example: See [CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:PRESet](#) on page 455.

Usage: Query only

CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:NHARmonics
 <NofHarmonics>

This command sets the number of harmonics. The valid range is from 1 to 6 harmonics.

The suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<NofHarmonics> Range: 1 to 6
 *RST: 2

Example: See [CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:PRESet](#) on page 455.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:PRESet

This command optimizes the settings for the harmonic distortion measurement.

This command is an event and therefore has no query and no *RST value.

The suffix at CALCulate and MARKer are irrelevant for this command.

Example: CALC:MARK:FUNC:HARM ON
 Activates the harmonic distortion measurement.
 CALC:MARK:FUNC:HARM:NHAR 4
 Sets the number of harmonics to 4.
 CALC:MARK:FUNC:HARM:PRES
 Adjusts the settings of the measurement.
 CALC:MARK:FUNC:HARM:LIST?
 CALC:MARK:FUNC:HARM:DIST? TOT
 Queries the position of the harmonics and the total harmonic distortion.

Usage: Event

Measuring the AM Modulation Depth

The following commands configure AM Modulation Depth measurements. To perform the actual measurement, use the commands described in section [Chapter 14.6.3.5, "Performing and Triggering Measurements"](#), on page 402.

List of commands

CALCulate<1...2>:MARKer<1...6>:FUNCTION:MDEPth[:STATe]	456
CALCulate<1...2>:MARKer<1...6>:FUNCTION:MDEPth:RESult?	456

CALCulate<1...2>:MARKer<1...6>:FUNCTION:MDEPth[:STATe] <State>

This command turns the AM Modulation Depth measurement on and off.

The suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:MARK:FUNC:MDEP ON
 Activates the AM modulation depth measurement.

CALCulate<1...2>:MARKer<1...6>:FUNCTION:MDEPth:RESult?

This command queries the results of the AM modulation depth measurement.

The suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<Return values> <ModulationDepth>
 Modulation depth in %.

Example:

CALC:MARK:FUNC:MDEP:RES?
 Queries the AM modulation depth.

Usage:

Query only

Measuring the Spectrum Emission Mask

The following commands configure Spectrum Emission Mask (SEM) measurements.. To perform the actual measurement, use the commands described in section [Chapter 14.6.3.5, "Performing and Triggering Measurements"](#), on page 402.

List of commands

CALCulate<1...2>:MARKer<1...6>:FUNCTION:TXPower:RESult?	457
[SENSe:]ESpectrum:PRESet[:STANdard]	457
[SENSe:]ESpectrum:PRESet:SETTings	457
[SENSe:]SWEep:MODE	457

CALCulate<1...2>:MARKer<1...6>:FUNCTION:TXPower:RESult?

This command queries the total TX channel power. Use [CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER:RESult?](#) on page 437 to query the power of each TX channel.

The suffix at CALCulate and MARKer are irrelevant for this command.

Parameters:

<Return values> **<Power>**
The power is either the peak power or the channel power, depending on the selected standard.

Example:

`CALC:MARK:FUNC:TXP:RES?`
Queries the total channel power over all TX channels.

Usage:

Query only

[SENSe:]ESpectrum:PRESet[:STANdard] <FileName>

This command loads one of the predefined spectrum emission masks for a telecommunications standard.

Parameters:

<FileName> String containing the filename of the spectrum emission mask.

Example:

`ESP:PRES 'W-CDMA 3GPP.semstd'`
Loads the SEM for 3GPP WCDMA.

[SENSe:]ESpectrum:PRESet:SETTings <ONCE>

This command optimizes the settings for the SEM measurement.

This command is an event and therefore has no query and no *RST value.

Parameters:

<ONCE> ONCE

Example:

`ESP:PRES:SET ONCE`
Initializes an adjustment of the settings.

Usage:

Setting only

[SENSe:]SWEep:MODE <SweepMode>

This command turns the spectrum emission mask measurement on and off.

Parameters:

<SweepMode> LIST | ESpectrum | AUTO
LIST
Turns on the Spurious Emission measurement.
ESpectrum
Turns on the SEM measurement.

AUTO

Turns on the Spectrum mode.

*RST: AUTO

Example:

SWE:MODE ESP

Starts the SEM measurement.

Using an Isotropic Antenna

This chapter describes all commands available to set up measurements with an isotropic antenna.

You can use an isotropic antenna with all measurement modes that are described above.

List of commands

INPut:ANTenna:MEASure.....	458
INPut:ANTenna:STAt.....	458
[SENSe:]CORRection:TRANsdUCer<1...2>:ISOTropic[:STAt].....	458

INPut:ANTenna:MEASure <Direction>

This command selects the direction that the isotropic antenna measures.

Parameters:

<Direction> AUTO | X | Y | Z

AUTO

Automatically selects the direction.

X | Y | Z

Measures the corresponding direction only.

*RST: AUTO

Example:

INP:ANT:MEAS X

Measures in x-direction.

INPut:ANTenna:STAt <State>

This command turns the use of an isotropic antenna on and off.

Parameters:

<State> ON | OFF

*RST: OFF

Example:

INP:ANT:STAT ON

Activates the isotropic antenna.

[SENSe:]CORRection:TRANsdUCer<1...2>:ISOTropic[:STAt] <State>

This command queries if the currently selected transducer is an isotropic antenna.

When you use the command for 3GPP WCDMA measurements in the Digital Modulation operating mode, the command also turns the use of an isotropic antenna on and off.

The numeric suffix at TRANsducer specifies the primary or secondary transducer.

Suffix:

<1...2> 1...2

Parameters:

<State> ON | OFF

0

Transducer is not an isotropic antenna.

1

Transducer is an isotropic antenna.

Example:

CORR:TRAN:ISOT?
only an example

14.6.4 Remote Commands of the Analog Modulation

The chapter provides information on remote commands that configure and perform analog modulation measurements.



Availability of remote commands for the analog modulation

Note that the listed remote commands take effect only if R&S ZPH-K7 is installed on the R&S Cable Rider ZPH

This mode is available only with model .12.

• Setting the Frequency	459
• Defining the Vertical Axis	460
• Defining the Bandwidth	463
• Defining the FM Broadcast	464
• Defining the Sweep Mode	465
• Configuring the Limit Line	466
• Setting the Measurement Mode	467
• Reading out Measurement Results	469

14.6.4.1 Setting the Frequency

The following chapter describes command to define and query on the frequency settings

List of commands

[SENSe:]FREQuency:CENTer	460
[SENSe:]FREQuency:CENTer:STEP	460

[SENSe:]FREQuency:CENTer <CenterFrequency>

This command defines the center frequency of the R&S Cable Rider ZPH.

In spectrum analyzer mode, the command also defines the measuring frequency for time domain measurements (span = 0).

Parameters:

<CenterFrequency> Range: Depends on the operating mode and is specified in the data sheet.
 *RST: fmax /2 with fmax = maximum frequency
 Default unit: MHz

Example:

FREQ:CENT 100MHz
 Defines a center frequency of 100 MHz.

[SENSe:]FREQuency:CENTer:STEP <Stepsize>

This command defines the center frequency step size.

Parameters:

<Stepsize> Range: 1 Hz to fmax
 *RST: - (AUTO 0.1*SPAN is switched on)
 Default unit: MHz

Example:

FREQ:CENT:STEP 120MHz
 Defines a CF step size of 120 MHz.

14.6.4.2 Defining the Vertical Axis

The following chapter describes command necessary to define the vertical scale such as the x-axis deviation per division and settings affecting the amplitude of the measurements.

List of commands

CALCulate<1...2>:MARKer<1...6>:FUNCTION:LEVel:ONCE.....	460
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:PDIVision.....	461
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RLEVel.....	461
INPut:ATTenuation.....	462
INPut:ATTenuation:AUTO.....	462
INPut:ATTenuation:MODE.....	462
INPut:GAIN:STATe.....	462
INPut:IMPedance.....	463
INPut:IMPedance:PAD.....	463

CALCulate<1...2>:MARKer<1...6>:FUNCTION:LEVel:ONCE

This command adjusts the reference level to the measured signal power.

This automatic routine makes sure that the signal power level does not overload the R&S Cable Rider ZPH or limits the dynamic range by too small an S/N ratio.

To determine the best reference level, the R&S Cable Rider ZPH aborts current measurements and performs a series of test sweeps. After it has finished the test, it continues with the actual measurement.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example: `CALC:MARK:FUNC:LEV:ONCE`
Initiates an automatic level adjust routine.

Usage: Event

DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:PDIVision <DevPerDiv>

This command sets the Y scale (deviation per division) in Hz (FM) or percent (AM).

The numeric suffix at DISPlay and TRACe is irrelevant for this command.

Suffix:

<1...2> 1...2

<1...2> 1...2

Parameters:

<DevPerDiv> Numeric value with the unit range of Hz | kHz| MHz| MAHz| GHz
| PCT.
Default unit: GHz

Example: `DISP:TRAC:Y:PDIV 5 PCT`
Set the Y scale (deviation per division) as 5 % in the AM modulation.

DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RLEVel <RefLevel>

This command defines the reference level.

With a reference level offset $\neq 0$, the value range of the reference level is modified by the offset. You can set the offset with `DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RLEVel:OFFSet` on page 394.

The numeric suffix at DISPlay and TRACe are irrelevant for this command.

Parameters:

<RefLevel> Sets the reference level; the unit depends on `UNIT<1...2>:POWer` on page 397.

Range: Specified in the data sheet.

*RST: -20 dBm

Default unit: dBm

Example: `DISP:TRAC:Y:RLEV -60dBm`
Sets the reference level to -60 dBm.

INPut:ATTenuation <Attenuation>

This command defines the input attenuation.

The attenuation is coupled to the reference level. If you set the attenuation independently, the R&S Cable Rider ZPH turns off this coupling.

The R&S Cable Rider ZPH adjusts the reference level if it cannot be set for the current RF attenuation.

Parameters:

<Attenuation> Range: 0 dB to 40 dB
 *RST: 0 dB (AUTO is ON)
 Default unit: dB

Example:

INP:ATT 30dB
 Defines an attenuation of 30 dB and deactivates coupling to the reference level.

INPut:ATTenuation:AUTO <State>

This command couples and decouples input attenuation to the reference level.

Parameters:

<State> ON | OFF
 *RST: ON

Example:

INP:ATT:AUTO ON
 Couples the attenuation set on the attenuator to the reference level.

INPut:ATTenuation:MODE <AttenMode>

This command selects the attenuation mode.

Parameters:

<AttenMode> LDISTortion | LNOise
 LDISTortion
 Selects "Auto Low Distortion" mode.
 LNOise
 Selects "Auto Low Noise" mode.
 *RST: LDIS

Example:

INP:ATT:MODE LNO
 Sets the attenuation mode to Auto Low Noise.

INPut:GAIN:STATe <State>

This command turns the preamplifier on and off.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

INP:GAIN:STAT ON
 Activates the preamplifier

INPut:IMPedance <Impedance>

This command selects the nominal input impedance. The set impedance is taken into account in all level indications of results.

The setting 75 Ω should be selected, if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75 Ω / 50 Ω).

Parameters:

<Impedance> 50 | 75
 *RST: 50 Ω
 Default unit: Ohm

Example:

INP:IMP 75
 Sets the input impedance to 75 Ohms.

INPut:IMPedance:PAD <PadType>

This command selects the matching pad connected to the R&S Cable Rider ZPH.

Parameters:

<PadType> RAM | RAZ | HZTE

Example:

INPut:IMP 75;PAD RAZ
 Selects 75 Ω input impedance and the R&S RAZ as the matching pad.

14.6.4.3 Defining the Bandwidth

The following chapter describes command necessary to define the demodulation bandwidth and audio lowpass filter.

List of commands

[SENSe:]ADEMod:BANDwidth:DEModulation.....	464
[SENSe:]ADEMod:BWIDth:DEModulation.....	464
[SENSe:]ADEMod:BANDwidth:RDEViation.....	464
[SENSe:]ADEMod:BWIDth:RDEViation.....	464
[SENSe:]FILTer:LPASs.....	464

[SENSe:]ADEMod:BANDwidth:DEModulation <Bandwidth>

[SENSe:]ADEMod:BWIDth:DEModulation <Bandwidth>

This command sets the demodulation bandwidth.

Parameters:

<Bandwidth> Range: 3 KHz to 2 MHz
 Default unit: GHz

Example:

ADEM:BAND:DEM 2MHz
 Defines an analog demodulation bandwidth of 2 MHz.

[SENSe:]ADEMod:BANDwidth:RDEVIation <Bandwidth>

[SENSe:]ADEMod:BWIDth:RDEVIation <Bandwidth>

Only available in FM domain. This command sets the reference deviation.

Maximum limitation $\leq \text{DBW} / 2$. See [\[SENSe:\]ADEMod:BWIDth:DEModulation](#) on page 464.

Parameters:

<Bandwidth> Range: 5 KHz to 1 MHz
 Default unit: GHz

Example:

ADEM:BWID:RDEV 1MHz
 Defines a FM reference deviation of 1 MHz.

[SENSe:]FILTer:LPASs <AudioLowpassFilterEnum>

This command sets the bandwidth of the audio lowpass filter (relative to the demodulation bandwidth): DBW/1, DBW/10, DBW/30 or DBW/100.

Parameters:

<AudioLPFilterEnum>

Example:

FILT:LPAS DBW10
 Set the bandwidth of the audio lowpass filter to DBW/10.

14.6.4.4 Defining the FM Broadcast

The following chapter describes command that define the FM deemphasis filter.

List of commands

[SENSe:]FILTer:DEMPhasis:TCONstant	464
[SENSe:]FILTer:DEMPhasis[:STATe]	465

[SENSe:]FILTer:DEMPhasis:TCONstant <AudioLowpassFilter>

This command sets the time constant for the FM deemphasis filter.

The only supported time constants are 50us and 75us.

Parameters:

<AudioLowpassFilter> Numeric value with the unit range of s | ms | us | ns.

Default unit: s

Example:

`FILT:DEMP:TCON 50 us`

Sets the time constant for the FM deemphasis filter to 50 us.

[SENSe:]FILTeR:DEMPHasis[:STATe] <State>

This command switches the FM deemphasis filter on or off.

Parameters:

<State>

ON | OFF

ON

Turns on the FM deemphasis filter.

OFF

Turns off the FM deemphasis filter.

*RST: OFF

Example:

`FILT:DEMP OFF`

Switches off the FM deemphasis filter.

14.6.4.5 Defining the Sweep Mode

The following chapter describes command that define the sweep mode and query measurement time.

List of commands

[SENSe:]ADEMod:MTIME?	465
INITiate[:IMMediate]	465
INITiate:CONTinuous	466

[SENSe:]ADEMod:MTIME?

This command queries the measurement time in the analog modulation.

Example:

`ADEMod:MTIM?`

Queries the measurement time in the analog modulation

Usage:

Query only

INITiate[:IMMediate]

This command initiates a new measurement sequence.

With sweep count > 0 or average count > 0, this means a restart of the indicated number of measurements. With trace functions MAXHold, MINHold and AVERage, the previous results are reset on restarting the measurement.

In single sweep mode, synchronization to the end of the indicated number of measurements can be achieved with the command *OPC, *OPC? or *WAI. In continuous-sweep mode, synchronization to the sweep end is not possible since the overall measurement never ends.

This command is an event and therefore has no query and no *RST value.

Example: INIT:CONT OFF
 DISP:WIND:TRAC:MODE AVER
 Turns on single sweep mode and trace averaging.
 INIT;*WAI
 Starts the measurement and waits for the end of the sweep.

Usage: Event

INITiate:CONTinuous <State>

This command selects the sweep mode.

Parameters:

<State> ON | OFF
 ON
 Selects continuous sweeps.
 OFF
 Selects single sweep.
 *RST: ON

Example: INIT:CONT OFF
 Turns on single sweep mode.

14.6.4.6 Configuring the Limit Line

The following chapter describes command necessary to configure the limit line and display the individual pass/fail measurement results of the analog modulation parameters.

List of commands

CALCulate<1...2>:ADEModulation:LIMit:SElect.....	466
CALCulate<1...2>:ADEModulation:LIMit:DElete.....	467
CALCulate<1...2>:ADEModulation:LIMit:FAIL?.....	467
CALCulate<1...2>:LIMit<1...2>:BEEP[:STATe].....	467

CALCulate<1...2>:ADEModulation:LIMit:SElect <Filename>

This command loads a limit line for the selected measurement mode.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<Filename> String containing the filename of the limit line.

Example: `CALC:ADEM:LIM:SEL 'GSM.aamlim'`
Selects the filename for limit line.

CALCulate<1...2>:ADEModulation:LIMit:DELeTe

This command clears the selected limit.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:
<1...2> 1...2

Example: `CALC:ADEM:LIM:DEL`
Clears off the selected limit line.

Usage: Event

CALCulate<1...2>:ADEModulation:LIMit:FAIL?

This command queries the result of a limit check.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end before reading out the result. This is only possible in single sweep mode.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:
<1...2> 1...2

Example: `CALC:ADEM:LIM:FAIL?`
Queries the result of the check for limit line

Usage: Query only

CALCulate<1...2>:LIMit<1...2>:BEEP[:STATe] <State>

This command turns the beeper that beeps if a limit line is violated on and off.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at LIMit selects the limit line.

Parameters:
<State> ON | OFF
*RST: OFF

Example: `CALC:LIM:BEEP ON`
Activates the audio beep.

14.6.4.7 Setting the Measurement Mode

The following chapter describes command necessary to switch to the correct measurement mode.

List of commands

CALCulate<1...2>:FEED.....	468
INSTrument[:SElect].....	468
INSTrument:NSElect.....	469

CALCulate<1...2>:FEED <Measurement>

This command switches the measurement mode.

The numeric suffix at CALCulate is irrelevant for this command

Suffix:

<1...2> 1...2

Parameters:

<Measurement> String containing the measurement mode (analog modulation or digital modulation):

Example:

CALC:FEED 'XTIM.AM'

Switches the analog measurement mode to AM Time.

CALC:FEED 'XTIM.FM'

Switches the analog measurement mode to FM Time.

CALC:FEED 'XTIM.FMSummary'

Switches the analog measurement mode to FM Summary.

CALC:FEED 'XTIM:DDEM:ERR:MPH'

Switches the digital measurement mode to error result display.

CALC:FEED 'XTIM:DDEM:EYE'

Switches the digital measurement mode to eye diagram.

CALC:FEED 'XTIM:DDEM:MEAS'

Selects the modulation depth (ASK) or modulation deviation (FSK) result display.

CALC:FEED 'XTIM:DDEM:SYMB'

Switches the digital measurement mode to symbol stream result display.

INSTrument[:SElect] <OperatingMode>

This command selects the operating mode.

Parameters:

<OperatingMode> SANalyzer | PM | ADEModulation | DDEMod | RECeiver |
MAPS | ACT

SANalyzer
spectrum analyzer

PM
power meter

ADEModulation
analog modulation

DDEMod
digital modulation

RECeiver

receiver

MAPS

map

ACT

cable and antenna analyzer

*RST: SAN

Example:

INST SAN

Selects spectrum analyzer mode.

INSTrument:NSElect <OperatingMode>

This command selects the operating mode.

Parameters:

<OperatingMode> **1**
 spectrum analyzer

5
 power meter

18
 analog modulation

*RST: 1

Example:

INST:NSEL 1

Selects spectrum analyzer mode.

14.6.4.8 Reading out Measurement Results

The following chapter describes command necessary to display the measurement results.

List of commands

[SENSe:]ADEMod:FM:OFFSet?	470
CALCulate<1...2>:MARKer:FUNCTION:ADEMod:CARRier[:RESult]?	470
CALCulate<1...2>:MARKer:FUNCTION:ADEMod:AFRequency[:RESult]?	470
CALCulate<1...2>:MARKer:FUNCTION:ADEMod:AM[:RESult]?	470
CALCulate<1...2>:MARKer:FUNCTION:ADEMod:FM[:RESult]?	471
CALCulate<1...2>:MARKer:FUNCTION:ADEMod:MDEPth[:RESult]?	471
CALCulate<1...2>:MARKer:FUNCTION:ADEMod:MRAT[:RESult]?	471
CALCulate<1...2>:MARKer:FUNCTION:ADEMod:SINad[:RESult]?	472
CALCulate<1...2>:MARKer:FUNCTION:ADEMod:THDad[:RESult]?	472
CALCulate<1...2>:MARKer:FUNCTION:ADEMod:THD[:RESult]?	472
CALCulate<1...2>:MARKer:FUNCTION:ADEMod:FERRor[:RESult]?	472
CALCulate<1...2>:MARKer:FUNCTION:ADEMod:MINDEX[:RESult]?	472

[SENSe:]ADEMod:FM:OFFSet?

This command displays the Frequency Deviation value for FM.

Example: ADEMod:FM:OFFSet?
Reads out the Frequency Deviation value for FM.

Usage: Query only

CALCulate<1...2>:MARKer:FUNCTION:ADEMod:CARRier[:RESult]?

This command displays the Carrier Power value for both AM/FM.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:
<1...2> 1...2

Example: CALC:MARK:FUNC:ADEMod:CARR?
Reads out the Carrier Power value for both AM/FM.

Usage: Query only

CALCulate<1...2>:MARKer:FUNCTION:ADEMod:AFRequency[:RESult]?

This command queries the modulation frequency.

The numeric suffix at CALCulate is irrelevant for this command

Suffix:
<1...2> 1...2

Example: CALC:MARK:FUNC:ADEMod:AFR?
Reads out the modulation frequency

Usage: Query only

CALCulate<1...2>:MARKer:FUNCTION:ADEMod:AM[:RESult]? <MeasType>

This command displays the results of frequency deviation for AM.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:
<1...2> 1...2

Parameters:
<MeasType> PPEak | MPEak | MIDDLE | RMS

PPEak
+Peak value

MPEak
-Peak value

MIDDLE
-±Peak value/2

RMS

RMS value

Example: `CALC:MARK:FUNC:ADEM:AM RMS`
Reads out the RMS value for AM.

Usage: Query only

CALCulate<1...2>:MARKer:FUNCTION:ADEMod:FM[:RESult]? <MeasType>

This command displays the results of frequency deviation for FM.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<MeasType> PPEak | MPEak | MIDDLE | RMS

PPEak

+Peak value

MPEak

-Peak value

MIDDLE

-±Peak value/2

RMS

RMS value

Example: `CALC:MARK:FUNC:ADEM:FM RMS`
Reads out the RMS value for FM.

Usage: Query only

CALCulate<1...2>:MARKer:FUNCTION:ADEMod:MDEPth[:RESult]? <MeasType>

This command queries the modulation depth for the AM.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Example: `CALC:MARK:FUNC:ADEM:MDEP?`
Reads out the modulation depth value for AM.

Usage: Query only

CALCulate<1...2>:MARKer:FUNCTION:ADEMod:MRAT[:RESult]? <MeasType>

This command queries the modulation rate for the FM signal.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:
<1...2> 1...2

Example: CALC:MARK:FUNC:ADEM:MRAT?
Reads out the modulation rate value for FM.

Usage: Query only

CALCulate<1...2>:MARKer:FUNCtion:ADEMod:SINad[:RESult]?

This command displays the SINAD value for both AM/FM.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:
<1...2> 1...2

Example: CALC:MARK:FUNC:ADEM:SIN?
Reads out the SINAD value for both AM/FM.

Usage: Query only

CALCulate<1...2>:MARKer:FUNCtion:ADEMod:THDad[:RESult]?
CALCulate<1...2>:MARKer:FUNCtion:ADEMod:THD[:RESult]?

This command displays the THD value for both AM/FM.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:
<1...2> 1...2

Example: CALC:MARK:FUNC:ADEM:THD?
Reads out the THD value for both AM/FM.

Usage: Query only

CALCulate<1...2>:MARKer:FUNCtion:ADEMod:FERRor[:RESult]?

This command displays the Carrier Offset value for both AM/FM.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:
<1...2> 1...2

Example: CALC:MARK:FUNC:ADEM:FERR?
Reads out the Carrier Offset value for both AM/FM.

Usage: Query only

CALCulate<1...2>:MARKer:FUNCtion:ADEMod:MINdex[:RESult]?

This command displays the Modulation Index value for AM.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:	<1...2>	1...2
Example:	CALC:MARK:FUNC:ADEM:MIND? Reads out the Modulation Index value for AM.	
Usage:	Query only	

14.6.5 Remote Commands of the Digital Modulation

The chapter provides information on remote commands that configure and perform digital modulation measurements.



Availability of remote commands for the digital modulation

Note that the listed remote commands take effect only if R&S ZPH-K7 is installed on the R&S Cable Rider ZPH

This mode is available only with model .12.

• Setting the Frequency	473
• Setting the Amplitude	474
• Defining the Sweep Control	477
• Configuring the Trigger	478
• Setting the Marker	479
• Setting the Measurement Mode	483
• Setting Measurement Configuration	485
• Reading out Measurement Results	487

14.6.5.1 Setting the Frequency

The following chapter describes command to define and query on the frequency settings

List of commands

[SENSe:]FREQuency:CENTer	473
[SENSe:]FREQuency:CENTer:STEP	474
[SENSe:]FREQuency:OFFSet	474

[SENSe:]FREQuency:CENTer <CenterFrequency>

This command defines the center frequency of the R&S Cable Rider ZPH.

In spectrum analyzer mode, the command also defines the measuring frequency for time domain measurements (span = 0).

Parameters:

<CenterFrequency> Range: Depends on the operating mode and is specified in the data sheet.
 *RST: fmax /2 with fmax = maximum frequency
 Default unit: MHz

Example:

FREQ:CENT 100MHz
 Defines a center frequency of 100 MHz.

[SENSe:]FREQuency:CENTer:STEP <Stepsize>

This command defines the center frequency step size.

Parameters:

<Stepsize> Range: 1 Hz to fmax
 *RST: - (AUTO 0.1*SPAN is switched on)
 Default unit: MHz

Example:

FREQ:CENT:STEP 120MHz
 Defines a CF step size of 120 MHz.

[SENSe:]FREQuency:OFFSet <FreqOffset>

This command defines a frequency offset.

Parameters:

<FreqOffset> Range: -100 GHz to 100 GHz
 *RST: 0 Hz
 Default unit: GHz

Example:

FREQ:OFFS 1GHZ
 Defines a frequency offset of 1 GHz.

14.6.5.2 Setting the Amplitude

The following chapter describes command necessary to define the vertical scale such as the x-axis deviation per division and settings affecting the amplitude of the measurements.

List of commands

DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:PDIVision.....	475
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RPOSition.....	475
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RLEVel.....	475
INPut:ATTenuation.....	476
INPut:ATTenuation:AUTO.....	476
INPut:ATTenuation:MODE.....	476
INPut:GAIN:STATe.....	477
INPut:IMPedance.....	477
INPut:IMPedance:PAD.....	477

DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:PDIVision <DevPerDiv>

This command sets the Y scale (deviation per division) in Hz (FM) or percent (AM).

The numeric suffix at DISPlay and TRACe is irrelevant for this command.

Suffix:

<1...2> 1...2

<1...2> 1...2

Parameters:

<DevPerDiv> Numeric value with the unit range of Hz | kHz| MHz| MAHz| GHz
| PCT.

Default unit: GHz

Example:

DISP:TRAC:Y:PDIV 5 PCT

Set the Y scale (deviation per division) as 5 % in the AM modulation.

DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RPOSition <RefLvlPosition>

This command defines the position of the reference level on the display grid.

First, you have to set a logarithmic scale for the vertical axis with [DISPlay<1...2>\[:WINDow\]:TRACe<1...2>:Y:SPACing](#) on page 393. For a linear scale, you cannot modify the reference position.

The numeric suffix at DISPlay and TRACe are irrelevant for this command.

Parameters:

<RefLvlPosition> Defines the reference position in %.

Range: 0 to 10

*RST: 10

Example:

DISP:TRAC:Y:RPOS 5

Sets the reference position to the 5th grid line.

DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RLEVel <RefLevel>

This command defines the reference level.

With a reference level offset $\neq 0$, the value range of the reference level is modified by the offset. You can set the offset with [DISPlay<1...2>\[:WINDow\]:TRACe<1...2>:Y\[:SCALe\]:RLEVel:OFFSet](#) on page 394.

The numeric suffix at DISPlay and TRACe are irrelevant for this command.

Parameters:

<RefLevel> Sets the reference level; the unit depends on [UNIT<1...2>:POWer](#) on page 397.

Range: Specified in the data sheet.

*RST: -20 dBm

Default unit: dBm

Example: `DISP:TRAC:Y:RLEV -60dBm`
Sets the reference level to -60 dBm.

INPut:ATTenuation <Attenuation>

This command defines the input attenuation.

The attenuation is coupled to the reference level. If you set the attenuation independently, the R&S Cable Rider ZPH turns off this coupling.

The R&S Cable Rider ZPH adjusts the reference level if it cannot be set for the current RF attenuation.

Parameters:

<Attenuation> Range: 0 dB to 40 dB
 *RST: 0 dB (AUTO is ON)
 Default unit: dB

Example: `INP:ATT 30dB`
Defines an attenuation of 30 dB and deactivates coupling to the reference level.

INPut:ATTenuation:AUTO <State>

This command couples and decouples input attenuation to the reference level.

Parameters:

<State> ON | OFF
 *RST: ON

Example: `INP:ATT:AUTO ON`
Couples the attenuation set on the attenuator to the reference level.

INPut:ATTenuation:MODE <AttenMode>

This command selects the attenuation mode.

Parameters:

<AttenMode> LDISTortion | LNOise

LDISTortion
Selects "Auto Low Distortion" mode.

LNOise
Selects "Auto Low Noise" mode.
*RST: LDIS

Example: `INP:ATT:MODE LNO`
Sets the attenuation mode to Auto Low Noise.

INPut:GAIN:STATe <State>

This command turns the preamplifier on and off.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

INP:GAIN:STAT ON
Activates the preamplifier

INPut:IMPedance <Impedance>

This command selects the nominal input impedance. The set impedance is taken into account in all level indications of results.

The setting 75 Ω should be selected, if the 50 Ω input impedance is transformed to a higher impedance using a 75 Ω adapter of the RAZ type (= 25 Ω in series to the input impedance of the instrument). The correction value in this case is 1.76 dB = 10 log (75 Ω / 50 Ω).

Parameters:

<Impedance> 50 | 75
*RST: 50 Ω
Default unit: Ohm

Example:

INP:IMP 75
Sets the input impedance to 75 Ohms.

INPut:IMPedance:PAD <PadType>

This command selects the matching pad connected to the R&S Cable Rider ZPH.

Parameters:

<PadType> RAM | RAZ | HZTE

Example:

INPut:IMP 75;PAD RAZ
Selects 75 Ω input impedance and the R&S RAZ as the matching pad.

14.6.5.3 Defining the Sweep Control

The following chapter describes command that define the sweep mode and query measurement time.

List of commands

INITiate[:IMMediate].....	478
INITiate:CONTinuous.....	478

INITiate[:IMMediate]

This command initiates a new measurement sequence.

With sweep count > 0 or average count > 0, this means a restart of the indicated number of measurements. With trace functions MAXHold, MINHold and AVERage, the previous results are reset on restarting the measurement.

In single sweep mode, synchronization to the end of the indicated number of measurements can be achieved with the command *OPC, *OPC? or *WAI. In continuous-sweep mode, synchronization to the sweep end is not possible since the overall measurement never ends.

This command is an event and therefore has no query and no *RST value.

Example:

```
INIT:CONT OFF
DISP:WIND:TRAC:MODE AVER
Turns on single sweep mode and trace averaging.
INIT;*WAI
Starts the measurement and waits for the end of the sweep.
```

Usage: Event

INITiate:CONTinuous <State>

This command selects the sweep mode.

Parameters:

<State> ON | OFF

ON
Selects continuous sweeps.

OFF
Selects single sweep.

*RST: ON

Example:

```
INIT:CONT OFF
Turns on single sweep mode.
```

14.6.5.4 Configuring the Trigger

The following chapter describes command necessary to configure the trigger signal for the digital modulation parameters.

List of commands

TRIGger[:SEquence]:SLOPe.....	478
TRIGger[:SEquence]:LEVel:IQPower.....	479
TRIGger[:SEquence]:SOURce.....	479

TRIGger[:SEquence]:SLOPe <TriggerSlope>

This command selects the slope of the trigger signal.

The trigger slope applies to all trigger sources.

Parameters:

<TriggerSlope> POSitive | NEGative
*RST: POSitive

Example: TRIG:SLOP NEG

TRIGger[:SEQuence]:LEVel:IQPower <IQPowerLevel>

This command defines the trigger level of the I/Q power trigger.

Prerequisites for this command: Select I/Q power trigger [TRIGger\[:SEQuence\]:SOURce](#) on page 406.

Parameters:

<IQPowerLevel> *RST: -20
Default unit: dBm

Example: TRIG:SOUR IQP
TRIG:LEV:IQP -10
Configure I/Q power trigger.

TRIGger[:SEQuence]:SOURce <TriggerSource>

This command selects the trigger source.

Parameters:

<TriggerSource> IMMEDIATE | EXTERNAL | VIDEO | IQPower | GATED

IMMEDIATE

Selects Free Run measurements.

EXTERNAL

Selects an external trigger.

VIDEO

Selects the video trigger.

IQPower

Selects an IQ Power trigger.

Gated

Selects a gated trigger.

*RST: IMMEDIATE

For more information, see chapter "Setting the Sweep".

Example: TRIG:SOUR EXT
Selects the external trigger input as source of the trigger signal.

14.6.5.5 Setting the Marker

The following chapter describes command necessary to configure the markers.

List of commands

CALCulate<1...2>:MATH<1...2>:STATe.....	480
CALCulate<1...2>:MARKer<1...6>:AOFF.....	480
CALCulate<1...2>:MARKer<1...6>:X.....	480
CALCulate<1...2>:MARKer<1...6>:Y?.....	481
CALCulate<1...2>:DELTamarker<1...6>[:STATe].....	481
CALCulate<1...2>:DELTamarker<1...6>:AOFF.....	482
CALCulate<1...2>:DELTamarker<1...6>:X.....	482
CALCulate<1...2>:DELTamarker<1...6>:X:RElative.....	482
CALCulate<1...2>:DELTamarker<1...6>:Y?.....	483

CALCulate<1...2>:MATH<1...2>:STATe <State>

This command turns trace mathematics on and off.

The numeric suffix at CALCulate is irrelevant for this command.

The numeric suffix at MATH selects the number of the trace.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:MATH:STAT ON
 Switches on the trace mathematics.

CALCulate<1...2>:MARKer<1...6>:AOFF

This command turns off all active markers, delta markers and active marker measurement functions.

This command is an event and therefore has no query and no *RST value.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Example:

CALC:MARK:AOFF
 Switches off all markers.

Usage:

Event

CALCulate<1...2>:MARKer<1...6>:X <FrequencyOrTime>

This command positions a marker on a particular coordinate on the horizontal axis.

If one or more delta markers (2 to 6) are already active, the command turns these delta markers into normal markers.

Note that it is possible to place the marker outside the visible trace. In that case, this value is invalid.

If necessary, the corresponding delta marker is activated first.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<FrequencyOrTime> Indicates the coordinate on the horizontal axis.
The unit in spectrum analyzer mode depends on the measurement, e.g. Hz for measurements in the frequency domain and seconds for measurements in the time domain.
Range: Maximum span.
Default unit: GHz

Example:

CALC:MARK2:X 10.7MHz
Positions marker 2 to frequency 10.7 MHz.

CALCulate<1...2>:MARKer<1...6>:Y?

This command queries the absolute vertical position of a marker.

If necessary, the corresponding marker is activated first.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end between activating the delta marker and reading out the result. This is only possible in single sweep mode.

The unit of the return value depends on UNIT<1...2>:POWer.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at MARKer selects the marker.

Parameters:

<MarkerPosition> Numeric value of the marker position.

Example:

INIT:CONF OFF
CALC:MARK2 ON
Turns on single sweep mode and marker 2.
INIT;*WAI
Starts a sweep and waits for the end.
CALC:MARK2:Y?
Queries the position of marker 2.

Usage: Query only

CALCulate<1...2>:DELTamarker<1...6>[:STATe] <State>

This command turns delta markers on and off.

If you set the suffix at DELTmarker to 1, or use no suffix, the R&S Cable Rider ZPH interprets this as delta marker 2 because the first marker has to be a normal marker. If more than one normal marker (2 to 6) is already active, the command turns these markers into delta markers. If no delta marker is active yet, the command activates the delta marker and positions it on the trace maximum.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

CALC:DELT3 ON
 Turns on delta marker 3 or turn marker 3 into a delta marker.

CALCulate<1...2>:DELTamarker<1...6>:AOFF

This command turns off all active delta markers.

This command is an event and therefore has no query and no *RST value.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Example:

CALC:DELT:AOFF
 Turns off all delta markers.

Usage:

Event

CALCulate<1...2>:DELTamarker<1...6>:X <FrequencyOrTime>

This command positions a delta marker on a particular coordinate on the horizontal axis.

Note that it is possible to place the marker outside the visible trace. In that case, this value is invalid.

If necessary, the corresponding delta marker is activated first.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Parameters:

<FrequencyOrTime> Numeric value that indicates the coordinate on the horizontal axis.

Range: Maximum span.

Default unit: GHz

Example:

CALC:DELT:MOD REL
 Delta marker positions are relative to marker 1.
 CALC:DELT2:X 10.7MHz
 Positions delta marker 2 10.7 MHz to the right of marker 1.
 CALC:DELT2:X?
 CALC:DELT2:X:REL?
 Queries the absolute and relative position of delta marker 2.

CALCulate<1...2>:DELTamarker<1...6>:X:RELative <FrequencyOrTime>

This command positions a delta marker on a position relative to the reference marker.

If necessary, the corresponding delta marker is activated first.

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Parameters:

<FrequencyOrTime> Defines the distance of the marker to the reference marker.
 Range: Depends on the current scaling of the horizontal axis.
 Default unit: GHz

Example:

CALC:DELT3:X:REL 5 kHz

Sets the delta marker at a distance of 5 kHz to the reference position.

CALCulate<1...2>:DELTmarker<1...6>:Y?

This command queries the vertical position of a delta marker. The result is always a relative value in relation marker 1.

If necessary, the corresponding delta marker is activated first.

To get a valid result, you have to perform a complete sweep with synchronization to the sweep end between activating the delta marker and reading out the result. This is only possible in single sweep mode.

In spectrum analyzer mode, the unit depends on the unit you have set and the scaling of the vertical axis.

Parameter or measuring functions	Output unit
DBM DBPW DBUV DBMV DBUA	dB (lin/log)
WATT VOLT AMPere	dB (lin), % (log)

The numeric suffix at CALCulate is irrelevant for this command. The numeric suffix at DELTmarker selects the deltamarker.

Parameters:

<MarkerPosition>

Example:

INIT:CONT OFF

CALC:DELT2 ON

Turns on single sweep mode and delta marker 2.

INIT;*WAI

Starts a sweep and waits for its end.

CALC:DELT2:Y?

Queries the position of delta marker 2.

Usage:

Query only

14.6.5.6 Setting the Measurement Mode

The following chapter describes command necessary to switch to the correct measurement mode.

List of commands

CALCulate<1...2>:FEED.....	484
INSTrument[:SElect].....	484
INSTrument:NSElect.....	485

CALCulate<1...2>:FEED <Measurement>

This command switches the measurement mode.

The numeric suffix at CALCulate is irrelevant for this command

Suffix:

<1...2> 1...2

Parameters:

<Measurement> String containing the measurement mode (analog modulation or digital modulation):

Example:

CALC:FEED 'XTIM.AM'

Switches the analog measurement mode to AM Time.

CALC:FEED 'XTIM.FM'

Switches the analog measurement mode to FM Time.

CALC:FEED 'XTIM.FMSummary'

Switches the analog measurement mode to FM Summary.

CALC:FEED 'XTIM:DDEM:ERR:MPH'

Switches the digital measurement mode to error result display.

CALC:FEED 'XTIM:DDEM:EYE'

Switches the digital measurement mode to eye diagram.

CALC:FEED 'XTIM:DDEM:MEAS'

Selects the modulation depth (ASK) or modulation deviation (FSK) result display.

CALC:FEED 'XTIM:DDEM:SYMB'

Switches the digital measurement mode to symbol stream result display.

INSTrument[:SElect] <OperatingMode>

This command selects the operating mode.

Parameters:

<OperatingMode> SANalyzer | PM | ADEModulation | DDEMod | RECeiver |
MAPS | ACT

SANalyzer
spectrum analyzer

PM
power meter

ADEModulation
analog modulation

DDEMod
digital modulation

RECeiver

receiver

MAPS

map

ACT

cable and antenna analyzer

*RST: SAN

Example:

INST SAN

Selects spectrum analyzer mode.

INSTrument:NSElect <OperatingMode>

This command selects the operating mode.

Parameters:

<OperatingMode> **1**
spectrum analyzer

5
power meter

18
analog modulation

*RST: 1

Example:

INST:NSEL 1

Selects spectrum analyzer mode.

14.6.5.7 Setting Measurement Configuration

The following chapter describes command necessary to set the measurement configuration.

List of commands

CALCulate<1...2>:FSK:DEViation:REFerence[:VALue]	485
[SENSe:]DDEMod:BURSt[:STATe]	486
[SENSe:]DDEMod:FILTer:ALPHA	486
[SENSe:]DDEMod:FILTer:NAME	486
[SENSe:]DDEMod:FILTer[:STATe]	487
[SENSe:]DDEMod:SRATe	487
[SENSe:]DDEMod:TIME	487

CALCulate<1...2>:FSK:DEViation:REFerence[:VALue] <FrequencyDeviation>

This command sets and queries the frequency deviation in the FSK signal.

The numeric suffix at CALCulate is irrelevant for this command

Suffix:

<1...2> 1...2

Parameters:

<FrequencyDev> Range: 1 kHz to 200 kHz
 Default unit: Hz

Example:

CALC:FSK:DEV:REF 1 KHZ
 Set frequency deviation as 1 kHz.

[SENSe:]DDEMod:BURSt[:STATe] <State>

This command turns burst processing on and off.

Parameters:

<State> ON | OFF | 1 | 0
 ON | 1
 Turn on burst processing..
 OFF | 0
 Turn off burst processing..

Example:

DDEM:BURS ON
 Turn on burst processing.

[SENSe:]DDEMod:FILTer:ALPHa <Alpha>

This command defines the roll-off factor of the measurement filter (alpha or BT value).

Parameters:

<Alpha> Range: 0 to 1
 *RST: 1

Example:

DDEM:FILT:ALPH 0.35
 Define roll-off factor.

[SENSe:]DDEMod:FILTer:NAME <FilterName>

This command selects the measurement filter.

If you want to use no filter (unfiltered measurements), see [\[SENSe:\]DDEMod:FILTer\[:STATe\]](#) on page 487.

Parameters:

<FilterName> RRC | RC | GAUS
 RRC
 Selects a root raised cosine filter.
 RC
 Select a raised cosine filter.
 GAUS
 Select a Gaussian filter.

Example:

DDEM:FILT:NAME RRC
 Select RRC filter.

[SENSe:]DDEMod:FILTer[:STATe] <State>

This command turns the measurement filter on and off.

Parameters:

<State>	OFF 0 Turns off the measurement filter for unfiltered measurements.
	ON 1 Turns on the measurement filter selected with [SENSe:]]DDEMod:FILTer:NAME on page 486.

[SENSe:]DDEMod:SRATe <SymbolRate>

This command defines the symbol rate.

Parameters:

<SymbolRate>	Default unit: Hz

Example: DDEMod:SRAT 10KHZ
Define symbol rate.

[SENSe:]DDEMod:TIME <ResultLength>

This command defines the number of symbols to be evaluated.

Parameters:

<ResultLength>	Range: 20 to frprnfd on measurement filter
	*RST: 100

Example: DDEMod:TIME 150
Define the number of symbols.

14.6.5.8 Reading out Measurement Results

The following chapter describes command necessary to display the measurement results.

List of commands

CALCulate<1...2>:MARKer:FUNCTion:DDEMod:CARRier[:RESult]?	488
CALCulate<1...2>:MARKer:FUNCTion:DDEMod:CFDRift[:RESult]?	488
CALCulate<1...2>:MARKer:FUNCTion:DDEMod:CFERror[:RESult]?	488
CALCulate<1...2>:MARKer:FUNCTion:DDEMod:MDEPth[:RESult]?	489
CALCulate<1...2>:MARKer:FUNCTion:DDEMod:MDEViation[:RESult]?	489
CALCulate<1...2>:MARKer:FUNCTion:DDEMod:MERRor[:RESult]?	489
CALCulate<1...2>:MARKer:FUNCTion:DDEMod:MINDex[:RESult]?	490
CALCulate<1...2>:MARKer:FUNCTion:DDEMod:MOERror[:RESult]?	490
CALCulate<1...2>:MARKer:FUNCTion:DDEMod:MPower[:RESult]?	490
[SENSe:]DDEMod	491
[SENSe:]DDEMod:FSK:OFFSet?	491
TRACe<1...2>[:DATA]?	491

CALCulate<1...2>:MARKer:FUNCtion:DDEMod:CARRier[:RESult]?

This command queries the carrier power of the measured signal.

The numeric suffix at CALCulate is not irrelevant for this command.

Suffix:

<1...2> 1...2

Return values:

<Power> <numeric value>
Default unit: dBm

Example:

CALC:MARK:FUNC:DDEM:CARR?
Query carrier power

Usage:

Query only

CALCulate<1...2>:MARKer:FUNCtion:DDEMod:CFDRift[:RESult]?

This command queries the carrier frequency drift of the measured signal.

Prerequisites for this command: Select FSK demodulation [SENSe:]DDEMod on page 491.

The numeric suffix at CALCulate is not irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<Frequency> <numeric value>
Default unit: Hz/symbol

Example:

CALC:MARK:FUNC:DDEM:CFDR?
Query carrier frequency drift.

Usage:

Query only

CALCulate<1...2>:MARKer:FUNCtion:DDEMod:CFERror[:RESult]?

This command queries the carrier frequency error of the measured signal.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<Frequency> <numeric value>
Default unit: Hz

Example:

CALC:MARK:FUNC:DDEM:CFER?
Query carrier frequency error.

Usage:

Query only

CALCulate<1...2>:MARKer:FUNCtion:DDEMod:MDEPth[:RESult]?

This command queries the modulation depth of the measured signal.

Prerequisites for this command: Select ASK demodulation [\[SENSe:\] DDEMod](#) on page 491.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<ModIndex> <numeric value>
Default unit: PCT

Example:

CALC:MARK:FUNC:DDEM:MDEP?
Query modulation depth.

Usage:

Query only

CALCulate<1...2>:MARKer:FUNCtion:DDEMod:MDEViation[:RESult]?

This command queries the frequency deviation of the measured signal.

Prerequisites for this command: Select FSK demodulation [\[SENSe:\] DDEMod](#) on page 491.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<Frequency>> <numeric value>
Default unit: Hz

Example:

CALC:MARK:FUNC:DDEM:MDEV?
Query frequency deviation.

Usage:

Query only

CALCulate<1...2>:MARKer:FUNCtion:DDEMod:MERRor[:RESult]?

This command queries the magnitude error of the measured signal.

Prerequisites for this command: Select FSK demodulation [\[SENSe:\] DDEMod](#) on page 491.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<MagnitudeError> <numeric value>
 Default unit: PCT

Example:

CALC:MARK:FUNC:DDEM:MERR?
 Query magnitude error.

Usage:

Query only

CALCulate<1...2>:MARKer:FUNCTION:DDEMod:MINdex[:RESult]?

This command queries the modulation index of the measured signal.

Prerequisites for this command: Select ASK demodulation [[SENSe: \] DDEMod](#) on page 491.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<ModIndex> <numeric value>
 Default unit: PCT

Example:

CALC:MARK:FUNC:DDEM:MIND?
 Query modulation index.

Usage:

Query only

CALCulate<1...2>:MARKer:FUNCTION:DDEMod:MOError[:RESult]?

This command queries the modulation error.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<ModError>> <numeric value>
 Default unit: PCT

Example:

CALC:MARK:FUNC:DDEM:MOER?
 Query modulation error.

Usage:

Query only

CALCulate<1...2>:MARKer:FUNCTION:DDEMod:MPOwer[:RESult]?

This command queries the power of the carrier signal.

The numeric suffix at CALCulate is irrelevant for this command.

Suffix:	
<1...2>	1...2
Parameters:	
<Power>>	<numeric value> Default unit: PCT
Example:	CALC:MARK:FUNC:DDEM:MPOW?? Query carrier power.
Usage:	Query only

[SENSe:]DDEMod <DemodType>

This command selects the demodulation scheme of the signal you are measuring.
The numeric suffix at CALCulate is irrelevant for this command.

Parameters:	
<DemodType>	ASK FSK
ASK	Selects ASK modulation.
FSK	Selects FSK modulation.

Example:	DDEM ASK Select measurement.

[SENSe:]DDEMod:FSK:OFFSet?

This command queries the measured frequency deviation of an FSK signal.
Prerequisites for this command: Select FSK demodulation [\[SENSe:\]DDEMod](#) on page 491.
The numeric suffix at CALCulate is irrelevant for this command.

Parameters:	
<Frequency>>	<numeric value> Default unit: Hz
Example:	DDEM:FSK:OFFS? Query frequency deviation.
Usage:	Query only

TRACe<1...2>[:DATA]? [<arg0>]

This command queries the trace data of the current measurement.
It also transfers data from a file to a particular trace.
With the command [FORMat \[:DATA\]](#) on page 354, you can set the data format.

With the command `CALCulate<1...2>:FEED` on page 468, you can select the result display.

The numeric suffix at TRACe is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<arg0> TRACe1 | TRACe2 | LIST | PHOLd | RAW

TRACe1

Queries the data of trace 1.

TRACe2

Queries the data of trace 2.

LIST

Queries the peak list of the measurement.

PHOLd

Queries the scanned peak hold list in the receiver mode measurement.

RAW

Queries the raw FSK/ASK data in the analog demodulation mode measurement.

The R&S Cable Rider ZPH returns 711 values. Each value corresponds to one pixel of a trace.

The unit depends on the measurement and the unit you have set with `UNIT<1...2>:POWER`.

Note: If you use the auto peak detector, the command reads out positive peak values only.

Example:

TRAC:DATA? TRACE1

Reads out the data for trace 1.

Usage:

Query only

14.6.6 Remote Commands of the Power Meter

The chapter provides information on remote commands that configure and perform power measurements with the power sensor. These commands are available in power meter mode only.



Availability of remote commands for Power Sensor measurements

Note that the listed remote commands take effect only if a power sensor is connected.

- [Setting the Frequency](#).....493
- [Setting the Wavelength](#).....493
- [Configuring Power Level Readout](#).....493
- [Defining the Measurement Time](#).....495
- [Zeroing of the Power Sensor](#).....495
- [Forward Power Display](#).....496

- [Defining the Video Bandwidth](#).....496
- [Reading Out Measurement Results](#).....497
- [Selecting a Telecommunication Standard](#).....497

14.6.6.1 Setting the Frequency

The following chapter describes commands necessary to define frequency settings.

List of commands

[\[SENSe:\]PMETer:FREQuency](#).....493

[SENSe:]PMETer:FREQuency <Frequency>

This command sets the frequency of the power sensor.

Parameters:

<Frequency> Specified in the data sheet.
 Default unit: GHz

Example:

PMET:FREQ 500 MHZ
 Sets the power sensor's frequency to 500 MHz.

14.6.6.2 Setting the Wavelength

The following chapter describes commands necessary to define the wavelength settings for the operation of optic power sensor.

List of commands

[\[SENSe:\]PMETer:WAVeLength](#).....493

[SENSe:]PMETer:WAVeLength <Wavelength>

This command sets the wavelength when the optical power sensor is connected.

See the respective optic power sensor specification for the supported wavelength.

Parameters:

<Wavelength> Default unit: NM

Example:

PMET:WAV 1550 NM
 Set wavelength as 1550 nm.

14.6.6.3 Configuring Power Level Readout

The following chapter describes commands that configure the power level readout.

List of commands

CALCulate<1...2>:PMETer:RELative[:MAGNitude].....	494
CALCulate<1...2>:PMETer:RELative[:MAGNitude]:AUTO.....	494
CALCulate<1...2>:PMETer:RELative[:MAGNitude]:OFFSet.....	494
UNIT<1...2>:PMETer:POWer.....	494

CALCulate<1...2>:PMETer:RELative[:MAGNitude] <RefLevel>

This command sets the reference value for relative measurements.

The numeric suffix at CALCulate is irrelevant for this command.

Parameters:

<RefLevel> Default unit: dBm

Example:

CALC:PMET:REL 30

The reference value to 30 dBm.

CALCulate<1...2>:PMETer:RELative[:MAGNitude]:AUTO <ONCE>

This command sets the current measurement result as the reference level for relative measurements.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALCulate is irrelevant for this command.

Parameters:

<ONCE> ONCE

Example:

CALC:PMET:REL ONCE

CALCulate<1...2>:PMETer:RELative[:MAGNitude]:OFFSet <RefLvIOffset>

This command sets an offset for the reference value.

The numeric suffix at CALCulate is irrelevant for this command.

Parameters:

<RefLvIOffset> Default unit: dB

Example:

CALC:PMET:REL -10

UNIT<1...2>:PMETer:POWer <Unit>

This command selects the unit of the power sensor.

The numeric suffix at UNIT has the following effects:

Table 14-4: Power measurement with R&S FSH-Z1, R&S FSH-Z18 and USB power sensors:

Unit 1	Power unit.
Unit 2	Not available.

Table 14-5: Power measurement with R&S FSH-Z14 and R&S FSH-Z44:

Unit 1	Forward power.
Unit 2	Reflected power.

Suffix:

<1...2> 1...2

Parameters:

<Unit> DBM | DB | WATT | VSWR | W | DUVM | DBUV | DBMV | DUVE | DMVE | W_M2 | V_M

Note on the parameter DB: when applied to UNIT1, the power is relative to the reference level, when applied to UNIT2, the return loss is displayed.

Note on the parameter VSWR: the parameter is only available if applied to UNIT2.

Example:

UNIT1:PMET:POW DBM

When measuring with the R&S FSH-Z1, R&S FSH-Z18 or USB power sensors: sets unit to dBm.

When measuring with the R&S FSH-Z14 or R&S FSH-Z44: sets unit of forward power to dBm.

14.6.6.4 Defining the Measurement Time

The following chapter describes commands to define the measurement time of the power sensor.

List of commands

[SENSe:]PMETer:MTIME..... 495

[SENSe:]PMETer:MTIME <MeasTime>

This command sets the duration of measurements.

Available for measurements with a power sensor.

Parameters:

<MeasTime> SHORt | NORMaL | LONG

Example:

PMET:MTIME SHOR

Sets a short measurement time for power measurements.

14.6.6.5 Zeroing of the Power Sensor

The following chapter describes commands to perform zeroing of the power sensor.

List of commands

CALibration<1...2>:PMETer:ZERO:AUTO..... 496

CALibration<1...2>:PMETer:ZERO:AUTO <ONCE>

This command starts to zero the power sensor.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at CALibration is irrelevant for this command.

Parameters:

<ONCE> ONCE

Example:

CAL:PMET:ZERO:AUTO ONCE

Starts to zero the power meter.

14.6.6.6 Forward Power Display

Note that the forward power is only available in conjunction with the R&S FSH-Z14 or R&S FSH-Z44.

List of commands

[SENSe:]PMETer:DETector[:FUNction]..... 496

[SENSe:]PMETer:DETector[:FUNction] <Detector>

This command selects the forward power display of the power sensor.

Parameters:

<Detector> AVERage | PENvelope

AVERage

Displays the average power.

PENvelope

Displays the peak envelope power.

*RST: -

Example:

PMET:DET AVER

Selects the Average weighting mode.

14.6.6.7 Defining the Video Bandwidth

Selecting a video bandwidth is only possible when you are measuring the peak envelope power with the R&S FSH-Z44 power sensor based on a customized (= user) standard.

See the following commands for more information about these conditions:

- [SENSe:]PMETer:DETector[:FUNction] on page 496
- CALCulate<1...2>:PMETer:PRESet[:STATe] on page 498
- CALCulate<1...2>:PMETer:PRESet:SElect on page 498

List of commands

[CALCulate<1...2>:PMETer:PRESet:BANDwidth:VIDeo](#)..... 497

CALCulate<1...2>:PMETer:PRESet:BANDwidth:VIDeo <VideoBW>

This command defines the video bandwidth of the R&S FSH-Z44 power sensor.

The numeric suffix at CALCulate is irrelevant for this command.

Parameters:

<VideoBW> Default unit: GHz

Example:

CALC : PMET : PRES : BAND : VID 10MHZ

Defines a video bandwidth of 10 MHz.

14.6.6.8 Reading Out Measurement Results

The following chapter describes commands to read measurement result from the power sensor.

List of commands

[FETCh<1...2>:PMETer](#)..... 497

FETCh<1...2>:PMETer

This command queries the results of measurements with the power sensor.

The numeric suffix at FETCh is irrelevant for this command.

Parameters:

<Return values> The return values depend on the power sensor in use and the selected suffix at FETCh.

Measurements with R&S FSH-Z1 or R&S FSH-Z18:

FETC1 : PMET? power in dBm.

FETC2 : PMET? n/a

Measurements with R&S FSH-Z14 or R&S FSH-Z44:

FETC1 : PMET? forward power in dBm.

FETC2 : PMET? reflected power in dBm.

Example:

FETC2 : PMET?

Returns nothing for R&S FSH-Z1 / R&S FSH-Z18 and the reflected power for R&S FSH-Z14 / R&S FSH-Z44.

14.6.6.9 Selecting a Telecommunication Standard

These commands apply radio communication standards to measurements with the power sensor.

Note that the selection of a standard is available only for the power sensors R&S FSH-Z1, -Z14, -Z18 and Z-44.

List of commands

CALCulate<1...2>:PMETer:PRESet[:STATe].....	498
CALCulate<1...2>:PMETer:PRESet:SElect.....	498

CALCulate<1...2>:PMETer:PRESet[:STATe] <State>

This command turns on or off the use of a standard.

The numeric suffix at CALCulate is irrelevant for this command.

Parameters:

<State> ON | OFF

Example:

CALC:PMET:PRESet ON

Activates usage of a standard.

CALCulate<1...2>:PMETer:PRESet:SElect <Standard>

This command selects the standard for power sensor measurements.

The numeric suffix at CALCulate is irrelevant for this command.

Parameters:

<Standard> E.g. GSM | EDGE | WCDMA | CDMAOne | CDMA2000 | DVBT |
DAB | TETRA | USER

Example:

CALC:PMET:PRESet:SElect GSM

Selects the GSM standard for power sensor measurements.

14.6.7 File Management

The following commands perform various tasks in the context of file management.

These commands are independent from the operating mode.

List of commands

MMEemory:CATalog?.....	499
MMEemory:CATalog:DIRectories?.....	499
MMEemory:CDIRectory.....	499
MMEemory:COPY.....	499
MMEemory:DATA.....	500
MMEemory:DElete.....	500
MMEemory:FILE.....	501
MMEemory:FILE:DATE.....	501
MMEemory:FILE:TIME.....	501
MMEemory:INIT.....	501
MMEemory:LOAD:STATe.....	502
MMEemory:MDIRectory.....	502
MMEemory:MOVE.....	502
MMEemory:RDIRectory.....	503

MMEMory:STORe:STATe.....	503
SYSTem:SET:LOCK.....	503
SYSTem:SET:UNLock.....	504

MMEMory:CATalog?

This command queries the files of the current directory.

You can select directories with [MMEMory:CDIRectory](#) on page 499.

This command is a query and therefore has no *RST value.

Example: MMEM:CDIR '\Public\Limit Lines'
 Opens directory 'Limit Lines'.
 MMEM:CAT?
 Returns all files in \Public\Limit Lines.

Usage: Query only

MMEMory:CATalog:DIRectories?

This command queries the directories of the current directory.

This command is a query and therefore has no *RST value.

Example: MMEM:CDIR '\Public'
 Opens directory \Public.
 MMEM:CAT:DIR?
 Returns all directories in the \Public directory.

Usage: Query only

MMEMory:CDIRectory <PathName>

This command changes the current directory.

Parameters:

<PathName> String containing the path to another directory.

Example: MMEM:CDIR '\Public'
 Opens directory \Public.

MMEMory:COPY <SourceFile>, <Destination>

This command copies one or more files to another directory.

This command is an event and therefore has no *RST value and no query.

Parameters:

<SourceFile> String containing the path and filename of the source file.

<Destination> String containing the path and name of the destination file.

Example: `MMEM:COPY '\Public\Standards\cdmaOne.obwstd',
'\USB\cdmaOne.std'`
Copies the cdmaOne standard file to a memory stick.

Usage: Setting only

MMEMory:DATA <TargetFile>[, <Block>]

This command writes block data into a file. The delimiter must be set to EOI to obtain error-free data transfer.

When you query the contents of a file, you can save them in a file on the remote control computer.

The command is useful for reading stored settings files or trace data from the instrument or for transferring them to the instrument.

Parameters:

<TargetFile> String containing the path and filename.

<Block> <block_data>
Data block with the structure:
represents hash sign
<number> represents length of the length information
<number> represents length information of the binary data (number of bytes)
<data> binary data with the indicated number of bytes

Example: `MMEM:NAME '\Public\User\Testfile.txt'`
Creates a new file called 'Testfile.txt'.
`MMEM:DATA
'\Public\User\Testfile.txt',#220`Contents of the file
The parameters mean:
- '\Public\...' selects the target file
- #2: hash sign and length of the length information (20 bytes = 2 digits)
- 20: indicates the number of subsequent binary data bytes
- Contents of the file: store 20 binary bytes (characters) to the file
`MMEM:DATA? '\Public\User\Testfile.txt'`
Transfers the contents of the file 'Testfile.txt' to the control computer.

MMEMory:DELeTe <File>

This command deletes a file.

Parameters:

<File> String containing the path and filename of the file to delete.

Example: `MMEM:DEL '\Public\Screen Shots\Screen0001.png'`
Deletes the file Screen0001.png.

Usage: Setting only

MMEMory:FILE <FileName>[, <Block>]

This command creates a file.

Parameters:

<FileName> String containing the filename.
 <Block> <block_data>

Example: `MMEM:FILE 'TEST.TXT'`
 Creates the file TEST.TXT.

MMEMory:FILE:DATE <FileName>[, <Year>, <Month>, <Day>]

This command sets the date of a file.

Parameters:

<FileName> String containing the path and filename.
 <Year> Range: 1980 to 2099
 <Month> Range: 1 to 12
 <Day> Range: 1 to 31

Example: `MMEM:FILE:DATE '\Public\Screen Shots\Screen0001.png', 2006, 04, 01`
 Sets the date to April, 1st, 2006.
`MMEM:FILE:DATE? '\Public\Screen Shots\Screen0001.png'`
 Returns the modification date of the file Screen0001.png.

MMEMory:FILE:TIME <FileName>[, <Hour>, <Minutes>, <Seconds>]

This command sets the time of a file. The sequence of entry is hour, minute, second.

Parameters:

<FileName> String containing the path and filename.
 <Hour> Range: 0 to 23
 <Minutes> Range: 0 to 59
 <Seconds> Range: 0 to 59

Example: `MMEM:FILE:TIME '\Public\Screen Shots\Screen0006.png', 11, 04, 00`
 Sets the time to 11:04:00.

MMEMory:INIT [<DriveName>]

This command formats the indicated drive.

Note: Formatting deletes all data stored on the memory drive.

This command is an event and therefore has no *RST value and no query.

Parameters:

<DriveName>

Example:

MMEM:INIT

Formats and deletes all data from the drive.

Usage:

Setting only

MMEMory:LOAD:STATe <1>, <SettingsFile>

This command loads the settings from a *.set file.

Parameters:

<1>

<SettingsFile>

String containing the path and filename.

Example:

MMEM:LOAD:STAT 1,

'\Public\Datasets\Dataset001.set'

Loads the settings from the file Dataset001.

Usage:

Setting only

MMEMory:MDIRectory <DirectoryName>

This command creates a new directory.

This command is an event and therefore has no *RST value and no query.

Parameters:

<DirectoryName>

String containing the path and new directory name.

Example:

MMEM:MDIR '\Public\USER'

Creates a directory called 'User'.

Usage:

Setting only

MMEMory:MOVE <SourceFile>, <Destination>

This command renames files, if <file_destination> contains no path. Otherwise the file is moved to the indicated path and stored under the filename specified there.

This command is an event and therefore has no *RST value and no query.

Parameters:

<SourceFile>

String containing the path and filename of the source file.

<Destination>

String containing the path and name of the destination file.

Example: MMEM:MOVE '\Public\Screen
Shots\Screen0002.png', '\Public\Screen
Shots\Screen0001.png'
Renames Screen0002.png to Screen0001.png
MMEM:MOVE '\Public\Screen
Shots\Screen0001.png', '\Public\Test\Pic1.png'
Moves file Screen0006.png to the 'Test' folder and renames the
file Pic1.png.

Usage: Setting only

MMEMory:RDIRECTory <DirectoryName>

This command deletes the indicated directory. The directory name includes the path and may also include the drive name. The path name complies with DOS conventions.

This command is an event and therefore has no *RST value and no query.

Parameters:

<DirectoryName> String containing the path of the directory to delete.

Example: MMEM:RDIR '\Public\Screen Shots\
Deletes the directory 'Screen Shots'.

Usage: Setting only

MMEMory:STORe:STATe <1>, <TargetFile>

This command stores the current device settings in a *set file.

This command is an event and therefore has no *RST value and no query.

Parameters:

<1>

<TargetFile>

Example: MMEM:STOR:STAT 1, 'DATASET001.SET'
Saves the current device settings in the file DATASET001.SET.

Usage: Setting only

SYSTem:SET:LOCK <arg0>

This command adds write-protection to a dataset.

Parameters:

<arg0> String containing the path and name of the dataset.

Example: SYST:SET:LOCK 'Dataset001.set'
Protects the file Dataset001.set from overwriting.

SYSTem:SET:UNLock <arg0>

This command removes write-protection from a dataset.

Parameters:

<arg0> String containing the path and name of the dataset.

Example:

SYST:SET:UNL 'Dataset001.set'
Removes write-protection from the file Dataset001.set.

14.6.8 Making and Storing Screenshots

The following commands manage screenshots.

These commands are independent from the operating mode.

List of commands

DISPlay<1...2>[:WINDow]:STORe.....	504
HCOPy:DEViCe:LANGuage.....	504
HCOPy[:IMMediate].....	505
MMEMory:NAME.....	505

DISPlay<1...2>[:WINDow]:STORe <TargetFile>

This command makes a screenshot of the current display content in png or jpg format and stores it on the R&S Cable Rider ZPH internal memory.

You can select a filename for the screenshot in png format with [MMEMory:NAME](#) on page 505 and select the file format of the screenshot with [HCOPy:DEViCe:LANGuage](#) on page 504.

This command is an event and therefore has no *RST value and no query.

The numeric suffix at DISPlay is irrelevant for this command.

Parameters:

<TargetFile>

Example:

HCOP:DEV:LANG PNG
MMEM:NAME '\Public\Screen Shots\Test.png'
DISP:WIND:STOR
Makes and stores a screenshot of the current screen in a file 'Test.png'.

Usage:

Setting only

HCOPy:DEViCe:LANGuage <Format>

This command selects the file format for screenshots.

Parameters:

<Format> PNG | JPG

Example: `HCOP:DEV:LANG PNG`
Selects the png format for screenshots.

HCOPy[:IMMediate]

This command makes a screenshot of the current display content in png format and stores it on the R&S Cable Rider ZPH internal memory.

You can select a filename for the screenshot in png format with `MMEMory:NAME` on page 505 and select the file format of the screenshot with `HCOPy:DEvice:LANGUage` on page 504.

To make a screenshot in jpg format, use `DISPlay<1...2>[:WINDow]:STORe` on page 504.

This command is an event and therefore has no *RST value and no query.

Example: `HCOP:DEV:LANG PNG`
`MMEM:NAME '\Public\Screen Shots\Test.png'`
`HCOP`
Makes and stores a screenshot of the current screen in a file 'Test.png'.

Usage: Event

MMEMory:NAME <FileName>

This command defines the path and filename that the R&S Cable Rider ZPH uses for storing screenshots (see `HCOPy[:IMMediate]` on page 505). The path and filename comply with DOS conventions.

This command is an event and therefore has no *RST value and no query.

Parameters:

<FileName> String containing the filename.

Example: `MMEM:NAME 'Public\Screenshots\Test.png'`
Stores the screenshot in the corresponding directory on the R&S Cable Rider ZPH.

14.6.9 Configuring Data Capture

The following commands configure the data capture.

These commands are independent from the operating mode.

List of commands

<code>SYSTem:CAPTure:COUNter</code>	506
<code>SYSTem:CAPTure:DATaset[:STATe]</code>	506
<code>SYSTem:CAPTure:MODE</code>	506
<code>SYSTem:CAPTure:SCReen[:STATe]</code>	506

SYSTem:CAPTure:COUNter <CaptureCounter>

This command defines the start of the filename counter.

The counter numbers the files stored when you capture data (screenshots, datasets etc.).

Parameters:

<CaptureCounter> String containing the number with which to start numbering files.
*RST: '0000'

Example:

SYST:CAPT:COUN '0100'
Starts numbering files with 0100, e.g. Measurement0100.png.

SYSTem:CAPTure:DATaset[:STATe] <State>

This command includes or excludes datasets from the data capture.

Parameters:

<State> ON | OFF
*RST: OFF

Example:

SYST:CAPT:DAT ON
Includes datasets into the data capture.

SYSTem:CAPTure:MODE <CaptureMode>

This command selects the data types that the R&S Cable Rider ZPH saves when you capture the current measurement data.

Parameters:

<CaptureMode> SCReen | DATaset | BOTH
SCReen
Saves a screenshot.
DATaset
Saves a dataset.
BOTH
Saves a screenshot and a dataset.
*RST: SCReen

Example:

SYST:CAPT:MODE BOTH
Captures both a screenshot and a dataset of the current measurement.

SYSTem:CAPTure:SCReen[:STATe] <State>

This command includes or excludes screenshots from the data capture.

Parameters:

<State> ON | OFF
*RST: ON

Example: `SYST:CAPT:SCR ON`
Includes screenshots into the data capture.

14.6.10 Saving Events

The following commands configure the circumstances under which the R&S Cable Rider ZPH saves events.

These commands are independent from the operating mode.

Using the commands requires a GPS receiver and a storage device (SD card or memory stick).

List of commands

<code>SYSTem:SOEvent:DISTance:INTerval</code>	507
<code>SYSTem:SOEvent:LIMits:MODE</code>	507
<code>SYSTem:SOEvent:RECORDing:STORage</code>	508
<code>SYSTem:SOEvent:SOURce</code>	508
<code>SYSTem:SOEvent:TIME:INTerval</code>	508
<code>SYSTem:SOEvent[:STATe]</code>	509

SYSTem:SOEvent:DISTance:INTerval <Seconds>

This command defines a distance that you must cover before the R&S Cable Rider ZPH saves another coordinate.

Parameters:

<Seconds> Distance between one coordinate and the next.
*RST: 1 m

Example:

```
SYST:SOEV ON
Turns on saving coordinates on an event.
SYST:SOEV:REC:STOR USB
Selects a USB device as the storage device.
SYST:SOEV:SOUR DIST
SYST:SOEV:DIST:INT 5
Saves the coordinates every 5 m.
```

SYSTem:SOEvent:LIMits:MODE <arg0>

This command selects the limit check condition that must occur in order to save a coordinate.

Parameters:

<arg0> STARtonfail | STOPonfail | FAILonly

STARtonfail

Starts to save all sweeps from the moment a limit check fails.

STOPonfail

Saves all sweeps until a limit check fails.

FAILonly

Saves only sweeps that contain a limit check violation.

*RST: STAR

Example:

SYST:SOEV:SOUR LIM

SYST:SOEV:LIM:MODE FAIL

Saves all sweeps that contain a violation of a limit check.

SYSTem:SOEVent:RECORDing:STORage <arg0>

This command selects the storage device to save the coordinates to.

Parameters:

<arg0> SDCard | USB

SDCard

Saves coordinates to an SD card.

USB

Saves coordinates to a USB device.

*RST: SDCard

Example:

See [SYSTem:SOEVent:DISTance:INTerval](#) on page 507

SYSTem:SOEVent:SOURce <arg0>

This command selects the type of event that triggers saving the coordinates of your current location.

Parameters:

<arg0> TIMEinterval | LIMitsfail | DISTanceint | ALLSweeps

TIMEinterval

Saves coordinates after a certain length of time has passed.

LIMitsfail

Saves coordinates when a limit check has failed.

DISTanceint

Saves coordinates after a certain distance has been covered.

ALLSweeps

Saves coordinates after each sweep.

*RST: TIMEinterval

Example:

See [SYSTem:SOEVent:DISTance:INTerval](#) on page 507.

SYSTem:SOEVent:TIME:INTerval <Seconds>

This command defines a time interval that must pass before the R&S Cable Rider ZPH saves another coordinate.

Parameters:

<Seconds> Time that must pass between one coordinate and the next.

*RST: 1 s

Example:

SYST:SOEV ON

Turns on saving coordinates on an event.

SYST:SOEV:REC:STOR USB

Selects a USB device as the storage device.

SYST:SOEV:SOUR TIM

SYST:SOEV:TIME:INT 5

Saves the coordinates every 5 seconds.

SYSTem:SOEVent[:STATe] <State>

This command turns saving of your current coordinates in case of certain events on and off.

Parameters:

<State> ON | OFF

*RST: OFF

Example: See [SYSTem:SOEVent:DISTance:INTerval](#) on page 507

14.6.11 Configuring the Instrument

The following commands configure general instrument settings.

These commands are independent from the operating mode.

Contents

• Mode Selection	509
• Controlling the GPS Receiver	510
• Display Configuration	513
• Audio Settings	514
• Setting up a Network Connection	515
• System Settings	517

14.6.11.1 Mode Selection

This chapter describes all commands that select the operating mode of the R&S Cable Rider ZPH.

List of commands

INSTrument[:SElect]	510
INSTrument:NSElect	510

INSTrument[:SElect] <OperatingMode>

This command selects the operating mode.

Parameters:

<OperatingMode> SANalyzer | PM | ADEModulation | DDEMod | RECeiver |
MAPS | ACT

SANalyzer

spectrum analyzer

PM

power meter

ADEModulation

analog modulation

DDEMod

digital modulation

RECeiver

receiver

MAPS

map

ACT

cable and antenna analyzer

*RST: SAN

Example:

INST SAN

Selects spectrum analyzer mode.

INSTrument:NSElect <OperatingMode>

This command selects the operating mode.

Parameters:

<OperatingMode> 1
spectrum analyzer

5

power meter

18

analog modulation

*RST: 1

Example:

INST:NSEL 1

Selects spectrum analyzer mode.

14.6.11.2 Controlling the GPS Receiver

This chapter describes all commands that control the GPS receiver.

List of commands

<code>SYSTem:POSition:ALTitude?</code>	511
<code>SYSTem:POSition:GPS:CONNected?</code>	511
<code>SYSTem:POSition:GPS:CORRection:FREQuency?</code>	511
<code>SYSTem:POSition:GPS:QUALity?</code>	511
<code>SYSTem:POSition:GPS:SATellites?</code>	512
<code>SYSTem:POSition:GPS[:STATe]</code>	512
<code>SYSTem:POSition:LATitude?</code>	512
<code>SYSTem:POSition:LONGitude?</code>	512
<code>SYSTem:POSition:VALid?</code>	512

SYSTem:POSition:ALTitude?

This command queries the altitude of the current position of the R&S Cable Rider ZPH.

Example: `SYST:POS:ALT?`
Return value would be, for example, 554.1.

Usage: Query only

SYSTem:POSition:GPS:CONNected?

This command queries if the R&S Cable Rider ZPH is currently connected to the GPS receiver.

Example: `SYST:POS:GPS:CONN?`

Usage: Query only

SYSTem:POSition:GPS:CORRection:FREQuency?

This command queries the frequency correction factor.

The R&S Cable Rider ZPH calculates this factor from a reference signal provided by the GPS receiver. The reference signal is used to determine the deviation of the internal clock of the instrument. The deviation can be turned into a correction factor for the measured frequency.

Example: `SYST:POS:GPS:CORR:FREQ?`
Queries the frequency correction factor.

Usage: Query only

SYSTem:POSition:GPS:QUALity?

This command queries the quality of the GPS signal.

Example: `SYST:POS:GPS:QUAL?`

Usage: Query only

SYSTem:POSition:GPS:SATellites?

This command queries the number of tracked satellites.

Example: SYST:POS:GPS:SAT?

Usage: Query only

SYSTem:POSition:GPS[:STATe] <State>

This command turns the GPS receiver on and off.

Note that the GPS receiver only works if a connection between the R&S Cable Rider ZPH and a GPS signal transmitter is established.

Parameters:

<State> ON | OFF
*RST: OFF

Example: SYST:POS:GPS ON
Activates the GPS receiver.

SYSTem:POSition:LATitude?

This command queries the latitude of the current position of the R&S Cable Rider ZPH.

Example: SYST:POS:LAT?
Return value would be, for example, 48,7,40.0 for 48°, 7 ', 40.0" in the northern hemisphere.

Usage: Query only

SYSTem:POSition:LONGitude?

This command queries the longitude of the current position of the R&S Cable Rider ZPH.

Example: SYST:POS:LONG?
Return value would be, for example, 11,36,46.2 for 11°, 36', 46.2" East.

Usage: Query only

SYSTem:POSition:VALid?

This command queries if the current position is valid.

Example: SYST:POS:VAL?

Usage: Query only

14.6.11.3 Display Configuration

This chapter describes commands to set up the display of the R&S Cable Rider ZPH via remote control.

List of commands

DISPlay<1...2>:BRIGhtness.....	513
DISPlay<1...2>:CMAp.....	513
DISPlay<1...2>:CMAp:DEFAult.....	514
DISPlay<1...2>:DATE:FORMat.....	514

DISPlay<1...2>:BRIGhtness <Brightness>

This command sets the brightness of the display backlight.

The numeric suffix at DISPlay is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<Brightness> Range: 0.01 to 1
 *RST: 0.5

Example:

DISP:BRIG 0.80

Sets the brightness of the display to 80%.

DISPlay<1...2>:CMAp <ColorScheme>

This command sets the color scheme of the display.

The numeric suffix at DISPlay is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<ColorScheme> COLor | BW | PF

 COLor
 Color

 BW
 Black & white

 PF
 Printer-friendly

 *RST: COLor

Example:

DISP:CMAp BW

Sets the screen colors to black and white.

DISPlay<1...2>:CMAp:DEFault

This command sets the display to the default state.

This command is an event and therefore has no query and no *RST value.

The numeric suffix at DISPlay is irrelevant for this command.

Suffix:

<1...2> 1...2

Example:

DISP:CMA:DEF

Restores the original color scheme.

Usage:

Event

DISPlay<1...2>:DATE:FORMat <DateFormat>

This command sets the display date format.

The numeric suffix at DISPlay is irrelevant for this command.

Suffix:

<1...2> 1...2

Parameters:

<DateFormat> DDMMyyyy | MMDDyyyy

*RST: DDMMyyyy

Example:

DISP:DATE:FORM DDMMyyyy

14.6.11.4 Audio Settings

This chapter describes all commands to control the audio functions of the R&S Cable Rider ZPH.

List of commands

SYSTem:AUDio:VOLume.....	514
SYSTem:BEEPer:POVerload[:STATe].....	515
SYSTem:BEEPer:VOLume.....	515
SYSTem:BEEPer:KEY:VOLume.....	515

SYSTem:AUDio:VOLume <Volume>

This command sets the volume of the internal speaker.

Parameters:

<Volume> Range: 0 to 1

*RST: 0.3

Example:

SYST:AUD:VOL 0.40

Sets the volume to 40%.

SYSTem:BEEPer:POVerload[:STATe] <State>

This command turns the beeper on and off when battery has reached its low-level state.

Parameters:

<State> ON | OFF
 *RST: OFF

Example:

SYST:BEEP:POV ON
 Activates the beeper state.

SYSTem:BEEPer:VOLume <Volume>

This command sets the volume of the system beeper.

Parameters:

<Volume> Range: 0 to 1
 *RST: 0.3

Example:

SYST:BEEP:VOL 0.50
 Sets the volume of the beeper to 50%.

SYSTem:BEEPer:KEY:VOLume <Volume>

This command sets the volume of the keyboard click noise.

Parameters:

<Volume> Range: 0 to 1
 *RST: 0.3

Example:

SYST:BEEP:KEY:VOL 0.10
 Sets of keyboard clicking volume to 10%.

14.6.11.5 Setting up a Network Connection

This chapter describes all commands that are used if the R&S Cable Rider ZPH is part of a network.

List of commands

SYSTem:COMMunicate:LAN:ETHernet.....	515
SYSTem:COMMunicate:LAN:GATeway.....	516
SYSTem:COMMunicate:LAN:SUBMask.....	516
SYSTem:COMMunicate:SOCKet:ADDRes.....	516
SYSTem:COMMunicate:SOCKet:DHCP[:STATe].....	516
SYSTem:COMMunicate:SOCKet:PORT.....	516

SYSTem:COMMunicate:LAN:ETHernet

This command queries the MAC address of the R&S Cable Rider ZPH.

This command is a query and therefore has no *RST value.

Example: `SYST:COMM:LAN:ETH?`
Returns the MAC address.

SYSTem:COMMunicate:LAN:GATeway <Gateway>

This command sets the gateway in the LAN.

Parameters:
<Gateway> String containing the identifier of the gateway.

SYSTem:COMMunicate:LAN:SUBMask <Submask>

This command sets the subnet mask of the R&S Cable Rider ZPH

Parameters:
<Submask> String containing the subnet mask ('x.x.x.x').
*RST: 255.255.255.0

Example: `SYST:COMM:LAN:SUBM '255.255.255.0'`
Sets the subnet mask address to 255.255.255.0.

SYSTem:COMMunicate:SOCKet:ADDRess <IPAddress>

This command sets the IP address of the R&S Cable Rider ZPH.

Parameters:
<IPAddress> String containing the IP address ('x.x.x.x').
*RST: 172.76.68.24

Example: `SYST:COMM:SOCK:ADDR '172.76.68.30'`
Sets the IP address of the R&S Cable Rider ZPH to 172.76.68.30.

SYSTem:COMMunicate:SOCKet:DHCP[:STATe] <State>

This command turns the Dynamic Host Configuration Protocol (DHCP) on and off.

Parameters:
<State> ON | OFF
*RST: ON

Example: `SYST:COMM:SOCK:DHCP ON`
Activates DHCP.

SYSTem:COMMunicate:SOCKet:PORT <Port>

This command sets the port number for the connection.

Parameters:

<Port> Port number.
 *RST: 5555

Example:

SYST:COMM:SOCK:PORT 1000
 Sets the port number to 1000.

14.6.11.6 System Settings

This chapter describes all commands that define or query general system settings.

List of commands

INPut:IMPedance:PAD.....	517
[SENSe:]ROSCillator:SOURce.....	518
SYSTem:ACCEssory.....	518
SYSTem:ACCEssory:AUTO.....	518
SYSTem:BNC:MODE.....	518
SYSTem:DATE.....	519
SYSTem:ERRor[:NEXT]?.....	519
SYSTem:ERRor:ALL?.....	519
SYSTem:ERRor:CODE[:NEXT]?.....	519
SYSTem:ERRor:CODE:ALL?.....	520
SYSTem:ERRor:COUNT?.....	520
SYSTem:FORMat:IDENT.....	520
SYSTem:HELP:HEADers?.....	520
SYSTem:HELP:SYNTax?.....	521
SYSTem:LANGuage.....	521
SYSTem:LANGuage:CATalog?.....	521
SYSTem:POWEr:SOURce?.....	521
SYSTem:POWEr:STATus?.....	521
SYSTem:PRESet.....	522
SYSTem:PRESet:CALibration:DISCard.....	522
SYSTem:PRESet:FACTory.....	522
SYSTem:PRESet:MODE.....	522
SYSTem:PRESet:USER.....	523
SYSTem:REBoot.....	523
SYSTem:SET.....	523
SYSTem:SHUTdown.....	523
SYSTem:TIME.....	523
SYSTem:TZONee.....	524
SYSTem:VERSion?.....	524

INPut:IMPedance:PAD <PadType>

This command selects the matching pad connected to the R&S Cable Rider ZPH.

Parameters:

<PadType> RAM | RAZ | HZTE

Example: `INPut:IMP 75;PAD RAZ`
 Selects 75 Ω input impedance and the R&S RAZ as the matching pad.

[SENSe:]ROSCillator:SOURce <Format>

This command selects the source of the frequency reference oscillator.

If you use an external reference signal, make sure to connect the signal to the Ext Ref BNC connector of the R&S Cable Rider ZPH.

Parameters:

<Format> INTernal | EXTernal

INTernal

Internal reference.

EXTernal

External reference.

Example: `ROSC:SOUR EXT`
 Activates external source as reference signal.

SYSTem:ACCessory <Accessory>

This command queries the type of measurement accessory, if one is connected to the R&S Cable Rider ZPH (for example a power sensor).

Parameters:

<Accessory> Z1 | Z2 | Z3 | Z14 | Z18 | Z44 | TS_emf | ZN_Z103 | NONE | UNKNown

Name of the accessory.

Example: `SYST:ACC?`
 Queries connected measurement accessories.

SYSTem:ACCessory:AUTO <State>

This command turns automatic detection of connected measurement accessories on and off.

Parameters:

<State> ON | OFF

Example: `SYST:ACC:AUTO ON`
 Turns on automatic accessory detection.

SYSTem:BNC:MODE <BNCUsage>

This command configures the BNC sockets.

Parameters:

<BNCUsage> REFerence | TRIGger | BIAS

REFerence

Input for external reference signal.

TRIGger

Input for external trigger.

BIAS

BIAS port.

*RST: TRIGger

Example:

SYST:BNC:MODE BIAS

Sets the BNC socket to bias.

SYSTem:DATE <Year>, <Month>, <Day>

This command sets the date for the internal calendar.

Parameters:

<Year> Range: 1980 to 2099

<Month> Range: 1 to 12

<Day> Range: 1 to 31

Example:

SYST:DATE 2000,6,1

Sets the date to 1/6/2000.

SYSTem:ERRor[:NEXT]?

This command queries the oldest entry in the error queue and deletes it.

This command is a query and therefore has no *RST value.

Example: STAT:ERR?

Usage: Query only

SYSTem:ERRor:ALL?

This command queries the complete error queue.

This command is a query and therefore no *RST value.

Example: SYST:ERR:ALL?

Usage: Query only

SYSTem:ERRor:CODE[:NEXT]?

This command queries the code of the next error in the error queue.

This command is a query and therefore has no *RST value.

Example: STAT:ERR:CODE?

Usage: Query only

SYSTem:ERRor:CODE:ALL?

This command queries the complete error queue.

This command is a query and therefore no *RST value.

Example: `SYST:ERR:CODE:ALL?`

Usage: Query only

SYSTem:ERRor:COUNt?

This command queries the number of errors currently in the error queue.

This command is a query and therefore no *RST value.

Example: `SYST:ERR:COUN?`

Usage: Query only

SYSTem:FORMat:IDENt <Format>

This command sets the response format to the *IDN? query. This function is intended for re-use of existing control programs together with the R&S Cable Rider ZPH.

Parameters:

<Format> LEGacy | NEW

LEGacy

Format that is compatible to the older R&S Cable Rider ZPH version.

NEW

Format that is compatible to the newer R&S Cable Rider ZPH version.

Example: `SYST:FORM:IDEN LEG`
`*IDN?`
IDN would return the older R&S Cable Rider ZPH version.
`SYST:FORM:IDEN NEW`
`*IDN?`
IDN would return the newer R&S Cable Rider ZPH version.

SYSTem:HELP:HEADers?

This command returns a list of all available remote control commands.

This command is a query and therefore no *RST value.

Example: `SYST:HELP:HEAD?`
Returns the syntax of all available commands.

Usage: Query only

SYSTem:HELP:SYNTax? <arg0>

This command returns the full syntax of the specified command.

This command is a query and therefore no *RST value.

Parameters:

<arg0> String containing the command you want to query.

Example:

SYST:HELP:SYNT? 'SYST:ERR?'

Returns the full syntax. In this case: 'SYSTem:ERRor[:NEXT]'.

Usage:

Query only

SYSTem:LANGuage <Language>

This command sets the language of the user interface. You can query a list of available languages with [SYSTem:LANGuage:CATalog?](#) on page 521.

Parameters:

<Language> String containing the language.

Example:

SYST:LANG 'english'

Sets the system language to English.

SYSTem:LANGuage:CATalog?

This command lists all languages available for the user interface.

This command is a query and therefore no *RST value.

Example:

SYST:LANG:CAT?

Usage:

Query only

SYSTem:POWer:SOURce?

This command queries the current R&S Cable Rider ZPH power source.

This command is a query and therefore has no *RST value.

Example:

SYST:POW:SOUR?

Usage:

Query only

SYSTem:POWer:STATus?

This command queries the remaining power of the battery.

This command is a query and therefore has no *RST value.

Example:

SYST:POW:STAT?

Usage:

Query only

SYSTem:PRESet

Resets the R&S Cable Rider ZPH to its default state or a state defined by the user, depending on SYSTem:PRESet:MODE.

This command is an event and therefore has no *RST value and no query.

Example: SYST:PRES

Usage: Event

SYSTem:PRESet:CALibration:DISCard <Disc>

This command turns the mechanism that discards or keeps user calibration after a preset on and off.

Parameters:

<Disc> ON | OFF
ON
Discards user calibration after a preset.
OFF
Keep user calibration after a preset.
*RST: OFF

Example: SYST:PRES:CAL:DISC ON
Discards user calibration after a preset.

SYSTem:PRESet:FACTory

This command initiates an instrument reset back to factory settings.

This command is an event and therefore has no query and no *RST value.

Example: SYST:PRES:FACT
Resets the R&S Cable Rider ZPH to its factory settings.

Usage: Event

SYSTem:PRESet:MODE <Mode>

This command selects the preset mode.

Parameters:

<Mode> DEFault | USER
DEFault
Default preset state.
USER
User defined preset state.

Example: SYST:PRES:MODE USER
Selects a user defined preset.

SYSTem:PRESet:USER <PathName>

This command selects a file containing a user defined preset state.

Parameters:

<PathName> Filename of the user defined preset state.

SYSTem:REBoot

This command initiates a reboot of the R&S Cable Rider ZPH.

This command is an event and therefore has no *RST value and no query.

Example:

SYST:REB
Restarts the R&S Cable Rider ZPH.

Usage:

Event

SYSTem:SET [<arg0>]

This query **SYSTem:SET?** causes the data of the current instrument setting to be transmitted to the control computer in binary format (SAVE function). The data can be read back into the instrument (RECALL function) by means of command **SYSTem:SET** <block>.

Whilst the data records are stored on the instrument hard disk with SAVE/RECALL (**MMEMory:STORe**, **MMEMory:LOAD**), it is possible to store the data in an external computer by means of **SYSTem:SET**.

The receive terminator has to be set to EOI to ensure reliable transfer of data (setting **SYST:COMM:GPIB:RTER** EOI).

Parameters:

<arg0> <block_data>

Example:

SYST:SET

SYSTem:SHUTdown

This command turns the R&S Cable Rider ZPH off.

This command is an event and therefore has no *RST value and no query.

Example:

SYST:SHUT
Turns the R&S Cable Rider ZPH off.

Usage:

Event

SYSTem:TIME <Hour>, <Minutes>, <Seconds>

This command sets the internal clock.

Parameters:

<Hour> Range: 0 to 23

<Minutes> Range: 0 to 59
 <Seconds> Range: 0 to 59
Example: SYST:TIME 12,30,30

SYSTem:TZONee <Hour>, <Minutes>

This command defines a shift of the system time to select another time zone.

Parameters:

<Hour> Range: 0 to 23
 <Minutes> Range: 0 to 59
 *RST: 0,0

Example: SYST:TZON 01,00
 Shifts the time an hour ahead.

SYSTem:VERSion?

This command queries the SCPI version the remote control is based on.

This command is a query and therefore has no *RST value.

Example: SYST:VERS?

Usage: Query only

14.6.12 Status Reporting System

The status reporting system stores all information on the present operating state of the instrument, and on errors which have occurred. This information is stored in the status registers and in the error queue. The status registers and the error queue can be queried via Ethernet.

The information is of a hierarchical structure. The register status byte (STB) defined in IEEE 488.2 and its associated mask register service request enable (SRE) form the uppermost level. The STB receives its information from the standard event status register (ESR) which is also defined in IEEE 488.2 with the associated mask register standard event status enable (ESE) and registers `STATus:OPERation` and `STATus:QUESTionable` which are defined by SCPI and contain detailed information on the instrument.

The output buffer contains the messages the instrument returns to the controller. It is not part of the status reporting system but determines the value of the MAV bit in the STB.

- [Structure of an SCPI Status Register](#).....525
- [Overview of the Status Register](#).....526
- [Status Byte \(STB\) & Service Request Enable Register \(SRE\)](#)..... 527
- [Event Status Register \(ESR\) and Event Status Enable Register \(ESE\)](#).....528

- [Application of the Status Reporting Systems.....](#) 531
- [Reset Values of the Status Reporting System.....](#) 533
- [Remote Commands of the Status Reporting System.....](#) 533

14.6.12.1 Structure of an SCPI Status Register

Each standard SCPI register consists of 5 parts which each have a width of 16 bits and have different functions. The individual bits are independent of each other, i.e. each hardware status is assigned a bit number that applies to all five parts. For example, bit 0 of the STATus:OPERation register is assigned to the calibration status of the R&S Cable Rider ZPH. Bit 15 (the most significant bit) is set to zero for all parts. Thus the contents of the register parts can be processed by the controller as positive integer.

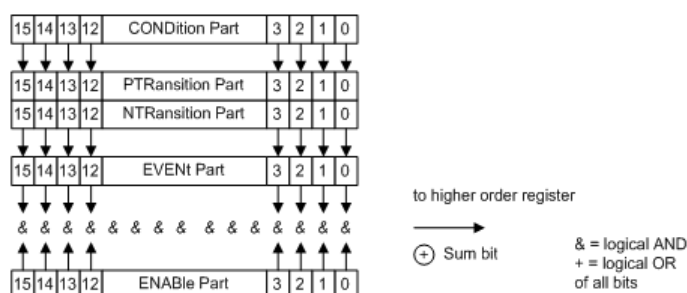


Figure 14-6: The status-register model

CONDition part

The CONDition part is directly written into by the hardware or the sum bit of the next lower register. Its contents reflects the current instrument status. This register part can only be read, but not written into or cleared. Its contents is not affected by reading.

PTRansition part

The Positive-TRansition part acts as an edge detector. When a bit of the CONDition part is changed from 0 to 1, the associated PTR bit decides whether the EVENT bit is set to 1.

PTR bit =1: the EVENT bit is set.

PTR bit =0: the EVENT bit is not set.

This part can be written into and read at will. Its contents is not affected by reading.

NTRansition part

The Negative-TRansition part also acts as an edge detector. When a bit of the CONDition part is changed from 1 to 0, the associated NTR bit decides whether the EVENT bit is set to 1.

NTR-Bit = 1: the EVENT bit is set.

NTR-Bit = 0: the EVENT bit is not set.

This part can be written into and read at will. Its contents is not affected by reading.

With these two edge register parts, you can define which state transition of the condition part (none, 0 to 1, 1 to 0 or both) is stored in the EVENT part.

EVENT part

The EVENT part indicates whether an event has occurred since the last reading, it is the "memory" of the condition part. It only indicates events passed on by the edge filters. It is permanently updated by the instrument. This part can only be read by you. Reading the register clears it. This part is often equated with the entire register.

ENABLE part

The ENABLE part determines whether the associated EVENT bit contributes to the sum bit (see below). Each bit of the EVENT part is ANDed with the associated ENABLE bit (symbol '&'). The results of all logical operations of this part are passed on to the sum bit via an OR function (symbol '+').

ENABLE-Bit = 0: the associated EVENT bit does not contribute to the sum bit

ENABLE-Bit = 1: if the associated EVENT bit is "1", the sum bit is set to "1" as well.

This part can be written into and read by you at will. Its contents is not affected by reading.

Sum bit

As indicated above, the sum bit is obtained from the EVENT and ENABLE part for each register. The result is then entered into a bit of the CONDITION part of the higher-order register.

The instrument automatically generates the sum bit for each register. Thus an event, e.g. a PLL that has not locked, can lead to a service request throughout all levels of the hierarchy.



The service request enable register SRE defined in IEEE 488.2 can be taken as ENABLE part of the STB if the STB is structured according to SCPI. By analogy, the ESE can be taken as the ENABLE part of the ESR.

14.6.12.2 Overview of the Status Register

The following figure shows the status registers used by the R&S Cable Rider ZPH.

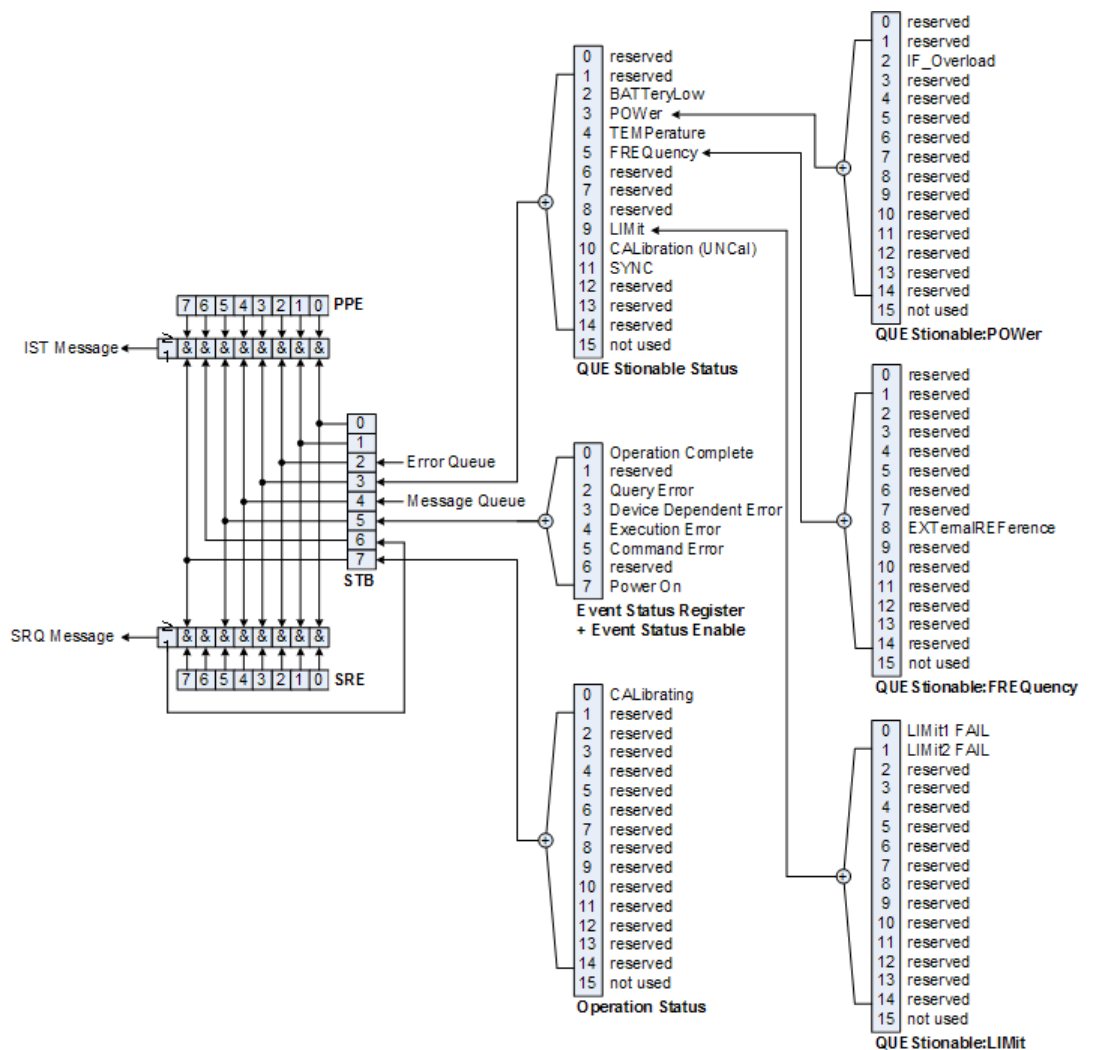


Figure 14-7: Overview of the status registers

14.6.12.3 Status Byte (STB) & Service Request Enable Register (SRE)

The STB is already defined in IEEE 488.2. It provides a rough overview of the instrument status by collecting the pieces of information of the lower registers. It can thus be compared with the CONDition part of an SCPI register and assumes the highest level within the SCPI hierarchy. A special feature is that bit six acts as the sum bit of the remaining bits of the status byte.

The STATUS BYTE is read using the command `*STB?` or a serial poll.

The STB is linked to the SRE. The latter corresponds to the ENABLE part of the SCPI registers in its function. Each bit of the STB is assigned a bit in the SRE. Bit 6 of the SRE is ignored. If a bit is set in the SRE and the associated bit in the STB changes from 0 to 1, a service request (SRQ) is generated, which triggers an interrupt in the controller if this is appropriately configured and can be further processed there. The SRE can be set using the command `"*SRE"` and read using the command `*SRE?`

Table 14-6: Meaning of the bits used in the Status Byte

Bit No.	Meaning
0 to 1	Not used
2	Error Queue not empty The bit is set when an entry is made in the error queue. If this bit is enabled by the SRE, each entry of the error queue generates a service request. Thus an error can be recognized and specified in greater detail by polling the error queue. The poll provides an informative error message. This procedure is to be recommended since it considerably reduces the problems involved with remote control.
3	QUESTionable status sum bit The bit is set if an EVENT bit is set in the QUESTionable: status register and the associated ENABLE bit are set to 1. A set bit indicates a questionable instrument status, which can be specified in greater detail by polling the QUESTionable status register.
4	MAV bit (message available) The bit is set if a message is available in the output buffer which can be read. This bit can be used to enable data to be automatically read from the instrument to the controller.
5	ESB bit Sum bit of the event status register. It is set if one of the bits in the event status register is set and enabled in the event status enable register. Setting of this bit indicates a serious error which can be specified in greater detail by polling the event status register.
6	MSS bit (master status summary bit) The bit is set if the instrument triggers a service request. This is the case if one of the other bits of this register is set together with its mask bit in the service request enable register SRE.
7	OPERation status register sum bit The bit is set if an EVENT bit is set in the OPERation status register and the associated ENABLE bit is set to 1. A set bit indicates that the instrument is just performing an action. The type of action can be determined by polling the OPERation status register.

14.6.12.4 Event Status Register (ESR) and Event Status Enable Register (ESE)

The ESR is defined in IEEE 488.2. It can be compared with the EVENT part of an SCPI register. The event status register can be read out using command *ESR?.

The ESE is the associated ENABLE part. It can be set using the command *ESE and read using the command *ESE?.

Table 14-7: Meaning of the bits in the event status register

Bit No.	Meaning
0	Operation Complete This bit is set on receipt of the command *OPC exactly when all previous commands have been executed.
1	Not used

Bit No.	Meaning
2	Query Error This bit is set if either the controller wants to read data from the instrument without having sent a query, or if it does not fetch requested data and sends new instructions to the instrument instead. The cause is often a query which is faulty and hence cannot be executed.
3	Device-dependent Error This bit is set if a device-dependent error occurs. An error message with a number between -300 and -399 or a positive error number, which denotes the error in greater detail, is entered into the error queue.
4	Execution Error This bit is set if a received command is syntactically correct but cannot be performed for other reasons. An error message with a number between -200 and -300, which denotes the error in greater detail, is entered into the error queue.
5	Command Error This bit is set if a command is received, which is undefined or syntactically incorrect. An error message with a number between -100 and -200, which denotes the error in greater detail, is entered into the error queue.
6	Not used
7	Power On (supply voltage on) This bit is set on switching on the instrument.

STATus:OPERation Register

In the CONDition part, this register contains information on which actions the instrument is being executing or, in the EVENT part, information on which actions the instrument has executed since the last reading. It can be read using the commands `STATus:OPERation:CONDition?` or `STATus:OPERation[:EVENT]?`.

Table 14-8: Meaning of the bits in the STATus:OPERation register

Bit No.	Meaning
0	CALibrating This bit is set as long as the instrument is performing a calibration.
1 to 14	Not used
15	This bit is always 0

STATus:QUESTionable Register

This register contains information about indefinite states which may occur if the unit is operated without meeting the specifications. It can be read using the commands `STATus:QUESTionable: CONDition?` and `STATus:QUESTionable[:EVENT]?`.

Table 14-9: Meaning of bits in *STATUS:QUESTIONable* register

Bit No.	Meaning
0 to 1	These bits are not used
2	BATTERY LOW If the instrument is running without any external power supply and the charging level of the internal battery is approximately lower than 5%, this bit is set to indicate that the system is shut down automatically in approximately 5 minutes.
3	Not used
4	TEMPerature This bit is set if a questionable temperature occurs.
5 to 8	Not used
9	LIMit (device-specific) This bit is set if a limit value is violated
10	CALibration The bit is set if a measurement is performed unaligned (label UNCAL)
11 to 14	Not used
15	This bit is always 0.

STATUS:QUESTIONable:FREQUENCY Register

This register contains information about the reference frequency. It can be read using the commands `STATUS:QUESTIONable:LIMit:FREQUENCY?` and `STATUS:QUESTIONable:FREQUENCY[:EVENT]?`.

Table 14-10: Meaning of bits in *STATUS:QUESTIONable:FREQUENCY* register

Bit No.	Meaning
0 to 7	Not used
8	EXTernal REFerence This bit is set if an external reference is used.
9 to 14	Not used
15	This bit is always 0.

STATUS:QUESTIONable:LIMit Register

This register contains information about the observance of limit lines. It can be read using the commands `STATUS:QUESTIONable:LIMit:CONDition?` and `STATUS:QUESTIONable:LIMit[:EVENT]?`.

Table 14-11: Meaning of bits in STATus:QUEStionable:LIMit register

Bit No.	Meaning
0	LIMit 1 FAIL This bit is set if limit line 1 is violated.
1	LIMit 2 FAIL This bit is set if limit line 2 is violated.
2 to 14	Not used
15	This bit is always 0.

STATus:QUEStionable:POWer Register

This register contains information about possible overload states. It can be read using the commands `STATus:QUEStionable:POWer:CONDition?` and `STATus:QUEStionable:POWer[:EVENT]?`.

Table 14-12: Meaning of bits in STATus:QUEStionable:POWer register

Bit No.	Meaning
0 to 1	Not used
2	IF_Overload This bit is set if the IF path is overloaded. 'IFOVL' is displayed.
3 to 14	Not used
15	This bit is always 0.

STATus:QUEStionable:SYNC Register

This register contains information about sync and bursts not found, and about premeasurement results exceeding or falling short of expected values.

It can be read using the commands `STATus:QUEStionable:SYNC:CONDition?` and `STATus:QUEStionable:SYNC[:EVENT]?`.

14.6.12.5 Application of the Status Reporting Systems

In order to be able to effectively use the status reporting system, the information contained there must be transmitted to the controller and further processed there. There are several methods which are represented in the following.

Service Request

Under certain circumstances, the instrument can send a service request (SRQ) to the controller. Usually this service request initiates an interrupt at the controller, to which the control program can react appropriately.

As evident from [Figure 14-7](#), an SRQ is always initiated if one or several of bits 2, 3, 4, 5 or 7 of the status byte are set and enabled in the SRE. Each of these bits combines the information of a further register, the error queue or the output buffer. The ENABLE parts of the status registers can be set so that arbitrary bits in an arbitrary status regis-

ter initiate an SRQ. In order to make use of the possibilities of the service request effectively, all bits should be set to "1" in enable registers SRE and ESE.

Example:

Use of the command *OPC to generate an SRQ at the end of a sweep

- `CALL InstrWrite(analyzer, "*ESE 1")`
'Set bit 0 in the ESE (Operation Complete)
- `CALL InstrWrite(analyzer, "*SRE 32")`
'Set bit 5 in the SRE (ESB)?

After its settings have been completed, the instrument generates an SRQ.

The SRQ is the only possibility for the instrument to become active on its own. Each controller program should set the instrument in a way that a service request is initiated in the case of malfunction. The program should react appropriately to the service request.

Serial Poll

In a serial poll, just as with command *STB, the status byte of an instrument is queried. However, the query is realized via interface messages and is thus clearly faster. The serial-poll method has already been defined in IEEE 488.1 and used to be the only standard possibility for different instruments to poll the status byte. The method also works with instruments which do not adhere to SCPI or IEEE 488.2.

The VISUAL BASIC command for executing a serial poll is IBRSP(). Serial poll is mainly used to obtain a fast overview of the state of several instruments connected to the controller.

Query by Means of Commands

Each part of any status register can be read by means of queries. The individual commands are listed in the description of the STATUS Subsystem. The returned value is always a number that represents the bit pattern of the queried register. This number is evaluated by the controller program.

Queries are usually used after an SRQ in order to obtain more detailed information on the cause of the SRQ.

Error Queue Query

Each error state in the instrument leads to an entry in the error queue. The entries of the error queue are detailed plain-text error messages that can be displayed via manual operation using the setup menu or queried via remote control using the command `SYSTEM:ERROR?`. Each call of `SYSTEM:ERROR?` provides one entry from the error queue. If no error messages are stored there any more, the instrument responds with 0, "No error".

The error queue should be queried after every SRQ in the controller program as the entries describe the cause of an error more precisely than the status registers. Especially in the test phase of a controller program the error queue should be queried regu-

larly since faulty commands from the controller to the instrument are recorded there as well.

14.6.12.6 Reset Values of the Status Reporting System

Table 14-13 contains the different commands and events causing the status reporting system to be reset. None of the commands, except *RST and SYSTem:PRESet, influences the functional instrument settings. In particular, DCL does not change the instrument settings.

Table 14-13: Resetting the status reporting system

Event	Switching on supply voltage	DCL, SDC				
	Power-On-Status-Clear		(Device Clear, Selected Device Clear)	*RST or SYSTem:PRESet	STA-Tus:PRESet	*CLS
Effect	0	1				
Clear STB, ESR	-	yes	-	-	-	yes
Clear SRE, ESE	-	yes	-	-	-	-
Clear PPE	-	yes	-	-	-	-
Clear EVENT parts of the registers	-	yes	-	-	-	yes
Clear ENABLE parts of all OPERATION and QUESTIONable registers; Fill ENABLE parts of all other registers with "1".	-	yes	-	-	yes	-
Fill PTRansition parts with "1"; Clear NTRansition parts	-	yes	-	-	yes	-
Clear error queue	yes	yes	-	-	-	yes
Clear output buffer	yes	yes	yes	1)	1)	1)
Clear command processing and input buffer	yes	yes	yes	-	-	-

1) Every command being the first in a program message, i.e., immediately following a <PROGRAM MESSAGE TERMINATOR> clears the output buffer.

14.6.12.7 Remote Commands of the Status Reporting System

The following commands control the status-reporting system *RST does not influence the status registers.

The OPERation status register contains information about the calibration status of the instrument.

The QUEStionable status register contains information about the status of the reference and local oscillator, possible overloads of the instrument and the status of limit checks and limit margins.

The commands are independent from the operating mode.

List of commands

STATus:PRESet.....	534
STATus:QUEue[:NEXT]?.....	535
STATus:OPERation[:EVENT]?.....	535
STATus:OPERation:CONDition?.....	535
STATus:OPERation:ENABle.....	535
STATus:OPERation:NTRansition.....	535
STATus:OPERation:PTRansition.....	536
STATus:QUEStionable[:EVENT]?.....	536
STATus:QUEStionable:FREQuency[:EVENT]?.....	536
STATus:QUEStionable:LIMit[:EVENT]?.....	536
STATus:QUEStionable:POWer[:EVENT]?.....	536
STATus:QUEStionable:CONDition?.....	536
STATus:QUEStionable:FREQuency:CONDition?.....	537
STATus:QUEStionable:LIMit:CONDition?.....	537
STATus:QUEStionable:POWer:CONDition?.....	537
STATus:QUEStionable:ENABle.....	537
STATus:QUEStionable:FREQuency:ENABle.....	537
STATus:QUEStionable:LIMit:ENABle.....	537
STATus:QUEStionable:POWer:ENABle.....	538
STATus:QUEStionable:NTRansition.....	538
STATus:QUEStionable:FREQuency:NTRansition.....	538
STATus:QUEStionable:LIMit:NTRansition.....	538
STATus:QUEStionable:POWer:NTRansition.....	539
STATus:QUEStionable:PTRansition.....	539
STATus:QUEStionable:FREQuency:PTRansition.....	539
STATus:QUEStionable:LIMit:PTRansition.....	539
STATus:QUEStionable:POWer:PTRansition.....	540

STATus:PRESet

This command resets the edge detectors and ENABle parts of all registers to a defined value. All PTRansition parts are set to FFFFh, i.e. all transitions from 0 to 1 are detected. All NTRansition parts are set to 0, i.e. a transition from 1 to 0 in a CONDition bit is not detected. The ENABle part of the STATus:OPERation and STATus:QUEStionable registers are set to 0, i.e. all events in these registers are not passed on.

Example: STAT:PRESet

Usage: Event

STATus:QUEue[:NEXT]?

This command returns the earliest entry to the error queue and deletes it.

Positive error numbers indicate device-specific errors, negative error numbers are error messages defined by SCPI. If the error queue is empty, the error number 0, "no error", is returned. This command is identical with the command SYSTem:ERRor.

Example: STAT:QUE?

Usage: Query only

STATus:OPERation[:EVENT]?

This command reads out the EVENT section of the OPERATION register.

The command at the same time deletes the contents of the EVENT section.

Usage: Query only

STATus:OPERation:CONDition?

This command reads out the CONDition section of the OPERATION register.

The command does not delete the contents of the EVENT section.

Usage: Query only

STATus:OPERation:ENABLE <DecimalValue>

This command controls the ENABLE part of the OPERATION register.

The ENABLE part allows true conditions in the EVENT part of the status register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition occurs in the summary bit reported to the next higher level.

Parameters:

<DecimalValue> Range: 0 to 65535

STATus:OPERation:NTRansition <DecimalValue>

This command controls the Negative TRansition part of the OPERATION register.

Setting a bit causes a 1 to 0 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<DecimalValue> Range: 0 to 65535

STATus:OPERation:PTRansition <DecimalValue>

This command controls the Positive TRansition part of the OPERation register.

Setting a bit causes a 0 to 1 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<DecimalValue> Range: 0 to 65535

STATus:QUESTionable[:EVENT]?

This command reads out the EVENT section of the QUESTionable register.

The command at the same time deletes the contents of the EVENT section.

Usage: Query only

STATus:QUESTionable:FREQuency[:EVENT]?

This command reads out the EVENT section of the QUESTionable register.

The command at the same time deletes the contents of the EVENT section.

Usage: Query only

STATus:QUESTionable:LIMit[:EVENT]?

This command reads out the EVENT section of the QUESTionable register.

The command at the same time deletes the contents of the EVENT section.

Usage: Query only

STATus:QUESTionable:POWer[:EVENT]?

This command reads out the EVENT section of the QUESTionable register.

The command at the same time deletes the contents of the EVENT section.

Usage: Query only

STATus:QUESTionable:CONDition?

This command reads out the CONDition section of the QUESTionable register.

The command does not delete the contents of the EVENT section.

Usage: Query only

STATus:QUESTIONable:FREQuency:CONDition?

This command reads out the CONDition section of the QUESTIONable register.

The command does not delete the contents of the EVENT section.

Usage: Query only

STATus:QUESTIONable:LIMit:CONDition?

This command reads out the CONDition section of the QUESTIONable register.

The command does not delete the contents of the EVENT section.

Usage: Query only

STATus:QUESTIONable:POWer:CONDition?

This command reads out the CONDition section of the QUESTIONable register.

The command does not delete the contents of the EVENT section.

Usage: Query only

STATus:QUESTIONable:ENABle <DecimalValue>

This command controls the ENABle part of the QUESTIONable register.

The ENABle part allows true conditions in the EVENT part of the status register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition will occur in the summary bit reported to the next higher level.

Parameters:

<DecimalValue> Range: 0 to 65535

STATus:QUESTIONable:FREQuency:ENABle <DecimalValue>

This command controls the ENABle part of the QUESTIONable register.

The ENABle part allows true conditions in the EVENT part of the status register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition will occur in the summary bit reported to the next higher level.

Parameters:

<DecimalValue> Range: 0 to 65535

STATus:QUESTIONable:LIMit:ENABle <DecimalValue>

This command controls the ENABle part of the QUESTIONable register.

The ENABLE part allows true conditions in the EVENT part of the status register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition will occur in the summary bit reported to the next higher level.

Parameters:

<DecimalValue> Range: 0 to 65535

STATus:QUESTionable:POWer:ENABle <DecimalValue>

This command controls the ENABLE part of the QUESTionable register.

The ENABLE part allows true conditions in the EVENT part of the status register to be reported in the summary bit. If a bit is 1 in the enable register and its associated event bit transitions to true, a positive transition occurs in the summary bit reported to the next higher level.

Parameters:

<DecimalValue> Range: 0 to 65535

STATus:QUESTionable:NTRansition <DecimalValue>

This command controls the Negative TRansition part of the QUESTionable register.

Setting a bit causes a 1 to 0 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<DecimalValue> Range: 0 to 65535

Example: STAT:QUES:NTR 65535

STATus:QUESTionable:FREQuency:NTRansition <DecimalValue>

This command controls the Negative TRansition part of the QUESTionable register.

Setting a bit causes a 1 to 0 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<DecimalValue> Range: 0 to 65535

Example: STAT:QUES:NTR 65535

STATus:QUESTionable:LIMit:NTRansition <DecimalValue>

This command controls the Negative TRansition part of the QUESTionable register.

Setting a bit causes a 1 to 0 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<DecimalValue> Range: 0 to 65535

Example:

STAT:QUES:NTR 65535

STATus:QUESTIONable:POWER:NTRansition <DecimalValue>

This command controls the Negative TRansition part of the QUESTIONable register.

Setting a bit causes a 1 to 0 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<DecimalValue> Range: 0 to 65535

Example:

STAT:QUES:NTR 65535

STATus:QUESTIONable:PTRansition <DecimalValue>

This command control the Positive TRansition part of the QUESTIONable register.

Setting a bit causes a 0 to 1 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<DecimalValue> Range: 0 to 65535

STATus:QUESTIONable:FREQuency:PTRansition <DecimalValue>

This command control the Positive TRansition part of the QUESTIONable register.

Setting a bit causes a 0 to 1 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<DecimalValue> Range: 0 to 65535

STATus:QUESTIONable:LIMit:PTRansition <DecimalValue>

This command control the Positive TRansition part of the QUESTIONable register.

Setting a bit causes a 0 to 1 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<DecimalValue> Range: 0 to 65535

STATus:QUESTionable:POWer:PTRansition <DecimalValue>

This command control the Positive TRansition part of the QUESTionable register.

Setting a bit causes a 0 to 1 transition in the corresponding bit of the associated register. The transition also writes a 1 into the associated bit of the corresponding EVENT register.

Parameters:

<DecimalValue> Range: 0 to 65535

15 Menu and Softkey Overview

This chapter shows an overview of all instrument functions in the form of softkey and menu overview.

• General Functions.....	541
• Functions of the Spectrum Analyzer.....	548
• Functions of the Power Meter.....	562
• Functions of the Modulation Analysis.....	570
• Functions of the Wizard.....	575
• Functions of the Maps.....	577
• Functions of the Cable & Antenna.....	585

15.1 General Functions

• General R&S Cable Rider ZPH Setup.....	541
• File Management.....	546
• Operating Mode Selection.....	547

15.1.1 General R&S Cable Rider ZPH Setup



¹ only available with model 12

² only available with R&S ZPH-K35

The [SETUP] key opens the setup menu that contains functionality to set up the R&S Cable Rider ZPH in general and functionality to set up the measurement.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Config Overview	Mode	DTF	SWR
			Return Loss
		¹ DTF & SWR	
		¹ DTF & Return Loss	
		Return Loss	
		SWR	
		Cable Loss	
		Phase	Unwrap
			Wrap
		Smith Chart	
		¹ Transmission	

Softkey	Menu or Dialog items	Parameters	Parameters selection
	Stimulus	¹ RL + Trans	
		Start Freq	
		Stop Freq	
		Center Freq	
		Span	
		Span Mode	Auto
	Cable	Cable Mode	Manual
			Mark
			Edit
			Preview
			Load
			Refresh
		User Model	Exit
			Yes
		Frequency	No
	Amplitude	Reference Level	
		Linear Scale	On
			Off
	Analysis	Scale	50 dB
		Trace Mode	Clear/Write
			Average
		Avg Count	
		Points	
	Distance	Start Dist	
		Stop Dist	
		Length Unit	Meter
			Feet
Instrument Setup	¹ Hardware	Auto Accessory Detection	On
			Off
		Detected Accessory	

Softkey	Menu or Dialog items	Parameters	Parameters selection
		BNC	Trigger Input
			Reference Input
		Internal DC Bias	Off
		Internal DC Bias Level (Volt)	3.8 V
	¹ Antenna	Antenna	Off
			HL 300
			HE 300
			HE 400
		Compass	Off
			On
		Show Compass Information	On
			Off
		Magnetic Declination	0.0
	GPS	GPS	On
			Off
		Show GPS Information	On
			Off
		Coordinate Format	dd° mm' ss.sss"
			dd° mm.mmm'
	LAN	MAC Address	On, Off
		DHCP	On
			Off
		IP Address	
		Subnet Mask	
		Gateway	
	Date and Time	Set Date	
		Set Time	
		Time Zone	
	Regional	Language	English, French, German, Spanish, Italian, Portuguese, Japanese, Chinese, Korean, Russian, Hungarian, Traditional Chinese
		Date Format	dd/mm/yyyy,

Softkey	Menu or Dialog items	Parameters	Parameters selection
			mm/dd/yyyy
		Length Unit	Feet
			Meter
	Display	Display Backlight	0 - 100 %
		Display Color Scheme	Color
			Black & White
			Printer Friendly
		Keyboard Backlight	0 - 100 %
		Keyboard Backlight Delay	1 - 10 s
		Touch Interface	On
			Off
	Audio	Key Click Volume	0 - 100 %
		System Beeper Volume	0 - 100 %
		Beep on Power Over-board	On
			Off
	Power	Current Power Source	
		Battery Level	
		Battery Low Level	0 - 100 %
		Battery Low Level Beep	Repetitive
			Once
			Off
		Auto Power Up on AC	On
			Off
	Default Calibration	Perform Default Calibration	
		Last Calibration Date	
		Last Calibration Frequency	
		Last Calibration Cal Kit	
	Calibration Kit	Calibration Kit	
	Internal Alignment ²	Frequency Clock	Align
		Reference Level	Align
	Reset	Reset Factory Settings	Factory Reset
User Preference	Site Name	Site Name	

Softkey	Menu or Dialog items	Parameters	Parameters selection
		User	
		Name	
		Comments	
	Preset Key	Preset Mode	User Defined
			Default
		Preset Dataset	
		Discard Calibration Data	On
			Off
	Working Directory	User working directory	On
			Off
		Working directory	\Public
	Capture	Capture Screen	On
			Off
		Capture Dataset	On
			Off
		Capture GPX	On
			Off
		Default Filename	Measurement
		Filename Counter Starts at	001
		Capture Screen Format	PNG
			JPG
	Dataset	Default Dataset Name	Dataset
		Use Instrument Calibration	On
			Off
	Cable & Antenna	Dedicated DTF Frequency	On
			Off
	Documentation	Export Documentation	Export
HW/SW info	Hardware	Instrument Model	
		Instrument Serial Number	
		Mainboard Part Number	
		Mainboard Revision	
		Mainboard Serial Number	

Softkey	Menu or Dialog items	Parameters	Parameters selection
		Frontboard Part Number	
		Frontboard Revision	
		Frontboard Serial Number	
		Controller Version	
	Software	Software Version	
Installed Options	Option Administration	Device ID	
		Install Option	
	Installation Status		
Exit			

15.1.2 File Management

The [SAVE/RECALL] key opens the file manager that contains functionality to manage datasets and other files.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Save	On-screen KB (see Chapter 5.2, "On-screen Keyboard" , on page 94)		
	Exit		
Recall	Preview	Prev	
		Next	
		Recall	
		Exit	
	Load		
	Refresh		
	Exit		
Recall Screenshot	Preview	Prev	
		Next	
		Exit	
	Refresh		
	Exit		
File Manager	Mark		
	Edit	Rename	
		Cut	

Softkey	Menu or Dialog items	Parameters	Parameters selection
		Copy	
		Paste	
		Delete	
	Preview	Prev	
		Next	
		Exit	
	Load		
	Refresh		
	Exit		

15.1.3 Operating Mode Selection



¹Available only if R&S ZPH-K15 (but not R&S ZPH-K16) is installed.

²Available only if R&S ZPH-K16 (with or without R&S ZPH-K15) is installed.

³Available only if R&S ZPH-K1 is installed.

⁴Available only if R&S ZPH-K7 is installed.

⁵Available only if R&S ZPH-K19 is installed.

The [MODE] key opens the mode menu that contains functionality to select the operating mode of the R&S Cable Rider ZPH.

Softkey	Menu or Dialog items	Parameters	Parameters selection
³ Spectrum -> Spectrum	See Chapter 8, "Spectrum Analyzer Mode" , on page 167		
⁴ Spectrum -> Analog Demod ⁴ Spectrum -> Digital Demod	See Chapter 12, "Modulation Analysis" , on page 274		
⁵ Power Meter	See Chapter 9, "Power Meter" , on page 253)		
¹ Triangulation	See "Triangulation" on page 578		

Softkey	Menu or Dialog items	Parameters	Parameters selection
² Spectrum -> Maps	See Chapter 15.6 , "Functions of the Maps", on page 577		
Cable & Antenna	See Chapter 15.7.1 , "Cable & Antenna Mea- surements", on page 586		

15.2 Functions of the Spectrum Analyzer

This section contains all softkeys and menus that are available in spectrum analyzer mode.

• Measurement Selection	548
• Frequency Parameters	557
• SPAN Selection	558
• AMPT Parameters	558
• SWEEP Parameters	559
• BW Parameters	559
• Trace Functionality	559
• Limit Lines	560
• Markers	561

15.2.1 Measurement Selection



The spectrogram and spectrogram playback is available only if you have installed option R&S ZPH-K15.

The "MEAS" key opens the measurement menu that contains functionality to select and configure the measurement.

Spectrum

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Mode	Spectrum		
	Channel Power		
	Occupied Bandwidth		
	TDMA		
	Spectrum Emission Mask		
	ACLR		

Softkey	Menu or Dialog items	Parameters	Parameters selection
	Harmonic Distortion		
	AM Modulation Depth		
	Spectrogram		
	Spectrogram Playback		
	Source Mode		
	Isotropic Antenna [Auto]		

Channel Power

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Mode	Spectrum		
	Channel Power		
	Occupied Bandwidth		
	TDMA		
	Spectrum Emission Mask		
	ACLR		
	Harmonic Distortion		
	AM Modulation Depth		
	Spectrogram		
	Spectrogram Playback		
	Iso Direction [Auto]		
Standard	Load		
	Refresh		
	Exit		
Level Adjust			
Channel BW			
Power Unit	dBm		
	dBmV		
	dBμV		
	V		
	W		
Power Display	Clear/Write		
	Max Hold		
	Channel Pwr/Hz		

Occupied Bandwidth

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Mode	Spectrum		
	Channel Power		
	Occupied Bandwidth		
	TDMA		
	Spectrum Emission Mask		
	ACLR		
	Harmonic Distortion		
	AM Modulation Depth		
	Spectrogram		
	Spectrogram Playback		
	Iso Direction [Auto]		
Standard	Load		
	Refresh		
	Exit		
Level Adjust			
Channel BW			
% Power BW			

TDMA

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Mode	Spectrum		
	Channel Power		
	Occupied Bandwidth		
	TDMA		
	Spectrum Emission Mask		
	ACLR		
	Harmonic Distortion		
	AM Modulation Depth		
	Spectrogram		
	Spectrogram Playback		
	Iso Direction [Auto]		

Softkey	Menu or Dialog items	Parameters	Parameters selection
Standard	Load		
	Refresh		
	Exit		
Level Adjust			
Manual SWT			
Burst Length			

Spectrum Emission Mask

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Mode	Spectrum		
	Channel Power		
	Occupied Bandwidth		
	TDMA		
	Spectrum Emission Mask		
	ACLR		
	Harmonic Distortion		
	AM Modulation Depth		
	Spectrogram		
	Spectrogram Playback		
	Iso Direction [Auto]		
Standard	Load		
	Refresh		
	Exit		
Level Adjust			
View List			

ACLR

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Mode	Spectrum		
	Channel Power		
	Occupied Bandwidth		
	TDMA		

Softkey	Menu or Dialog items	Parameters	Parameters selection
	Spectrum Emission Mask		
	ACLR		
	Harmonic Distortion		
	AM Modulation Depth		
	Spectrogram		
	Spectrogram Playback		
	Iso Direction [Auto]		
Standard	Load		
	Refresh		
	Exit		
Level Adjust			
Channel Settings	Tx Channel		
	Adj Channel		
	Channel BW		
	Channel Tx Spacing		
	Channel Adj Spacing		
	ACLR Ref Setting	Tx Channel	
		Min Pwr TX Chan.	
		Max Pwr TX Chan.	
		Low High Chan.	
	Channel Limit Relative		
	Channel Limit Absolute		
	Check Channel Limit		
Power Unit	dBm		
	dBmV		
	dBuV		
	V		
	W		
Power Display	Clear/Write		
	Max Hold		
	Absolute		
	Relative		
	Channel Pwr/Hz		

Harmonic Distortion

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Mode	Spectrum		
	Channel Power		
	Occupied Bandwidth		
	TDMA		
	Spectrum Emission Mask		
	ACLR		
	Harmonic Distortion		
	AM Modulation Depth		
	Spectrogram		
	Spectrogram Playback		
	Iso Direction [Auto]		
Adjust Setting			
Harmonics			

AM Modulation Depth

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Mode	Spectrum		
	Channel Power		
	Occupied Bandwidth		
	TDMA		
	Spectrum Emission Mask		
	ACLR		
	Harmonic Distortion		
	AM Modulation Depth		
	Spectrogram		
	Spectrogram Playback		
	Iso Direction [Auto]		
Adjust Setting			
Select Marker			
Threshold			

Spectrogram

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Mode	Spectrum		
	Channel Power		
	Occupied Bandwidth		
	TDMA		
	Spectrum Emission Mask		
	ACLR		
	Harmonic Distortion		
	AM Modulation Depth		
	Spectrogram		
	Spectrogram Playback		
	Iso Direction [Auto]		
Settings	Display	Reference Level	
		Level Range	
		Auto Range	
		Color Table	Green-Yellow
			Green-Blue
			Black-White
			Red-Purple
			Blue-Black
		Full Screen	
		Couple to Spectrum	
	Tone	Squelch Level	
		Threshold Tone Frequency	
		Tone Gain	
		Tone Volume	
		Tone	
	Long Time Rec		
	Rec Settings		
	Exit		
Playback	See "Spectrogram Playback" on page 555		

Softkey	Menu or Dialog items	Parameters	Parameters selection
Save	On-screen KB		
	Exit		
Clear			
Hold			

Spectrogram Playback

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Mode	Spectrum		
	Channel Power		
	Occupied Bandwidth		
	TDMA		
	Spectrum Emission Mask		
	ACLR		
	Harmonic Distortion		
	AM Modulation Depth		
	Spectrogram		
	Spectrogram Playback		
	Iso Direction [Auto]		
Settings	Display	Reference Level	
		Level Range	
		Auto Range	
		Color Table	Green-Yellow
			Green-Blue
			Black-White
			Red-Purple
			Blue-Black
		Full Screen	
		Couple to Spectrum	
	Tone	Squelch Level	
		Threshold Tone Frequency	
		Tone Gain	
		Tone Volume	

Softkey	Menu or Dialog items	Parameters	Parameters selection
		Tone	
	Long Time Rec		
	Rec Settings		
	Exit		
Live Update	See " Spectrogram Play-back " on page 555		
Save	On-screen KB		
	Exit		
Recall	Load		
	Refresh		
	Exit		
Select Time Line	T1 Line		
	T2 Line		

Source Mode

Softkey	Menu or Dialog items	Parameters	Parameters selection
Source Mode	Off		
	Tracking		
	CW		
	Coupled CW		
Source Level			
Normalize	Continue		
	Cancel		
Normalization			

Isotropic Antenna [Auto]

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Mode	Spectrum		
	Channel Power		
	Occupied Bandwidth		
	TDMA		
	Spectrum Emission Mask		
	ACLR		

Softkey	Menu or Dialog items	Parameters	Parameters selection
	Harmonic Distortion		
	AM Modulation Depth		
	Spectrogram		
	Spectrogram Playback		
	Isotropic Antenna {Auto}		
Auto	Refresh		
	Exit		
X-Axis			
Y-Axis			
Z-Axis			
Exit			

15.2.2 Frequency Parameters

The [FREQ / DIST] key opens the frequency menu that contains functionality to set up the horizontal axis of the measurement diagram.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Center Freq			
CF Stepsize	0.1 x Span, Manual, Step=Center		
Start Freq			
Stop Freq			
Freq Offset			
Freq Mode	Frequency		
	Select Downlink	Refresh	
		Load	
		Exit	
	Select Uplink	Refresh	
		Load	
		Exit	
	Set to Downlink		
	Set to Uplink		

15.2.3 SPAN Selection

The [CAL / SPAN] key opens the span menu that contains functionality to set the span.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Manual Span			
Full Span			
Zero Span			
Last Span			

15.2.4 AMPT Parameters

The [SCALE / AMPT] key opens the amplitude menu that contains functionality to set up the vertical axis of the measurement diagram.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Ref Level			
Range / RefPos	Auto Range		
	Range		
	Linear		
	Ref Position		
Unit	dBm		
	dBmV		
	dBuV		
	V		
	W		
Ref Offset			
Att / Amp / Imp	Preamp		
	Manual Att		
	Auto Low Distortion		
	Auto Low Noise		
	Imp 50Ω		
	75 Ω RAM		
	75 Ω RAZ		
	75 Ω FSH-Z38		
Transducer	Primary		
	Secondary		

Softkey	Menu or Dialog items	Parameters	Parameters selection
	Select Primary	Refresh	
		Load	
		Exit	
	Select Secondary	Refresh	
		Load	
		Exit	

15.2.5 SWEEP Parameters

The [SWEEP] key opens a menu that contains all functionality to configure the sweep.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Manual SWT			
Auto SWT			
Cont Sweep			
Single Sweep			
Trigger	Free Run		
	Video	0 - 100 %	
	Eternal Rise		
	External Fall		
	Delay	1 - 10 s	

15.2.6 BW Parameters

The [DTFF / BW] key opens a menu that contains all functionality to set the bandwidths.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Manual RBW			
Auto RBW			
Manual VBW			
Auto VBW			

15.2.7 Trace Functionality

The [TRACE] key opens the trace menu that contains functionality to set up the traces.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Trace Mode	View		
	Clear/Write		
	Max Hold		
	Min Hold		
	Average	1 to 10	
Detector	Auto Detector		
	Auto Peak		
	Max Peak		
	Min Peak		
	Sample		
	RMS		
Show	Enable Trace 2		
	Enable Memory 1		
	Enable Memory 2		
Trace>Memory			
Select Trace			
Trace Math	Math Position		
	Off		
	Trace - Memory		
	Memory - Trace		

15.2.8 Limit Lines

The [LINES] key opens a menu that contains the functionality to control display and limit lines.

The [LINES] key opens a menu that contains the functionality to control limit lines.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Show Limit Lines			
Upper Limit	Set Threshold		
	Load From File	Refresh	
		Load	
		Exit	
	Remove		

Softkey	Menu or Dialog items	Parameters	Parameters selection
Lower Limit	Set Threshold		
	Load From File	Refresh	
		Load	
		Exit	
	Remove		
Auto Beep			

15.2.9 Markers

The [MARKER] key opens a menu to control markers and use marker functions.

Softkey	Menu or Dialog items	Parameters	Parameters selection
New Marker			
Marker Type			
Delete Marker	Delete Selected		
	Delete All Delta		
	Delete All		
Select Marker			
Marker Function	Noise		
	Frequency Count		
	N dB Down		
	N dB	-100 to 100 dB	
	Frequency Display		
	Channel Display		
	Demodulation Off		
	AM		
	FM		
	Time		
	Volume	0 - 100%	
Set Marker	Search Range		
	Set To Peak		
	Set To Next Peak		
	Set To Minimum		
	All Marker To Peak		

Softkey	Menu or Dialog items	Parameters	Parameters selection
	Center=Marker Freq		
	Ref Level=Marker Level		

15.3 Functions of the Power Meter

This section contains all softkeys and menus that are available in power meter mode.

- [Power Meter Measurements](#).....562
- [Frequency Parameters](#).....565
- [BW Parameters](#).....566
- [SCALE Parameters](#).....567
- [Sweep Configuration](#).....568
- [Limits Line Parameters](#).....569
- [Trace Parameters](#).....569
- [Marker Parameters](#).....569

15.3.1 Power Meter Measurements



The power meter is available only if you have installed option R&S ZPH-K9.

The [MEAS] key opens a menu that contains the functionality to configure measurements with the power meter.

Power Meter

Softkey	Menu or Dialog items	Parameters	Parameters selection
¹ Freq			
Unit	dBm		
	dBμV		
	W		
	dB Rel		
² Zero			
To Ref			
Meas Time	Short		
	Normal		
	Long		
² Channel BW			

¹ If "Freq Mode" (see [Frequency Parameters](#)) is set to "Channel", the softkey displays "Channel".

²only available with model 12 and not for optic sensor power.

Directional Power Meter with R&S FSH-Z14 & R&S FZH-Z44



The directional power meter is available only if you have installed option R&S ZPH-K9.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Fwd Pwr Display	Average		
	Peak Envelope		
Freq ¹			
Unit	Forward Power	dBm	
		W	
		dB	
	Reflected Power	dBm	
		W	
		VSWR	
		dB (Return Loss)	
Zero			
To Ref			
Standard	Correction Off		
	GSM		
	EDGE		
	3GPPWCDMA ²		
	cdmaOne ²		
	cdma200 1x ²		
	DVB-T ²		
	DVB ²		
	TETRA		
	USER	4 kHz	
		200 kHz	
		600 kHz	

¹ If "Freq Mode" (see [Frequency Parameters](#)) is set to "Channel", the softkey displays "Channel".

² Only for R&S FSH-Z44

Power Meter

The internal power meter is available only if you have installed option R&S ZPH-K19.

Softkey	Menu or Dialog items	Parameters	Parameters selection
SigGenOn			
Freq ¹			
Unit	dBm		
	W		
	dB Rel		
² Zero			
To Ref			
² Channel BW			

¹ If "Freq Mode" (see [Frequency Parameters](#)) is set to "Channel", the softkey displays "Channel".

² available only with model .12.

Optic Power Measurement with ODM UPM 100

Softkey	Menu or Dialog items	Parameters	Parameters selection
Wavelength			
Unit	dBm		
	dBμV		
	W		
	dB Rel		
To Ref			

Pulse Power Measurement



The pulse power measurement is available only if you have installed option R&S ZPH-K29.

Table 15-1: Pulse power measurement with numeric mode

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Mode	Average		
	Power vs Time		
Freq			
Unit	dBm		
	W		
Zero			
To Ref			
Meas Time	Short		
	Normal		
	Long		

Table 15-2: Pulse power measurement with trace mode

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Mode	Average		
	Pwr vs Time		
Freq			
Unit	dBm		
	W		
Zero			
Algorithm	Histogram		
	Integration		
	Peak		
Ref Power Config	Low Ref Power	0 - 100 %	
	High Ref Power	0 - 100 %	
	Ref Power	0 - 100 %	
	Set to Default		
	Related to Power		
	Related to Voltage		

15.3.2 Frequency Parameters

The [FREQ / DIST] key opens a menu that contains the functionality to set the frequency.

Table 15-3: Optic Power Measurement

Softkey	Menu or Dialog items	Parameters	Parameters selection
Wavelength			

Table 15-4: Power Meter, Directional Power Meter, Channel Power Meter, Pulse Power Measurement

Softkey	Menu or Dialog items	Parameters	Parameters selection
¹ Frequency			
Freq Mode	² Channel		
	Select Downlink	Refresh	
		Load	
		Exit	
	Select Uplink	Refresh	
		Load	
		Exit	
	Set to Downlink		
	Set to Uplink		

¹ If "Freq Mode" is set to "Channel", the softkey displays "Channel".

² If "Freq Mode" is previously configured to "Channel", the menu item displays "Frequency".

15.3.3 BW Parameters

The [DTW / BW] key contains functionality to configure bandwidth parameters.

Table 15-5: Directional Power Meter

Softkey	Menu or Dialog items	Parameters	Parameters selection
Standard	Correction Off		
	GSM		
	EDGE		
	3GPPWCDMA ²		
	cdmaOne ²		
	cdma200 1x ²		
	DVB-T ²		
	DVB ²		
	TETRA		
	USER	4 kHz	

Softkey	Menu or Dialog items	Parameters	Parameters selection
		200 kHz	
		600 kHz	

Table 15-6: Channel Power Meter

Softkey	Menu or Dialog items	Parameters	Parameters selection
Channel BW			

Table 15-7: Pulse Measurement

Softkey	Menu or Dialog items	Parameters	Parameters selection
VBW	Full		
	5 MHz		
	1.5 MHz		
	300 kHz		

15.3.4 SCALE Parameters

The [SCALE] key contains functionality to configure level parameters.

Table 15-8: Power Meter, Directional Power Meter, Channel Power Meter

Softkey	Menu or Dialog items	Parameters	Parameters selection
Unit	dBm		
	W		
	dB Rel		
Offset			
Transducer	Primary		
	Secondary		
	Select Primary	Load	
		Refresh	
		Exit	
	Select Secondary	Load	
		Refresh	
		Exit	

Table 15-9: Pulse Power Measurement

Softkey	Menu or Dialog items	Parameters	Parameters selection
Ref Level	-70 to 30 dBm		
Range	Scale Adjust		

Softkey	Menu or Dialog items	Parameters	Parameters selection
	100 dB (10.0dB/Div)		
	50 dB (5.0dB/Div)		
	50 dB (5.0dB/Div)		
	30 dB (3.0dB/Div)		
	20 dB (2.0dB/Div)		
	10 dB (1.0dB/Div)		
	50 dB (0.5dB/Div)		
Unit	dBm		
	W		
Offset			

15.3.5 Sweep Configuration

The [SWEEP] key opens a menu that contains functionality to configure the sweep.

Table 15-10: Power Meter, Directional Power Meter

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Time	Short		
	Normal		
	Long		

Table 15-11: Pulse Power Measurement

Softkey	Menu or Dialog items	Parameters	Parameters selection
Trace Time		52 us to 1 s	
Conf Meas			
Single Meas			
Trigger	Free Run		
	Positive		
	Negative		
	Trigger Level	-30 to 20 dBm	
	Trigger Delay	-51.1875us to 53 s	
	Trigger Hysteresis	0.1 to 10 dB	
	Dropout Time	0 to 10s	

15.3.6 Limits Line Parameters

The [LINES] key opens a menu that contains functionality to configure the limits line.

Table 15-12: Power Meter, Channel Power Meter, Optic Power Meter

Softkey	Menu or Dialog items	Parameters	Parameters selection
Show Limit Lines			
Upper Limit	Set Threshold		
	Remove		
Lower Limit	Set Threshold		
	Remove		
Auto Beep			

15.3.7 Trace Parameters

The [TRACE] key opens a menu that contains functionality to configure the trace.

Table 15-13: Pulse Power Measurement

Softkey	Menu or Dialog items	Parameters	Parameters selection
Trace Mode	Clear/Write		
	Average		
Detector	Average		
	Max Peak		
Show	Enable Trace 2		
	Enable Memory 1		
	Enable Memory 2		
Trace>Memory			

15.3.8 Marker Parameters

The [MARKER] key opens a menu that contains functionality to configure the marker on the trace

Table 15-14: Pulse Power Measurement with trace mode

Softkey	Menu or Dialog items	Parameters	Parameters selection
New Marker			
Marker Type			
Delete Marker	Delete Selected		
	Delete All Delta		

Softkey	Menu or Dialog items	Parameters	Parameters selection
	Delete All		
Select Marker			
Set Marker	Search Range		
	Set To Peak		
	Set To Next Peak		
	Set To Minimum		
	All Marker To Peak		
	Center=Marker Freq		
	Ref Level=Marker Level		

15.4 Functions of the Modulation Analysis

This section contains all softkeys and menus that are available in analog and digital demodulation mode.



The modulation analysis is available only if you have installed option R&S ZPH-K7.

• Analog Demodulation Measurements	570
• Digital Demodulation Measurements	571
• Frequency Parameters	572
• BW Parameters	572
• Amplitude Parameters	572
• Sweep Configuration	573
• Limits Line Parameters	574
• TRACE Parameters	574
• TRACE Parameters	574

15.4.1 Analog Demodulation Measurements

The [MEAS] key opens a menu that contains the functionality to configure measurements with the analog demodulation.

Softkey	Menu or Dialog items	Parameters	Parameters selection
AM Domain ¹			
FM Domain ¹			
Audio Lowpass	DBW/1		
	DBW/10		

Softkey	Menu or Dialog items	Parameters	Parameters selection
	DBW/30		
	DBW/100		
Mod. Trace ¹			
Mod. Summary ¹			

¹To perform the analog modulation measurement, select the required modulation domain (AM Domain or FM Domain) and the required measurement setting (Mod. Trace or Mod. Summary).

15.4.2 Digital Demodulation Measurements

The [MEAS] key opens a menu that contains the functionality to configure measurements with the digital demodulation.

Softkey	Menu or Dialog items	Parameters	Parameters selection
ASK ¹			
FSK ¹			
Filter Type ¹	Root Raised Cosine		
	Raised Cosine		
	Guassian		
	Unfiltered		
Demod Parameters ¹	Symbol Rate		
	Frequency Deviation ²		
	Alpha/BT		
	Number of symbols		
	Burst Processing	On	
		Off	
Standard ²	Off		
	Bluetooth LE		
	Tire PResure		
Display Mode ¹	Eye Diagram		
	Symbols		
	Modulation Depth		
	Modulation Error		

¹To perform the digital modulation measurement, select the required modulation scheme (ASK or FSK) and the required measurement setting (filter type, demodulation parameters, display mode).

²Only available for FSK modulation scheme.

15.4.3 Frequency Parameters

The [FREQ / DIST] key opens a menu that contains the functionality to set the frequency.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Center Freq			
CF Stepsize			
Freq Offset ¹			

¹Only available for ASK and FSK modulation scheme.

15.4.4 BW Parameters



Only available for AM and FM domain measurements.

The [BW] key contains functionality to configure bandwidth parameters.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Manual DBW	3kHz - 2MHz		
Reference Deviation	<= DBW/2		
FM Broadcast ¹	Off		
	50us		
	75us		

¹FM Broadcast is only enabled when the DBW is set to 200kHz and 300kHz.

15.4.5 Amplitude Parameters

The [SCALE / AMPT] key contains functionality to configure the level parameters.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Ref Level			
Dev per Division ¹	1-100%		
Deviation per Div ²			
Ref Position ³			
Scale Adjust ⁴			
Att / Amp / Imp	Preampl		
	Manual Att		
	Auto Low Distortion		
	Auto Low Noise		
	Imp 50Ω		
	75 Ω RAM		
	75 Ω RAZ		
	75 Ω FSH-Z38		

¹Available for AM and FM Doiman. For AM Domain, the Dev per Division is configurable up to 20%.

²Available for ASK and FSK measurement. For ASK, the Deviation per Div is configurable in %, for FSK, it is configurable in kHz.

³Only available for ASK measurement.

⁴Scale Adjust is only enabled in the FM Domain for Mod. Trace measurement.

15.4.6 Sweep Configuration

The [SWEEP] key opens a menu that contains functionality to configure the sweep.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Cont Meas			
Single Meas			
Trigger ¹	Free Run		
	IQ Power -20.0 dBm		
	External Rise		
	External Fail		
	Trigger Delay		

¹Only available for ASK and FSK measurement.

15.4.7 Limits Line Parameters



Only available for AM and FM domain measurements.

The [LINES] key opens a menu that contains functionality to configure the limits line.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Select Limits	Refresh		
	Load		
	Exit		
Clear Limits			
Auto Beep			

15.4.8 TRACE Parameters



Only available for ASK and FSK domain measurements.

The [TRACE] key opens a menu that contains functionality to configure the ltrace diagram.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Enable Memory 1			
Trace -> Memory			

15.4.9 TRACE Parameters



Only available for ASK and FSK domain measurements.

The [MARKER] key opens a menu that contains functionality to configure the markers.

Softkey	Menu or Dialog items	Parameters	Parameters selection
New Marker			
Marker Type			
Delete Marker			

Softkey	Menu or Dialog items	Parameters	Parameters selection
Select Marker			
View List			

15.5 Functions of the Wizard

This section contains all softkeys and menus that are available in the measurement WIZARD.

- [Measurement Wizard](#).....575

15.5.1 Measurement Wizard

The [WIZARD] key opens a menu that contains the functionality to perform wizard measurement.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Load Meas Set	Edit	Rename	
		Cut	
		Copy	
		Paste	
		Delete	
	Refresh		
	Load		
	Exit		
Start Meas	Continue	Next Meas	Continue
			Interrupt
			Skip
			Finish Wizard
			Cancel
	Interrupt	Repeat Meas	
		Interrupt	Leave Menu ¹
			Resume Sequence
			Cancel
		Finish Wizard	
		Cancel	
	Interrupt	Leave Menu ¹	

Softkey	Menu or Dialog items	Parameters	Parameters selection
		Resume Sequence	
		Cancel	Yes
			No
	Skip	Continue	Next Meas
			Repeat Meas
			Interrupt
			Finish Wizard
			Cancel
		Interrupt	Leave Menu ¹
			Resume Sequence
			Cancel
		Skip	Continue
			Interrupt
			Skip
			Finish Wizard
			Cancel
		Finish Wizard	
		Cancel	Yes
			No
	Finish Wizard		
	Cancel	Yes	Save Result
			Discard Result
		No	
Meas Setting	General	Measurement Definition	
		User	
		Number of Steps	
		Description	
	Site	Site Number	
		Comments	
		GPS Position	
	Cable Definition	Use Wizard Cable Settings	On
			Off
		Cable Model	Load

Softkey	Menu or Dialog items	Parameters	Parameters selection
			Refresh
			Exit
		Clear Cable Model	Clear
		Cable length	
	Cable Settings	Default Calibration	
		Use Stored Calibrations	On
			Off
Meas Spec			
Meas Results	Mark		
	Edit	Rename	
		Cut	
		Copy	
		Paste	
		Delete	
	Preview	Prev	
		Next	
		Exit	
	Refresh		
	Exit		
Exit			

¹Press [WIZARD] key to resume back the wizard measurement.

15.6 Functions of the Maps

This section contains all softkeys and menus that are available in map mode.



The map is available only if you have installed option R&S ZPH-K16.

- [Maps Measurement](#)..... 578
- [Frequency Parameters](#).....583
- [Amplitude Parameters](#).....583
- [BW Parameters](#).....584

• Sweep Configuration.....	584
• Trace Functionality.....	585
• Limits Line Parameters.....	585

15.6.1 Maps Measurement

The [MEAS] key opens a menu that contains the functionality to configure map measurements.

Triangulation

The triangulation is available only if you have installed option R&S ZPH-K15.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Mode ¹	Triangulation		
	Outdoor Mapping		
	Indoor Mapping		
GPS Position	Display	Trace Current Position	
		Show Saved Position	
		Show Current Position	
	Save	Current Position	
		Manual Position and Azimuth	
		Azimuth Only	
		Triangulation	
	Go To Triangulation		
	GPS Position List	Include	
		View	Previous
			Next
			Edit
			Exit
		Delete	
		Delete All	Yes
			No
	Triangulate		
	Exit		
Zoom in			
Zoom out			
Settings	Show	GPS Information	

Softkey	Menu or Dialog items	Parameters	Parameters selection
		Compass Information	
		Power Bar	
		Power Result	
		Hardware Settings	
	Colors	Current Position Color	Black
			Blue
			Yellow
			Red
		Saved Positions Color	Black
			Blue
			Yellow
			Red
		Triangulation Color	Black
			Blue
			Yellow
			Red
	GPS Settings	HE400	
		HE300	
		HL300	
		GPS	
		Compass	
Maps	Auto Select		
	"Map folder name" ²		
	World		

¹Available only if option R&S ZPH-K16 is installed.

²Available only if a connected USB stick is scanned to locate the available map folders. See ["Map folder"](#) on page 295.

Outdoor Mapping

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Mode	Triangulation¹		
	Outdoor Mapping		
	Indoor Mapping		

Softkey	Menu or Dialog items	Parameters	Parameters selection
GPS Position	Display	Trace Current Position	
		Show Saved Position	
		Show Current Position	
		Live Map Update	
	Save	Current Position	
		Manual Position and Azimuth	
	Go To		
	GPS Position List	include	
		View	
		Delete	
		Delete All	
		Exit	
	Select GPX File	Mark	
		Edit	
		Preview	
		Load	
		Refresh	
		Exit	
	Exit		
Zoom in			
Zoom out			
Settings	Show	GPS Information	
		Compass Information	
		Power Bar	
		Power Result	
		Hardware Settings	
	Colors	Current Position Color	
		Saved Positions Color	
		Triangulation Color	
	Tone	Squelch Level	
		Threshold Tone Frequency	
		Tone Gain	

Softkey	Menu or Dialog items	Parameters	Parameters selection
		Tone Volume	
		Tone	
	Save on Event Event Source	Time Interval	
		Limit Failure	
		Distance Interval	
		Every Sweep	
Maps	Auto Select		
	"Map folder name" ²		
	World		

¹Available only if option R&S ZPH-K15 is installed.

²Available only if a connected USB stick is scanned to locate the available map folders.
See "[Map folder](#)" on page 295.

Indoor Mapping

Softkey	Menu or Dialog items	Parameters	Parameters selection
Meas Mode	Triangulation ¹		
	Outdoor Mapping		
	Indoor Mapping		
Indoor Position	Capture Position		
	Save Results	On-screen KB	
		Exit	
	Clear Indoor Position List	Yes	
		No	
	Indoor Position List	Include	
		View	
		Delete	
		Delete All	
		Exit	
	Select GPX File	Mark	
		Edit	
		Preview	
		Load	
		Refresh	

Softkey	Menu or Dialog items	Parameters	Parameters selection
		Exit	
Zoom in			
Zoom out			
Settings	Show	Power Bar	
		Power Result	
		Hardware Settings	
	Current Position Color	Black	
		Blue	
		Yellow	
		Res	
	Good Coverage Color	Magenta	
		Light Blue	
		Cyan	
		Green	
		Yellow	
		Red	
	Good Coverage Level		
	Average Coverage Color	Magenta	
		Light Blue	
		Cyan	
		Green	
		Yellow	
		Red	
	Average Coverage Level		
	Bad Coverage Color	Magenta	
		Light Blue	
		Cyan	
		Green	
		Yellow	
		Red	
	Bad Coverage Level		
	Default Indicator	Best	
		Average	

Softkey	Menu or Dialog items	Parameters	Parameters selection
		Worst	
	Tone	Squelch Level	
		Threshold Tone Frequency	
		Tone Gain	
		Tone Volume	
		Tone	
	Cursor Sensitivity		
	Exit	Every Sweep	
Maps	Auto Select		
	"Map folder name" ²		
	World		

¹Available only if option R&S ZPH-K15 is installed.

²Available only if a connected USB stick is scanned to locate the available map folders. See "[Map folder](#)" on page 295.

15.6.2 Frequency Parameters

The [FREQ/DIST] key opens a menu that contains the functionality to set the frequency.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Freq			

15.6.3 Amplitude Parameters

The [AMPT] key opens the amplitude menu that contains functionality to set up the vertical axis in the map mode.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Ref Level			
Range	Auto Range		
	Range		
Unit	dBm		
	dBmV		
	dBuV		

Softkey	Menu or Dialog items	Parameters	Parameters selection
	V		
	W		
	dB μ V/m		
	dB μ A/m		
	V/m		
	W/m ²		
Att / Amp / Imp	Preamp		
	Manual Att		
	Auto Low Distortion		
	Auto Low Noise		
	Imp 50 Ω		
	75 Ω RAM		
	75 Ω RAZ		
	75 Ω FSH-Z38		
Transducer	Primary		
	Secondary		
	Select Primary	Refresh	
		Load	
		Exit	
	Select Secondary	Refresh	
		Load	
		Exit	

15.6.4 BW Parameters

The [DTF / BW] key contains functionality to configure bandwidth parameters.

Softkey	Menu or Dialog items	Parameters	Parameters selection
RBW	3kHz - 2MHz		

15.6.5 Sweep Configuration

The [SWEEP] key opens a menu that contains functionality to configure the sweep.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Sweep Time			

15.6.6 Trace Functionality

The [TRACE] key opens the trace menu that contains functionality to set up the traces.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Detector	Max Peak		
	Min Peak		
	Sample		
	RMS		

15.6.7 Limits Line Parameters

The [LINES] key opens a menu that contains functionality to configure the limits line.

Softkey	Menu or Dialog items	Parameters	Parameters selection
Show Limit Lines			
Upper Limit	Set Threshold		
	Load From File		
	Remove		
Lower Limit	Set Threshold		
	Load From File		
	Remove		
Auto Beep			

15.7 Functions of the Cable & Antenna

This section contains all softkeys and menus that are available in the measurement Cable & Antenna.

- [Cable & Antenna Measurements](#)..... 586
- [FREQ/DIST Parameters](#)..... 586
- [SCALE Parameters](#)..... 588
- [DTF CONFIG Parameters](#)..... 588
- [SWEEP Parameters](#)..... 590

•	TRACE Parameters.....	590
•	MARKER Parameters.....	591
•	CAL Parameters.....	593

15.7.1 Cable & Antenna Measurements

This section contains all softkeys and menus that are available in the measurement WIZARD.

The [MEAS] key opens a menu that contains the functionality to configure the cable & antenna measurements.

Softkey	Menu or Dialog items	Parameters	Parameters selection
DTF	Split Screen		
	Return Loss		
	SWR		
Return Loss			
SWR			
Cable Loss	Normal		
	(Open + Short) / 2	Continue	Continue
		Cancel	Cancel
		Cancel	
Smith			
Phase	Others	Electrical Length	
		Elec Length Offset	
		Auto Length	
	Unwrap		
	Wrap		

15.7.2 FREQ/DIST Parameters

The [FREQ/DIST] key opens a menu that contains the functionality to set the frequency and cable distance.

Table 15-15: DTF

Softkey	Menu or Dialog items	Parameters	Parameters selection
Start Dist			
Stop Dist			
DTF Center Freq			
DTF Span	Coupled		
	Auto		
	Manual		
DTF Start Freq			
DTF Stop Freq			

Table 15-16: Return Loss, SWR, Cable Loss, Smith, Phase

Softkey	Menu or Dialog items	Parameters	Parameters selection
Start			
Stop			
Center			
Span			
Signal Standard	Select Downlink	Mark	
		Edit	
		Preview	
		Load	
		Refresh	
		Exit	
	Select Uplink	Mark	
		Edit	
		Preview	
		Load	
		Refresh	
		Exit	
	Set to Downlink		
	Set to Uplink		
	Set to Uplink + Downlink		

15.7.3 SCALE Parameters

The [SCALE / AMPT] key opens a menu that contains the functionality to set the vertical axis of the measurement diagram.

Table 15-17: DTF (Return Loss), Return Loss, SWR, Cable Loss

Softkey	Menu or Dialog items	Parameters	Parameters selection
Ref	Clear/Write		
	Average		
Range	Range		
	Ref Position		
Auto Scale			
¹ 50 dB Scale or 100 dB Scale			

¹"100 dB Scale" is only available for S21 measurement (model .12).

Table 15-18: DTF (SWR), SWR

Softkey	Menu or Dialog items	Parameters	Parameters selection
Range	SWR Range		
	Scale Max		
	Scale Min		
Auto Scale			

Table 15-19: Phase

Softkey	Menu or Dialog items	Parameters	Parameters selection
Ref			
Range	SWR Range		
	Scale Max		
	Scale Min		
Auto Scale			

15.7.4 DTF CONFIG Parameters

The [DTF CONFIG] key opens a menu that contains the functionality to set the DTF config.

Table 15-20: DTF

Softkey	Menu or Dialog items	Parameters	Parameters selection
Cable Config	Cable Model	Mark	
		Edit	

Softkey	Menu or Dialog items	Parameters	Parameters selection
		Preview	
		Load	
		Refresh	
		Exit	
	User Model		
	User Setting	Frequency	
		Velocity Factor	
		Loss	
	Clear Model		
DTF Meas Overview	Exit		
DTF List	Cable Config	Cable Model	Mark
			Edit
			Preview
			Load
			Refresh
			Exit
		User Model	
		User Setting	Frequency
			Velocity Factor
			Loss
		Clear Model	
	DTF Meas Overview	Exit	
	DTF List		
	DTF List Threshold		
	Exit		
DTF List Threshold			
Exit			

Table 15-21: Return Loss, SWR, Cable Loss, Smith, Phase

Softkey	Menu or Dialog items	Parameters	Parameters selection
Cable Config	Cable Model	Mark	
		Edit	
		Preview	
		Load	

Softkey	Menu or Dialog items	Parameters	Parameters selection
		Refresh	
		Exit	
	User Model		
	User Setting	Frequency	
		Velocity Factor	
		Loss	
	Clear Model		
DTF Meas Overview	Exit		

15.7.5 SWEEP Parameters

The [SWEEP] key opens a menu that contains the functionality to set the sweep.

Table 15-22: DTF, Return Loss, SWR, Cable Loss, Smith, Phase

Softkey	Menu or Dialog items	Parameters	Parameters selection
Number of Points			
Hold			
Single Sweep			
Continuous Sweep			

15.7.6 TRACE Parameters

The [TRACE] key opens a menu that contains the functionality to set the trace.

Table 15-23: DTF, Return Loss, SWR, Cable Loss, Phase

Softkey	Menu or Dialog items	Parameters	Parameters selection
Trace Mode	Clear/Write		
	Average		
Show Memory			
Trace►Memory			
Select Trace			
Trace Math	Off		

Softkey	Menu or Dialog items	Parameters	Parameters selection
	Trace - Memory		
	Memory - Trace		

Table 15-24: Smith

Softkey	Menu or Dialog items	Parameters	Parameters selection
Trace Mode	Clear/Write		
	Average		
Show Memory			
Trace►Memory			

15.7.7 MARKER Parameters

The [MARKER] key opens a menu that contains the functionality to set the marker.

Table 15-25: DTF, Return Loss, SWR, Cable Loss, Phase

Softkey	Menu or Dialog items	Parameters	Parameters selection
New Marker	Clear/Write		
	Average		
Marker Type			
Delete Marker	Delete Selected		
	Delete All Data		
	Delete All		
Select Marker			
View List			
Set Marker	Search Range	Search Range 1	Lower Limit
			Upper Limit
		Search Range 2	Lower Limit
			Upper Limit
		Selected Marker	Search Range Off
			Search Range 1
			Search Range 2
		All Markers	Search Range Off

Softkey	Menu or Dialog items	Parameters	Parameters selection
			Search Range 1
			Search Range 2
		Select Marker	
		Exit	
	Set To Peak		
	Set To Next Peak		
	Set To Minimum		
	All Marker To Peak		

Table 15-26: Smith

Softkey	Menu or Dialog items	Parameters	Parameters selection
New Marker	Clear/Write		
	Average		
Marker Type			
Delete Marker	Delete Selected		
	Delete All Data		
	Delete All		
Select Marker			
Marker Mode	Normal		
	dB Magn + Phase		
	Lin Magn + Phase (Rho)		
	Real + Img (Rho)		
	R + jX		
	G + jB		
	(R + jX) / Z0		
	(G + jB) / Y0		
	Ref Impedance		
Set Marker	Search Range	Search Range 1	Lower Limit
			Upper Limit
		Search Range 2	Lower Limit
			Upper Limit
		Selected Marker	Search Range Off
			Search Range 1
			Search Range 2

Softkey	Menu or Dialog items	Parameters	Parameters selection
		All Markers	Search Range Off
			Search Range 1
			Search Range 2
		Select Marker	
		Exit	
	Set To Peak		
	Set To Next Peak		
	Set To Minimum		
	All Marker To Peak		

15.7.8 CAL Parameters

The [CAL / SPAN] key opens a menu that contains the functionality to calibrate the instrument.

Table 15-27: DTF, Return Loss, SWR, Cable Loss, Smith, Phase

Softkey	Menu or Dialog items	Parameters	Parameters selection
Full 1-Port	Continue	Continue	Continue
			Cancel
	Cancel	Cancel	
Easy 1-Port	Continue		
	Cancel		
User Calibration			
Calibration Kits	Refresh		
	Exit		

16 Appendix

In this appendix, additional information on how a spectrum analyzer work is given.

16.1 How a Spectrum Analyzer Works

Basically, it is possible to measure and analyze RF signals either in the time domain or the frequency domain.

Measurements in the time domain show signal variations over time. You can perform these with an oscilloscope, for example. Measurements in the frequency domain show the frequency components of a signal. To perform measurements in the frequency domain, you can use a spectrum analyzer.

Both modes are essentially equivalent because applying the Fourier transform to any signal converts it into its spectral components. Depending on the signal characteristic to be measured, one method is usually more appropriate than the other. With an oscilloscope, it is possible to tell whether a signal is a sine wave, a square wave with a certain on/off ratio or a sawtooth wave. However, detecting superimposed low-level signals or monitoring the harmonic content of the signal is easier with a spectrum or signal analyzer.

Figure 16-1 shows the theoretical basis of the two measurement methods. In the time domain, an oscilloscope would, for example, show a section of the signal that is a square wave. The same signal, when viewed with a spectrum analyzer, would show a line spectrum (the fundamental and its harmonics).

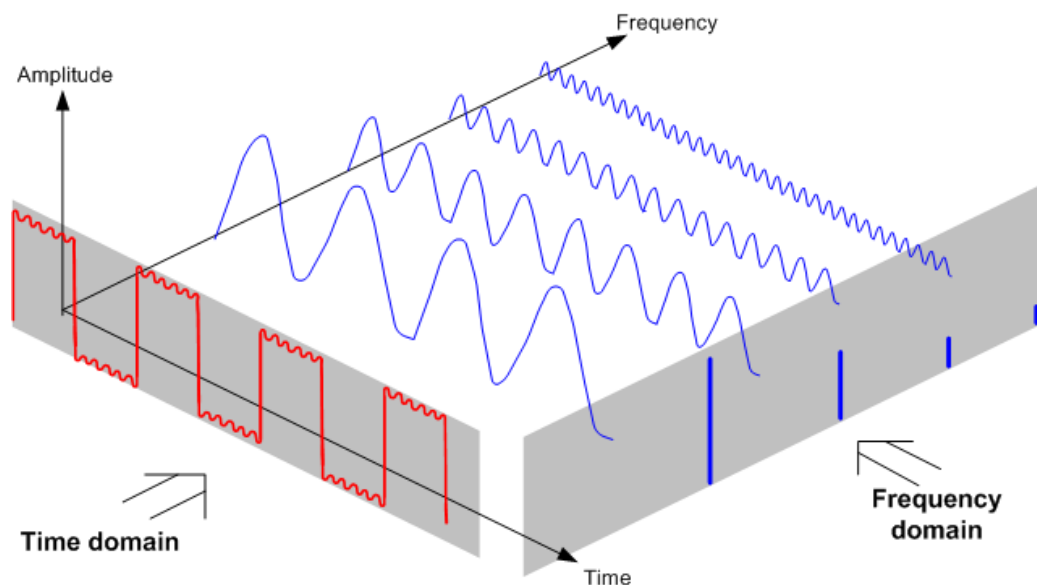


Figure 16-1: Visualization of time domain and frequency domain

Applying the Fourier transform to the periodic square wave transforms it into the frequency domain. The spectrum analyzer would show the fundamental (or frequency of the square wave) and its harmonics.

The spectrum analyzer uses a narrow bandpass filter for measurements in the frequency domain. Only at frequencies containing a signal there is a reading that gives the amplitude of the frequency component.

Figure 16-2 shows the basic principle of how a spectrum analyzer works.

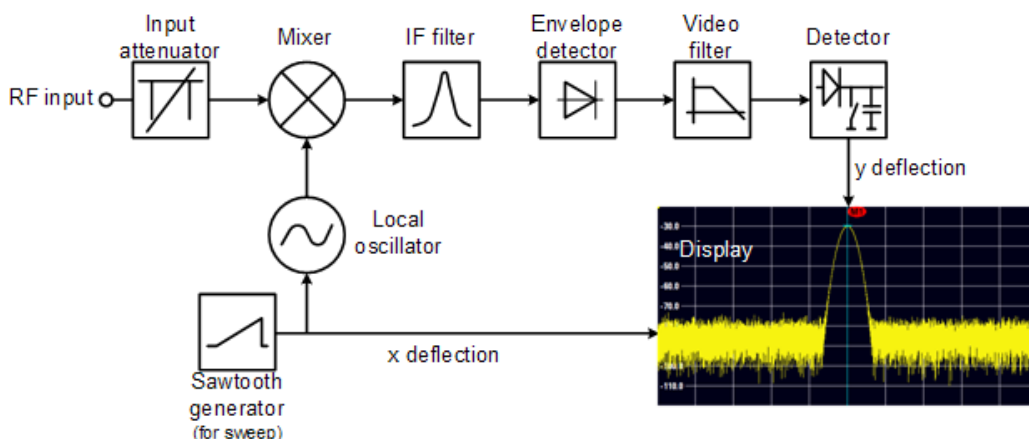


Figure 16-2: Block diagram showing the basic functionality of a spectrum analyzer

The precision attenuator at the R&S Cable Rider ZPH input attenuates the signal to a level that the mixer can handle without overdriving the mixer. The attenuator is directly coupled to the reference level. You can attenuate the signal in the range from 0 dB to 40 dB in steps of 5 dB.

The mixer converts the RF signal to a fixed intermediate frequency (IF). This process usually involves several stages. It lasts until you get an IF for which good narrowband filters are available. The R&S Cable Rider ZPH needs three mixing stages to get an IF that the filter can handle. Figure 11-3 graphically shows the mixing process.


For models with a frequency limit of 3.6 GHz, the IFs are 4892.8 MHz, 860.8 MHz and 54.4 MHz. The conversion from a specific input frequency to the first IF is done by a local oscillator (LO). This LO can be tuned from 4.8 GHz to 8.4 GHz. All other conversions are handled by single-frequency oscillators.

In case of models with a frequency limit of 8 GHz, the IFs are 8924.8 MHz, 860.8 MHz and 54.4 MHz. The conversion from the first to the second IF for these models is done by a second local oscillator.

The frequency of the local oscillator determines the input frequency at which the spectrum analyzer performs measurements: $f_{in} = f_{LO} - f_{IF}$.

The first mixer produces the sum frequency $f_{LO} + f_{in}$ (= image frequency f_{image}) as well as the difference frequency $f_{LO} - f_{in}$.

The image frequency is rejected by the bandpass at the IF so that it does not interfere with the subsequent frequency conversions.

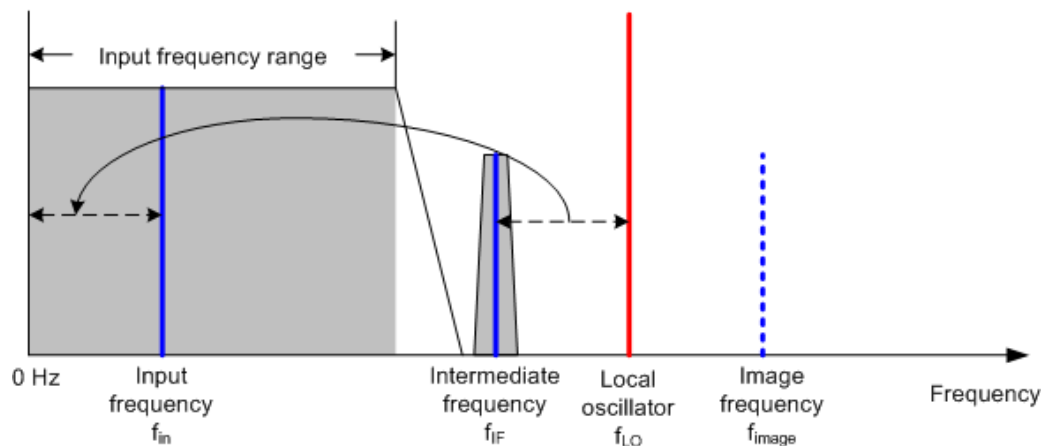


The first local oscillator is tuned with a sawtooth which simultaneously acts as the x deflection voltage for the display. In practice, synthesizer technology is used to generate the frequency of the first local oscillator and for a digital display.

The instantaneous sawtooth voltage therefore determines the input frequency of the spectrum analyzer.

The bandwidth of the IF filter at the IF determines the bandwidth that is used for measurements. Pure sine signals are passed by the IF filter characteristics. This means that signals closer together than the bandwidth of the IF filter cannot be resolved. This is why the bandwidth of the IF filter in a spectrum analyzer is referred to as the resolution bandwidth. The R&S Cable Rider ZPH has resolution bandwidths from 1 Hz to 3 MHz.

The bandlimited IF is passed to the envelope detector. The envelope detector removes the IF from the signal and outputs its envelope. The output signal from the envelope detector is referred to as the video signal. As it has been demodulated, it only contains amplitude information. The phase information is lost.

With RF sine signals, the video signal is a DC voltage. With AM signals the video signal contains a DC component whose amplitude corresponds to the carrier power and an AC component whose frequency is equal to the modulation frequency, provided the modulation frequency is inside the resolution bandwidth.

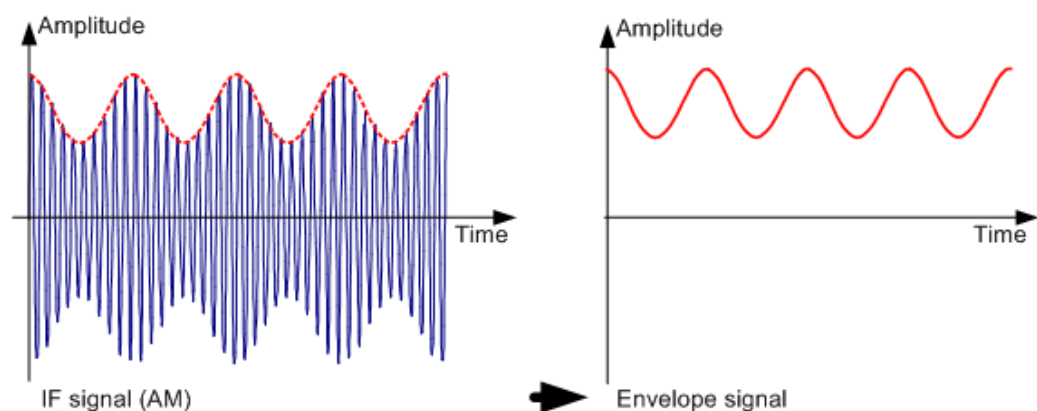


The video filter comes after the envelope detector. The filter is a lowpass with an adjustable cutoff frequency which limits the bandwidth of the video signal. It is particu-

larly useful when sine signals are to be measured in the vicinity of the spectrum analyzer's intrinsic noise. The sine signal produces a video signal that is a DC voltage.


At the IF, however, the noise is distributed over the whole bandwidth or, in the case of the video signal, over half the bandwidth of the resolution filter. By selecting a narrow video bandwidth relative to the resolution bandwidth, the noise can be suppressed, while the sine signal to be measured (= DC) is not affected.

The figures below show a weak sine signal. In the first picture, it is measured with a large video bandwidth and in the second with a narrow video bandwidth.

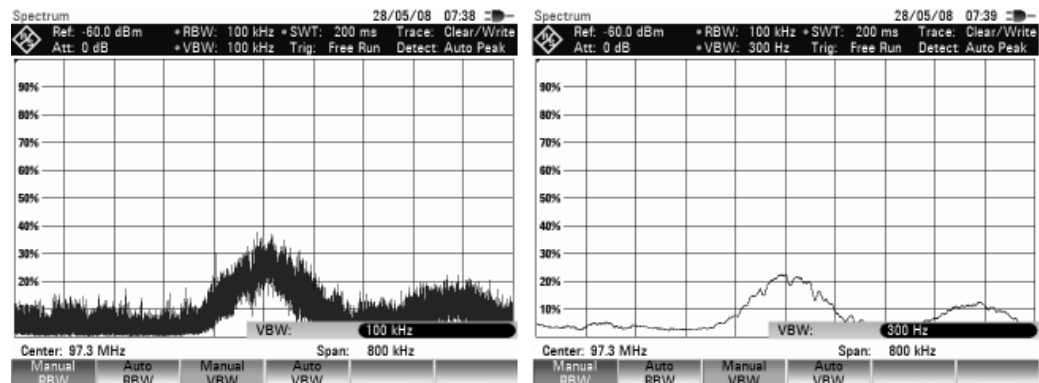

Limiting the video bandwidth smoothes the trace considerably. This makes it much easier to determine the level of the measured signal.

The detector comes after the video filter. The detector combines the measured spectrum so that it can be represented as one pixel in the trace. The R&S Cable Rider ZPH uses 711 pixels to form the trace, i.e. the whole measured spectrum has to be represented using just 711 pixels. Common types of spectrum analyzer detectors are the peak detector (PEAK), the sample detector (SAMPLE) and the RMS detector (RMS). An Auto Peak detector which simultaneously displays the maximum peak and the minimum peak is usually also provided. The Fig. below explains how these detectors work.

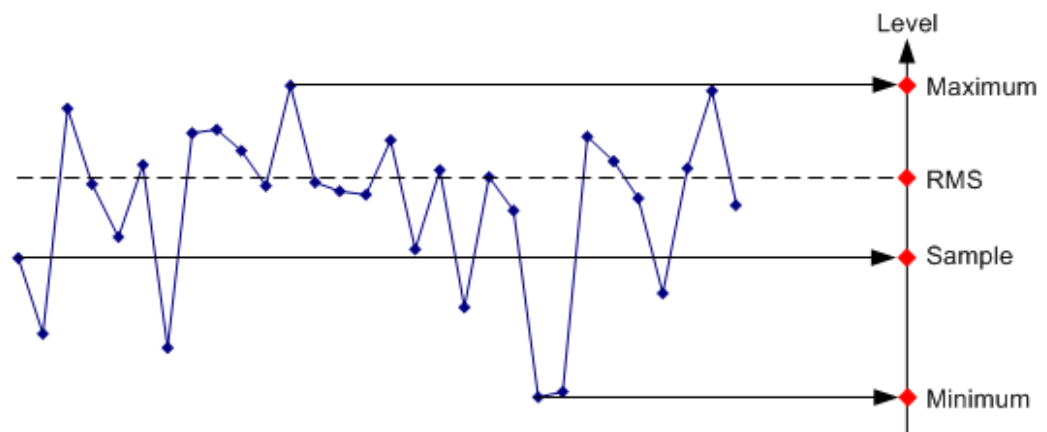

The figure above shows 30 measured values which are represented by a single pixel. The peak detector determines and displays the maximum measured value. The Auto Peak detector takes the maximum and minimum and displays them together. The two values are joined by a vertical line segment. This gives a good indication of the level variation over the measured values represented by a single pixel. The RMS detector is

used by the spectrum analyzer to determine the RMS value of the measured values. It is therefore a measure of the spectral power represented by a pixel. The sample detector takes an arbitrary measurement value and displays it (in the Fig. above, the first). The other measured values are ignored.

On the basis of the operating principles of detectors, a few recommendations can be made as to their use.

- It is best to use the Auto Peak detector or the peak detector for spectrum analysis over large frequency ranges. This ensures that all signals are displayed.
- The RMS detector is recommended for power measurements on modulated signals. However, the display range should be chosen so as not to exceed 100 times the bandwidth of the signal or the resolution bandwidth, whichever is larger.
- The sample detector or the RMS detector (preferred) should be used for noise measurements. Only these two detectors are capable of measuring noise power correctly
- When measurements are made on sine signals, the level display does not depend on the detector. However, if you use the RMS detector or the sample detector, ensure that the span is not too great. Otherwise, the displayed levels of sine signals may be lower than their true value.

List of Commands

[SENSe:]ADEMod:BANDwidth:DEModulation.....	464
[SENSe:]ADEMod:BANDwidth:RDEViation.....	464
[SENSe:]ADEMod:BWIDth:DEModulation.....	464
[SENSe:]ADEMod:BWIDth:RDEViation.....	464
[SENSe:]ADEMod:FM:OFFSet?.....	470
[SENSe:]ADEMod:MTIME?.....	465
[SENSe:]BANDwidth:VIDeo.....	401
[SENSe:]BANDwidth:VIDeo:AUTO.....	401
[SENSe:]BANDwidth[:RESolution].....	350
[SENSe:]BANDwidth[:RESolution].....	400
[SENSe:]BANDwidth[:RESolution]:AUTO.....	351
[SENSe:]BANDwidth[:RESolution]:AUTO.....	400
[SENSe:]BWIDth:VIDeo.....	401
[SENSe:]BWIDth:VIDeo:AUTO.....	401
[SENSe:]BWIDth[:RESolution].....	351
[SENSe:]BWIDth[:RESolution].....	400
[SENSe:]BWIDth[:RESolution]:AUTO.....	351
[SENSe:]BWIDth[:RESolution]:AUTO.....	400
[SENSe:]CHANnel:TABLE:SElect:DOWNlink.....	434
[SENSe:]CHANnel:TABLE:SElect:UPLink.....	434
[SENSe:]CHANnel:TABLE:SElect<1...4>.....	433
[SENSe:]CHANnel:TABLE:SET.....	435
[SENSe:]CHANnel<1...3>.....	433
[SENSe:]CORRection:TRANsducer<1...2>:ISOTropic[:STATE].....	458
[SENSe:]CORRection:TRANsducer<1...2>:SElect.....	396
[SENSe:]CORRection:TRANsducer<1...2>:UNIT?.....	396
[SENSe:]CORRection:TRANsducer<1...2>[:STATE].....	396
[SENSe:]DDEMod.....	491
[SENSe:]DDEMod:BURSt[:STATE].....	486
[SENSe:]DDEMod:FILTer:ALPHA.....	486
[SENSe:]DDEMod:FILTer:NAME.....	486
[SENSe:]DDEMod:FILTer[:STATE].....	487
[SENSe:]DDEMod:FSK:OFFSet?.....	491
[SENSe:]DDEMod:SRATe.....	487
[SENSe:]DDEMod:TIME.....	487
[SENSe:]DETector<1...2>[:FUNCTION].....	410
[SENSe:]DETector<1...2>[:FUNCTION]:AUTO.....	410
[SENSe:]ESpectrum:PRESet:SETTings.....	457
[SENSe:]ESpectrum:PRESet[:STANdard].....	457
[SENSe:]FILTer:DEMPhasis:TCONstant.....	464
[SENSe:]FILTer:DEMPhasis[:STATE].....	465
[SENSe:]FILTer:LPASS.....	464
[SENSe:]FREQuency:CENTer.....	341
[SENSe:]FREQuency:CENTer.....	388
[SENSe:]FREQuency:CENTer.....	460
[SENSe:]FREQuency:CENTer.....	473
[SENSe:]FREQuency:CENTer:STEP.....	342

[SENSe:]FREQuency:CENTer:STEP.....	389
[SENSe:]FREQuency:CENTer:STEP.....	460
[SENSe:]FREQuency:CENTer:STEP.....	474
[SENSe:]FREQuency:CENTer:STEP:LINK.....	342
[SENSe:]FREQuency:CENTer:STEP:LINK.....	389
[SENSe:]FREQuency:INPut:MODE<1..3>.....	389
[SENSe:]FREQuency:MODE.....	390
[SENSe:]FREQuency:OFFSet.....	390
[SENSe:]FREQuency:OFFSet.....	474
[SENSe:]FREQuency:SETTings:COUPling:ENABLE.....	344
[SENSe:]FREQuency:SPAN.....	342
[SENSe:]FREQuency:SPAN.....	391
[SENSe:]FREQuency:SPAN:AUTO.....	343
[SENSe:]FREQuency:SPAN:AUTO.....	391
[SENSe:]FREQuency:SPAN:FULL.....	391
[SENSe:]FREQuency:STARt.....	343
[SENSe:]FREQuency:STARt.....	391
[SENSe:]FREQuency:STOP.....	343
[SENSe:]FREQuency:STOP.....	392
[SENSe:]PMETer:DETEctor[:FUNction].....	496
[SENSe:]PMETer:FREQuency.....	493
[SENSe:]PMETer:MTIME.....	495
[SENSe:]PMETer:WAVElength.....	493
[SENSe:]POWer:ACHannel:ACPairs.....	443
[SENSe:]POWer:ACHannel:BANDwidth[:ACHannel].....	444
[SENSe:]POWer:ACHannel:BANDwidth[:ALTErnate<1...11>].....	444
[SENSe:]POWer:ACHannel:BANDwidth[:CHANnel].....	443
[SENSe:]POWer:ACHannel:BWIDth:ACHannel.....	444
[SENSe:]POWer:ACHannel:BWIDth:ALTErnate<1...11>.....	445
[SENSe:]POWer:ACHannel:BWIDth[:CHANnel].....	444
[SENSe:]POWer:ACHannel:MODE.....	445
[SENSe:]POWer:ACHannel:PRESet:RLEVel.....	446
[SENSe:]POWer:ACHannel:REFerence:TXCHannel:AUTO.....	446
[SENSe:]POWer:ACHannel:REFerence:TXCHannel:MANual.....	446
[SENSe:]POWer:ACHannel:SPACing:ALTErnate<1...11>.....	447
[SENSe:]POWer:ACHannel:SPACing:CHANnel<1...11>.....	447
[SENSe:]POWer:ACHannel:SPACing[:ACHannel].....	447
[SENSe:]POWer:ACHannel:TXCHannel:COUNT.....	448
[SENSe:]ROSCillator:SOURce.....	518
[SENSe:]SWEep:COUNT.....	403
[SENSe:]SWEep:EGATe.....	404
[SENSe:]SWEep:EGATe:HOLDoff.....	405
[SENSe:]SWEep:EGATe:LENGth.....	405
[SENSe:]SWEep:EGATe:TIME.....	405
[SENSe:]SWEep:MODE.....	457
[SENSe:]SWEep:POINts.....	352
[SENSe:]SWEep:POINts.....	403
[SENSe:]SWEep:TIME.....	404
[SENSe:]SWEep:TIME:AUTO.....	404
*CLS.....	338

*ESE.....	338
*ESR?.....	338
*IDN?.....	339
*IST?.....	339
*OPC.....	339
*OPT?.....	339
*RST.....	339
*SRE.....	340
*STB?.....	340
*TRG.....	340
*TST?.....	340
*WAI.....	340
*WAI.....	402
ABORT.....	402
CALCulate<1...2>:ADEModulation:LIMit:DELeTe.....	467
CALCulate<1...2>:ADEModulation:LIMit:FAIL?.....	467
CALCulate<1...2>:ADEModulation:LIMit:SElect.....	466
CALCulate<1...2>:DELTamarker<1...6>:AOFF.....	356
CALCulate<1...2>:DELTamarker<1...6>:AOFF.....	412
CALCulate<1...2>:DELTamarker<1...6>:AOFF.....	482
CALCulate<1...2>:DELTamarker<1...6>:MAXimum:NEXT.....	357
CALCulate<1...2>:DELTamarker<1...6>:MAXimum:NEXT.....	413
CALCulate<1...2>:DELTamarker<1...6>:MAXimum[:PEAK].....	357
CALCulate<1...2>:DELTamarker<1...6>:MAXimum[:PEAK].....	413
CALCulate<1...2>:DELTamarker<1...6>:MINimum[:PEAK].....	357
CALCulate<1...2>:DELTamarker<1...6>:MINimum[:PEAK].....	413
CALCulate<1...2>:DELTamarker<1...6>:X.....	357
CALCulate<1...2>:DELTamarker<1...6>:X.....	413
CALCulate<1...2>:DELTamarker<1...6>:X.....	482
CALCulate<1...2>:DELTamarker<1...6>:X:RELative.....	358
CALCulate<1...2>:DELTamarker<1...6>:X:RELative.....	414
CALCulate<1...2>:DELTamarker<1...6>:X:RELative.....	482
CALCulate<1...2>:DELTamarker<1...6>:Y?.....	358
CALCulate<1...2>:DELTamarker<1...6>:Y?.....	414
CALCulate<1...2>:DELTamarker<1...6>:Y?.....	483
CALCulate<1...2>:DELTamarker<1...6>[:STATe].....	356
CALCulate<1...2>:DELTamarker<1...6>[:STATe].....	412
CALCulate<1...2>:DELTamarker<1...6>[:STATe].....	481
CALCulate<1...2>:DLINe.....	370
CALCulate<1...2>:DLINe.....	373
CALCulate<1...2>:DLINe.....	426
CALCulate<1...2>:DLINe.....	429
CALCulate<1...2>:DLINe:STATe.....	370
CALCulate<1...2>:DLINe:STATe.....	373
CALCulate<1...2>:DLINe:STATe.....	426
CALCulate<1...2>:DLINe:STATe.....	429
CALCulate<1...2>:DTF:CABLe:LENGth.....	377
CALCulate<1...2>:DTF:CABLe:LENGth.....	385
CALCulate<1...2>:DTF:CABLe:PRESet.....	377
CALCulate<1...2>:DTF:DISTance:START.....	344

CALCulate<1...2>:DTF:DISTance:STOP.....	344
CALCulate<1...2>:FEED.....	468
CALCulate<1...2>:FEED.....	484
CALCulate<1...2>:FSK:DEViation:REFerence[:VALue].....	485
CALCulate<1...2>:LIMit<1...2>:ACPower:ACHannel:ABSolute.....	450
CALCulate<1...2>:LIMit<1...2>:ACPower:ACHannel:ABSolute[:STATe].....	450
CALCulate<1...2>:LIMit<1...2>:ACPower:ACHannel:RESult?.....	450
CALCulate<1...2>:LIMit<1...2>:ACPower:ACHannel[:RELative].....	449
CALCulate<1...2>:LIMit<1...2>:ACPower:ACHannel[:RELative]:STATe.....	449
CALCulate<1...2>:LIMit<1...2>:ACPower:ALTernate<1...11>:ABSolute.....	452
CALCulate<1...2>:LIMit<1...2>:ACPower:ALTernate<1...11>:ABSolute[:STATe].....	452
CALCulate<1...2>:LIMit<1...2>:ACPower:ALTernate<1...11>:RESult?.....	453
CALCulate<1...2>:LIMit<1...2>:ACPower:ALTernate<1...11>[:RELative].....	451
CALCulate<1...2>:LIMit<1...2>:ACPower:ALTernate<1...11>[:RELative]:STATe.....	451
CALCulate<1...2>:LIMit<1...2>:ACPower:STATe.....	449
CALCulate<1...2>:LIMit<1...2>:BEEP[:STATe].....	371
CALCulate<1...2>:LIMit<1...2>:BEEP[:STATe].....	427
CALCulate<1...2>:LIMit<1...2>:BEEP[:STATe].....	467
CALCulate<1...2>:LIMit<1...2>:COMMeNT?.....	371
CALCulate<1...2>:LIMit<1...2>:COMMeNT?.....	427
CALCulate<1...2>:LIMit<1...2>:DEFine.....	372
CALCulate<1...2>:LIMit<1...2>:DEFine.....	428
CALCulate<1...2>:LIMit<1...2>:DELeTe.....	373
CALCulate<1...2>:LIMit<1...2>:DELeTe.....	429
CALCulate<1...2>:LIMit<1...2>:FAIL?.....	374
CALCulate<1...2>:LIMit<1...2>:FAIL?.....	430
CALCulate<1...2>:LIMit<1...2>:LOWer:SELeCt.....	375
CALCulate<1...2>:LIMit<1...2>:LOWer:SELeCt.....	431
CALCulate<1...2>:LIMit<1...2>:LOWer:THReShold.....	376
CALCulate<1...2>:LIMit<1...2>:LOWer:THReShold.....	432
CALCulate<1...2>:LIMit<1...2>:STATe.....	374
CALCulate<1...2>:LIMit<1...2>:STATe.....	430
CALCulate<1...2>:LIMit<1...2>:UNIT:X?.....	374
CALCulate<1...2>:LIMit<1...2>:UNIT:X?.....	430
CALCulate<1...2>:LIMit<1...2>:UNIT[:Y]?.....	375
CALCulate<1...2>:LIMit<1...2>:UNIT[:Y]?.....	431
CALCulate<1...2>:LIMit<1...2>:UPPer:SELeCt.....	375
CALCulate<1...2>:LIMit<1...2>:UPPer:SELeCt.....	431
CALCulate<1...2>:LIMit<1...2>:UPPer:THReShold.....	376
CALCulate<1...2>:LIMit<1...2>:UPPer:THReShold.....	432
CALCulate<1...2>:MARKer:FUNCTion:ADEMod:AFRequency[:RESult]?.....	470
CALCulate<1...2>:MARKer:FUNCTion:ADEMod:AM[:RESult]?.....	470
CALCulate<1...2>:MARKer:FUNCTion:ADEMod:CARRier[:RESult]?.....	470
CALCulate<1...2>:MARKer:FUNCTion:ADEMod:FERRor[:RESult]?.....	472
CALCulate<1...2>:MARKer:FUNCTion:ADEMod:FM[:RESult]?.....	471
CALCulate<1...2>:MARKer:FUNCTion:ADEMod:MDEPth[:RESult]?.....	471
CALCulate<1...2>:MARKer:FUNCTion:ADEMod:MINdex[:RESult]?.....	472
CALCulate<1...2>:MARKer:FUNCTion:ADEMod:MRAT[:RESult]?.....	471
CALCulate<1...2>:MARKer:FUNCTion:ADEMod:SINad[:RESult]?.....	472
CALCulate<1...2>:MARKer:FUNCTion:ADEMod:THD[:RESult]?.....	472

CALCulate<1...2>:MARKer:FUNCTION:ADEMod:THDad[:RESult]?	472
CALCulate<1...2>:MARKer:FUNCTION:DDEMod:CARRier[:RESult]?	488
CALCulate<1...2>:MARKer:FUNCTION:DDEMod:CFDRift[:RESult]?	488
CALCulate<1...2>:MARKer:FUNCTION:DDEMod:CFERror[:RESult]?	488
CALCulate<1...2>:MARKer:FUNCTION:DDEMod:MDEPth[:RESult]?	489
CALCulate<1...2>:MARKer:FUNCTION:DDEMod:MDEViation[:RESult]?	489
CALCulate<1...2>:MARKer:FUNCTION:DDEMod:MERRor[:RESult]?	489
CALCulate<1...2>:MARKer:FUNCTION:DDEMod:MINDEX[:RESult]?	490
CALCulate<1...2>:MARKer:FUNCTION:DDEMod:MOERror[:RESult]?	490
CALCulate<1...2>:MARKer:FUNCTION:DDEMod:MPower[:RESult]?	490
CALCulate<1...2>:MARKer<1...6>:AOFF	359
CALCulate<1...2>:MARKer<1...6>:AOFF	415
CALCulate<1...2>:MARKer<1...6>:AOFF	480
CALCulate<1...2>:MARKer<1...6>:COUNT:FREQuency?	364
CALCulate<1...2>:MARKer<1...6>:COUNT:FREQuency?	420
CALCulate<1...2>:MARKer<1...6>:COUNT[:STATe]	364
CALCulate<1...2>:MARKer<1...6>:COUNT[:STATe]	420
CALCulate<1...2>:MARKer<1...6>:FREQuency:MODE	365
CALCulate<1...2>:MARKer<1...6>:FREQuency:MODE	421
CALCulate<1...2>:MARKer<1...6>:FUNCTION:ACPower:UNIT	443
CALCulate<1...2>:MARKer<1...6>:FUNCTION:CENTer	365
CALCulate<1...2>:MARKer<1...6>:FUNCTION:CENTer	421
CALCulate<1...2>:MARKer<1...6>:FUNCTION:CPOwer:BANDwidth	439
CALCulate<1...2>:MARKer<1...6>:FUNCTION:CPOwer:MODE	439
CALCulate<1...2>:MARKer<1...6>:FUNCTION:CPOwer:UNIT	440
CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation:HOLD	366
CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation:HOLD	422
CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation:SElect	366
CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation:SElect	422
CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation[:STATe]	365
CALCulate<1...2>:MARKer<1...6>:FUNCTION:DEModulation[:STATe]	421
CALCulate<1...2>:MARKer<1...6>:FUNCTION:DTF:PEAK:RESult?	380
CALCulate<1...2>:MARKer<1...6>:FUNCTION:DTF:PEAK:THReshold	387
CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:DISTortion?	454
CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:LIST?	454
CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:NHARmonics	455
CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics:PRESet	455
CALCulate<1...2>:MARKer<1...6>:FUNCTION:HARMonics[:STATe]	454
CALCulate<1...2>:MARKer<1...6>:FUNCTION:LEVel:ONCE	366
CALCulate<1...2>:MARKer<1...6>:FUNCTION:LEVel:ONCE	422
CALCulate<1...2>:MARKer<1...6>:FUNCTION:LEVel:ONCE	437
CALCulate<1...2>:MARKer<1...6>:FUNCTION:LEVel:ONCE	460
CALCulate<1...2>:MARKer<1...6>:FUNCTION:MDEPth:RESult?	456
CALCulate<1...2>:MARKer<1...6>:FUNCTION:MDEPth[:STATe]	456
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown	367
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown	423
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:FREQuency?	367
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:FREQuency?	423
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:RESult?	368
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:RESult?	424

CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:STATe.....	368
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NDBDown:STATe.....	424
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NOISe:RESult?.....	369
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NOISe:RESult?.....	425
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NOISe[:STATe].....	368
CALCulate<1...2>:MARKer<1...6>:FUNCTION:NOISe[:STATe].....	424
CALCulate<1...2>:MARKer<1...6>:FUNCTION:OBAN:BANDwidth.....	440
CALCulate<1...2>:MARKer<1...6>:FUNCTION:OBAN:BANDwidth:PCT.....	441
CALCulate<1...2>:MARKer<1...6>:FUNCTION:OBW:BANDwidth.....	441
CALCulate<1...2>:MARKer<1...6>:FUNCTION:OBW:BANDwidth:PCT.....	441
CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER:PRESet.....	436
CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER:PRESet:CHECK?.....	437
CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER:RESult:PHZ.....	440
CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER:RESult?.....	437
CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER:SElect.....	435
CALCulate<1...2>:MARKer<1...6>:FUNCTION:POWER[:STATe].....	436
CALCulate<1...2>:MARKer<1...6>:FUNCTION:REFerence.....	369
CALCulate<1...2>:MARKer<1...6>:FUNCTION:REFerence.....	425
CALCulate<1...2>:MARKer<1...6>:FUNCTION:TDMA:BURSt.....	442
CALCulate<1...2>:MARKer<1...6>:FUNCTION:TXPower:RESult?.....	453
CALCulate<1...2>:MARKer<1...6>:FUNCTION:TXPower:RESult?.....	457
CALCulate<1...2>:MARKer<1...6>:MAXimum:NEXT.....	360
CALCulate<1...2>:MARKer<1...6>:MAXimum:NEXT.....	416
CALCulate<1...2>:MARKer<1...6>:MAXimum[:PEAK].....	360
CALCulate<1...2>:MARKer<1...6>:MAXimum[:PEAK].....	416
CALCulate<1...2>:MARKer<1...6>:MINimum[:PEAK].....	360
CALCulate<1...2>:MARKer<1...6>:MINimum[:PEAK].....	416
CALCulate<1...2>:MARKer<1...6>:MODE.....	360
CALCulate<1...2>:MARKer<1...6>:MODE.....	416
CALCulate<1...2>:MARKer<1...6>:X.....	361
CALCulate<1...2>:MARKer<1...6>:X.....	417
CALCulate<1...2>:MARKer<1...6>:X.....	480
CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>:LEFT.....	362
CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>:LEFT.....	418
CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>:RIGHT.....	362
CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>:RIGHT.....	418
CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>[:STATe].....	362
CALCulate<1...2>:MARKer<1...6>:X:SLIMits<1...2>[:STATe].....	418
CALCulate<1...2>:MARKer<1...6>:Y?.....	363
CALCulate<1...2>:MARKer<1...6>:Y?.....	419
CALCulate<1...2>:MARKer<1...6>:Y?.....	481
CALCulate<1...2>:MARKer<1...6>[:STATe].....	359
CALCulate<1...2>:MARKer<1...6>[:STATe].....	415
CALCulate<1...2>:MATH<1...2>:COPY:MEMory<1...3>.....	352
CALCulate<1...2>:MATH<1...2>:COPY:MEMory<1...3>.....	407
CALCulate<1...2>:MATH<1...2>:STATe.....	408
CALCulate<1...2>:MATH<1...2>:STATe.....	480
CALCulate<1...2>:MATH<1...2>[:EXPRession][:DEFine].....	407
CALCulate<1...2>:PMETer:PRESet:BANDwidth:VIDeo.....	497
CALCulate<1...2>:PMETer:PRESet:SElect.....	498

CALCulate<1...2>:PMETer:PRESet[:STATe].....	498
CALCulate<1...2>:PMETer:RELative[:MAGNitude].....	494
CALCulate<1...2>:PMETer:RELative[:MAGNitude]:AUTO.....	494
CALCulate<1...2>:PMETer:RELative[:MAGNitude]:OFFSet.....	494
CALCulate<1...2>:TRACe:CABLe:LENGth:RESult?.....	379
CALCulate<1...2>:TRACe:CABLe:LENGth[:STATe].....	380
CALCulate<1...2>:TRACe:CABLe:LOSS:RESult?.....	381
CALCulate<1...2>:TRACe:LIMit:VSWR:FAIL?.....	381
CALCulate<1...2>:TRACe:VSWR:AVG:RESult?.....	381
CALCulate<1...2>:TRACe:VSWR:MAX:RESult?.....	382
CALCulate<1...2>:TRACe:VSWR:MAX[:STATe].....	378
CALCulate<1...2>:TRANSform:DTFault:PEAK:COUNT?.....	386
CALCulate<1...2>:TRANSform:DTFault:PEAK:DATA<1...10>?.....	386
CALCulate<1...2>:TRANSform:DTFault:PEAK:STATe.....	386
CALCulate<1...2>:TRANSform:DTFault:PEAK:THReshold.....	387
CALibration<1...2>:ABORT.....	382
CALibration<1...2>:ATTenuation:STATus?.....	383
CALibration<1...2>:CONTinue?.....	383
CALibration<1...2>:MODE?.....	383
CALibration<1...2>:PMETer:ZERO:AUTO.....	496
CALibration<1...2>:START?.....	384
CALibration<1...2>:STATus?.....	385
DISPlay<1...2>:BRIGhtness.....	513
DISPlay<1...2>:CMAP.....	513
DISPlay<1...2>:CMAP:DEFault.....	514
DISPlay<1...2>:DATE:FORMat.....	514
DISPlay<1...2>:LOSS:REFerence.....	346
DISPlay<1...2>:LOSS:REFerence:POSition.....	346
DISPlay<1...2>:LOSS:Y:SCALE.....	346
DISPlay<1...2>:MAGNitude:REFerence.....	347
DISPlay<1...2>:MAGNitude:REFerence:POSition.....	347
DISPlay<1...2>:MAGNitude:Y:SCALE.....	347
DISPlay<1...2>:MAGNitude:Y:SPACing.....	348
DISPlay<1...2>:PHASe:REFerence.....	348
DISPlay<1...2>:PHASe:UNWRap.....	348
DISPlay<1...2>:VSWR:Y:SCALE.....	349
DISPlay<1...2>:VSWR:Y:SCALE:MAXimum.....	349
DISPlay<1...2>:VSWR:Y:SCALE:MINimum.....	349
DISPlay<1...2>[:WINDow]:STORE.....	504
DISPlay<1...2>[:WINDow]:TRACe<1...2>:MEMory<1...3>[:STATe].....	353
DISPlay<1...2>[:WINDow]:TRACe<1...2>:MEMory<1...3>[:STATe].....	408
DISPlay<1...2>[:WINDow]:TRACe<1...2>:MODE.....	353
DISPlay<1...2>[:WINDow]:TRACe<1...2>:MODE.....	408
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y:SPACing.....	393
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALE].....	393
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALE]:ADJust.....	345
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALE]:ADJust.....	393
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALE]:PDIVision.....	461
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALE]:PDIVision.....	475
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALE]:RLEVel.....	393

DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RLEVel.....	461
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RLEVel.....	475
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RLEVel:OFFSet.....	394
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RPOStion.....	394
DISPlay<1...2>[:WINDow]:TRACe<1...2>:Y[:SCALe]:RPOStion.....	475
DISPlay<1...2>[:WINDow]:TRACe<1...2>[:STATe].....	408
FETCh<1...2>:PMETer.....	497
FORMat:BORDER.....	409
FORMat[:DATA].....	354
FORMat[:DATA].....	409
HCOPy:DEVice:LANGUage.....	504
HCOPy[:IMMediate].....	505
INITiate:CONTInuous.....	351
INITiate:CONTInuous.....	403
INITiate:CONTInuous.....	466
INITiate:CONTInuous.....	478
INITiate[:IMMediate].....	402
INITiate[:IMMediate].....	465
INITiate[:IMMediate].....	478
INPut:ANTenna:MEASure.....	458
INPut:ANTenna:STATe.....	458
INPut:ATTenuation.....	394
INPut:ATTenuation.....	462
INPut:ATTenuation.....	476
INPut:ATTenuation:AUTO.....	395
INPut:ATTenuation:AUTO.....	462
INPut:ATTenuation:AUTO.....	476
INPut:ATTenuation:MODE.....	395
INPut:ATTenuation:MODE.....	462
INPut:ATTenuation:MODE.....	476
INPut:GAIN:STATe.....	395
INPut:GAIN:STATe.....	462
INPut:GAIN:STATe.....	477
INPut:IMPedance.....	396
INPut:IMPedance.....	463
INPut:IMPedance.....	477
INPut:IMPedance:PAD.....	463
INPut:IMPedance:PAD.....	477
INPut:IMPedance:PAD.....	517
INSTrument:NSElect.....	469
INSTrument:NSElect.....	485
INSTrument:NSElect.....	510
INSTrument[:SElect].....	468
INSTrument[:SElect].....	484
INSTrument[:SElect].....	510
MEASurement<1...2>:FORMat.....	379
MEASurement<1...2>:MODE.....	378
MMEMory:CATalog:DIRectories?.....	499
MMEMory:CATalog?.....	499
MMEMory:CDIRectory.....	499

MMEMory:COpy.....	499
MMEMory:DATA.....	500
MMEMory:DELeTe.....	500
MMEMory:FILE.....	501
MMEMory:FILE:DATE.....	501
MMEMory:FILE:TIME.....	501
MMEMory:INIT.....	501
MMEMory:LOAD:STATe.....	502
MMEMory:MDIRectory.....	502
MMEMory:MOVE.....	502
MMEMory:NAME.....	505
MMEMory:RDIRectory.....	503
MMEMory:STORE:STATe.....	503
SOURce:TG:ATTenuation.....	350
SOURce:TG:ATTenuation.....	397
SOURce:TG:AUTO.....	398
SOURce:TG:FREQuency.....	398
SOURce:TG:FREQuency:AUTO.....	398
SOURce:TG:FREQuency:OFFSet.....	399
SOURce:TG:POWer.....	399
SOURce:TG[:STATe].....	399
STATus:OPERation:CONDition?.....	535
STATus:OPERation:ENABLe.....	535
STATus:OPERation:NTRansition.....	535
STATus:OPERation:PTRansition.....	536
STATus:OPERation[:EVENT]?.....	535
STATus:PRESet.....	534
STATus:QUEStionable:CONDition?.....	536
STATus:QUEStionable:ENABLe.....	537
STATus:QUEStionable:FREQuency:CONDition?.....	537
STATus:QUEStionable:FREQuency:ENABLe.....	537
STATus:QUEStionable:FREQuency:NTRansition.....	538
STATus:QUEStionable:FREQuency:PTRansition.....	539
STATus:QUEStionable:FREQuency[:EVENT]?.....	536
STATus:QUEStionable:LIMit:CONDition?.....	537
STATus:QUEStionable:LIMit:ENABLe.....	537
STATus:QUEStionable:LIMit:NTRansition.....	538
STATus:QUEStionable:LIMit:PTRansition.....	539
STATus:QUEStionable:LIMit[:EVENT]?.....	536
STATus:QUEStionable:NTRansition.....	538
STATus:QUEStionable:POWer:CONDition?.....	537
STATus:QUEStionable:POWer:ENABLe.....	538
STATus:QUEStionable:POWer:NTRansition.....	539
STATus:QUEStionable:POWer:PTRansition.....	540
STATus:QUEStionable:POWer[:EVENT]?.....	536
STATus:QUEStionable:PTRansition.....	539
STATus:QUEStionable[:EVENT]?.....	536
STATus:QUEue[:NEXT]?.....	535
SYSTem:ACCessory.....	518
SYSTem:ACCessory:AUTO.....	518

SYSTem:AUDio:VOLume.....	514
SYSTem:BEEPer:KEY:VOLume.....	515
SYSTem:BEEPer:POVerload[:STATe].....	515
SYSTem:BEEPer:VOLume.....	515
SYSTem:BNC:MODE.....	518
SYSTem:CAPTure:COUNter.....	506
SYSTem:CAPTure:DATaset[:STATe].....	506
SYSTem:CAPTure:MODE.....	506
SYSTem:CAPTure:SCReen[:STATe].....	506
SYSTem:COMMunicate:LAN:ETHerNet.....	515
SYSTem:COMMunicate:LAN:GATeway.....	516
SYSTem:COMMunicate:LAN:SUBMask.....	516
SYSTem:COMMunicate:SOCKeT:ADDReSS.....	516
SYSTem:COMMunicate:SOCKeT:DHCP[:STATe].....	516
SYSTem:COMMunicate:SOCKeT:PORT.....	516
SYSTem:DATE.....	519
SYSTem:ERRor:ALL?.....	519
SYSTem:ERRor:CODE:ALL?.....	520
SYSTem:ERRor:CODE[:NEXT]?.....	519
SYSTem:ERRor:COUNt?.....	520
SYSTem:ERRor[:NEXT]?.....	519
SYSTem:FORMat:IDENt.....	520
SYSTem:HELP:HEADers?.....	520
SYSTem:HELP:SYNTax?.....	521
SYSTem:LANGuage.....	521
SYSTem:LANGuage:CATalog?.....	521
SYSTem:POSition:ALTitude?.....	511
SYSTem:POSition:GPS:CONNeCTed?.....	511
SYSTem:POSition:GPS:CORRection:FREQuency?.....	511
SYSTem:POSition:GPS:QUALity?.....	511
SYSTem:POSition:GPS:SATellites?.....	512
SYSTem:POSition:GPS[:STATe].....	512
SYSTem:POSition:LATitude?.....	512
SYSTem:POSition:LONGitude?.....	512
SYSTem:POSition:VALid?.....	512
SYSTem:POWeR:SOURce?.....	521
SYSTem:POWeR:STATus?.....	521
SYSTem:PRESet.....	522
SYSTem:PRESet:CALibration:DISCard.....	522
SYSTem:PRESet:FACTory.....	522
SYSTem:PRESet:MODE.....	522
SYSTem:PRESet:USER.....	523
SYSTem:REBoot.....	523
SYSTem:SET.....	523
SYSTem:SET:LOCK.....	503
SYSTem:SET:UNLock.....	504
SYSTem:SHUTdown.....	523
SYSTem:SOEVeNt:DISTance:INTerval.....	507
SYSTem:SOEVeNt:LIMits:MODE.....	507
SYSTem:SOEVeNt:RECOding:STORage.....	508

SYSTem:SOEVent:SOURce.....	508
SYSTem:SOEVent:TIME:INTERval.....	508
SYSTem:SOEVent[:STATe].....	509
SYSTem:TIME.....	523
SYSTem:TZONee.....	524
SYSTem:VERSion?.....	524
TRACe<1...2>[:DATA]?.....	355
TRACe<1...2>[:DATA]?.....	410
TRACe<1...2>[:DATA]?.....	491
TRIGger[:SEQuence]:LEVel:IQPower.....	479
TRIGger[:SEQuence]:LEVel:VIDeo.....	405
TRIGger[:SEQuence]:SLOPe.....	406
TRIGger[:SEQuence]:SLOPe.....	478
TRIGger[:SEQuence]:SOURce.....	406
TRIGger[:SEQuence]:SOURce.....	479
UNIT<1...2>:LENGth.....	354
UNIT<1...2>:PMETer:POWer.....	494
UNIT<1...2>:POWer.....	397

Index

A

AC adapter	21
Accessory detection	39
AM demodulator	243
AM modulation depth	191
Amplitude	216
Analog modulation	
MEAS	570
Analog Modulation	274, 459
AM Domain	274
AMPT	572
BW	572
FM Domain	274
FREQ	572
LINE	574
SWEEP	573
Analyzing Measurement	155
Using Display and Limit Lines	155
Using Markers	155
Working with Traces	155
Antenna	
Configuring	39
Application cards	14
Application notes	14
Attenuation	76, 218, 261
Audio demodulation	
Mute function	244
Time	244
Volume	244
Audio demodulator	243
Audio settings	52
Auto low distortion	76
Auto low noise	76
Auto low noise/distortion	218
Auto peak	230
Auto Power up	53
Average time	257
Average trace	229

B

Backlight	50
Bandwidth	
Resolution	221
Video	223
Basic instrument operation	32
Basic Signal Characteristics	167
Battery insertion	19
Battery low level	53
Battery maintenance	23
Battery operation	
Battery (car adapter)	22
Battery (charging)	22
Battery (external charger)	22
Battery (replacement)	22
Beeper	166, 247
BNC connector	
Configuring	39
Brochure	13

C

Cable & Antenna	
CAL	593
DTF CONFIG	588
FREQ/DIST	586
MARKER	591
SCALE	588
SWEEP	590
TRACE	590
Cable and Antenna Analyzer	
remote command	341
Cable and Antenna Test Mode	126
Cable loss	69
Calibrating Measurements	137
Calibration Methods	137
Calibration States	137
Performing a Full 2-Port Calibration	137
Calibration certificate	14
Calibration kit model	57
Center frequency	212, 255, 260
CF step size	213
Channel Power	168
Channel table	248
Clear / write	226
Clear status	
Remote	338
Command sequence	
Remote	340, 402
Command Sequence and Command Synchronization	336
Common Commands	338
Configuring Cable and Antenna Tests	143
Configuring the Horizontal Axis	143
Configuring the Vertical Axis	143
Selecting the Cable Mode	143
Setting and Triggering the Sweep	143
Configuring Data Capture	505
Configuring the Instrument	509
Audio Settings	509
Controlling the GPS Receiver	509
Display Configuration	509
Mode Selection	509
Setting up a Network Connection	509
System Settings	509
Continue sweep	225
Conventions	14

D

Data management	107
Data sheet	13
Date & time	47
Date format	48
Default calibration	56
Default values	
Remote	339
Delay time	227
Delta marker	159, 236
Detector	230
Digital modulation	
MEAS	571

Digital Modulation	274, 473
AMPT	572
ASK	274
FREQ	572
FSK	274
SWEEP	573
TMARKERRACE	574
TRACE	574
Directional power sensor	258
Zeroing	86
Display element	32
Display line	163, 245
Display range	217
Display settings	50
Displaying Maps	
Adding and Removing Elements	297
Aligning the Indoor Mapping Mode	297
Aligning the Triangulation and Outdoor Mapping Mode	297
Screen Layout	297
Zoom In and Out of the Map	297
Distance to Fault Measurements	
Split screen	128
Documentation overview	13

E

Event status enable register (ESE)	
Remote	338
Event status register (ESR)	
Remote	338
External trigger	
Reference level	226

F

File management	107
File Management	498
Firmware	114
FM demodulator	243
Forward power display	258
Free run	226
Frequency	78
Counter	241
Mode	248
Offset	213
settings	255, 260
Settings	212
Start / Stop	214
Front panel keys	95
Function keys	96

G

Gated trigger	226
Getting started	13
GPS receiver	45

H

Hardkey	
WIZARD	575
Hardware settings	39
Harmonic distortion	189
Harmonics	81
Horizontal axis	212
How a Spectrum Analyzer Works	594

I

Identification	
Remote	339
Identifying cable faults	69
Impedance	219
Indoor Mapping	307
Instrument Model and Command Processing	324
Instrument tour	25
Interfaces and Protocols	320
LAN	320
SCPI	320
USB	320
VISA	320
VXI-11	320
Interference analyzer	
Measuring the Spectrum	293
Working with Maps	293
Internal power meter	263
IST flag	
Remote	339

K

Key	
Ampt (SA)	215
BW	221
CAL / SPAN	558
DTF / BW	559
Freq (SA)	212
FREQ / DIST	557
LINE	560
Marker	234
MARKER	561
MEAS	548
Meas (PM)	258
MEAS (PM)	253, 263, 266
MODE	547
SAVE/RECALL	546
SCALE / AMPT	558
SETUP	541
Sweep	224
SWEEP	559
Trace	229
TRACE	559
Keypad	98

L

LAN connection with R&S Cable Rider ZPH	60
Languages	48
Last span	215
Length unit	48
Limit check	166, 247
Limit line	165, 246

M

Making and Storing Screenshots	504
Maps	
AMPT	583
BW	584
FREQ	583
Indoor Mapping	578
LINE	585
MEAS	578
Outdoor Mapping	578

SWEEP	584
TRACE	585
Triangulation	578
Marker	234
Automatic positioning	160, 237
Delta marker	159, 236
Distance	242
Frequency counter	78
Functions	240
List	235
Position	235, 241
Removal	160, 237
Search limit	162, 240
Search limits	161, 238
Selection	159, 237
Type	159, 237
Mathematics	234
Max hold	230
Max peak	230
Measurement	224
Audio demodulation	243
Channel power	263
Directional power sensor	258
Frequency counter	241
n dB down	242
Noise power density	240, 248
Measurement setup	
Configure overview	101
Measurement Wizard	115
Evaluating Results	124
Performing and Configuring Measurements	115
Measuring Transmissions	74
Memory trace	233
Menu	541
General	541
Menu and Softkey Overview	541
Min hold	230
Min peak	230
Multiple traces	232
Mute function	244

N

n dB down	242
Navigation controls	
Rotary knob	99
Noise power	240

O

Occupied bandwidth	172
Offset	
Frequency	213
Reference level	217
On-screen keyboard	94
Operation complete	
Remote	339
Options	65, 114
Checking options	66
Enabling options	65
Identification (remote)	339
Managing options with R&S License Manager	67
Outdoor Mapping	307

P

Package contents	19

Performing Cable and Antenna Measurements	128
1-Port cable loss measurement	128
Distance to Fault	128
Phase measurement	128
Reflection measurements	128
Smith chart	128
Transmission measurements	128
Positioning	
Support	19
Power key	95
Power meter	253, 266
BW	566
FREQ	565
LINE	569
MARKER	569
MEAS	562
SCALE	567
SWEEP	568
TRACE	569
Power Meter	492
Power overload beep	53
Power sensor	253, 254, 255, 266
Attenuation	261
Average time	257
Directional	258
errors	255
Reference level	257
Standard	261
Unit	257, 260
Weighting mode	260
Zeroing	83, 256
Power settings	53
Preamplifier	78, 219
Preset	58, 100
Preview dataset	112
Primary transducer	249
Pulse characteristic	268
Pulse power measurement	266
Power vs time	266
Putting into operation	17

R

R&S InstrumentView	
Channel table	248
Limit lines	163, 245
Range	214
RBW	221
Reference level	78, 216
Directional power meter	260
External trigger	226
Offset	217
Power sensor	257
transducer	251
Reference position	216
Regional settings	48
Release notes	13
Remote Control - Commands	336
Remote Control Connection	323
changing the IP Address	323
Reset	58
Reset values	
Remote	339
Resolution bandwidth	221
Restore dataset	111
RF attenuation	218
RMS	230

S

Safety instructions	13
Sample	230
Save on event	109
Saving Events	102, 507
Scaling	
Horizontal axis	212
SCPI Command Structure and Syntax	327
Screen layout	
Cable and Antenna Test	32
Configure overview	32
Power meter	253
Power meter (Directional)	258
Power meter (pulse)	266
Screenshot	105
Dataset	105
Preview	105
Screenshot key	95
Search limits	161, 238
Secondary transducer	249
Self-test	
Remote	340
Service manual	13
Service request enable register (SRE)	
Remote	340
Signal attenuation	76
Single sweep	225
Softkey	
Analog Modulation	570
Cable & Antenna	586
Configuration overview	211
General	541
Maps	577
New marker	235
Power meter	562
Spectrum analysis	548
Softkey key	95
Span	214
Spectrogram Result Display	193
Spectrogram Playback	205
Spectrogram Recording	201
Spectrum analysis	
Spectrogram	548
Spectrogram Playback	548
Spectrum analyzer	76
Spectrum Analyzer	
remote command	387
Spectrum emission mask	186
Standard	
Directional power sensor	261
Power sensor	261
Start / Stop	214
Start / Stop frequency	214
Status byte	
Remote	338, 340
Status Reporting System	524, 533
Application of the Status Reporting Systems	524
Event Status Register (ESR) and Event Status Enable Register (ESE)	524
Overview of the Status Register	524
Reset Values of the Status Reporting System	524
Status Byte (STB) & Service Request Enable Register (SRE)	524
Structure of an SCPI Status Register	524
Step size	213
Sweep	224, 230

Sweep mode	225
Sweep number	224, 229
Sweep time	224
Switching on and off the instrument	24
Synchronization	
Data	107
System keys	95

T

TDMA	175
Time domain	215, 226
Touchscreen	
Configuration overview	36
Measurement result view	33
Measurement trace window	34
Parameter view	35
Title bar	33
Touchscreen gesture	
Add marker	89
Change center frequency	89
Change reference level	89
Change span	89
Delete all markers	89
Trace	229
Trace (second)	232
Trace average	229
Trace mathematics	234
Trace memory	233
Trace mode	229
Trace selection	232
Tracking Generator	220
Transducer	220, 249
Unit	251
Triangulation	307
Trigger	224
Event (remote)	340
Trigger delay	227
Trigger level	227

U

Unit	217
Power sensor	257, 260
Transducer	251
Unpacking and checking the instrument	18
USB connection with R&S Cable Rider ZPH	64
User interface	32
User manual	13
Using Isotropic Antennas	208
Using Markers and Deltamarkers	157

V

VBW	223
Vertical axis	215
Video bandwidth	223
View trace	229
Volume	244
Key clock volume	52
System beeper	52

W

w/ active marker	235
Wait	
Remote	340, 402

Wavelength	255
settings	255
White papers	14
WIZARD	575
Working Directory	102
Working with Maps	
Displaying Maps	294
Transferring Indoor Maps	294
Transferring Maps	294

X

X axis	212

Y

Y axis	215

Z

Zero span	215
Zeroing	256