



Touchboards

205 Westwood Ave, Long Branch, NJ 07740
Phone: 866-94 BOARDS (26273) / (732)-222-1511
Fax: (732)-222-7088 | E-mail: sales@touchboards.com


eBeam® edge wireless

Quick Setup

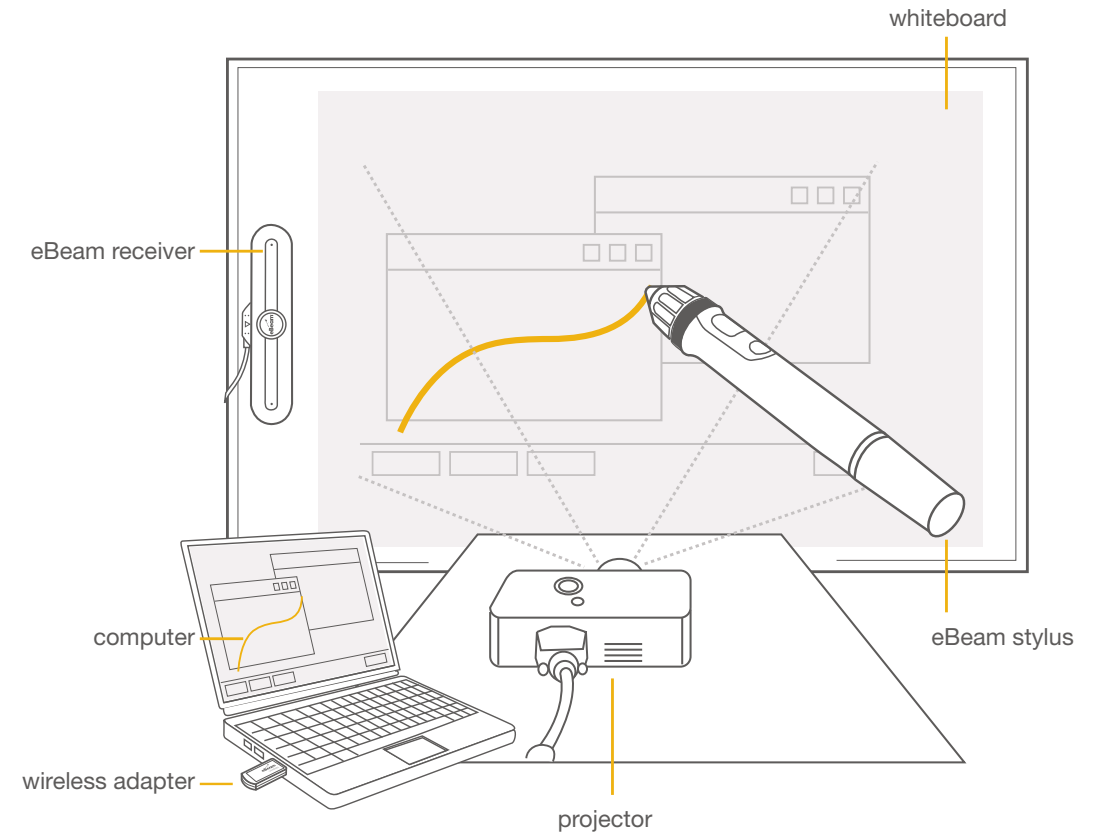


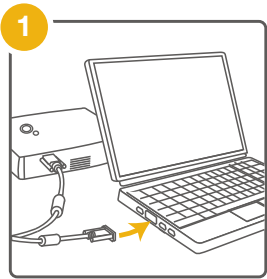


Connect your projector to your computer.

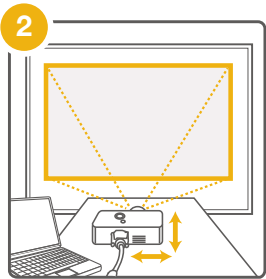

Turn on your projector and align/focus the image on the board.

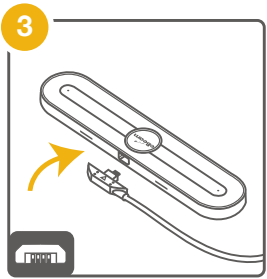


Connect the eBeam USB cable to your eBeam receiver.

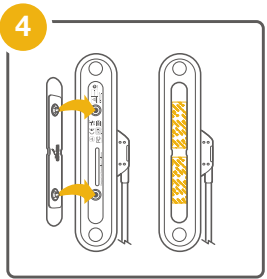


Place a mounting plate onto the back of the receiver with the Command adhesive side facing out.


**(See note for magnetic mounting option)*

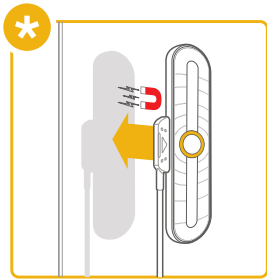


***Note:** You also can place the receiver directly onto magnetic surfaces without using the plate.

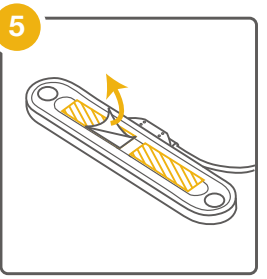


Peel the Command Adhesive backing from the receiver.

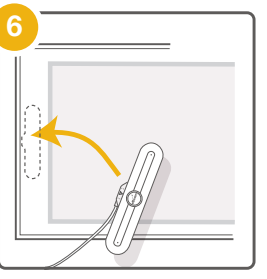


Hold the receiver and prepare to place it carefully in the indicated location.

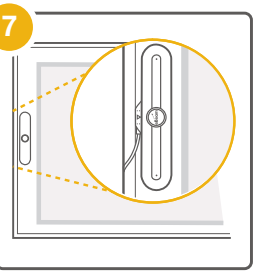


Place the receiver so that it is centered vertically on the board, and parallel to the frame.

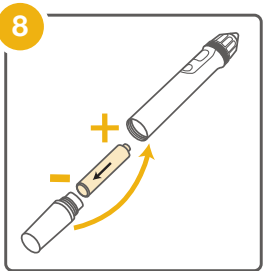


Locate the eBeam stylus and twist open the battery cartridge. Install AAA battery in your eBeam stylus.

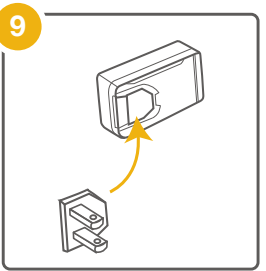


Select the correct power supply connector.

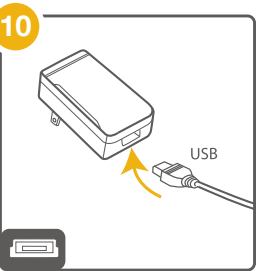


Connect the eBeam USB cable to the power supply.

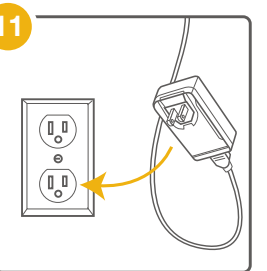


Connect the power supply to the wall.

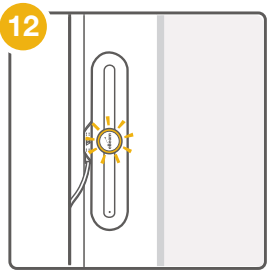


The receiver light will blink, indicating that it is ready to connect wirelessly.

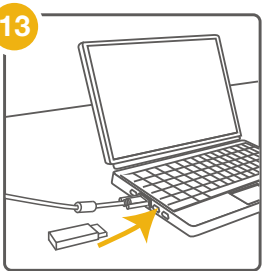

Connect the wireless adapter to the USB port.

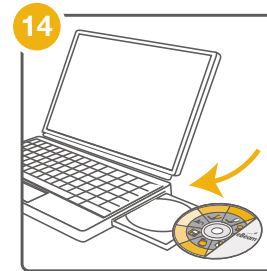

Insert the eBeam software CD and install.

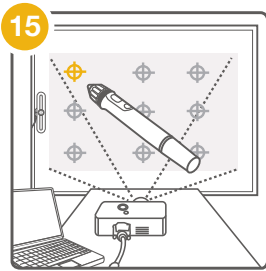

Launch the eBeam software, calibrate the system.
Congratulations! Your eBeam system is now ready for use.