



testo easyheat  
Configuration and Analysis software

**Instruction manual** **en**







# General Information

This documentation includes important information about the features and application of the product. Please read this documentation through carefully and familiarise yourself with the operation of the product before putting it to use. Keep this document to hand so that you can refer to it when necessary.

This documentation describes the software with the program language **English - GB**.

**!** The range of functions of the software depends on the country version of the measuring instrument connected and on the number and kind of instrument types for which the software has been enabled via licence key. The descriptions in this document apply to the complete enabling of all instrument types.

## Symbols

Symbol	Meaning
<b>!</b>	Identifies particularly important information.
<b>Text</b>	Text appears on the instrument display or PC monitor
	Position cursor over the whole element and click with the left mouse button.*
	Position cursor over the whole element and click with the right mouse button.*

\* Data refers to standard mouse configuration (left button: selects, right button: context menu)

## Trademarks

Microsoft and Windows are registered trademarks of the Microsoft Corporation in the USA and/or other countries. Intel and Pentium are registered trademarks of the Intel Corporation in the USA and/or other countries. Other trademarks or product names are the property of the respective owner.

# Content

General Information .....	2
Content .....	3
A. Intended Purpose .....	6
B. Using software .....	7
B.1 System requirements .....	7
B.2 Installing software .....	7
B.3 Starting the software .....	8
B.4 Setting up the connection .....	8
C. Operation .....	10
D. Application example .....	11
E. Functions .....	13
E.1 Testo Logo .....	13
E.1.1 Enhance licence .....	13
E.2 General .....	13
E.2.1 Previous module .....	13
E.2.3 Exit .....	14
E.3 Customer .....	14
E.3.1 Search customer .....	14
E.3.1.1 List of customers .....	15
E.3.2 Show customer data .....	16
E.3.2.1 Address .....	16
E.3.2.2 List of locations .....	16
E.3.3 Change customer data .....	17
E.3.4 Insert new customer .....	17
E.3.5 Import customer data .....	18
E.4 Locations .....	19
E.4.1.2 Measurements .....	20
E.4.1.3 Task .....	20
E.4.2 Change measure location data .....	20
E.4.3 Insert new location .....	21
E.4.4 Print barcodes .....	21
E.5 Measurements .....	22
E.5.2 Display measurement data .....	23
E.5.2.1 Information .....	23
E.5.2.2 Graphics .....	24



## 4 Content

	E.5.2.3 Measure values .....	25
E.6	Jobs .....	26
	E.6.1 Search job .....	26
	E.6.2 Show job details .....	26
	E.6.3 New job .....	27
E.7	Employee .....	27
	E.7.1 All employees .....	27
	E.7.2 Change employee .....	28
	E.7.3 New employee .....	28
	E.7.4 Job list .....	29
E.8	testo 312-4 .....	29
	E.8.1 Download measurement data .....	29
	E.8.2 Online measurement .....	30
	E.8.3 Configure testo 312-4 .....	32
	E.8.3.1 Serial connection to testo 312-4 .....	32
	E.8.3.2 Instrument .....	32
	E.8.3.3 Date / Time .....	32
	E.8.3.4 Print text .....	32
	E.8.3.5 Logger programme .....	32
	E.8.3.6 Memory .....	33
E.9	testo 314 .....	33
	E.9.1 Transmit measure locations .....	33
	E.9.1.1 Measure locations on PC .....	33
	E.9.1.2 Measure locations on instrument .....	34
	E.9.2 Download measurement data .....	34
	E.9.3 Configure testo 314 .....	35
	E.9.3.1 Serial communication .....	35
	E.9.3.2 Clock .....	36
	E.9.3.3 Print text .....	36
E.10	testo 330 .....	36
	E.10.1 Transmit measure locations .....	36
	E.10.1.1 Measure locations on PC .....	37
	E.10.1.2 Measure locations on instrument .....	37
	E.10.2 Download measurement data .....	38
	E.10.3 Online measurement .....	38
	E.10.3.1 Measure values, Display, Chart, Flue gas matrix .....	39
	E.10.4 Configure testo 330 .....	40

E.11	Settings	41
E.11.1	Synchronise Pocket PC	41
	E.11.1.1 Synchronisation	41
	E.11.1.2 Configuration	41
E.11.2	Install easyheat.mobile	42
E.11.3	Report design	42
	E.11.3.1 Field, Font, Border, Page	43
	E.11.3.2 Editor	44
	E.11.3.3 Preview	44
E.11.4	Configuration	45
	E.11.4.1 Instruments	45
	E.11.4.2 Programme	45
	E.11.4.3 Customer data	46
	E.11.4.4 Own data	46
	E.11.4.5 Color scheme	46
	E.11.4.6 Software Update	46
	E.11.4.7 Backup	46
E.11.5	Information	46
E.12	Database	47
E.12.1	Full backup	47
E.12.2	Incremental backup	47
E.12.3	Restore database	47
E.12.4	Repair and compact	47
<b>F.</b>	<b>Questions and Answers</b>	<b>48</b>



## A. Intended Purpose

The testo easyheat configuration and analysis software adds many useful functions to the testo 312-4, testo 314 and testo 330 measuring instruments:

- Instrument configuration via software.
- Manages customer, system and measurement data.
- Data import from and data export to the measuring instrument.
- Sets up, saves and prints measurement protocols from imported data.

# B. Using software

## B.1 System requirements

### Operating system

Windows® XP (32 Bit) from Service Pack 3, Windows® Vista (32 and 64 bit) from Service Pack 1, Windows® 7 (32 and 64 bit)

### Processor (min.)

Intel® Pentium® III, min. 1.4 GHz

### RAM (mind.)

128 MB with Windows® 2000 and Windows® XP

1 GB with Windows® Vista

### Other hardware (min.)

CD-ROM drive for installation, mouse, USB 1.1 interface

### Monitor resolution (min.):

1024 x 768 pixels

### Hard drive (min.)

150 MB free memory

## B.2 Installing software

! To install the USB driver, please read the separate documentation included with the USB driver CD.

Administrator rights are required in Windows® 2000, Windows® XP, Windows® Vista and Windows® 7 to install the program.

Once installed, input of a licence key is required. Without this input, the software will only run as a demo version with a limited range of functions (time limit of 30 days). When the software is first started, a window automatically appears for you to enter the licence key.

### 1 Insert CD.

If the installation program does not start automatically:

- ▶ Open Windows Explorer and start the **Setup.exe** file (🖱️ click twice).

### 2 Follow the instructions in the installation program.



## 8 B. Using software

### B.3 Starting the software

▶ **Start** (🖱️) → **Programs** → **Testo** → **testo easyheat configuration and analysis software** (🖱️).

- The program is opened. The program language corresponds to the operating system language.

- When the software is first started, a window appears for you to enter the licence key.

▶ Enter licence key (found on the CD packaging) → **OK** (🖱️).

! The range of functions of the software depends on the country version of the analyser connected. and on the number and kind of instrument types for which the software has been enabled via licence key.

To enter additional licence keys, refer to *Enhance licence*, p. 13.

### B.4 Setting up the connection

#### testo 314

Connection via RS232 interface

To connect testo 314 to a PC the “connection cable PC/instrument 0409 0178” is required.

- 1 Connect cable to a serial connection socket in the PC.
- 2 Connect cable to RS232 socket in measuring instrument.
- 3 Switch on instrument (🔘).

Connection via USB serial adapter

The "PC/instrument connecting cable 0409 0178" and a standard USB serial adapter are required for the USB serial connection of the testo 314 to a PC.


- 1 Connect the USB serial adapter to the USB socket of the PC.
- 2 Connect the connecting cable to the RS232 socket of the instrument.
- 3 Connect the USB serial adapter to the connecting cable.
- 4 Switch on measuring instrument (🔘).

#### testo 330

To connect testo 330 to a PC the “connection cable PC/instrument 0449 0047” is required.

- 1 Install the USB driver. To do this, select **Install Testo USB Driver** in the directory **USB Driver** on the CD.
- 2 Connect connection cable to a USB socket in the PC.



- 3 Connect connection cable to a USB socket in the analyser.
- 4 Switch on analyser ()

 
Alternatively, the testo 330 can also be configured via an IrDA interface or Bluetooth, see *Settings - Configuration, Instruments*, p.46 .

**!** testo 330 only

The analyser switches to the **Slave Mode** during data transfer; the analyser operating buttons are disabled in this mode. Once data is no longer being transferred the **Slave Mode** is stopped and the analyser can be controlled via the control buttons, as normal.


#### testo 312-4

The "Connection cable 0409 0178 PC/instrument is required for the connection of the testo 312-4 to a PC.


- 1 Connect connection cable to a serial connection socket of a PC.
- 2 Connect connection cable to the RS 232 socket of the instrument.
- 3 Switch instrument on ()

Connection via USB serial adapter

 The "PC/instrument connecting cable 0409 0178" and a standard USB serial adapter are required for the USB serial connection of the testo 312-4 to a PC.

- 1 Connect the USB serial adapter to the USB socket of the PC.
- 2 Connect the connecting cable to the RS232 socket of the instrument.
- 3 Connect the USB serial adapter to the connecting cable.
- 4 Switch on measuring instrument ()

# C. Operation

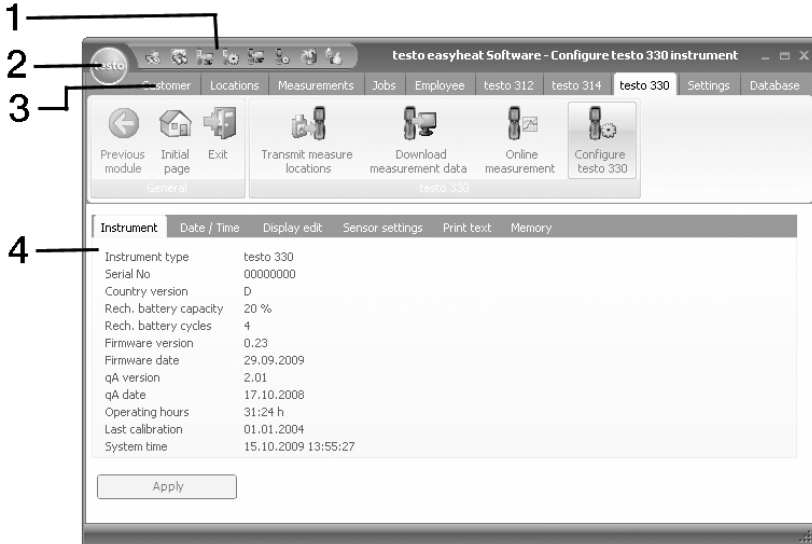 

- ① **Quick access toolbar:** Fast access to established modules
- ② **Testo-Logo:** Possibility of a licence extension
- ③ **Ribbon bar:** Displays existing modules, sorted by module groups.

- ▶ Open module: Select desired module, e. g.. **Configuration** (🔗).

The modules can also be opened via the Quick Access Toolbar. The menus have the same name as the corresponding module groups.

! Some of the modules can only be opened if data was stored or specific data was selected in advance in another module.

! If a module is not activated, the homepage containing the modules required most frequently (favourites) appear enabling direct access.

Some modules consist of several folders (e.g. **Configure testo 330** module):

- ▶ To open the folder: Select required folder in the module window, e.g. **Instrument** (🔗).

- ④ **Work area:**

The work area ia the area in which all inputs are carried out.








! With [F11] you can switch between the standard display and the full screen display of the working area.

# D. Application example








The most important steps required for a typical application of the software is explained in this Chapter using an example.

A detailed description of all software functions can be found at *Functions*, p. 13.

## Configuring software

- 1 **Settings**  →  **Configuration** .
- 2 **Own data**  → Enter/change address data.
- 3 **Customer data**  → Activate functions required.
- 4 **Backup**  → Undertake settings.
- 5 Taking on changes: **Apply** .





## Configuring the analyser (testo 314, testo 330)

- 1 **testo 314**  → **Configure testo 314**  and **testo 330**  → **Configure testo 330** .
- 2 **Print text**  → **Own address data**  → **Apply** .


## Configuring the analyser (testo 312-4)

- 1 **testo 312-4**  → **Configure testo 312-4** .
- 2 **Print text**  → **Print line**  → **Save** .









## Setting up new customers

- 1 **Customer**  →  **Insert new customer** .
- 2 Enter new customers in the corresponding boxes → **Save** .

## Setting up a new location

- 1 **Locations**  →  **Insert new location** .
- 2 Enter new location in the corresponding boxes in the folders **Location, Installation, Boiler, Furnace** → **Save** .

## Transmitting location(s) to the instrument

- 1 **testo 314**  →  **Transmit measure locations**  and **testo 330**  →  **Transmit measure locations** .
- 2 Select location(s) in the **Measure locations on PC** folder   → **Transmit** .



## 12 D. Application example

### Carrying out measurements

- ▶ To activate location, carry out measurement and save reading: see Instruction manual on testo 314, testo 312-4 or testo 330.

### Reading in measurement data protocol(s) from the instrument


- 1 **testo 314** → **Read measurement data** and **testo 330** → **Read measurement data** and **testo 312-4** → **Read measurement data** .
- 2 Select measurement protocol(s) in folder **Measurements in instrument** → **Read** .

### Displaying and printing a measurement protocol

- 1 **Measurements** → **Search measurement** .
- 2 Select measurement protocol → **View** .
- 3 Print measurement protocol: **Print** .

# E. Functions

## E.1 Testo Logo

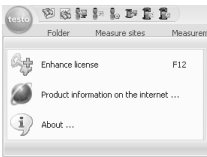


### E.1.1 Enhance licence

Input of a separate licence key is required for every instrument type / every software component in order to enable corresponding software functions.

- 1 **testo-Logo** (⌨) → **Enhance licence** (⌨).
- 2 Enter licence key (located on CD packaging) → **OK** (⌨).

! To activate the software component *easyheat.mobile*, a synchronisation with the Pocket PC must be started, see *Synchronise Pocket PC*, p. 42.

## E.2 General

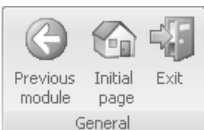

### E.2.1 Previous module

- ▶ Scroll back to previous module: **General** (⌨) → **Previous module** (⌨).

### E.2.2 Initial page

- ▶ Open initial page: **General** (⌨) → **Initial page** (⌨).

The initial page includes the modules used most frequently for direct access (favourites).



### E.2.3 Exit

- ▶ End program: **General** (☞) → **Exit** (☞).
- If you have not carried out data backup on the day, the **Database backup** window will open offering you the following options:
  - **Complete backup:** A complete backup is made of the database.
  - **Save changes:** Any changes made since the last backup will be saved.
  - **Currently no backup:** Program is ended without data backup being carried out.
- ▶ Carrying out data backup: Select required option (☞) → **OK** (☞)  
→ **OK** (☞).

## E.3 Customer



The **Search customer**, **Show customer details**, **Change customer data**, **Insert new customer** and **Import customer data** modules can be opened with function **Customers**. The function **Customer** menu can be de-/ activated (**Settings - Configuration - Programme**).

### E.3.1 Search customer


Using the **Search customer** module, you can search for customers using search criteria or an alphabetic index.

#### Opening the module

- ▶ **Customer** (☞) → **Search customer** (☞).


### E.3.1.1 List of customers

- ▶  
- ▶  Select desired search criterion (condition) for a field .

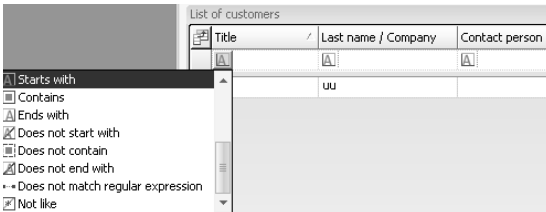




- All customers whose entry in e.g. the field **Name/Company** begin with the corresponding condition, are displayed.
- If you enter several search criteria (conditions) for a search, only those customers who match these criteria will be found



#### Activating customers

- ! If a customer is not activated, the **Show customer data** and **Change customer data** modules cannot be opened.
- ▶ Activating customers .
- The selected customer is highlighted in color.

#### Displaying customer data

- ▶ Activating customers  →  **Show customer data** .
- The **Show customer data** module is opened, see *Show customer data*, p. 16.

#### Changing customer data

- ▶ Activating customers  →  **Change customer data** .
- The **Change customer data** module is opened, see *Change customer data*, p. 17.

#### Deleting customers


- ▶ Search customers  → **Delete**  → **Yes** .
- The customer is deleted.

- ! If a customer is deleted, all measurement sites and measurements of this customer are removed from the memory.



### Setting up new customers

▶ **New** (🔍).

- The  **Insert new customer** module is opened, see *Insert new customer*, p. 17.

## E.3.2 Show customer data

The address data and the customer's saved systems can be shown with the **Show customer data** module.

### Opening a module

! The **Show customer data** module can only be opened if a customer has been activated in the **Search customer** module, see *Search customer*, p. 14.

▶ **Customer** (🔍) →  **Search customer** (🔍).

The **Show customer data** module is divided into two areas. The **Address** folder is located in the upper area while the **List of locations** folder is located in the lower area.

### E.3.2.1 Address

#### Changing address

▶ **Change** (🔍).

- The **Change customer data** module is opened, see *Change customer data*, p. 17.

#### Deleting customers

▶ **Delete** (🔍) → **Yes** (🔍).

- The customer is deleted.

#### Searching for customers

▶ **Search** (🔍).

- The **Search customer** module is opened, see *Search customer*, p. 14.

### E.3.2.2 List of locations

#### Activating location

! If a location is not activated the **Show measure location data** and **Change measure location data** modules cannot be opened.

▶ Activating a location (🔍).

- The selected location is highlighted in color.




#### Displaying measurement location data

▶ Select location (🔍) →  **Show measure location data** (🔍).



- The **Show measure location data** module is opened, see *Show measure location data*, p. 19.

### Changing measurement location data


- ▶ Activating location  →  **Change measure location data** .
- The **Change measure location data** module is opened, see *Change measure location data*, p. 20.

### Deleting a location

- ▶ Activating location  → **Delete**  → **Yes** .
- The location is deleted.

! If a measurement site is deleted, all measurements are deleted which were allocated to this measurement site.

### Setting up a new location

- ▶ **New** .
- The **Insert new location** module is opened, see *Insert new location*, p. 21.

## E.3.3 Change customer data


Existing customer data can be changed with the **Change customer data** module.

### Opening a module

! The **Change customer data** module can only be opened if a customer was activated in the **Search customer** module, see *Search customer*, p. 14.

- ▶ **Customer**  →  **Change customer data** .





### Changing data

- ▶ Enter changes to the customer data in the corresponding boxes → **Save** .
- The **Show customer data** module is open, see *Show customer data*, on this page.

## E.3.4 Insert new customer

A new customer can be set up with the **Insert new customer** module.

### Opening the module

- ▶ **Customer**  →  **Insert new customer** .
- ▶ Enter new customer data in the corresponding boxes → **Save** .
- The **Show customer data** module is opened, see *Show customer data*, on this page.



### E.3.5 Import customer data

Using the **Import customer data** module, existing customer data can be imported from other applications.

#### Opening the module

▶ **Customer** (🗂️) → 🧑 **Import customer data** (🗂️).

#### Importing data

Before importing customer data, it has to be changed to a supported import format:

- Text file with separating character (comma, semicolon, Tabulator)
- Microsoft® Access® database
- Microsoft® Excel® worksheet

Standard programs (such as Microsoft® Outlook®) usually support one of the named formats.

- 1 Select import format (🗂️) - **Locate** (🗂️).
- 2 Select file to be imported.

**When importing an Access database you may be required:**

- ▶ To enter **User ID** and **Password**.

- 3 **Next >** (🗂️).

**When importing an Excel worksheet you may be required:**

- ▶ To select a worksheet (🗂️) → **Next >**.

**When importing an Access database you may be required:**

- ▶ To select a table (🗂️) → **Next >**.

#### Allocating import data

Once the data is read in, the data boxes have to be allocated. Only allocated data boxes will take effect.

**When importing from a text file, it is possible that the first line does not include any address data. If required:**

- ▶ **First line contains column name** (☑️🗂️).

- 1 Open list box (▼🗂️) - Select target data box (🗂️).  
- The import data box is allocated to the target data box.
- 2 Repeat step 1 for all required data boxes.

❗ If the **Customer ID** data box is empty for one customer, a customer number is assigned automatically.

If the **Customer ID** data box is available for a customer but the customer number is already assigned in the configuration and analysis software the available data is


replaced by import data.

If the **Name/Company** data box for a customer is empty, the customer data is not imported.

3 Apply (👁️) → OK (👁️).

- The **Search customer** module is opened, see *Search customer*, p. 14.

## E.4 Locations

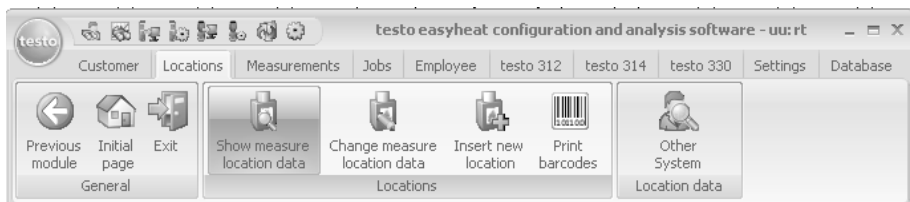

The **Show measure location data**, **Change measure location data**, **Insert new location** and **Print barcodes** modules can be opened via the **Locations** function.

### E.4.1 Show measure location data

System data and the measurement data saved in a system can be displayed with the **Show measure location data** module.

#### Opening a module

! With activated module group/menu **Customer (Settings - Configuration - Programme)**: The **Show measure location data** module can only be opened if a location was activated in the, **Show customer data** module, see *Show customer data*, p. 16.

► **Locations** (👁️) → 📍 **Show measure location data** (👁️).

The **Show measure location data** module is divided into two areas. The **Location**, **Owner**, **Installation**, **Boiler** and **Furnace** folders are located in the upper area, in the lower area, the **Measurement values** and **Tasks** folders. The **Tasks** folder is only available if the **Job management** module group/menu is activated (**Settings - Configuration - Programme**).

#### E.4.1.1 Location, Owner, Installation, Boiler, Furnace

Information on the measurement location is displayed.

## E.4.1.2 Measurements

### Activate measurement protocol

! If a measurement protocol is not activated, the **Display measurement data** module cannot be opened.

- ▶ Activate the measurement protocol (👁️).
- The selected measurement protocol is highlighted with color.

### Displaying a measurement protocol

- ▶ Activating the measurement protocol (👁️) → **Display** (👁️).
- The **Display measurement data** module is opened, see *Display measurement data*, p. 23.

### Deleting a measurement protocol

- ▶ Activate the measurement protocol (👁️) → **Delete** (👁️) → **Yes** (👁️).
- The measurement protocol is deleted.

## E.4.1.3 Task

### New Job

- ▶ **New** (👁️).
- The **New Job** module is opened, see *New Job*, p. 27.

### Delete job

- ▶ Activate job (👁️) → **Delete** (👁️) → **Yes** (👁️).
- The job is deleted.

## E.4.2 Change measure location data

Existing location data can be changed using the **Change measure location data** module.

### Opening the module

! With activated **Customer** module group/menu (**Settings - Configuration - Programme**): The **Change measure location data** module can only be opened if a location was selected in the **Show customer data** module, see *Show customer data*, p. 16.

- ▶ **Locations** (👁️) → **Change measure location data** (👁️).





### Changing data

- ▶ Enter changes to the location in the appropriate boxes → **Save** (👁️).
- The **Show measure location data** module is opened, see *Show measure location data*, p. 19.

## E.4.3 Insert new location

A new location can be set up with the **Insert new location** module.

### Opening the module

- ▶ **Locations**  →  **Insert new location** .
- ▶ Enter the data from the new location in the corresponding boxes in the **Location**, **Installation**, **Boiler** and **Furnace** folders → **Save** .
- The **Show measure location data** module is opened, see *Show measure location data*, p. 19.

## E.4.4 Print barcodes

Barcode labels can be printed via the **Print barcodes** module. The system numbers stored in the barcode can be read in to the analyser using a barcode reader. In this way, the corresponding location in the instrument is activated.



### Opening a module

- ▶ **Locations**  →  **Print barcodes** .

### Printing barcode labels

- 1 Select locations for which a barcode label is to be printed  .

#### Options:

- ▶ Select all locations: **Select all** .
- ▶ No location selected: **Select none** .

- 2 Enter **Company**.

The company name is printed above the barcode.

- 3 Define **Paper size** and number of **Columns** and **Lines**   or .


For Testo labels (0554 0411): paper size DIN A4, 2 columns, 6 lines.

- 4 Set **Copies per label** .

- 5 Select label at which printout is to begin  on the label).

- 6 Start printout: **Print** .

## E.5 Measurements

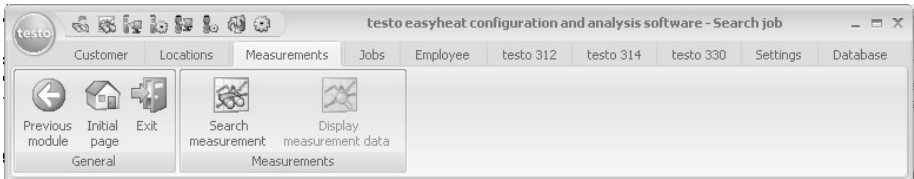

The **Search measurement** and **Display measurement data** modules can be opened via the **Measurements** function.

### E.5.1 Search measurement

You can search for measurement protocols stored in your PC using the **Search measurement** module.

#### Opening the module

▶ **Measurements** (🔍) → **Search measurement** (🔍).

- All of the measurement protocols stored in the PC are displayed. To display the measurement protocols from only one location, see Show measure location data, p. 19.

#### Activate a measurement protocol

! If a measurement protocol is not activated, the **Display measurement data** module is not opened.

▶ Activate measurement protocol (🔍).

- The measurement protocol is highlighted by a color.

#### Display a measurement protocol

▶ Activate measurement protocol (🔍) → **Display** (🔍).

- The **Display measurement data** module is opened, see *display measurement data*, p. 23.

#### Delete a measurement protocol

▶ Activate a measurement protocol (🔍) → **Delete** (🗑️) → **Yes** (🗑️).

- The measurement protocol is deleted.

#### Changing measurement site

Measurement protocols can be allocated to other measurement sites.

1 Activate measurement protocol (🔍) → **Change location** (📍).

2 Activate the measurement site to which the measurement protocol is to be allocated (👁) → **OK** (👁).

- The measurement protocol is allocated to the selected measurement site.

Multiple measurement protocols can be merged into one measurement protocol.

1 Activate measurement protocols (👁); for multiple selections, hold down the [Ctrl] key.

2  **Connect** (👁).

3 Select location where the measurement protocol is to be saved → **OK** (👁).

- The measurement protocols are merged into one protocol.

### Exporting/importing measurement protocols

▶ **Export** (👁) or **Import** (👁) → **Enter file name** (▼/👁) → **Save** (👁).

- The measurement protocol is **exported/imported**.

! The following registers are available in the Excel file as a source of information:

testo register: Measurement results

Information register: Start and end time for a measurement, among other things

Folder register: Name and customer number

Location register: Address, location designation, among other things

## E.5.2 Display measurement data

Measurement protocols can be displayed and processed via the **Display measurement data** module.

! The **Display measurement data** module can only be opened if a measurement protocol was selected in the **Search measurement** or **Show measure location data** modules, see *Search measurement*, p. 22 or *Show measure location data*, p. 19.

### Open a module

▶ **Measurements** (👁) → **Display measurement data** (👁).

### E.5.2.1 Information

Information on the measurement protocol is shown in the **Information** folder.

▶ Enter text in the **Remark** box.

### Print measurement protocol

▶ Print measurement protocol with information data and readings: **Print report** (👁).

▶ Selection of form template → **OK** (👁)

▶ Set printer → **OK** (👁)

- Print report



### Display print preview

- ▶ Display measurement protocol as a print preview: **Preview report** (☞).

## E.5.2.2 Graphics

The readings are shown in graphics form in the **Graphics** folder (maximum 16 channels).

! The **Graphics** folder can only be opened for measurement protocols in testo 330 if an online measurement is involved.

### Print measurement protocol

- ▶ Print out the measurement protocol with information data and readings: **Print report** (☞).
  - ▶ Selection of form template → **OK** (☞)
  - ▶ Set printer → **OK** (☞)
  - Print report

### Display print preview

- ▶ Display measurement protocol as a print preview: **Preview report** (☞).
  - ▶ Selection of form template → **OK** (☞)
  - A report is created.

### Save measurement protocol in PDF format

- 1 **Save as PDF** (☞).
- 2 **Enter file name** (▼/☞) → **Enter file type** (▼/☞) → **Save**

### Print measurement protocol

- 1 **Print bitmap** (☞).
- 2 Set printer → **OK** (☞)

### Save graphics as a file

- 1 **Save bitmap** (☞).
- 2 **Enter file name** (▼/☞) → **Enter file type** (▼/☞) → **Save** (☞).

### Changing features in graphics

- 1 **Settings** (☞).
- 2 **Channel**: Select measurement channels (▼/☞), **Legend**: Enter channel name.
- 3 Save settings: **OK** (☞).



### E.5.2.3 Measure values

The readings in a table or list are shown in the **Measure values** folder.

#### Print measurement protocol

- ▶ Print measurement protocol with information data and readings: **Print report** (🖨️).
  - ▶ Selection of form template → **OK** (🖨️)
  - ▶ Set printer → **OK** (🖨️)
  - Print report

#### Display print preview

- 1 Display measurement protocol as a print preview: **Preview report** (🖨️).
  - 2 Selection of form template → **OK** (🖨️)
- A report is created.

#### Save measurement protocol in PDF format

- ▶ **Save as PDF** (🖨️).

#### Exporting readings as an Excel file

- ▶ **Enter file name** (▼/🖨️) → **Enter file type** (▼/🖨️) → **Save**

- - The measurement protocol is **exported**

- ! The following registers are available in the Excel file as a source of information:
  - **testo register:** Measurement results
  - Information register: Start and end time for a measurement, among other things
  - Folder register: Name and customer number
  - Location register: Address, location designation, among other things

- ▶ **Clipboard** (🖨️).

- The readings are exported to the PC clipboard as a tab stop-separated text file.

#### Evaluation of the measurement results

The mean, maximum and minimum readings can be displayed.

- ▶ **Min/Max/Mean** (🖨️) → Activate the desired functions (☑️🖨️) → **OK** (🖨️).

## E.6 Jobs



Via the menu **Jobs**, you can open **Search job**, **Show job details** and **New job**. The **Jobs** module group/menu can be activated/deactivated (**Settings - Configuration - Programme**).

### E.6.1 Search job

With the module **Search job**, jobs stored in the PC can be search .

#### Open module

▶ **Jobs** (🔍) → **Search job** (🔍) → **Search** (🔍).

- All jobs stored in the PC are displayed.

! In the menu **Search mask** the job search can be limited by entering a search criterion.

#### Activate jobs

▶ Actvate jobs (🔍).

- The selected job is highlighted in color.

#### Display jobs

▶ Activate job (🔍) → **Show job details** (🔍).

- The module **Show job details** is opened, see *Show job details*, on this page

#### Delete job

▶ Activate jobs (🔍) → **Delete** (🔍) → **Yes** (🔍).

- The job is deleted.

### E.6.2 Show job details

With the module **Show job details**, jobs can be displayed and processed further.

! The module **Show job details** can only be opened if a job has been marked in the module **Search job** see *Search job*, on this side.

#### Open module

▶ **Jobs** (🔍) → **Show job details** (🔍).

## E.6.3 New job

With the **New job** module, a new employee job can be entered that is automatically assigned to the respective employee and appears in his or her job list.

### Open the module


! The **New job** module can only be opened if an employee was activated in the **All employees** module, see *All employees*, p. 27.

▶ **Jobs** (🖱️) → **New job** (🖱️).

### Enter data

- 1 Select the date which should apply to the job (📅 🖱️).
- 2 Enter job data in the corresponding fields → **Ready** (🖱️).

## E.7 Employee

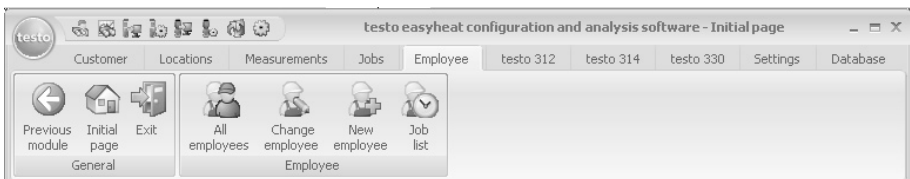

Using the **Employee** menu, the **All employees**, **Change employee**, **New employee**, and **Job list** modules can be opened.

### E.7.1 All employees

All entered employee data is displayed in the **All Employees** module and the employee whose job list should be created/displayed can be activated.

#### Open the module

▶ **Employee** (🖱️) → **All Employees** (🖱️).

#### Activate employee

! If no employee is activated, the **Change employee** and **Job list** modules cannot be opened.

▶ Activate employee (🖱️).

- The selected employee is highlighted.

### Display job list

- ▶ Activate employee (👁️) →  **Job list** (👁️).
- The **Job list** module is opened, see *Job list*, p. 29.

### Change employee data

- ▶ Activate employee (👁️) →  **Change** (👁️).
- The **Change customer data** module is opened, see *Change customer data*, p. 17.

### Delete employee

- ▶ Activate employee (👁️) → **Delete** (👁️) → **Yes** (👁️).
- The employee is deleted.


### Create new employee

- ▶ **New** (👁️).
- The **New employee** module is opened, see *New employee*, on this page

## E.7.2 Change employee

The **Change employee** module enables existing employee data to be edited.

### Open the module

- ! The **Change employee** module can only be opened if an employee was activated in the **All employees** module, see *All employees*, p. 27.
- ▶ **Employee** (👁️) →  **Change employee** (👁️).

### Edit data

- ! The employee number is assigned when the employee is first created. It cannot be changed afterwards..
- ▶ Enter changes to the employee data in the corresponding fields → **Ready** (👁️).
- The **All employees** module is opened, see *All employees*, p. 27.

## E.7.3 New employee

With the **New employee** module, a new employee can be created.

### Open the module

- ▶ **Employee** (👁️) →  **New employee** (👁️).

### Enter data

- ! Make sure that the employee number is correctly assigned as it cannot be changed later.

- ▶ Enter the data of the new employee in the corresponding fields → **Ready** (🔍).
- The **All employees** module is opened, see *All employees*, p. 27.

## E.7.4 Job list

In the **Job list** module, all entered jobs of the activated employee are displayed.

### Open the module


! The **Job list** module can only be opened if an employee was activated in the **All employees** module, see *All employees*, p. 27.

- ▶ **Employee** (🔍) → 🏠 **Job list** (🔍).

### Filter jobs

- ▶ Enter date range or select predefined time period (🔍).
- The applicable jobs are displayed.

## E.8 testo 312-4

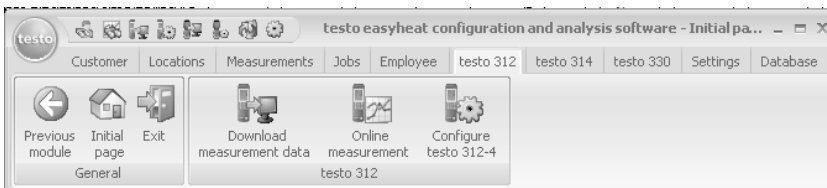

### E.8.1 Download measurement data

With the module **Download measurement data**, measurement reports can be saved from the measuring instrument testo 312-4 to a PC.

#### Open module

- ▶ **testo 312-4** (🔍) → 📄 **Download measurement data** (🔍).

#### Save measurement report(s)

##### Options:

- ▶ Select all measurement reports: **Select all** (🔍).
- ▶ Deactivate selection of measurement reports: **Select none** (🔍).
- ▶ Select measurement report(s) (☑️🔍) → **Read** (🔍).



- The measurement report is saved in the PC under the same measurement site as in the instrument. If the measurement site of the selected report does not yet exist in the PC, you will be asked whether this should be created.

-or-

- ▶ Select measurement report(s) → **Download as ...** → Select destination measurement site → **OK**.

### Delete measurement report

- ▶ Measurement report → **Delete** → **Yes** .
- The measurement is deleted

### Display measurement report

! If the measurement site selected has not yet been saved in the PC, this function is not available.

- ▶ Measurement reports → **View** .
- The module **Display measurement data** is opened, see *Display measurement data*, p. 23

## E.8.2 Online measurement

With the module **Online measurement**, a pressure measurement can be carried out, in which the measuring instrument is controlled via a PC. The measurement values are transferred directly to the PC and stored there.

### Open module

- ▶ **testo 312-4** → **Online measurement** .

### E.8.2.1 Measure values, Display, Chart

#### Carry out online measurement

! Only those measurement parameters and units are displayed, which are activated in the file **Display order** (in the same module).

1 Set measurement cycle: .

2 Set measurement sequence: .

3 Start measurement: **Start** .

- The online measurement starts
- The measurement values are displayed:
  - File **Measure values**: Table with all measurement channels and date/time of the individual measurements.
  - File **Display**: Display fields with all measurement channels.

- ▶ Manually save readings (only available if the measuring cycle is set to 0 s): **Save** (🖨️).
- ▶ During measurement, mean value, maximum and minimum can be displayed instead of the current values: **Actual values** (▾ 🖨️).
- ▶ Change the size of the display fields: Move controller (⇩ 🖨️).
- ▶ Show readings in a separate window which is always in the foreground: **show min window** (☑️ 🖨️).

File **Chart**: Measurement diagram with 16 selectable measurement channels and automatic scaling of the time axis.

- ▶ Set diagram properties (displayed channels, line colour, scaling): **Settings** (🖨️).
- ▶ Save diagram as a bitmap: **Save bitmap** (🖨️).

#### 4 End measurement **Stop** (🖨️).

- The online measurement is ended.

#### Options (Only in the file):

- ▶ Save measurement values online under the measurement site: **Save as...** (🖨️).
- ▶ Export measurement values to Microsoft Excel (Microsoft Excel 2000 or higher required!): **Export Excel** (🖨️).
- ▶ Export measurement data to the clipboard (tabstop tabstop separated text file): **Clipboard** (🖨️).

## E.8.2.2 Display order

The available measurement channels are displayed in the area **All channels**. Only those measurement parameters and units are available, which are present in the current display order of the measuring instrument.

The measurement channels presented on the PC in the online measurement are displayed in the area **Shown channels**.

### Set display order

- ▶ Add/delete measurement channel: **Add ->**, **Add all ->**, **<-Delete** or **<- Delete All** (🖨️).
- ▶ Set order of measurement channels: Select measurement channel (🖨️) → **Up** or **Down** (🖨️).



## E.8.3 Configure testo 312-4

The measuring instrument testo 312-4 can be configured with the module **Configure testo 312-4**.

Open modul

- ▶ **testo 312-4** (🗑️) → **Configure testo 312-4** (🗑️).

### E.8.3.1 Serial connection to testo 312-4

! This menu appears when no connection to the instrument can be set up.

The interface for the connection set-up with the measuring instrument testo 312-4 can be selected.

- ▶ Select interface used (🔍 🗑️).

Option:

- ▶ Test connection to the instrument: **Test connection** (🗑️).

### E.8.3.2 Instrument

The file **Instrument** displays important information on the instrument connected

### E.8.3.3 Date / Time

In the file **Date / Time**, the date and time of the instrument can be synchronised with the PC.

Synchronise date/time manually

- ▶ **Synchronise now** (🗑️).

### E.8.3.4 Print text

In the file **Print text**, the print line for the report printouts of the measuring instrument testo 312-4 can be set..

Set print line

- ▶ Enter print text in the text input space.

### E.8.3.5 Logger programme

In the file **Logger programme**, the measurement cycle and the number of measurement values for the measuring instrument testo 312-4 can be set.

- 1 Activate file **Logger programme**-(🗑️).
- 2 Enter measure cycle (🔍 🗑️) and Number of measure values (🔍 🗑️) → **Save** (🗑️).




### E.8.3.6 Memory

In the file **Memory**, the memory or the measuring instrument testo 312-4 can be cleared.

#### Clear memory

- ▶ **Clear memory** (🔍).

## E.9 testo 314

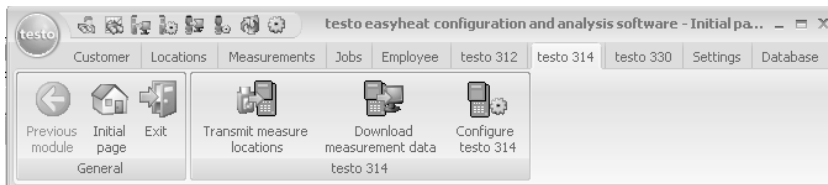

! The **testo 314** menu/module group is only available if instrument support is activated for the testo 314 measuring instrument, see *Configuration*, p. 46.

### E.9.1 Transmit measure locations

Locations can be transmitted to the testo 314 measuring instrument via the **Transmit measure locations** module.

#### Opening the module

- ▶ **testo 314** (🔍) → **Transmit measure locations** (🔍).

The **Transmit measure locations** module is divided into two areas. The **Measure locations on PC** folder is located in the upper area while the **Measure locations on instrument** folder is located in the lower area.

#### E.9.1.1 Measure locations on PC

The **Measure locations on PC** folder shows the locations saved on the PC.

#### Search for a specific location

- ▶ Enter search criterion in a search box → Start search: **Search** (🔍).



### Transmit location(s) to measuring instrument

#### Options:

- ▶ Select all locations: **Select all** (🗒️).
- ▶ Cancel location selection: **Select none** (🗒️).
- ▶ Select location(s) (☑️🗒️) → **Transmit** (🗒️).

### Display location

- ▶ Activate location (🗒️) → **Display** (🗒️).
- The **Show measure location data** module is opened, see *Show measure location data*, p. 19.

### Change location

- ▶ Activate location (🗒️) → **Changes** (🗒️).
- The **Change measure location data** module is opened, see *Change measure location data*, p. 20.

## E.9.1.2 Measure locations on instrument

The **Measure locations on instrument** folder shows the locations which are saved in the instrument.

### Select location(s)

#### Options:

- ▶ Select all location(s): **Select all** (🗒️).
- ▶ Cancel location selection: **Select none** (🗒️).
- ▶ Select location(s) (☑️🗒️) → **Delete** (🗒️).

## E.9.2 Download measurement data

Measurement protocols from the testo 314 measuring instrument are saved on your PC using the **Download measurement data** module.

### Open module

- ▶ **testo 314** (🗒️) → 📄 **Download measurement data** (🗒️).

## Save measurement protocol(s)

### Options:

- ▶ Select all measurement protocols: **Select all** (☑️).
- ▶ Cancel selection of measurement protocols: **Select none** (🗑️).
- ▶ Select measurement protocol(s) (☑️🗑️) → **Read** (🗑️).
- The measurement protocol is saved on your PC at the same location as in the instrument. If the location of the selected measurement protocol is not available on your PC, you will be asked if it should be set up.

-or-

- ▶ Select measurement protocol(s) (☑️🗑️) → **Download as ...** (🗑️) → Select target location → **OK**.

## Delete measurement protocol

- ▶ Activate measurement protocol (🗑️) → **Delete** (🗑️) → **Yes** (🗑️).
- The measurement is deleted.

## Display measurement protocol

- ! If the selected location was not saved on the PC, this function is not available.
- ▶ Select measurement protocol (☑️🗑️) → **View** (🗑️).
- The **Display measurement data** module is opened, see *Display measurement data*, p. 23.

## E.9.3 Configure testo 314

The testo 314 measuring instrument can be configured with the **Configure testo 314** module.

### Open module

- ▶ **testo 314** (🗑️) →  **Configure testo 314** (🗑️).

### E.9.3.1 Serial communication

! This menu appears when no connection to the instrument can be set up.

The interface for setting up the connection with the testo 314 measuring instrument can be selected.

- ▶ Select interface used (🔍🗑️).

### Option:

- ▶ Test connection to measuring instrument: **Test connection** (🗑️).



### E.9.3.2 Clock

The date and clock in the instrument can be synchronised with the PC.

#### Synchronise date/time manually

- ▶ **Synchronise now** (📄).

#### Synchronise date/time automatically

- ▶ **Synchronise time of instrument while connecting** (☑️📄).

### E.9.3.3 Print text

The headers and footnote for protocol printouts in the testo 314 measuring instrument can be set up in the **Print text** folder.


#### Set up Print texts

- ▶ Enter print texts in the text input boxes.

#### Option:

- ▶ Overwrite data with your own address data: **Own address data** (📄).

## E.10 testo 330

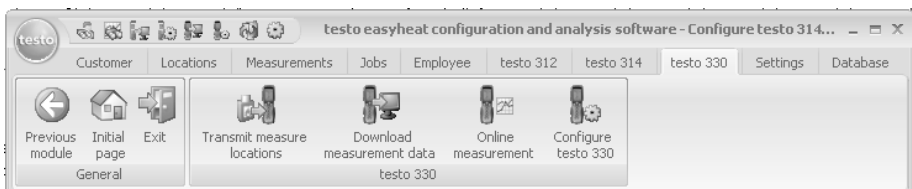

! The **testo 330** menu/module group is only available if instrument support for the testo 330 measuring instrument is activated, see *Configuration*, p. 46.

### E.10.1 Transmit measure locations

Locations can be transmitted to the testo 330 measuring instrument using the **Transmit measure locations** module.

#### Open module

- ▶ **testo 330** (📄) → 📄 **Transmit measure locations** (📄).

The **Transmit measure locations** module is separated into two areas. The **Measure locations on PC** folder is located in the upper area while the **Measure locations on instrument** folder is located in the lower area.

### E.10.1.1 Measure locations on PC





The **Measure locations on PC** folder shows the locations which are saved on the PC.

#### Search for a specific location



- ▶ Enter search criterion in a search box → Start search: **Search** .

#### Transmit location(s) to measuring instrument



##### Options:

- ▶ Select all locations: **Select all** .
- ▶ Cancel selection of locations: **Select none** .
- ▶ Select location(s)   → **Transmit** .

#### Display location

- ▶ Activate location  → **Display** .
- The **Show measure location data** module is opened, see *Show measure location data*, p. 19.

#### Change location





- ▶ Activate location  → **Change** .
- The **Change measure location data** module is opened, see *Change measure location data*, p. 20.

### E.10.1.2 Measure locations on instrument

The **Measure locations on instrument** folder shows the locations which are saved in the instrument.

#### Delete location(s):

##### Options:

- ▶ Select all locations: **Select all** .
- ▶ Cancel location selection: **Select none** .
- ▶ Select location(s)   → **Delete** .



## E.10.2 Download measurement data

Measurement protocols in the testo 330 measuring instrument can be saved on your PC via the **Download measurement data** module.

### Open module

- ▶ **testo 330** (🔍) → **Download measurement data** (🔍).

### Save measurement protocol(s)

#### Options:

- ▶ Select all measurement protocols: **Select all** (🔍).
- ▶ Cancel all measurement protocols: **Select none** (🔍).
- ▶ Select measurement protocol(s) (☑️🔍) → **Read** (🔍).
- The measurement protocol is saved on your PC in the same location as on the instrument. If the location of the selected measurement protocol is not yet available on your PC, it is set up automatically.

-or-

- ▶ Select measurement protocol(s) (☑️🔍) → **Download as ...** (🔍) → Select target location → **OK**.
- The measurement protocol is saved on your PC in the location selected.

### Delete measurement protocol

- ▶ Select measurement protocol (🔍) → **Delete** (🔍) → **Yes** (🔍).
- The measurement is deleted.

### Display measurement protocol

! If the selected location is not yet saved on your PC, this function is not available.

- ▶ Select measurement protocol (☑️🔍) → **View** (🔍).
- The **Display measurement data** module is opened, see *Display measurement data*, p. 23.

## E.10.3 Online measurement

A flue gas measurement, during which the instrument is controlled by the PC, is carried out via the **Online measurement** module. The readings are transmitted directly to your PC and displayed.

### Open a module

- ▶ **testo 330** (🔍) →  **Online measurement** (🔍).

### E.10.3.1 Measure values, Display, Chart, Flue gas matrix


#### Carry out online measurement

! The folder **Flue gas matrix** is only available in combination with testo 330 Order no. 0632 3306 and 0632 3307 (see instrument specification plate).

! **Measure values, Display, Chart, Fluegas matrix:** Only parameters and measurement units are shown which are activated in the **Display order** folder (in the same module).

**Fluegas matrix:** The measurement parameters relevant for the flue gas matrix are displayed.

1 Set measurement cycle: (  ).

2 Set measurement sequence: (  ).

3 Start measurement: **Start** (  ).

- Online measurement starts (initialisation phase may possibly run first)

- The readings are displayed:

· Measure values folder: Table with all measurement channels and data/time of single measurements.

· Display folder: Display fields with all measurement channels.

▶ Manually save readings (only available if the measuring cycle is set to 0 s):

**Save** (  ).

▶ During a measurement, mean value, maximum, minimum can be displayed instead of the actual values: **Actual values** (  ).

▶ Change the size of the display fields: Move controller (  ).

▶ Show readings in a separate window which is always in the foreground: **show min window** (  ).

· Chart folder: Measurement diagram with 16 selectable measurement channels and automatic scaling of the time axis.


▶ Set diagram properties (channels displayed, line color, scaling): **Properties** (  ).

▶ Store diagram as a file: **Store diagram** (  ).

**Save bitmap** (  ) (  ) → **Enter file name** (  ) / (  ) → **Select file type** (  ) / (  ) → **Save**

Folder **Fluegas matrix:** The current measurement value is displayed with cross-hairs in the flue gas matrix.

▶ Change displayed measurement parameters: **O2/CO** or **CO2 / CO** (  ).

▶ Configure limit values: Set prescribed values using **Fuels** and **System type** (  ) or enter **limit O2** and **limit CO** manually.



4 End measurement: **Stop** (🖱️).

- Online measurement is complete.

**Options (only in readings folder):**

▶ Save readings: **Save...** (🖱️).

▶ Export readings to Microsoft Excel: **Export Excel** (🖱️).

▶ Export readings to clipboard (text file separated by tab stop): **Clipboard** (🖱️).

### E.10.3.2 Display order

The measurement channels available are shown in the **All channels** area. Only the parameters and measuring units are available which are in the current display sequence of the measuring instrument

The measurement channels, which appear on your PC during online measurement, are shown in the **Shown channels** area.

**Setting up the display sequence**

▶ Add/delete measurement channels: **Add ->**, **Add all ->**, **<- Delete** or **<- Delete all** (🖱️).

▶ Arrange order of measurement channels: Select measurement channel (🖱️) → **Up** or **Down** (🖱️).

## E.10.4 Configure testo 330

The testo 330 analyser can be configured with the **Configure testo 330** module.

**Open module**

▶ **testo 330** (🖱️) →  **Configure testo 330** (🖱️).

! When no connection to the instrument can be set up, see *Settings - Configuration, Instruments*, p.46.

**Display configuration data/Change configuration**


▶ Select folder (🖱️)

- The available configuration data are displayed in individual folders whose names correspond to the function description in the measuring instrument's menu

In some folders, changes to the configuration can be made. The change possibilities generally correspond to those in the menu of the measuring instrument, see *Instruction manual for the measuring instrument*.



## E.11 Settings

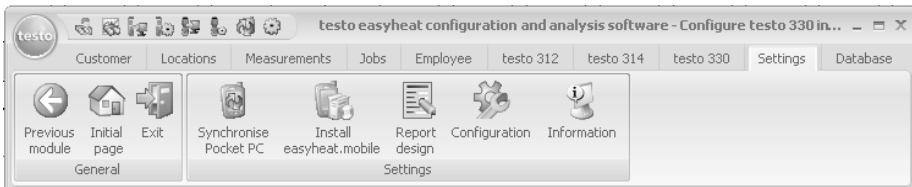

The **Synchronise Pocket PC**, **Install easyheat.mobile**, **Report design**, **Configuration** and **Information** modules are opened via the **Settings** menu. You can also open these modules via the navigation bar.

### E.11.1 Synchronise Pocket PC

In the **Synchronise Pocket PC** module, data can be synchronised with a Windows Hand-held PC. To do this, the software easyheat.mobile must be installed. Please refer as well to the documentation of the easyheat.mobile software. The **Synchronise Pocket PC** module can be activated/deactivated (**Settings - Configuration - Programme**).

Open the module

- ▶ **Settings** (👁️) → **Synchronise Pocket PC** (📱).

#### E.11.1.1 Synchronisation

In the **Synchronisation** folder, the synchronisation process can be started.

##### Synchronise PC with Pocket PC

! The easyheat.mobile program on the Pocket PC must be finished before the synchronisation.

- ▶ **Synchronisation** (👁️).

#### E.11.1.2 Configuration

The settings for the synchronisation process can be made in the **Configuration** folder.

Activate setting

- ▶ Select required setting (👁️).



## E.11.2 Install easyheat.mobile

The easyheat.mobile software can be installed on a Windows Handheld PC using the **Install easyheat.mobile** module. Please refer as well to the documentation of the easyheat.mobile software.

! An employee must be created before the installation, see *New employee*, p. 28.

### Open the module

▶ **Settings** (☞) → **Install easyheat.mobile** (☞).

### Install easyheat.mobile software on Pocket PC:

The Windows Pocket PC is connected to the PC.

- 1 **Start installation** (☞).
- 2 Follow the instructions of the installation program.

## E.11.3 Report design

The forms for printing measurement protocols are changed according to user specifications in the **Report design** module.

### Opening the module

1 **Settings** (☞) → **Report design** (☞).

- The measurement types to which a form is allocated are shown.

! If the measurement type is not shown, the measurement protocols are printed in a fixed standard layout. However, the user can set up a form specific to a measurement type if so required:

▶ **New** (☞) → **Activate measurement type** (☞) → **OK** (☞).

2 **Activate measurement type** for which the form is to be changed (☞) → **OK** (☞).

The **form designer** module is separated into two areas. The **Field**, **Font**, **Border** and **Page** folders are located in the left area while the **Editor** and **Preview** folders are located in the right area.

### Save form

▶ **Save** (☞).

- The saved form is used for printing measurement protocols from the measurement type selected.

### Save form as template

- ▶ **Backup as ...** (🔍) → Enter form name → **OK** (🔍).
- The form is saved so that it can be restored if required.

### Restore form

- ▶ **Restore form ...** (🔍) → Select form name (🔍) → **OK** (🔍).
- The form is restored.

### Print form

- ▶ **Print** (🔍).
- The form is printed as it is shown in the **Preview** folder.

## E.11.3.1 Field, Font, Border, Page

The box properties of the form boxes (field type, font and margin) and the page properties can be changed in the folders.

- ! The displayed properties for box, font and margin are valid for the form box which is selected in the **Editor** folder (in the same module).

### Set up box type

- ▶ Select box type in **Field** (🔍):
  - **Textfield**: Text is entered in the form box.
  - **Data field**: The selected data box value stored in the database (reading, customer or system data) is entered in the form box.
    - ▶ Select data box (▼🔍).
  - **Graphics**: The selected graphic is entered in the form box.
    - ▶ Select graphic: **File ...** (🔍) → Select file → **Open** (🔍).
  - **Logo**: The logo stored under **Settings - Configuration - Own data** is entered.
  - **Chart (measured data)**: The measurement protocol readings stored in the database are input as graphics in the form box.
  - **Table**: The measurement protocol readings stored in the database are input in table form in the form box.
 

By marking the printing area, you can determine which area of the table will be printed.

    - ▶ **Select printing area** (▼🔍): Limit printing area or print out entire table
    - ▶ **Select range of table to be printed** (▼🔍): Select individual areas or print out entire table
    - ▶ **Select data of table to be printed** (▼🔍): Select the data to be printed



### Determining the font

! This function is only available if the **Textfield** or **Data field** box type is selected.

- ▶ Select font in **Font** (👁️👁️):
  - **Standard font:** The standard font set in the Page folder is used.
  - **Special font:** A font deviating from the standard font is used.
    - ▶ Select font: **Font ...** (👁️) → Set values → **OK** (👁️).
  - **Barcode:** The “Barcode” font is used.
- ▶ Select alignment in the **Alignment** text box (▾👁️).

### Border settings

- ▶ Select border properties for the form box in **Border** (▾👁️).

### Page settings

Page properties and the form standard font can be changed in the **Page** folder.

- ▶ Input and set page properties (⚙️👁️).
- ▶ Define standard font: **Default font ...** (👁️) → Adjust values → **OK** (👁️).

## E.11.3.2 Editor

Form boxes can be inserted, modified in size and deleted in the **Editor** folder.

### Insert new form box

- ▶ Select corner point of form box on a free area of the form (👁️ keep pressed) → Drag form box until it is the right size → End input, release (👁️).

### Move form box

- ▶ Select form box (👁️ and then keep pressed) → Move form box to required position → End moving, release (👁️).

### Delete form box

- ▶ Highlight form box (👁️) → [**Del**] (keypad).

## E.11.3.3 Preview

A preview of the form is shown in the **Preview** folder.

## E.11.4 Configuration

### Open module

► **Settings** (🔍) → 🛠️ **Configuration** (🔍).

### E.11.4.1 Instruments

The instruments which are to be supported by the software can be selected in the **Instruments** folder.

► Activate required instruments (☑️🔍).

The interface for setting up the connection can be selected for the testo 330:

► Select interface used (👁️🔍).

! In order to use the Bluetooth interface, a connection must be set up between measuring instrument and PC. The handling steps required to do this vary depending on which PC Bluetooth module and operating system are used. Typically, the input template / installation assistant are called up via:

- The Bluetooth symbol in the task bar: Bluetooth symbol  
Windows XP: Start symbols > Programs > Program group "Bluetooth" or similar  
Windows Vista: Start symbols > System control > Hardware and sound > Bluetooth
- The password or the pass key for the instrument identification for all testo instruments is: 1234

If necessary, also refer to the documentation of your Bluetooth module or operating system.

### E.11.4.2 Programme

The user-specific programme settings can be made in the **Programme** folder.

Used folders and locations

Data are saved under folder and location

► **Use customers and locations:** (👁️🔍).

Only use locations

Data are only saved in the form of individual locations

► **Use measure location only:** (👁️🔍).

Pocket PC synchronization

► **Pocket PC synchronization:** (☑️🔍).

Job management

► **Job management:** (☑️🔍).



### E.11.4.3 Customer data

You can enter presettings for setting up customer and location data in the **Customer data** folder.

- ▶ Activate required functions (☑️🔗).

### E.11.4.4 Own data

Your own address data can be input in the **Own data** folder.

- ▶ **Own data** (🔗) → Enter/change address data.

### E.11.4.5 Color scheme

In the file **Color scheme**, the screen presentation can be selected.

- ▶ Select desired screen presentation (🔗🔗).

### E.11.4.6 Software Update

In the **Software update** folder, the regular automatic check of the software can be activated.

- ▶ **Check automatically for software updates:** ☑️🔗

! An Internet connection is required for the regular check.

### E.11.4.7 Backup

Presettings for data backups are made in the **Backup** folder.

! To protect your data from a fault in the hard disk, your backup files should be saved on another data carrier.

#### Select directory for backup files

- ▶ **Search** (🔗) → Select directory → **OK** (🔗).

#### Determine backup methods

- ▶ **Full backup** (🔗🔗) → Select required the period for database backups (🔗).
- ▶ **Changes backup** (🔗🔗) → Select required the period for database backups (🔗).

## E.11.5 Information

The **Information** module contains 4 folders in which important information for the PC used and for the software is shown. This information is important if you contact our hotline and will help us to diagnose the fault.

#### Open a module

- ▶ **Settings** (🔗) → 🖱️ **Information** (🔗).

## E.12 Database



### E.12.1 Full backup

- 1 Full backup of data: **Database** → **Full backup** .
- 2 Confirm **Information 3010: OK** .

### E.12.2 Incremental backup

- 1 Save changes since last data backup: **Database** → **Incremental backup** .
- 2 Confirm **Information 3009: OK** .

### E.12.3 Restore database

- 1 Open **Restore database** window: **Database** → **Restore database** .
- 2 Restore data: Select time for restore → **OK** .
- 3 Confirm **Information 3013: OK** .

### E.12.4 Repair and compact

Faults in the database occurring after a system crash or power failure can be corrected.

- ▶ Repair faults in database: **Database** → **Repair and compact** .



# F. Questions and Answers

Question	Possible reasons	Answer
Uninstall software.	-	▶ Use Windows uninstall routine.

If your query was not included, please contact your nearest distributor or Testo's Customer Service. You will find contact details in our Warranty booklet or in Internet at [www.testo.com](http://www.testo.com).









