



Operator's Manual

HVD3000 Series

High-Voltage

Differential Probes

HVD3000 Series
High-Voltage Differential Probes
Operator's Manual
January, 2021





HVD3000 Series High-Voltage Differential Probes Operator's Manual

© 2021 Teledyne LeCroy, Inc. All rights reserved.

Unauthorized duplication of Teledyne LeCroy documentation materials other than for internal sales and distribution purposes is strictly prohibited. However, clients are encouraged to duplicate and distribute Teledyne LeCroy documentation for their own internal educational purposes.

Information contained herein is classified as EAR99 under the U.S. Export Administration Regulations. Export, reexport or diversion contrary to U.S. law is prohibited.

Teledyne LeCroy is a trademark of Teledyne LeCroy, Inc. Other product or brand names are trademarks or requested trademarks of their respective holders. Information in this publication supersedes all earlier versions. Specifications are subject to change without notice.

932762-00 Rev A

hvd3000-probes-om-eng_19jan21.pdf

January, 2021

Contents

| | |
|--|----|
| Introduction..... | 1 |
| Safety | 3 |
| Voltage vs. Frequency Derating and Burn Limit | 5 |
| Voltage Derating for Accessories | 8 |
| HVD310xA Probes | 9 |
| HVD3206A Probes..... | 15 |
| HVD3220 Probes | 19 |
| HVD3605A Probes..... | 23 |
| Functional Test Procedure..... | 27 |
| Performance Verification Procedure..... | 28 |
| Required Equipment..... | 28 |
| Preliminary Procedure | 29 |
| Certification Procedure..... | 29 |
| Checking Probe Attenuation in MAUI Automation Browser..... | 31 |
| HVD_____ Test Record | 32 |
| Operation | 33 |
| Connecting to the Test Instrument..... | 33 |
| Connecting to the Test Circuit | 33 |
| Operating with an Oscilloscope | 34 |
| Maintenance | 38 |
| Cleaning..... | 38 |
| Calibration Interval | 38 |
| Service Strategy | 38 |
| Returning a Product for Service..... | 38 |
| Replacement Probe Accessory Kit..... | 39 |

HVD3000 Series High-Voltage Differential Probes

| | |
|---|----|
| Reference..... | 40 |
| Technical Support..... | 40 |
| IEC/EN 61010-031:2015 Definitions | 40 |
| Certifications | 41 |
| Common Mode Rejection Ratio..... | 43 |
| Differential Mode and Common Mode..... | 43 |
| Differential Mode Range and Common Mode Range | 44 |

Warranty

THE WARRANTY BELOW REPLACES ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO ANY IMPLIED WARRANTY OF MERCHANTABILITY, FITNESS, OR ADEQUACY FOR ANY PARTICULAR PURPOSE OR USE. TELEDYNE LECROY SHALL NOT BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, WHETHER IN CONTRACT OR OTHERWISE. THE CUSTOMER IS RESPONSIBLE FOR THE TRANSPORTATION AND INSURANCE CHARGES FOR THE RETURN OF PRODUCTS TO THE SERVICE FACILITY. TELEDYNE LECROY WILL RETURN ALL PRODUCTS UNDER WARRANTY WITH TRANSPORT PREPAID.

The product is warranted for normal use and operation, within specifications, for a period of one year from shipment. Teledyne LeCroy will either repair or, at our option, replace any product returned to one of our authorized service centers within this period. However, in order to do this we must first examine the product and find that it is defective due to workmanship or materials and not due to misuse, neglect, accident, or abnormal conditions or operation.

Teledyne LeCroy shall not be responsible for any defect, damage, or failure caused by any of the following: a) attempted repairs or installations by personnel other than Teledyne LeCroy representatives, b) improper connection to incompatible equipment, or c) use of non-Teledyne LeCroy supplies. Furthermore, Teledyne LeCroy shall not be obligated to service a product that has been modified or integrated where the modification or integration increases the task duration or difficulty of servicing the product. Spare and replacement parts and repairs all have a 90-day warranty.

Products not made by Teledyne LeCroy are covered solely by the warranty of the original equipment manufacturer.

Introduction

The HVD series high-voltage active differential probes are safe, easy-to-use, and ideally suited for power electronics applications where the reference potential is elevated from ground. The probes feature:

- Differential voltage measurement capability in high common-mode environments (up to 6kVrms)
- Exceptional common-mode rejection ratio (CMRR) across a broad frequency range
- Wide differential voltage range
- High offset voltage capability
- Guaranteed 1% DC and low frequency gain accuracy (up to 0.35% accuracy on some models)
- AC or DC coupling (model dependent)
- ProBus interface with automatic scaling
- Auto Zero capabilities

The CMRR for the probes is exceptional out to very high frequencies. This greatly assists in measuring signals in the noisy, high common-mode environments of power electronics. High CMRR combined with low probe noise and high offset capability makes the probes capable of measuring very small control signals floating on high common-mode voltages.

The maximum rated differential voltage specifications are provided for using each probe within a wide differential voltage range. The probes will even display signals above the maximum rated differential voltage, up to the maximum measurable differential voltage before saturation limit, although the specifications cannot be guaranteed. Within this range, the probe is operating below the saturation point of the amplifier, and very reasonable results can be expected.

Note: HVD probes are fitted with detection circuits that will indicate when the differential or common mode voltages are beyond the operating ranges of the probe. A warning will be displayed in the oscilloscope message bar.

The probes are calibrated for high-precision measurements to within 1% at DC to low frequency (~10 kHz). This provides for high accuracy of top and base voltage levels of pulse-width modulated signals. The Auto Zero capability permits further measurement precision by allowing small offset drifts to be calibrated out of the measurement.

HVD3000 Series High-Voltage Differential Probes

The ProBus interface makes the probe an integral part of the oscilloscope. Power is provided to the probe through the interface, so there is no need for a separate power supply or batteries. Attenuation may be either manually selected (HVD3220 only) or automatically selected based on the oscilloscope gain range (V/div) setting, with the offset adjust unified with that of the oscilloscope or locked to the maximum attenuation setting.

Maximum offset depends on the V/div setting and the oscilloscope model. In general, Teledyne LeCroy 12-bit High Resolution Oscilloscopes (HRO) and HD4096 High Definition Oscilloscopes (HDO) provide the most offset capability over the widest range of V/div settings.

Compatibility

HVD3xxxA and HVD3220 probes are compatible with most Teledyne LeCroy oscilloscopes equipped with the ProBus interface. For all compatible oscilloscope models, see:

teledynelecroy.com/probes/high-voltage-differential-probes

Required Firmware

Proper functioning of the HVD probes requires a minimum version of the MAUI™ firmware to be installed on the oscilloscope:




- All HVD3xxxA probes require firmware version 8.5.1.0 or greater.
- HVD3220 probes require firmware version 9.4.x.x or greater.

Safety

To maintain the probe in a correct and safe condition, observe generally accepted safety procedures in addition to the precautions specified in this section. **The overall safety of any system incorporating this product is the responsibility of the assembler of the system.**

Symbols

These symbols appear on the probe and accessories or in this manual to alert you to important safety considerations.

| | |
|---|--|
|  | WARNING, HIGH VOLTAGE. Risk of electric shock or burn. |
|  | CAUTION of damage to probe or instrument, or WARNING of hazard to health. Attend to the accompanying information to protect against personal injury or damage. Do not proceed until conditions are fully understood and met. |
|  | ESD CAUTION. Risk of Electrostatic Discharge (ESD) that can damage the probe or instrument if anti-static measures are not taken. |

Precautions



WARNING. To avoid personal injury or damage due to electric shock or fire:

Do not overload; observe all terminal ratings. Do not apply any potential that exceeds the maximum rating of the probe and/or the probe accessory, whichever is less.

Comply with the Voltage vs. Frequency Derating curve when measuring higher frequency signals.

Connect and disconnect properly. Always connect the probe input lead to the probe accessories before connecting to a voltage source. Ensure the connections are secure before applying voltage. Do not disconnect leads or accessories from a live circuit.

Keep the probe body and output cable away from the circuits being measured. Only accessory tips are intended for contact with electrical sources.

Use only accessories compatible with the probe. Use only accessories that are rated for the application. Substituting other accessories than those specified in this manual may create a shock /burn hazard.

Keep fingers behind the finger guard of the probe accessories.

Do not remove the probe's casing. Touching exposed connections may result in electric shock or burn.



CAUTION. To prevent damage to the equipment:

Use only as specified. The probe is intended to be used only with compatible Teledyne LeCroy instruments. Use of the probe and/or the equipment it is connected to in a manner other than specified may impair the protection mechanisms.

Do not bend cables excessively.

Use only within the operational environment listed. Do not use in wet or explosive atmospheres.

Keep product surfaces clean and dry.

Do not operate with suspected failures. Before each use, inspect the probe and accessories for any damage such as tears or other defects in the probe body, cable jacket, accessories, etc. If any part is damaged, cease operation immediately and sequester the probe from inadvertent use.

Operating Environment

| | |
|----------------------------------|--|
| Temperature, Operating | 0 C to 50 C |
| Temperature, Non-operating | -40 C to 70 C |
| Relative Humidity, Operating | 5% to 80% RH (Non-Condensing) 45% RH above 30 C |
| Relative Humidity, Non-operating | 5% to 95% RH (Non-Condensing) 75% RH above 30 C 45% RH above 40 C |
| Altitude | 3000 m (9842 ft.) maximum Derated to 2000 m (6561 ft.) when used with clip accessories |
| Usage | Indoors |

Voltage vs. Frequency Derating and Burn Limit


The Maximum Input Voltage curve (solid line) shows the maximum voltage that can be applied to the probe inputs without risking damage to the probe.

The lower Burn Limit curve (dashed line) shows the maximum voltage that can be applied to the probe inputs while the operator is handling the inputs. Handling the inputs while connected to active signals above this burn limit could result in injury to the operator.




WARNING. To avoid risk of electric shock or fire, comply with the burn limit when measuring high-frequency signals with hand-held accessories. Do not exceed the voltage or category rating of the probe or accessories (whichever is less). Keep your fingers behind the finger guard of the probe. Keep the probe body and output cable away from the circuits being measured. Use only the specified accessories.


HVD3102A and HVD3106A Derating and Burn Limit

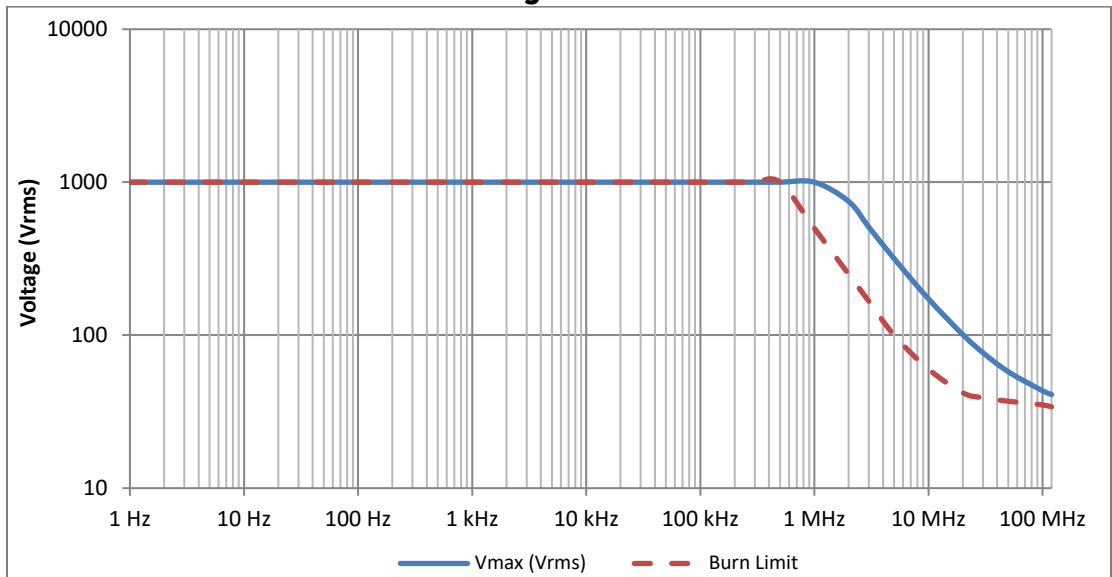


HVD3206A Derating and Burn Limit

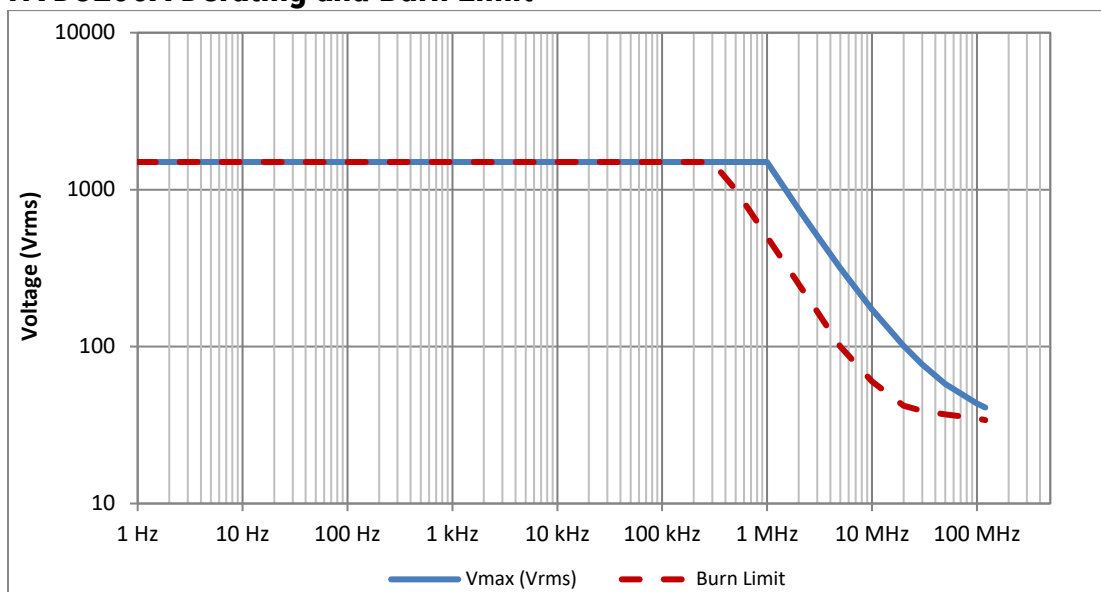

HVD3220 Derating and Burn Limit

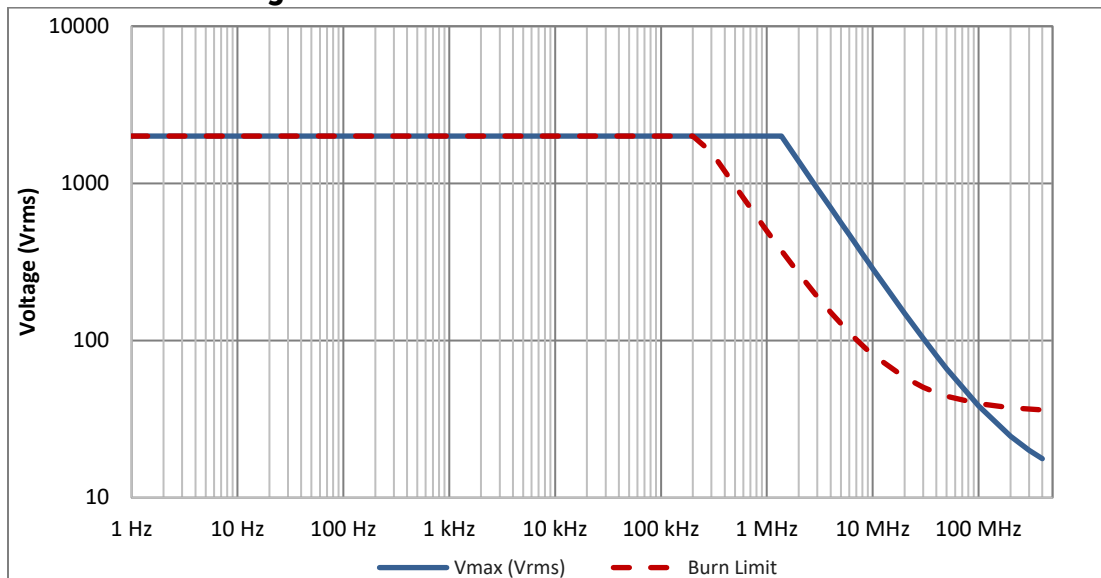

HVD3605A Derating and Burn Limit

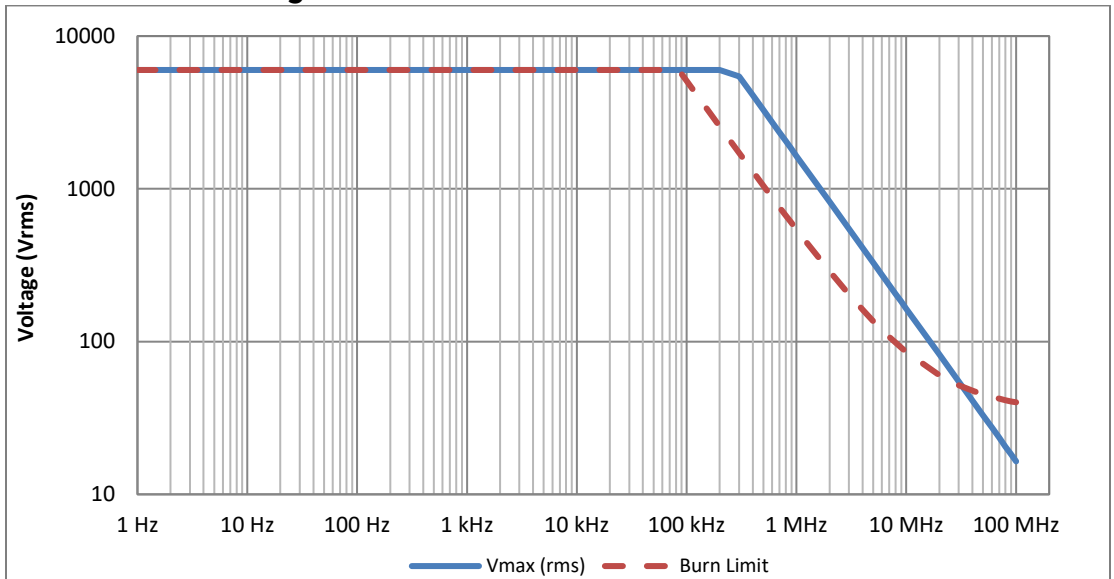

Voltage Derating for Accessories

| Accessory | Derated Max. Input Voltage for Combined Probe & Accessory (either input to ground)* |
|------------------------------|---|
| Spade Terminals | 1000 V CAT III |
| Safety Alligator Clips | 1000 V CAT III |
| Plunger Alligator Clips | 1000 V CAT III |
| Plunger Pincer Clips | 1000 V CAT II |
| Plunger Hook Clips | 1000 V CAT II |
| 6 kV Alligator Clips | 6000 V CAT I ** 1000 Vrms CAT III 1500 Vdc CAT III |
| 2 kV Plunger Alligator Clips | 2000 V (DC + Peak AC) CAT I ** 1000 Vrms CAT III 1500 Vdc CAT III |
| 4 mm Probe Tip Adapters | 1000 V CAT III |
| 0.6 mm Fine Spring Tips | 30 V AC / 60 V DC |

* See "IEC/EN 61010-031 Definitions" on p.40.

** CAT I per IEC/EN 61010-031/A1:2008. No Rated Measurement Category per IEC/EN 61010-031:2015.



CAUTION. The operating altitude of the probe is derated to 2000 m (6560 ft) when used with the above accessories.



WARNING. Each accessory has a different measurement (overvoltage) category (CAT) rating. The voltage and CAT rating of the probe are derated to the values in the table above when used with the corresponding accessory.



WARNING. While all probes may be used with the HVD310xA accessories (spade terminals, plunger clips, etc.), the voltage and CAT ratings of the probe are derated to the values in the table above when used with the corresponding accessory.



WARNING. To avoid risk of electric shock or fire, do not exceed either the voltage rating or category rating. Keep your fingers behind the finger guard of the probe. Keep the probe body and output cable away from the circuits being measured. Use only the specified accessories.

HVD310xA Probes



HVD3102A/HVD3106A Probe Kit

The probes are delivered with the following:

| Item | Description | Safety Rating* | QTY |
|-------------------------|---|--------------------------|-----|
| Spade Terminals | Designed to connect to terminal strips, posts and screws, the overall length is 63 mm (2.48 inches). 4 mm Banana (female) connector. 1 ea. red/black. | Insulated 1000 V CAT III | 2 |
| Safety Alligator Clips | Designed to reliably grip large components, such as bus bars and large bolts, the overall length is 92.8 mm (3.65 inches) and the jaw opens to 32 mm (1.26 inch). Only the lower jaw is conductive; the top jaw is insulating plastic. 4 mm Banana (female) connector. 1 ea. red/black. | Insulated 1000 V CAT III | 2 |
| Plunger Alligator Clips | The clip is designed to securely grasp thick wires, cables, ground leads, rails, and screw heads. The overall length is 153 mm (6.02 inches); the jaw opens to 23 mm (0.905 inch) max. 4 mm Banana (female) connector. 1 ea. red/black. | Insulated 1000 V CAT III | 2 |

HVD3000 Series High-Voltage Differential Probes

| Item | Description | Safety Rating* | QTY |
|----------------------|--|-------------------------|-----|
| Plunger Pincer Clips | Designed with a long, thin, flexible stem for attaching to hard-to-reach test points, the entire body is fully insulated. The overall length is 161.6 mm (6.36 inch). The pincers can grab leads, pins and wires up to 4 mm (0.157 inch) in diameter. 4 mm Banana (female) connector. 1 ea. red/black. | Insulated 1000 V CAT II | 2 |
| Plunger Hook Clips | Designed with a flexible stem to access deep targets in dense environments and a 4.5 mm (0.177 inch) hook to attach to wire leaded parts. The overall length is 157.6 mm (6.20 inches). 4 mm Banana (female) connector. 1 ea. red/black. | Insulated 1000 V CAT II | 2 |
| Case | Soft storage case. | | 1 |
| Foam | Custom foam insert for storage case. | | 1 |
| Operator's Manual | | | 1 |

* See "IEC/EN 61010-031 Definitions" on p.40.

‡ See page 39 for information about ordering replacement accessories.

Note: The *-NOACC options offer the probe without the accessories.



WARNING. To avoid injury or death due to electric shock, do not handle probe input leads connected to the Spade Terminals while they are connected to a live voltage source. Do not use Spade Terminals as hand-held accessories; they are meant to be used as a permanent installation in a test set up.

HVD310xA Specifications

For the current specifications, see the product datasheet at teledynelecroy.com. Specifications are subject to change without notice.

GUARANTEED SPECIFICATIONS

| | HVD3102A | HVD3106A | HVD3106A-6M |
|------------------------|--------------------------------|--------------------------------|--------------------------------|
| Bandwidth (probe only) | 25 MHz | 120 MHz | 80 MHz |
| Risetime 10-90 % | 14 ns | 2.9 ns | 4.4 ns |
| CMRR Test Limits, 23 C | 80 dB @ 50 Hz 60 dB @ 1 MHz | 80 dB @ 50 Hz 60 dB @ 1 MHz | 80 dB @ 50 Hz 60 dB @ 1 MHz |

ELECTRICAL CHARACTERISTICS


| | |
|--|---|
| Differential Voltage Range (High Attenuation) | 1500 V (DC + Peak AC) from 7 to 500 V/div, up to 1500 V offset |
| Differential Voltage Range (Low Attenuation) | 27.6 V (DC + Peak AC) from 100 mV/div to 6.9 V/div, up to 150 V offset |
| Common Mode Voltage Range | ± 1500 V (DC + Peak AC) |
| Max. Input Voltage to Earth | ± 1500 Vpk (nominal, either input to ground) |
| Max. Safe Input Voltage* (per IEC 61010-031) | 1000 Vrms CAT III |
| Pollution Degree * | 2 |

* See "IEC/EN 61010-031 Definitions" on p.40.


VERTICAL SENSITIVITY (ALL PROBES)

100 mV/Div to 500 V/Div


HVD3102A Typical Bandwidth

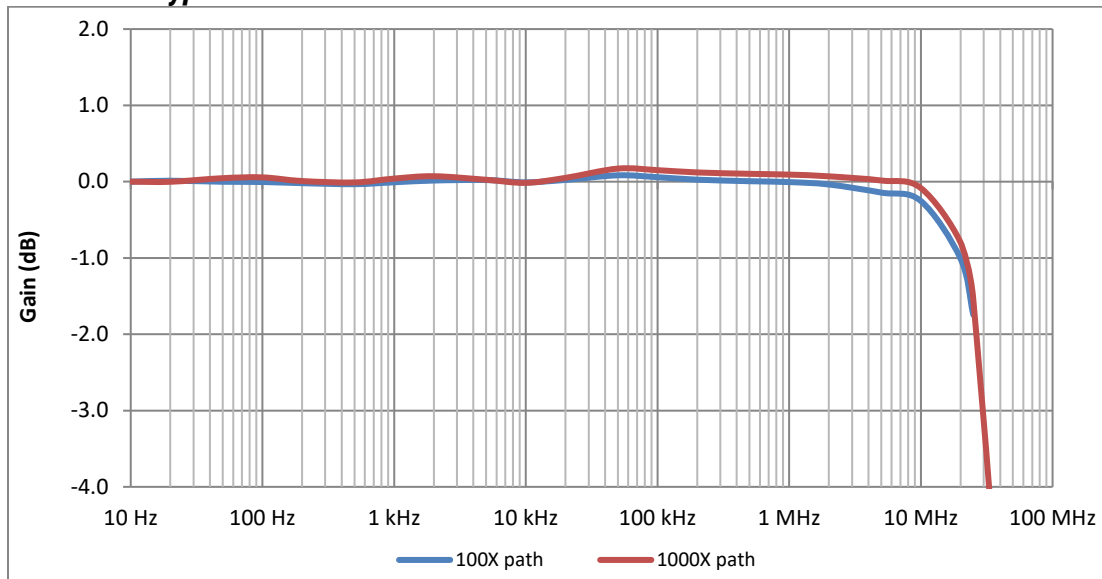


HVD3106A Typical Bandwidth

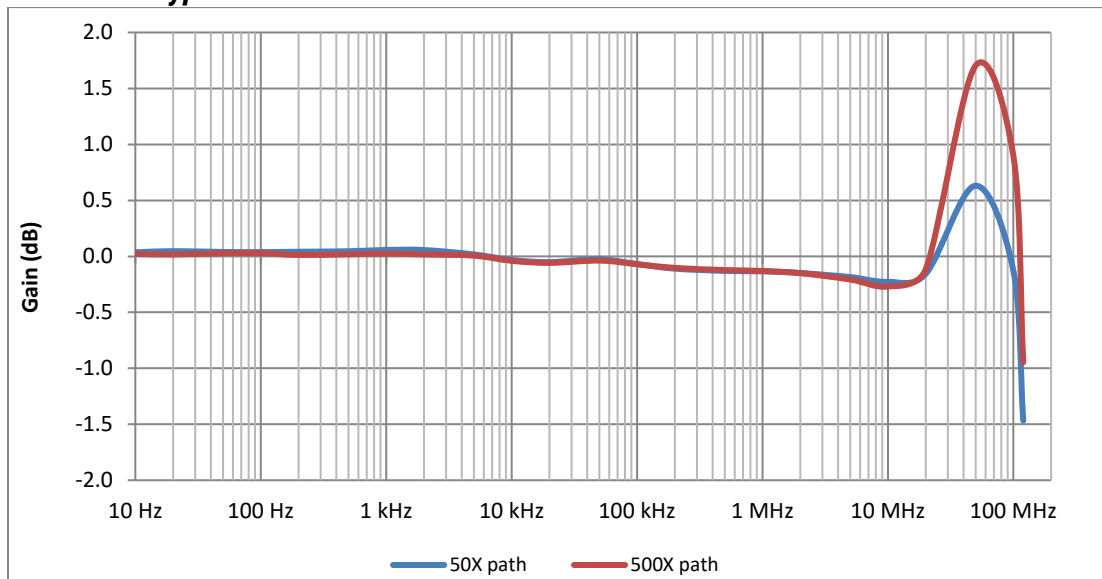


HVD3106A-6M Typical Bandwidth

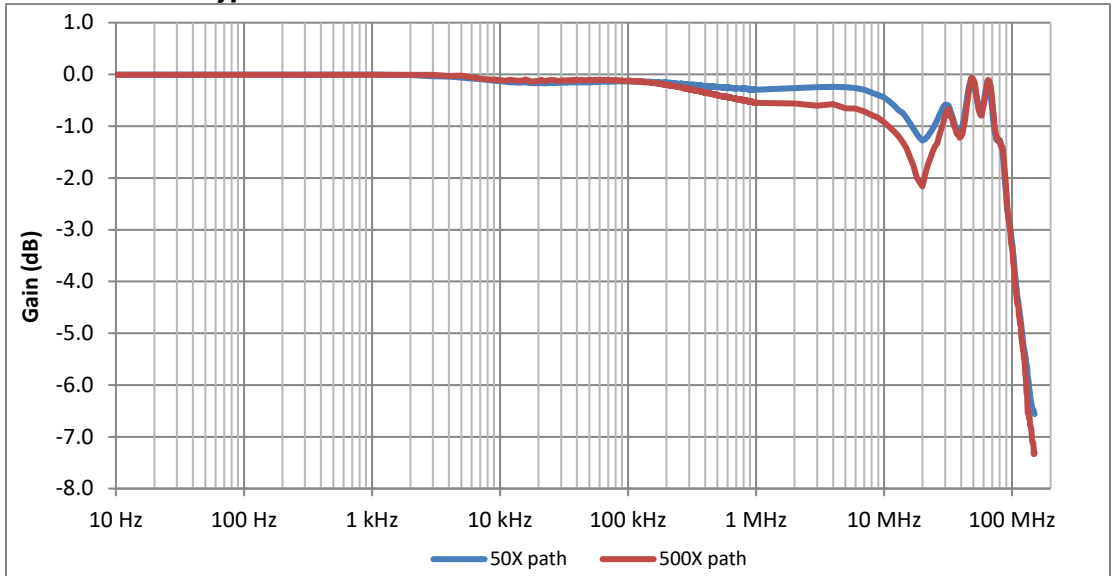


HVD3102A Typical CMRR

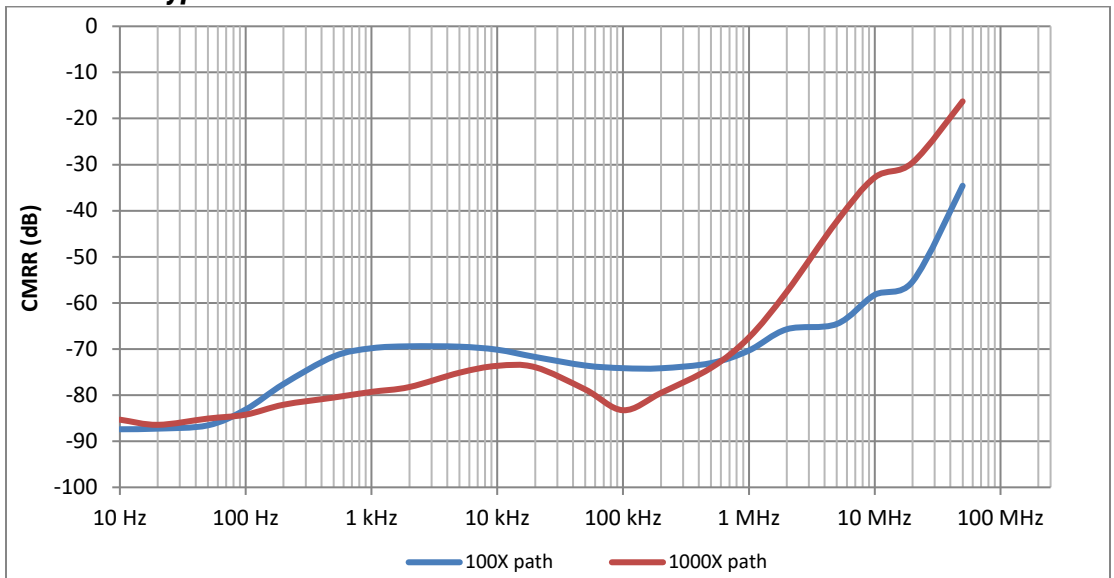

HVD3106A Typical CMRR

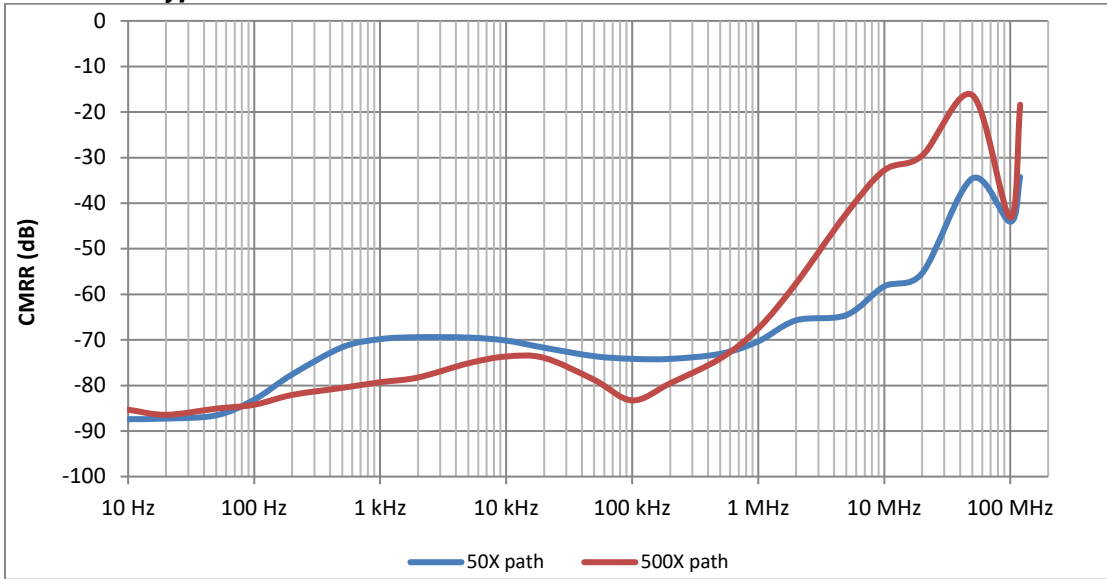

HVD310xA Differential Input Impedance

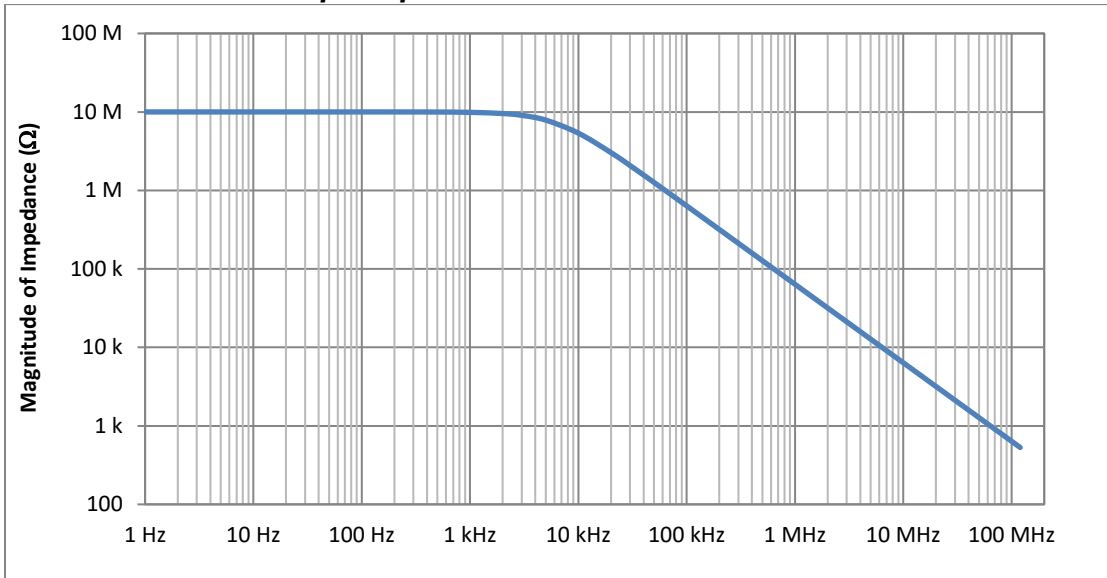

HVD3206A Probes



HVD3206A Probe Kit

The probes are delivered with the following:

| Item | Description | Safety Rating* | QTY |
|------------------------------------|---|--|-----|
| 2 kV Rated Plunger Alligator Clips | The clip is designed to securely grasp thick wires, cables, ground leads, rails, and screw heads. The overall length is 130 mm (5.1 inches); the jaw opens to 20 mm (0.79 inch) maximum. 4 mm Banana (female) connector. 1 ea. red/black. | 2000 V (DC+Peak AC) CAT I** 1000 Vrms CAT III 1500 Vdc CAT III | 2 |
| Case | Soft storage case | | 1 |
| Foam | Custom foam insert for storage case | | 1 |
| Operator's Manual | | | 1 |

* See "IEC/EN 61010-031 Definitions" on page 40.

** CAT I per IEC/EN 61010-031/A1:2008. No Rated Measurement Category per IEC/EN 61010-031:2015.

‡ See page 39 for information about ordering replacement accessories.

HVD3206A Specifications

For the current specifications, see the product datasheet at teledynelecroy.com. Specifications are subject to change without notice.

GUARANTEED SPECIFICATIONS

| | HVD3206A | HVD3206A-6M |
|------------------------|--------------------------------|--------------------------------|
| Bandwidth (probe only) | 120 MHz | 80 MHz |
| Risetime 10-90% | 2.9 ns | 4.4 ns |
| CMRR Test Limits, 23 C | 80 dB @ 50 Hz 60 dB @ 1 MHz | 80 dB @ 50 Hz 60 dB @ 1 MHz |

ELECTRICAL CHARACTERISTICS

| | |
|---|--|
| Differential Voltage Range (High Attenuation) | 2000 V (DC + Peak AC) from 7 to 500 V/div, up to 1500 V offset |
| Differential Voltage Range (Low Attenuation) | 2000 V (DC + Peak AC) from 100 mV/div to 6.9 V/div, up to 150 V offset |
| Common Mode Voltage Range | ± 2000 V (DC + Peak AC) |
| Max. Input Voltage to Earth | ± 2000 Vpk (nominal, either input to ground) |
| Max. Safe Input Voltage* (per IEC 61010-031) | ± 2000 Vpk 2000 V (DC + peak AC) CAT I ** 1500 Vdc CAT III 1000 Vrms CAT III |
| Pollution Degree* | 2 |


* See "IEC/EN 61010-031 Definitions" on p.40.

** CAT I per IEC/EN 61010-031/A1:2008. No Rated Measurement Category per IEC/EN 61010-031:2015.


VERTICAL SENSITIVITY

100 mV/Div to 500 V/Div


HVD3206A Typical Bandwidth

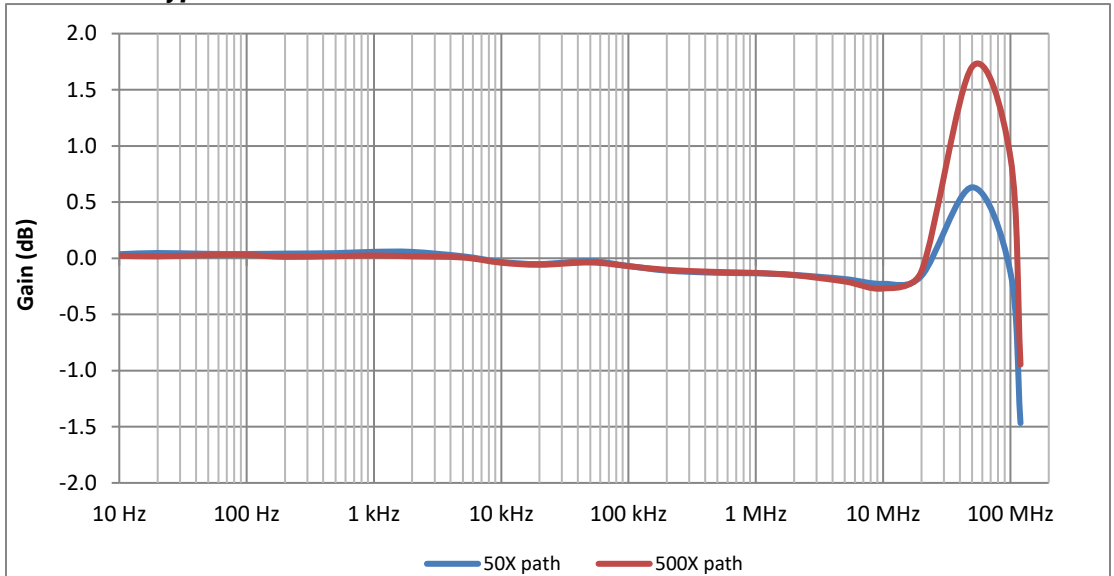


HVD3206A-6M Typical Bandwidth

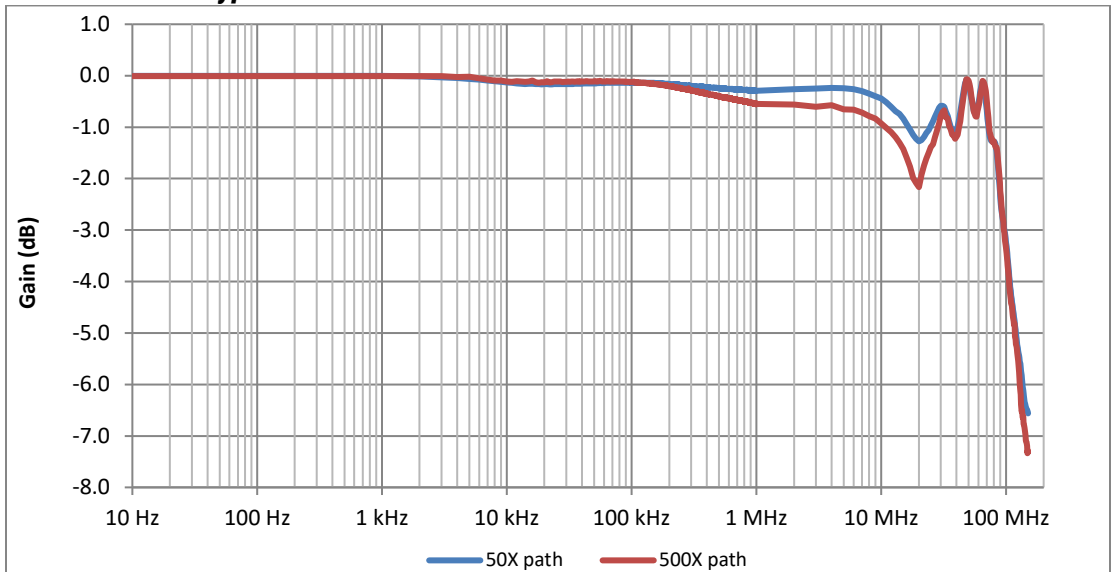

HVD3206A Typical CMRR

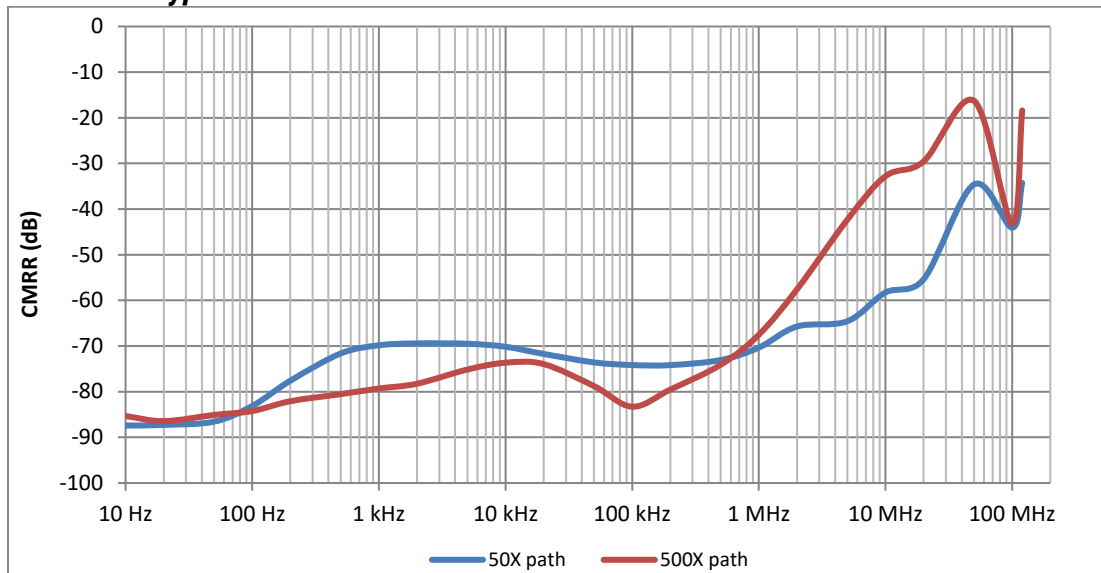

HVD3206A Differential Input Impedance

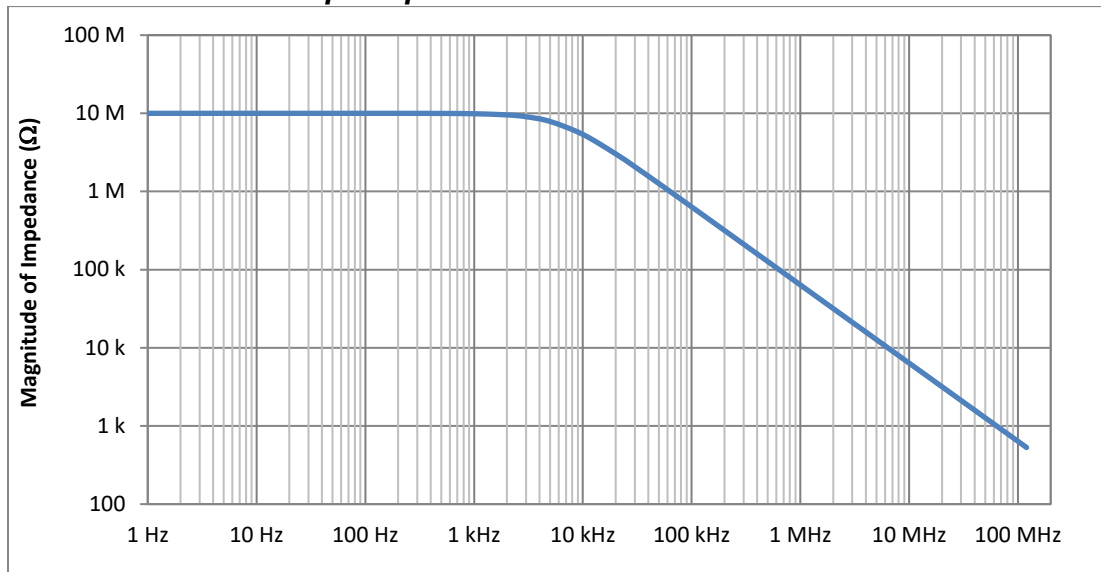

HVD3220 Probes



HVD3220 Probe Kit

The probes are delivered with the following:

| Item | Description | Safety Rating* | QTY |
|--|---|--|-----|
| 2 kV Rated Plunger Alligator Clips | The clip is designed to securely grasp thick wires, cables, ground leads, rails, and screw heads. The overall length is 130 mm (5.1 inches); the jaw opens to 20 mm (0.79 inch) maximum. 4 mm Banana (female) connector. 1 ea. red/black. | 2000 V (DC+Peak AC) CAT I** 1000 Vrms CAT III 1500 Vdc CAT III | 2 |
| High-bandwidth 4 mm Probe Tip Adapters | 4 mm female-male banana plug adapters hold 0.6 mm spring-loaded tips*** for probing fine-pitch surfaces. 2 black, with 2 tips (in vial). | 1000 V CAT III*** 400 MHz | 2 |
| Case | Soft storage case | | 1 |
| Foam | Custom foam insert for storage case. | | 1 |
| Operator's Manual | | | 1 |

* See "IEC/EN 61010-031 Definitions" on p.40.

** CAT I per IEC/EN 61010-031/A1:2008. No Rated Measurement Category per IEC/EN 61010-031:2015.

*** Safety rating for spring-loaded tips is 30 V AC / 60 V DC

‡ See page 39 for information about ordering replacement accessories.

HVD3220 Specifications

For the current specifications, see the product datasheet at teledynelecroy.com. Specifications are subject to change without notice.

GUARANTEED SPECIFICATIONS

| | HVD3220 |
|------------------------|-----------------------------|
| Bandwidth (probe only) | 400 MHz |
| Risetime 10-90% | 875 ps |
| CMRR Test Limits, 23 C | 80 dB @ DC 60 dB @ 1 MHz |

ELECTRICAL CHARACTERISTICS

| | |
|---|--|
| Differential Voltage Range (500X Attenuation) | 2000 V (DC + Peak AC) from 35 V/div to 500 V/div, up to 1500 V offset |
| Differential Voltage Range (250X Attenuation) | 1000 V (DC + Peak AC) from 14 V/div to 34.5 V/div, up to 750 V offset |
| Differential Voltage Range (100X Attenuation) | 400 V (DC + Peak AC) from 7 V/div to 13.8 V/div, up to 300 V offset |
| Differential Voltage Range (50X Attenuation) | 200 V (DC + Peak AC) from 500 mV/div to 6.9 V/div, up to 150 V offset |
| Common Mode Voltage (either input to ground) | ± 2000 V (DC + Peak AC) |
| Max. Input Voltage to Earth (either input to ground) | ± 2000 Vpk (nominal, either input to ground) |
| Max. Safe Input Voltage* (per IEC 61010-031) | ± 2000 Vpk 2000 V (DC + peak AC) CAT I ** 1500 Vdc CAT III 1000 Vrms CAT III |
| Pollution Degree* | 2 |


* See "IEC/EN 61010-031 Definitions" on p.40.

** CAT I per IEC/EN 61010-031/A1:2008. No Rated Measurement Category per IEC/EN 61010-031:2015.


VERTICAL SENSITIVITY

500 mV/Div to 500 V/Div


HVD3220 Typical Bandwidth

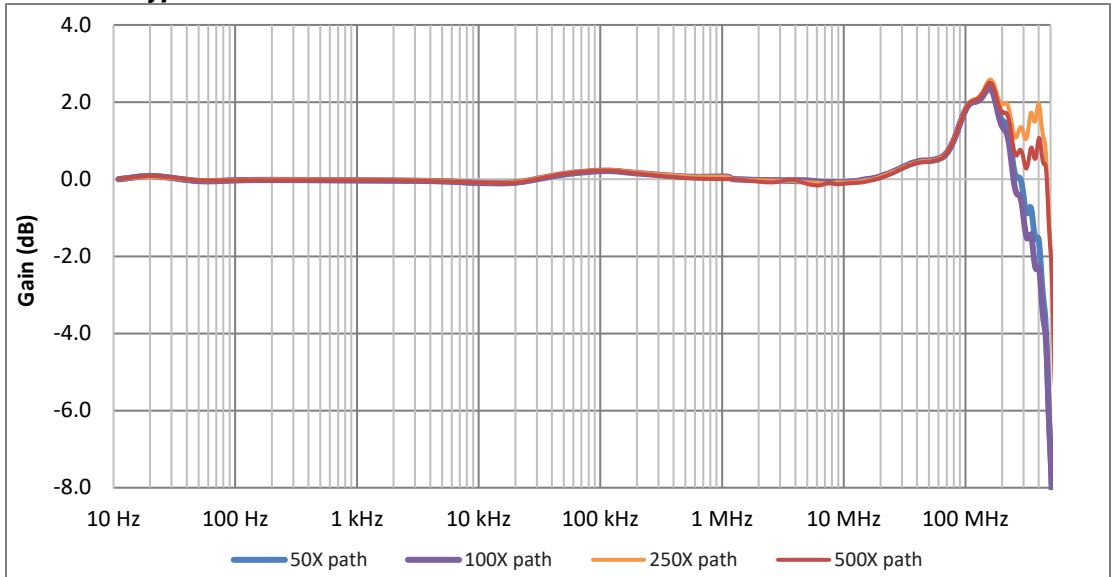

HVD3220 Typical CMRR

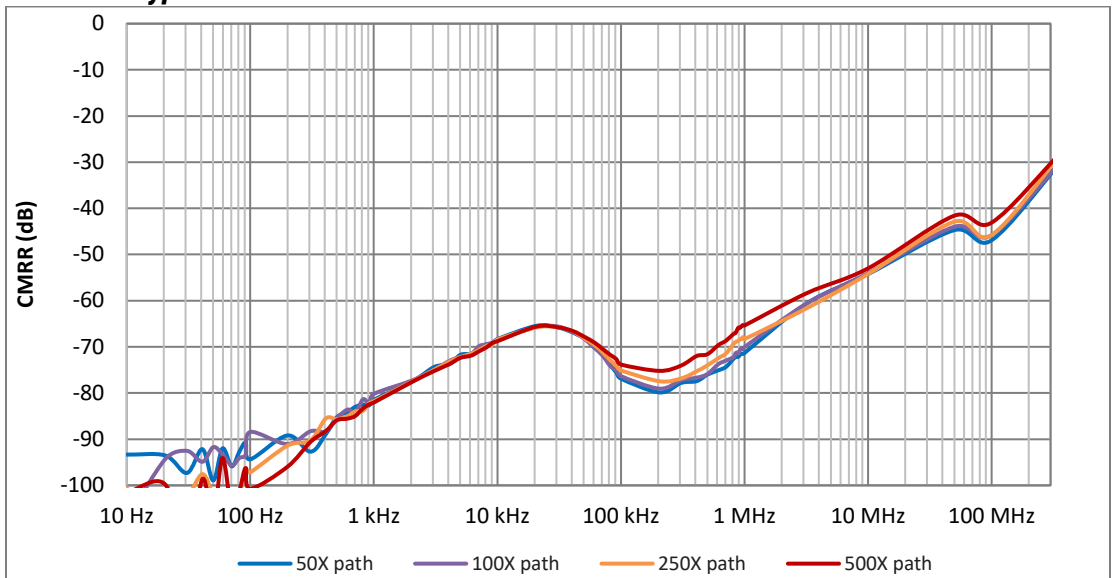

HVD3220 Differential Input Impedance

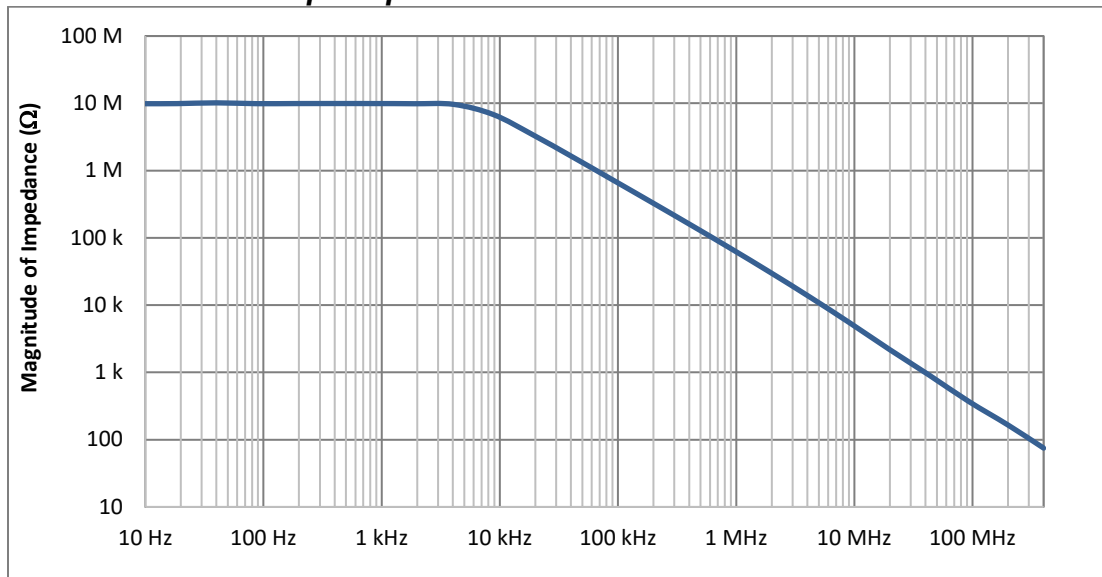

HVD3605A Probes



HVD3605A Probe Kit

The probes are delivered with the following:

| Item | Description | Safety Rating* | QTY |
|----------------------------|---|---|-----|
| 6 kV Rated Alligator Clips | Designed to reliably grip large components, such as bus bars and large bolts, the overall length is 116 mm (4.57 inches) and the jaw opens to 22 mm (0.87 inch). 1 ea. red/black. | 6000 V CAT I** 1000 Vrms CAT III 1500 Vdc CAT III | 2 |
| Case | Soft storage case | | 1 |
| Foam | Custom foam insert for storage case. | | 1 |
| Operator's Manual | | | 1 |

* See "IEC/EN 61010-031 Definitions" on p.40.

** CAT I per IEC/EN 61010-031/A1:2008. No Rated Measurement Category per IEC/EN 61010-031:2015.

‡ See page 39 for information about ordering replacement accessories.

HVD3605A Specifications

For the current specifications, see the product datasheet at teledynelecroy.com. Specifications are subject to change without notice.

GUARANTEED SPECIFICATIONS

| | HVD3605A |
|------------------------|--|
| Bandwidth (probe only) | 100 MHz |
| Risetime 10-90% | 4.3 ns |
| CMRR Test Limits, 23 C | 80 dB @ 50 Hz 60 dB @ 10 KHz 60 dB @ 1 MHz (200x) 46 dB @ 1 MHz (2000x) |

ELECTRICAL CHARACTERISTICS

| | |
|---|---|
| Differential Voltage Range (High Attenuation) | 7000 V (DC + Peak AC) from 28 V/div to 2000 V/div, up to 6000 V offset (7600 V max. measurable diff. voltage before saturation) |
| Differential Voltage Range (Low Attenuation) | 700 V (DC + Peak AC) from 300 mV/div to 27.5 V/div, up to 600 V offset |
| Common Mode Voltage (either input to ground) | ± 7600 V (DC + Peak AC) 6000 Vrms |
| Max. Input Voltage to Earth (either input to ground) | ± 7600 Vpk (nominal, either input to ground) |
| Max. Safe Input Voltage* (per IEC 61010-031) | ± 8485 V (DC + peak AC) CAT I ** 6000 Vrms CAT I** 1500 Vdc CAT III 1000 Vrms CAT III |
| Pollution Degree* | 2 |


* See "IEC/EN 61010-031 Definitions" on p.40.

** CAT I per IEC/EN 61010-031/A1:2008. No Rated Measurement Category per IEC/EN 61010-031:2015.


VERTICAL SENSITIVITY

300 mV/Div to 2000 V/Div


HVD3605A Typical Bandwidth

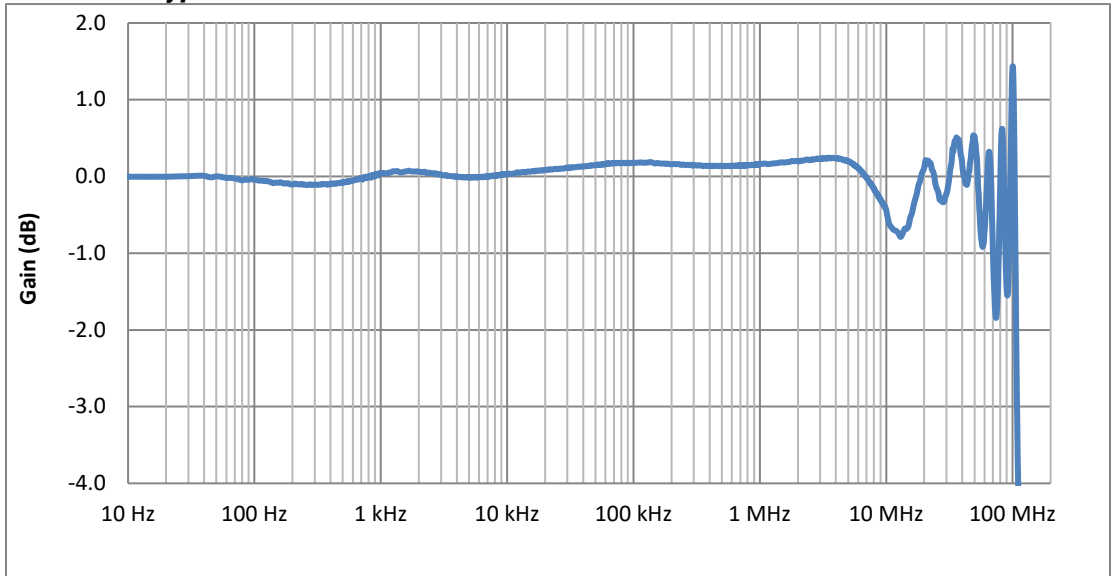

HVD3605A Typical CMRR

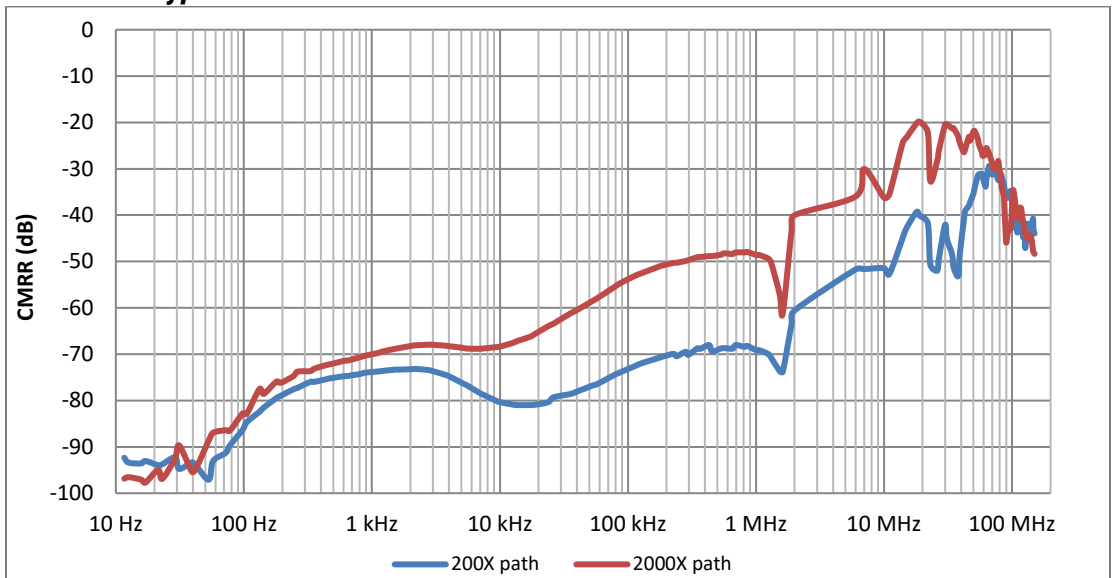

HVD3605A Differential Input Impedance

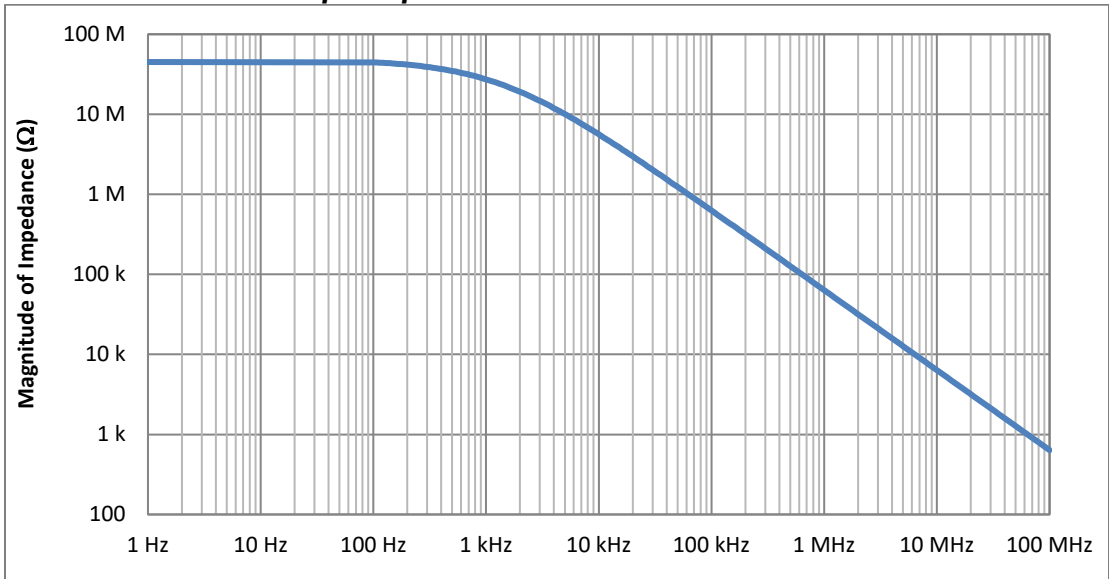

Functional Test Procedure

Perform this procedure to confirm the basic operation of an HVD3000 series probe or to aid in determining the source of a problem, rather than to verify the accuracy of the probe. You can perform the Functional Test without removing the probe covers.

Other than a Teledyne LeCroy oscilloscope, no special test equipment is required for the functional test.

1. Connect the probe to any oscilloscope vertical channel and open the Cn dialog.
2. Touch **AUTO ZERO** on the probe dialog (behind the Cn dialog).
3. If necessary, adjust the **OFFSET** to 0.000 V.
4. Using accessory clips, attach the red clip to the + CAL out and the black clip to the ground post of the CAL out signal. For oscilloscopes with the CAL signal on a BNC connector, a BNC-to-Banana adapter (e.g., Pomona model 1296) may be used.
5. Press **AUTOSETUP**.
6. Set the sensitivity of the probe to 1 V/Div.
7. Set the CAL output to 1 Vp-p square wave.
8. Verify that the displayed square wave is 1 Vp-p centered at +0.5 V.
9. Reverse the accessory leads on CAL out and verify that the displayed square wave is still 1 V, but is now centered at -0.5 V.
10. Change the **COUPLING** on the channel setup dialog to **Grounded** to verify that the signal disappears and that the trace is still centered on the screen.
11. Verify that the probe attenuation shows the following:
 - x100 for HVD3102A
 - x50 for HVD3106A and HVD3206A
 - x50 for HVD3220
 - x200 for HVD3605A
12. Set the VOLTS/DIV to 100V.
13. Verify that the probe attenuation now shows:
 - x1000 for HVD3102A
 - x500 for HVD3106A and HVD3206A
 - x500 for HVD3220
 - x2000 for HVD3605A

Performance Verification Procedure

This procedure can be used to verify the warranted characteristics of an HVD series probe. If the product does not meet specifications, it should be returned to a Teledyne LeCroy service center. As there are no user accessible adjustments, there is no adjustment procedure.

Required Equipment

The following table lists the test equipment and accessories (or their equivalents) that are required for performance verification of the probe. This procedure is designed to minimize the number of calibrated test instruments required. Because the input and output connector types may vary on different brands and models of test instruments, additional adapters or cables may be required. Only the parameters listed in boldface in the "Minimum requirements" column must be calibrated to the accuracy indicated.

| Description | Requirements | Example Equipment |
|--|---|--|
| Digital Multimeter | DC: 0.1% accuracy AC: 0.2% accuracy to measure 7 mVrms to 37 Vrms at 70 Hz | Agilent 34401A Fluke 8842A-09 Keithley 2001 |
| Function Generator | Output sine wave: 20 Vpp HVD310x and HVD3206 20 Vpp HVD3220 37 Vrms HVD3605* * May require an amplifier to obtain required voltage, such as Tegam 2340. | Agilent 33120A Stanford Research DS34 Leader LAG-120B |
| BNC Coaxial Cable | Male-to-Male 50 Ω Cable | Pomona 5697-36 |
| Calibration Fixture | ProBus Extender Cable | Teledyne LeCroy PROBUS-CF01 |
| Banana Plug Adapter | Female BNC-to-Dual Banana Plug | Pomona 1269 Mueller BU-00260 |
| Insulated Banana Plug Insulated Banana Couplers (2) | Insulated BNC-to-Shrouded Banana Plug | Mueller BU-5671-B-12-0 Mueller BU-32601-2 (R) Mueller BU-32601-6 (B) |
| Precision 50 Ω Feedthrough Terminator | Resistance: 50 Ω Tolerance: $\pm 0.05\%$ Wattage: ≥ 0.5 W | |

Preliminary Procedure

1. Connect the probe under test to the female end of the ProBus Extension Cable. Connect the male end of the ProBus Extension Cable to channel 1 (C1) of the oscilloscope.
2. Turn on the oscilloscope and allow at least 30 minutes warm-up time before performing the Certification Procedure.
3. Turn on the other test equipment and allow these to warm up for the time recommended by the manufacturer.
4. While the instruments are reaching operating temperature, make a photocopy of the Performance Verification Test Record (following this topic), and fill in the necessary data.

Certification Procedure

1. Set the function generator to sine wave, 70 Hz, and an output voltage of approximately:
 - 7 Vrms (into a high impedance output) for HVD310xA, HVD3206A, HVD3220
 - 37 Vrms for HVD3605A
2. Set the DMM to measure ACVolts.
3. Connect the function generator output to the DMM, using a BNC cable and a female BNC to dual banana plug adapter.
4. Adjust the function generator output voltage until the DMM reads:
 - 7 V \pm 0.01 V for HVD310xA, HVD3206A, HVD3220
 - 37 V \pm 0.01 V for HVD3605A
5. Record the DMM reading to 1 mV resolution in the Test Record.
6. Disconnect the BNC cable from the function generator and from the BNC-to-banana plug adapter on the DMM. (Leave the banana plug adapter connected to the DMM).
7. **For HVD3220 probes:** Insert 50 Ω precision feedthrough termination between the BNC connector from the probe extender and the DMM.

If the 50 Ω terminator is bnc-to-banana, then the banana to the DMM can be removed and replaced with the 50 Ω precision feedthrough terminator.

For all other probes: Connect the BNC connector from the probe extender cable to the BNC-to-banana plug adapter on the DMM.

HVD3000 Series High-Voltage Differential Probes

8. Connect the insulated banana plug adapter to the function generator.
9. Using the insulated banana couplers, connect the positive lead (red) of the probe under test to the positive output of the BNC-to-banana plug adapter and the negative lead (black) to the negative or return output.
10. Set the oscilloscope scale factor to:
 - 20 V/Div for HVD310xA and HVD3206A
 - 50 V/Div for HVD3220 and HVD3605A
11. Record the DMM reading to 0.01 mV resolution in the Test Record.
12. Multiply the measured output voltage recorded in step 11 by the actual probe attenuation factor, then divide this number by the function generator output voltage (probe input voltage) recorded in step 5. Subtract 1 from this number and multiply the result by 100 to get the error in percent:

$$\%Error = \left(\frac{PrAttenuation \times MeasuredOutputVoltage}{InputVoltage} - 1 \right) \times 100$$

Note: The actual probe attenuation can be found by using the MAUI Automation Browser. Follow the procedure below.

13. Record the answer to two significant places ($\pm x.xx\%$) on line 13 in the Test Record.
14. Verify that the error $\leq 1.00\%$ (0.35% for HVD3220).
15. Decrease the oscilloscope scale factor to:
 - 5 V/Div for HVD310xA, HVD3206A and HVD3605A
 - 20 V/Div for HVD3220
16. Record the DMM reading to 0.01 mV resolution in the Test Record.
17. Multiply the measured output voltage recorded in step 16 by the actual probe attenuation factor, then divide this number by the function generator output voltage (probe input voltage) recorded in step 5. Subtract 1 from this number and multiply the result by 100 to get the error in percent.

Note: Recheck the actual probe attenuation in the MAUI Automation Browser, as it will now be a different value than in step 12. Click the browser Refresh button if the previous session is still open.

18. Record the answer to two significant places ($\pm x.xx\%$) on line 18 in the Test Record.
19. Verify that the error is $\leq 1.00\%$ (0.35% for HVD3220).

20. **HVD3220 probes only:** Repeat steps 15 through 19 two more times, successively decreasing the oscilloscope vertical scale factor to 10 V/Div and 5 V/Div.

This completes the Performance Verification Procedure. Complete and file the Test Record as required to support your internal calibration procedure. If the criteria in steps 14, 19 or 20 are not met, contact your local Teledyne LeCroy service center.

Checking Probe Attenuation in MAUI Automation Browser

Probe attenuation and other values can be found by using the MAUI Automation Browser application that is installed with the oscilloscope firmware.

1. Choose **File > Minimize** to show the oscilloscope desktop, then double-click the MAUI Automation Browser icon.
2. From the browser menu bar, choose **File > Connect to Local Instrument**.
3. Navigate to **LeCroy.XStreamDSO > Acquisition > C1 > InputB > HVDxxxxx** (where xxxxx is your probe model number). The value is shown next to PrAttenuation.
4. Close the browser and touch the oscilloscope icon (bottom right of desktop) to return to the oscilloscope software.

Note: These steps are tailored to the Performance Verification procedure. You can find any value at any time by changing the path to reflect the probe's actual input channel and row (Cn > Input A|B).

HVD_____ Test Record

Serial Number: _____

Asset / Tracking Number: _____

Date: _____

Technician: _____

| Equipment | Model | Serial Number | Calibration Date |
|---------------------|-------|---------------|------------------|
| Oscilloscope | | | |
| Digital Multimeter | | | |
| Function Generator* | | | |

* In this Performance Verification Procedure, the function generator is used for making relative measurements. The output of the generator is measured with a DMM or oscilloscope. Thus, the generator is not required to be calibrated.

| Step | Description | Intermediate Data | Test Result |
|------------------|--|-------------------|-------------|
| 5 | Function Generator Output Voltage | V | |
| 11 | Probe Output Voltage | V | |
| 13 | Gain Error (test limit ± 1 %) | | % |
| 16 | Probe Output Voltage | V | |
| 18 | Gain Error (test limit ± 1 or 0.35 %) | | % |
| 20a (HVD3220) | Gain Error (test limit $\pm 0.35\%$) @ 10 V/Div | | % |
| 20b (HVD3220) | Gain Error (test limit ± 0.35 %) @ 5 V/Div | | % |

Permission is granted to photocopy this page to record the results of the Performance Verification procedure. File the completed record as required by applicable internal quality procedures.

- Line numbers correspond to steps in the procedure that require the recording of data.
- Record the actual specification limit check under "Test Result". The test limits are included in all steps.
- Record other measurements and intermediate calculations that support the limit check under "Intermediate Results".

Operation

Connecting to the Test Instrument

HVD series probes have been designed for use with Teledyne LeCroy oscilloscopes equipped with the ProBus interface. When you attach the probe to the oscilloscope's input connector, the instrument will:

- Recognize the probe
- Set the oscilloscope input termination to 1 M Ω
- Activate the probe control functions in the oscilloscope user interface

Note: For accurate measurements, connect the probe to the oscilloscope and allow it to warm up for at least 20 minutes.

Connecting to the Test Circuit

Two inputs are available at the probe tip to connect the probe to a circuit under test. For accurate measurements, both the + and – inputs must be connected to the test circuit. Positive voltages applied to the + input (red) relative to the – input (black) will deflect the oscilloscope trace toward the top of the screen.

To maintain the probe's high performance, exercise care when connecting the probe. Increasing the parasitic capacitance or inductance in the input paths may introduce a “ring” or slow the rise time of fast signals. Input leads that form a large loop area will pick up any radiated electromagnetic field that passes through the loop and may induce noise into the probe inputs. Because this signal will appear as a differential mode signal, the probe's common mode rejection will not remove it. This effect can be reduced by twisting the input leads together to minimize the loop area.



WARNING. To avoid electric shock or fire, maintain the input leads in good condition. The leads have a jacket wear indicator that shows through when the jacket is excessively worn. If the white “WEAR” indicator on the input leads is visible, cease use and contact Teledyne LeCroy service for repair or replacement.

High common mode rejection requires precise matching of the relative gain or attenuation in the + and – input signal paths. Mismatches in additional parasitic capacitance, inductance, delay, and a source impedance difference between the + and – signals will lower the CMRR. Therefore, it is desirable to use the same length and type of wire and connectors for both input connections. When possible, try to connect the inputs to points in the circuit with approximately the same source impedance.

The probes may be stacked on one top of another during usage to conserve space. Since

HVD3000 Series High-Voltage Differential Probes


the probe body generates heat, and the stacking reduces cooling, it is recommended that ambient temperatures not exceed 30 degrees C while stacked probes are in operation. The exceptional CMRR performance should prevent interference between probes when they are stacked, but take care to separate the probe leads during operation.




WARNING. To avoid electric shock or fire, keep the probe body and output cable away from the circuits being measured, as they cannot provide adequate protection if they come into contact with electrical sources.

Operating with an Oscilloscope

When the probe is connected to a Teledyne LeCroy oscilloscope, the displayed scale factor and measurement values will be adjusted to account for the effective gain of the probe. The probe's internal attenuation is shown on the Probe dialog, which is added to the oscilloscope's input channel dialogs when a probe is detected.

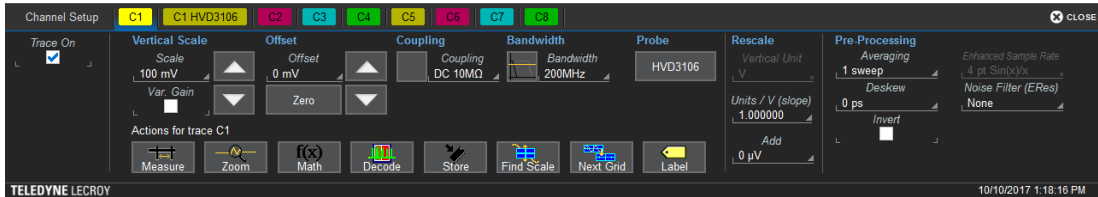

Channel setup dialog with Probe dialog behind it.

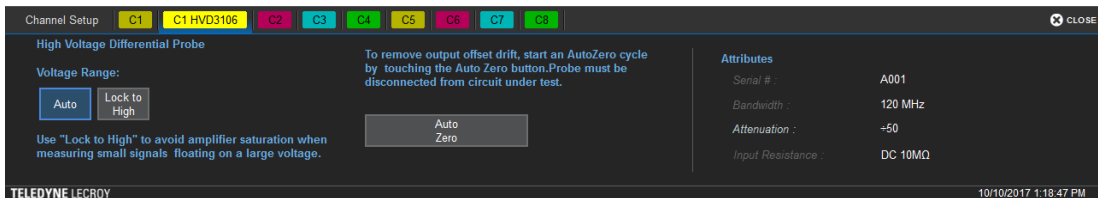

Probe dialog.

Probe Volts/Div and Attenuation

The front panel Volts/Div knob controls the oscilloscope's scale factor and the probe's internal attenuation to give full available dynamic range. Some transition of the scale factor will result in a change of attenuation.

Offset

Offset allows you to remove a DC bias voltage from the differential input signal while maintaining DC coupling. This ensures that the probe will never be overdriven while a signal is displayed on screen and prevents inaccurate measurements.

The total usable offset of the oscilloscope and probe system is a function of the oscilloscope V/div setting and offset at that V/div setting, and the probe attenuation and offset at that attenuation setting. Total maximum offset may be calculated as:

$$\text{Oscilloscope Front End V/Div} = (\text{Probe and Oscilloscope}) \text{ V/Div} \div \text{Probe_Attenuation}$$

Once the oscilloscope front end V/div value is known, it is possible to know the maximum oscilloscope offset available at this V/div setting either by referencing the oscilloscope specifications or setting the maximum offset value on the oscilloscope for that V/div setting. Maximum offset for the probe and oscilloscope combination can then be calculated as:

Max Positive Offset Available

$$\text{Max Positive Offset (Probe and Oscilloscope together)} = \text{Oscilloscope Positive Offset (at Oscilloscope Front End V/div)} * \text{Probe Attenuation} - 10V$$

Max Negative Offset Available

$$\text{Max Negative Offset (Probe and Oscilloscope together)} = \text{Oscilloscope Negative Offset (at Oscilloscope Front End V/div)} * \text{Probe Attenuation} + 10V$$

In both cases, the maximum offset available cannot exceed the following:

| | X50 | X100 | X200 | X250 | X500 | X1000 | X2000 |
|-------|------------|-------------|-------------|-------------|-------------|--------------|--------------|
| 3102A | NA | ±150 V | NA | NA | NA | ±1500 V | NA |
| 3106A | ±150 V | NA | NA | NA | ±1500 V | NA | NA |
| 3206A | ±150 V | NA | NA | NA | ±1500 V | NA | NA |
| 3220 | ±150 V | ±300 V | NA | ±750 V | ±1500 V | NA | NA |
| 3605A | NA | NA | ±600 V | NA | NA | NA | ±6000 V |

Note: The offset reported on channel descriptor boxes may deviate slightly from expected values per the formulas above. Reported probe attenuation is a "nominal" value and can deviate slightly from the actual calibrated value stored with the probe. The actual offset value uses the actual "as measured" probe attenuation value. This provides for higher DC and low frequency gain accuracy than would otherwise be possible.

AC Coupling

In general, using offset to adjust a differential DC voltage on the screen is the preferred method to measure transient signals in the presence of a larger DC voltage. The offset has limits that will cause a signal that is beyond the linear operating range of the probe to go

HVD3000 Series High-Voltage Differential Probes

off the screen, preventing measurement errors.

There are times, however, when it is convenient to use AC coupling to remove the DC component of the measured signal from the measurement. Selecting AC10MΩ uses the scope AC coupling at the probe output to remove any steady state value from the displayed voltage. The maximum linear input voltage is as follows:

| | X50 <7 V/div | X100 <7 V/div | X200 <28 V/div | X500 >7 V/div | X1000 >7 V/div | X2000 >28 V/div |
|-------|----------------------------------|-----------------------------------|------------------------------------|-----------------------------------|------------------------------------|-------------------------------------|
| 3102A | NA | 200 Vpk | NA | NA | 1750 Vpk | NA |
| 3106A | 200 Vpk | NA | NA | 2000 Vpk | NA | NA |
| 3206A | 200 Vpk | NA | NA | 2000 Vpk | NA | NA |
| 3220 | NA | NA | NA | NA | NA | NA |
| 3605A | NA | NA | 760 Vpk | NA | NA | 7600 Vpk |

Note: Because AC coupling is on the probe output, DC voltages beyond the probe's linear range will cause the amplifier to saturate and inaccurately render the displayed waveform. Do not exceed the maximum linear input value when using AC coupling.

Bandwidth Limiting

To comply with various test standards used for quantifying output noise of power supplies, the probe is capable of switching the bandwidth limit from Off (maximum bandwidth) to 20 MHz in the channel Vertical Adjust dialog.

Voltage Range

On oscilloscopes running MAUI (XstreamDSO) v.8.5.x.x and higher, there are options as to how the probe will set attenuation relative to the oscilloscope's V/div setting:


Auto will automatically raise or lower the attenuation when the V/div setting is greater or lesser than a setpoint (varies by probe model). As a result, the probe can automatically adjust attenuation to properly view the input waveform.

Lock to High locks the attenuation setting to the highest attenuation, regardless of the V/div setting. Maintaining a high attenuation will allow small signals on a larger voltage waveform to be accurately measured.

Manual (HVD3220 only) allows users to lock the attenuation setting to selected attenuation, regardless of the V/div setting. This allows choice of either better noise or accurate measurement of small signals on later waveforms.

Overload Indicator

An indication will appear in the oscilloscope message bar when the differential or common mode voltages are beyond the operating ranges of the probe. Note that the warning message below may trigger before any saturation occurs. It is designed to guarantee that the system will not fail to indicate an overload.

 **Probus Overload Detected**

Overload Indicator Thresholds

| 3102A | X1000 Attenuation | X100 Attenuation |
|-------|--|---|
| | Differential Mode: ± 1.78 kV Common Mode: ± 1.78 kV | Differential Mode: ± 158 V Common Mode: ± 1.8 kV |
| 3206A | X500 Attenuation | X50 Attenuation |
| | Differential Mode: ± 2.1 kV Common Mode: ± 2.1 kV | Differential Mode: ± 180 V Common Mode: ± 2.1 kV |
| 3220 | Any Attenuation | |
| | Differential Mode: ± 2.1 kV Common Mode: ± 2.1 kV | |
| 3605A | X2000 Attenuation | X200 Attenuation |
| | Differential Mode: ± 7.7 kV Common Mode: ± 7.7 kV | Differential Mode: ± 760 V Common Mode: ± 7.7 kV |

Auto Zero

Auto Zero corrects for DC offset drifts that naturally occur from thermal effects in the differential amplifier. For example, the DC offset drift of the HVD310xA probes is $70 \mu\text{V}/^\circ\text{C}$ (worst case) referred to the output. If the probe is set to 50x attenuation and the ambient temperature changes by 10°C , the DC offset drift could be as high as $(70 \mu\text{V}/^\circ\text{C})(50)(10^\circ\text{C}) = 35$ mV referred to the probe tip. If the signal was 1400 Vp-p in 500x attenuation mode, the DC offset drift at same ambient temperature could be as high as $(70 \mu\text{V}/^\circ\text{C})(500)(10^\circ\text{C}) = 350$ mV due to the probe tip (although any offset accuracy error from the oscilloscope itself would likely dominate the measurement).

Auto Zero is disabled when AC coupling is selected.

Auto Zero is invoked manually from the Probe dialog that appears behind the *Cn* setup dialog when the probe is connected to the oscilloscope.

Note: HVD3xxxA probes may remain connected during Auto Zero. HVD3220 probes should be disconnected.

Always perform Auto Zero after the probe has warmed up at least 20 min. If the probe is disconnected then re-connected, repeat Auto Zero. Depending on the accuracy desired and/or changes in the ambient temperature, it may be necessary to Auto Zero more often.

Maintenance

Cleaning

Clean only the exterior surfaces of the device using a soft cloth or swab dampened with water or 75% isopropyl alcohol solution. Do not use harsh chemicals or abrasive cleansers. Dry the probe and accessories thoroughly before making any voltage measurements.



CAUTION. The probes are not waterproof. Under no circumstances submerge the probe in liquid or allow moisture to penetrate it.

Calibration Interval

This probe has no adjustments. The recommended calibration interval is one year. A Performance Verification Procedure is included in this manual.

Service Strategy

HVD series probes utilize fine-pitch surface mount devices. It is, therefore, impractical to attempt repair in the field. Defective probes must be returned to a Teledyne LeCroy service facility for diagnosis and exchange.



CAUTION. Do not remove the covers. Refer all servicing to qualified personnel. A defective probe under warranty will be replaced with a factory refurbished probe.

A probe that is not under warranty can be exchanged for a factory refurbished probe for a modest fee. Replacement probes are factory repaired, inspected, and calibrated to the same standards as a new product. You must return the defective probe in order to receive credit for the probe core.

Returning a Product for Service

Contact your regional Teledyne LeCroy service center for calibration or other service. If the product cannot be serviced on location, the service center will give you a **Return Material Authorization (RMA) code** and instruct you where to ship the product. All products returned to the factory must have an RMA.

Return shipments must be prepaid. Teledyne LeCroy cannot accept COD or Collect shipments. We recommend air-freighting. Insure the item you're returning for at least the replacement cost.

1. Remove all accessories from the probe.
2. Pack the probe in its case. If possible, include all tips. Do not include the manual.

3. Pack the case in its original shipping box, or an equivalent carton with adequate padding to avoid damage in transit.
4. Mark the outside of the box with the shipping address given to you by Teledyne LeCroy; be sure to add the following:
 - ATTN: <RMA code assigned by Teledyne LeCroy>
 - FRAGILE
5. If returning a product to a different country: contact Teledyne LeCroy Service for instructions on completing your import/export documents.

Extended warranty, calibration and upgrade plans are available for purchase. Contact your Teledyne LeCroy sales representative to purchase a service plan.

Replacement Probe Accessory Kit

Replacement probe accessories can be ordered through your local sales office. High-voltage Replacement Accessories Kit PK-HV-001 includes 2 each of the following (1 Black, 1 Red):

1 kV Rated Safety
Alligator Clips

Plunger Pincer Clips

Plunger Hook Clips


Plunger Alligator Clips

Spade Terminals

2 kV Rated Alligator Clips

High-bandwidth 4 mm
Probe Adapters (2 black)
with Spring-loaded Tips (2)

6 kV Rated Alligator Clips

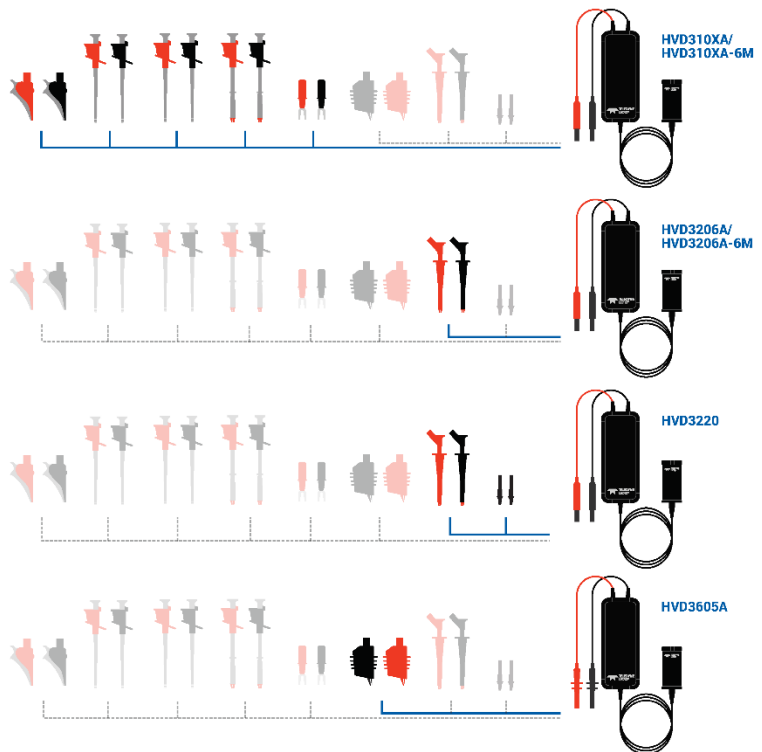

Reference

Technical Support

Registered users can contact their local Teledyne LeCroy service center at the number listed on our website.

For a complete list of offices by country, including our sales & distribution partners, visit:
teledynelecroy.com/support/contact

You can also submit Technical Support requests via the website at:
teledynelecroy.com/support/techhelp

IEC/EN 61010-031:2015 Definitions

Measurement Category III (CAT III) applies to test and measuring circuits connected to the distribution part of the building's low-voltage mains installation.

Measurement Category II (CAT II) applies to test and measuring circuits connected directly to utilization points (socket outlets and similar points) of the low-voltage mains installation.

No Rated Measurement Category applies to other circuits that are not directly connected to the mains supply.

Pollution Degree 2 refers to an operating environment where normally only dry non-conductive pollution occurs. Conductivity caused by temporary condensation should be expected.

Note: The 2015 version of the standard eliminates the Measurement Category I (CAT I) rating for test and measuring circuits that are not intended to be directly connected to the mains supply. However, this change in rating designation does not reduce the measurement capability or the level of protection offered by the new probe design when compared to the probes that were originally certified per the 2008 version of the standard.

Certifications

Teledyne LeCroy certifies compliance to the following standards as of the time of publication. Please see the EC Declaration of Conformity certificate shipped with your product for current certifications.

EMC Compliance

EC DECLARATION OF CONFORMITY - EMC

The probe meets the intent of EC Directive 2014/30/EU for Electromagnetic Compatibility. Compliance was demonstrated to the following specifications as listed in the Official Journal of the European Communities:

EN 61326-1:2013, EMC requirements for electrical equipment for measurement, control, and laboratory use.^{1, 2, 3}

1. This product is intended for use in nonresidential areas only. Use in residential areas may cause EM interference.
2. Emissions exceeding the levels required by this standard may occur when product is connected to a test object.
3. To ensure compliance with the applicable EMC standards, use high quality shielded interface cables.

European Contact:*

Teledyne GmbH, European Division
Im Breitenspiel 11c
D-69126 Heidelberg Germany
Tel: + 49 6221 82700

AUSTRALIA & NEW ZEALAND DECLARATION OF CONFORMITY—EMC

The probe complies with the EMC provision of the Radio Communications Act per the following standards, in accordance with requirements imposed by Australian Communication and Media Authority (ACMA):

AS/NZS CISPR 11:2011 Radiated and Conducted Emissions, Group 1, Class A.

Australia / New Zealand Contacts:*

RS Components Pty Ltd.
Suite 326 The Parade West
Kent Town, South Australia 5067

RS Components Ltd.
Unit 30 & 31 Warehouse World
761 Great South Road
Penrose, Auckland, New Zealand

* Visit teledynelecroy.com/support/contact for the latest contact information.

Safety Compliance

EC DECLARATION OF CONFORMITY - LOW VOLTAGE

The probe meets the intent of EC Directive 2014/35/EU for Product Safety. Compliance was demonstrated to the following specifications as listed in the Official Journal of the European Communities:

IEC/EN 61010-031:2015 Safety requirements for electrical equipment for measurement, control, and laboratory use – Part 031: Safety requirements for hand-held probe assemblies for electrical measurement and test.

U.S. NATIONALLY RECOGNIZED AGENCY CERTIFICATION

The probe has been certified by Underwriters Laboratories (UL) to conform to the following safety standard and bears UL Listing Mark:

UL 61010-031-2015 (Second Edition) - Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use - Part 031: Safety Requirements for Hand-Held Probe Assemblies for Electrical Measurement and Test.

CANADIAN CERTIFICATION

The probe has been certified by Underwriters Laboratories (UL) to conform to the following safety standard and bears cUL Listing Mark:

CAN/CSA-C22.2 No. 61010-031-15 - Safety Requirements for Electrical Equipment for Measurement, Control, and Laboratory Use - Part 031: Safety Requirements for Hand-Held Probe Assemblies for Electrical Measurement and Test.

Note: The HVD3220 probe does not have UL or cUL certification.

Environmental Compliance

END-OF-LIFE HANDLING



The product is marked with this symbol to indicate that it complies with the applicable European Union requirements to Directives 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE).

■ The product is subject to disposal and recycling regulations that vary by country and region. Many countries prohibit the disposal of waste electronic equipment in standard waste receptacles. For more information about proper disposal and recycling of your Teledyne LeCroy product, please visit teledynelecroy.com/recycle.

RESTRICTION OF HAZARDOUS SUBSTANCES (RoHS)

The product and its accessories conform to the 2011/65/EU RoHS2 Directive, inclusive of any further modifications to said Directive.

Common Mode Rejection Ratio

The ideal differential probe/amplifier would sense and amplify only the differential mode voltage component and reject the entire common mode voltage component. Real differential amplifiers are not perfect, and a small portion of the common mode voltage component appears at the output.

Common Mode Rejection Ratio (CMRR) is the measure of how much the amplifier rejects the common mode voltage component. CMRR is equal to the differential mode gain (or normal gain) divided by the common mode gain. Common mode gain is equal to the output voltage divided by the input voltage when both inputs are driven by only the common mode signal. CMRR can be expressed as a ratio (e.g., 10,000:1) or implicitly in dB (e.g., 80 dB). Higher numbers indicate greater rejection (better performance).

The first order term determining the CMRR is the relative gain matching between the + and – input paths. Obtain high CMRR values by precisely matching the input attenuators in a differential amplifier. The matching includes the DC attenuation and the capacitance which determines the AC attenuation. As the frequency of the common mode component increases, the effects of stray parasitic capacitance and inductance in determining the AC component become more pronounced. The CMRR becomes smaller as the frequency increases. Therefore, the CMRR is usually specified in a graph of CMRR versus common mode frequency.

The common mode frequency in these graphs is assumed to be sinusoidal. In real life applications, the common mode signal is seldom a pure sine wave. Signals with pulse wave shapes contain frequency components much higher than the repetition rate may suggest. This makes it very difficult to predict actual performance in the application for CMRR-versus-frequency graphs. The practical application of these graphs is to compare the relative common mode rejection performance between different probes and amplifiers.

Differential Mode and Common Mode

Differential probes sense the voltage difference that appears between the + and – inputs. This is referred to as the Differential or Normal Mode voltage. The voltage component that is referenced to earth and is identical on both inputs is rejected by the amplifier. This is referred to as the Common Mode voltage and can be expressed as:

$$V_{CM} = \frac{V_{+input} + V_{-input}}{2}$$

Differential Mode Range and Common Mode Range

Differential Mode range is the maximum signal that can be applied between the + and - inputs without overloading the amplifier, which otherwise would result in clipping or distorting of the waveform measured by the oscilloscope.

The Common Mode Range is the maximum voltage with respect to earth ground that can be applied to either input. Exceeding the common mode range can result in unpredictable measurements. Because the Common Mode signal is normally rejected, and not displayed on the oscilloscope, be careful to avoid accidentally exceeding the common mode range.

932762-00 Rev A
January, 2021



700 Chestnut Ridge Road
Chestnut Ridge, NY 10977
USA

teledynelecroy.com