

METRA HIT 27M/I, H+E CAR

3-349-208-02


5/8.12

Sicherheitshinweise – Safety Instructions – Instructions de sécurité




Siehe ausführliche Bedienungsanleitung 3-349-207-02 !
See Standard Operating Instructions 3-349-207-02 !
Voir mode d'emploi standard 3-349-207-02 !


Ein-/Ausschalten – Switching on/off – Allumage/Arrêt

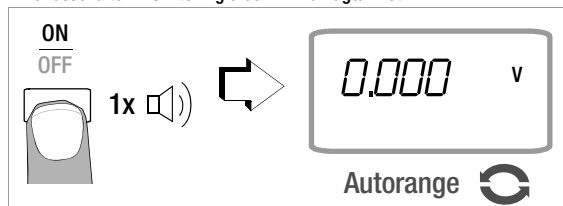

Batterietest – Battery Test – Test de la pile

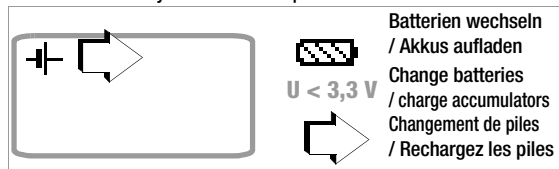

Wahl der Messfunktion – Select Measuring Function – Sélection de la fonction de mesure

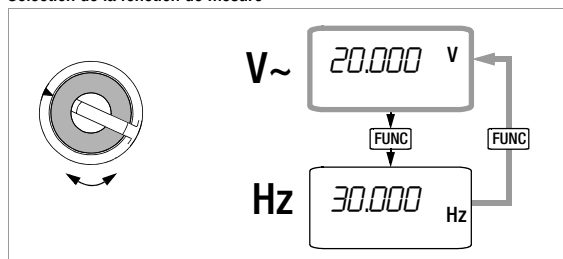

Messbereichswahl / Measuring Range Selection / Sélection de la gamme de mesure:

automatisch → manuell – automatic → manual – automatique → manuelle
! MAN ! = schnelle Messung / fast measurement / mesures vites

V 3 V → 30 V 00.000
30 V → 300 V 000.00
300 V → 600 V 000.00

Hz 300 Hz → 3 kHz 0.0000

Ω 300 Ω → 3 kΩ 0.0000
3 kΩ → 30 kΩ 00.000
30 kΩ → 300 kΩ 000.00
300 kΩ → 3 MΩ 0.0000
3 MΩ → 30 MΩ 000.00

mΩ 30 mΩ → 300 mΩ
300 mΩ → 3 Ω
3 Ω → 30 Ω

mΩ@1A 3 mΩ → 30 mΩ 00.000
30 mΩ → 300 mΩ 000.00

manuell → automatisch – manual → automatic – manuelle → automatique

MAN
AUTO


kurz short
brief

MAN
AUTO


oder
or
ou

lang
long
long (1 s)


Messeingänge – Measuring Inputs – Entrées de mesure

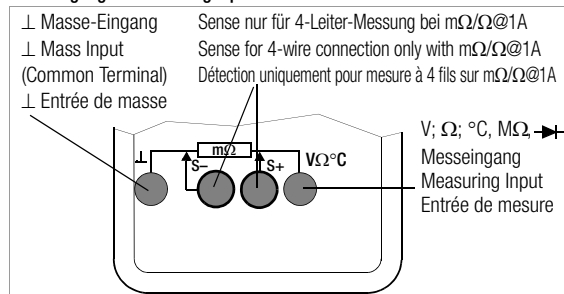


Messwertspeicherung – Storage of Measured Values (DATA-Hold/-Compare)
 – Mémorisation des valeurs de mesure

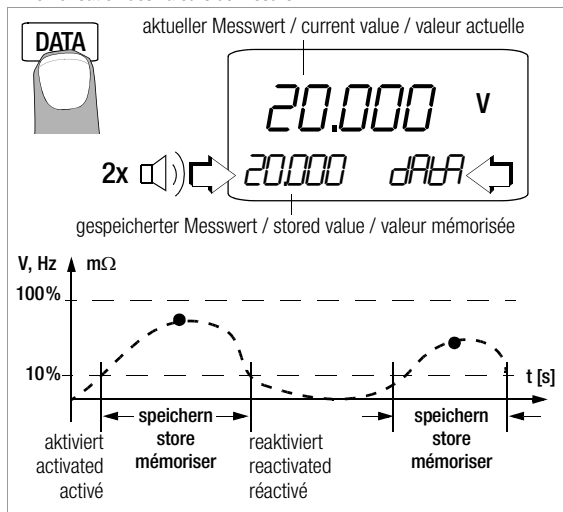


NullpunktEinstellung – Zero balancing – Réglage du zéro

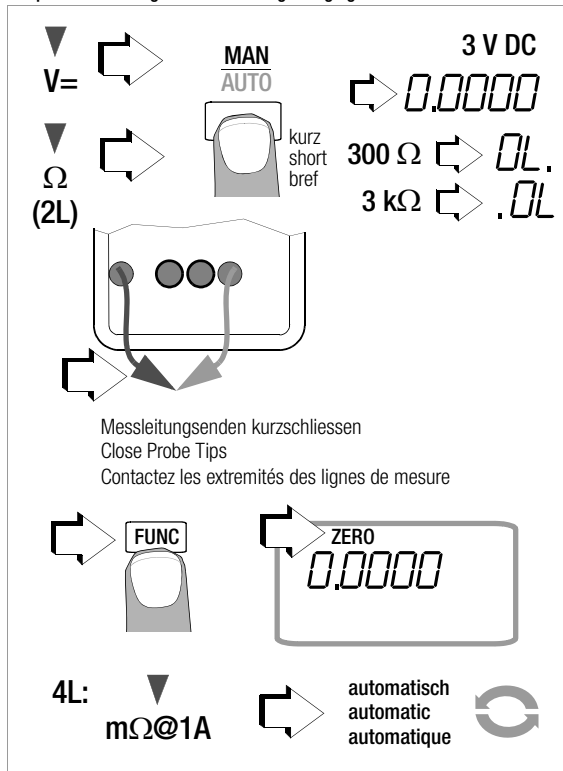

Spannungsmessung – Voltage Measurement – Mesure de la tension
 Frequenzmessung – Frequency Measurement – Mesure de la fréquence

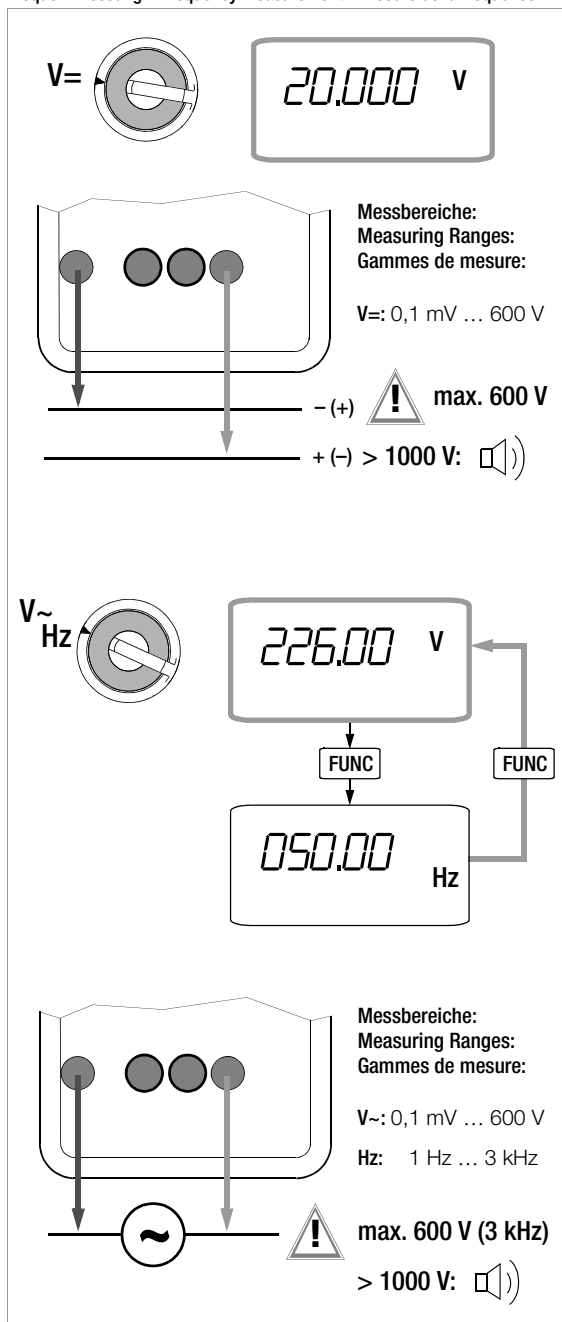

Widerstandsmessung – Resistance Measurement – Mesure de la résistance
 Diodentest – Diode Testing – Test de diodes
 Durchgangsprüfung – Continuity Testing – Test de continuité

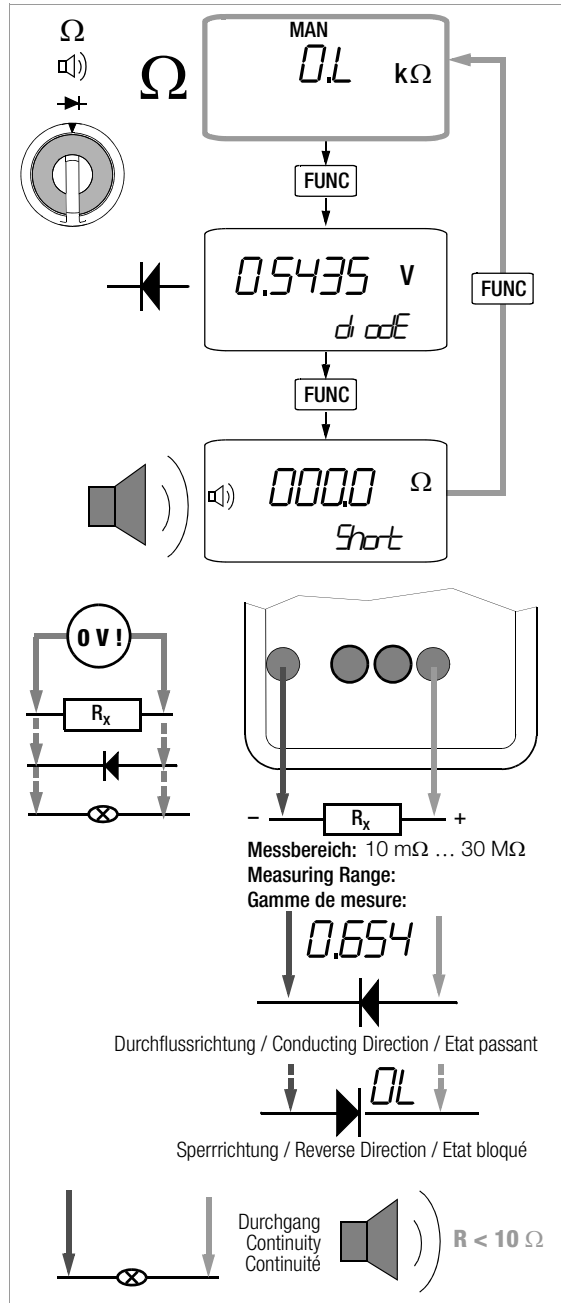

Milliohm-messung – Milliohm Measurement – Mesure de résistance en milliohms

