

04

/Barcode Scanner Configuration

Botron Company Inc.



CONFIGURE YOUR BARCODE SCANNER

The following steps will set up the ELITE for non-continuous laser emission.

Step 1. Print this document.

Step 2. Fold barcode sheet along dotted line.






Step 3. Power on your ELITE Tester.

Step 4. Scan barcodes in ascending order.

4.1 Continuous Blink Mode Off: 1-8 plus 10

4.2 Continuous Blink Mode On: 1-10

Note: You should hear a beep with each successful scan and three beeps when scanning both barcodes 1 and 10. If a barcode is skipped or scanned twice, cycle power and begin again.

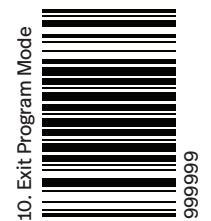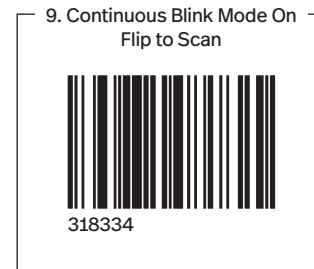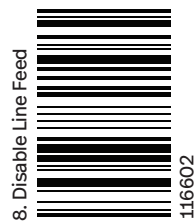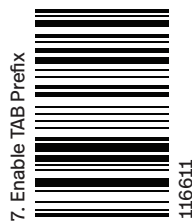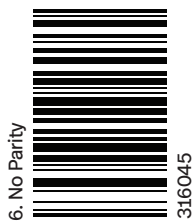

Continuous Blink Mode Off

Fold Here

