

T18

SERIES TIPS



T18 SERIES TIPS FOR USE WITH 907-ESD, 913, FX-600, FX-8801, FX-8802 & FX-8803 HANDPIECES

UNIT: mm(inch)

T18-B (Conical)	T18-SB (Conical)	T18-BL (Conical)	T18-BR02 (Bent Conical)
T18-C05 (Bevel)	T18-C08 (Bevel)	T18-C1 & T18-CF1 (Bevel)	T18-CF15 (Bevel)
T18-C2 & T18-CF2 (Bevel)	T18-CFS25 (Bevel)	T18-C3 & T18-CF3 (Bevel)	T18-C4 & T18-CF4 (Bevel)
T18-C5 (Bevel)	T18-K (Knife)	T18-D08 (Chisel)	T18-D12 (Chisel)
T18-D16 (Chisel)	T18-D24 (Chisel)	T18-D32 (Chisel)	T18-DL12 (Chisel)
T18-DL2 (Chisel)	T18-DL32 (Chisel)	T18-S3 (Chisel)	T18-S4 (Chisel)
T18-S6 (Chisel)	T18-S7 (Chisel)	T18-S9 (Chisel)	T18-I (Conical Sharp)
T18-IS (Conical Sharp)	<p>For more T18 Series information Scan QR Code.</p>		

SOLDERING