

T32 Series Tips

<p>T32-B Unit: mm (in)</p>	<p>T32-BC1 T32-BCF1 Unit: mm (in)</p>	<p>T32-BC2 T32-BCF2 Unit: mm (in)</p>
<p>T32-BC3 T32-BCF3 Unit: mm (in)</p>	<p>T32-BC4 T32-BCF4 Unit: mm (in)</p>	<p>T32-BCMT3 Unit: mm (in)</p>
<p>T32-BCT3 Unit: mm (in)</p>	<p>T32-C1 Unit: mm (in)</p>	<p>T32-D08 Unit: mm (in)</p>
<p>T32-D12 Unit: mm (in)</p>	<p>T32-D16 Unit: mm (in)</p>	<p>T32-D24 Unit: mm (in)</p>
<p>T32-D32 Unit: mm (in)</p>	<p>T32-D52 Unit: mm (in)</p>	<p>T32-I Unit: mm (in)</p>
<p>T32-ILS Unit: mm (in)</p>	<p>T32-J02 Unit: mm (in)</p>	<p>T32-K Unit: mm (in)</p>
<p>T32-KF Unit: mm (in)</p>	<p>T32-KU Unit: mm (in)</p>	

For more information, please visit www.HakkoUSA.com or call 1-800-88-HAKKO (42556)