

# JBC

[www.jbctools.com](http://www.jbctools.com)

## INSTRUCTION MANUAL



## HDE

Heavy Duty Control Unit

This manual corresponds to the following references:


**HDE-9UD** (100V)

**HDE-1UD** (120V)

**HDE-2UD** (230V)

## Packing List

The following items are included:

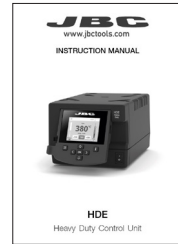


**HDE Heavy Duty Control Unit** ..... 1 unit

**Power Cord** ..... 1 unit  
 Ref. 0024077 (100V)  
 0023717 (120V)  
 0024080 (230V)

**Manual** ..... 1 unit  
 Ref. 0028871


## Features

HDE ensures high efficiency and increased performance on soldering applications that require large amounts of heat.

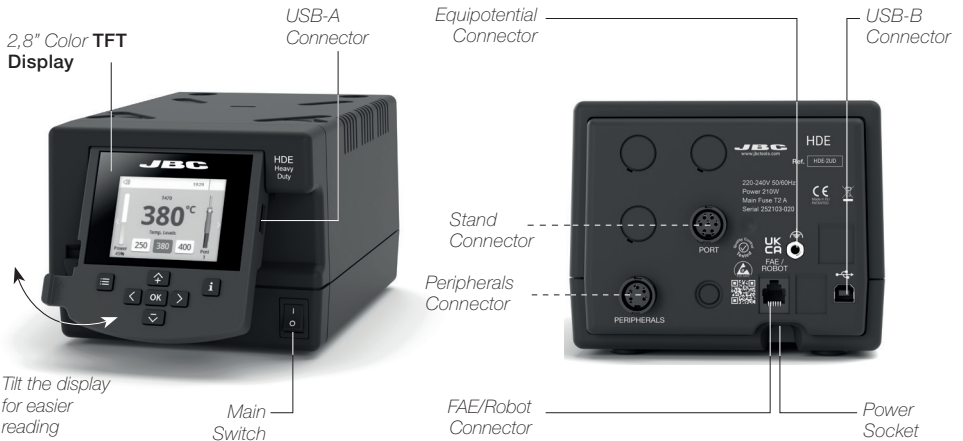

## Connection Example - Heavy Duty Handle


### HDE Heavy Duty Control Unit

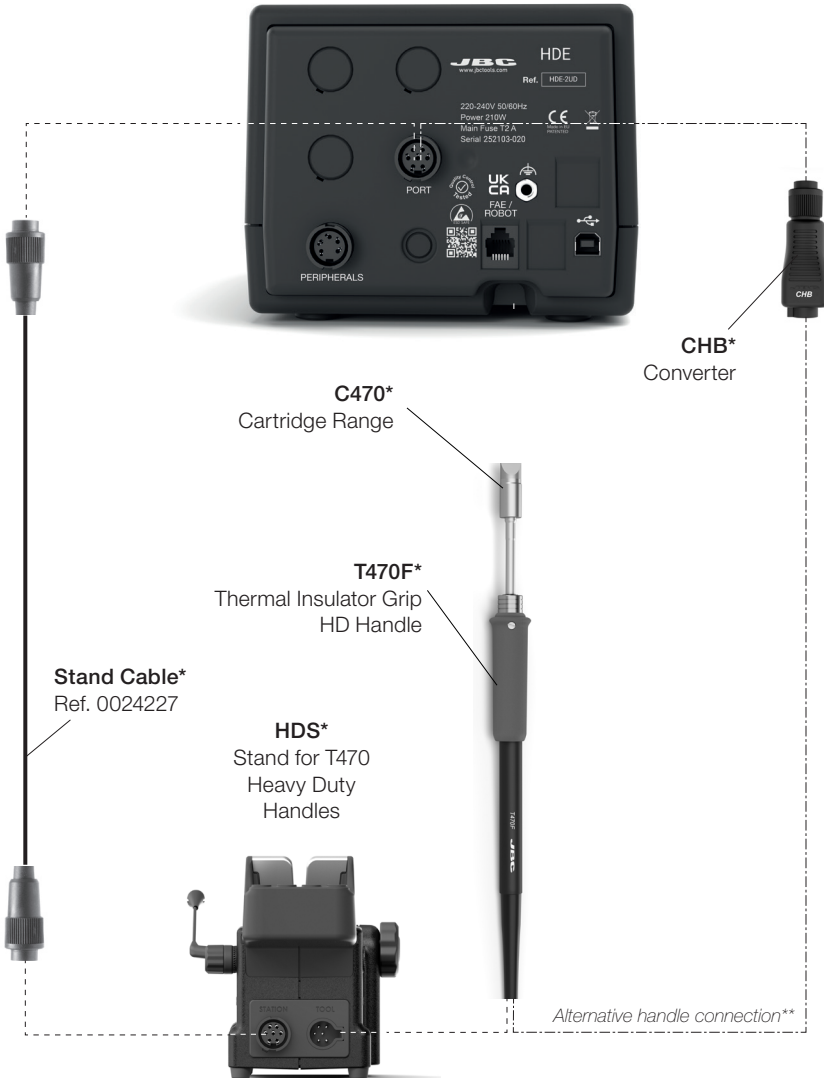

\* Not included, sold separately.

\*\* To save space, handle can be directly connected to the control units with the CHB Converter.

# Connection Example - Nitrogen HD Handle

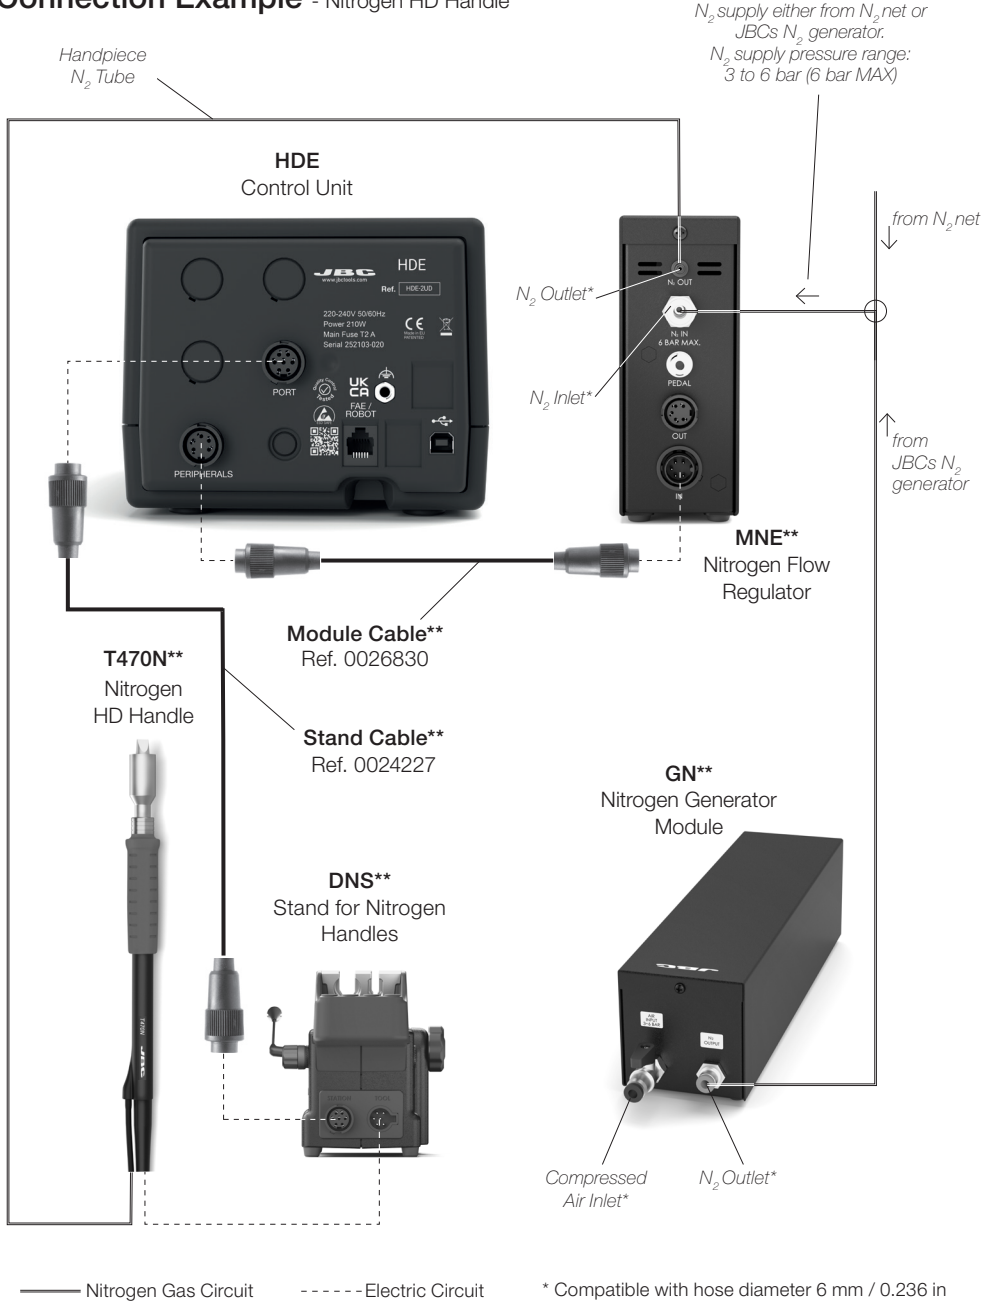

—— Nitrogen Gas Circuit      - - - - Electric Circuit

\* Compatible with hose diameter 6 mm / 0.236 in

\*\* Not included, sold separately

## Connecting to FAE

HDE can be connected to FAE1 and FAE2 fume extractors. To do so, the HDE control unit must be updated with program version 8886784 (or later versions), which can be downloaded from JBC's website at <https://www.jbctools.com/software.html>.

Once the station is updated, connect it to the fume extractor with the RJ12 cable, provided with FAE1 and FAE2. Use the "FAE/Robot" connector on the control unit and any "Station" connector on the fume extractors.

The setting of the fume extractor must be done from the FAE's own interface.




**HDE**  
Control Unit

**RJ12 Cable**  
Ref. 0019751  
*Supplied with FAE1/FAE2*

either



FAE1 Connectors

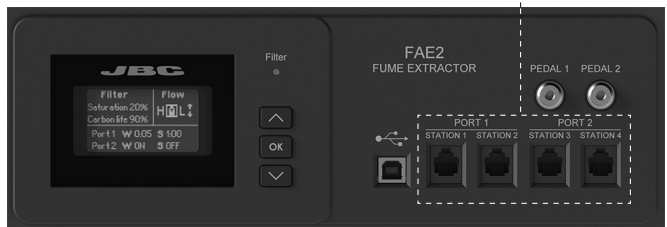

FAE2 Connectors

# Compatibility

Choose the equipment that best suits your soldering or desoldering needs.


Control Unit	Tool	Stand	Cartridge Range	MNE	P-005
HDE	T470	HDS	C470		
	T470S				
	T470Z				
	T470F				
	HT470*	HDTS			
	T470N	DNS		●	●

\* It works with **two HDE Control Units**.

## HDE Work Screen

HDE offers an intuitive user interface which provides quick access to station parameters.

**Default PIN: 0105**

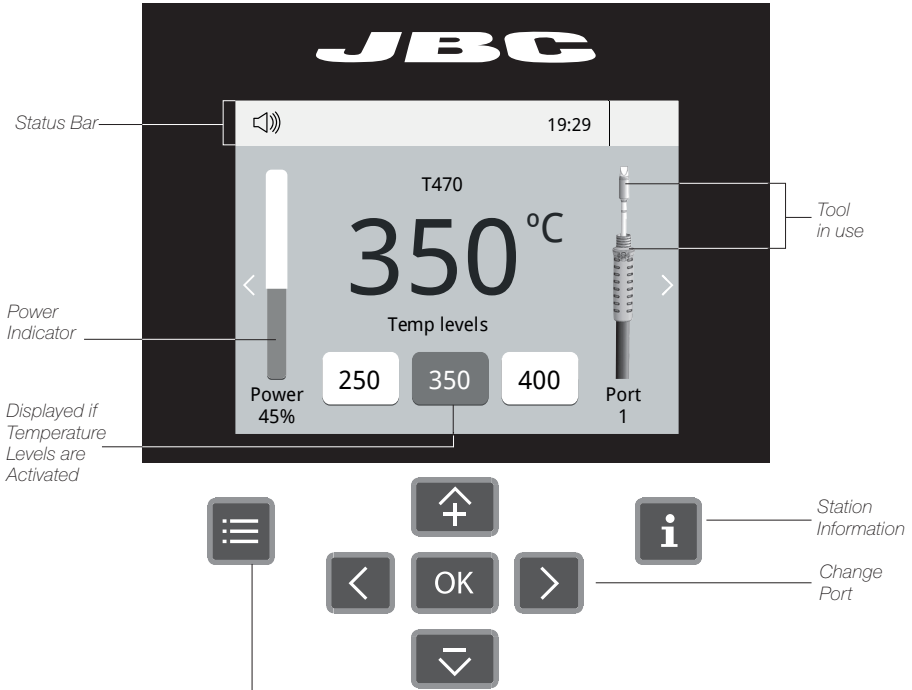


### Menu Options



Set the station parameters

 **Station**

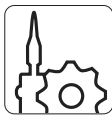

Set the tool parameters

**Tools**



Display the hours worked in each cycle

**Counters**



It is possible to choose the language from a list

**Language**



Restore station parameters to default values

**Reset**

### Troubleshooting

Station troubleshooting available on the product page at [www.jbctools.com](http://www.jbctools.com)

# Advanced Functionalities



Graphics

It provides detailed graphics of tip temperature and power delivery in real time during solder joint formation for analysis purposes. This helps you decide how to adjust your process or which tip to use to obtain the best quality soldering.



Profiles

Designed to avoid thermal shock when soldering Ceramic Chip components like MLCC, this new and unique feature allows controlling the heating rate to gradually increase the temperature of the component through all the phases of the soldering process. Up to 25 fully configurable soldering profiles can be stored.



Files

### Export graphics


Insert a USB flash drive into the USB-A connector to save your soldering process in csv format.



Update

### Station update

Download the JBC Update File from [www.jbctools.com/software.html](http://www.jbctools.com/software.html) Insert the USB flash drive with the file downloaded to the station.

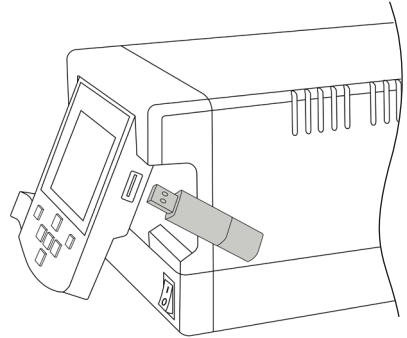

# System Notifications

The following icons will be displayed on the screen's status bar.



USB flash drive is connected.



Station software update. Press INFO to start the process.



Station is controlled by a PC.



Warning. Press INFO for failure description.



Station is controlled by a robot downloaded to the station.




Error. Press INFO for failure description, the type of error and how to proceed.




## Peripheral Set Up

1. After connecting the module, enter the Peripherals Menu and select the port which you want to join with the module.
2. Select the module from the list of peripheral connections. Remember your first connection is denoted as "a", the second being "b", etc. (e.g. MNE\_a, MNE\_b, ...).
3. Press Menu or Back to save changes.

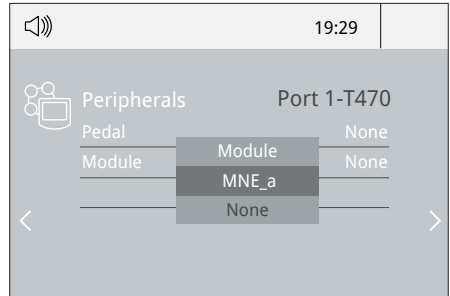


## Pedal Set Up

1. Enter the **Peripherals** Menu and **select the port** which you want to join to the pedal.

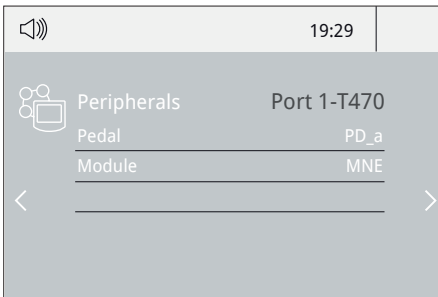


2. Select the pedal from the list (*Note that your first connection is denoted as "a", the second being "b", etc. (e.g. PD\_a, PD\_b,...).*)

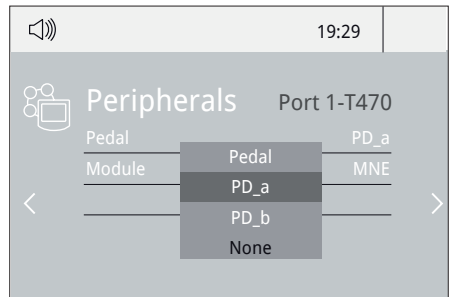

3. Set the pedal function according to your work needs:

Select how the pedal acts: as **Sleep**, **Extractor** (hibernation) or as a **module** switch.

Select the activating mode of the pedal (**pressed/released**)

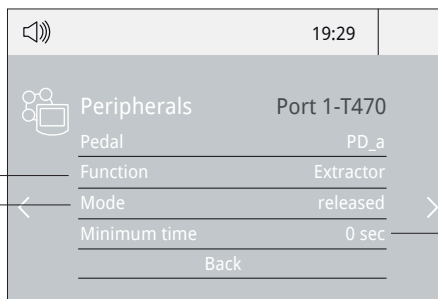

Set the duration of the activation time when pressing the pedal once\*. For continuous functioning keep the pedal pressed.


\*NB: The same can be applied inversely when continually pressing the pedal and releasing to activate.

# Operation

## JBC's Most Efficient Soldering System


Our revolutionary technology is able to recover tip temperature extremely quickly. It means the user can work at a lower temperature and improve the soldering quality. The tip temperature is further reduced thanks to the Sleep and Hibernation modes which increase up to 5 times the life of the tip.

### 1. Work

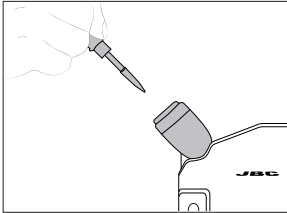


When the tool is lifted from the stand the tip will heat up to the selected Work temperature.

### 2. Sleep

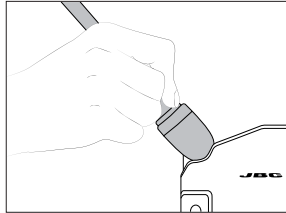


When the tool is in the stand, the temperature falls to the preset Sleep temperature.

### 3. Hibernation

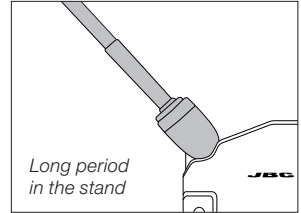


After longer periods of inactivity, the power is cut off and the tool cools down to room temperature.

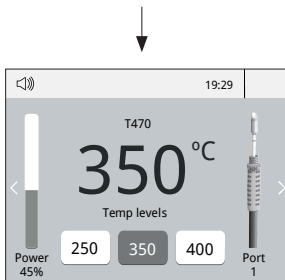

*Tool Settings:*  
· Work Temp.


Change Work temperature from 90 to 450 °C.

⬆️ or ⬆️ steps of  $\pm 5$  °C / °F

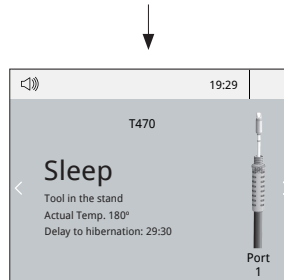

*Tool Settings:*  
· Sleep


Change Sleep temperature and set Sleep delay from 0 to 9 min or no Sleep.

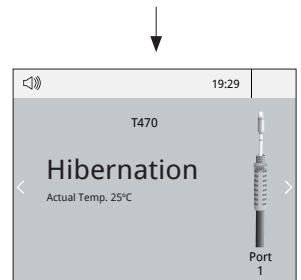

*Tool Settings:*  
· Hibernation

Change Hibernation delay from 0 to 60 min or no Hibernation.

*Tool Settings:*  
· Temp. Levels

Press , select *Tool Settings* and activate the *Temp. Levels* option.



⬆️ or ⬆️ steps of  $\pm 5$  °C / °F.

## Maintenance

Before carrying out maintenance or storage, always allow the equipment to cool.

- Clean the station screen with a glass cleaner or a damp cloth.
- Use a damp cloth to clean the casing and the tool. Alcohol can only be used to clean the metal parts.
- Periodically check that the metal parts of the tool and stand are clean so that the station can detect the tool status.
- Maintain tip surface clean and tinned prior to storage in order to avoid tip oxidation. Rusty and dirty surfaces reduce heat transfer to the solder joint.
- Periodically check all cables and tubes.
- Replace a blown fuse as follows:

*Clean periodically*

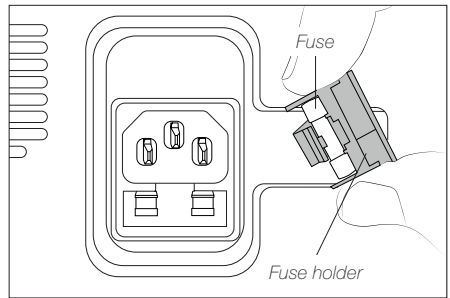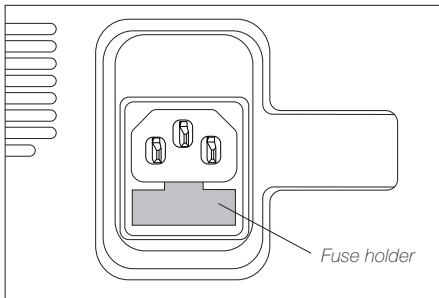

**1.** Pull off the fuse holder and remove the fuse. If necessary use a tool to lever it off.

**2.** Press the new fuse into the fuse holder and replace it in the station.

- Replace any defective or damaged pieces. Use original JBC spare parts only.
- Repairs should only be performed by a JBC authorized technical service.

## Safety



**It is imperative to follow safety guidelines to prevent electric shock, injury, fire or explosion.**

- Do not use the units for any purpose other than soldering or rework. Incorrect use may cause a fire.
- The power cord must be plugged into approved bases. Be sure that it is properly grounded before use. When unplugging it, hold the plug, not the wire.
- Do not work on electrically live parts.
- The tool should be placed in the stand when not in use in order to activate the sleep mode. The soldering tip or nozzle, the metal part of the tool and the stand may still be hot even when the station is turned off. Handle with care, including when adjusting the stand position.
- Do not leave the appliance unattended when it is on.
- Do not cover the ventilation grills. Heat can cause inflammable products to ignite.
- Avoid flux coming into contact with skin or eyes to prevent irritation.
- Be careful with the fumes produced when soldering.
- Keep your workplace clean and tidy. Wear appropriate protection glasses and gloves when working to avoid personal harm.
- Utmost care must be taken with liquid tin waste which can cause burns.
- This appliance can be used by children over the age of eight and also people with reduced physical, sensory or mental capabilities or lack of experience provided that they have been given adequate supervision or instruction concerning the use of the appliance and understand the hazards involved. Children must not play with the appliance.
- Maintenance must not be carried out by children unless supervised.



[www.jbctools.com](http://www.jbctools.com)

**Notes**

A series of horizontal lines spanning the width of the page, intended for handwritten notes.

## Notes

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

---

## Specifications

### **HDE**

#### **Heavy Duty Control Unit**

Ref. **HDE-9UD** 100V 50/60Hz. Input fuse: 4A. Output: 42V.

Ref. **HDE-1UD** 120V 50/60Hz. Input fuse: 4A. Output: 42V.

Ref. **HDE-2UD** 230V 50/60Hz. Input fuse: 2A. Output: 42V.

- Nominal Power: 300W
- Peak Power (Tool): 250W
- Selectable Temperature: 90 - 500 °C / 190 - 932 °F
- Idle Temp. Stability (still air):  $\pm 1.5$  °C /  $\pm 3$  °F (Meets and exceeds IPC J-STD-001F)
- Temp accuracy:  $\pm 3\%$  (using reference cartridge)
- Temp adjustment:  $\pm 50$  °C /  $\pm 90$  °F Through station menu settings
- Tip to Ground Voltage/Resistance: Meets and exceeds  
ANSI/ESD S20.20-2014 IPC J-STD-001F
- Ambient Operating Temp.: 10 - 50 °C / 50 - 122 °F
- Connections: USB-A / USB-B / Peripherals connectors  
RJ12 connector
- Control Unit Dimensions: 232 x 148 x 120 mm / 9.13 x 5.83 x 4.72 in
- Total Net Weight: 2.63 kg / 5.79 lb
  
- Total Package Dimensions/Weight: 258 x 328 x 208 mm / 3.72 kg  
(L x W x H) 10.16 x 12.91 x 8.19 in / 8.21 lb

Complies with CE standards.

ESD safe.

# JBC

---

## Warranty

JBC's 2 year warranty covers this equipment against all manufacturing defects, including the replacement of defective parts and labour.

Warranty does not cover product wear or misuse.

In order for the warranty to be valid, equipment must be returned, postage paid, to the dealer where it was purchased.

**Get 1 extra year JBC warranty by registering here: <https://www.jbctools.com/productregistration/> within 30 days of purchase.**

If you register, you will receive e-mail notifications about new software updates for your registered product.

---



This product should not be thrown in the garbage.

In accordance with the European directive 2012/19/EU, electronic equipment at the end of its life must be collected and returned to an authorized recycling facility.

CE EAC UK  
CA

[www.jbctools.com](http://www.jbctools.com)

0028871-100624