# U8903B Performance Audio Analyzer

## Notices

### Copyright Notice

© Keysight Technologies 2014–2024
No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

#### Trademark

Bluetooth and the Bluetooth logos are trademarks owned by Bluetooth SIG, Inc., U.S.A. and licensed to Keysight Technologies.

Manual Part Number U8903-90045

Edition

Edition 9, January 2024

Printed in:

Printed in Malaysia

### Published by:

Keysight Technologies Bayan Lepas Free Industrial Zone, 11900 Penang, Malaysia

## Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

### Declaration of Conformity

Declarations of Conformity for this product and for other Keysight products may be downloaded from the Web. Go to <a href="http://www.keysight.com/go/conformity">http://www.keysight.com/go/conformity</a>. You can then search by product number to find the latest Declaration of Conformity.

### U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at http://www.keysight.com/ find/sweula. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinguish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

### Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DIS-CLAIMS ALL WARRANTIES. EITHER EXPRESS OR IMPLIED, WITH REGARD TO THIS MANUAL AND ANY INFORMA-TION CONTAINED HEREIN, INCLUD-ING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MER-CHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSE-QUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR OF ANY INFORMATION CON-TAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WAR-RANTY TERMS COVERING THE MATE-RIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT SHALL CONTROL.

Safety Information

### **CAUTION**

A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

### WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

# Safety Symbols

The following symbols on the instrument and in the documentation indicate precautions which must be taken to maintain safe operation of the instrument.

	Direct current (DC)	$\sim$	Alternating current (AC)
0	Off (mains supply)		On (mains supply)
A	Caution, risk of electric shock	$\triangle$	Caution, risk of danger (refer to this manual for specific Warning or Caution information)
=	Earth (ground) terminal	7	Frame or chassis (ground) terminal
	Protective earth (ground) terminal		Equipment protected throughout by double insulation or reinforced insulation

## Safety Considerations

Read the information below before using this instrument.

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards for design, manufacture, and intended use of the instrument. Keysight Technologies assumes no liability for the customer's failure to comply with these requirements.

### WARNING

- Do not use the device if it is damaged. Before you use the device, inspect the casing.
   Look for cracks or missing plastic. Do not operate the device around explosive gas, vapor, or dust.
- Always use the device with the cables provided.
- Observe all markings on the device before establishing any connection.
- Turn off the device and application system power before connecting to the I/O terminals.
- When servicing the device, use only the specified replacement parts.
- Do not operate the device with the cover removed or loosened.
- Use only the power adapter provided by the manufacturer to avoid any unexpected hazards.
- This equipment is under measurement category as below:
   DO NOT CONNECT THE CABLE TO MAINS.



Maximum working voltage: 200 Vp for altitude up to 3000 m Maximum transient voltage: 1210 V

- Do not measure more than the rated voltage (as marked on the device).

### **CAUTION**

- If the device is used in a manner not specified by the manufacturer, the device protection may be impaired.
- Always use dry cloth to clean the device. Do not use ethyl alcohol or any other volatile liquid to clean the device.
- Clean the case with a soft, lint-free, slightly dampened cloth. Do not use detergent, volatile liquids, or chemical solvents.
- Do not permit any blockage of the ventilation holes of the device.

## **Environmental Conditions**

The U8903B is designed for indoor use and in an area with low condensation. The table below shows the general environmental requirements for this instrument.

Environmental condition	Requirement
	Operating condition
Temperature	- 0 °C to 55 °C
Temperature	Storage condition
	40 °C to 70 °C
	Operating condition
	-~95% RH up to 40 °C, decreases linearly to 45% RH at 55 °C
Humidity	(non-condensing) <sup>[a]</sup>
	Storage condition
	<ul> <li>Up to 95% RH at 40 °C (non-condensing)</li> </ul>
Altitude	Up to 3000 m
Pollution degree	2
Installation category	II
Measurement category	CAT (none) 200 Vpk max
Overvoltage protection	II

<sup>[</sup>a] From 40 °C to 55 °C, the maximum % Relative Humidity follows the line of constant dew point.

## WARNING

DO NOT OPERATE IN AN EXPLOSIVE ATMOSPHERE OR WET ENVIRONMENTS Do not operate the instrument around flammable gases or fumes, vapor, or wet environments.

## Regulatory Information

The U8903B complies with the following safety and Electromagnetic Compatibility (EMC) standard:

## Safety compliance

- IEC 61010-1/EN 61010-1
- Canada: CAN/CSA-C22.2 No. 61010-1-12
- USA: ANSI/UL Std. No. 61010-1

## EMC compliance

- IEC 61326-1/EN61326-1
- Canada: ICES/NMB-001
- Australia/New Zealand: AS/NZS CISPR11

NOTE

Refer to Declaration of Conformity for current revisions. Go to <a href="http://www.keysight.com/go/conformity">http://www.keysight.com/go/conformity</a> for more information.

# Regulatory Markings

ICES/NMB-001 ISM GRP 1-A	The CE mark is a registered trademark of the European Community. This CE mark shows that the product complies with all the relevant European Legal Directives.  ICES/NMB-001 indicates that this ISM device complies with the Canadian ICES-001.  Cet appareil ISM est conforme a la norme NMB-001 du Canada.	© ® US	The CSA mark is a registered trademark of the Canadian Standards Association.
A	This instrument complies with the WEEE Directive (2002/96/EC) marking requirement. This affixed product label indicates that you must not discard this electrical or electronic product in domestic household waste.		The RCM mark is a registered trademark of the Australian Communications and Media Authority.
	This symbol is a South Korean Class A EMC Declaration. This is a Class A instrument suitable for professional use and in electromagnetic environment outside of the home.	40)	This symbol indicates the time period during which no hazardous or toxic substance elements are expected to leak or deteriorate during normal use. Forty years is the expected useful life of the product.

# Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/FC

This instrument complies with the WEEE Directive (2002/96/EC) marking requirement. This affixed product label indicates that you must not discard this electrical or electronic product in domestic household waste.

### Product category:

With reference to the equipment types in the WEEE directive Annex 1, this instrument is classified as a "Monitoring and Control Instrument" product.

The affixed product label is as shown below.



Do not dispose in domestic household waste.

To return this unwanted instrument, contact your nearest Keysight Service Center, or visit <a href="https://www.keysight.com/environment/product">www.keysight.com/environment/product</a> for more information.

# Sales and Technical Support

To contact Keysight for sales and technical support, refer to the support links on the following Keysight websites:

- www.keysight.com/find/U8903B (product-specific information and support, software and documentation updates)
- www.keysight.com/find/assist
   (worldwide contact information for repair and service)

# Table of Contents

	Safety Symbols
	Safety Considerations4
	Environmental Conditions5
	Regulatory Information
	Safety compliance
	Regulatory Markings
	Waste Electrical and Electronic Equipment (WEEE) Directive 2002/96/EC8
	Product category:8
	Sales and Technical Support8
1	Getting Started
	Introduction
	LXI Standard 1.4 Compliant Audio Analyzer
	Installation and Configuration
	Initial inspection
	Ventilation
	Rack mounting
	Optional Accessories
	U8903B Options
	Product at a Glance
	Front panel
	Rear panel
	Getting Started
	Power on the U8903B       44         Preset the U8903B       44         Access the help mode       45         Update the U8903B       46         Perform self-test       48         Add or remove U8903B options       49
2	Operation and Features
	Test Capabilities
	U8903B Block Diagram

	Analog audio interface	
	Digital audio interface	
	Bluetooth audio interface Bluetooth audio connection examples	
	Navigation and CHANNEL/DATA Panels	
	Menu Key	
	Standard View	
	Test Sequence Application (Test Seq App) HP8903B	. 62
	FUNCTION Panel	. 63
	Full screen Display mode	
	GRAPH Panel	. 67
	Peak Search	. 68
	Marker	. 70
	Scale	
	Zoom Edit zoom Edit zoom	
	SYSTEM Panel	
	Preset	
	Utility	
	System	. 82
	RUN CONTROL Panel	. 93
	Save and Recall	. 94
	Save	
	Recall	. 95
3	Audio Generator Functions	
	Audio Generator	. 99
	Waveform Configuration	102
	Sine waveform	102
	Variable phase waveform	
	Dual waveform SMPTE IMD waveforms (1:1/4:1/10:1)	
	SMPTE IMD waveforms (1:1/4:1/10:1)  DFD IEC waveforms (IEC 60118/IEC 60268)	
	Gaussian noise	
	Rectangular noise	116
	Triangular noise	
	Pink noise Square waveform	
	DC signal	
	Sine burst waveform	

	Stereo waveform	.126
	Monotonicity	.127
	Constant value waveform	.128
	Walking zero	.130
	Walking one	
	Arbitrary waveform	
	Multitone waveform	
	Dual-Tone Multi-Frequency (DTMF)	
	Output Configuration (Analog Generator)	
	Output Configuration (Digital Generator)	
	Reference clock	
	Sync clock	.145
	Link Configuration (Bluetooth Generator)	.147
	Device scan	
	Device action	
	Common settings	
	A2DP settings	
	HFP settings AVRCP log view	
	DSI Output Configuration (Digital Generator)	
	AES3/SPDIF Output Configuration (Digital Generator)	
	Edit Bits (Consumer format) Edit Bits (Professional format)	
	References (Analog Generator)	.172
	References (Digital and Bluetooth Generator)	.173
4	Audio Analyzer Measurement Functions	
4		
	Audio Analyzer	
	Measurement mode (Digital Analyzer)	.181
	Functions	.184
	Measurement Functions	.186
	Frequency measurement	186
	AC voltage level measurement	.189
	DC voltage level measurement	
	THD+N ratio and THD+N level measurements	
	SINAD measurement	
	THD ratio and THD level measurements	
	SMPTE IMD measurements	
	DFD measurements	
	SNR measurement SNR (fast mode) measurement	
	J-test measurement  J-test measurement	
	U-LEST HIEGSALEHIEH	. ∠∠∠

	Positive peak measurement	
	Negative peak measurement	
	Phase Measurement	
	Crosstalk Measurement	
	Filters Configuration (Analog Analyzer)	
	Notch Filter	
	Filters Configuration (Digital Analyzer)	
	Filters Configuration (Bluetooth Analyzer)	
	Notch Filter	
	Measurement Configuration (Analog Analyzer)	240
	Measurement Configuration (Digital Analyzer)	242
	Measurement Configuration (Bluetooth Analyzer)	244
	Trigger (Analog, Digital, and <i>Bluetooth</i> Analyzer)	246
	Input Configuration (Analog Analyzer)	248
	Input Configuration (Digital Analyzer)	250
	Link Configuration (Bluetooth Analyzer)	252
	DSI Input Configuration (Digital Analyzer)	253
	AES/SPDIF Input Configuration (Digital Analyzer)	255
	Bits Analysis (Digital Analyzer)	256
	Wave File (Analog, Digital, and Bluetooth Analyzer)	257
	Statistics	259
5	Graph Analysis	
O		000
	Graph Analysis	
	Graph Settings	
	Axis Settings	
	Trace Settings	
	Memory Math	
	Persistence	
	Display Options	
	Graph	273
	Data table	
	Marker table	274
	Statistics	275
	Harmonics	<ul><li>275</li><li>277</li></ul>
	Signal analysis	
	Measurement Settings	278
	Measurement 1/Measurement 2	2/9

# 6 Sweep Function

	Sweep Parameter	282
	Group Delay	
	Points settings	
	Sweep channels	
	Plot View	
	Axis settings Plot settings	
	Edit Points	.291
7	Test Sequence Application	
	Test Sequence Application	.295
	Project	.297
	Properties	
	Test Sequence	
	IO Configuration	
	Settings Properties	
	Sub-steps	
	·	
	Prompt sub-step settings  Send SCPI sub-step settings	
	Measurements	
	Properties	
	AC level Frequency	
	Phase	
	SNR	
	THD+N	
	DC level	
	Crosstalk	.336
	SMPTE IMD	
	DFD IMD	
	Multitone analyzer	
	Stepped frequency sweep	
	SMPTE frequency sweep	
	DFD frequency sweep  External frequency sweep	
	Stepped level sweep	
	SMPTE level sweep	
	DFD level sweep	
	DC lavel sween	

	Receiver sensitivity External level sweep Measurement recorder Voice quality Measurement Results Report Properties	387 392 397 401 405
8	HP8903B	
	HP8903B  Measurement Generator Sweep Special function code list SPCL Floating input	412 414 415 416 418
9	Characteristics and Specifications	
А	Appendixes	
	Appendix 1: FUNCTION panel	423
	Appendix 2: Graph Panel Menu Tree	424
	Appendix 3: System Panel Menu Tree	426
	Appendix 4: Analog Generator Menu Tree	430
	Appendix 5: Digital Generator Menu Tree	434
	Appendix 6: Bluetooth Generator Menu Tree	445
	Appendix 7: Analog Analyzer Menu Tree	452
	Appendix 8: Digital Analyzer Menu Tree	464
	Appendix 9: Bluetooth Analyzer Menu Tree	476
	Appendix 10: Graph Analysis Menu Tree	488
	Appendix 11: Sweep Function Menu Tree	492
	Appendix 12: Save Menu Tree	495
	Appendix 13: Recall Menu Tree	496
	Appendix 14: Test Sequence Menu Tree  Measurement settings  Measurement results	505
	Appendix 15: HP8903B Menu Tree	554
	Appendix 16: Units of the Measurement Function Returned Values  Analog analyzer  Digital analyzer	556

Bluetooth analyzer	
Units for digital audio measurements	.560
Appendix 17: Arbitrary File Format	.561
Appendix 18: User-defined Filter File Format	.563
Appendix 19: DSI Input and Output Interface	.566
Appendix 20: Digital System Clock Distribution Block Diagram	.567
Appendix 21: Typical DSI Test Configurations	.568
Configuration 1	
Configuration 2 Configuration 3	
Configuration 4	
Configuration 5	
Appendix 22: U8903B Configuration Examples	573
Example 1: Generating a sine waveform with the digital generator and measuring	
voltage with the digital analyzer	
Example 2: Establishing a connection to a <i>Bluetooth</i> device and generating a sine v form with the <i>Bluetooth</i> generator.	
Example 3: Generating a multitone waveform with the analog generator and viewing	
multitone spectrum in the graph	-
Example 4: Running the Test Sequence App for the multitone analyzer measureme 579	ent
Example 5: Configuring the system clock reference settings	
Example 6: Configuring the digital generator DSI output settings	
Appendix 23: Relationship between Digital Waveform Parameters and Channels	
Appendix 24: Word Length, Sampling Rate, and Multiplier for DSI	
Appendix 25: Word Length, Sampling Rate, and Multiplier for Master Clock In	
Appendix 26: U8903B Default Settings	
Analog generator  Analog analyzer	
Sweep	
HP8903B	
System	.602
Appendix 27: Procedure to Rename, Copy, Move, and Delete Files	
Renaming a file	
Copying a file  Moving a file	
Deleting a file	
Appendix 28: POLQA Recording Duration Analysis	
Appendix 29: Audio Measurement Ranging	
Manual ranging	
Auto ranging	
Using manual ranging for continuous sweep and frequency response measuremer 606	ıts

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

# List of Figures

Figure 1-1	U8903B front panel	38
Figure 1-2	U8903B rear panel	40
Figure 1-3	Connect the TOSLINK cable straight into the connector	41
Figure 1-4	U8903B LCD display	42
Figure 1-5	Help mode	45
Figure 1-6	System > Update menu page	46
Figure 1-7	Recall menu page	47
Figure 1-8	System > Service > Self-Test menu page	48
Figure 1-9	System > Service > Options menu page	49
Figure 1-10	Recall menu page	
Figure 2-1	U8903B analog generator block diagram	53
Figure 2-2	U8903B analog analyzer block diagram	54
Figure 2-3	U8903B digital generator and analyzer block diagram	55
Figure 2-4	U8903B Bluetooth generator and analyzer block diagram	56
Figure 2-5	Direct U8903B Bluetooth audio connection to DUT example	57
Figure 2-6	Wireless U8903B Bluetooth audio connection to DUT example .	57
Figure 2-7	Navigation and CHANNEL/DATA panels	58
Figure 2-8	U8903B mode selection	60
Figure 2-9	Full screen graph display	64
Figure 2-10	4-panel view	65
Figure 2-11	10-panel view	65
Figure 2-12	Graph analysis mode 2-panel view	66
Figure 2-13	Peak Search menu page	68
Figure 2-14	Peak Search > Threshold menu page	69
Figure 2-15	Marker menu page 1	
Figure 2-16	Marker > Marker - menu page	72
Figure 2-17	Marker > Harmonics menu page	73
Figure 2-18	Scale menu page	
Figure 2-19	Magnified graph display	
Figure 2-20	Edit zoom mode display	
Figure 2-21	Preset menu page	
Figure 2-22	Utility menu page (generator and analyzer mode)	
Figure 2-23	Utility menu page (graph analysis mode)	
Figure 2-24	File Explorer menu page	
Figure 2-25	System menu page 1	
Figure 2-26	System > Error Info menu page (Error)	
Figure 2-27	System > I/O menu page	
Figure 2-28	System > I/O > Lan Settings menu page 1	85
Figure 2-29	System > Service menu page	
Figure 2-30	System > Settings menu page 1	
Figure 2-31	System > HP8903B Config menu page	
Figure 2-32	System > Fan & Temperature menu page	90

Figure 2-33	System > Aux Output menu page
Figure 2-34	System > Board Info menu page
Figure 2-35	RUN CONTROL panel
Figure 2-36	Save menu page94
Figure 2-37	Recall menu page95
Figure 3-1	Analog Generator menu page99
Figure 3-2	Digital Generator menu page
Figure 3-3	Bluetooth Generator menu page
Figure 3-4	Analog Generator > Waveform Config menu page (sine waveform) 102
Figure 3-5	Digital Generator > Waveform Config menu page (sine waveform) 102
Figure 3-6	Bluetooth Generator > Waveform Config menu page (sine waveform) 103
Figure 3-7	Analog Generator > Waveform Config menu page (variable phase
O	waveform)
Figure 3-8	Digital Generator > Waveform Config menu page (variable phase
O	waveform)
Figure 3-9	Bluetooth Generator > Waveform Config menu page (variable phase
	waveform) 105
Figure 3-10	Analog Generator > Waveform Config menu page (dual waveform) 106
Figure 3-11	Digital Generator > Waveform Config menu page (dual waveform) 106
Figure 3-12	Bluetooth Generator > Waveform Config menu page (dual waveform) 107
Figure 3-13	Analog Generator > Waveform Config menu page (SMPTE 1:1 waveform) 108
Figure 3-14	Digital Generator > Waveform Config menu page (SMPTE 1:1 waveform) 108
Figure 3-15	Bluetooth Generator > Waveform Config menu page (SMPTE 1:1 waveform)
Figure 3-16	Analog Generator > Waveform Config menu page (IEC 60118 waveform) 110
Figure 3-17	Digital Generator > Waveform Config menu page (IEC 60118 waveform) . 110
Figure 3-18	Bluetooth Generator > Waveform Config menu page (IEC 60118 waveform) 111
Figure 3-19	Analog Generator > Waveform Config menu page (IEC 60268 waveform) 112
Figure 3-20	Digital Generator > Waveform Config menu page (IEC 60268 waveform) . 112
Figure 3-21	Bluetooth Generator > Waveform Config menu page (IEC 60268 waveform) 113
Figure 3-22	Analog Generator > Waveform Config menu page (Gaussian noise) 114
Figure 3-23	Digital Generator > Waveform Config menu page (Gaussian noise) 114
Figure 3-24	Bluetooth Generator > Waveform Config menu page (Gaussian noise) 115
Figure 3-25	Analog Generator > Waveform Config menu page (Rectangular noise) 116
Figure 3-26	Digital Generator > Waveform Config menu page (Rectangular noise) 116
Figure 3-27	Bluetooth Generator > Waveform Config menu page (Rectangular noise) 117
Figure 3-28	Digital Generator > Waveform Config menu page (Triangular noise) 118

Figure 3-29	Analog Generator > Waveform Config menu page (Pink noise)119
Figure 3-30	Digital Generator > Waveform Config menu page (Pink noise)119
Figure 3-31	Bluetooth Generator > Waveform Config menu page (Pink noise)120
Figure 3-32	Analog Generator > Waveform Config menu page (square waveform) .121
Figure 3-33	Digital Generator > Waveform Config menu page (square waveform) .121
Figure 3-34	Bluetooth Generator > Waveform Config menu page (square waveform) 122
Figure 3-35	Analog Generator > Waveform Config menu page (DC signal)123
Figure 3-36	Analog Generator > Waveform Config menu page (sine burst)124
Figure 3-37	Digital Generator > Waveform Config menu page (sine burst)124
Figure 3-38	Bluetooth Generator > Waveform Config menu page (sine burst)125
Figure 3-39	Digital Generator > Waveform Config menu page (stereo)126
Figure 3-40	Digital Generator > Waveform Config menu page (monotonicity)127
Figure 3-41	Digital Generator > Waveform Config menu page (constant)128
Figure 3-42	Bluetooth Generator > Waveform Config menu page (constant)128
Figure 3-43	Digital Generator > Waveform Config menu page (walking zero)130
Figure 3-44	Digital Generator > Waveform Config menu page (walking one)131
Figure 3-45	Analog Generator > Waveform Config menu page (arbitrary waveform)
Ü	132
Figure 3-46	Digital Generator > Waveform Config menu page (arbitrary waveform) 132
Figure 3-47	Bluetooth Generator > Waveform Config menu page (arbitrary waveform) 133
Figure 3-48	Analog Generator > Waveform Config menu page 1 (multitone waveform) 134
Figure 3-49	Digital Generator > Waveform Config menu page 1 (multitone waveform) . 134
Figure 3-50	Bluetooth Generator > Waveform Config menu page 1 (multitone waveform)
Figure 3-51	Analog Generator > Waveform Config > Custom menu page 1 (multitone waveform)
Figure 3-52	Digital Generator > Waveform Config > Custom menu page 1 (multitone waveform)
Figure 3-53	Bluetooth Generator > Waveform Config > Custom menu page 1 (multitone
9	waveform)
Figure 3-54	Analog Generator > Waveform Config menu page 1 (DTMF)138
Figure 3-55	Dial menu page
Figure 3-56	Analog Generator > Output Config menu page141
Figure 3-57	Digital Generator > Output Config menu page143
Figure 3-58	Digital Generator > Clock Config > Ref Clock menu page144
Figure 3-59	Digital Generator > Clock Config > Sync Clock menu page145
Figure 3-60	Digital Generator > Clock Config > External Clock menu page146
Figure 3-61	Bluetooth Generator > Link Config menu page147
Figure 3-62	Bluetooth Analyzer > Link Config > Device Scan menu page148
Figure 3-63	Bluetooth Analyzer > Link Config > Device Action menu page149
Figure 3-64	Bluetooth Analyzer > Link Config > Common Settings menu page 1151
Figure 3-65	Bluetooth Analyzer > Link Config > Common Settings menu page 2151

Figure 3-66	Bluetooth Analyzer > Link Config > Common Settings menu page 3 152
Figure 3-67	Bluetooth Analyzer > Link Config > A2DP Settings menu page 154
Figure 3-68	Bluetooth Analyzer > Link Config > HFP Settings menu page 155
Figure 3-69	Bluetooth Analyzer > Link Config > AVRCP log view menu page 157
Figure 3-70	Digital Generator > DSI Config menu page 1
Figure 3-71	Digital Generator > AES Config menu page 1
Figure 3-72	Digital Generator > AES Config > Edit Bits (Consumer format) menu page 1
Figure 3-73	Digital Generator > AES Config > Edit Bits (Consumer format) menu page 1 166
Figure 3-74	Analog Generator > References menu page
Figure 3-75	Digital Generator > References menu page
Figure 3-76	Bluetooth Generator > References menu page
Figure 4-1	Analog Analyzer menu page
Figure 4-2	Digital Analyzer menu page (standard measurement mode) 178
Figure 4-3	Bluetooth Analyzer menu page
Figure 4-4	Digital Analyzer menu page (process delay measurement mode) 181
Figure 4-5	Digital Analyzer menu page (BERT measurement mode)
Figure 4-6	Analog Analyzer > Functions menu page 1
Figure 4-7	Digital Analyzer > Functions menu page 1
Figure 4-8	Bluetooth Analyzer > Functions menu page 1
Figure 4-9	Analog Analyzer > Functions > Frequency menu page 1
Figure 4-10	Digital Analyzer > Functions > Frequency menu page 1
Figure 4-11	Bluetooth Analyzer > Functions > Frequency menu page 1 187
Figure 4-12	Analog Analyzer > Functions > AC Voltage menu page 1
Figure 4-13	Digital Analyzer > Functions > AC Voltage menu page 1
Figure 4-14	Bluetooth Analyzer > Functions > AC Voltage menu page 1 190
Figure 4-15	Analog Analyzer > Functions > DC Voltage menu page 1
Figure 4-16	Digital Analyzer > Functions > DC Voltage menu page 1
Figure 4-17	Bluetooth Analyzer > Functions > DC Voltage menu page 1 194
Figure 4-18	Analog Analyzer > Functions > THD+N Ratio menu page 1 196
Figure 4-19	Digital Analyzer > Functions > THD+N Ratio menu page 1 197
Figure 4-20	Bluetooth Analyzer > Functions > THD+N Ratio menu page 1 197
Figure 4-21	Analog Analyzer > Functions > THD+N Level menu page 1
Figure 4-22	Digital Analyzer > Functions > THD+N Level menu page 1
Figure 4-23	Bluetooth Analyzer > Functions > THD+N Level menu page 1 200
Figure 4-24	Analog Analyzer > Functions > SINAD menu page 1
Figure 4-25	Digital Analyzer > Functions > SINAD menu page 1
Figure 4-26	Bluetooth Analyzer > Functions > SINAD menu page 1
Figure 4-27	Analog Analyzer > Functions > THD Ratio menu page 1
Figure 4-28	Digital Analyzer > Functions > THD Ratio menu page 1
Figure 4-29	Bluetooth Analyzer > Functions > THD Ratio menu page 1 206
Figure 4-30	Analog Analyzer > Functions > THD level menu page 1
Figure 4-31	Digital Analyzer > Functions > THD level menu page 1
Figure 4-32	Bluetooth Analyzer > Functions > THD level menu page 1
Figure 4-33	Analog Analyzer > Functions > SMPTE IMD menu page 1

Figure 4-34	Digital Analyzer > Functions > SMPTE IMD menu page 1	213
Figure 4-35	Bluetooth Analyzer > Functions > SMPTE IMD menu page 1	
Figure 4-36	Analog Analyzer > Functions > DFD 60268 2nd menu page 1	215
Figure 4-37	Digital Analyzer > Functions > DFD 60268 2nd menu page 1	215
Figure 4-38	Bluetooth Analyzer > Functions > DFD 60268 2nd menu page 1	216
Figure 4-39	Analog Analyzer > Functions > SNR menu page 1	217
Figure 4-40	Analog Analyzer > Functions > SNR (Fast) menu page 1	219
Figure 4-41	Bluetooth Analyzer > Functions > SNR (Fast) menu page 1	
Figure 4-42	Analog Analyzer > Functions > J-Test menu page	
Figure 4-43	Digital Analyzer > Functions > Positive Peak menu page	223
Figure 4-44	Digital Analyzer > Functions > Negative Peak menu page	
Figure 4-45	Analog Analyzer > Functions > Phase menu page	228
Figure 4-46	Digital Analyzer > Functions > Phase menu page	
Figure 4-47	Bluetooth Analyzer > Functions > Phase menu page	229
Figure 4-48	Analog Analyzer > Functions > X-Talk menu page 1	230
Figure 4-49	Digital Analyzer > Functions > X-Talk menu page 1	231
Figure 4-50	Bluetooth Analyzer > Functions > X-Talk menu page 1	231
Figure 4-51	Analog Analyzer > Filter Config menu page	
Figure 4-52	Analog Analyzer > Filter Config > Notch Filter menu page	235
Figure 4-53	Digital Analyzer > Filter Config menu page	
Figure 4-54	Bluetooth Analyzer > Filter Config menu page	238
Figure 4-55	Bluetooth Analyzer > Filter Config > Notch Filter menu page	
Figure 4-56	Analog Analyzer > Meas Config menu page 1	240
Figure 4-57	Digital Analyzer > Meas Config menu page	
Figure 4-58	Bluetooth Analyzer > Meas Config menu page	244
Figure 4-59	Analog Analyzer > Meas Config > Trigger menu page	246
Figure 4-60	Digital Analyzer > Meas Config > Trigger menu page	246
Figure 4-61	Bluetooth Analyzer > Meas Config > Trigger menu page	
Figure 4-62	Analog Analyzer > Input Config menu page	
Figure 4-63	Digital Analyzer > Input Config menu page	250
Figure 4-64	Digital Analyzer > DSI Config menu page 1	253
Figure 4-65	Digital Analyzer > AES Config menu page 1	255
Figure 4-66	Digital Analyzer > Bits Analysis menu page 1	256
Figure 4-67	Analog Analyzer > Wave File menu page	257
Figure 4-68	Digital Analyzer > Wave File menu page	257
Figure 4-69	Bluetooth Analyzer > Wave File menu page	258
Figure 4-70	Analog Analyzer > Statistics menu page	259
Figure 4-71	Digital Analyzer > Statistics menu page	259
Figure 4-72	Bluetooth Analyzer > Statistics menu page	260
Figure 5-1	Graph Analysis menu page	262
Figure 5-2	Graph Analysis > Graph Settings menu page	
Figure 5-3	Graph Analysis > Axis Settings menu page 1	266
Figure 5-4	Graph Analysis > Trace Settings menu page 1	268
Figure 5-5	Graph Analysis > Trace Settings > Memory menu page	270
Figure 5-6	Graph Analysis > Trace Settings > Math menu page	271
Figure 5-7	Graph Analysis > Trace Settings > Persistence menu page	272

Figure 5-8	Graph Analysis > Display Option > Graph menu page	273
Figure 5-9	Graph Analysis > Display Option > DataTable menu page	274
Figure 5-10	Graph Analysis > Display Option > Marker Table menu page	274
Figure 5-11	Graph Analysis > Display Option > Statistics menu page	275
Figure 5-12	Graph Analysis > Display Option > Harmonics menu page	
Figure 5-13	Graph Analysis > Harm Settings menu page (Harmonics display) 2	
Figure 5-14	Graph Analysis > Display Option > Signal Analysis menu page 2	
Figure 5-15	Graph Analysis > Measurement menu page	
Figure 5-16	Graph Analysis > Measurement > Measurement 1 menu page 2	
Figure 6-1	Sweep Parameter menu page	
Figure 6-2	Sweep Parameter > App. Type > Group Delay menu page	
Figure 6-3	Sweep Parameter > Points Settings menu page 1	
Figure 6-4	Sweep Parameter > Channels menu page	
Figure 6-5	Sweep > Plot View menu page	
Figure 6-6	Sweep > Plot View > Axis Settings menu page	
Figure 6-7	Sweep > Plot View > Plot Settings menu page	
Figure 6-8	Sweep > Edit Points menu page 1	291
Figure 7-1	TSA > Project menu page	295
Figure 7-2	Test Application menu page	
Figure 7-3	TSA > Project menu page	
Figure 7-4	TSA > Project > Properties menu page	
Figure 7-5	TSA > Project > Test menu page	
Figure 7-6	TSA > Project > Test > IO Configuration menu page	
Figure 7-7	TSA > Project > Test > IO Configuration > Output Configuration menu page	ge
	(Analog)	
Figure 7-8	TSA > Project > Test > IO Configuration > Output Configuration menu page	ge
	(Bluetooth)	303
Figure 7-9	TSA > Project > Test > IO Configuration > Input Configuration menu page	
	(Analog)	304
Figure 7-10	TSA > Project > Test > IO Configuration > Input Configuration menu page	
	(Bluetooth)3	306
Figure 7-11	Test > IO Configuration > Properties menu page	
Figure 7-12	Delay sub-step menu page	309
Figure 7-13	Prompt sub-step settings menu page	
Figure 7-14	Send SCPI sub-step settings menu page	
Figure 7-15	TSA > Project > Test > AC Level menu page	312
Figure 7-16	TSA > Project > Test > AC Level > Properties menu page	314
Figure 7-17	TSA > Project > Test > AC Level > Settings > Signal Generation menu page	Э
	315	
Figure 7-18	TSA > Project > Test > AC Level > Settings > Signal Analysis menu page 316	٠
Figure 7-19	Frequency > Signal Generation settings menu page	318
Figure 7-20	Frequency > Signal Analysis settings menu page	
Figure 7-21	Phase > Signal Generation settings menu page	
Figure 7-22	Phase > Signal Analysis settings menu page	
Figure 7-23	SNR > Signal Generation settings menu page	

Figure 7-24	SNR > Signal Analysis settings menu page	326
Figure 7-25	THD+N > Signal Generation settings menu page	329
Figure 7-26	THD+N > Signal Analysis settings menu page	330
Figure 7-27	DC Level > Signal Generation settings menu page	333
Figure 7-28	DC Level > Signal Analysis settings menu page	335
Figure 7-29	Crosstalk > Signal Generation settings menu page	336
Figure 7-30	Crosstalk > Signal Analysis settings menu page	337
Figure 7-31	SMPTE IMD > Signal Generation settings menu page	339
Figure 7-32	SMPTE IMD > Signal Analysis settings menu page	340
Figure 7-33	DFD IMD > Signal Generation settings menu page	342
Figure 7-34	DFD IMD > Signal Analysis settings menu page	343
Figure 7-35	Multitone Analyzer > Signal Generation settings menu page	345
Figure 7-36	Multitone Analyzer > Signal Analysis settings menu page	347
Figure 7-37	Stepped Frequency Sweep > Signal Generation settings menu page	348
Figure 7-38	Stepped Frequency Sweep > Signal Analysis settings menu page	350
Figure 7-39	SMPTE Frequency Sweep > Signal Generation settings menu page	353
Figure 7-40	SMPTE Frequency Sweep > Signal Analysis settings menu page	355
Figure 7-41	DFD Frequency Sweep > Signal Generation settings menu page	356
Figure 7-42	DFD Frequency Sweep > Signal Analysis settings menu page	358
Figure 7-43	External Frequency Sweep > Signal Generation settings menu page	360
Figure 7-44	External Frequency Sweep > Signal Analysis settings menu page	362
Figure 7-45	Stepped Level Sweep > Signal Generation settings menu page	365
Figure 7-46	Stepped Level Sweep > Signal Analysis settings menu page	367
Figure 7-47	SMPTE Level Sweep > Signal Generation settings menu page	370
Figure 7-48	SMPTE Level Sweep > Signal Analysis settings menu page	372
Figure 7-49	DFD Level Sweep > Signal Generation settings menu page	374
Figure 7-50	DFD Level Sweep > Signal Analysis settings menu page	376
Figure 7-51	DC Level Sweep > Signal Generation settings menu page	378
Figure 7-52	DC Level Sweep > Signal Analysis settings menu page	379
Figure 7-53	General setup for the receiver sensitivity measurement	382
Figure 7-54	Receiver Sensitivity > Signal Generation settings menu page	383
Figure 7-55	Receiver Sensitivity > Signal Analysis settings menu page	384
Figure 7-56	External Level Sweep > Signal Generation settings menu page	387
Figure 7-57	External Level Sweep > Signal Analysis settings menu page	389
Figure 7-58	Measurement Recorder > Signal Generation settings menu page	393
Figure 7-59	Measurement Recorder > Signal Analysis settings menu page	394
Figure 7-60	Voice Quality > Signal Generation and Analysis settings menu page	
Figure 7-61	AC Level > Settings > Result (AC level) menu page	401
Figure 7-62	Multitone Analyzer > Settings > Result (Spectrum) menu page	402
Figure 7-63	TSA > Report menu page	405
Figure 7-64	TSA > Report > Properties menu page	406
Figure 7-65	Select Path menu page	
Figure 8-1	HP8903B menu page	410
Figure 8-2	HP8903B > Measurement menu page	
Figure 8-3	HP8903B > Generator menu page	
Figure 8-4	HP8903B > Sweep menu page	415

Figure 8-5	HP8903B > Code List menu page (Input Level Range (except DC Level)) . 416
Figure A-1	Analog Generator > Waveform Config > Info menu page (arbitrary
	waveform) 561
Figure A-2	25-pin female D-SUB connector
Figure A-3	Digital system clock distribution block diagram 567
igure A-4	DSI test configuration 1 568
Figure A-5	DSI test configuration 2 569
igure A-6	DSI test configuration 3 570
igure A-7	DSI test configuration 4
igure A-8	DSI test configuration 5
igure A-9	Digital generator sine waveform generation 573
igure A-10	Digital analyzer voltage measurement 574
igure A-11	Bluetooth generator sine waveform generation 576
igure A-12	Analog analyer multitone waveform measurement 578
Figure A-13	Graph analysis for multitone spectrum 578
igure A-14	Test Sequence App result for multitone analyzer 579
Figure A-15	Test Sequence App report for multitone analyzer 580

# List of Tables

Table 1-1	U8903B optional accessories	36
Table 1-2	U8903B options	37
Table 1-3	U8903B front panel description	38
Table 1-4	U8903B rear panel description	40
Table 1-5	U8903B LCD display description	43
Table 1-6	System > Update menu page	46
Table 1-7	System > Service > Self-Test menu page	48
Table 1-8	System > Service > Options menu page	49
Table 2-1	Navigation and CHANNEL/DATA panels description	58
Table 2-2	U8903B modes description	60
Table 2-3	FUNCTION panel description	63
Table 2-4	GRAPH panel description	67
Table 2-5	Peak Search menu description	68
Table 2-6	Peak Search > Threshold menu description	69
Table 2-7	Marker menu description	
Table 2-8	Marker > Marker - menu description	
Table 2-9	Marker > Harmonics menu description	73
Table 2-10	Scale menu description	74
Table 2-11	SYSTEM panel description	77
Table 2-12	Preset menu description	78
Table 2-13	Utility menu description (generator and analyzer mode)	79
Table 2-14	Utility menu description (graph analysis mode)	80
Table 2-15	File Explorer menu description	81
Table 2-16	Error Info menu description	83
Table 2-17	I/O menu description	84
Table 2-18	System > I/O > Lan Settings menu description	85
Table 2-19	System > Service menu description	
Table 2-20	System > Settings menu description	
Table 2-21	System > HP8903B Config menu description	
Table 2-22	System > Aux Output menu description	
Table 2-23	Navigation and CHANNEL/DATA panels description	
Table 2-24	Save menu description	
Table 2-25	Recall menu description	
Table 3-1	Analog Generator menu description	
Table 3-2	Digital Generator menu description	
Table 3-3	Bluetooth Generator menu description	
Table 3-4	Analog/Digital/Bluetooth Generator > Waveform Config menu description	
	(sine waveform)	
Table 3-5	Analog/Digital/Bluetooth Generator > Waveform Config menu description	
	(variable phase waveform)	
Table 3-6	Analog/Digital/Bluetooth Generator > Waveform Config menu description	on
	(dual waveform)	107

Table 3-7	Analog/Digital/Bluetooth Generator > Waveform Config menu description (SMPTE IMD waveforms)
Table 3-8	Analog/Digital/Bluetooth Generator > Waveform Config menu description
	(IEC 60118 waveform)111
Table 3-9	Analog/Digital/Bluetooth Generator > Waveform Config menu description (IEC 60268 waveform)
Table 3-10	Analog/Digital/Bluetooth Generator > Waveform Config menu description (Gaussian noise)
Table 3-11	Analog/Digital/Bluetooth Generator > Waveform Config menu description
Table 3-11	(Rectangular noise)117
Table 3-12	Digital Generator > Waveform Config menu description (Triangular noise) 118
Table 3-13	Analog/Digital/Bluetooth Generator > Waveform Config menu description (Pink noise)
Table 3-14	Analog/Digital/ <i>Bluetooth</i> Generator > Waveform Config menu description (square waveform)
Table 3-15	Analog Generator > Waveform Config menu description (DC signal) . 123
Table 3-16	Analog/Digital/Bluetooth Generator > Waveform Config menu description
	(sine burst)
Table 3-17	Digital Generator > Waveform Config menu description (stereo) 126
Table 3-18	Digital Generator > Waveform Config menu description (monotonicity)
Table 3-19	Digital/Bluetooth Generator > Waveform Config menu description (constant)
Table 3-20	Digital Generator > Waveform Config menu description (walking zero) 130
Table 3-21	Digital Generator > Waveform Config menu description (walking one) 131
Table 3-22	Analog/Digital/Bluetooth Generator > Waveform Config menu description (arbitrary waveform)
Table 3-23	Analog/Digital/Bluetooth Generator > Waveform Config menu description (multitone waveform)
Table 3-24	Analog/Digital/Bluetooth Generator > Waveform Config > Custom menu description (multitone waveform)
Table 3-25	Analog Generator > Waveform Config menu description (DTMF) 139
Table 3-26	Dial menu page description
Table 3-27	DTMF tone mapping
Table 3-28	Analog Generator > Output Config menu description
Table 3-29	Digital Generator > Output Config menu description
Table 3-30	Digital Generator > Clock Config > Ref Clock menu description 144
Table 3-31	Digital Generator > Clock Config > Sync Clock menu description 145
Table 3-32	Digital Generator > Clock Config > External Clock menu description . 146
Table 3-33	Bluetooth Generator > Link Config menu description
Table 3-34	Bluetooth Analyzer > Link Config > Device Scan menu description 148
Table 3-35	
Table 3-36	Bluetooth Analyzer > Link Config > Common Settings menu description . 152
Table 3-37	Bluetooth Analyzer > Link Config > A2DP Settings menu description . 154

Table 3-38	Bluetooth Analyzer > Link Config > HFP Settings menu description155
Table 3-39	Bluetooth Analyzer > Link Config > AVRCP log view menu description .157
Table 3-40	Digital Generator > DSI Output Config menu description
Table 3-41	Digital Generator > AES Config menu description
Table 3-42	Digital Generator > AES Config > Edit Bits (Consumer format) menu
	description
Table 3-43	AES3/SPDIF Consumer mode bit description
Table 3-44	Digital Generator > AES Config > Edit Bits (Professional format) menu description
Table 3-45	AES3/SPDIF Professional mode bit description
Table 3-46	Analog Generator > References menu description
Table 3-47	Digital/Bluetooth Generator > References menu description173
Table 4-1	Analog Analyzer menu description
Table 4-2	Digital Analyzer menu description
Table 4-3	Bluetooth Analyzer menu description
Table 4-4	Digital Analyzer > Meas Mode > BERT menu description
Table 4-5	Analog/Digital/Bluetooth Analyzer > Functions menu description185
Table 4-6	Analog/Digital/Bluetooth Analyzer > Functions > Frequency menu
	description
Table 4-7	Analog/Digital/Bluetooth Analyzer > Functions > AC Voltage menu description
Table 4-8	Analog/Digital/Bluetooth Analyzer > Functions > DC Voltage menu
	description
Table 4-9	Analog/Digital/Bluetooth Analyzer > Functions > THD+N Ratio menu description
Table 4-10	Analog/Digital/Bluetooth Analyzer > Functions > THD+N Level menu description
Table 4-11	Analog/Digital/Bluetooth Analyzer > Functions > SINAD menu description 203
Table 4-12	Analog/Digital/Bluetooth Analyzer > Functions > THD Ratio menu
	description
Table 4-13	Analog/Digital/Bluetooth Analyzer > Functions > THD Level menu
	description
Table 4-14	Analog/Digital/Bluetooth Analyzer > Functions > SMPTE IMD menu
	description
Table 4-15	Analog/Digital/Bluetooth Analyzer > Functions > DFD measurements menu
	description
Table 4-16	Analog Analyzer > Functions > SNR menu description
Table 4-17	Analog/Bluetooth Analyzer > Functions > SNR (Fast) menu description 220
Table 4-18	Digital Analyzer > Functions > Positive Peak menu description223
Table 4-19	Digital Analyzer > Functions > Negative Peak menu description225
Table 4-20	Analog/Digital/Bluetooth Analyzer > Functions > Phase menu description 229
Table 4-21	Analog/Digital/Bluetooth Analyzer > Functions > X-Talk menu description

Table 4-22 Analog Analyzer > Filter Config menu description	233
Table 4-23 Analog Analyzer > Filter Config > Notch Filter menu description	n 235
Table 4-24 Digital Analyzer > Filter Config menu description	236
Table 4-25 Bluetooth Analyzer > Filter Config menu description	238
Table 4-26 Bluetooth Analyzer > Filter Config > Notch Filter menu descrip	otion 239
Table 4-27 Analog Analyzer > Meas Config menu description	240
Table 4-28 Digital Analyzer > Meas Config menu description	242
Table 4-29 Bluetooth Analyzer > Meas Config menu description	244
Table 4-30 Digital Analyzer > Meas Config > Trigger menu description .	247
Table 4-31 Analog Analyzer > Input Config menu description	248
Table 4-32 Digital Analyzer > Input Config menu description	
Table 4-33 Digital Analyzer > DSI Config menu description	253
Table 4-34 Digital Analyzer > AES Config menu description	255
Table 4-35 Digital Analyzer > Bits Analysis menu description	
Table 4-36 Analog/Digital/Bluetooth Analyzer > Wave File menu descript	ion 258
Table 4-37 Analog/Digital/Bluetooth Analyzer > Statistics menu descripti	on 260
Table 5-1 Graph Analysis menu description	263
Table 5-2 Graph Analysis > Graph Settings menu description	264
Table 5-3 Graph Analysis > Axis Settings menu description	266
Table 5-4 Graph Analysis > Trace Settings menu description	
Table 5-5 Graph Analysis > Trace Settings > Memory menu description	270
Table 5-6 Graph Analysis > Trace Settings > Math menu description .	271
Table 5-7 Graph Analysis > Trace Settings > Persistence menu description	on 272
Table 5-8 Graph Analysis > Harm Settings menu description (Harmonics 276	s display)
Table 5-9 Graph Analysis > Measurement menu description	278
Table 5-10 Graph Analysis > Measurement > Measurement 1/Measurement description	ent 2 menu
Table 6-1 Sweep Parameter menu description	
Table 6-2 Sweep Parameter > Points Settings menu description	
Table 6-3 Sweep Parameter > Channels menu description	
Table 6-4 Sweep > Plot View menu description	
Table 6-5 Sweep > Plot View > Axis Settings menu description	
Table 6-6 Sweep > Plot View > Plot Settings menu description	
Table 6-7 Sweep > Edit Points menu description	
Table 7-1 Test Application menu description	
Table 7-2 TSA > Project menu description	
Table 7-3 TSA > Project > Properties menu description	
Table 7-4 TSA > Project > Test menu description	
Table 7-5 TSA > Project > Test > IO Configuration menu description	
Table 7-6 TSA > Project > Test > IO Configuration > Output Configuration	
description (Analog)	
Table 7-7 TSA > Project > Test > IO Configuration > Output Configuration	
description ( <i>Bluetooth</i> )	
Table 7-8 TSA > Project > Test > IO Configuration > Input Configuration	
description (Analog)	

Table 7-9	TSA > Project > Test > IO Configuration > Input Configuration menu	200
T-1-1- 7 10	description ( <i>Bluetooth</i> )	
Table 7-10	TSA > Project > Test > IO Configuration > Properties menu description	308
Table 7-11	Sub-step menu description	
Table 7-12	Prompt sub-step settings menu description	
Table 7-13	Send SCPI sub-step settings menu description	
Table 7-14	TSA > Project > Test > Measurement menu description	
Table 7-15	TSA > Project > Test > Measurement > Properties menu description .	.314
Table 7-16	TSA > Project > Test > AC Level > Settings > Signal Generation menu description	.316
Table 7-17	TSA > Project > Test > AC Level > Settings > Signal Analysis menu description	.317
Table 7-18	Frequency > Signal Generation settings menu description	
Table 7-19	Frequency > Signal Analysis settings menu description	
Table 7-20	Phase > Signal Generation settings menu description	
Table 7-21	Phase > Signal Analysis settings menu description	
Table 7-22	SNR > Signal Generation settings menu description	
Table 7-23	SNR > Signal Analysis settings menu description	
Table 7-24	THD+N > Signal Generation settings menu description	
Table 7-25	THD+N > Signal Analysis settings menu description	
Table 7-26	DC Level > Signal Generation settings menu description	
Table 7-27	DC Level > Signal Analysis settings menu description	
Table 7-28	Crosstalk > Signal Generation settings menu description	
Table 7-29	Crosstalk > Signal Analysis settings menu description	
Table 7-30	SMPTE IMD > Signal Generation settings menu description	
Table 7-31	SMPTE IMD > Signal Analysis settings menu description	
Table 7-32	DFD IMD > Signal Generation settings menu description	
Table 7-33	DFD IMD > Signal Analysis settings menu description	
Table 7-34	Multitone Analyzer > Signal Generation settings menu description	
Table 7-35	Multitone Analyzer > Signal Analysis settings menu description	
Table 7-36	Stepped Frequency Sweep > Signal Generation settings menu descripti 349	
Table 7-37	Stepped Frequency Sweep > Signal Analysis settings menu description 350	
Table 7-38	SMPTE Frequency Sweep > Signal Generation settings menu descriptio 354	n .
Table 7-39	SMPTE Frequency Sweep > Signal Analysis settings menu description	355
Table 7-40	DFD Frequency Sweep > Signal Generation settings menu description	357
Table 7-41		.358
Table 7-42	External Frequency Sweep > Signal Generation settings menu description 360	on
Table 7-43	External Frequency Sweep > Signal Analysis settings menu description 362	
Table 7-44	Stepped Level Sweep > Signal Generation settings menu description	.366
Table 7-45	Stepped Level Sweep > Signal Analysis settings menu description	.367
Table 7-46	SMPTE Level Sweep > Signal Generation settings menu description .	.371

Table 7-47	SMPTE Level Sweep > Signal Analysis settings menu description	372
Table 7-48	DFD Level Sweep > Signal Generation settings menu description	375
Table 7-49	DFD Level Sweep > Signal Analysis settings menu description	376
Table 7-50	DC Level Sweep > Signal Generation settings menu description	379
Table 7-51	DC Level Sweep > Signal Analysis settings menu description	380
Table 7-52	Receiver Sensitivity > Signal Generation settings menu description	383
Table 7-53	Receiver Sensitivity > Signal Analysis settings menu description	384
Table 7-54	External Level Sweep > Signal Generation settings menu description .	387
Table 7-55	Stepped Level Sweep > Signal Analysis settings menu description	389
Table 7-56	Measurement Recorder > Signal Generation settings menu description 393	
Table 7-57	Measurement Recorder > Signal Analysis settings menu description .	394
Table 7-58	Voice Quality > Signal Generation and Analysis settings menu description 398	n
Table 7-59	TSA > Project > Test > Measurement > Settings > Result (bar chart) mer description	1U 4∩1
Table 7-60	TSA > Project > Test > Measurement > Settings > Result (graph) menu	401
Table 7-00	description	403
Table 7-61	TSA > Report menu description	
Table 7-62	TSA > Report > Properties menu description	
Table 8-1	U8903B LCD display description	
Table 8-2	HP8903B > Measurement menu description	
Table 8-3	HP8903B unit charts	
Table 8-4	HP8903B > Generator menu description	
Table 8-5	HP8903B > Sweep menu description	
Table 8-6	HP8903B special function code list description	
Table 8-7	Floating input settings	
Table 8-8	Floating output settings	
Table 8-9	Floating output settings and special functions to change the generator impedance	
Table A-1	FUNCTION panel description	
Table A-2	GRAPH panel menu tree description	
Table A-3	SYSTEM panel menu tree description	
Table A-4	Analog generator menu tree description	
Table A-5	Digital generator menu tree description	
Table A-6	Bluetooth generator menu tree description	
Table A-7	Analog analyzer menu tree description	
Table A-8	Digital analyzer menu tree description	
Table A-9	Bluetooth analyzer menu tree description	
Table A-10	Graph analysis menu tree description	
Table A-11	Sweep function menu tree description	
Table A-12	Save menu tree description	
Table A-13	Recall menu tree description	
Table A-14	Test sequence menu tree description	
Table A-15	Measurement settings > AC Level menu tree description	
Table A-16	Measurement settings > Frequency menu tree description	507

Table A-T/	Measurement settings > Phase menu tree description
Table A-18	Measurement settings > SNR menu tree description509
Table A-19	Measurement settings > THD+N menu tree description512
Table A-20	Measurement settings > DC Level menu tree description514
Table A-21	Measurement settings > Crosstalk menu tree description515
Table A-22	Measurement settings > SMPTE IMD menu tree description516
Table A-23	Measurement settings > DFD IMD menu tree description517
Table A-24	Measurement settings > Multitone Analyzer menu tree description518
Table A-25	Measurement settings > Stepped Frequency Sweep menu tree description 520
Table A-26	Measurement settings > SMPTE Frequency Sweep menu tree description 523
Table A-27	Measurement settings > DFD Frequency Sweep menu tree description 525
Table A-28	Measurement settings > External Frequency Sweep menu tree description 527
Table A-29	Measurement settings > Stepped Level Sweep menu tree description .530
Table A-30	Measurement settings > SMPTE Level Sweep menu tree description533
Table A-31	Measurement settings > DFD Level Sweep menu tree description535
Table A-32	Measurement settings > DC Level Sweep menu tree description537
Table A-33	Measurement settings > Receiver Sensitivity menu tree description539
Table A-34	Measurement settings > External Level Sweep menu tree description .542
Table A-35	Measurement settings > Measurement Recorder menu tree description 545
Table A-36	Measurement settings > Voice Quality menu tree description548
Table A-37	Measurement Results > Bar chart menu tree description550
Table A-38	Measurement results > Graph menu tree description
Table A-39	HP8903B menu tree description
Table A-40	Analog analyzer units of the meaurement function returned values556
Table A-41	Digital analyzer units of the meaurement function returned values557
Table A-42	Bluetooth analyzer units of the meaurement function returned values .558
Table A-43	Unit conversion formula
Table A-44	Units for digital audio measurements560
Table A-45	Allowable range for arbitrary file parameters561
Table A-46	25-pin female D-SUB connector pins assignment566
Table A-47	Relationship between digital waveform parameters and channels583
Table A-48	Word Length, Sampling Rate, and Multiplier for DSI585
Table A-49	Word Length, Sampling Rate, and Multiplier for Master Clock In591
Table A-50	Analog generator default settings597
Table A-51	Analog analyzer default settings598
Table A-52	Sweep default settings
Table A-53	HP8903B default settings
Table A-54	System default settings
Table A-55	U8903B option configuration
Table A-56	Maximum wave file recording duration for the POLQA narrowband and su-
	per-wideband analysis

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

## Keysight U8903B Performance Audio Analyzer User's Guide

# 1 Getting Started

```
Introduction
             34
LXI Standard 1.4 Compliant Audio Analyzer
                                        34
Installation and Configuration
   Initial inspection
   Ventilation 35
   Rack mounting
                   35
Standard Shipped Items
Optional Accessories 36
U8903B Options 37
Product at a Glance
                   38
   Front panel 38
   Rear panel
               40
   LCD display 42
Getting Started 44
   Power on the U8903B
   Preset the U8903B 44
   Access the help mode 45
   Update the U8903B 46
   Perform self-test 48
   Add or remove U8903B options 49
```

This chapter teaches you how to set up the U8903B for the first time. A summary of all the features of the U8903B is also given.



### Introduction

The U8903B is a digital signal processing (DSP)-based audio measurement system with a frequency measurement range of 10 Hz to 96 kHz or 1.5 MHz depending on the installed option. The U8903B basic configuration has two channels of analog audio generator and two channels of analog audio analyzer.

The standard option for the U8903B performance audio analyzer is Option STD. The U8903B can be further expanded with additional analog analyzer channels; digital audio interfaces like the AES3, SPDIF, and Digital Serial Interface (DSI); and *Bluetooth®* audio option with source and sink interface. Refer to "U8903B Options" on page 37 for more information on the available U8903B options.

The U8903B is capable of performing a wide range of audio parameter measurements on the analog, digital, and *Bluetooth* audio interfaces. Up to four measurement functions can be performed simultaneously on the analog audio. Measurement functions can be performed simultaneously on the analog audio and digital audio interfaces such as analog audio + AES3/SPDIF, analog audio + DSI, and AES3/SPDIF + DSI. The *Bluetooth* audio interface provides the U8903B with *Bluetooth* link capabilities with support for different audio profiles and codecs. The U8903B also supports industrial standard instrument connectivity such as GPIB, USB, and LAN. In addition, the U8903B is equipped with frequency, phase, time, and FFT graph analysis, as well as sweep capability for frequency and amplitude.

The U8903B also allows you to create test sequences. Refer to **Chapter 7**, "Test Sequence Application" for more information.

To search for firmware updates for the U8903B, go to the Keysight U8903B firmware update Web site at <a href="https://www.keysight.com/find/audioanalyzer\_firmware">www.keysight.com/find/audioanalyzer\_firmware</a>.

# LXI Standard 1.4 Compliant Audio Analyzer



The U8903B performance audio analyzer is a LAN eXtension for Instrumentation (LXI) Standard 1.4 compliant (Standard Core) instrument, developed using LXI Technology. LXI is an instrument standard for devices that use the Ethernet (LAN) as their primary communication interface.

Hence, it is an easy-to-use instrument especially with the usage of an integrated Web browser that provides a convenient way to configure the instrument's functionality.

# Installation and Configuration

## Initial inspection

When you receive your U8903B, inspect the unit for any obvious damage such as broken terminals or cracks, dents, and scratches on the chassis that may occur during shipment. If any damage is found, notify the nearest Keysight Sales Office immediately.

Keep the original packaging in case the U8903B has to be returned to Keysight in the future. If you return the U8903B for service, attach a tag identifying the owner and model number. Also, include a brief description of the problem.

### Ventilation

The U8903B can operate within the temperature range of 0 °C to 55 °C. The U8903B is cooled by drawing air through the sides and bottom at the front of the U8903B, and exhausting it through the ventilation holes on the sides and top at the rear of the U8903B. The U8903B must be installed in a location that allows sufficient space at the top, sides, and rear for adequate air circulation.

### Rack mounting

The U8903B can be mounted in a standard 19-inch rack. Rackmount kits are available as Option 908. Support rails are also required for rack mounting. These are normally supplied with the rack and are not included with the rackmount options.

If you are installing an instrument on top of the U8903B, ensure that the instrument does not obstruct the ventilation holes at the top of the U8903B. If required, use a filler panel above the U8903B to ensure adequate space for air circulation.

### 1 Getting Started

# Standard Shipped Items

Verify that you have received the following items. If anything is missing or damaged, please contact the nearest Keysight Sales Office.

- U8903B Performance Audio Analyzer
- Power cord
- USB cable
- Certificate of Calibration
- Safety Notices

# Optional Accessories

The following accessories are available for purchase separately.

Table 1-1 U8903B optional accessories

Option	Description
11500A	Cable assembly, Type-N (male) to Type-N (male), DC to 6.0 GHZ
U8903A-101	Male BNC to male BNC cable (1.2 m)
U8903A-102	Male BNC to male RCA cable (2 m)
U8903A-103	Male XLR to female XLR cable (2 m)
U8903A-908	Rackmount kit
U8903B-105	Cable, digital serial interface for DSI input and output connection
U8903A-107	Cable, accessory – Male XLR-2 male BNC analyzer, 0.26 m
U8903A-108	Cable, accessory – Female XLR-2 male BNC generator, 0.26 m
U8903A-109	BNC accessory kit

# U8903B Options

Table 1-2 U8903B options

Option	Description
U8903B-STD	<ul><li>2 channels (analog generator)</li><li>2 channels (analog analyzer)</li></ul>
U8903B-AN4	<ul><li>2 channels (analog generator)</li><li>4 channels (analog analyzer)</li></ul>
U8903B-AN8	<ul><li>2 channels (analog generator)</li><li>8 channels (analog analyzer)</li></ul>
U8903B-DGT Digital audio card	
U8903B-BLU	Bluetooth card with 2 RF connectors.
U8903B-BL2	Bluetooth card with 2 RF connectors at a secondary option slot. This is only applicable when U8903B-AN8 is selected.
N3431A	Wide bandwidth option - 1.5 MHz (fixed perpetual license). This is only available for channel 1 and channel 2 analog analyzer.
N3432A	Perceptual Objective Listening Quality Analysis (POLQA) measurement software (fixed perpetual license).
N3434A	AES3, SPDIF, and DSI digital audio interfaces (fixed perpetual license). This option can only be ordered with U8903B-DGT.

### Getting Started

1

# Product at a Glance

# Front panel

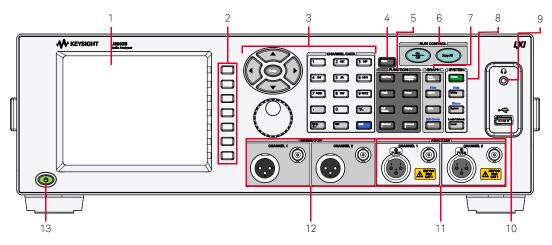


Figure 1-1 U8903B front panel

Table 1-3 U8903B front panel description

	Item	Description
1	LCD display	Provides information on the current function including status indicators, settings, and error messages. Refer to "LCD display" on page 42 for more information.
2	Softkeys 1 to 7	Activates the functions displayed on the LCD display next to the respective softkeys.
3	Navigation and CHANNEL/DATA panels	The navigation and CHANNEL/DATA panels consist of the arrow keys, Enter key, knob, and channel/data keys. Refer to "Navigation and CHANNEL/DATA Panels" on page 58 for more information.
		Displays the available U8903B mode of operation.
4	Menu key	- Standard View
7		- Test Seq App
		- HP8903B
5	FUNCTION panel	Enables access to the U8903B main functions.
		Press <b>On/Off</b> to turn on or off signal generation or measurements for the selected generator or analyzer channel respectively.
		Press On/Off to start or stop the graph generation.
6	Run control panel	Press <b>On/Off</b> to start or stop the sweep.
		Press <b>On/Off</b> to start or stop the test sequence.
		Press <b>Stop All</b> to stop all generator and test sequence operations.
		Refer to "RUN CONTROL Panel" on page 93 for more information.
7	GRAPH panel	Enables access to the U8903B commonly used graph functions. Refer to "GRAPH Panel" on page 67 for more information.

 Table 1-3
 U8903B front panel description (continued)

	Item	Description
8	SYSTEM panel	Enables access to the U8903B system functions. Refer to "SYSTEM Panel" on page 77 for more information.
9	Headphone jack	The headphone jack can be operated in stereo or mono mode. Refer to "Input Configuration (Analog Analyzer)" on page 248 for more information.
10	USB port	Allows an external USB flash storage to be connected to the U8903B.
11	Analog analyzer input	Receives analog audio signal using a female XLR input connector for balanced signal and a female BNC input connector for unbalanced signal. The input connectors are available for each channel.
12	Analog generator output	Outputs analog audio signal using a male XLR output connector for balanced signal and a female BNC output connector for unbalanced signal. The output connectors are available for each channel.
13	Power key	Turns on or off the U8903B.

## Getting Started

1

# Rear panel

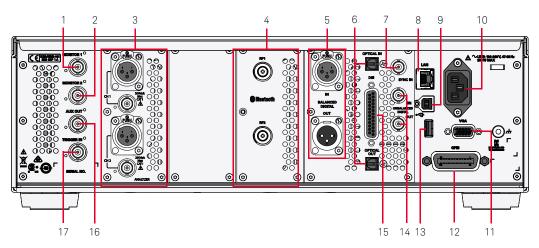


Figure 1-2 U8903B rear panel

Table 1-4 U8903B rear panel description

	Item	Description
1	Monitor 1	Outputs a scaled signal of the analog analyzer channels 1, 3, 5, and 7 input signals. The scaled signal can then be connected to an external amplifier or other measurement instruments.
2	Monitor 2	Outputs a scaled signal of the analog analyzer channels 2, 4, 6, and 8 input signals. The scaled signal can then be connected to an external amplifier or other measurement instruments.
3	Analog analyzer input (channels 3 and 4)	Expandable up to 6 analog input channels. Refer to "U8903B Options" on page 37.  Receives analog audio signal using a female XLR input connector for balanced input and a female BNC input connector for unbalanced input. The input connectors are available for each channel.
4	Bluetooth RF ports	For all applicable <i>Bluetooth</i> options, refer to " <b>U8903B Options</b> " on page <b>37</b> .  Receives and transmits audio signal through the RF1 and RF2 connectors. The RF1 connector is the default port and the RF2 port can be selected in the U8903B's GUI. Only one RF port can be used at a time.
_		This is only applicable for option U8903B-DGT.
5	Digital analyzer input and output (AES3)	Receives and outputs digital audio signal using a female XLR input connector and a male XLR output connector respectively.
		This is only applicable for option U8903B-DGT.
6	Digital analyzer input and output (SPDIF)	Receives and outputs digital audio signal using a TOSLINK input connector and a TOSLINK output connector respectively.
		This is only applicable for option U8903B-DGT.
7	Sync in	Receives an external sync in clock/frame signal using a female BNC input connector (for digital audio only).
8	LAN port	Allows the U8903B to be controlled remotely over the LAN interface.

 Table 1-4
 U8903B rear panel description (continued)

	Item	Description
9	USB port (type B)	Allows the U8903B to be controlled remotely over the USB interface.
10	AC power port	Connects to an AC line voltage.
11	VGA port	Allows an external monitor to be connected to the U8903B.
12	GPIB port	Allows the U8903B to be controlled remotely over the GPIB (General Purpose Interface Bus) interface.
13	USB port	Allows an external USB flash storage to be connected to the U8903B.
14	Digital analyzer input and output (AES3/SPDIF)	This is only applicable for option U8903B-DGT.  Receives and outputs digital audio signal using a female BNC input connector and a female BNC output connector respectively.
15	Digital analyzer input and output (DSI)	This is only applicable for option U8903B-DGT.  Receives and outputs digital audio signals using a 25-pin female D-SUB connector.
16	AUX port	Outputs a variable DC voltage (0.5 V to 5.1 V, up to 100 mA). The AUX port can be used to power test devices, as a trigger, or to control external hardware.
17	Trigger in	Receives an external TTL signal using a female BNC input connector for triggering operation. Triggering can occur on either the positive or negative edge.

#### CAUTION

- Connect the TOSLINK cable straight into the TOSLINK connector.
- DO NOT force the cable in or connect at an angle. Failing to do so may cause damage to the TOSLINK connector.

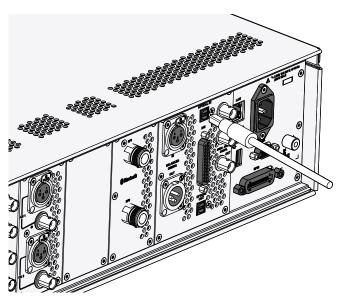


Figure 1-3 Connect the TOSLINK cable straight into the connector

# LCD display



Figure 1-4 U8903B LCD display

Table 1-5 U8903B LCD display description

	Item	Description
1	Main display	Displays the available U8903B modes and functions.  - AG1/AG2: Analog generator channel 1 or 2.  - AA#: Analog analyzer channel (1, 2, 3, 4, 5, 6, 7, or 8).  - DG1/DG2: Digital generator channel 1 or 2.  - DA1/DA2: Digital analyzer channel 1 or 2.  - BG1/BG2: Bluetooth generator channel 1 or 2.  - BA1/BA2: Bluetooth analyzer channel 1 or 2.
		<ul> <li>Displays the name of the current active menu in the main display.</li> <li>Displays the following icons.</li> </ul>
		<ul><li>- Q LAN connected</li><li>- Q LAN disconnected</li></ul>
		<ul> <li> LAN conncted with error</li> </ul>
		- 👔 Bluetooth connected
		-  Bluetooth disconnected
		<ul> <li>A LXI front panel turned on</li> </ul>
2	Title bar	<ul> <li>External USB flash storage connected</li> </ul>
		- Shift function
		- Remote control mode
		- Front panel keys locked
		- 😯 Help mode
		- 🚹 Warning
		- <b>K</b> Fan(s) malfunctioned
		- Memory buffer
3	Softkeys panel	Displays a maximum of 7 softkey menu options for the selected panel.
4	Status bar	Displays the status of an action such as information, warning, or error messages.

NOTE

Refer to "Display mode" on page 65 for more information on the U8903B display layout.

# Getting Started

#### Power on the U8903B

Connect one end of the power cord to the U8903B rear panel AC power inlet and the other end to an AC voltage source. The U8903B will automatically adjust to the correct line voltage in the range of 100 VAC to 240 VAC.

#### Preset the U8903B

A preset will set the U8903B to a default state. It does not affect the I/O configuration, calibration data, system configurations (time, date, model number, and serial number), and license information. Refer to "Appendix 19: DSI Input and Output Interface" on page 566 for more information.

To preset the U8903B, you can perform either one of the following steps.

- Send the \*RST, SYSTem: PRESet, SYSTem: PRESet: TYPE, or SYSTem: RESet[:MODE] SCPI command from the PC via the USB, GPIB, or LAN interface.
- Press Preset on the SYSTEM panel.


NOTE

For more information on preset, refer to "SYSTEM Panel" on page 77.


## Access the help mode

The U8903B help mode provides you quick access to the operating information by displaying the description of all the front panel keys and current softkeys.

To activate or deactivate the U8903B help mode, press on the

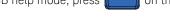

CHANNEL/DATA panel and Utility

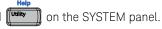

NOTE

When the U8903B help mode is activated, the front panel keys will not execute their normal functions when pressed.

An example of a help mode is shown in **Figure 1-5**. The help mode icon will appear at the top-right of the title bar. Refer to **Figure 1-5** for more information on the help mode icon. Press the front panel keys or the current menu page softkeys to display the respective information.



Figure 1-5 Help mode

#### 1 Getting Started

## Update the U8903B

The U8903B firmware update file can be obtained from the Keysight U8903B firmware update website at <a href="https://www.keysight.com/find/audioanalyzer-firmware">www.keysight.com/find/audioanalyzer-firmware</a>.

Perform the following procedure to update the U8903B firmware.

- 1 Save the firmware update files in an external USB flash storage.
- **2** Connect the external USB flash storage to the U8903B.
- **3** Press System on the SYSTEM panel.
- From the System menu page, press the **Update** softkey. The Update menu page is displayed as shown in **Figure 1-6**.

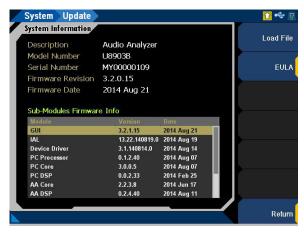


Figure 1-6 System > Update menu page

Table 1-6 System > Update menu page

Menu	Description
Load File	Press the <b>Load File</b> softkey to load the update files. The Recall menu page will be displayed to select the source location. Refer to " <b>Recall</b> " on page 95 for more information on the Recall menu page.
EULA	Press the <b>EULA</b> softkey to display the U8903B EULA (End User License Agreement) page.

- **5** Press the **Load File** softkey and the recall menu page is displayed to enable you to select the source location
- 6 Select the firmware file to be updated, and press the **Recall** softkey as shown in **Figure 1-7**. Refer to "**Recall**" on page 95 for more information on the Recall menu page.



Figure 1-7 Recall menu page

NOTE

The System menu page is only available in the Standard mode. Refer to "**Menu Key**" on page 60 for more information on the U8903B available modes.

CAUTION

The firmware update process may take 20 minutes to 40 minutes to complete. DO NOT power off the U8903B during the firmware update process.

#### 1 Getting Started

#### Perform self-test

Perform the following procedure to run the U8903B self-test.

- 1 Press System on the SYSTEM panel.
- **2** From the System menu page, press the **Service** softkey.
- **3** From the Service menu page, press the **Self-Test** softkey. The Self-Test menu page is displayed as shown in **Figure 1-8**.
- **4** Press the **Customize Test** softkey to select the desired tests.
- **5** Press the **Run Test** softkey to run the slected tests.

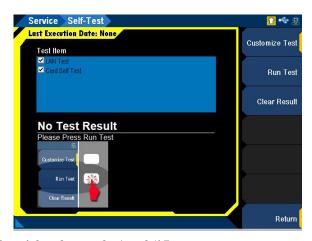


Figure 1-8 System > Service > Self-Test menu page

**Table 1-7** System > Service > Self-Test menu page

Menu	Description
Press the <b>Customize</b> softkey to select or deselect the desired tests.  Customize Test  - LAN Test - Card Self Test	
Run Test	Press the <b>Run Test</b> softkey to run the selected tests.
Clear Result	Press the Clear Result softkey to clear the previous self-test results. The self-test results are saved in the system memory.

NOTE

The System menu page is only available in the Standard mode. Refer to "**Menu Key**" on page 60 for more information on the U8903B available modes.

# Add or remove U8903B options

Perform the following procedure to add U8903B options.

- 1 Press System on the SYSTEM panel.
- **2** From the System menu page, press the **Service** softkey.
- **3** From the Service menu page, press the **Options** softkey. The Options menu page is displayed as shown in **Figure 1-9**.



Figure 1-9 System > Service > Options menu page

**Table 1-8** System > Service > Options menu page

Menu	enu Description	
Add Option	Press the <b>Add Option</b> softkey to load the U8903B option file. The Recall menu page will be displayed to select the source location.	
Remove Option	Press the <b>Remove Option</b> softkey to remove the selected U8903B option.	

- **4** Press the **Add option** softkey, and the Recall menu page is displayed to enable you to select the U8903B option file.
- 5 Select the U8903B option file to be loaded, and press the **Recall** softkey as shown in **Figure 1-10**.



Figure 1-10 Recall menu page

NOTE

Restart the U8903B after adding a new U8903B option file.

Perform the following procedure to remove U8903B options.

- 1 Select the U8903B option to be removed from the list.
- 2 Press the Remove Option softkey to remove the U8903B option as shown in Figure 1-9.

NOTE

The System menu page is only available in the Standard mode. Refer to "**Menu Key**" on page 60 for more information on the U8903B available modes.

# Keysight U8903B Performance Audio Analyzer User's Guide

# 2 Operation and Features

```
Test Capabilities
U8903B Block Diagram
                     53
   Analog audio interface
   Digital audio interface
   Bluetooth audio interface
   Bluetooth audio connection examples
Navigation and CHANNEL/DATA Panels
Menu Key
           60
   Standard View
                  61
   Test Sequence Application (Test Seq App)
                                         62
   HP8903B 62
FUNCTION Panel 63
   Full screen 64
   Display mode
GRAPH Panel 67
   Peak Search
   Marker 70
   Scale
         74
   Zoom 75
   Edit zoom
              76
SYSTEM Panel
               77
   Preset 78
   Utility 79
   System 82
RUN CONTROL Panel
Save and Recall
   Save 94
   Recall 95
```

This chapter describes the test capabilities, key features, and the front panel operation of the U8903B.



# Test Capabilities

The U8903B is capable of testing a broad range of audio-related devices and components for research and development, manufacturing, and quality assurance applications. Examples of the products that can be tested are listed follows.

- Multichannel home theater systems
- Audio amplifiers, as a complete product or at the component level
- Portable audio playback devices such as MP3 players
- Speakers (require third-party accessories such as microphones and power amplifiers)
- PC audio cards
- Audio components
- Bluetooth audio devices

The U8903B performs the following two basic functions.

- Audio signal generation
- Audio signal analysis

The U8903B basic configuration has two channels of analog generator and two channels of analog analyzer which enables the U8903B to test devices with stereo capability. The U8903B is also able to generate and analyze digital and Bluetooth audio interfaces with the available options as listed in "U8903B Options" on page 37.

# U8903B Block Diagram

# Analog audio interface

# Signal generation

A simplified U8903B analog generator block diagram is shown as follows.

#### ANALOG GENERATOR

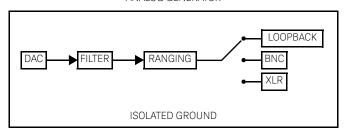


Figure 2-1 U8903B analog generator block diagram

The digital signal processing (DSP) generates all the required waveforms, except for square wave, digitally. The digital waveform data is streamed realtime into the 24-bit digital-to-analog converter (DAC) where it is converted to voltage and sent to the output conditioning block to be amplified or attenuated to the required amplitude. Finally, the waveform is routed through either the balanced (XLR) or unbalanced (BNC) output signal connectors to the unit-under-test (UUT). The output can also be fully floating or have the output grounded to the instrument ground. There is also a loopback facility where the analog generator can be connected onto the systems internal analog bus and routed to the analog analyzer.

#### Measurement

A simplified U8903B analog analyzer block diagram is shown as follows.

#### ANALOG ANALYZER

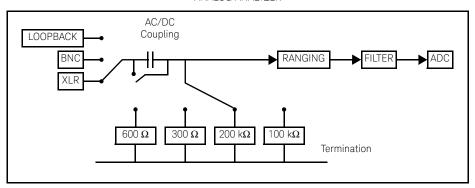


Figure 2-2 U8903B analog analyzer block diagram

An audio signal can enter the analog analyzer through either the balanced (XLR) or unbalanced (BNC) input signal connector. There is also a loopback facility where the analog generator can be connected onto the systems internal analog bus and routed to the analog analyzer.

From the input connector, the signal passes through the AC/DC coupling circuit. If AC coupling is selected, the DC component is blocked and only the AC component of the signal passes through. However, if DC coupling is selected, the entire signal passes through.

The attenuators, buffer, gain, and common mode rejection (CMR) conditions the signal to as close to the full scale of the analog-to-digital converter (ADC) as possible, optimizing the measurement dynamic range.

There are two separate ADCs in the analog analyzer. The low bandwidth ADC is designed for best performance in the audio bandwidth and beyond. The high bandwidth ADC is designed to give high resolution measurements up to 1.5 MHz.

The default input impedance is 100 k $\Omega$  for unbalanced signals or 200 k $\Omega$  for balanced signals. Terminations of 600  $\Omega$  or 300  $\Omega$  can also be applied. The 600  $\Omega$  termination can tolerate up to 1.5 W and the 300  $\Omega$  termination can tolerate up to 3 W.

# Digital audio interface

A simplified U8903B digital audio interface block diagram is shown as follows.

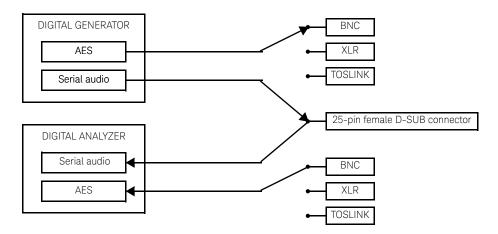


Figure 2-3 U8903B digital generator and analyzer block diagram

## Signal generation

The digital generator generates all the required waveforms digitally. The digital waveform data is then streamed to the serial audio transmitter for the DSI output, or to the AES transmitter for the balanced, unbalanced, and optical output. Finally, the waveform is routed through the balanced (XLR), unbalanced (BNC), optical (TOSLINK), or digital serial interface (DSI) output signal connectors to the device under test (DUT).

#### Measurement

A digital audio signal can enter the digital analyzer through the balanced (XLR), unbalanced (BNC), optical (TOSLINK), or digital serial interface (DSI) input signal connector. For balanced, unbalanced, and optical input, the audio signal then passes through the AES receiver. For DSI input, the audio signal then passes through serial audio receiver. The audio signal is sent to the digital analyzer. Inside the digital analyzer, the digital signal can be optionally passed through a combination of up to five digital filters, one each from the low pass, high pass, weighting, deemphasis, and sample rate filter groups before sending it to the measurement section.

#### 2

#### Bluetooth audio interface

A simplified U8903B Bluetooth audio interface block diagram is shown as follows.

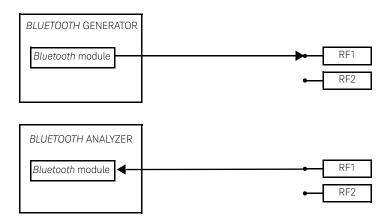


Figure 2-4 U8903B Bluetooth generator and analyzer block diagram

# Signal generation

The digital signal processing (DSP) generates all the required waveforms digitally. The digital waveform data is then streamed to the U8903B *Bluetooth* module in which the audio will be encoded and converted to the RF interface. Finally, the waveform is transmitted to the *Bluetooth* audio devices through the RF1 connector. The RF1 connector is the default port and the RF2 port can be selected in the U8903B's GUI.

#### Measurement

The audio signal enters the *Bluetooth* analyzer through the RF1 connector. The audio signal then passes through the U8903B *Bluetooth* module in which the audio will be decoded and converted to the digital interface and sent to the *Bluetooth* analyzer. Inside the *Bluetooth* analyzer, the digital signal can be optionally passed through a combination of up to five digital filters, one each from the low pass, high pass, weighting, deemphasis, and sample rate filter groups before sending it to the measurement section.

# Bluetooth audio connection examples

An example of a direct U8903B *Bluetooth* audio connection to DUT using an RF cable is shown as follows.

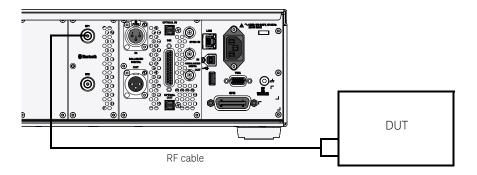


Figure 2-5 Direct U8903B Bluetooth audio connection to DUT example

An example of a wireless U8903B *Bluetooth* audio connection using an antenna is shown as follows.

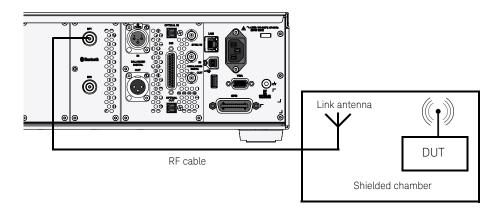


Figure 2-6 Wireless U8903B Bluetooth audio connection to DUT example

CAUTION

Over the air testing shall be conducted in a shielded chamber.

# Navigation and CHANNEL/DATA Panels

The navigation and CHANNEL/DATA panels are used to navigate and set or modify the parameter values.

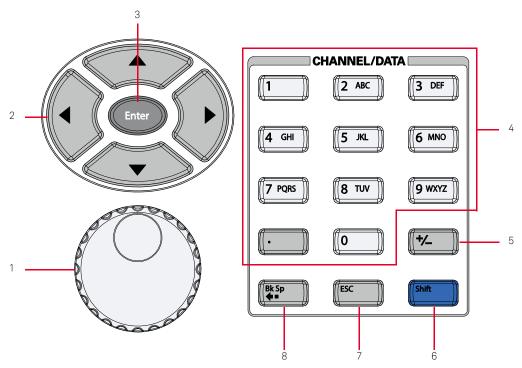


Figure 2-7 Navigation and CHANNEL/DATA panels

Table 2-1 Navigation and CHANNEL/DATA panels description

	Item	Description
1	Knob	Rotate the knob to increase or decrease a numeric value, change a highlighted digit or character, or step through lists or items in a row.
2	Arrow keys	Use the arrow keys to highlight or navigate the editable items on the LCD display for editing. In HP8903B mode, press the up and down arrow keys to increment/decrement the frequency and amplitude values.
3	Enter key	Press Enter to confirm an entry.
4	Numeric keys	Use the numeric keys to enter alphanumeric data by using the number keys and decimal point, or select the channel number.
•		In DTMF single mode, press to generate the ** DTMF tone.

 Table 2-1
 Navigation and CHANNEL/DATA panels description (continued)

	Item	Description
5	Numeric sign key	Press to specify a positive or negative value. For a negative value, press to enter the negative sign before a numeric value.  In DTMF single mode, press to generate the '#' DTMF tone.
6	Shift key	Press prior to pressing a shifted function key. The shifted functions are printed in Blue on top of the front panel keys. Refer to "GRAPH Panel" on page 67 and "SYSTEM Panel" on page 77 for more information.
7	Escape key	Press to cancel a selected action.
8	Back space key	Press to delete the character to the left of the cursor.

# Menu Key

Press main modes of operation. Select the desired mode from the drop-down list as shown in Figure 2-8.



Figure 2-8 U8903B mode selection

The U8903B modes are listed as follows.

Table 2-2 U8903B modes description

Mode	Description	
Standard View	The Standard View mode is the default mode for the U8903B. Refer to "Standard View" on page 61 for more information.	
Test Seq App	Refer to "Test Sequence Application (Test Seq App)" on page 62 for more information.	
HP8903B	Refer to "HP8903B" on page 62 for more information.	

#### Standard View

Press and select **Standard View** to access the standard view menu page. In the standard view, you can perform signal analysis, graph analysis, sweep function, and system configurations. The Standard View mode is the default mode for the U8903B.

# Signal analysis

Press on the FUNCTION panel to switch between audio generator or audio analyzer mode. Refer to **Chapter 3**, "Audio Generator Functions" and **Chapter 4**, "Audio Analyzer Measurement Functions" for more information on the respective configurations.

## Graph analysis

Press on the FUNCTION panel to access the graph analysis mode. Refer to **Chapter 5**, "Graph Analysis" for more information on the graph analysis mode configurations.

# Sweep function

Press on the FUNCTION panel to access the U8903B sweep parameter and the configurations. Refer to **Chapter 6**, "Sweep Function" for more information on the sweep configurations.

# System configurations

Press on the SYSTEM panel to access the U8903B system configurations. You can view the error messages, configure I/O settings, update the U8903B, perform self-tests, configure the U8903B settings, configure the HP8903B mode settings, and others. Refer to "System" on page 82 for more information on the system configurations.

#### 2 Operation and Features

# Test Sequence Application (Test Seq App)

Press and select **Test Seq App** to access the test sequence application mode. The test sequence application mode allows you to perform a series of automated measurements. Refer to **Chapter 7**, "Test Sequence Application" for more information.


### HP8903B

Press and select HP8903B to access the HP8903B mode. The HP8903B mode emulates the HP8903B audio analyzer behavior. Refer to **Chapter 8**, "HP8903B" for more information.

## **FUNCTION Panel**

The FUNCTION panel provides quick access to the U8903B main functions.

Table 2-3 FUNCTION panel description

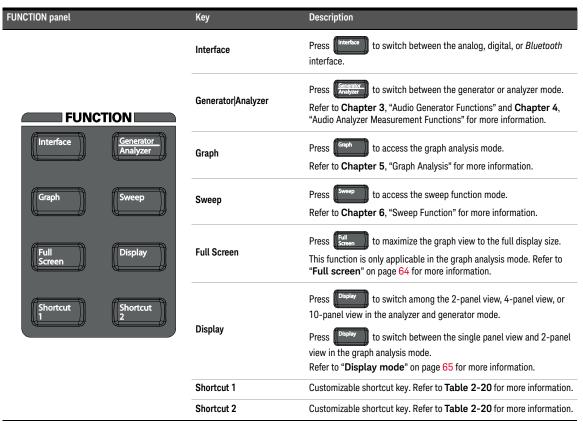

# Full screen

NOTE

The full screen function is only available in the graph analysis mode.

The full screen graph display is displayed as shown in **Figure 2-9**. To exit from the full screen graph display, press [Section 2].

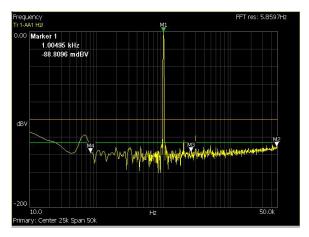


Figure 2-9 Full screen graph display

# Display mode

The U8903B allows you to display up to ten panels on the main display in the analyzer and generator mode.



Figure 2-10 4-panel view



Figure 2-11 10-panel view

#### 2 Operation and Features

The U8903B allows you to display up to two panels on the main display in the graph analysis mode.

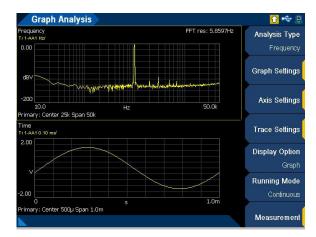


Figure 2-12 Graph analysis mode 2-panel view

# **GRAPH Panel**

# NOTE

Some keys have a shifted function printed above the keys. Press on the CHANNEL/DATA panel before pressing the desired key with the shifted function.

The graph panel provides quick access to the commonly used graph functions. Refer to **Chapter 5**, "Graph Analysis" for more information on the graph analysis mode.

Table 2-4 GRAPH panel description

GRAPH panel	Кеу	Description
	Peak Search	Press to display the peak search menu page, and place the selected marker on the trace point at the maximum Y-axis value for the marker trace. Refer to "Peak Search" on page 68 for more information.
Print Marker  Scale  Edit Zoom  Zoom	Marker	Press Marker to access the marker softkeys that select the current and reference markers and turns them on and off. You may also move the markers, display the marker measurement data, and display the section of the graph based on the selected marker position.  Refer to "Marker" on page 70 for more information.
	Print (Shift + Marker)	Press Shift and Marker to print the current display to a file.  Refer to "Save" on page 94 for more information.
	Scale	Press scale to perform autoscaling to automatically scale the display according to the signal, or to autoscale the X-axis or Y-axis. Refer to "Scale" on page 74 for more information.
	Zoom	Press to magnify a section of the graph. Refer to "Zoom" on page 75 for more information.
	Edit Zoom (Shift + Zoom)	Press shift and common to configure the section of the graph to be magnified. Refer to "Edit zoom" on page 76 for more information.

#### Peak Search

The Peak Search menu page allows you to define a specific threshold to determine which signals can be considered peaks, excluding the unwanted signals from the search. A peak can only qualify as a peak if there is a rising slope before the point and falling slope after the point. A minimum can only qualify as a minimum if there is a falling slope before the point and rising slope after the point.

NOTE

The Peak Search menu page is only available in the graph analysis mode.

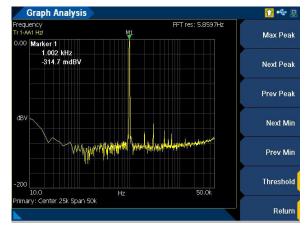


Figure 2-13 Peak Search menu page

Table 2-5 Peak Search menu description

Menu	Description
Max Peak	Press the <b>Max Peak</b> softkey to search and move the active marker to the highest peak which is higher than the peak threshold value. If the active maker is off, the marker will be turned on before performing the maximum peak operation.
Next Peak	Press the <b>Next Peak</b> softkey to search and move the active marker to the next peak which is higher than the peak threshold value. If the active maker is off, the marker will be turned on before performing the next peak operation.
Prev Peak	Press the <b>Prev Peak</b> softkey to search and move the active marker to the previous peak which is higher than the peak threshold value. If the active maker is off, the marker will be turned on before performing the previous peak operation.
Next Min	Press the <b>Next Min</b> softkey to search and move the active marker to the previous peak which is lower than the minimum threshold value. If the active maker is off, the marker will be turned on before performing the next minimum operation.
Prev Min	Press the <b>Prev Min</b> softkey to search and move the active marker to the next peak which is lower than the minimum threshold value. If the active maker is off, the marker will be turned on before performing the previous minimum operation.
Threshold	Press the <b>Threshold</b> softkey to configure the peak search setting. Refer to " <b>Threshold</b> " on page 69 for more information.

# Threshold

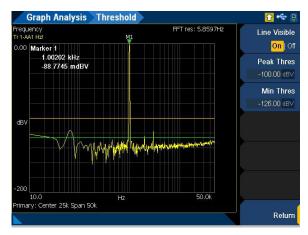


Figure 2-14 Peak Search > Threshold menu page

 Table 2-6
 Peak Search > Threshold menu description

Menu	Description
Line Visible	Press the Line Visible softkey to enable or disable the threshold line in the graph. The threshold line helps to determine the peak and minimum threshold.
	- Peak threshold (green line)
	- Minimum threshold (orange line)
Peak Thres	Press the <b>Peak Thres</b> softkey to set the peak threshold value. A peak has to be higher than the peak threshold value in order to be taken into consideration when a peak search is performed.
Min Thres	Press the <b>Min Thres</b> softkey to set the minimum threshold value. A minimum has to be lower than the minimum threshold value in order to be taken into consideration when a minimum search is performed.

### Marker

The Marker menu page allows you to place a marker on the graph. A marker can be placed on a trace to allow the value of the trace at the marker point to be determined precisely. A total of up to 8 markers can be placed in the graph. You can also press the numeric keys (1 to 8) once to switch among the active markers, and press the numeric keys (1 to 8) twice to toggle the state of the selected marker.

## NOTE

The Marker menu page is only available in the graph analysis mode.

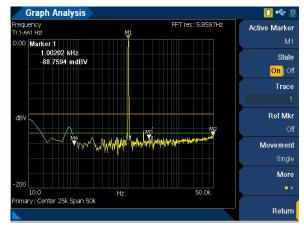


Figure 2-15 Marker menu page 1

Table 2-7 Marker menu description

Menu	Description
Active Marker	Press the <b>Active Marker</b> softkey to select the active marker number. The active marker is displayed in green, and the other markers are displayed in white. The active marker reference marker is displayed in red.
State	Press the <b>State</b> softkey to enable or disable the active marker.
Trace	Press the <b>Trace</b> softkey to select the trace number for the active marker.
Ref Mkr	Press the <b>Ref Mkr</b> softkey to select the reference marker number. The reference marker has to be specified to perform the delta marker calculations in the marker table.  OFF  M1 to M8

Table 2-7 Marker menu description (continued)

Menu	Description
Movement	Press the Movement softkey to select the marker movement type.  - Single The active marker will move depending on the speed and direction of the knob being turned.  - Pair The active marker will move with the reference marker.  - Bin The active marker will move to the next/previous bin or pixel regardless of the speed of the knob.  - Peak The active marker will move from peak to peak. This behavior is affected by the peak threshold settings.  - Harmonic The active marker will move from harmonic to harmonic. This setting is only useful if the display option is changed to Harmonics.
Function	Press the Function softkey to select the marker function type.  None No marker function type is specified.  Slope The slope of the current marker. The beginning point and end point taken into account for the calculation is from the previous and subsequent point of the marker.  PSD The total power contained in each of the frequency bins in the band, and then dividing the result by the "effective bandwidth".
Marker ->	Press the <b>Marker -&gt;</b> softkey to perform automatic adjustment of the graph left and right values in reference to the current marker location. Refer to " <b>Marker -&gt;</b> " on page 72 for more information.
Harmonics	Press the <b>Harmonics</b> softkey to place the markers on the harmonic values.  Refer to " <b>Harmonics</b> " on page 73 for more information.
Rdg at Mkr	Press the <b>Rdg at Mkr</b> softkey to enable or disable the readings at the marker.  You can choose to have the active marker readings to be at the top left corner of the graph, or at the marker location itself. When marker table is enabled, the marker readings at the marker location are automatically hidden.

### Marker ->

The Marker -> menu page allows you to perform automatic adjustment of the graph left and right values in reference to the current marker location.

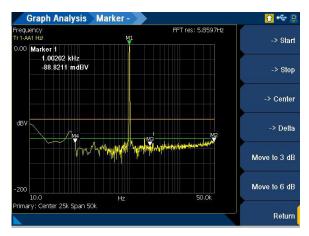


Figure 2-16 Marker > Marker - menu page

Table 2-8 Marker - menu description

Menu	Description
-> Start	Press the -> <b>Start</b> softkey to set the left value of the graph to the current marker location. The span is retained so the right value of the graph may be changed.
-> Stop	Press the -> <b>Stop</b> softkey to set the right value of the graph to the current marker location. The span is retained so the left value of the graph may be changed.
-> Center	Press the -> Center softkey to set the center value of the graph to the current marker location. The span is retained so the left and right values of the graph may be changed.
-> Delta	Press the -> <b>Delta</b> softkey to set the left and right values of the graph to the current marker and the reference marker location.
Move to 3 dB	Press the Move to 3 dB softkey to place the marker on the nearest -3 dB value data point.
Move to 6 dB	Press the Move to 6 dB softkey to place the marker on the nearest -6 dB value data point.

#### Harmonics

The Harmonics menu page allows you to place the markers on the harmonic values. The graph display option have to be in harmonic display view. All the markers will be used and placed in the selected trace.

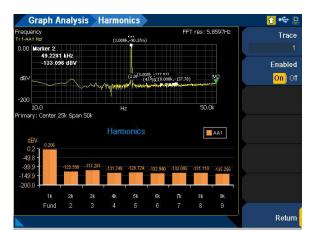


Figure 2-17 Marker > Harmonics menu page

Table 2-9 Marker > Harmonics menu description

Menu	Description
Trace	Press the <b>Trace</b> softkey to set the trace number to place the marker.
Enabled	Press the <b>Enabled</b> softkey to show or hide the markers.

## Scale

The Scale menu page allows you to perform autoscaling to automatically scale the display according to the signal, or to autoscale the X-axis or Y-axis.

NOTE

The Scale menu page is only available in the graph analysis mode.

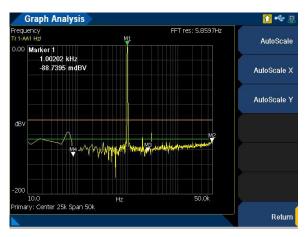


Figure 2-18 Scale menu page

Table 2-10 Scale menu description

Menu	Description
AutoScale	Press the <b>AutoScale</b> softkey to perform autoscaling on the X-axis and Y-axis.
AutoScale X	Press the <b>AutoScale X</b> softkey to perform autoscaling on the X-axis by searching for the most optimum scale (left and right values) for the X-axis based on the data being displayed in the graph.
AutoScale Y	Press the <b>AutoScale Y</b> softkey to perform autoscaling on the Y-axis by searching for the most optimum scale (top and bottom values) for the Y-axis based on the data being displayed in the graph.

#### Zoom

The U8903B screen is split into two windows in the zoom view. The top window is a normal graph window, and the bottom window displays a magnified representation of the traces in the top window. The data in the bottom window will be more detailed due to the screen resolution difference between both windows. The magnified region is indicated by the region surrounded by the red border in the top window.

NOTE

The zoom view is only available in the graph analysis mode.

The magnified graph display is displayed as shown in Figure 2-19.

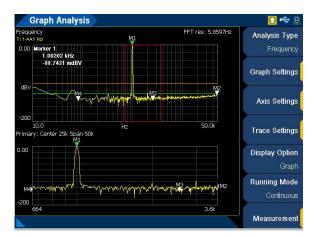


Figure 2-19 Magnified graph display

#### Edit zoom

To display the edit zoom mode in the zoom view, press on the CHANNEL/DATA

panel and on the GRAPH panel. Press the up or down arrow key to modify the stepping value and use the left and right arrow keys to move the red border region in the top window. To resize the red border region in the top window, rotate the knob.

The edit zoom mode is displayed as shown in Figure 2-20.

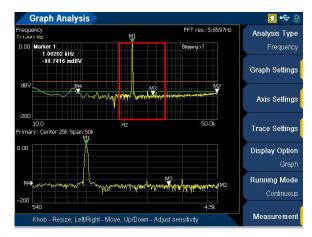


Figure 2-20 Edit zoom mode display

To exit the edit zoom mode, press on the CHANNEL/DATA panel and common on the GRAPH panel.

To exit the zoom view, press on the GRAPH panel.


#### SYSTEM Panel

NOTE

Some keys have a shifted function printed above the keys. Press on the CHANNEL/DATA panel before pressing the desired key with the shifted function.

The SYSTEM panel provides access to some useful system functions.

Table 2-11 SYSTEM panel description

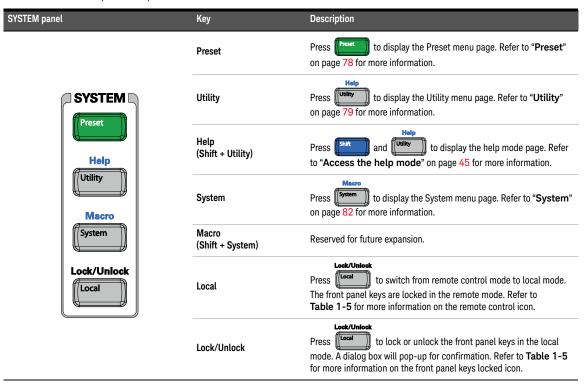

#### Preset

A preset will set the U8903B to a default state. It does not affect the I/O configuration, calibration data, system configurations (time, date, model number, and serial number), and license information.

NOTE

The Preset menu page is only available in the Standard View mode. Refer to "Menu Key" on page 60 for more information.



Figure 2-21 Preset menu page

Table 2-12 Preset menu description

Menu	Description
	Press the (Current mode) softkey to reset the current mode to its default settings. For example, resetting the analog generator will only reset all the generator settings while other modes settings remain unchanged.
(Current mode)	<ul> <li>Analog Analyzer</li> <li>Resetting the analog analyzer will also reset the analog generator loopback connector.</li> </ul>
	<ul> <li>Analog Generator</li> <li>Resetting the analog generator will not reset the analog generator loopback connector.</li> </ul>
	- Graph Analysis
Save User State	Press the Save User State softkey to save the current user state.
Mode	Press the <b>Mode</b> softkey to reset all modes to the default settings without deleting the user-defined files. All running operations such as auto query, sweep, and test sequence will be aborted.
To Factory Settings	Press the <b>To Factory Settings</b> softkey to reset the U8903B to the factory default settings, delete all the files saved in the internal flash memory (for example, state file, arbitrary waveform, test sequence project files, and so on), and reset the GUI state to the Standard View mode. If the HP8903B mode is turned on, the GUI state will remain at the HP8903B mode.
User State	Press the <b>User State</b> softkey to reset the U8903B to the previously saved user state.

## Utility

The Utility menu page allows you to save the U8903B state to a file, or recall the U8903B state from a file.

NOTE

The Utility menu page is only available in the Standard View mode. Refer to "**Menu Key**" on page 60 for more information.

For the generator and analyzer mode, the Utility menu page is displayed as shown in **Figure 2-22**.



Figure 2-22 Utility menu page (generator and analyzer mode)

 Table 2-13
 Utility menu description (generator and analyzer mode)

Menu	Description
Save Channel (x) (x) = current channel number	Press the <b>Save Channel (x)</b> softkey to save the current channel state to a file. Refer to " <b>Save</b> " on page 94 for more information on the Save menu page.
Save (x) (x) = current mode	Press the Save (x) softkey to save the current mode state to a file. Refer to "Save" on page 94 for more information on the Save menu page.
Recall	Press the <b>Recall</b> softkey to recall a saved U8903B state from a file. Refer to " <b>Recall</b> " on page 95 for more information on the Recall menu page.
Сору То	Press the <b>Copy To</b> softkey to copy the current channel state to other channel(s).
Copy From	Press the <b>Copy From</b> softkey to copy other channel state to the current channel.
File Explorer	Press the File Explorer softkey to access the file explorer menu. Refer to "File Explorer" on page 81.

For the graph analysis mode, the Utility menu page is displayed as shown in Figure 2-23.

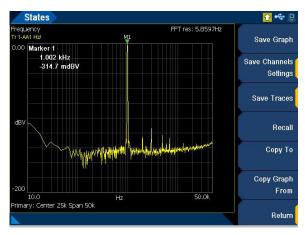


Figure 2-23 Utility menu page (graph analysis mode)

 Table 2-14
 Utility menu description (graph analysis mode)

Menu	Description
Save Graph	Press the <b>Save Graph</b> softkey to save the current graph state to a file. Refer to " <b>Save</b> " on page 94 for more information on the Save menu page.
Save Channels Settings	Press the <b>Save Channels Settings</b> softkey to save the current channel graph state or all channels graph state to a file. Refer to " <b>Save</b> " on page 94 for more information on the Save menu page.
Save Traces	Press the <b>Save Traces</b> softkey to save the current trace state, all traces state, axis settings state, all traces and axis settings states, or the current trace data to a file. Refer to " <b>Save</b> " on page 94 for more information on the Save menu page.
Recall	Press the <b>Recall</b> softkey to load a trace from a CSV file into the active trace. Refer to " <b>Recall</b> " on page 95 for more information on the Recall menu page.
Сору То	Press the Copy To softkey to copy the current channel graph state to other channel(s).
Copy Graph From	Press the <b>Copy Graph From</b> softkey to copy other channel graph state to the current channel.
File Explorer	Press the File Explorer softkey to access the file explorer menu. Refer to "File Explorer" on page 81.

## File Explorer

File explorer allows you to rename, delete, copy, or move files from the U8903B's internal storage or an external flash drive.

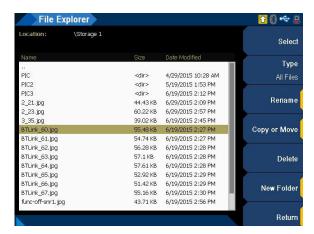


Figure 2-24 File Explorer menu page

Table 2-15 File Explorer menu description

Menu	Description
Select	Press the <b>Select</b> softkey to select the folder to browse in the file explorer mode.
Туре	Press the <b>Type</b> softkey to select the file type to be displayed on the current directory and to be saved into.
Rename	Press the <b>Rename</b> softkey to rename the selected file in the current directory.
Copy or Move	Press the <b>Copy or Move</b> softkey to copy or move the marked files to the selected folder.
Delete	Press the <b>Delete</b> softkey to delete the selected file in the current directory.
New Folder	Press the <b>New Folder</b> softkey to create a new folder in the current directory.

### System

The System menu page allows you to view error messages, configure I/O settings, update the U8903B, perform self-tests, configure the U8903B settings, configure the HP8903B mode settings, and others.

#### NOTE

- The System menu page is only available in the Standard View mode. Refer to "Menu **Key**" on page 60 for more information.
- Pressing Utility in the System menu page will bring up the File Explorer menu.



Figure 2-25 System menu page 1

## **Error Info**

Press the **Error Info** softkey to display the Error Info menu page. The error messages will be listed in the error log viewing panel. The error messages are displayed in decending order where the latest error message is displayed at the top most of the list.



Figure 2-26 System > Error Info menu page (Error)

Table 2-16 Error Info menu description

Menu	Description
Load File	Press the Load File softkey to select the log file to be loaded in the error log viewing panel. The latest log file name is

#### 1/0

Press the I/O softkey to display the I/O menu page.



Figure 2-27 System > I/O menu page

Table 2-17 I/O menu description

Menu	Description
Lan Settings	Press the Lan Settings softkey to configure the LAN settings. Refer to Table 2-18 for more information.
GPIB	Press the GPIB softkey to set the desired GPIB address.
FTP	Press the <b>FTP</b> softkey to enable or disable the FTP control.

In the Lan Settings menu page, you can reset the LAN, change the hostname, and switch between automatic or manual configuration mode as shown in **Figure 2-28**.



Figure 2-28 System > I/O > Lan Settings menu page 1

 Table 2-18
 System > I/O > Lan Settings menu description

Menu	Description
Reset	Press the <b>Reset</b> softkey to reset the LAN settings.
Hostname	Press the <b>Hostname</b> softkey to set the LAN hostname.
	Press the <b>Config Mode</b> softkey to select the LAN configuration mode.
Config Mode	- Auto
	- Manual
IP Address	Press the IP Address softkey to set the LAN IP address.
IF Address	This setting is only available when the LAN configuration mode is set to Manual.
Subnet mask	Press the <b>Subnet mask</b> softkey to set the LAN subnet mask address.
Subilet illask	This setting is only available when the LAN configuration mode is set to Manual.
Gateway	Press the <b>Gateway</b> softkey to set the LAN gateway address.
dateway	This setting is only available when the LAN configuration mode is set to Manual.
DNS 1	Press the DNS 1 softkey to set the LAN DNS 1 address.
ו פאוע	This setting is only available when the LAN configuration mode is set to Manual.
DNS 2	Press the DNS 2 softkey to set the LAN DNS 2 address.
	This setting is only available when the LAN configuration mode is set to Manual.

# Update

Refer to "Update the U8903B" on page 46.

#### Service

Press the **Service** softkey to display the Service menu page.



Figure 2-29 System > Service menu page

Table 2-19 System > Service menu description

Menu	Description
Self-Test	Press the <b>Self-Test</b> softkey to perform self-test. Refer to " <b>Perform self-test</b> " on page 48 for more information.
Diagnostic	Press the <b>Diagnostic</b> softkey to perform the front panel or display diagnostics test.
Secure Erase	Press the <b>Secure Erase</b> softkey to securely erase all the files saved in the internal flash memory (for example, state file, arbitrary waveform, test sequence project files, and so on). It does not affect the U8903B settings and license information.
Options	Press the <b>Options</b> softkey to display the installed U8903B options. You may also add or remove the U8903B options from the Options menu page. Refer to " <b>Add or remove U8903B options</b> " on page 49 for more information.
Residual Noise	Press the <b>Residual Noise</b> softkey to measure the residual noise and get the result.

# Settings

Press the **Settings** softkey to display the Settings menu page.



Figure 2-30 System > Settings menu page 1

Table 2-20 System > Settings menu description

Menu	Description
Date	Press the <b>Date</b> softkey to edit the date in dd/mm/yyyy format.
Time	Press the <b>Time</b> softkey to edit the current time in 24-hour format.
Brightness	Press the <b>Brightness</b> softkey to adjust the LCD display brightness value.
Key Sound	Press the <b>Key Sound</b> softkey to enable or disable the front panel key sound.
	Press the <b>Power Up State</b> softkey to select the power up state.
Power Up State	<ul> <li>Last         The U8903B will start up with the last saved settings.     </li> </ul>
	- Default The U8903B will start up with the factory default settings.

#### 2 Operation and Features

 Table 2-20
 System > Settings menu description (continued)

Menu	Description
Shortcut 1	Press the <b>Shortcut 1</b> softkey to select a specific function to map the shortcut 1 key.  - Error List Display the last 30 errors, warnings, or messages logged.  - Auto-Scale Automatically scale the graph display.
	<ul> <li>File Explorer</li> <li>Launch the file explorer.</li> <li>Audio Monitor</li> </ul>
	Enable of disable the aux audio monitor.
	<ul> <li>Audio Volume</li> <li>Adjust the aux audio volume by using the up and down arrow keys or the knob.</li> <li>This is only available if the Audio Monitor is enabled.</li> </ul>
	Press the <b>Shortcut 2</b> softkey to select a specific function to map the shortcut 2 key.
	<ul> <li>Error List</li> <li>Display the last 30 errors, warnings, or messages logged.</li> </ul>
Shortcut 2	- Auto-Scale Automatically scale the graph display.
	- File Explorer Launch the file explorer.
	- Audio Monitor Enable of disable the aux audio monitor.
	<ul> <li>Audio Volume</li> <li>Adjust the aux audio volume by using the up and down arrow keys or the knob.</li> <li>This is only available if the Audio Monitor is enabled.</li> </ul>

## HP8903B Config

Press the HP8903B Config softkey to display the HP8903B Config menu page.

#### NOTE

- The HP8903B configuration settings will not be affected by any reset operation.
- Refer to **Chapter 8**, "HP8903B" for more information on the HP8903B mode.

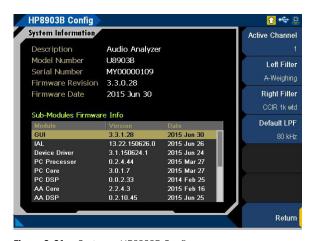


Figure 2-31 System > HP8903B Config menu page

Table 2-21 System > HP8903B Config menu description

Menu	Description
	Press the <b>Active Channel</b> softkey to select the HP8903B active channel.
Active Channel	- 1
	- 2
	Press the Left Filter softkey to select the left filter type. The left filter represents the filter on the left side of the HP8903B front panel. The HP8903B filter may be different according to the model and the purchased HP8903B option. The default left filter is None.
	- None
	- A-Weighing
Left Filter	- CCIR 1k wtd
	- CCIR 2k wtd
	- C-Message
	- CCITT
	- 400 Hz

Table 2-21 System > HP8903B Config menu description (continued)

Menu	Description
Right Filter	Press the <b>Right Filter</b> softkey to select the right filter type. The right filter represents the filter on the right side of the HP8903B front panel. The HP8903B filter may be different according to the model and the purchased HP8903B option. The default right filter is None.  - None  - A-Weighing  - CCIR 1k wtd  - CCIR 2k wtd  - C-Message  - CCITT  - 400 Hz
Default LPF	Press the <b>Default LPF</b> softkey to select the default filter for the HP8903B mode. The default filter is 80 kHz.  - None - 30 kHz - 80 kHz

## Fan & Temperature

Press the Fan & Temperature softkey to display the temperatures of the available cards and the speed of the three 80 mm fans in the U8903B. This menu page is for service usage only. Refer to the U8903B Service Guide for more information.



Figure 2-32 System > Fan & Temperature menu page

## **Aux Output**

Press the **Aux Output** softkey to display the Aux Output menu page.



Figure 2-33 System > Aux Output menu page

Table 2-22 System > Aux Output menu description

Menu	Description
Audio Monitor	Press the <b>Audio Monitor</b> softkey to enable or disable the auxiliary audio monitor.
	Press the <b>Audio Output</b> softkey to select the aux audio output type.
Audio Output	- Speaker
	- Phone
	This is only available when Phone is selected as the audio output.
Audia Mada	Press the <b>Audio Mode</b> softkey to select the aux audio mode type.
Audio Mode	- Stereo
	- Mono
Volume	Press the <b>Volume</b> softkey to select the aux audio volume.
DC Output	Press the <b>DC Output</b> softkey to set the aux DC output value.

#### **Board Info**

Press the **Board Info** softkey to display the U8903B available cards information.



Figure 2-34 System > Board Info menu page

# Legacy Sweep

Press the Legacy Status softkey to enable or disable the legacy sweep.

When the legacy sweep is enabled, sweep is limited to analog and the sweep channel for the analyzer and generator is paired. For example, analog generator channel 1 is measured by analog analyzer channel 1.

When legacy sweep is disabled, you can select multiple channels to be swept and the channels for generator and analyzer are not required to be paired.

# RUN CONTROL Panel

The RUN CONTROL panel is used to start or stop signal generation, measurements, and test sequence operations.

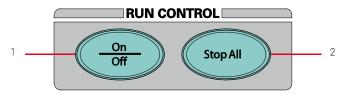


Figure 2-35 RUN CONTROL panel

Table 2-23 Navigation and CHANNEL/DATA panels description

	Кеу	Description
		Press to start or stop the signal generation or measurements for the selected generator or analyzer channel respectively.
1	On/Off	Press on to start or stop the graph generation in the graph analysis mode.
		Press on to start or stop the sweep in the sweep mode.
		Press on to start or stop the test sequence in the test sequence application mode.
2	Stop All	Press Stop All to stop all generator, sweep, and test sequence operations.

## Save and Recall

#### Save

The Save menu page allows you to save the U8903B state, graph analysis trace settings, sweep function points, or screen capture of the current display into a file.



Figure 2-36 Save menu page

Table 2-24 Save menu description

Menu	Description
Save	Press the <b>Save</b> softkey to save the specific function to a file.
Туре	Press the <b>Type</b> softkey to select the file type to be displayed on the current directory and to be saved into.
Rename	Press the <b>Rename</b> softkey to rename the selected file in the current directory.
Copy or Move	Press the Copy or Move softkey to copy or move the marked files to the selected folder.
Delete	Press the <b>Delete</b> softkey to delete the selected file in the current directory.
New Folder	Press the <b>New Folder</b> softkey to create a new folder in the current directory.

Select the '...' item at the list and press to move up a level from the current folder or to another directory. Use the arrow keys to navigate through the files or select the desired folder or file.

NOTE

For the detailed procedure on renaming, copying, moving, and deleting files, please refer to "Appendix 27: Procedure to Rename, Copy, Move, and Delete Files" on page 603.

#### Recall

The Recall menu page allows you to recall the U8903B state, graph analysis trace settings, or sweep function points from a file.

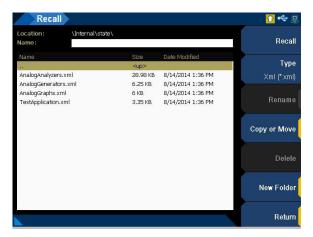


Figure 2-37 Recall menu page

Table 2-25 Recall menu description

Menu	Description
Recall	Press the <b>Recall</b> softkey to recall the selected file.
Туре	Press the <b>Type</b> softkey to select the file type to be displayed on the current directory.
Rename	Press the <b>Rename</b> softkey to rename the selected file in the current directory.
Copy or Move	Press the <b>Copy or Move</b> softkey to copy or move the marked files to the selected folder.
Delete	Press the <b>Delete</b> softkey to delete the selected file in the current directory.
New Folder	Press the <b>New Folder</b> softkey to create a new folder in the current directory.

Select the '...' item at the list and press to move up a level from the current folder or to another directory. Use the arrow keys to navigate through the files or select the desired folder or file.

NOTE

For the detailed procedure on renaming, copying, moving, and deleting files, please refer to "Appendix 27: Procedure to Rename, Copy, Move, and Delete Files" on page 603.

2 Operation and Features

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

# Keysight U8903B Performance Audio Analyzer User's Guide

# 3 Audio Generator Functions

```
Audio Generator
                 99
Waveform Configuration
                        102
   Sine waveform
                  102
   Variable phase waveform
                           104
   Dual waveform
                  106
   SMPTE IMD waveforms (1:1/4:1/10:1)
   DFD IEC waveforms (IEC 60118/IEC 60268)
   Gaussian noise 114
   Rectangular noise
   Triangular noise
                   118
   Pink noise
              119
   Square waveform
                     121
   DC signal 123
   Sine burst waveform 124
   Stereo waveform 126
   Monotonicity 127
   Constant value waveform
                            128
   Walking zero
                 130
   Walking one
   Arbitrary waveform
                       132
   Multitone waveform
                       134
   Dual-Tone Multi-Frequency (DTMF)
                                     138
Output Configuration (Analog Generator)
                                       141
Output Configuration (Digital Generator)
                                      143
   Reference clock
                   144
   Sync clock 145
Link Configuration (Bluetooth Generator)
   Device scan
                148
   Device action 149
   Common settings
                    151
   A2DP settings 154
   HFP settings 155
```



```
AVRCP log view 157

DSI Output Configuration (Digital Generator) 158

AES3/SPDIF Output Configuration (Digital Generator) 160

Edit Bits (Consumer format) 161

Edit Bits (Professional format) 166

References (Analog Generator) 172

References (Digital and Bluetooth Generator) 173
```

This chapter describes the U8903B audio generator functions and configurations.

### Audio Generator

Press on the FUNCTION panel to switch between audio generator or audio analyzer mode. The Analog Generator menu page, Digital Generator menu page, and *Bluetooth* Generator menu page are displayed as shown in **Figure 3-1**, **Figure 3-2**, and **Figure 3-3** respectively.

Press Interface on the FUNCTION panel to switch between the analog, digital, and *Bluetooth* interface.

Press on the CHANNEL/DATA panel to switch to channel 1 or channel 2 respectively and start configuring the active channel.

Press on the RUN CONTROL panel to start or stop the signal generation for the selected generator channel.



Figure 3-1 Analog Generator menu page

Table 3-1 Analog Generator menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to display the list of available analog generator waveform types. Select the desired waveform from the drop-down list.
Waveform Config	Press the <b>Waveform Config</b> softkey to set the current active waveform configuration such as frequency, amplitude, and others. Refer to " <b>Waveform Configuration</b> " on page 102 for more information.
Output Config	Press the <b>Output Config</b> softkey to set the output configurations such as the connector type, impedance, and others. Refer to " <b>Output Configuration (Analog Generator)</b> " on page 141 for more information.
References	Press the <b>References</b> softkey to configure the output references settings that are used in the unit conversion. Refer to " <b>References (Analog Generator)</b> " on page 172 for more information.



Figure 3-2 Digital Generator menu page

 Table 3-2
 Digital Generator menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to display the list of available digital generator waveform types. Select the desired waveform from the drop-down list.
Waveform Config	Press the <b>Waveform Config</b> softkey to set the current active waveform configuration such as frequency, amplitude, and others. Refer to " <b>Waveform Configuration</b> " on page 102 for more information.
Output Config	Press the <b>Output Config</b> softkey to set the output configurations such as the connector type, impedance, and others. Refer to " <b>Output Configuration (Digital Generator)</b> " on page 143 for more information.
DSI Config	Press the <b>DSI Config</b> softkey to set the DSI output configurations such as the format, resolution, and others. Refer to " <b>DSI Output Configuration (Digital Generator)</b> " on page 158 for more information.
AES3/SPDIF	Press the AES3/SPDIF softkey to set the AES3/SPDIF output configurations such as the level, resolution, and others. Refer to "AES3/SPDIF Output Configuration (Digital Generator)" on page 160 for more information.
References	Press the <b>References</b> softkey to configure the output references settings that are used in the unit conversion. Refer to " <b>References (Digital and Bluetooth Generator)</b> " on page 173 for more information.
Clock Config	Press the Clock Config softkey to configure the clock settings.



Figure 3-3 Bluetooth Generator menu page

 Table 3-3
 Bluetooth Generator menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to display the list of available <i>Bluetooth</i> generator waveform types. Select the desired waveform from the drop-down list.
Waveform Config	Press the <b>Waveform Config</b> softkey to set the current active waveform configuration such as frequency, amplitude, and others. Refer to " <b>Waveform Configuration</b> " on page 102 for more information.
Link Config	Press the Link Config softkey to set the link configurations such as device scan, A2DP settings, and others. Refer to "Link Configuration (Bluetooth Generator)" on page 147 for more information.
References	Press the <b>References</b> softkey to configure the output references settings that are used in the unit conversion. Refer to " <b>References (Digital and Bluetooth Generator)</b> " on page 173 for more information.

# Waveform Configuration

#### Sine waveform

Sine waveform is the most basic and commonly used waveform in audio analysis.

Sine waveform mode is applicable for the analog, digital, and *Bluetooth* generator. The waveform configuration for sine waveform is displayed as shown in **Figure 3-4**, **Figure 3-5**, and **Figure 3-6** for the analog, digital, and *Bluetooth* generator respectively.



Figure 3-4 Analog Generator > Waveform Config menu page (sine waveform)



Figure 3-5 Digital Generator > Waveform Config menu page (sine waveform)



Figure 3-6 Bluetooth Generator > Waveform Config menu page (sine waveform)

Table 3-4 Analog/Digital/Bluetooth Generator > Waveform Config menu description (sine waveform)

Menu	Description
	Amplitude can be expressed as Vrms, Vpeak, Vpp, dBV, dBu, and dBm for the analog generator.
Amplitude	Amplitude can be expressed as FFS, dBFS, or %FS for the digital and Bluetooth generator.
	For a perfect sine waveform without any DC offset, Vpp is twice Vpeak and Vrms is equivalent to Vpeak/ $\sqrt{2}$ .
Frequency	Frequency refers to the reciprocal of the period of the signal.
DC Offset	DC offset refers to the DC component of the waveform.

### Variable phase waveform

Variable phase waveform outputs a sine waveform on all channels. The waveforms on all channels share the same frequency; however their phase and amplitude can differ. Variable phase waveforms are useful for measuring the phase difference or timing skew between the channels of a multiple channel audio system. Variable phase waveform outputs a sine waveform at the selected frequency at both channel outputs with the channel 2 output phase varies from –180° to +179.99°, relative to the channel 1 output.

Variable phase waveform mode is applicable for the analog, digital, and *Bluetooth* generator. The waveform configuration for variable phase waveform is displayed as shown in **Figure 3-7**, **Figure 3-8**, and **Figure 3-8** for the analog, digital, and *Bluetooth* generator respectively.



Figure 3-7 Analog Generator > Waveform Config menu page (variable phase waveform)



Figure 3-8 Digital Generator > Waveform Config menu page (variable phase waveform)



**Figure 3-9** Bluetooth Generator > Waveform Config menu page (variable phase waveform)

 Table 3-5
 Analog/Digital/Bluetooth Generator > Waveform Config menu description (variable phase waveform)

Menu	Description
	Amplitude can be expressed as Vrms, Vpeak, Vpp, dBV, dBu, and dBm for analog generator.
Amplitude	Amplitude can be expressed as FFS, dBFS, or %FS for the digital and Bluetooth generator.
	For a perfect sine waveform without any DC offset, Vpp is twice Vpeak and Vrms is equivalent to Vpeak/ $\sqrt{2}$ .
Frequency	Frequency refers to the reciprocal of the period of the signal.
	This is only available when the analog, digital, and Bluetooth generator is in channel 2.
Phase -> 1	Phase -> 1 refers to the phase of the channel 2 sine waveform with reference to channel 1. A positive value will cause the channel 1 output to lead the channel 2 output. A negative value will cause the channel 2 output to lag the channel 1 output.

#### Dual waveform

Dual waveform allows you to generate a composite waveform that is the summation of two independent sine waveforms. Dual sine waveforms are useful in testing the intermodulation distortion characteristics of an audio system.

Dual waveform mode is applicable for the analog, digital, and *Bluetooth* generator. The waveform configuration for dual waveform is displayed as shown in **Figure 3-10**,

Figure 3-11, and Figure 3-12 for the analog, digital, and Bluetooth generator respectively.



Figure 3-10 Analog Generator > Waveform Config menu page (dual waveform)



Figure 3-11 Digital Generator > Waveform Config menu page (dual waveform)



Figure 3-12 Bluetooth Generator > Waveform Config menu page (dual waveform)

 Table 3-6
 Analog/Digital/Bluetooth Generator > Waveform Config menu description (dual waveform)

Menu	Description
	Amplitude can be expressed as Vrms, Vpeak, Vpp, dBV, dBu, and dBm for the analog generator.
Amplitude	Amplitude can be expressed as FFS, dBFS, or %FS for the digital and <i>Bluetooth</i> generator.
	For a perfect sine waveform without any DC offset, Vpp is twice Vpeak and Vrms is equivalent to Vpeak/ $\sqrt{2}$ .
Frequency 1	Frequency 1 refers to the frequency for the first sine component.
Frequency 2	Frequency 2 refers to the frequency for the second sine component.
DC Offset	DC Offset refers to the DC component of the waveform.
Ratio	Ratio refers to the amplitude ratio of the second sine component over the first sine component.
	Summation refers to the method to sum up two levels.
	- RSS
Summation	The amplitude displayed is the Root Sum Square (RSS) summation result of the two levels. The analyzer will read the same amplitude set at the generator regardless of tone ratio.
	<ul> <li>Linear         The amplitude displayed is the linear summation result of the two levels. The level of each tone can be easily calculated back from the tone ratio.     </li> </ul>

#### SMPTE IMD waveforms (1:1/4:1/10:1)

SMPTE IMD is a signal which is the linear combination of two sine waveforms. The SMPTE IMD waveforms conform to the SMPTE standard RP120-1983 for testing intermodulation distortion. For SMPTE IMD 1:1, the lower frequency sine wave is linearly combined in 1:1 amplitude ratio with the upper frequency sine wave. For SMPTE IMD 4:1, the lower frequency sine wave is linearly combined in 4:1 amplitude ratio with the upper frequency sine wave is linearly combined in 10:1 amplitude ratio with the upper frequency sine wave.

SMPTE IMD waveform mode is applicable for the analog, digital, and *Bluetooth* generator. The waveform configuration for SMPTE 1:1 waveform is displayed as shown in **Figure 3-13**, **Figure 3-14**, and **Figure 3-15** for both the analog, digital, and *Bluetooth* generator respectively.

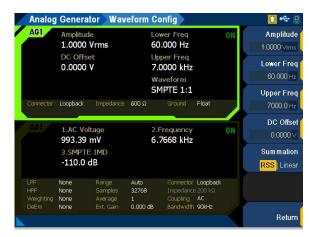


Figure 3-13 Analog Generator > Waveform Config menu page (SMPTE 1:1 waveform)



Figure 3-14 Digital Generator > Waveform Config menu page (SMPTE 1:1 waveform)



Figure 3-15 Bluetooth Generator > Waveform Config menu page (SMPTE 1:1 waveform)

 Table 3-7
 Analog/Digital/Bluetooth Generator > Waveform Config menu description (SMPTE IMD waveforms)

Menu	Description
Amplitude	Amplitude can be expressed as Vrms, Vpeak, Vpp, dBV, dBu, and dBm for the analog generator.  Amplitude can be expressed as FFS, dBFS, or %FS for the digital and <i>Bluetooth</i> generator.
	For a perfect sine waveform without any DC offset, Vpp is twice Vpeak and Vrms is equivalent to Vpeak/ $\sqrt{2}$ .
Lower Freq	Lower Freq refers to the lower frequency of the waveform. The lower and upper frequencies are differentiated by the amplitude ratio between the frequencies.
Upper Freq	Upper Freq refers to the upper frequency of the waveform. The lower and upper frequencies are differentiated by the amplitude ratio between the frequencies.
DC Offset	DC Offset refers to the DC component of the waveform.
Summation	Summation refers to the method to sum up two levels.  RSS The amplitude displayed is the Root Sum Square (RSS) summation result of the two levels. The analyzer will read the same amplitude set at the generator regardless of tone ratio.
	- Linear The amplitude showed is the linear summation result of the two levels. The level of each tone can be easily calculated back from the tone ratio.

## DFD IEC waveforms (IEC 60118/IEC 60268)

There are two predefined DFD dual tones waveforms comprising DFD IEC 60118 and DFD IEC 60268. The DFD IEC waveforms are similar to SMPTE IMD, except that the two tones have equal amplitude and are spaced closer together.

DFD waveform mode is applicable for the analog, digital, and *Bluetooth* generator. The waveform configuration for IEC 60118 waveform is displayed as shown in **Figure 3-16**, **Figure 3-17**, and **Figure 3-18** for the analog, digital, and *Bluetooth* generator respectively.



Figure 3-16 Analog Generator > Waveform Config menu page (IEC 60118 waveform)



Figure 3-17 Digital Generator > Waveform Config menu page (IEC 60118 waveform)



Figure 3-18 Bluetooth Generator > Waveform Config menu page (IEC 60118 waveform)

 Table 3-8
 Analog/Digital/Bluetooth Generator > Waveform Config menu description (IEC 60118 waveform)

Menu	Description
Ammilituda	Amplitude can be expressed as Vrms, Vpeak, Vpp, dBV, dBu, and dBm for the analog generator.
Amplitude	Amplitude can be expressed as FFS, dBFS, or %FS for the digital and <i>Bluetooth</i> generator. For a perfect sine waveform without any DC offset, Vpp is twice Vpeak and Vrms is equivalent to Vpeak/ $\sqrt{2}$ .
Upper Freq	Upper Freq refers to the upper frequency of the waveform.
Diff Freq	Diff Freq refers to the difference frequency of the waveform.
DC Offset	DC Offset refers to the DC component of the waveform.
Summation	Summation refers to the method to sum up two levels.  - RSS The amplitude displayed is the Root Sum Square (RSS) summation result of the two levels. The analyzer will read the same amplitude set at the generator regardless of the tone ratio.  - Linear The amplitude showed is the linear summation result of the two levels. The level of each tone can be easily calculated back from the tone ratio.

The waveform configuration for IEC 60268 waveform is displayed as shown in **Figure 3-19**, **Figure 3-20**, and **Figure 3-21** for the analog, digital, and *Bluetooth* generator respectively.

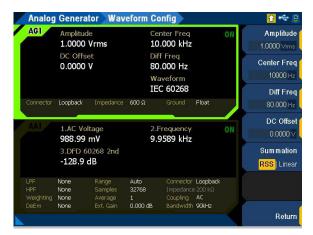


Figure 3-19 Analog Generator > Waveform Config menu page (IEC 60268 waveform)



Figure 3-20 Digital Generator > Waveform Config menu page (IEC 60268 waveform)

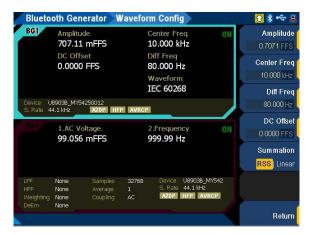


Figure 3-21 Bluetooth Generator > Waveform Config menu page (IEC 60268 waveform)

 Table 3-9
 Analog/Digital/Bluetooth Generator > Waveform Config menu description (IEC 60268 waveform)

Menu	Description
	Amplitude can be expressed as Vrms, Vpeak, Vpp, dBV, dBu, and dBm for the analog generator.
Amplitude	Amplitude can be expressed as FFS, dBFS, or %FS for the digital and <i>Bluetooth</i> generator.
	For a perfect sine waveform without any DC offset, Vpp is twice Vpeak and Vrms is equivalent to Vpeak/ $\sqrt{2}$ .
Center Freq	Center Freq refers to the center frequency of the waveform.
Diff Freq	Diff Freq refers to the difference frequency of the waveform.
DC Offset	DC Offset refers to the DC component of the waveform.
	Summation refers to the method to sum up two levels.
	- RSS
Summation	The amplitude displayed is the Root Sum Square (RSS) summation result of the two levels. The analyzer will read the same amplitude set at the generator regardless of the tone ratio.
	<ul> <li>Linear</li> <li>The amplitude showed is the linear summation result of the two levels. The level of each tone can be easily calculated back from the tone ratio.</li> </ul>

#### Gaussian noise

Gaussian noise is a random noise signal where the frequency components have a Gaussian distribution centered on a predetermined frequency value.

Gaussian noise mode is applicable for the analog, digital, and *Bluetooth* generator. The waveform configuration for Gaussian noise is displayed as shown in **Figure 3-22**,

Figure 3-23, and Figure 3-24 for the analog, digital, and Bluetooth generator respectively.



Figure 3-22 Analog Generator > Waveform Config menu page (Gaussian noise)



Figure 3-23 Digital Generator > Waveform Config menu page (Gaussian noise)



Figure 3-24 Bluetooth Generator > Waveform Config menu page (Gaussian noise)

 Table 3-10
 Analog/Digital/Bluetooth Generator > Waveform Config menu description (Gaussian noise)

Menu	Description
	Amplitude can be expressed as Vrms, Vpeak, Vpp, dBV, dBu, and dBm for the analog generator.
Amplitude	Amplitude can be expressed as FFS, dBFS, or %FS for the digital and Bluetooth generator.
	For a perfect sine waveform without any DC offset, Vpp is twice Vpeak and Vrms is equivalent to Vpeak/ $\sqrt{2}$ .
DC Offset	DC Offset refers to the DC component of the waveform.

## Rectangular noise

Rectangular noise is a noise signal based on Rectangular distribution.

Rectangular noise mode is applicable for the analog, digital, and *Bluetooth* generator. The waveform configuration for Rectangular noise is displayed as shown in **Figure 3-25**,

Figure 3-26, and Figure 3-27 for the analog, digital, and Bluetooth generator respectively.

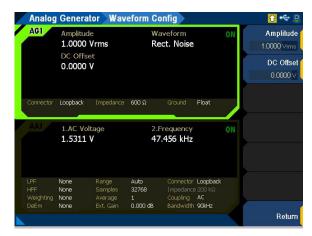


Figure 3-25 Analog Generator > Waveform Config menu page (Rectangular noise)



Figure 3-26 Digital Generator > Waveform Config menu page (Rectangular noise)



Figure 3-27 Bluetooth Generator > Waveform Config menu page (Rectangular noise)

 Table 3-11
 Analog/Digital/Bluetooth Generator > Waveform Config menu description (Rectangular noise)

Menu	Description
	Amplitude can be expressed as Vrms, Vpeak, Vpp, dBV, dBu, and dBm for the analog generator.
Amplitude	Amplitude can be expressed as FFS, dBFS, or %FS for the digital and Bluetooth generator.
	For a perfect sine waveform without any DC offset, Vpp is twice Vpeak and Vrms is equivalent to Vpeak/ $\sqrt{2}$ .
DC Offset	DC Offset refers to the DC component of the waveform.

# Triangular noise

Triangular noise mode is only applicable for the digital generator. The waveform configuration for triangular noise is displayed as shown in **Figure 3-28**.



Figure 3-28 Digital Generator > Waveform Config menu page (Triangular noise)

Table 3-12 Digital Generator > Waveform Config menu description (Triangular noise)

Menu	Description
Amplitude	Amplitude can be expressed as FFS, dBFS, or %FS for the digital generator. For a perfect sine waveform without any DC offset, Vpp is twice Vpeak and Vrms is equivalent to Vpeak/ $\sqrt{2}$ .
DC Offset	DC Offset refers to the DC component of the waveform.

#### Pink noise

Pink noise is a noise signal that contains an equal sound pressure level in each octave band where the energy decreases as frequency increases.

Pink noise mode is applicable for the analog, digital, and *Bluetooth* generator. The waveform configuration for Pink noise is displayed as shown in **Figure 3-29**, **Figure 3-30**, and **Figure 3-31** for the analog, digital, and *Bluetooth* generator respectively.



Figure 3-29 Analog Generator > Waveform Config menu page (Pink noise)



Figure 3-30 Digital Generator > Waveform Config menu page (Pink noise)



Figure 3-31 Bluetooth Generator > Waveform Config menu page (Pink noise)

 Table 3-13
 Analog/Digital/Bluetooth Generator > Waveform Config menu description (Pink noise)

Menu	Description
	Amplitude can be expressed as Vrms, Vpeak, Vpp, dBV, dBu, and dBm for the analog generator.
Amplitude	Amplitude can be expressed as FFS, dBFS, or %FS for the digital and Bluetooth generator.
	For a perfect sine waveform without any DC offset, Vpp is twice Vpeak, while Vrms is equivalent to Vpeak/ $\sqrt{2}$ .
DC Offset	DC Offset refers to the DC component of the waveform.

## Square waveform

Square waveform is a waveform that ideally alternates regularly and instantaneously between two levels.

Square waveform mode is applicable for the analog, digital, and *Bluetooth* generator. The waveform configuration for square waveform is displayed as shown in **Figure 3-32**,

Figure 3-33, and Figure 3-34 for the analog, digital, and Bluetooth generator respectively.



Figure 3-32 Analog Generator > Waveform Config menu page (square waveform)



Figure 3-33 Digital Generator > Waveform Config menu page (square waveform)



Figure 3-34 Bluetooth Generator > Waveform Config menu page (square waveform)

Table 3-14 Analog/Digital/Bluetooth Generator > Waveform Config menu description (square waveform)

Menu	Description
Amplitude	Amplitude can be expressed as Vrms, Vpeak, Vpp, dBV, dBu, and dBm for the analog generator. Amplitude can be expressed as FFS, dBFS, or %FS for the digital and $Bluetooth$ generator. For a perfect sine waveform without any DC offset, Vpp is twice Vpeak and Vrms is equivalent to Vpeak/ $\sqrt{2}$ .
Frequency	Frequency refers to the frequency of the square waveform.
DC Offset	This is only available for the digital generator.  DC Offset refers to the DC component of the waveform.

# DC signal

DC signal output is used when a low current DC supply is required. Examples include, biasing amplifiers or other similar circuitry.

DC signal mode is applicable for the analog generator only. The waveform configuration for DC signal is displayed as shown in **Figure 3-35**.



Figure 3-35 Analog Generator > Waveform Config menu page (DC signal)

Table 3-15 Analog Generator > Waveform Config menu description (DC signal)

Menu	Description
Voltage	Voltage refers to the amplitude of the composite signal.

#### Sine burst waveform

Sine burst waveform is usually a sine wave that is switched between two levels. Sine burst waveform mode is applicable for the analog, digital, and *Bluetooth* generator. The waveform configuration for sine burst waveform is displayed as shown in **Figure 3-37**,

Figure 3-38, and Figure 3-38 for the analog, digital, and *Bluetooth* generator respectively.



Figure 3-36 Analog Generator > Waveform Config menu page (sine burst)



Figure 3-37 Digital Generator > Waveform Config menu page (sine burst)



Figure 3-38 Bluetooth Generator > Waveform Config menu page (sine burst)

 $\textbf{Table 3-16} \qquad \text{Analog/Digital/} \textit{Bluetooth} \ \text{Generator} > \text{Waveform Config menu description (sine burst)}$ 

Menu	Description
	Amplitude can be expressed as Vrms, Vpeak, Vpp, dBV, dBu, and dBm for the analog generator.
Amplitude	Amplitude can be expressed as FFS, dBFS, or %FS for the digital and Bluetooth generator.
	For a perfect sine waveform without any DC offset, Vpp is twice Vpeak, and Vrms is equivalent to Vpeak/ $\sqrt{2}$ .
Frequency	Frequency refers to the frequency for the first sine component.
20.0%	This is only available for the analog and <i>Bluetooth</i> generator.
DC Offset	DC Offset refers to the DC component of the waveform.
Burst On	Burst On refers to the number of cycles at which the signal amplitude will be at the higher level. The Burst On value must be less than the period value by one cycle.
Period	Period refers to the number of cycles from the beginning of one burst to the beginning of the next burst. The period value must be at least one cycle greater than the burst on.
Low Level	Low Level refers to the amplitude ratio of Burst On over Burst Off.

### Stereo waveform

Stereo waveform generates two independent sine waveforms for channel 1 and channel 2. Stereo waveform mode is applicable for the digital generator only. For digital generator, stereo waveform can be generated with a sinewave at two different channels. The waveform configuration for stereo waveform is displayed as shown in **Figure 3-39**.



Figure 3-39 Digital Generator > Waveform Config menu page (stereo)

Table 3-17 Digital Generator > Waveform Config menu description (stereo)

Menu	Description
Amplitude	Amplitude can be expressed as FFS, dBFS, or %FS for the digital and <i>Bluetooth</i> generator. For a perfect sine waveform without any DC offset, Vpp is twice Vpeak and Vrms is equivalent to Vpeak/ $\sqrt{2}$ .
Frequency	Frequency refers to the frequency for the first sine component.
DC Offset	DC Offset refers to the DC component of the waveform.

# Monotonicity

Monotonicity waveform consists of a repeating square-wave staircase signal. The duration for each half cycle of the square wave is determined by the Samples/Step parameter.

Monotonicity waveform mode is applicable for the digital generator only. The waveform configuration for monotonicity waveform is displayed as shown in **Figure 3-40**.



Figure 3-40 Digital Generator > Waveform Config menu page (monotonicity)

Table 3-18 Digital Generator > Waveform Config menu description (monotonicity)

Menu	Description
Samples/Step	Samples/Step refers to the duration for each half cycle of the square wave.

### Constant value waveform

Constant value mode outputs a continuous stream of data samples at the same fixed value. This mode helps in the investigation of data-dependent errors in digital systems. In order to repeat a specific error, a fixed value must be used.

Constant value waveform mode is applicable for the digital and *Bluetooth* generator. The waveform configuration for constant value waveform is displayed as shown in **Figure 3-41** and **Figure 3-42** for the digital and *Bluetooth* generator respectively.



Figure 3-41 Digital Generator > Waveform Config menu page (constant)

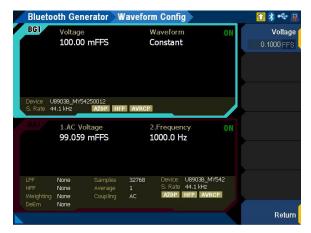


Figure 3-42 Bluetooth Generator > Waveform Config menu page (constant)

 Table 3-19
 Digital/Bluetooth Generator > Waveform Config menu description (constant)

Menu	Description
Voltage	Press the <b>Voltage</b> softkey to select the output voltage or set your desired output voltage.

## Walking zero

In walking zero waveform mode, one bit is set to 0 and the rest of the bits are set to 1. The bit 0 is continuously incremented from the least significant bit (LSB) to the most significant bit (MSB) and loops back to the LSB.

Walking zero waveform mode is applicable for the digital generator only. The waveform configuration for walking zero waveform is displayed as shown in **Figure 3-43**.

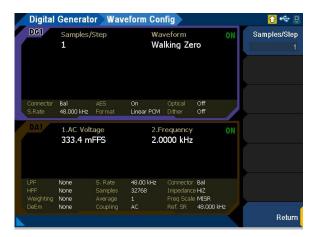


Figure 3-43 Digital Generator > Waveform Config menu page (walking zero)

Table 3-20 Digital Generator > Waveform Config menu description (walking zero)

Menu	Description
Samples/Step	Samples/Step refers to the speed the single bit 0 is incremented.

# Walking one

In walking one waveform mode, one bit is set to 1 and the rest of the bits are set to 0. The bit 1 is continuously incremented from the least significant bit (LSB) to the most significant bit (MSB) and loops back to the LSB.

Walking one waveform mode is applicable for the digital generator only. The waveform configuration for walking one waveform is displayed as shown in **Figure 3-44**.



Figure 3-44 Digital Generator > Waveform Config menu page (walking one)

Table 3-21 Digital Generator > Waveform Config menu description (walking one)



## Arbitrary waveform

You can load a properly formatted waveform file into the U8903B as a sequence of waveform samples. The samples are outputted at the sample rate of the generator. The waveform files must be in the .arb or .wav file type. For .wav file type, mono or stereo audio with 8, 16, or 24 bits per sample are supported.

Arbitrary waveform mode is applicable for the analog, digital, and *Bluetooth* generator. The waveform configuration for arbitrary waveform is displayed as shown in **Figure 3-45**, **Figure 3-46**, and **Figure 3-47** for the analog, digital, and *Bluetooth* generator respectively. Refer to "**Appendix 17: Arbitrary File Format**" on page 561 for more information on the arbitrary waveform file format.



Figure 3-45 Analog Generator > Waveform Config menu page (arbitrary waveform)



Figure 3-46 Digital Generator > Waveform Config menu page (arbitrary waveform)



Figure 3-47 Bluetooth Generator > Waveform Config menu page (arbitrary waveform)

 Table 3-22
 Analog/Digital/Bluetooth Generator > Waveform Config menu description (arbitrary waveform)

Menu	Description
Amplitude	Amplitude can be expressed as Vrms, Vpeak, Vpp, dBV, dBu, and dBm for the analog generator.  Amplitude can be expressed as FFS, dBFS, or %FS for the digital and <i>Bluetooth</i> generator.  For a perfect sine waveform without any DC offset, Vpp is twice Vpeak and Vrms is equivalent to Vpeak/√2.
DC Offset	DC Offset refers to the DC component of the waveform.
Load File	Press the <b>Load File</b> softkey to load a waveform from a file. Refer to " <b>Recall</b> " on page 95 for more information on the Recall menu page.
Info	Press the Info softkey to display the loaded waveform information.

#### Multitone waveform

Multitone waveform is a composite waveform that is a summation of multiple independent sine waveforms. This feature is useful in measuring different characteristics of audio devices from a single acquisition of audio data.

Multitone waveform mode is applicable for the analog, digital, and *Bluetooth* audio generator. The waveform configuration for multitone waveform is displayed as shown in **Figure 3-48**, **Figure 3-49** and **Figure 3-50** for the analog, digital, and *Bluetooth* generator respectively.



Figure 3-48 Analog Generator > Waveform Config menu page 1 (multitone waveform)



Figure 3-49 Digital Generator > Waveform Config menu page 1 (multitone waveform)

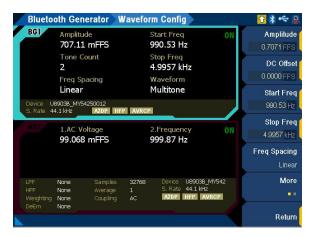


Figure 3-50 Bluetooth Generator > Waveform Config menu page 1 (multitone waveform)

 Table 3-23
 Analog/Digital/Bluetooth Generator > Waveform Config menu description (multitone waveform)

Menu	Description
Amplitude	Amplitude can be expressed as Vrms, Vpeak, Vpp, dBV, dBu, and dBm for the analog generator.
	Amplitude can be expressed as FFS, dBFS, or %FS for the digital and Bluetooth generator.
	For a perfect sine waveform without any DC offset, Vpp is twice Vpeak and Vrms is equivalent to Vpeak/ $\sqrt{2}$ .
DC Offset	This is only available for the analog and <i>Bluetooth</i> generator.
DC Oliset	DC Offset refers to the DC component of the waveform.
Start Freq	Start Freq refers to the lowest frequency in the multitone waveform which is usually the frequency for the first tone.
Stop Freq	Stop Freq refers to the highest frequency in the multitone waveform which is usually the frequency for the last tone.
	Freq Spacing refers to the frequency spacing between the tones.
Freq Spacing	- Linear
ried Spacing	- Log
	- Custom
Tone Count	Tone Count refers to the number of signal frequency components. For analog generator, the maximum number of tones that can be generated is 60. For digital and <i>Bluetooth</i> generator, the maximum number of tones that can be generated is 64.
	Length refers to the waveform length that determines the number of samples used to create one iteration of the multitone waveform. Longer waveform length provides higher frequency resolution but will take more time to generate and process.
	- 1024
	- 2048
Length	- 4096
Ū	- 8192
	- 16384
	- 32768
	- 65536
Custom	Press the <b>Custom</b> softkey to access the custom multitone menu page. You can set the frequency, amplitude, phase, and optimize the crest factor for each tone. Refer to " <b>Custom multitone</b> " on page 136 for more information on the custom multitone menu page.

#### Custom multitone

The custom multitone waveform configuration is displayed as shown in **Figure 3-51**, **Figure 3-52**, and **Figure 3-53** for both the analog, digital, and *Bluetooth* generator respectively.



Figure 3-51 Analog Generator > Waveform Config > Custom menu page 1 (multitone waveform)



Figure 3-52 Digital Generator > Waveform Config > Custom menu page 1 (multitone waveform)



Figure 3-53 Bluetooth Generator > Waveform Config > Custom menu page 1 (multitone waveform)

Table 3-24 Analog/Digital/Bluetooth Generator > Waveform Config > Custom menu description (multitone waveform)

Menu	Description
Apply	Press the <b>Apply</b> softkey to apply the current setting on the selected tone for the custom multitone waveform.
Optimize	Press the <b>Optimize</b> softkey to optimize the crest factor for the custom multitone waveform.
Frequency	Press the <b>Frequency</b> softkey to set the frequency value for the custom multitone waveform.
Amplitude	Press the <b>Amplitude</b> softkey to set the amplitude value for the custom multitone waveform.
Phase	Press the <b>Phase</b> softkey to set the phase value for the custom multitone waveform.
Add Above	Press the Add Above softkey to add the tone above the selected tone for the custom multitone waveform.
Add Below	Press the Add Below softkey to add the tone below the selected tone for the custom multitone waveform.
Remove	Press the <b>Remove</b> softkey to remove the selected tone for the custom multitone waveform.
Clear	Press the Clear softkey to clear all the tones in the custom multitone waveform list.

## Dual-Tone Multi-Frequency (DTMF)

Dual-Tone Multi-Frequency (DTMF), also known as touch-tone, is a system of signal tones used in telecommunications. Applications include voice mail, help desks, telephone banking, and others. DTMF is only applicable for the analog generator only.

There are 12 DTMF signals where each of the signal is made up of two tones from the following selection:

- 697 Hz
- 770 Hz
- 852 Hz
- 941 Hz
- 1209 Hz
- 1336 Hz
- 1477 Hz

The tones are divided into two groups (low and high), and each DTMF signal uses one from each group. This prevents any harmonics from being misinterpreted as part of the signal. The waveform configuration for DTMF is displayed as shown in **Figure 3-54**.



Figure 3-54 Analog Generator > Waveform Config menu page 1 (DTMF)

Table 3-25 Analog Generator > Waveform Config menu description (DTMF)

Menu	Description
Dial	Press <b>Dial</b> softkey to generate a single DTMF tone or modify the DTMF sequence. Refer to " <b>Dial</b> " on page 139 for more information.
Amplitude	Amplitude can be expressed as Vrms, Vpeak, Vpp, dBV, dBu, and dBm for the analog generator. For a perfect sine waveform without any DC offset, Vpp is twice Vpeak and Vrms is equivalent to Vpeak/ $\sqrt{2}$ .
Ratio	Ratio refers to the level difference between the high-frequency tone and low-frequency tone.
Tone Duration	Tone Duration refers to the DTMF signal duration.
Tone Delay	Tone Delay refers to the delay between two DTMF tones.
Pause Time	Pause Time refers to the interval time for the DTMF sequence.
Repeat	Press the <b>Repeat</b> softkey to enable or disable repeating the DTMF sequence.
Summation	Summation refers to the method to sum up two levels.  - RSS  The amplitude displayed is the Root Sum Square (RSS) summation result of the two levels. The analyzer will read the same amplitude set at generator regardless of tone ratio.  - Linear  The amplitude showed is the linear summation result of the two levels. The level of each tone can be easily calculated back from the tone ratio.

## Dial

The dial mode allows you to generate a single DTMF tone or to modify the DTMF sequence. Press the **Mode** softkey to switch between Single or Sequence as the dial mode. Press the numeric keys on the CHANNEL/DATA panel to generate the respective DTMF tone as listed in **Table 3-27**. The Dial menu page is displayed as shown in **Figure 3-55**.



Figure 3-55 Dial menu page

Table 3-26 Dial menu page description

Menu	Description
	Mode refers to the mode of operation for the dial mode.
Mode	Single – You can dial a single DTMF tone using the numeric keys and A to D softkeys.
	Sequence – You can dial and modify the DTMF sequence.
Α	Single dial mode
В	Press and hold the A, B, C, or D softkey to dial the A, B, C, or D tone respectively.
С	Sequence dial mode
D	Press the A, B, C, or D softkey to add the A tone to the DTMF sequence.
Pause	Pause refers to the pause to be added to the DTMF sequence.  Press the <b>Pause</b> softkey to add a pause to the sequence in the form of a comma.

Table 3-27 DTMF tone mapping

DTMF tone	Description
0 to 9	Press the numeric keys on the CHANNEL/DATA panel to generate the DTMF 0 to 9 tones respectively.
*	Press on the CHANNEL/DATA panel to generate the '*' DTMF tone.
#	Press on the CHANNEL/DATA panel to generate the '#' DTMF tone.
A to D	Press the A to D softkeys to generate the DTMF A to D tones respectively.

# Output Configuration (Analog Generator)

The output configuration for the analog generator is displayed as shown in Figure 3-56.



Figure 3-56 Analog Generator > Output Config menu page

Table 3-28 Analog Generator > Output Config menu description

Menu	Description
Connector	Press the Connector softkey to select the output connector type.  - Bal Balanced mode outputs a pair of differential signals which are equal in amplitude but 180 degrees out of phase on the XLR positive and negative pins.  - UnBal Unbalanced mode outputs a signal referenced to ground on the BNC output connector.  - Com
	<ul> <li>Com         Common mode outputs a pair of equal amplitude and in-phase signals on the XLR positive and negative pins. The common mode test signal is applied to both pins 2 and 3 or the XLR connector, while pin 1 is connected to the return signal.</li> <li>IEC60268         The common mode test signal is applied to both pins 2 and 3 or the XLR connector, while pin 1 is connected to the return signal. An additional 10 Ω output series resistance is added to pin 2 or 3.</li> </ul>
Impedance	Press the Impedance softkey to select the output impedance value. For Bal, Com, and IEC60268 $-600~\Omega\\-100~\Omega\\-40~\Omega$ For UnBal $-600~\Omega\\-50~\Omega\\-20~\Omega$

 Table 3-28
 Analog Generator > Output Config menu description (continued)

Menu	Description
IEC60268 10 Ω	Press the IEC60268 10 $\Omega$ softkey to select the additional 10 $\Omega$ output series resistance for pin 2 or 3 of the XLR connector in the common IEC60268 configuration. This setting is only available when the output connector type is set to IEC60268.  - Pin2    Additional 10 $\Omega$ is added to pin 2.  - Pin3    Additional 10 $\Omega$ is added to pin 3.
Ground	Press the <b>Ground</b> softkey to select the grounding type.  Float In the floating grounding type, the signal return line (XLR pin 1 for balanced output or BNC return for unbalanced output) is not grounded to the chassis earth and is "floating".  Ground In the ground grounding type, the signal return line (XLR pin 1 for balanced output or BNC return for unbalanced output) is connected to the chassis earth.
Max Voltage	Press the <b>Max Voltage</b> softkey to set the maximum voltage. The maximum voltage value set will limit the maximum amplitude output from the generator and prevent any excessive high voltage values from damaging the device under test (DUT).

# Output Configuration (Digital Generator)

The output configuration for the digital generator is displayed as shown in **Figure 3-57**.



Figure 3-57 Digital Generator > Output Config menu page

Table 3-29 Digital Generator > Output Config menu description

Menu	Description
Connector	Press the <b>Connector</b> softkey to select the output connector type.
	<ul> <li>Bal</li> <li>Balanced mode outputs a digital signal on the XLR output connector at the U8903B rear panel.</li> </ul>
	- UnBal
	Unbalanced mode outputs a digital signal on the BNC output connector at the U8903B rear panel.
AES Output	Press the AES Output softkey to enable or disable the AES output.
Optical Output	Press the <b>Optical Output</b> softkey to enable or disable the optical output.
Sample Rate	Press the <b>Sample Rate</b> softkey to set the sample rate value.
	Press the <b>Audio Format</b> softkey to select the encoding audio format.
Audio Format	- Linear PCM
Addio i offiliat	- A-Law
	– μ-Law
	Press the <b>Dither</b> softkey to select the dither type. Dither is a noise component that can be superimposed on a signal.
	- Off
Dither	- Rectangular
	- Triangular
	- Shaped

### Reference clock



Figure 3-58 Digital Generator > Clock Config > Ref Clock menu page

 Table 3-30
 Digital Generator > Clock Config > Ref Clock menu description

Menu	Description
Source	Press the Source softkey to select the reference clock source. Refer to "Appendix 20: Digital System Clock Distribution Block Diagram" on page 567 for more information on the system clock.  - Internal  - AES RCLK  - External

### Sync clock



Figure 3-59 Digital Generator > Clock Config > Sync Clock menu page

Table 3-31 Digital Generator > Clock Config > Sync Clock menu description

Menu	Description
Output	Press the <b>Output</b> softkey to enable or disable the synchronous clock output.
Divider	Press the <b>Divider</b> softkey to select the synchronous clock divider value. When the synchronous clock divider is set to 1, the synchronous clock is locked to 128 × sampling rate (bi-phase clock). When the synchronous clock divider is set to 128, the synchronous clock is divided by 128 which is equal to the sampling rate set at the U8903B.  - 1  - 128
Source	Press the <b>Source</b> softkey to select the synchronous clock source. Refer to " <b>Appendix 20: Digital System Clock Distribution Block Diagram</b> " on page 567 for more information on the system clock.  - Internal  - AES RCLK  - External



Figure 3-60 Digital Generator > Clock Config > External Clock menu page

Table 3-32 Digital Generator > Clock Config > External Clock menu description

Menu	Description
	Press the <b>Type</b> softkey to select the external reference clock type. Refer to " <b>Appendix 20: Digital System Clock Distribution Block Diagram</b> " on page 567 for more information on the system clock.
T	- MClk Sync In
Туре	- Frame Clk In
	- DSI Gen FS
	- DSI Gen Clk
Mand Lanath	- Press the <b>Word Length</b> softkey to set the external reference clock word length value.
Word Length	- 8 to 32
Multiplier	<ul> <li>Press the Multiplier softkey to set the external reference clock multiplier value. The selection available in the external reference clock multiplier depends on the external reference clock word length.</li> </ul>
Frequency	- Press the <b>Frequency</b> softkey to set the external reference clock frequency value.

## Link Configuration (Bluetooth Generator)

The link configuration for the *Bluetooth* generator is displayed as shown in **Figure 3-61**.

NOTE

When connecting the U8903B to a PC's *Bluetooth* using A2DP profile where the U8903B acts as source, initiate the connection from the PC (as sink) instead of U8903B. The U8903B does not support the initialization of A2DP source profile connection from the U8903B when connecting to a PC.



Figure 3-61 Bluetooth Generator > Link Config menu page

 Table 3-33
 Bluetooth Generator > Link Config menu description

Menu	Description
Device Scan	Press the <b>Device Scan</b> softkey to configure the device scan settings when searching for discoverable <i>Bluetooth</i> devices within range. Refer to " <b>Device scan</b> " on page 148 for more information.
Device Action	Press the <b>Device Action</b> softkey to configure the <i>Bluetooth</i> device action settings such as unpair device, profile connection, and others. Refer to " <b>Device action</b> " on page 149 for more information.
Common Settings	Press the <b>Common Settings</b> softkey to configure the <i>Bluetooth</i> common settings such as profile, discoverable, and others. Refer to " <b>Common settings</b> " on page 151 for more information.
A2DP Settings	Press the <b>A2DP Settings</b> softkey to configure the <i>Bluetooth</i> advanced audio distribution profile settings. Refer to " <b>A2DP settings</b> " on page 154 for more information.
HFP Settings	Press the <b>HFP Settings</b> softkey to configure the <i>Bluetooth</i> handsfree/headset profile settings. Refer to " <b>HFP settings</b> " on page 155 for more information.
AVRCP Log View	Press the <b>AVRCP Log View</b> softkey to configure the <i>Bluetooth</i> audio/video remote control profile operation log. Refer to " <b>AVRCP log view</b> " on page 157 for more information.

### Device scan



Figure 3-62 Bluetooth Analyzer > Link Config > Device Scan menu page

 Table 3-34
 Bluetooth Analyzer > Link Config > Device Scan menu description

Menu	Description
Device Search	Press the <b>Device Search</b> softkey to begin identifying all the discoverable <i>Bluetooth</i> devices within range.
Max Scan	Press the <b>Max Scan</b> softkey to set the maximum number of discoverable <i>Bluetooth</i> devices to be identified during the Device Search procedure. The Device Search procedure will stop when the identified <i>Bluetooth</i> devices reached the set number or if more than 30 s elapsed.  — 1 to 16
Filter Class	Press the <b>Filter Class</b> softkey to select the <i>Bluetooth</i> device class to be used during the Device Search procedure. The Device Search procedure identifies all the discoverable <i>Bluetooth</i> device based on the selected class.  - All Search for all available <i>Bluetooth</i> device class.
	<ul> <li>Custom         Manually sets the Bluetooth device class using the 6-digit hexadecimal numeric number of the Bluetooth device address such as 60020C for smartphones and 240408 for handsfree/headset devices.     </li> </ul>
Custom	Only available if Filter Class is set to Custom.
	Press the <b>Custom</b> softkey to manually sets the <i>Bluetooth</i> device class.
Refresh Device	Press the <b>Refresh Device</b> softkey to refresh the friendly name of the selected <i>Bluetooth</i> device.

#### Device action

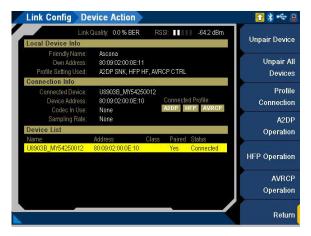


Figure 3-63 Bluetooth Analyzer > Link Config > Device Action menu page

#### **Table 3-35**

Menu	Description
Pair/Unpair Device	Press the <b>Pair/Unpair Device</b> softkey to pair with the selected discovered <i>Bluetooth</i> device or unpair with the selected paired <i>Bluetooth</i> device respectively.
Unpair All Device	Press the <b>Unpair All Device</b> softkey to unpair all the paired <i>Bluetooth</i> devices.
Profile Connection	Press the <b>Profile Connection</b> softkey to connect or disconnect the <i>Bluetooth</i> profiles for the connection.  - Connect/Disconnect All  - Connect/Disconnect A2DP  - Connect/Disconnect HFP  - Connect/Disconnect AVRCP
A2DP Operation	Press the A2DP Operation softkey to select the advanced audio distribution profile operation settings. This is only available if the A2DP profile is connected.  Open Media Connection Establishes the audio media connection to the connected Bluetooth device via the A2DP profile.  Close Media Connection Disconnects the audio media connection to the connected Bluetooth device via the A2DP profile.  Start Streaming Starts or resumes the audio media connection to the connected Bluetooth device.  Pause Streaming Stops or pauses the audio media connection to the connected Bluetooth device.

**Table 3-35** 

Menu	Description
	Press the <b>HFP Operation</b> softkey to select the HFP (Handsfree/Headset) profile operation settings. This is only available if the HFP profile is connected and the Common Settings > Profile is set to HFP HF.
	<ul> <li>Dial         Emulates making an outgoing call from the connected handsfree/headset device.     </li> <li>Answer Call</li> </ul>
	Emulates answering an incoming call from the connected handsfree/headset device.  - End Call
HFP Operation	Emulates terminating a call from the connected handsfree/headset device.
(Handsfree/Headset)	Reject Call     Emulates rejecting an incoming call from the connected handsfree/headset device.  To the Auril 1997
	<ul> <li>Toggle Audio         Toggles the audio between RAC and audio gateway of the connected handsfree/headset device.     </li> </ul>
	<ul> <li>Button Press         Emulates a button press on the connected remote headset device. Only applicable for HFP profile.     </li> </ul>
	<ul> <li>Send AT Command</li> <li>Sends the AT command from the U8903B's Bluetooth card to the connected remote device.</li> <li>NOTE: Only support transmitting AT commands. AT command receiving feature is not supported.</li> </ul>
	Press the <b>HFP Operation</b> softkey to select the HFP (Audio Gateway) profile operation settings. This is only available if the HFP profile is connected and the Common Settings > Profile is set to HFP AG.
	<ul> <li>Connect</li> <li>Establishes an audio connection to the headset device via the connected handsfree/headset device.</li> </ul>
HFP Operation	<ul> <li>Disconnect</li> <li>Disconnects an audio connection to the headset device via the connected handsfree/headset device.</li> </ul>
(Audio Gateway)	<ul> <li>Call         Emulates a call alert to the headset device via the connected handsfree/headset device.     </li> </ul>
	<ul> <li>Hang Up         Emulates ending a call to the headset device via the connected handsfree/headset device.     </li> </ul>
	<ul> <li>Send AT Command</li> <li>Sends the AT command from the U8903B's Bluetooth card to the connected remote device.</li> <li>NOTE: Only support transmitting AT commands. AT command receiving feature is not supported.</li> </ul>
	Press the AVRCP Operation softkey to configure the audio/video remote control profile operation settings. This is only available if the AVRCP profile is connected and the Common Settings > Profile is set to AVRCP CTRL.
	- Volume Up
	- Volume Down
	- Mute
AVRCP Operation	- Play
AVACE Operation	- Stop
	- Pause
	- Rewind - Fast Forward
	- Fast Forward - Forward
	- Polward

### Common settings



Figure 3-64 Bluetooth Analyzer > Link Config > Common Settings menu page 1

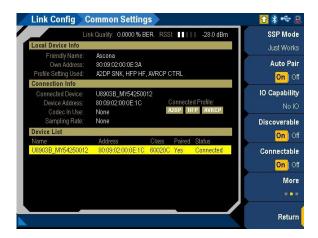


Figure 3-65 Bluetooth Analyzer > Link Config > Common Settings menu page 2



Figure 3-66 Bluetooth Analyzer > Link Config > Common Settings menu page 3

 Table 3-36
 Bluetooth Analyzer > Link Config > Common Settings menu description

Menu	Description
Profile	Press the <b>Profile</b> softkey to select the U8903B's <i>Bluetooth</i> card profile. There are two sets of profiles available and the selected profile set will be accessible by the connected <i>Bluetooth</i> device.  - A2DP SRC, HFP AG, AVRCP TRGT     A2DP source, HFP audio gateway, AVRCP target  - A2DP SNK, HFP HF, AVRCP CTRL     A2DP sink, HFP handsfree/headset, AVRCP controller
Friendly Name	Press the Friendly Name softkey to set the friendly name of the U8903B's Bluetooth card.
Device PIN	Press the <b>Device PIN</b> softkey to set the passkey for the U8903B's <i>Bluetooth</i> card.
Device Class	Press the <b>Device Class</b> softkey to select the device class based on the configured profile.  - Auto  When auto is set and the <i>Bluetooth</i> card is configured as a source profile, device class sets to 60020C (smartphone).  When auto is set and the <i>Bluetooth</i> card is configured as a sink profile, device class sets to 240408 (handsfree/headset device).  - Custom  Manually set the device class.
Custom	This is only available if the Device Class is set to Custom.  Press the <b>Custom</b> softkey to set the device class.
SSP Mode	Press the <b>SSP Mode</b> softkey to select the U8903B's <i>Bluetooth</i> card simple secure pairing (SSP) mode when pairing.  - Just Works  Just works mode is selected when only minimal security is needed. No passkey is required during pairing.  - Man-In-The-Middle  Man-in-the-middle mode is selected when maximum security is needed. A passkey is required during pairing.
Auto Pair	Press the <b>Auto Pair</b> softkey to enable or disable the auto-pairing function of the U8903B's <i>Bluetooth</i> card with a remote device.

 Table 3-36
 Bluetooth Analyzer > Link Config > Common Settings menu description (continued)

Menu	Description
	Press the IO Capability softkey to select the IO capability of the U8903B's Bluetooth card.  - Display Only
IO Capability	- Display Yes No
	- Keyboard Only
	- No IO
Discoverable	Press the <b>Discoverable</b> softkey to enable or disable the discoverability function of the U8903B's <i>Bluetooth</i> card by a remote device.
Connectable	Press the <b>Connectable</b> softkey to enable or disable the connectability function of the U8903B's <i>Bluetooth</i> card by a remote device.
Loopback	Press the <b>Loopback</b> softkey to enable or disable the integrated interchip sound (I2S) audio loopback function. This is only available if the HFP profile is connected.
Link Status	Press the <b>Link Status</b> softkey to enable or disable the link status of the U8903B's <i>Bluetooth</i> card. This is only available if the HFP profile or A2DP profile is connected.
	Press the <b>RF Port</b> softkey to select the U8903B's <i>Bluetooth</i> card RF port connector.
RF Port	- RF1
	- RF2

### A2DP settings



Figure 3-67 Bluetooth Analyzer > Link Config > A2DP Settings menu page

Table 3-37 Bluetooth Analyzer > Link Config > A2DP Settings menu description

Menu	Description
	Press the <b>Codec</b> softkey to select the prefered codec for the A2DP profile.
Codec	- SBC
	- apt-X
	Press the <b>Sampling Rate</b> softkey to select the prefered audio sampling rate for the A2DP profile.
	- 16 kHz
Sampling Rate	- 32 kHz
	- 44.1 kHz
	- 48 kHz

### HFP settings



Figure 3-68 Bluetooth Analyzer > Link Config > HFP Settings menu page

 Table 3-38
 Bluetooth Analyzer > Link Config > HFP Settings menu description

Menu	Description
Wideband	Press the <b>Wideband</b> softkey to enable or disable the wideband speech mode in the HFP profile connection. When the wideband mode is enabled, 16 kHz sampling rate and mSBC codec will be used in the connection. When the wideband mode is disabled (narrowband), 8 kHz sampling rate and CVSD codec will be used in the connection. If the wideband speech mode is enabled, the use of EV3 packet type is mandatory and must be selected together with other optional EDR packet type(s) ( EV4, EV5, 2EV3, 3EV3, 2EV5, and 3EV5). The connection will fail if the EV3 packet type is not included.
Latency	Press the <b>Latency</b> softkey to set the HFP's codec channel latency in miliseconds.  - 4 to 65534
Retransmit	Press the Retransmit softkey to select the HFP's codec retransmission effort.  No Transmission No retransmission effort.  Power Saving One or more retransmission effort. Optimized for power consumption.  Link Quality One or more retransmission effort. Optimized for link quality.  No Preference
	One or more retransmission effort. Optimized for link quality.

Bluetooth Analyzer > Link Config > HFP Settings menu description (continued) Table 3-38

Menu	Description
Packet Types	Press the <b>Packet Types</b> softkey to select the packet type used in the HFP's codec. Multiple packet types can be selected and the available options are dependent on the supported feature set of the connected <i>Bluetooth</i> device.  - HV1 - HV2 - HV3 - EV3
	- EV4 - EV5 - 2EV3 - 3EV3 - 2EV5 - 3EV5

### AVRCP log view



Figure 3-69 Bluetooth Analyzer > Link Config > AVRCP log view menu page

 Table 3-39
 Bluetooth Analyzer > Link Config > AVRCP log view menu description

Menu	Description
Clear Log	Press the Clear Log softkey to clear the AVRCP operation log history.
Refresh Log	Press the <b>Refresh Log</b> softkey to refresh the AVRCP operation log history.

# DSI Output Configuration (Digital Generator)

The DSI output configuration for the digital generator is displayed as shown in Figure 3-70.



Figure 3-70 Digital Generator > DSI Config menu page 1

**Table 3-40** Digital Generator > DSI Output Config menu description

Menu	Description
	Press the <b>Format</b> softkey to select the DSI output format.
	- Left
Format	- Right
	- 128
	- DSP
	Press the <b>Fsync Polarity</b> softkey to select the sync polarity.
Fsync Polarity	- Rising
	- Falling
	Press the <b>Fsync Width</b> softkey to select the sync width.
Fsync Width	- One Bit Clock
rsylic width	- One Subframe
	- 50% Duty Cycle
Data Shift Cnt	Press the <b>Data Shift Cnt</b> softkey to set the data shift count value.
	Press the <b>Data Shift Dir</b> softkey to select the data shift direction.
Data Shift Dir	- Left
	- Right
	Press the Word Length softkey to set the master clock word length value. The word length cannot be less than the
Word Length	audio resolution.
	- 8 to 32
Resolution	Press the <b>Resolution</b> softkey to set the audio resolution.
กะองเนเเบเ	- 8 to 24

 Table 3-40
 Digital Generator > DSI Output Config menu description (continued)

Menu	Description		
Sample Rate	Press the <b>Sample Rate</b> softkey to set the sample rate value.		
Master Clock	Press the Master Clock softkey to enable or disable the master clock output.		
Multiplier	Press the <b>Multiplier</b> softkey to set the multiplier value.		
W/BClk Dir	Press the W/BClk Dir softkey to set the word and bit clock direction.		
Bit Clk Edge	Press the <b>Bit Clk Edge</b> softkey to select the clock edge type.  - Rising - Falling		
Voltage	Press the <b>Voltage</b> softkey to select the output voltage or set your desired output voltage.  - 1.2 Vpp  - 1.5 Vpp  - 1.8 Vpp  - 2.5 Vpp  - 3 Vpp  - 3.3 Vpp  - Custom		

# AES3/SPDIF Output Configuration (Digital Generator)

The AES3/SPDIF output configuration for the digital generator is displayed as shown in **Figure 3-71**.

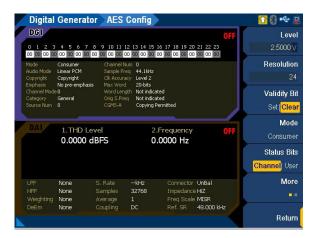


Figure 3-71 Digital Generator > AES Config menu page 1

Table 3-41 Digital Generator > AES Config menu description

Menu	Description		
Level	Press the <b>Level</b> softkey to set the output voltage level.		
Resolution	Press the <b>Resolution</b> softkey to set the audio resolution value.  - 8 to 24		
Validity Bit	Press the Validity Bit softkey to select the vailidty bit.  - Set - Clear		
Mode	Press the <b>Mode</b> softkey to select the AES3/SPDIF format.  - Consumer  - Professional		
Status Bits	Press the <b>Status Bits</b> softkey to select the status bits type.  - Channel - User		
Edit Bits	Press the <b>Edit Bits</b> softkey to configure the bits according to the format selected. Refer to " <b>Edit Bits (Consumer format)</b> " on page 161 and " <b>Edit Bits (Professional format)</b> " on page 166 for more information.		
Clear Bits	Press the <b>Clear Bits</b> softkey to clear all the bits.		
Save File	Press the <b>Save File</b> softkey to save the bits to a file. Refer to " <b>Save</b> " on page 94 for more information on the Save menu page.		
Load File	Press the <b>Load File</b> softkey to load the bits from a file. Refer to " <b>Recall</b> " on page 95 for more information on the Recall menu page.		

#### Edit Bits (Consumer format)

The AES3/SPDIF bits configuration for the Consumer format is displayed as shown in **Figure 3-72**.



Figure 3-72 Digital Generator > AES Config > Edit Bits (Consumer format) menu page 1

Table 3-42 Digital Generator > AES Config > Edit Bits (Consumer format) menu description

Menu	Description	
Select Byte	Press the <b>Select Byte</b> softkey to select the byte and edit the byte.	
Audio Mode	Press the <b>Audio Mode</b> softkey to select the audio mode.  - Non-Linear PCM  - Linear PCM	
Copyright	Press the <b>Copyright</b> softkey to select the copyright type.  - Copyright  - Non-copyright	
Emphasis	Press the <b>Emphasis</b> softkey to select the emphasis type.  No pre-emphasis  50/15 µs  Reserved 1  Reserved 2	
Channel Mode	Press the <b>Channel Mode</b> softkey to set the channel mode value.  - 0 to 3	

 Table 3-42
 Digital Generator > AES Config > Edit Bits (Consumer format) menu description (continued)

	indication and a second		
Menu	Description		
Category	Press the Category softkey to select the category code type.  General  Laser Optical  D/D Converter  Magnetic  Digital Broadcast 1  Digital Broadcast 2  Musical Instrument  ADC Non Copyright  Solid State Memory  ADC Copyright  Experimental  Reserved 1  Reserved 2		
Source Num	Press the <b>Source Num</b> softkey to set the source number 0 to 15		
Channel Num	Press the <b>Channel Num</b> softkey to set the channel number 0 to 15		
Sample Freq	Press the Sample Freq softkey to select the sample frequency value.  Not indicated  22.05 kHz  24 kHz  32 kHz  44.1 kHz  48 kHz  88.2 kHz  96 kHz  176.4 kHz  192 kHz  768 kHz		
Clk Accuracy	Press the Clk Accuracy softkey to select the clock accuracy type.  - Level 1  - Level 2  - Level 3  - Reserved		
Max Word Len	Press the <b>Max Word Len</b> softkey to select the maximum word length.  - 24 bits  - 20 bits		

 Table 3-42
 Digital Generator > AES Config > Edit Bits (Consumer format) menu description (continued)

Table 3-42 Digi	tal deficiation > ALS coming > Eart bits (consumer format) menti description (continued)
Menu	Description
Word Length	Press the Word Length softkey to select the word length.  24 bits maximum word length  Not indicated  20 bits  21 bits  22 bits  23 bits  24 bits  20 bits maximum word length  Not indicated  16 bits  17 bits  18 bits  19 bits  20 bits
Orig S.Freq	Press the Orig S.Freq softkey to select the original sample frequency value.  Not indicated  8 kHz  11.025 kHz  12 kHz  16 kHz  22.05 kHz  24 kHz  32 kHz  44.1 kHz  48 kHz  88.2 kHz  96 kHz  176.4 kHz  176.4 kHz  Reserved 1  Reserved 2
CGMA-A	Press the CGMA-A softkey to select the CGMA-A type.  - Copying Permitted  - Condition Not Used  - One Generation Copy  - Copying Denied

 Table 3-43
 AES3/SPDIF Consumer mode bit description

Bits	Label	Description		
0	Application mode	0: Consumer		
	h.h /	1: Professional		
1	Non-audio	0: Audio data is linear PCM		
		1: Other than linear PCM sa	mples	
2	Copyright	0: Asserted		
2	оорупупт	1: Not asserted		
3 - 5	Emphasis	000: Emphasis not indicated	d	
<b>3</b> – <b>3</b>	Linpilasis	100: CD-type emphasis		
6 - 7	Channel status mode	00: Mode zero		
0 - 7	Chamilet Status mode	Other values reserved		
8 - 15	Category code	Bit 8 is LSB		
16 - 19	Source number	Bit 16 is LSB		
20 - 23	Channel number	Bit 20 is LSB		
		0000: 44.1 kHz		
24 - 27	Sampling frequency	0100: 48 kHz		
		1100: 32 kHz		
		10: Level I, $\pm 50$ ppm		
28 - 29	Clock accuracy	00: Level II, ±1000 ppm		
		01: Level III, variable pitch s	hifted	
30 - 31	Reserved			
32	Mored longth (field sine)	0: Maximum length 20 bits		
32	Word length (field size)	1: Maximum length 24 bits		
			If bit 32 = 1	If bit 32 = 0
		000	Not indicated	Not indicated
		101	24 bits	20 bits
33 - 35	Word length	001	23 bits	19 bits
		010	22 bits	18 bits
		011	21 bits	17 bits
		100	20 bits	16 bits

 Table 3-43
 AES3/SPDIF Consumer mode bit description (continued)

Bits	Label	Description
	Original sampling frequency	1111: 44.1 kHz 1110: 88.2 kHz 1101: 22.05 kHz 1100: 176.4 kHz
		1011: 48 kHz 1010: 96 kHz
36 - 39		1001: 24 kHz 1000: 192 kHz 0111: Reserved
		0110: 8 kHz 0101: 11.025 kHz
		0100: 12 kHz 0011: 32 kHz
		0010: Reserved 0001: 16 kHz 0000: Not indicated
40 - 41	CGMS-A	00: Copying permitted 01: Condition not used 10: One generation copy 11: Copying denied
42 - 192	Reserved	

### Edit Bits (Professional format)

The AES3/SPDIF bits configuration for the Professional format is displayed as shown in **Figure 3-72**.

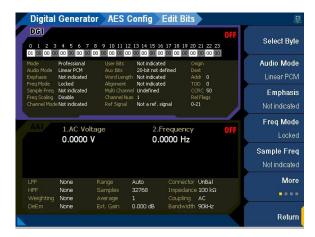


Figure 3-73 Digital Generator > AES Config > Edit Bits (Consumer format) menu page 1

Table 3-44 Digital Generator > AES Config > Edit Bits (Professional format) menu description

Menu	Description
Select Byte	Press the <b>Select Byte</b> softkey to select the byte and edit the byte.
	Press the <b>Audio Mode</b> softkey to select the audio mode.
Audio Mode	- Non-Linear PCM
	- Linear PCM
	Press the <b>Emphasis</b> softkey to select the emphasis type.
	- Not indicated
Emphasis	- No pre-emphasis
	- 50/15 μs
	- CCITT J.17
	Press the <b>Freq Mode</b> softkey to select the frequency mode.
Freq Mode	- Locked
	- Unlocked

 Table 3-44
 Digital Generator > AES Config > Edit Bits (Professional format) menu description (continued)

Menu	Description
	Press the <b>Sample Freq</b> softkey to select the sample frequency value.
	- Not indicated
	- 22.05 kHz
	- 24 kHz
	- 32 kHz
Sample Freq	- 44.1 kHz
	- 48 kHz
	- 88.2 kHz
	- 96 kHz
	- 176.4 kHz
	- 192 kHz
Freq Scaling	Press the Freq Scaling softkey to enable or disable frequency scaling.
	Press the <b>Chan Mode</b> softkey to select the channel mode.
	- Not indicated
	- 2-channel
	- Single channel
	- Primary-Secondary
Chan Mode	- Stereo
Chan Mode	- Reserved 1
	- Reserved 2
	- Mono Double Rate
	- Left Double Rate
	- Right Double Rate
	- Multichannel
	Press the <b>User Bits</b> softkey to select the user bits type.
	- Not indicated
	- 192-bit block
User Bits	- Reserved for AES18
	- User defined
	- Reserved for Metadata
	- As in IEC60958-3
	Press the <b>Aux Bits</b> softkey to select the auxiliary bits.
	- 20-bit not defined
Aux Bits	- 24-bit main audio
	- 20-bit single
	- Reserved

 Table 3-44
 Digital Generator > AES Config > Edit Bits (Professional format) menu description (continued)

Menu	Description		
	Press the <b>Word Length</b> softkey to select the word length.		
	24 bits maximum word length		
	- Not indicated		
	- 20 bits		
	- 21 bits		
	- 22 bits		
	- 23 bits		
Word Length	- 24 bits		
	20 bits maximum word length		
	- Not indicated		
	- 16 bits		
	- 17 bits		
	- 18 bits		
	- 19 bits		
	- 20 bits		
	Press the <b>Alignment</b> softkey to select the alignment level.		
	- Not Indicated		
Alignment	18.06 dBFS		
· ·	20 dBFS		
	- Reserved		
	Press the <b>Multi-Channel</b> softkey to select the multi-channel status.		
Multi-Channel	- Defined		
	- Undefined		
	This is only available when the multi-channel status is set to Defined.		
	Press the Multi-Ch Mode softkey to select the multi-channel mode.		
	- Mode 0		
Multi-Ch Mode	- Mode 1		
	- Mode 2		
	- Mode 3		
	- User Defined		
	Press the <b>Channel Num</b> softkey to set the channel number.		
Channel Num	- 1 to 16 (Defined multi-channel status)		
	- 1 to 128 (Undefined multi-channel status)		
	Press the <b>Ref Signal</b> softkey to select the reference signal type.		
	- Not a ref. signal		
Ref Signal	- Grade 1		
	- Grade 2		
	- Reserved		
Channel Origin	Press the <b>Channel Origin</b> softkey to set the channel origin value (4 alphanumeric digit).		
Channel Dest	Press the <b>Channel Dest</b> softkey to set the channel destination value (4 alphanumeric digit).		
Local Addr	Press the <b>Local Addr</b> softkey to set the local address value.		
LUCAL AUUI	$- 0 \text{ to } 2^{32} - 1$		

 Table 3-44
 Digital Generator > AES Config > Edit Bits (Professional format) menu description (continued)

Menu	Description
Time of Day	Press the <b>Time of Day</b> softkey to set the time of day.
	- 0 to 2 <sup>32</sup> -1
	Press the <b>Rel Flags</b> softkey to select the reliability flags.
	- 0-5
Rel Flags	- 6-13
	- 14-17
	- 18-21

 Table 3-45
 AES3/SPDIF Professional mode bit description

Bits	Label	Description
0	Application mode	0: Consumer
		1: Professional
1	Non-audio	0: Audio data is linear PCM samples
,		1: Other than linear PCM samples
		000: Not indicated
2 - 4	Emphasis	100: No emphasis
	2p.1.40.10	110: CD-type emphasis
		111: J-17 emphasis
5	Lock	0: Not indicated
J	LUCK	1: Unlocked
		00: Not indicated (or see byte 4)
6 - 7	Sampling frequency	10: 48 kHz
0 - 7	Sampling frequency	01: 44.1 kHz
		11: 32 kHz
		0000: Not indicated (default to 2 channels)
	Channel mode	0001: 2 channels
	Chainet mode	0010: 1 channel (monophonic)
		0011: Primary/secondary
		0100: Stereo
		0101: Reserved for user application
8 – 11		0110: Reserved for user application
		0111: SCDSR (see byte 3 for ID)
		1000: SCDSR (stereo left)
		1001: SCDSR (stereo right)
		1111: Multichannel (see byte 3 for ID)
		Single Channel Double Sample Rate (SCDSR)

 Table 3-45
 AES3/SPDIF Professional mode bit description (continued)

Bits	Label	Description		
12 - 15	User bit management	0000: Not indicated 0001: 192-bit block as in ct 0010: As defined in AES18 0011: User-defined 0100: As in IEC60958-3 (co		
16 - 18	Use of AUX sample word	0000: Not defined, audio ma 0001: Used for main audio, 0010: Used for coordination 0011: User-defined		its
19 - 21	Source word length	000: 001: 010: 011: 100: 101:	If maximum = 24 bits Not indicated 23 bits 22 bits 21 bits 20 bits 24 bits	If maximum = 20 bits Not indicated 19 bits 18 bits 17 bits 16 bits 20 bits
22 - 23	Alignment level	00: Not indicated 01: -20 dBFS 10: -18.06 dBFS		
24 - 31	Channel identification		umber is 1 plus the numeric v define a multichannel mode a	value of bits 24 - 30. and bits 0 - 3 give the channel
32 - 33	Digital Audio Reference Signal (DARS)	00: Not a DARS 01: DARS grade 1 (±1 ppm) 10: DARS grade 2 (±10 ppm		
35 - 38	Sampling frequency	0000: Not indicated 1000: 24 kHz 0100: 96 kHz 1001: 22.05 kHz 0101: 88.2 kHz 1101: 176.4 kHz 1111: User defined		
39	Sampling frequency scaling	0: No scaling 1: Apply factor of 1/1.001 to	o value	
48 - 79	Alphanumeric channel origin	Four-character label using 7 Bit 55, 63, 71, 79 = 0	7-bit ASCII with no parity.	
80 - 111	Alphanumeric channel destination	Four-character label using 7 Bit 87, 95, 103, 111 = 0	7-bit ASCII with no parity.	
112 - 143	Local sample address code	32-bit binary number repres status block	senting the sample count of t	he first sample of the channel
144 - 175	Time of day code	32-bit binary number repres	senting tiem source encoding	in samples since midnight

 Table 3-45
 AES3/SPDIF Professional mode bit description (continued)

Bits	Label	Description
176 - 183	Reliability flags	0: Data in byte range is reliable 1: Data in byte range is unreliable
184 – 191	CRCC	0000000: Not implemented nnnnnnn: Error check code for bits 0 - 183

# References (Analog Generator)

The output references for the analog generator is displayed as shown in Figure 3-74.

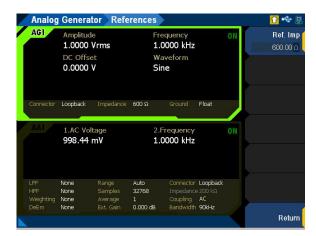


Figure 3-74 Analog Generator > References menu page

Table 3-46 Analog Generator > References menu description

Menu	Description
Ref. Imp	Press the <b>Ref. Imp</b> softkey to set the reference impedance for the unit conversion of dBm measurements.

## References (Digital and Bluetooth Generator)

The output references for the digital and *Bluetooth* generator is displayed as shown in **Figure 3-75** and **Figure 3-76** respectively.



Figure 3-75 Digital Generator > References menu page

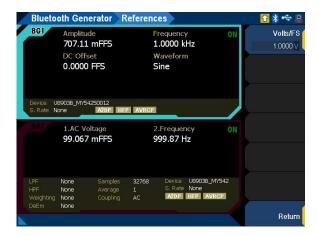


Figure 3-76 Bluetooth Generator > References menu page

 Table 3-47
 Digital/Bluetooth Generator > References menu description

Menu	Description
Volts/FS	Press the <b>Volts/FS</b> softkey to set the volts/FS reference for the analog output voltage (in Volts) of the DAC used when converted to digital full scale (1 FS). This is useful in DAC tests for the conversion of digital units to analog units.

3

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

# Keysight U8903B Performance Audio Analyzer User's Guide

# 4 Audio Analyzer Measurement Functions

Audio Analyzer 177
Measurement mode (Digital Analyzer) 181
Functions 184
Measurement Functions 186
Frequency measurement 186
AC voltage level measurement 189
DC voltage level measurement 193
THD+N ratio and THD+N level measurements 196
SINAD measurement 202
THD ratio and THD level measurements 205
SMPTE IMD measurements 212
DFD measurements 215
SNR measurement 217
SNR (fast mode) measurement 219
J-test measurement 222
Positive peak measurement 223
Negative peak measurement 225
Phase Measurement 227
Crosstalk Measurement 230
Filters Configuration (Analog Analyzer) 233
Notch Filter 235
Filters Configuration (Digital Analyzer) 236
Filters Configuration (Bluetooth Analyzer) 238
Notch Filter 239
Measurement Configuration (Analog Analyzer) 240
Measurement Configuration (Digital Analyzer) 242
Measurement Configuration (Bluetooth Analyzer) 244
rigger (Analog, Digital, and Bluetooth Analyzer) 246
nput Configuration (Analog Analyzer) 248
nput Configuration (Digital Analyzer) 250
ink Configuration (Bluetooth Analyzer) 252
OSI Input Configuration (Digital Analyzer) 253
AES/SPDIF Input Configuration (Digital Analyzer) 255
Bits Analysis (Digital Analyzer) 256



#### 4 Audio Analyzer Measurement Functions

Wave File (Analog, Digital, and Bluetooth Analyzer) 257 Statistics 259

This chapter describes the U8903B performance audio analyzer measurement functions and configurations.

### Audio Analyzer

Press on the FUNCTION panel to switch between audio generator or audio analyzer mode. The Analog Analyzer menu page, Digital Analyzer menu page, and *Bluetooth* Analyzer menu page are displayed as shown in **Figure 4-1**, **Figure 4-2**, and **Figure 4-3** respectively.

Press Interface on the FUNCTION panel to switch between analog and digital interface.

Press on the CHANNEL/DATA panel to switch to channel 1 or channel 2 respectively, and start configuring the active channel.

The U8903B can also be expanded with additional analog analyzer channels. Refer to "U8903B Options" on page 37 for more information.

Press on the RUN CONTROL panel to start or stop the measurements for the selected analyzer channel.



Figure 4-1 Analog Analyzer menu page

Table 4-1 Analog Analyzer menu description

Menu	Description
Functions	Press the <b>Functions</b> softkey to configure the analog analyzer functions. Refer to " <b>Functions</b> " on page 184 for more information.
Filters Config	Press the <b>Filters Config</b> softkey to set the filters configuration. Refer to " <b>Filters Configuration (Analog Analyzer)</b> " on page 233 for more information.
Meas Config	Press the <b>Meas Config</b> softkey to set the measurement configuration. Refer to " <b>Measurement Configuration (Analog Analyzer)</b> " on page 240 for more information.
Input Config	Press the <b>Input Config</b> softkey to set the input configuration. Refer to " <b>Input Configuration (Analog Analyzer)</b> " on page 248 for more information.
Wave File	Press the <b>Wave File</b> softkey to configure the wave file settings. Refer to " <b>Wave File (Analog, Digital, and Bluetooth Analyzer)</b> " on page 257 for more information.
Statistics	Press the <b>Statistics</b> softkey to configure the statistics settings. Refer to " <b>Statistics</b> " on page 259 for more information.



Figure 4-2 Digital Analyzer menu page (standard measurement mode)

 Table 4-2
 Digital Analyzer menu description

Menu	Description
	Press the <b>Meas Mode</b> softkey to select the measurement mode. Refer to " <b>Measurement mode (Digital Analyzer)</b> " on page 181 for more information.
Meas Mode	- Standard
	- Process Delay
	- BERT
	This is only available when the measurement mode is BERT.
Unit	Press the <b>Unit</b> softkey to select the unit for the BERT measurement mode.
Ollit	- Hex
	- Dec
	This is only available when the measurement mode is Standard.
Functions	Press the <b>Functions</b> softkey to configure the analog analyzer functions. Refer to " <b>Functions</b> " on page 184 for more information.
	This is only available when the measurement mode is Standard.
Filters Config	Press the <b>Filters Config</b> softkey to set the filters configuration. Refer to " <b>Filters Configuration (Digital Analyzer)</b> " on page 236 for more information.
	This is only available when the measurement mode is Standard.
Meas Config	Press the <b>Meas Config</b> softkey to set the measurement configuration. Refer to " <b>Measurement Configuration (Digital Analyzer)</b> " on page 242 for more information.
Input Config	Press the <b>Input Config</b> softkey to set the input configuration. Refer to " <b>Input Configuration (Digital Analyzer)</b> " on page 250 for more information.
DSI Config	Press the <b>DSI Config</b> softkey to set the DSI input configurations such as the format, resolution, and others. Refer to " <b>DSI Input Configuration (Digital Analyzer)</b> " on page 253 for more information.
AES/SPDIF	Press the AES/SPDIF softkey to set the AES3/SPDIF input configurations such as the decoding, resolution, and others. Refer to "AES/SPDIF Input Configuration (Digital Analyzer)" on page 255 for more information.
Bits Analysis	Press the <b>Bits Analysis</b> softkey to set the bits analysis configuration. Refer to " <b>Bits Analysis (Digital Analyzer)</b> " on page 256 for more information.
Statistics	Press the <b>Statistics</b> softkey to configure the statistics settings. Refer to " <b>Statistics</b> " on page 259 for more information.



Figure 4-3 Bluetooth Analyzer menu page

 Table 4-3
 Bluetooth Analyzer menu description

Menu	Description	
Functions	Press the <b>Functions</b> softkey to configure the analog analyzer functions. Refer to " <b>Functions</b> " on page 184 for more information.	
Filters Config	Press the <b>Filters Config</b> softkey to set the filters configuration. Refer to " <b>Filters Configuration (Analog Analyzer)</b> " on page 233 for more information.	
Meas Config	Press the <b>Meas Config</b> softkey to set the measurement configuration. Refer to " <b>Measurement Configuration (Analog Analyzer)</b> " on page 240 for more information.	
Link Config	Press the <b>Link Config</b> softkey to set the input configuration. Refer to " <b>Link Configuration (Bluetooth Analyzer)</b> " on page 252 for more information.	
Wave File	Press the Wave File softkey to configure the wave file settings. Refer to "Wave File (Analog, Digital, and Bluetooth Analyzer)" on page 257 for more information.	
Statistics	Press the <b>Statistics</b> softkey to configure the statistics settings. Refer to " <b>Statistics</b> " on page 259 for more information.	

# Measurement mode (Digital Analyzer)

#### Standard

Standard mode is the default mode for the digital analyzer.

# Process delay

The process delay measurement calculates the time difference between the output and input frames. A digital audio signal will have delay when the signal is transmitted through a DUT. The process delay measurement calculates the time difference between the first output frame signal and the first input frame signal. Due to the nature of measurements involving frame-to-frame delay, this measurement is only meant for the AES3 signal which has a unique frame pattern. Process delay mode allows you to view the process delay in seconds.

NOTE

When the digital analyzer analysis mode is set to Process Delay, you are not allowed to perform any other types of measurements.



Figure 4-4 Digital Analyzer menu page (process delay measurement mode)

### BERT (Bit Error Rate Test)

The BERT mode measurement will provide the total errors, total bits run, and bit error rate. This test will only be meaningful if the selected output and input connectors are the same type.

The U8903B is able to analyze all waveform types generated by the digital generator In BERT mode except for the following:

- Monotonicity
- Square wave with the frequency setting less than half the sampling rate
- Walking one or walking zero with the Sample per Step setting more than 1

### NOTE

If square wave for BERT analysis is needed, set the frequency of the square wave to be equal to half the sampling rate.

If walking one or walking zero for BERT analysis is needed, set the sample per step to be equal to 1.

### NOTE

When the digital analyzer measurement mode is set to BERT, you are not allowed to perform any other types of measurements.



**Figure 4-5** Digital Analyzer menu page (BERT measurement mode)

Table 4-4 Digital Analyzer > Meas Mode > BERT menu description

Menu	Description
Unit	Press the <b>Unit</b> softkey to select the BERT result in either hex or decimal.  Hex  Dec
Reset BERT	Press the <b>Reset BERT</b> softkey to reset the BERT result.

# **Functions**

The U8903B supports up to four functions to be measured in one single query. The function configuration for analog, digital, and Bluetooth analyzer are displayed as shown in

Figure 4-6, Figure 4-7, and Figure 4-8.

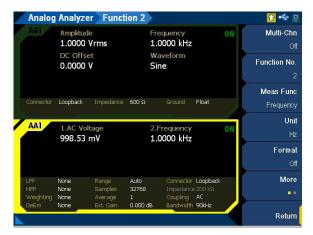


Figure 4-6 Analog Analyzer > Functions menu page 1



Figure 4-7 Digital Analyzer > Functions menu page 1



Figure 4-8 Bluetooth Analyzer > Functions menu page 1

 Table 4-5
 Analog/Digital/Bluetooth Analyzer > Functions menu description

Menu	Description
	Press the Multi-Chn softkey to select the multichannel measurement mode.
	- Off
	The measurement functions are set independently across all channels.
Multi-Chn	- Phase
	Refer to "Phase Measurement" on page 227 for the configuration.
	- X-Talk
	Refer to "Crosstalk Measurement" on page 230 for the configuration.
Function No.	Press the Function No. softkey to select the active function number to configure the settings.
Meas. Func	Press the Meas. Func softkey to display the list of available analyzer measurement function types. Select the desired
	measurement function from the drop-down list. Refer to "Measurement Functions" on page 186 for the respective measurement functions settings.
	This setting is only available when the multichannel mode is set to Off.

#### 4

# Measurement Functions

### Frequency measurement

Frequency is a common and basic measurement function which is expressed in hertz (Hz). The U8903B uses software algorithm to detect the period of a repetitive waveform, and the frequency is computed from the reciprocal of the period.

To obtain better accuracy and resolution, auto ranging should be enabled. For low-frequency signals, set a larger sample size to obtain better and more stable readings. Input filters can also be activated to remove unwanted high-frequency noise from the measured signal, allowing more stable readings.

Frequency measurement function mode is applicable for the analog, digital, and *Bluetooth* analyzer. The settings for frequency measurement are displayed as shown in **Figure 4-9**, **Figure 4-10**, and **Figure 4-11** for the analog, digital, and *Bluetooth* analyzer respectively.

#### NOTE

A limitation in the firmware supplied by the *Bluetooth* chipset vendor causes the *Bluetooth* analyzer frequency measurement for the A2DP profile under SBC codec at 44.1 kHz sampling rate to exhibit a ±0.05% measurement error. Do expect approximately 30 s of settling time for the first frequency measurement in the A2DP profile after the Open Media Connection have been initiated



Figure 4-9 Analog Analyzer > Functions > Frequency menu page 1



Figure 4-10 Digital Analyzer > Functions > Frequency menu page 1



Figure 4-11 Bluetooth Analyzer > Functions > Frequency menu page 1

 Table 4-6
 Analog/Digital/Bluetooth Analyzer > Functions > Frequency menu description

Menu	Description
	Press the <b>Unit</b> softkey to select the measurement unit.
Unit	- Hz
	- ΔHz
	Press the <b>Format</b> softkey to select the format of the returned measurement reading.
	- Off
Format	Selecting Off will return the measurement reading without any formatting (raw value).
	<ul> <li>Delta</li> <li>Selecting Delta will return the measurement result by deducting the reference frequency from the measured frequency.</li> </ul>

#### 4 Audio Analyzer Measurement Functions

 Table 4-6
 Analog/Digital/Bluetooth Analyzer > Functions > Frequency menu description (continued)

Menu	Description
Set result as ref. from	Press the <b>Set result as ref. from</b> softkey to store the measurement result from the selected channel as the reference frequency.
Ref. Freq	Press the <b>Ref. Freq</b> softkey to set the reference frequency.

### AC voltage level measurement

NOTE

Ensure that the input coupling is set to AC before measuring AC voltage level. Refer to "Input Configuration (Analog Analyzer)" on page 248 and "Measurement Configuration (Digital Analyzer)" on page 242 for more information.

AC voltage level measurement is the most common measurement function of an AC signal. The U8903B provides two types of AC level detection consisting of rms and peak-to-peak. When the rms detection method is selected, the AC voltage measurement is expressed as an rms value. Likewise, if the peak-to-peak detector is selected, the result is a peak-to-peak value.

As an example, for a 1 Vrms sine input signal, the display will show 1 V if the rms detector is selected. On the other hand, if the peak-to-peak detector is selected, the display will show  $2.828 \text{ V} (1.414 \times 2)$ .

AC voltage level measurement function mode is applicable for the analog, digital, and *Bluetooth* analyzer. The settings for AC voltage level measurement are displayed as shown in **Figure 4-12**, **Figure 4-13** and **Figure 4-14** for the analog, digital, and *Bluetooth* analyzer respectively.



Figure 4-12 Analog Analyzer > Functions > AC Voltage menu page 1



Figure 4-13 Digital Analyzer > Functions > AC Voltage menu page 1



Figure 4-14 Bluetooth Analyzer > Functions > AC Voltage menu page 1

 Table 4-7
 Analog/Digital/Bluetooth Analyzer > Functions > AC Voltage menu description

Menu	Description
Unit	Press the Unit softkey to select the measurement unit.  Analog Analyzer  - dBg  - dBm  - dBr  - dBu  - dBV  - W  - V  - \( \Delta \)  - dBSPL  - x  Digital and Bluetooth Analyzer  - FFS  - dBFS  - %FS  - V  - dBu  - dBv  - dBv  - W  - V  - dBsps  - %FS  - V  - dBu  - dBr  - dBr  - kBsps  - dBsps
Format  Set to OdB	Press the Format softkey to select the format of the returned measurement reading.  Off Selecting Off will return the measurement reading without any formatting (raw value).  Logarithmic Selecting Logarithmic will return the measurement result by using the following formula:  20 log 10 (Measured rms voltage) Reference level  The result is returned in unit dBr.  Linear Selecting Linear will return the measurement result by dividing the measured level by the reference level. The result is returned in unit x.  Delta Selecting Delta will return the measurement result by deducting the reference level from the measured level. The result is returned in unit ΔV. This is only available for the analog analyzer.  This is only available for analog analyzer.
	Press the <b>Set to 0dB</b> softkey to store the measured level as the reference level, and set the measurement reading format to Logarithmic.
Set result as ref. from	Press the <b>Set result as ref. from</b> softkey to store the measurement result from the selected channel as the reference level.
Ref. Level	Press the <b>Ref. Level</b> softkey to set the reference level value. There is only one reference level for each channel.

#### 4 Audio Analyzer Measurement Functions

 Table 4-7
 Analog/Digital/Bluetooth Analyzer > Functions > AC Voltage menu description (continued)

Menu	Description
Ref. Imp	This is only available for the analog analyzer.  Press the <b>Ref. Imp</b> softkey to set the reference impedance value. This setting is only available if the unit is set to W.
Volt/FS	This is only available for the digital analyzer.  Press the <b>Volt/FS</b> softkey to set the volts/FS reference value.
Cal SPL	Press the Cal SPL softkey to set the calibrator level value. This setting is only available when the unit is set to dBSPL.
Detector	Press the <b>Detector</b> softkey to select the AC level detection type.  - RMS - Pk-Pk

# DC voltage level measurement

NOTE

Ensure that the input coupling is set to DC before measuring DC voltage level. Refer to "Input Configuration (Analog Analyzer)" on page 248 and "Measurement Configuration (Digital Analyzer)" on page 242 for more information.

DC voltage levels are often encountered in audio equipment although they are not part of the audio signal, for example, bias voltages and outputs from AC-to-DC converters. DC voltage is expressed in volts (V). The input coupling must be set to DC for DC voltage level measurement.

DC voltage level measurement function mode is applicable for the analog, digital, and *Bluetooth* analyzer. The settings for DC voltage level measurement are displayed as shown in **Figure 4-15**, **Figure 4-16**, and **Figure 4-17** for the analog, digital, and *Bluetooth* analyzer respectively.



Figure 4-15 Analog Analyzer > Functions > DC Voltage menu page 1



Figure 4-16 Digital Analyzer > Functions > DC Voltage menu page 1

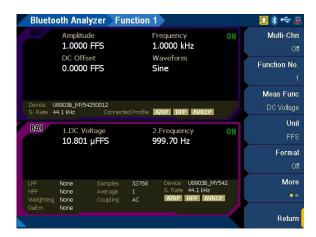


Figure 4-17 Bluetooth Analyzer > Functions > DC Voltage menu page 1

 Table 4-8
 Analog/Digital/Bluetooth Analyzer > Functions > DC Voltage menu description

Menu	Description
	Press the <b>Unit</b> softkey to select the measurement unit.
	Analog Analyzer
	- V
	- ΔV
	- X
Unit	Digital and Bluetooth Analayzer
UIIIL	- FFS
	- V
	- LSB
	- Hex
	- Dec
	- x
	Press the <b>Format</b> softkey to select the format of the returned measurement reading.
	- Off
	Selecting Off will return the measurement reading without any formatting (raw value).
Farmet	- Linear
Format	Selecting Linear will return the measurement result by dividing the measured level by the reference level. The result is returned in unit x.
	- Delta
	Selecting Delta will return the meausrement result by deducting the reference level from the measured level. The result is returned in unit ΔV. This is only available for the analog analyzer.
Set result as ref. from	Press the <b>Set result as ref. from</b> softkey to store the measurement result from the selected channel as the reference level.
Ref. Level	Press the <b>Ref. Level</b> softkey to set the reference level value. There is only one reference level for each channel.

#### THD+N ratio and THD+N level measurements

Harmonic distortion on a spectrally pure signal is created by nonlinearities in the circuit through which it passes. The nonlinearities can arise in the transfer characteristics of an active device or by running the active device into saturation or cutoff. In most cases, distortion can be reduced by decreasing the signal level, applying filtering, or adding negative feedback.

According to Fourier mathematics, the nonlinear terms in the circuit transfer function give rise to harmonics of the signal. Therefore, the THD+N function provides a quantitative measurement of the quality of an audio signal or in other words, the purity of a signal.

The THD+N ratio is defined as the ratio of the square root of the sum of the squares of all the signal harmonics components and noise amplitude, relative to the total signal amplitude. The THD+N ratio can be computed as follows.

THD+N ratio = 
$$20 \log_{10} \left( \frac{\text{rms value of noise and distortion}}{\text{rms value of signal, noise, and distortion}} \right)$$

THD+N ratio measurement function mode is applicable for the analog, digital, and *Bluetooth* analyzer. The settings for THD+N ratio measurement are displayed as shown in **Figure 4-18**, **Figure 4-19**, and **Figure 4-20** for the analog, digital, and *Bluetooth* analyzer respectively.



Figure 4-18 Analog Analyzer > Functions > THD+N Ratio menu page 1



Figure 4-19 Digital Analyzer > Functions > THD+N Ratio menu page 1

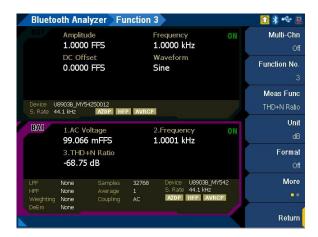


Figure 4-20 Bluetooth Analyzer > Functions > THD+N Ratio menu page 1

4

 Table 4-9
 Analog/Digital/Bluetooth Analyzer > Functions > THD+N Ratio menu description

Menu	Description
	Press the <b>Unit</b> softkey to select the measurement unit.
	- dB
Unit	- ∆dB
	- %
	- x
	Press the Format softkey to select the format of the returned measurement reading.
	- Off
	Selecting Off will return the measurement reading without any formatting (raw value).
Format	- Linear
romat	Selecting Linear will return the measurement result by dividing the measured ratio by the reference ratio. The result is returned in unit x.
	- Delta  Selecting Delta will return the measurement result by deducting the reference ratio from the measured ratio. The result
	Selecting Delta will return the measurement result by deducting the reference ratio from the measured ratio. The result will be returned in unit $\Delta dB$ .
	This is only available for analog analyzer.
Set to OdB	Press the <b>Set to 0dB</b> softkey to store the measured ratio as the reference ratio, and set the measurement reading format to Delta.
Set result as ref. from	Press the Set result as ref. from softkey to store the measurement result from the selected channel as the reference ratio.
Ref. Ratio	Press the <b>Ref. Ratio</b> softkey to set the reference ratio value.
Precision	This is only available for digital analyzer.
Precision	Press the <b>Precision</b> softkey to enable or disable the precision mode.
	Press the Freq Lock softkey to select the searching method for the fundamental frequency.
	- Auto
	Selecting Auto will allow the U8903B to search for the fundamental frequency automatically.
	<ul> <li>Gen Lock</li> <li>Selecting Gen Lock will allow the U8903B to search for the fundamental frequency based on the generator frequency</li> </ul>
Freq Lock	value of the respective generator channel. You can select the generator channel by setting the <b>Src Channel</b> in the <b>Meas</b>
	<b>Config.</b> menu page. This Gen Lock method is only useful if you use the internal audio generator.
	- Custom
	If you have a known input signal, you can define the fundamental frequency value by setting the searching method to
	Custom and setting the frequency value in <b>Fund Freq</b> .
Fund Freq	Press the <b>Fund Freq</b> softkey to set the fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.
	This is only available for analog analyzer.
Analog Notch	Press the <b>Analog Notch</b> softkey to enable or disable the analog notch filter. This filter is used to emulate the analog notch filter used in HP8903B.

THD+N level is defined as the square root of the sum of the squares of all the signal harmonics components and noise amplitude, and it is expressed in Vrms. The THD+N level can be computed as follows.

THD+N Level = rms value of noise and distortion

THD+N level measurement function mode is applicable for the analog, digital, and *Bluetooth* analyzer. The settings for THD+N level measurement are displayed as shown in **Figure 4-21**, **Figure 4-22**, and **Figure 4-23** for the analog, digital, and *Bluetooth* analyzer respectively.

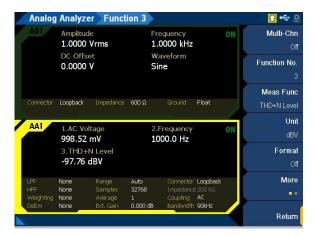


Figure 4-21 Analog Analyzer > Functions > THD+N Level menu page 1



Figure 4-22 Digital Analyzer > Functions > THD+N Level menu page 1



Figure 4-23 Bluetooth Analyzer > Functions > THD+N Level menu page 1

 Table 4-10
 Analog/Digital/Bluetooth Analyzer > Functions > THD+N Level menu description

Menu	Description
	Press the <b>Unit</b> softkey to select the measurement unit.
	Analog Analyzer
	- dBg
	- dBm
	- dBr
	- dBu
	- dBV
	- W
	- V
	- ΔV
	- dBSPL
	- x
Unit	Digital and <i>Bluetooth</i> Analyzer
	- FFS
	- dBFS
	- %FS
	- V
	- dBu
	- dBV
	- dBr
	- x
	- LSB
	- Hex
	- Dec
	- dBSPL

 Table 4-10
 Analog/Digital/Bluetooth Analyzer > Functions > THD+N Level menu description (continued)

Menu	Description
	Press the <b>Format</b> softkey to select the format of the returned measurement reading.
	<ul> <li>Off         Selecting Off will return the measurement reading without any formatting (raw value).</li> <li>Logarithmic</li> </ul>
Format	Selecting Logarithmic will return the measurement result by using the following formula:  20 log 10 (Measured rms voltage) Reference level  The result is returned in unit dBr.
	<ul> <li>Linear         Selecting Linear will return the measurement result by dividing the measured level by the reference level. The result is returned in unit x.     </li> <li>Delta         Selecting Delta will return the measurement result by deducting the reference level from the measured level. The result is returned in unit ΔV. This is only available for the analog analyzer.     </li> </ul>
Set to 0dB	This is only available for analog analyzer.  Press the <b>Set to 0dB</b> softkey to store the measured level as the reference level, and set the measurement reading format to Logarithmic.
Set result as ref. from	Press the <b>Set result as ref. from</b> softkey to store the measurement result from the selected channel as the reference level.
Ref. Level	Press the <b>Ref. Level</b> softkey to set the reference level value. There is only one reference level for each channel.
Ref. Imp	This is only available for the analog analyzer.  Press the <b>Ref. Imp</b> softkey to set the reference impedance value. This setting is only available if the unit is set to W and dBm.
Volt/FS	This is only available for the digital and <i>Bluetooth</i> analyzer.  Press the <b>Volt/FS</b> softkey to set the volts/FS reference value.
Precision	This is only available for the digital analyzer.  Press the <b>Precision</b> softkey to enable or disable the precision mode.
Cal SPL	Press the Cal SPL softkey to set the calibrator level value. This setting is only available when the unit is set to dBSPL.
	Press the Freq Lock softkey to select the searching method for the fundamental frequency.  - Auto Selecting Auto will allow the U8903B to search for the fundamental frequency automatically.  - Gen Lock
Freq Lock	Selecting Gen Lock will allow the U8903B to search for the fundamental frequency based on the generator frequency value of the respective generator channel. You can select the generator channel by setting the <b>Src Channel</b> in the <b>Meas.</b> Config. menu page. This Gen Lock method is only useful if you use the internal audio generator.  Custom  If you have a known input signal, you can define the fundamental frequency value by setting the searching method to Custom and setting the frequency value in <b>Fund Freq</b> .
Fund Freq	Press the <b>Fund Freq</b> softkey to set the fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.
Analog Notch	This is only available for analog analyzer.  Press the <b>Analog Notch</b> softkey to enable or disable the analog notch filter. This filter is used to emulate the analog notch filter used in HP8903B.

### SINAD measurement

SINAD (Signal, Noise, and Distortion Ratio) is equal to the reciprocal of the distortion measurement. It is mostly used to determine the sensitivity of a communications receiver. The ratio computed in the SINAD measurement is shown as follows.

SINAD = 
$$20 \text{ Log} \left( \frac{\text{rms value of signal, noise, and distortion}}{\text{rms value of noise and distortion}} \right)$$

SINAD measurement function mode is applicable for the analog, digital, and *Bluetooth* audio analyzer. The settings for SINAD measurement are displayed as shown in **Figure 4-24**, **Figure 4-25**, and **Figure 4-26** for the analog, digital, and *Bluetooth* analyzer respectively.



Figure 4-24 Analog Analyzer > Functions > SINAD menu page 1



Figure 4-25 Digital Analyzer > Functions > SINAD menu page 1



Figure 4-26 Bluetooth Analyzer > Functions > SINAD menu page 1

Table 4-11 Analog/Digital/Bluetooth Analyzer > Functions > SINAD menu description

Menu	Description
Unit	Press the <b>Unit</b> softkey to select the measurement unit.  - dB  - \( \Delta \text{dB} \)  - \( \% \)  - \( \text{x} \)
Format	<ul> <li>Press the Format softkey to select the format of the returned measurement reading.</li> <li>Off         Selecting Off will return the measurement reading without any formatting (raw value).</li> <li>Linear         Selecting Linear will return the measurement result by dividing the measured ratio by the reference ratio. The result is returned in unit x.</li> <li>Delta         Selecting Delta will return the measurement result by deducting the reference ratio from the measured ratio. The result will be returned in unit ΔdB.</li> </ul>
Set to 0dB  Set result as ref. from	This is only available for the analog analyzer.  Press the <b>Set to 0dB</b> softkey to store the measured ratio as the reference ratio, and set the measurement reading format to Delta.  Press the <b>Set result as ref. from</b> softkey to store the measurement result from the selected channel as the reference ratio.
Ref. Ratio	Press the <b>Ref. Ratio</b> softkey to set the reference ratio value.
Precision	This is only available for the digital analyzer.  Press the <b>Precision</b> softkey to enable or disable the precision mode.

 Table 4-11
 Analog/Digital/Bluetooth Analyzer > Functions > SINAD menu description (continued)

Menu	Description
Freq Lock	Press the Freq Lock softkey to select the searching method for the fundamental frequency.  Auto Selecting Auto will allow the U8903B to search for the fundamental frequency automatically.  Gen Lock Selecting Gen Lock will allow the U8903B to search for the fundamental frequency based on the generator frequency value of the respective generator channel. You can select the generator channel by setting the Src Channel in the Meas. Config. menu page. This Gen Lock method is only useful if you use the internal audio generator.  Custom If you have a known input signal, you can define the fundamental frequency value by setting the searching method to
	Custom and setting the frequency value in <b>Fund Freq</b> .
Fund Freq	Press the <b>Fund Freq</b> softkey to set the fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.

#### THD ratio and THD level measurements

THD (Total Harmonic Distortion) measures the selected harmonics amplitude that are generated due to the nonlinearity of the DUT and adding up the harmonics amplitude. The THD measurement will exclude any noise components that may be present in the DUT.

THD Ratio is defined as the ratio of the THD Level relative to the fundamental signal amplitude, and it is expressed in dB (default) or as a percentage. The THD Ratio can be computed as follows.

THD ratio = 
$$20 \text{ Log}_{10} \left( \frac{\text{rms value of distortion}}{\text{rms value of signal and distortion}} \right)$$

THD+N Ratio measurement function mode is applicable for the analog, digital, and *Bluetooth* analyzer. The settings for THD ratio measurement are displayed as shown in **Figure 4-27**, **Figure 4-28**, and **Figure 4-29** for the analog, digital, and *Bluetooth* analyzer respectively.



Figure 4-27 Analog Analyzer > Functions > THD Ratio menu page 1



Figure 4-28 Digital Analyzer > Functions > THD Ratio menu page 1



Figure 4-29 Bluetooth Analyzer > Functions > THD Ratio menu page 1

 Table 4-12
 Analog/Digital/Bluetooth Analyzer > Functions > THD Ratio menu description

Menu	Description
	Press the <b>Unit</b> softkey to select the measurement unit.  - dB
Unit	- \Delta dB
	- % - x

 Table 4-12
 Analog/Digital/Bluetooth Analyzer > Functions > THD Ratio menu description (continued)

Menu	Description
	Press the <b>Format</b> softkey to select the format of the returned measurement reading.
	- Off
	Selecting Off will return the measurement reading without any formatting (raw value).
Format	<ul> <li>Delta         Selecting Delta will return the measurement result by deducting the reference ratio from the measured ratio. The result will be returned in unit ∆dB.     </li> </ul>
	<ul> <li>Linear</li> <li>Selecting Linear will return the measurement result by dividing the measured ratio by the reference ratio. The result is returned in unit x.</li> </ul>
	This is only available for analog analyzer.
Set to OdB	Press the <b>Set to 0dB</b> softkey to store the measured ratio as the reference ratio, and set the measurement reading format to Delta.
Set result as ref. from	Press the <b>Set result as ref. from</b> softkey to store the measurement result from the selected channel as the reference ratio.
Ref. Ratio	Press the <b>Ref. Ratio</b> softkey to set the reference ratio value.
	Press the <b>Even Harmonic</b> softkey to display the even harmonics order selection. Press the Enter key on the navigation panel to select the desired even harmonics order, and press the <b>Even Harmonic</b> softkey again to confirm the selection.
	- ALL
Even Harmonic	- 2
	- 4
	- 6
	- 8
	Press the <b>Odd Harmonic</b> softkey to display the odd harmonics order selection. Press the Enter key on the navigation panel to select the desired odd harmonics order, and press the <b>Odd Harmonic</b> softkey again to confirm the selection.
	- ALL
Odd Harmonic	- 3
	- 5
	- 7
	- 9
	This is only available for analog and <i>Bluetooth</i> analyzer.
	Press the Freq Lock softkey to select the searching method for the fundamental frequency.
	- Auto
	Selecting Auto will allow the U8903B to search for the fundamental frequency automatically.
Freq Lock	<ul> <li>Gen Lock</li> <li>Selecting Gen Lock will allow the U8903B to search for the fundamental frequency based on the generator frequency value of the respective generator channel. You can select the generator channel by setting the Src Channel in the Meas.</li> <li>Config. menu page. This Gen Lock method is only useful if you use the internal audio generator.</li> </ul>
	<ul> <li>Custom</li> <li>If you have a known input signal, you can define the fundamental frequency value by setting the searching method to Custom and setting the frequency value in Fund Freq.</li> </ul>
Fund Freq	Press the <b>Fund Freq</b> softkey to set the fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.

#### 4 Audio Analyzer Measurement Functions

THD Level is defined as the square root of the sum of the squares of all the signal harmonics components, and it is expressed in Vrms. The THD Level can be computed as follows.

THD Level = rms value of distortion

THD+N Level measurement function mode is applicable for the analog, digital, and *Bluetooth* analyzer. The settings for THD level measurement are displayed as shown in **Figure 4-30**, **Figure 4-31**, and **Figure 4-32** for the analog, digital, and *Bluetooth* analyzer respectively.



Figure 4-30 Analog Analyzer > Functions > THD level menu page 1



Figure 4-31 Digital Analyzer > Functions > THD level menu page 1



Figure 4-32 Bluetooth Analyzer > Functions > THD level menu page 1

 Table 4-13
 Analog/Digital/Bluetooth Analyzer > Functions > THD Level menu description

Menu	Description
	Press the <b>Unit</b> softkey to select the measurement unit.
	Analog Analyzer
	- dBg
	- dBm
	- dBr
	- dBu
	- dBV
	- W
	- V
	- ΔV
	- dBSPL
	- X
Unit	Digital and <i>Bluetooth</i> Analyzer
	- FFS
	- dBFS
	- %FS
	- V
	- dBu
	- dBV
	- dBr
	- X
	- LSB
	- Hex
	- Dec
	- dBSPL

 Table 4-13
 Analog/Digital/Bluetooth Analyzer > Functions > THD Level menu description (continued)

Menu	Description
Wellu	
Format	Press the Format softkey to select the format of the returned measurement reading.  Off Selecting Off will return the measurement reading without any formatting (raw value).  Logarithmic Selecting Logarithmic will return the measurement result by using the following formula:  20 log 10 (Measured rms voltage) Reference level The result is returned in unit dBr.  Linear Selecting Linear will return the measurement result by dividing the measured level by the reference level. The result is returned in unit x.  Delta Selecting Delta will return the measurement result by deducting the reference level from the measured level. The result is returned in unit ΔV. This is only available for the analog analyzer.
Set to 0dB	This is only available for the analog analyzer.  Press the <b>Set to 0dB</b> softkey to store the measured level as the reference level, and set the measurement reading format to Logarithmic.
Set result as ref. from	Press the <b>Set result as ref. from</b> softkey to store the measurement result from the selected channel as the reference level.
Ref. Level	Press the <b>Ref. Level</b> softkey to set the reference level value. There is only one reference level for each channel.
Ref. Imp	This is only available for the analog analyzer.  Press the <b>Ref. Imp</b> softkey to set the reference impedance value. This setting is only available if the unit is set to W and dBm.
Volt/FS	This is only available for the digital analyzer.  Press the <b>Volt/FS</b> softkey to set the volts/FS reference value.
Cal SPL	Press the Cal SPL softkey to set the calibrator level value. This setting is only available when the unit is set to dBSPL.
Even Harmonic	Press the Even Harmonic softkey to select the even harmonics.  - ALL - 2 - 4 - 6 - 8
Odd Harmonic	Press the <b>Odd Harmonic</b> softkey to select the odd harmonics.  - ALL - 3 - 5 - 7 - 9

 Table 4-13
 Analog/Digital/Bluetooth Analyzer > Functions > THD Level menu description (continued)

Menu	Description
Freq Lock	This is only available for the analog and Bluetooth analyzer.  Press the Freq Lock softkey to select the searching method for the fundamental frequency.  - Auto Selecting Auto will allow the U8903B to search for the fundamental frequency automatically.  - Gen Lock Selecting Gen Lock will allow the U8903B to search for the fundamental frequency based on the generator frequency value of the respective generator channel. You can select the generator channel by setting the Src Channel in the Meas. Config. menu page. This Gen Lock method is only useful if you use the internal audio generator.  - Custom If you have a known input signal, you can define the fundamental frequency value by setting the searching method to Custom and setting the frequency value in Fund Freq.
Fund Freq	Press the <b>Fund Freq</b> softkey to set the fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.

#### SMPTE IMD measurements

The SMPTE IMD function provides a measure of the second and third order intermodulation distortion introduced by the DUT by injecting two pure tones (tone 1 and tone 2, where tone 1 is at a much lower frequency than tone 2, for example, 60 Hz and 7 kHz respectively) into the DUT. SMPTE IMD is expressed in dB (default) or as a percentage.

If tone 1 = f1 and tone 2 = f2, the following harmonics are considered.

- f2 f1
- f2 + f1
- f2 2f1
- f2 + 2f1

The SMPTE IMD value is computed as the ratio of the sum of the intermodulation harmonics amplitude to the upper frequency tone amplitude. Refer to "**Dual waveform**" on page 106 for more information on generating dual tones for this measurement.

SMPTE IMD measurement function mode is applicable for the analog, digital, and *Bluetooth* analyzer. The settings for SMPTE IMD measurement are displayed as shown in **Figure 4-33**, **Figure 4-34**, and **Figure 4-35** for the analog, digital, and *Bluetooth* analyzer respectively.



Figure 4-33 Analog Analyzer > Functions > SMPTE IMD menu page 1



Figure 4-34 Digital Analyzer > Functions > SMPTE IMD menu page 1



Figure 4-35 Bluetooth Analyzer > Functions > SMPTE IMD menu page 1

 Table 4-14
 Analog/Digital/Bluetooth Analyzer > Functions > SMPTE IMD menu description

Menu	Description
Unit	Press the <b>Unit</b> softkey to select the measurement unit.  - dB  - ΔdB  - %  - x
Format	<ul> <li>Press the Format softkey to select the format of the returned measurement reading.</li> <li>Off         Selecting Off will return the measurement reading without any formatting (raw value).</li> <li>Delta         Selecting Delta will return the measurement result by deducting the reference ratio from the measured ratio. The result will be returned in unit ΔdB.</li> <li>Linear         Selecting Linear will return the measurement result by dividing the measured ratio by the reference ratio. The result is returned in unit x.</li> </ul>
Set to OdB	This is only available for the analog analyzer.  Press the <b>Set to 0dB</b> softkey to store the measured ratio as the reference ratio, and set the measurement reading format to Delta.
Set result as ref. from	Press the <b>Set result as ref. from</b> softkey to store the measurement result from the selected channel as the reference ratio.
Ref. Ratio	Press the <b>Ref. Ratio</b> softkey to set the reference ratio.
Freq Lock	This is only available for the analog and <i>Bluetooth</i> analyzer.  Press the <b>Freq Lock</b> softkey to select the searching method for the upper and lower frequencies.  Gen Lock  Selecting Gen Lock will allow the U8903B to search for the upper and lower frequencies of the input signal based on the upper and lower frequencies of the respective generator channel. You can select the generator channel by setting the <b>Src Channel</b> in the <b>Meas. Config.</b> menu page. This Gen Lock method is only useful if you use the internal audio generator.  Custom  If you have a known input signal, you can define the upper and lower frequency values by setting the searching method to Custom and setting the frequency value in <b>Upper Freq</b> and <b>Lower Freq</b> .
Upper Freq	Press the <b>Upper Freq</b> softkey to set the upper frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.
Lower Freq	Press the <b>Lower Freq</b> softkey to set the lower frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.

#### DFD measurements

The DFD measurement is similar to SMPTE IMD, except that the two tones in the stimulus signal are of equal amplitude and are spaced closer to each other (typically 19 kHz and 20 kHz). This measurement also allows you to select either the second or third order intermodulation distortion. The available DFD measurements are DFD 60268 2nd, DFD 60268 3rd, DFD 60118 2nd, or DFD 60118 3rd.

DFD measurement function mode is applicable for the analog, digital, and *Bluetooth* audio analyzer. The settings for DFD measurements are displayed as shown in **Figure 4-36**, **Figure 4-37**, and **Figure 4-38** for the analog, digital, and *Bluetooth* analyzer respectively.



Figure 4-36 Analog Analyzer > Functions > DFD 60268 2nd menu page 1



Figure 4-37 Digital Analyzer > Functions > DFD 60268 2nd menu page 1



Figure 4-38 Bluetooth Analyzer > Functions > DFD 60268 2nd menu page 1

 Table 4-15
 Analog/Digital/Bluetooth Analyzer > Functions > DFD measurements menu description

Menu	Description
Unit	Press the <b>Unit</b> softkey to select the measurement unit.
	- dB
	- ∆dB
	- %
	- x
	Press the Format softkey to select the format of the returned measurement reading.
	- Off
	Selecting Off will return the measurement reading without any formatting (raw value).
	- Delta
Format	Selecting Delta will return the measurement result by deducting the reference ratio from the measured ratio. The result will be returned in unit $\Delta dB$ .
	- Linear
	Selecting Linear will return the measurement result by dividing the measured ratio by the reference ratio. The result is returned in unit x.
Set to OdB	This is only available for the analog analyzer.
	Press the <b>Set to 0dB</b> softkey to store the measured ratio as the reference ratio, and set the measurement reading format to Delta.
Set result as ref. from	Press the <b>Set result as ref. from</b> softkey to store the measurement result from the selected channel as the reference ratio.
Ref. Ratio	Press the <b>Ref. Ratio</b> softkey to set the reference ratio.

#### SNR measurement

SNR is defined as the ratio of the signal amplitude to noise amplitude. The U8903B implementation of the SNR measurement is a closed-loop configuration in which both the generator and the analyzer are used in the test setup. For example, channel 1 of the analog generator and analog analyer must be used together for this measurement.

SNR is further defined by the measurement bandwidth. The measurement bandwidth is specified by the filter selected for the audio analyzer. The SNR measurement is accomplished by an internal routine that alternatively switches the U8903B generator output on and off. When the U8903B output is in the off state, the U8903B output will be terminated at the DUT input.

The SNR result can be expressed in dB (default) or as a percentage. The SNR can be computed as follows.

SNR = 
$$20 \text{ Log}_{10} \left( \frac{\text{rms value of signal}}{\text{rms value of noise}} \right)$$

SNR measurement function mode is applicable for analog analyzer only. The settings for SNR measurement are displayed as shown in **Figure 4-39**.



Figure 4-39 Analog Analyzer > Functions > SNR menu page 1

4

 Table 4-16
 Analog Analyzer > Functions > SNR menu description

Menu	Description
Unit	Press the <b>Unit</b> softkey to select the measurement unit.  - dB  - ΔdB  - %  - x
Format	<ul> <li>Press the Format softkey to select the format of the returned measurement reading.</li> <li>Off         Selecting Off will return the measurement reading without any formatting (raw value).</li> <li>Delta         Selecting Delta will return the measurement result by deducting the reference ratio from the measured ratio. The result will be returned in unit ΔdB.</li> <li>Linear         Selecting Linear will return the measurement result by dividing the measured ratio by the reference ratio. The result is returned in unit x.</li> </ul>
Set to OdB	Press the <b>Set to 0dB</b> softkey to store the measured ratio as the reference ratio, and set the measurement reading format to Delta.
Set result as ref. from	Press the <b>Set result as ref. from</b> softkey to store the measurement result from the selected channel as the reference ratio.
Ref. Ratio	Press the <b>Ref. Ratio</b> softkey to set the reference ratio.
SNR Delay	Press the <b>SNR Delay</b> softkey to set the SNR delay.

### SNR (fast mode) measurement

SNR (fast mode) measurement is used to measure the ratio of signal amplitude over noise amplitude. The SNR (fast mode) measurement is a frequency domain calculation. This method is significantly faster than the standard SNR measurement, but it is not suitable for measuring very high SNR. The noise measurement is made by notching out the fundamental and harmonics from the frequency spectrum.

You can set the number of harmonics that will be removed in the computation. For example, if the harmonics count is 1, the fundamental frequency will only be notched. If the harmonics count is 3, the fundamental frequency and the first and second harmonics will be notched for the calculation.

The SNR (fast mode) can be computed as follows.

SNR = 
$$20 \text{ Log}_{10} \left( \frac{\text{rms value of signal}}{\text{rms value of noise}} \right)$$

SNR (fast mode) measurement function mode is applicable for the analog and *Bluetooth* analyzer. The settings for SNR (fast mode) measurement are displayed as shown in **Figure 4-40** and **Figure 4-41** for the analog and *Bluetooth* respectively.



Figure 4-40 Analog Analyzer > Functions > SNR (Fast) menu page 1



Figure 4-41 Bluetooth Analyzer > Functions > SNR (Fast) menu page 1

 Table 4-17
 Analog/Bluetooth Analyzer > Functions > SNR (Fast) menu description

Menu	Description
	Press the <b>Unit</b> softkey to select the measurement unit.
	- dB
Unit	- ∆dB
	- %
	- X
	Press the Format softkey to select the format of the returned measurement reading.
	- Off
	Selecting Off will return the measurement reading without any formatting (raw value).
_	- Delta
Format	Selecting Delta will return the measurement result by deducting the reference ratio from the measured ratio. The result will be returned in unit $\Delta dB$ .
	- Linear
	Selecting Linear will return the measurement result by dividing the measured ratio by the reference ratio. The result is returned in unit x.
	This is only available for the analog analyzer.
Set to 0dB	Press the <b>Set to 0dB</b> softkey to store the measured level or ratio as the reference value, and set the reading to refer to the stored reference value.
Set result as ref. from	Press the <b>Set result as ref. from</b> softkey to store the measurement result from the selected channel as the reference ratio.
Ref. Ratio	Press the <b>Ref. Ratio</b> softkey to set the reference ratio.

 Table 4-17
 Analog/Bluetooth Analyzer > Functions > SNR (Fast) menu description (continued)

Menu	Description
Freq Lock	Press the Freq Lock softkey to select the searching method for the fundamental frequency.  - Auto Selecting Auto will allow the U8903B to search for the fundamental frequency automatically.  - Gen Lock Selecting Gen Lock will allow the U8903B to search for the fundamental frequency based on the generator frequency value of the respective generator channel. You can select the generator channel by setting the Src Channel in the Meas. Config. menu page. This Gen Lock method is only useful if you use the internal audio generator.  - Custom If you have a known input signal, you can define the fundamental frequency value by setting the searching method to Custom and setting the frequency value in Fund Freq.
Fund Freq	Press the <b>Fund Freq</b> softkey to set the fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.
Harmonics	Press the <b>Harmonics</b> softkey to set the number of harmonics order to be removed.

#### J-test measurement

Jitter in a digital system is defined as the variation in time between the periodic samples. Jitter may occur during sampling process of the ADC and DAC and clock recovery process. It can also appear in the data pattern of the digital interface link.

J-test is an AES3 test signal that is developed to simulate the worst case data jitter in the digital signal and also to test the jitter susceptibility of the DAC. The J-test signal consists of a test tone with a frequency at 1/4 of the sampling rate (Fs) and a jitter signal with a frequency of 1/192 Fs. The J-test digital pattern to be transmitted is as follows:

```
C00000 C00000 400000 400000 x24
BFFFFF BFFFFF BFFFFF x24
```

The digital pattern will cause inter-symbol interference in the digital signal and stress the DAC clock recovery subsystem. You can measure the DAC system jitter performance by observing the analog output of the DAC in the FFT spectrum.

J-test measurement function mode is applicable for the analog analyzer only. The J-test measurement is displayed as shown in **Figure 4-42**.



Figure 4-42 Analog Analyzer > Functions > J-Test menu page

### Positive peak measurement

Positive peak measurement function mode is a measurement of the greatest positive voltage level. Positive peak measurement function is applicable for the digital analyzer only. The positive peak measurement is displayed as shown in **Figure 4-43**.



Figure 4-43 Digital Analyzer > Functions > Positive Peak menu page

Table 4-18 Digital Analyzer > Functions > Positive Peak menu description

Menu	Description
Unit	Press the Unit softkey to select the measurement unit.  - FFS  - dBFS  - %FS  - V  - dBu  - dBV  - dBr  - x  - LSB  - Hex  - Dec  - dBSPL

 Table 4-18
 Digital Analyzer > Functions > Positive Peak menu description (continued)

Menu	Description
Format	Press the Format softkey to select the format of the returned measurement reading.  Off Selecting Off will return the measurement reading without any formatting (raw value).  Logarithmic Selecting Logarithmic will return the measurement result by using the following formula:  20log 10 (Measured rms voltage) Reference level The result is returned in unit dBr.  Linear Selecting Linear will return the measurement result by dividing the measured level by the reference level. The result is returned in unit x.
Set result as ref. from	Press the <b>Set result as ref. from</b> softkey to store the measurement result from the selected channel as the reference level.
Ref. Level	Press the <b>Ref. Level</b> softkey to set the reference level value. There is only one reference level for each channel.
Volt/FS	Press the Volt/FS softkey to set the volts/FS reference value.
Cal SPL	Press the Cal SPL softkey to set the calibrator level value. This setting is only available when the unit is set to dBSPL.

### Negative peak measurement

Negative peak measurement function mode is a measurement of the greatest negative voltage level. Negative peak measurement function is applicable for the digital analyzer only. The negative peak measurement is displayed as shown in **Figure 4-44**.



Figure 4-44 Digital Analyzer > Functions > Negative Peak menu page

Table 4-19 Digital Analyzer > Functions > Negative Peak menu description

Menu	Description
Wenu	Press the Unit softkey to select the measurement unit.  - FFS  - dBFS  - %FS  - V  - dBu  - dBV
	<ul> <li>dBr</li> <li>x</li> <li>LSB</li> <li>Hex</li> <li>Dec</li> <li>dBSPL</li> </ul>

 Table 4-19
 Digital Analyzer > Functions > Negative Peak menu description (continued)

Menu	Description
Format	Press the Format softkey to select the format of the returned measurement reading.  Off Selecting Off will return the measurement reading without any formatting (raw value).  Logarithmic Selecting Logarithmic will return the measurement result by using the following formula:  20 log 10 (Measured rms voltage) Reference level The result is returned in unit dBr.  Linear Selecting Linear will return the measurement result by dividing the measured level by the reference level. The result is returned in unit x.
Set result as ref. from	Press the <b>Set result as ref. from</b> softkey to store the measurement result from the selected channel as the reference level.
Ref. Level	Press the <b>Ref. Level</b> softkey to set the reference level value. There is only one reference level for each channel.
Volt/FS	Press the Volt/FS softkey to set the volts/FS reference value.
Cal SPL	Press the Cal SPL softkey to set the calibrator level value. This setting is only available when the unit is set to dBSPL.

### Phase Measurement

Phase measurements are used to describe the positive or negative time offset in a periodic waveform cycle (such as a sine waveform), measured from a reference waveform. The reference is usually the same signal at a different point in the system, or a related signal in a different channel of the system. Phase is expressed in degrees (°).

Phase shift varies with frequency, and therefore, it is common to make phase measurements at several frequencies or to plot the phase response of a frequency sweep.

There are generally two types of phase measurements as follows.

- interchannel phase delay
- device phase response

To make an interchannel phase measurement, the signal level must be specified. Phase measurements are generally not level-sensitive, as long as the signal is well above the noise and below distortion.

For example, to test the interchannel phase delay of a stereo system, we inject a 1 Vrms, 1 kHz sine waveform using the same analog generator channel. The output of one channel is connected to the analog analyzer channel 1 while the other is connected to channel 2. Set the analog analyzer to measure phase. If channel 1 is set as the reference channel, the channel 2 result is the interchannel phase delay.

A phase response measurement compares the phase of the output signal of a DUT to the phase of the signal at its input. For example, a simple way to make this measurement is to use the analog analyzer channel 1 to measure the input, and use the analog analyzer channel 2 to measure the output.

The U8903B always uses channel 1 of the analog generator as the reference channel, while the selected analog analyzer channel becomes the reference channel for interchannel phase measurements.

Phase measurement function mode is applicable for the analog, digital, and *Bluetooth* audio analyzer. The settings for phase measurement are displayed as shown in **Figure 4-45**, **Figure 4-46**, and **Figure 4-47** for both the analog, digital, and *Bluetooth* analyzer respectively.

NOTE

Auto range will be disabled for phase measurement. Refer to "Measurement Configuration (Analog Analyzer)" on page 240 to set the input voltage range.



Analog Analyzer Function 3 Amplitude Multi-Chn Frequency 1.0000 Vrms 1.0000 kHz DC Offset Waveform Ref Channel 0.0000 V Sine Function No. Connector Loopback Impedance 600 Ω Ground Float AA1 1.AC Voltage 2.Frequency 999.17 mV 1.0000 kHz 3.Phase Freq Lock 15.75° None Connector Loopback Impedance 200 ks Coupling AC Bandwidth 90kHz 32768 None Return

Figure 4-45 Analog Analyzer > Functions > Phase menu page



Figure 4-46 Digital Analyzer > Functions > Phase menu page



Figure 4-47 Bluetooth Analyzer > Functions > Phase menu page

 Table 4-20
 Analog/Digital/Bluetooth Analyzer > Functions > Phase menu description

Menu	Description
Ref. Channel	Press the Ref. Channel softkey to set the reference channel number.
	This is only available for the analog and <i>Bluetooth</i> analyzer.
	Press the Freq Lock softkey to select the searching method for the fundamental frequency.
Freq Lock	<ul> <li>Auto</li> <li>Selecting Auto will allow the U8903B to search for the fundamental frequency automatically.</li> </ul>
	<ul> <li>Gen Lock         Selecting Gen Lock will allow the U8903B to search for the fundamental frequency based on the generator frequency         value of the respective generator channel. You can select the generator channel by setting the Src Channel in the Meas.         Config. menu page. This Gen Lock method is only useful if you use the internal audio generator.</li> </ul>
	<ul> <li>Custom         If you have a known input signal, you can define the fundamental frequency value by setting the searching method to Custom and setting the frequency value in Fund Freq.     </li> </ul>
Fund Freq	Press the <b>Fund Freq</b> softkey to set the fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.

### Crosstalk Measurement

In audio systems with more than one channel, it is common for a signal in one channel to appear at the output of another channel at a reduced level. Crosstalk refers to this signal leakage across channels, and it is expressed in dB (default) or as a percentage.

Crosstalk is a measurement of the ratio of the signal amplitude in an unused channel relative to that of a channel driven with a signal. The unused channels should be grounded or set to an appropriate bias point. Crosstalk is largely due to capacitive coupling between the channel conductors in the device and generally varies with frequency. Crosstalk can be computed as follows.

```
Crosstalk = 20 \text{ Log}_{10} \left( \frac{\text{rms value of signal measured}}{\text{rms value of signal driven}} \right)
```

Phase measurement function mode is applicable for the analog, digital, and *Bluetooth* audio analyzer. The settings for crosstalk measurement are displayed as shown in **Figure 4-48**, **Figure 4-49**, and **Figure 4-50** for the analog, digital, and *Bluetooth* analyzer respectively.



Figure 4-48 Analog Analyzer > Functions > X-Talk menu page 1



Figure 4-49 Digital Analyzer > Functions > X-Talk menu page 1



Figure 4-50 Bluetooth Analyzer > Functions > X-Talk menu page 1

 Table 4-21
 Analog/Digital/Bluetooth Analyzer > Functions > X-Talk menu description

Menu	Description
Ref. Channel	Press the <b>Ref. Channel</b> softkey to set the driven channel.
Unit	Press the <b>Unit</b> softkey to select the measurement unit.  - dB  - ΔdB  - %  - x

 Table 4-21
 Analog/Digital/Bluetooth Analyzer > Functions > X-Talk menu description (continued)

Menu	Description
Format	<ul> <li>Press the Format softkey to select the format of the returned measurement reading.</li> <li>Off Selecting Off will return the measurement reading without any formatting (raw value).</li> <li>Delta Selecting Delta will return the measurement result by deducting the reference ratio from the measured ratio. The result will be returned in unit ΔdB.</li> <li>Linear Selecting Linear will return the measurement result by dividing the measured ratio by the reference ratio. The result is returned in unit x.</li> </ul>
Set to OdB	This is only available for the analog analyzer.  Press the <b>Set to 0dB</b> softkey to store the measured level or ratio as the reference value, and set the reading to refer to the stored reference value.
Set result as ref. from	Press the <b>Set result as ref. from</b> softkey to store the measurement result from the selected channel as the reference ratio.
Ref. Ratio	Press the <b>Ref. Ratio</b> softkey to set the reference ratio.
Freq Lock	This is only available for the analog and <i>Bluetooth</i> analyzer.  Press the Freq Lock softkey to select the searching method for the fundamental frequency.  Auto Selecting Auto will allow the U8903B to search for the fundamental frequency automatically.  Gen Lock Selecting Gen Lock will allow the U8903B to search for the fundamental frequency based on the generator frequency value of the respective generator channel. You can select the generator channel by setting the Src Channel in the Meas.  Config. menu page. This Gen Lock method is only useful if you use the internal audio generator.  Custom If you have a known input signal, you can define the fundamental frequency value by setting the searching method to Custom and setting the frequency value in Fund Freq.
Fund Freq	Press the <b>Fund Freq</b> softkey to set the fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.

## Filters Configuration (Analog Analyzer)

Filters are used to bandwidth limit the input signals before applying a measurement function. The filter configuration for the analog analyzer is displayed as shown in **Figure 4-51**.



Figure 4-51 Analog Analyzer > Filter Config menu page

Table 4-22 Analog Analyzer > Filter Config menu description

Menu	Description
Clear Filters	Press the <b>Clear Filters</b> softkey to clear all the filter settings.
	Press the LPF softkey to select the low-pass filter.
	- None
	- 2 kHz
	- 3 kHz
	- 5 kHz
	- 8 kHz
	- 10 kHz
LPF	- 15 kHz
	- 20 kHz
	- 22 kHz
	- 30 kHz
	- 40 kHz
	- 50 kHz
	- 80 kHz
	- Custom (Refer to "Appendix 18: User-defined Filter File Format" on page 563 for more information.)

 Table 4-22
 Analog Analyzer > Filter Config menu description (continued)

Menu	Description
	Press the <b>HPF</b> softkey to select the high-pass filter.
	- None
	- 15 Hz
	- 20 Hz
	- 22 Hz
	- 30 Hz
HPF	- 50 Hz
	- 70 Hz
	- 100 Hz
	- 200 Hz
	- 300 Hz
	- 400 Hz
	<ul> <li>Custom (Refer to "Appendix 18: User-defined Filter File Format" on page 563 for more information.)</li> </ul>
	Press the <b>Weighting</b> softkey to select the weighting filter.
	- None
	- A
Weighting	- CCIR 1k
vveigning	- CCIR 2k
	- CCITT
	- C-Message
	<ul> <li>Custom (Refer to "Appendix 18: User-defined Filter File Format" on page 563 for more information.)</li> </ul>
	Press the <b>Deemphasis</b> softkey to select the de-emphasis value.
	- None
Deemphasis	- 50 μs
	- 75 μs
	- Custom
Notch Filter	Press the <b>Notch Filter</b> softkey to configure the notch filter settings. Refer to " <b>Notch Filter</b> " on page 235 for more information.

### Notch Filter

Notch filter is used to remove the unwanted frequency component in the input signal. This setting is only applicable for THD+N and SINAD measurements.



Figure 4-52 Analog Analyzer > Filter Config > Notch Filter menu page

Table 4-23 Analog Analyzer > Filter Config > Notch Filter menu description

Menu	Description
State	Press the <b>State</b> softkey to enable or disable the notch filter.
Center Freq	Press the <b>Center Freq</b> softkey to set the frequency of the component to be removed from the input signal.
Bandwidth	Press the <b>Bandwidth</b> softkey to set the bandwidth of the signal component to be removed.

## Filters Configuration (Digital Analyzer)

Filters are used to bandwidth limit the input signals before applying a measurement function. The filter configuration for digital analyzer is displayed as shown in Figure 4-53.



Figure 4-53 Digital Analyzer > Filter Config menu page

Table 4-24 Digital Analyzer > Filter Config menu description

Menu	Description
Clear Filters	Press the <b>Clear Filters</b> softkey to clear all the filter settings.
	Press the <b>LPF</b> softkey to select the low-pass filter.
	- None
	- 15 kHz
LPF	- 20 kHz
	- 22 kHz
	- 30 kHz
	- Custom (Refer to "Appendix 18: User-defined Filter File Format" on page 563 for more information.)
	Press the <b>HPF</b> softkey to select the high-pass filter.
	- None
HPF	- 20 Hz
	- 100 Hz
	- 400 Hz
	- Custom (Refer to "Appendix 18: User-defined Filter File Format" on page 563 for more information.)

 Table 4-24
 Digital Analyzer > Filter Config menu description (continued)

Menu	Description
	Press the <b>Weighting</b> softkey to select the weighting filter.
	- None
	- A
Weighting	- CCIR 1k
vveigning	- CCIR 2k
	- CCITT
	- C-Message
	<ul> <li>Custom (Refer to "Appendix 18: User-defined Filter File Format" on page 563 for more information.)</li> </ul>
	Press the <b>Deemphasis</b> softkey to select the de-emphasis value.
	- None
Deemphasis	- 50 μs
	- 75 μs
	- Custom
	This is only available for digital analyzer.
	Press the <b>Sample Rate</b> softkey to select the sample rate.
	- 32 kHz
	- 44.1 kHz
Sample Rate	- 48 kHz
·	- 88.2 kHz
	- 96 kHz
	- 176.4 kHz
	- 192 kHz

# Filters Configuration (Bluetooth Analyzer)

Filters are used to bandwidth limit the input signals before applying a measurement function. The filter configuration for the *Bluetooth* analyzer is displayed as shown in **Figure 4-54**.



Figure 4-54 Bluetooth Analyzer > Filter Config menu page

Table 4-25 Bluetooth Analyzer > Filter Config menu description

Menu	Description
Clear Filters	Press the Clear Filters softkey to clear all the filter settings.
	Press the LPF softkey to select the low-pass filter.
	- None
LPF	- 15 kHz
	- 20 kHz
	<ul> <li>Custom (Refer to "Appendix 18: User-defined Filter File Format" on page 563 for more information.)</li> </ul>
	Press the HPF softkey to select the high-pass filter.
	- None
HPF	- 22 Hz
пгг	- 100 Hz
	- 400 Hz
	<ul> <li>Custom (Refer to "Appendix 18: User-defined Filter File Format" on page 563 for more information.)</li> </ul>
	Press the <b>Weighting</b> softkey to select the weighting filter.
	- None
	- A
Waighting	- CCIR 1k
Weighting	- CCIR 2k
	- CCITT
	- C-Message
	- Custom (Refer to "Appendix 18: User-defined Filter File Format" on page 563 for more information.)

 Table 4-25
 Bluetooth Analyzer > Filter Config menu description (continued)

Menu	Description
	Press the <b>Deemphasis</b> softkey to select the de-emphasis value.
	- None
Deemphasis	- 50 μs
	- 75 μs
	- Custom
Notch Filter	Press the <b>Notch Filter</b> softkey to configure the notch filter settings. Refer to " <b>Notch Filter</b> " on page 239 for more information.

### Notch Filter

Notch filter is used to remove the unwanted frequency component in the input signal. This setting is only applicable for THD+N and SINAD measurements.



Figure 4-55 Bluetooth Analyzer > Filter Config > Notch Filter menu page

Table 4-26 Bluetooth Analyzer > Filter Config > Notch Filter menu description

Menu	Description
State	Press the <b>State</b> softkey to enable or disable the notch filter.
Center Freq	Press the Center Freq softkey to set the frequency of the component to be removed from the input signal.
Bandwidth	Press the <b>Bandwidth</b> softkey to set the bandwidth of the signal component to be removed.

## Measurement Configuration (Analog Analyzer)

The measurement configuration for analog analyzer is displayed as shown in Figure 4-56.



Figure 4-56 Analog Analyzer > Meas Config menu page 1

Table 4-27 Analog Analyzer > Meas Config menu description

Menu	Description
	Press the Sample Size softkey to select the number of samples to be acquired for the measurement.
	- 2048
	- 4096
	- 8192
	- 16384
	- 32768
Sample Size	- 65536
	- 131072
	- 262144
	- 524288
	- 1M
	- 2M
Mov Average	Press the <b>Mov Average</b> softkey to set the number of measurement readings to be used for the moving average calculation. This is useful for noisy signal. Applying the average points will smooth out the fluctuations introduced by the noise that caused the inconsistencies in the measurement reading.
	Press the <b>Sync Average</b> softkey to set the number of points for the synchronous averaging in the analyzer meter mode.
Sync Average	Synchronous averaging reduces noise levels by averaging the acquired data.
- <del>-</del>	- 1 to 64
Src Channel	Press the Src Channel to select the internal generator channel as the reference channel used in the following situations.
	- For the result calculation in unit dBg.
	- For the frequencies searching algorithm when the frequency lock is set to Gen Lock.
Trigger	Press the <b>Trigger</b> softkey to configure the trigger settings. Refer to " <b>Trigger (Analog, Digital, and Bluetooth Analyzer)</b> " on page 246 for more information.

NOTE

For details on audio measurement ranging, please refer to "**Appendix 29: Audio Measurement Ranging**" on page 605 to set the input voltage range.

## Measurement Configuration (Digital Analyzer)

The measurement configuration for digital analyzer is displayed as shown in Figure 4-57.



Figure 4-57 Digital Analyzer > Meas Config menu page

Table 4-28 Digital Analyzer > Meas Config menu description

Menu	Description
Coupling	Press the <b>Coupling</b> softkey to select the coupling type.
	<ul> <li>DC</li> <li>DC coupling allows both AC and DC input signals to pass through to the digital analyzer and to be measured down to 0 Hz. This setting should be selected when making DC voltage measurements.</li> <li>AC</li> </ul>
	AC coupling blocks the DC component of the input signal. This setting should be selected when you need to measure only the AC component of a signal. For example, when you are making rms or peak-to-peak voltage measurement.
	Press the <b>Sample Size</b> softkey to select the sample size. The sample size is the number of data points acquired for the measurement. The higher the sample size, the higher the accuracy of the measurement result.
	- 2048
	- 4096
	- 8192
	- 16384
Sample Size	- 32768
	- 65536
	- 131072
	- 262144
	- 524288
	- 1M
	- 2M

 Table 4-28
 Digital Analyzer > Meas Config menu description (continued)

Menu	Description
Mov Average	Press the <b>Mov Average</b> softkey to set the average points. Higher number of average points should be used when the analyzed data is noisy.  - 1 to 20 points
Trigger	Press the <b>Trigger</b> softkey to configure the trigger settings. Refer to " <b>Trigger (Analog, Digital, and Bluetooth Analyzer)</b> " on page 246 for more information.

## Measurement Configuration (Bluetooth Analyzer)

The measurement configuration for *Bluetooth* analyzer is displayed as shown in **Figure 4-58**.



Figure 4-58 Bluetooth Analyzer > Meas Config menu page

 Table 4-29
 Bluetooth Analyzer > Meas Config menu description

Menu	Description
Coupling	Press the Coupling softkey to select the coupling type.  DC DC coupling allows both AC and DC input signals to pass through to the Bluetooth analyzer and to be measured down to 0 Hz. This setting should be selected when making DC voltage measurements.  AC AC coupling blocks the DC component of the input signal. This setting should be selected when you need to measure only the AC component of a signal. For example, when you are making rms or peak-to-peak voltage measurement.
Sample Size	Press the <b>Sample Size</b> softkey to select the sample size. The sample size is the number of data points acquired for the measurement. The higher the sample size, the higher the accuracy of the measurement result.  - 2048  - 4096  - 8192  - 16384  - 32768  - 65536  - 131072  - 262144  - 524288
Mov Average	Press the <b>Mov Average</b> softkey to set the average points. Higher number of average points should be used when the analyzed data is noisy.  - 1 to 20 points

 Table 4-29
 Bluetooth Analyzer > Meas Config menu description (continued)

Menu	Description
Sync Average	<ul> <li>Press the Sync Average softkey to set the number of points for the synchronous averaging in the analyzer meter mode.</li> <li>Synchronous averaging reduces noise levels by averaging the acquired data.</li> <li>1 to 64</li> </ul>
	Press the Src Channel to select the internal generator channel as the reference channel used in the following situations.
Src Channel	- For the result calculation in unit dBg.
	- For the frequencies searching algorithm when the frequency lock is set to Gen Lock.
Trigger	Press the <b>Trigger</b> softkey to configure the trigger settings. Refer to " <b>Trigger (Analog, Digital, and Bluetooth Analyzer</b> )" on page 246 for more information.

### Trigger (Analog, Digital, and Bluetooth Analyzer)

The trigger menu page for analog, digital, and *Bluetooth* analyzer is displayed as shown in **Figure 4-59**, **Figure 4-60**, and **Figure 4-61**.



Figure 4-59 Analog Analyzer > Meas Config > Trigger menu page



Figure 4-60 Digital Analyzer > Meas Config > Trigger menu page



Figure 4-61 Bluetooth Analyzer > Meas Config > Trigger menu page

 Table 4-30
 Digital Analyzer > Meas Config > Trigger menu description

Menu	Description
Trigger Source	Press the <b>Trigger Source</b> softkey to select the trigger source. The default trigger in is Free Run, where the analyzer triggers immediately after the previous data is acquired. If External trigger in is set, the analyzer waits for a trigger pulse on the Trigger In connector at the rear panel before acquiring the measurement data.  - Free Run  - External  - Channel
Trigger Edge	This is only available when the trigger source is External or Channel.  Press the <b>Trigger Edge</b> softkey to select the trigger edge type.  Rising  Falling
Interface	This is only available when the trigger source is Channel.  Press the Interface softkey to select the trigger interface.  - Analog  - Digital  - Bluetooth
Channel	This is only available when the trigger source is Channel.  Press the <b>Channel</b> softkey to set the channel number.
Trigger Level	This is only available when the trigger source is Channel.  When the Trigger Interface is Analog, the Trigger Level is in Vpeak.  When the Trigger Interface is Digital or <i>Bluetooth</i> , the Trigger Level is in Hex.  Press the <b>Trigger Level</b> softkey to set the trigger level.

## Input Configuration (Analog Analyzer)

The input configuration for analog analyzer is displayed as shown in Figure 4-62.



Figure 4-62 Analog Analyzer > Input Config menu page

Table 4-31 Analog Analyzer > Input Config menu description

Menu	Description
Connector	Press the Connector softkey to select the input connector type.  - UnBal Unbalanced connector type routes the signal from the BNC input connector. The signal in the inner conductor of the coaxial connector is referenced to the ground for measurement.  - Bal Balanced connector type routes the signal from the XLR input connectors in the front panel to the analog analyzer. The signals on the positive and negative pins of the XLR connector enter a differential amplifier where they are subtracted before passing on to the detector.  - Loopback Loopback connector type routes the signal from the generator to the analyzer internally. The generator channel 1 signal will be routed to the analyzer odd channels (1, 3, 5, and 7), and the generator channel 2 signal will be routed to the analyzer even channels (2, 4, 6, and 8). For example, if you select Loopback in any of the analyzer odd channels, the output connector type of the generator channel 1 will automatically be set to Loopback.
Impedance	Press the <b>Impedance</b> softkey to select the input impedance value. This setting is only available when <b>Connector</b> is set to UnBal or Bal.  - $100 \text{ k}\Omega$ (for UnBal)  - $200 \text{ k}\Omega$ (for Bal)  - $600 \Omega$ - $300 \Omega$
Auto Range	Press the <b>Auto Range</b> softkey to enable or disable auto range.

 Table 4-31
 Analog Analyzer > Input Config menu description (continued)

Menu	Description
Range	Press the <b>Range</b> softkey to select the input voltage range. This setting is only available when the auto range is disabled.  - 140 V  - 100 V  - 32 V  - 10 V  - 3.2 V  - 1 V  - 320 mV
Bandwidth	Press the <b>Bandwidth</b> softkey to select the input bandwidth value. This setting is only available with Option N3431A. Refer to " <b>U8903B Options</b> " on page 37 for more information.  - 90 kHz (This is the default setting with sampling rate of 192 kHz)  - 1.5 MHz
Coupling	Press the Coupling softkey to select the input coupling type.  DC DC coupling allows both the AC and DC analog input signals to pass through to the analog analyzer and to be measured down to 0 Hz. This setting should be selected when making DC voltage measurements.  AC AC coupling blocks the DC component of the analog input signal by switching a capacitor in series to the input path. This setting should be selected when you need to measure only the AC component of a signal. For example, use AC coupling when you are making an rms or peak-to-peak voltage measurement.
Ext. Gain	Press the Ext. Gain softkey to set the input external gain value.  The external gain can be set in the range of -60 dB to 60 dB. The default external gain is 0 dB. External gain is used to correct the effects of any external gain or loss that may be part of a measurement setup.  For example, if an amplifier is part of a measurement setup, the external gain value is used to remove the effects of its gain. However, if an external attenuator is used in a high voltage measurement, the external gain value is used to correct the loss. The external gain value can be set in unit dB or x.

## Input Configuration (Digital Analyzer)

The input configuration for digital analyzer is displayed as shown in Figure 4-63.



Figure 4-63 Digital Analyzer > Input Config menu page

Table 4-32 Digital Analyzer > Input Config menu description

Menu	Description
Connector	Press the Connector softkey to select the connector type.  - UnBal Unbalanced connector type routes the digital signal from the BNC input connector at the rear panel to the digital analyzer.  - Bal Balanced connector type routes the digital signal from the XLR input connectors in the rear panel to the digital analyzer.  - Optical Optical connector type routes the digital signal from the TOSLINK input connector at the rear panel to the digital analyzer.  - DSI DSI connector type routes the digital signal from the 25-pin female D-SUB connector at the rear panel to the digital analyzer.
Impedance	Press the Impedance softkey to select the input impedance. Unbalanced connector type $ -75\Omega \\ - \text{HiZ} \\ \text{Balanced connector type} \\ -110\Omega \\ - \text{HiZ} $

 Table 4-32
 Digital Analyzer > Input Config menu description (continued)

Menu	Description
Freq Scaling	Press the Freq Scaling softkey to select the frequency scaling type.  - MISR The frequency will track the incoming Word Clock and recover the audio at its original frequency.  - Custom The audio signal frequency will be translated according to the reference sample rate value set in the Ref SR.
Ref SR	This is only available when frequency scaling is Custom.  Press the <b>Ref SR</b> softkey to set the reference sample rate value.

## Link Configuration (Bluetooth Analyzer)

The link configuration for the *Bluetooth* analyzer is identical to the link configuration for the *Bluetooth* generator. Please refer to "**Link Configuration (Bluetooth Generator)**" on page 147 for more information.

# DSI Input Configuration (Digital Analyzer)

The DSI input configuration for digital analyzer is displayed as shown in Figure 4-64.

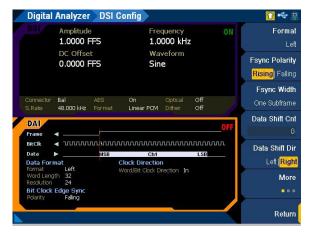


Figure 4-64 Digital Analyzer > DSI Config menu page 1

Table 4-33 Digital Analyzer > DSI Config menu description

Menu	Description
	Press the Format softkey to select the data format.
	- Left
Format	- Right
	- I2S
	- DSP
	This is only available when the format is Left or Right.
Forma Dalaritu	Press the Fsync Polarity softkey to select the frame clock edge synchronization.
Fsync Polarity	- Rising (indicates the frame clock is high on the left channel of data)
	- Falling (indicates the frame clock is low on the left channel of data)
	This is only available when the format is Left or Right.
	Press the Fsync Width softkey to select the frame clock synchronization width.
Fsync Width	- One Bit Clock
	- One Subframe
	- 50% Duty Cycle
Data Shift Cnt	This is only available when the format is Left or Right.
Data Silit Cit	Press the Data Shift Cnt softkey to set the number for the data bits to be shifted in relative to the frame clock.
	This is only available when the format is Left or Right.
Data Shift Dir	Press the <b>Data Shift Dir</b> softkey to select the data shift direction.
Data Siliit Dii	- Left
	- Right

 Table 4-33
 Digital Analyzer > DSI Config menu description (continued)

Menu	Description
Word Length	Press the <b>Word Length</b> softkey to set the word length value. The word length value must be greater than or equal to the audio resolution.  - 8 to 32
Resolution	Press the <b>Resolution</b> softkey to set the audio resolution value.  - 8 to 24
Decoding	Press the <b>Decoding</b> softkey to select the decoding format.  - Linear PCM  - A-Law  - μ-Law
W/Bclk Dir	Press the <b>W/Bclk Dir</b> softkey to select the word/bit clock direction.  - In  - Out
Bit Clk Edge	Press the <b>Bit Clk Edge</b> softkey to select the bit clock edge.  - Rising - Falling
Voltage	Press the Voltage softkey to select the input voltage value.  - 1.2 Vpp  - 1.5 Vpp  - 1.8 Vpp  - 2.5 Vpp  - 3 Vpp  - 3.3 Vpp  - Custom

# AES/SPDIF Input Configuration (Digital Analyzer)

The AES/SPDIF input configuration for digital analyzer is displayed as shown in **Figure 4-65**.



Figure 4-65 Digital Analyzer > AES Config menu page 1

Table 4-34 Digital Analyzer > AES Config menu description

Menu	Description
	Press the <b>Decoding</b> softkey to select the decoding format.
Decoding	- Linear PCM
Decouning	- A- Law
	– μ- Law
Resolution	Press the <b>Resolution</b> softkey to set the audio resolution value.
Resolution	- 8 to 24
	Press the <b>Status Bits</b> softkey to select the status bits type.
Status Bits	- Channel
	- User
Save in Hex	Press the Save in Hex softkey to save the status bits to a HEX file. Refer to "Save" on page 94 for more information on the
Ouve III HEX	Save menu page.
Save in Xml	Press the <b>Save in Xml</b> softkey to save the status bits to an XML file. Refer to " <b>Save</b> " on page 94 for more information on the Save menu page.

#### 4

# Bits Analysis (Digital Analyzer)

The bits analysis menu page allows you to view the data of every single bit in each word of the embedded audio data in the digital signal. The bits analysis configuration for digital analyzer is displayed as shown in Figure 4-66.

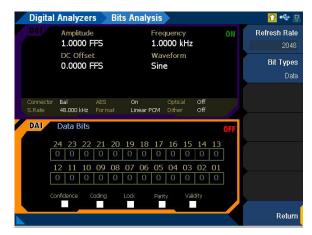


Figure 4-66 Digital Analyzer > Bits Analysis menu page 1

Table 4-35 Digital Analyzer > Bits Analysis menu description

Menu	Description
Refresh Rate	Press the Refresh Rate softkey to set the refresh rate. This is only applicable when the Bit Types is set to Active Bit.
	Press the <b>Bit Types</b> softkey to select the bit type.
Bit Types	<ul> <li>Data</li> <li>Data bits represent the data in a word of the embedded audio data of the digital signal at the time of the measurement.</li> <li>"1" indicates that the data is 1 at the particular bit, and "0" indicates that the data is 0 at the particular bit.</li> </ul>
	<ul> <li>Active</li> <li>Active bits indicate bits that have changed state during the measurement period. "1" indicates a bit has changed state, and "0" indicates no change.</li> </ul>

# Wave File (Analog, Digital, and Bluetooth Analyzer)

The U8903B allows you to record and save the input measurement signal into a wave file. The recorded wave file can be used as a test signal. The wave file settings for analog, digital, and *Bluetooth* analyzer is displayed as shown in **Figure 4-67**, **Figure 4-68**, and **Figure 4-69** respectively.

NOTE

It is recommended to use fixed input range for analog wave file saving to ensure that the recorded signal's amplitude is closer to the measured signal. The selected range should be close to the measured signal's amplitude.



Figure 4-67 Analog Analyzer > Wave File menu page

Figure 4-68 Digital Analyzer > Wave File menu page



Figure 4-69 Bluetooth Analyzer > Wave File menu page

Table 4-36 Analog/Digital/Bluetooth Analyzer > Wave File menu description

Menu	Description
Channel	Press the Channel softkey to select the wave file channel type.  Left Selecting Left will record the present analyzer channel 1 signal into a mono wave file.  Right Selecting Right will record the present analyzer channel 2 signal into a mono wave file.  Stereo Selecting Stereo will record both the present analyzer channel 1 and channel 2 signals into a stereo wave file.
Bits/Sample	Press the <b>Bits/Sample</b> softkey to select the wave file bits per sample.  - 8  - 16  - 24
Duration	Press the <b>Duration</b> softkey to set the recording duration of the wave file.
Record	Press the <b>Record</b> softkey to start recording and save the measurement into a wave file. Refer to "Save" on page 94 for more information on the Save menu page.

### **Statistics**

The statistics settings for analog, digital, and *Bluetooth* analyzer is displayed as shown in **Figure 4-70**, **Figure 4-71**, and **Figure 4-72** respectively.



Figure 4-70 Analog Analyzer > Statistics menu page



Figure 4-71 Digital Analyzer > Statistics menu page





Figure 4-72 Bluetooth Analyzer > Statistics menu page

 Table 4-37
 Analog/Digital/Bluetooth Analyzer > Statistics menu description

Menu	Description
Show Stats	Press the <b>Show Stats</b> softkey to enable or disable the statistics calculation.
No. of Reading	Press the No. of Reading softkey to set the number of readings used for the statistics calculation.
	Press the respective softkeys to select the statistics calculation type. The U8903B allows you to display three types of statistics data.
	<ul> <li>Min</li> <li>The minimum value obtained in the measurement.</li> </ul>
Stat 1	- Max The maximum value obtained in the measurement.
Stat 2 Stat 3	<ul> <li>Average         The calculated average value on the number of measurement readings captured.     </li> </ul>
	- Std Dev The calculated standard deviation value on the number of measurement readings captured.
	<ul> <li>- \( \Delta \text{minMax} \)</li> <li>The difference between the maximum value and minimum value.</li> </ul>
	The number of measurement readings is the value set in <b>No. Of Readings</b> .
Clear	Press the Clear softkey to reset the statistics results of the current analog and Bluetooth analyzer.

## Keysight U8903B Performance Audio Analyzer User's Guide

# 5 Graph Analysis

```
Graph Analysis
               262
Graph Settings
               264
Axis Settings 266
Trace Settings
              268
   Memory 270
   Math 271
   Persistence
               272
Display Options
               273
   Graph 273
   Data table 274
   Marker table 274
   Statistics 275
   Harmonics 275
   Signal analysis 277
Measurement Settings
   Measurement 1/Measurement 2 279
```

This chapter describes the U8903B graph analysis configurations.



## Graph Analysis

### NOTE

- The U8903B graph analysis mode is only available in the Standard View mode. Refer to "Menu Key" on page 60 for more information.
- When the graph analysis mode is activated, all filters will be turned off.

The U8903B graph analysis mode displays a 2-dimensional graph of the signal. Press on the FUNCTION panel to access the graph analysis mode. The Graph Analysis menu page is displayed as shown in **Figure 5-1**.

Press on the RUN CONTROL panel to start or stop the graph analysis.

Refer to "GRAPH Panel" on page 67 for quick access to the commonly used graph functions.

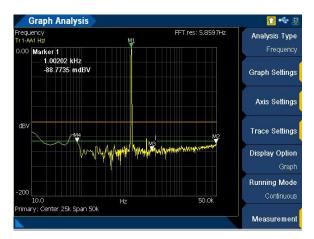


Figure 5-1 Graph Analysis menu page

 Table 5-1
 Graph Analysis menu description

Menu	Description
Analysis Type	Press the <b>Analysis Type</b> softkey to select graph analysis mode to be plotted on the current graph panel.  - Frequency Frequency domain  - Phase
	Phase magnitude  - Time Time domain
	- PSD
	The total power contained in each of the frequency bins in the band, and then dividing the result by the "effective bandwidth".
Graph Settings	Press the <b>Graph Settings</b> softkey to configure the graph settings. Refer to " <b>Graph Settings</b> " on page 264 for more information.
Axis Settings	Press the Axis Settings softkey to configure the axis settings. Refer to "Axis Settings" on page 266 for more information
Trace Settings	Press the <b>Trace Settings</b> softkey to configure the trace settings. Refer to " <b>Trace Settings</b> " on page 268 for more information.
	Press the <b>Display Option</b> softkey to select the graph analysis display option. Refer to " <b>Display Options</b> " on page 273 for more information.
	- Graph
Diamless Ontion	- Data Table
Display Option	- Marker Table
	- Statistics
	- Harmonics
	- Signal Analysis
	Press the <b>Running Mode</b> softkey to select the graph analysis running mode.
Running Mode	- Continuous
	- Single
Measurement	Press the <b>Measurement</b> softkey to configure the graph analysis measurement settings. Refer to " <b>Measurement Settings</b> " on page 278 for more information.

# Graph Settings

The graph settings for graph analysis is displayed as shown in Figure 5-2.

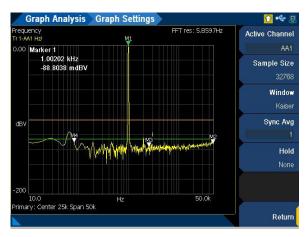


Figure 5-2 Graph Analysis > Graph Settings menu page

 Table 5-2
 Graph Analysis > Graph Settings menu description

Menu	Description
Active Channel	Press the <b>Active Channel</b> softkey to select the available active channel. The active channel determines the channel for the graph settings.
Sample Size	Press the Sample Size softkey to select the graph sample size value. The sample size affects the performance and quality of the analysis performed. For frequency domain measurements, the data returned is half of the current selected sample size.  - 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M  If the sample size of an analyzer card channel is set to 2M, the rest of the analyzer card channels sample size will be set to 2048.  If the sample size of an analyzer card channel is set to 1M, the rest of the analyzer card channels sample size will be set to 262144 (if the initial sample size is more than 262144).  If the sample size of an analyzer card channel is set to 52428, the rest of the analyzer card channels sample size will be set to 262144 (if the initial sample size is more than 262144).

 Table 5-2
 Graph Analysis > Graph Settings menu description (continued)

Menu	Description
	Press the <b>Window</b> softkey to select the window function to be applied to the data before the FFT process. The selected window function is dependent on the type of results needed from your measurements. Typically, the window function reduces the effect of spectral leakage that may occur when performing FFT analysis.  - Rectangular
	- Hanning
Window	- Blackman
	- Rife-Vincent
	- Rife-Vincent 3
	- Hamming
	- Flat Top
	- Kaiser
Sync Avg	Press the Sync Avg softkey to set the number of samples to be acquired and averaged before the FFT process is performed.
	Press the <b>Hold</b> softkey to select the type of hold to be performed after the FFT process.
	<ul> <li>None         If None is selected, the latest data will always be displayed.     </li> </ul>
Hold	<ul> <li>Average</li> <li>The Average hold will average both the current and previous data.</li> </ul>
	<ul> <li>Min</li> <li>The Min hold will compare the current data with the previous data and retains whichever value that is lower.</li> </ul>
	- Max The Max hold will compare the current data with the previous data and retain whichever value that is higher.

# Axis Settings

The axis settings for graph analysis is displayed as shown in Figure 5-3.

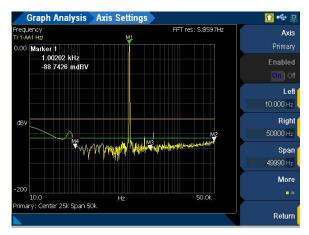


Figure 5-3 Graph Analysis > Axis Settings menu page 1

Table 5-3 Graph Analysis > Axis Settings menu description

Menu	Description
	Press the <b>Axis</b> softkey to select the active axis to be configured.
Axis	- Primary
	- Secondary
Enabled	Press the <b>Enabled</b> softkey to enable or disable the axis settings. This setting is only available when the axis type is secondary. If the axis type is primary, this setting is always set to On.
Left	Press the <b>Left</b> softkey to set the left axis limit value. If the value entered is more than the right value, the right value will automatically be set to a value of (Left + 10).
Right	Press the <b>Right</b> softkey to set the right axis limit value. If the value entered is more than the left value, the left value will automatically be set to a value of (Right – 10).
Span	Press the <b>Span</b> softkey to set the total X-axis span or total range to be monitored in the graph.
Center	Press the <b>Center</b> softkey to set the X-axis center point in the graph.
Тор	Press the $Top$ softkey to set the top axis limit value. If the value entered is less than the bottom value, the bottom value will automatically be set to a value of $(Top - 10)$ .
Bottom	Press the <b>Bottom</b> softkey to set the bottom axis limit value. If the value entered is more than the top value, the top value will automatically be set to a value of (Bottom + 10).

 Table 5-3
 Graph Analysis > Axis Settings menu description (continued)

Menu	Description
X-Scale	Press the <b>X-Scale</b> softkey to select the X-axis scale type. The left and right values must be more than 0 in order to use the log scale.  - Linear - Log
Y-Scale	Press the <b>Y-Scale</b> softkey to select the Y-axis scale type. The bottom and top values must be more than 0 in order to use the log scale.  - Linear - Log

# Trace Settings

The trace settings for graph analysis is displayed as shown in **Figure 5-4**.

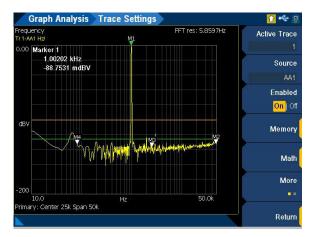


Figure 5-4 Graph Analysis > Trace Settings menu page 1

Table 5-4 Graph Analysis > Trace Settings menu description

Menu	Description
Active Trace	Press the <b>Active Trace</b> softkey to select the active trace number.
Source	Press the <b>Source</b> softkey to select data source of the active trace from the available channels, traces, files, and memory.
Enabled	Press the <b>Enabled</b> softkey to enable or disable the active trace data. You can also access this function by pressing the <b>Shift</b> key and the trace number key on the CHANNEL/DATA panel.
Memory	Press the <b>Memory</b> softkey to save or load a trace. Refer to " <b>Memory</b> " on page 270 for more information.
Math	Press the Math softkey to apply a math function. Refer to "Math" on page 271 for more information.
Unit	Press the <b>Unit</b> softkey to select the trace unit type.  - V  - dBV  - dBu  - W  - dBm  - dBSPL
Persistence	Press the <b>Persistence</b> softkey to configure the persistence settings. Refer to " <b>Persistence</b> " on page 272 for more information.

 Table 5-4
 Graph Analysis > Trace Settings menu description (continued)

Menu	Description
Axis	Press the <b>Axis</b> softkey to attach the active trace to the primary or secondary axis. The display of the active trace will reflect on the selected axis.
	- Primary
	- Secondary
	Press the <b>Color</b> softkey to select the color of the active trace.
	- Yellow
	- Cyan
	- White
Color	- Pink
	- Green
	- Orange
	- Red
	- Purple

### Memory

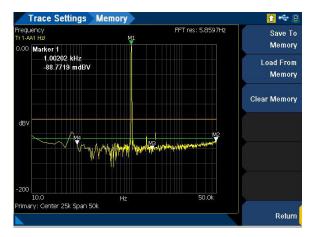


Figure 5-5 Graph Analysis > Trace Settings > Memory menu page

**Table 5-5** Graph Analysis > Trace Settings > Memory menu description

Menu	Description
Save To Memory	Press the <b>Save To Memory</b> softkey to save the active trace to the memory buffer <sup>[a]</sup> . The trace in the memory buffer can be loaded into any other traces. The memory buffer icon will be displayed at the top of the display when there is a trace saved in the memory buffer as shown in <b>Table 1-5</b> .
Load From Memory	Press the <b>Load From Memory</b> softkey to load a trace from the memory buffer into the active trace. An error will be displayed if this softkey is pressed when there is no trace in the memory buffer.
Clear Memory	Press the Clear Memory softkey to clear the trace from the memory buffer.

<sup>[</sup>a] Files saved in the internal volatile memory will be erased after power cycle or reset (refer to "Preset" on page 78).

### Math

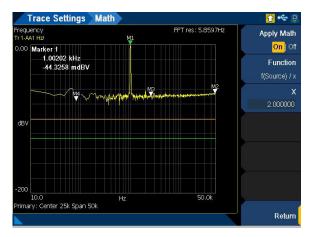


Figure 5-6 Graph Analysis > Trace Settings > Math menu page

**Table 5-6** Graph Analysis > Trace Settings > Math menu description

Menu	Description
Apply Math	Press the Apply Math softkey to apply the corresponding math function to the trace data or turn off the math function.
	Press the <b>Function</b> softkey to select the math function to be applied on the active trace.
	- None
Formation	- f(Source) + x
Function	- f(Source) - x
	<ul><li>f(Source) * x</li></ul>
	- f(Source) / x
X	Press the <b>X</b> softkey to set the x value in the selected math function.

### Persistence

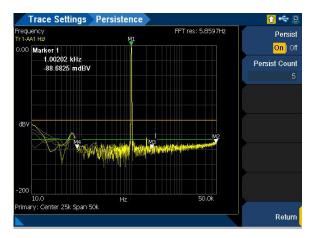


Figure 5-7 Graph Analysis > Trace Settings > Persistence menu page

**Table 5-7** Graph Analysis > Trace Settings > Persistence menu description

Menu	Description
Persist	Press the <b>Persist</b> softkey to enable or disable persistence on the active trace. Persistence allows you to view the previous sets of trace data in the graph before they are removed. The previous trace data will be displayed in a lighter shade color of the active trace to distinguish between the previous and updated trace data.
Persist Count	Press the <b>Persist Count</b> softkey to set the number of previous sets of trace data to be displayed in the graph before they are removed. For example, a value of 5 indicates that up to a total of 5 previous sets of trace data will be displayed in the graph before they are removed.  This setting is only available when persistence is enabled.

# Display Options

## Graph

Graph view is the default display option. In the graph view, the frequency, phase, and time domain analysis are performed. The graph view is displayed as shown in **Figure 5-8**.

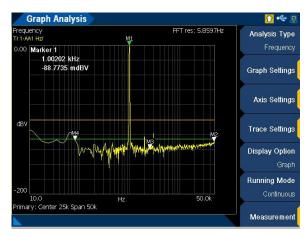


Figure 5-8 Graph Analysis > Display Option > Graph menu page

#### Data table

In the data table view, you can observe the individual data points in a table format with up to a maximum of four different traces without scrolling. The data table view is displayed as shown in **Figure 5-9**. Press the up or down arrow keys to scroll up or down the data points in the table.

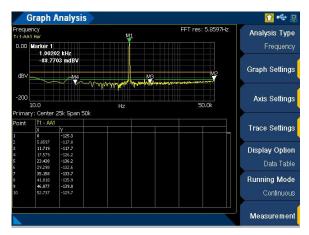


Figure 5-9 Graph Analysis > Display Option > DataTable menu page

#### Marker table

In the marker table view, you can observe the marker and cross-marker calculation information in a table format. The delta marker readings are also listed in the table. The marker table view is displayed as shown in **Figure 5-10**.

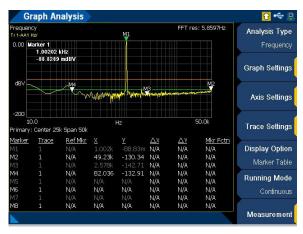


Figure 5-10 Graph Analysis > Display Option > Marker Table menu page

#### Statistics

In the statistics view, the typical statistics calculations are listed down. The available statistics functions are minimum, maximum, standard deviation, and average. The statistics view is displayed as shown in **Figure 5-11**.

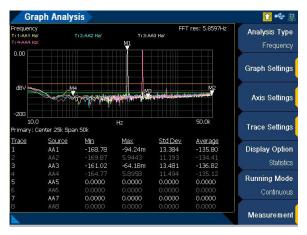


Figure 5-11 Graph Analysis > Display Option > Statistics menu page

#### Harmonics

In the harmonics view, you can view and perform harmonic analysis. Information such as the fundamental frequency amplitude and the respective harmonics can be observed in a bar chart. You can also observe the THD information for the individual channels. The harmonics display is displayed as shown in **Figure 5-12**.

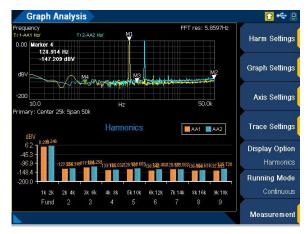


Figure 5-12 Graph Analysis > Display Option > Harmonics menu page

Press the **Harm Settings** softkey to configure the harmonics settings. This setting is only available when the graph analysis display option is Harmonics.



Figure 5-13 Graph Analysis > Harm Settings menu page (Harmonics display)

 Table 5-8
 Graph Analysis > Harm Settings menu description (Harmonics display)

Menu	Description
Active	Press the <b>Active</b> softkey to select the active channel.
	Press the <b>Odd</b> softkey to select the odd harmonics.
	- ALL
Odd	- 3
Ouu	- 5
	- 7
	- 9
	Press the <b>Even</b> to select the even harmonics.
	- ALL
Even	- 2
Even	- 4
	- 6
	- 8
	Press the <b>Display</b> softkey to select the type of harmonic analysis data to be displayed.
Display	- Harmonics
	- THD
THD unit	Press the <b>THD unit</b> softkey to select the unit for THD measurements.
	- dB
	- %

### Signal analysis

In the signal analysis view, you can view the analyzer and generator channel information. The signal analysis display is displayed as shown in **Figure 5-14**.

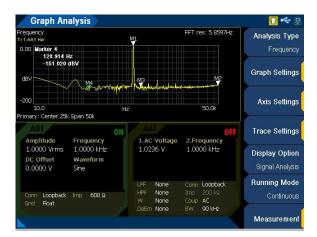


Figure 5-14 Graph Analysis > Display Option > Signal Analysis menu page

## Measurement Settings

The U8903B allows you to observe up to two measurements running simultaneously in the graph analysis mode. The measurements will be displayed at the bottom of the graph. The measurement settings for graph analysis is displayed as shown in **Figure 5-15**.

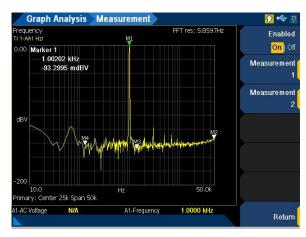


Figure 5-15 Graph Analysis > Measurement menu page

Table 5-9 Graph Analysis > Measurement menu description

Menu	Description
Enabled	Press the <b>Enabled</b> softkey to enable or disable the measurements in the graph. If measurement is not required, disable the measurements for better performance.
Measurement 1	Press the <b>Measurement 1</b> softkey to configure the measurement 1 parameters. Refer to " <b>Measurement 1</b> / <b>Measurement 2</b> " on page 279 for more information.
Measurement 2	Press the <b>Measurement 2</b> softkey to configure the measurement 2 parameters. Refer to " <b>Measurement 1</b> / <b>Measurement 2</b> " on page 279 for more information.

### Measurement 1/Measurement 2

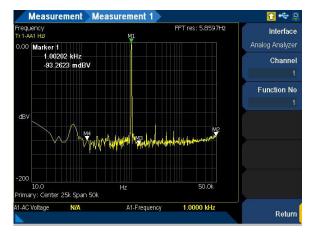


Figure 5-16 Graph Analysis > Measurement > Measurement 1 menu page

Table 5-10 Graph Analysis > Measurement > Measurement 1/Measurement 2 menu description

Menu	Description
Interface	Press the Interface softkey to select the measurement interface type.  - Analog Analyzer
	<ul><li>Digital</li><li>Bluetooth</li></ul>
Channel	Press the Channel softkey to select the desired channel to perform the measurement.
Function No	Press the <b>Function No</b> softkey to select the function to be displayed based on the function number (1 to 4). The function number corresponds to the respective measurement functions in the analyzer. The allowable measurement functions are as follows.
	<ul><li>Frequency</li><li>DC voltage</li><li>THD ratio</li></ul>
	- THD level

5

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

## Keysight U8903B Performance Audio Analyzer User's Guide

# 6 Sweep Function

```
Sweep Parameter 282
Group Delay 284
Points settings 285
Sweep channels 286
Plot View 287
Axis settings 288
Plot settings 289
Edit Points 291
```

This chapter describes the U8903B sweep parameter and the configurations.



## Sweep Parameter

NOTE

The U8903B sweep mode is only available in the Standard View mode. Refer to "**Menu Key**" on page 60 for more information.

The U8903B sweep mode allows you to perform sweeps and to display the results in a plot view. Press on the FUNCTION panel to access the sweep mode. The Sweep Parameter menu page is the default page and is displayed as shown in **Figure 6-1**.

There are three main panels on the Sweep Parameter menu page. The top panel displays the current sweep settings and the bottom panels display the audio generator and audio analyzer settings respectively. Press on the FUNCTION panel to switch between analog and digital interface. Use the arrow keys to navigate among the panels.

Press on the RUN CONTROL panel to start or stop the sweep in the sweep mode.



Figure 6-1 Sweep Parameter menu page

 Table 6-1
 Sweep Parameter menu description

Menu	Description
Арр. Туре	Press the <b>App. Type</b> softkey to select the sweep application type.  - Sweep  - Group Delay This is only applicable for digital interface. Refer to " <b>Group Delay</b> " on page 284 for more information.
Parameter	This is only available when the sweep application type is Sweep.  Press the <b>Parameter</b> softkey to select the sweep parameter type. The parameter selection depends on the waveform type set at the analog generator.
Points Settings	Press the <b>Points Settings</b> softkey to configure the sweep point parameters such as start, stop, step size, point count, and spacing.  Refer to " <b>Points settings</b> " on page 285 for more information.
Dwell Time	Press the <b>Dwell Time</b> softkey to set the delay in ms for the generator to output the signal.
Sweep Mode	Press the Sweep Mode softkey to select the sweep mode.  - Continuous Sweep all points.  - Single Sweep point by point.
Channels	Press the <b>Channels</b> softkey to set the sweep channels.  Refer to " <b>Sweep channels</b> " on page 286 for more information. This setting is only available when the legacy sweep is disabled.
Plot View	Press the <b>Plot View</b> softkey to display the Plot View menu page. Refer to " <b>Plot View</b> " on page 287 for more information.

### Group Delay

Group delay is the difference of phase over the difference of the frequency. All signals are delayed when transiting through a device such as a filter, an amplifier, or a processor. This small delay is usually not a problem, but if the delay is different for different frequencies, and the signal is built up by more than one frequency, then the shape of the signal is distorted. The difference in delay for different frequencies is group delay.

Group delay is a useful measure of phase distortion. The variations in a group delay cause signal distortion, just as deviations from linear phase cause distortion. Group delay is calculated by differentiating the insertion phase response of the DUT versus frequency. Group delay is only meaningful when performing sweep.

The input signal is compared with the output signal to calculate the phase between the input and output signals. The phase for frequency 1 is then recorded. The output frequency is then shifted to frequency 2, and the phase is measured again. The result is a group delay value of (phase 1 – phase 2) / (frequency 1 – frequency 2). This measurement can be done for a series of frequency points to plot the group delay measurement graph which will show the linearity of the phase versus frequency plot.

Group Delay measurement function mode is only applicable for digital interface.



Figure 6-2 Sweep Parameter > App. Type > Group Delay menu page

## Points settings

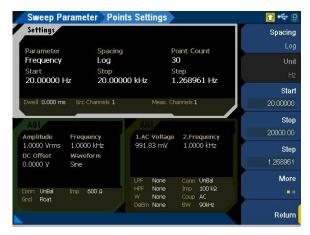


Figure 6-3 Sweep Parameter > Points Settings menu page 1

 Table 6-2
 Sweep Parameter > Points Settings menu description

Menu	Description
	Press the <b>Spacing</b> softkey to select the spacing type.
	- Log - Geometric series
	log 10 (Stop) Start)
	Step size = $10^{1000000000000000000000000000000000$
Spacing	
	- Linear - Arithmetic series
	Step size = $\frac{(Start - Stop)}{(Points - 1)}$
	- Custom - Arbitrary spacing
	Press the <b>Unit</b> softkey to select the sweep unit. This setting is only available when the sweep parameter is amplitude.
	- Vrms
	- dBV
Unit	- Vp
	- Vpp
	- dBm - dBu
	- dBSPL
Start	Press the <b>Start</b> softkey to set the sweep start value. This setting is only available when the sweep spacing is Log or Linear.
Stop	Press the <b>Stop</b> softkey to set the sweep stop value. This setting is only available when the sweep spacing is Log or Linear.
Step	Press the <b>Step</b> softkey to set the sweep step value. Adjusting the sweep step value will change the sweep points value. This setting is only available when the sweep spacing is Log or Linear.

#### 6 Sweep Function

**Table 6-2** Sweep Parameter > Points Settings menu description (continued)

Menu	Description
Points	Press the <b>Points</b> softkey to set the sweep points value. Adjusting the sweep points value will change the sweep step value. This setting is only available when the sweep spacing is Log or Linear.
Edit Points	Press the <b>Edit Points</b> softkey to configure the sweep points.  Refer to " <b>Edit Points</b> " on page 291 for more information. If the sweep points are changed, the sweep spacing mode will be set to Custom.

### Sweep channels

NOTE

This setting is only available when the legacy sweep is disabled.



Figure 6-4 Sweep Parameter > Channels menu page

Table 6-3 Sweep Parameter > Channels menu description

Menu	Description
Source	Press the <b>Source</b> softkey to select the source channel(s).
Measure	Press the <b>Measure</b> softkey to select the measure channel(s). The available selection depends on the number of installed analog analyzer cards.

### Plot View

The sweep plot view menu page is displayed as shown in Figure 6-5.

Press on the RUN CONTROL panel to start or stop the sweep in the sweep mode.

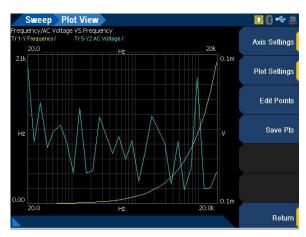


Figure 6-5 Sweep > Plot View menu page

Table 6-4 Sweep > Plot View menu description

Menu	Description
Axis Settings	Press the <b>Axis Settings</b> softkey to configure the sweep axis settings.  Refer to " <b>Axis settings</b> " on page 288 for more information.
Plot Settings	Press the <b>Plot Settings</b> softkey to configure the sweep trace settings.  Refer to " <b>Plot settings</b> " on page 289 for more information.
Edit Points	Press the <b>Edit Points</b> softkey to configure the sweep points.  Refer to " <b>Edit Points</b> " on page 291 for more information.
Save Pts	Press the <b>Save Pts</b> softkey to save the sweep points to a file.  Refer to " <b>Save</b> " on page 94 for the Save menu page.

## Axis settings

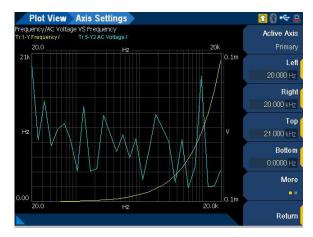


Figure 6-6 Sweep > Plot View > Axis Settings menu page

**Table 6-5** Sweep > Plot View > Axis Settings menu description

Menu	Description
	Press the <b>Active Axis</b> softkey to select the active axis.
Active Axis	- Primary
	- Secondary
Left	Press the <b>Left</b> softkey to set the left axis value.
Right	Press the <b>Right</b> softkey to set the right axis value.
Тор	Press the <b>Top</b> softkey to set the top axis value.
Bottom	Press the <b>Bottom</b> softkey to set the bottom axis value.
	Press the <b>X-Scale</b> softkey to set the X-axis scale type.
X-Scale	- Linear
	- Log
	Press the <b>Y-Scale</b> softkey to set the Y-axis scale type.
Y-Scale	- Linear
	- Log

# Plot settings

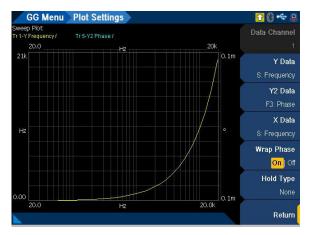


Figure 6-7 Sweep > Plot View > Plot Settings menu page

**Table 6-6** Sweep > Plot View > Plot Settings menu description

Menu	Description
Data Channel	Press the <b>Data Channel</b> softkey to select the trace data channel number to be plotted. This setting is only available when the measured channels are more than one channel.
	Press the Y Data softkey to select the Y-axis trace data source.
	- S: <sweep parameter=""></sweep>
Y Data	<ul><li>F1: <measurement 1="" function=""></measurement></li></ul>
T Dala	- F2: <measurement 2="" function=""></measurement>
	- F3: <measurement 3="" function=""></measurement>
	- F4: <measurement 4="" function=""></measurement>
	Press the Y2 Data softkey to select the second Y-axis trace data source.
	- S: <sweep parameter=""></sweep>
Y2 Data	<ul><li>F1: <measurement 1="" function=""></measurement></li></ul>
12 Dala	- F2: <measurement 2="" function=""></measurement>
	- F3: <measurement 3="" function=""></measurement>
	- F4: <measurement 4="" function=""></measurement>
	Press the <b>X Data</b> softkey to select the X-axis trace data source.
	- S: <sweep parameter=""></sweep>
X Data	<ul><li>F1: <measurement 1="" function=""></measurement></li></ul>
Λ Data	- F2: <measurement 2="" function=""></measurement>
	- F3: <measurement 3="" function=""></measurement>
	- F4: <measurement 4="" function=""></measurement>

#### 6 Sweep Function

 Table 6-6
 Sweep > Plot View > Plot Settings menu description (continued)

Menu	Description
Wrap Phase	Press the Wrap Phase softkey to enable or disable the wrap phase. This is only applicable if Y Data or Y2 Data is set to phase.  On The phase result is wrapped so that it falls within the range of -180° ~ 180°.  Off The result displayed is the exact value after substracted from the reference channel.
Hold Type	Press the Hold Type softkey to select the data type to be plotted in the graph.  None Initial sweep data.  Average Each point is averaged with the corresponding point from the previous result.  Max Always keep the maximum value of each point.  Min Always plot the minimum value of each point.

### **Edit Points**



Figure 6-8 Sweep > Edit Points menu page 1

Table 6-7 Sweep > Edit Points menu description

Menu	Description
Data Channel	Press the <b>Data Channel</b> softkey to select the trace data channel number to be plotted. This setting is only available when the measured channels are more than one channel.
	Press the <b>Wrap Phase</b> softkey to enable or disable the wrap phase. This is only applicable if <b>Y Data</b> or <b>Y2 Data</b> is set to phase.
Wrap Phase	<ul> <li>On         The phase result is wrapped so that it falls within the range of -180° ~ 180°.     </li> <li>Off         The result displayed is the exact value after substracted from the reference channel.     </li> </ul>
Goto Point	Press the <b>Goto Point</b> softkey to set the sweep point number to go to. The sweep point number will be highlighted. You can also use the arrow keys to select the desired sweep point.
Point Value	Press the <b>Point Value</b> softkey to set the currently selected sweep point value.
Add Point	Press the <b>Add Point</b> softkey to add a sweep point.
Remove Point	Press the <b>Remove Point</b> softkey to remove the selected sweep point.
Load Points	Press the <b>Load Points</b> softkey to load the sweep points from a file.  Refer to " <b>Recall</b> " on page 95 for the Recall menu page.
Save Points	Press the <b>Save Points</b> softkey to save the sweep points to a file. Refer to " <b>Save</b> " on page 94 for the Save menu page.

NOTE

If the sweep points are changed, the sweep spacing mode will be set to Custom. Refer to **Table 6-2** for more information.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

# Keysight U8903B Performance Audio Analyzer User's Guide

# 7 Test Sequence Application

```
Test Sequence Application
                         295
Project 297
Test Sequence
               299
IO Configuration 300
   Settings 301
   Properties
              308
Sub-steps 309
   Prompt sub-step settings
   Send SCPI sub-step settings 311
Measurements
              312
              314
   Properties
   AC level 315
   Frequency
              318
   Phase 321
   SNR
         324
   THD+N 329
   DC level 333
   Crosstalk 336
   SMPTE IMD
                339
   DFD IMD
             342
   Multitone analyzer
   Stepped frequency sweep
   SMPTE frequency sweep
                           353
   DFD frequency sweep 356
   External frequency sweep
   Stepped level sweep
   SMPTE level sweep
   DFD level sweep 374
   DC level sweep 378
   Receiver sensitivity 382
   External level sweep 387
   Measurement recorder
```



#### 7 Test Sequence Application

Voice quality 397
Measurement Results 401
Report 405
Properties 406

This chapter describes the various configurations for the U8903B test sequence application.

# Test Sequence Application

The U8903B test sequence application (Test Seq App) mode allows you to create a series of automated measurements on a DUT. You can customize the order in which the measurements are performed, edit the pass or fail limits, add sub steps, and create a detailed report of the measurements.

There are two main tabs in the test sequence application mode: Project tab and Report tab.

The Project tab allows you to add up to 20 test sequence and configure the measurements in each test sequence. The Report tab allows you to display all the measurements results and generate a report.

Use the left and right arrow keys to switch between the Project tab or Report tab. Refer to "**Project**" on page 297 and "**Report**" on page 405 for more information.

An example of the Project tab menu page is displayed as shown in Figure 7-1.



Figure 7-1 TSA > Project menu page

Press of to start or stop the test sequence. The Test Application menu page will be displayed as shown in **Figure 7-2**.

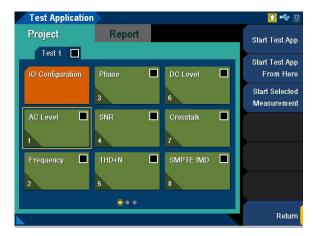


Figure 7-2 Test Application menu page

**Table 7-1** Test Application menu description

Menu	Description
Start Test App	Press the <b>Start Test App</b> softkey to start the test application project.
Start Test App From Here	Press the <b>Start Test App From Here</b> softkey to start the test application from the selected test or measurement tab.  This setting is only available when the On/Off key is pressed with the test or measurement tab selected.
Start Selected Measurement	Press the <b>Start Selected Measurement</b> softkey to start the test for the selected measurement.  This setting is only available when the On/Off key is pressed with the measurement tab selected.

# Project

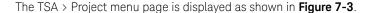




Figure 7-3 TSA > Project menu page

Table 7-2 TSA > Project menu description

Menu	Description
New Project	Press the <b>New Project</b> softkey to create a new project.
Open Project	Press the <b>Open Project</b> softkey to load a project from a file. Refer to " <b>Recall</b> " on page 95 for more information on the Recall menu page.
Save Project	Press the <b>Save Project</b> softkey to save the project to a file. Refer to " <b>Save</b> " on page 94 for more information on the Save menu page.
Properties	Press the <b>Properties</b> softkey to configure the project properties. Refer to " <b>Properties</b> " on page 298 for more information on the Properties menu page.

Press the up or down arrow key to select the test sequence, IO configuration, or measurements tabs. The respective menu page will be displayed. Refer to "**Test Sequence**" on page 299, "**IO Configuration**" on page 300, and "**Measurements**" on page 312 for more information.

### Properties

The TSA > Project > Properties menu page is displayed as shown in **Figure 7-4**.



Figure 7-4 TSA > Project > Properties menu page

**Table 7-3** TSA > Project > Properties menu description

Menu	Description
Prompt DUT ID	Press the <b>Prompt DUT ID</b> softkey to enable or disable the prompt for device ID (device serial number) at the start of a test sequence.
Prompt Msg	Press the <b>Prompt Msg</b> softkey to set the prompt message. This setting is only available when <b>Prompt DUT ID</b> is enabled.
Pass/Fail Msg	Press the <b>Pass/Fail Msg</b> softkey to enable or disable the on-screen message dialog box that can be displayed at the end of a test sequence. Press Enter to close the dialog box.
Pass Message	Press the <b>Pass Message</b> softkey to edit the pass message. If all the measurements in the test sequence pass, the pass message is displayed. The default message is "Passed". This setting is only available when <b>Pass/Fail Msg</b> is enabled.
Fail Message	Press the <b>Fail Message</b> softkey to edit the fail message. If one or more measurements in the test sequence fails, the fail message is displayed. The default message is "Failed" This setting is only available when <b>Pass/Fail Msg</b> is enabled.

# Test Sequence

The TSA > Project > Test menu page is displayed as shown in **Figure 7-5**.



Figure 7-5 TSA > Project > Test menu page

Table 7-4 TSA > Project > Test menu description

Menu	Description
Enable	Press the <b>Enable</b> softkey to enable or disable the selected test sequence. The check boxes for the test and all the measurements in the test will be selected when enabled.
Add Test Sequence	Press the Add Test Sequence softkey to add a test sequence.  New Add a new test sequence.  Saved Load a saved test sequence file. Refer to "Recall" on page 95 for more information on the Recall menu page.
Delete Test Sequence	Press the <b>Delete Test Sequence</b> softkey to delete the selected test sequence.
Save	Press the <b>Save</b> softkey to save the test sequence to a file. Refer to " <b>Save</b> " on page 94 for more information on the Save menu page.
Edit	Press the <b>Edit</b> softkey to move or copy the selected test sequence, or paste a copied test sequence after the selected test sequence.
Properties	Press the <b>Properties</b> softkey to set the test sequence name.

# 10 Configuration

The IO Configuration tab allows you to configure the output and input settings. There will be one IO Configuration tab in each test sequence. The settings configured in the IO configuration will be applied to all the measurements in the test sequence. The TSA > Project > Test > IO Configuration menu page is displayed as shown in **Figure 7-6**.

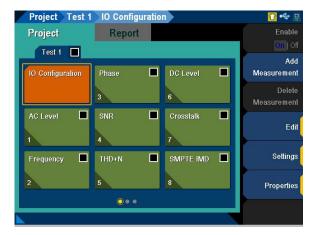


Figure 7-6 TSA > Project > Test > IO Configuration menu page

Table 7-5 TSA > Project > Test > IO Configuration menu description

Menu	Description
Add Measurement	Press the <b>Add Measurement</b> softkey to add measurements to the selected test sequence. Refer to " <b>Measurements</b> " on page 312 for more information.
Edit	Press the <b>Edit</b> softkey to paste a copied measurement after the IO configuration. The IO Configuration cannot be moved or copied.
Settings	Press the <b>Settings</b> softkey to configure the IO settings. Refer to " <b>Settings</b> " on page 301 for more information.
Properties	Press the <b>Properties</b> softkey to configure the IO configuration properties. Refer to " <b>Properties</b> " on page 308 for more information.

### Settings

Press on the FUNCTION panel to switch between the analog and *Bluetooth* interface. Press the up or down arrow key to select between output configuration or input configuration.

### Output configuration (Analog)

The TSA > Project > Test > IO Configuration > Output Configuration menu page is displayed as shown in **Figure 7-7**.



Figure 7-7 TSA > Project > Test > IO Configuration > Output Configuration menu page (Analog)

 Table 7-6
 TSA > Project > Test > IO Configuration > Output Configuration menu description (Analog)

Menu	Description
Channels	Press the <b>Channels</b> softkey to select the number of output channels in use.  - None (External)  Disable the generator outputs and configure the analyzer for external source (open-loop) measurements.  - 1  - 2
Connector	<ul> <li>Press the Connector softkey to select the output connector type.</li> <li>Bal Balanced mode outputs a pair of differential signals which are equal in amplitude but 180 degrees out of phase on the XLR positive and negative pins.</li> <li>UnBal Unbalanced mode outputs a signal referenced to ground on the BNC output connector.</li> <li>Com Common mode outputs a pair of equal amplitude and in-phase signals on the XLR positive and negative pins. The common mode test signal is applied to both pins 2 and 3 or the XLR connector, while pin 1 is connected to the return signal.</li> <li>IEC60268 The common mode test signal is applied to both pins 2 and 3 or the XLR connector, while pin 1 is connected to the return signal. An additional 10 Ω output series resistance is added to pin 2 or 3.</li> </ul>
Impedance	Press the Impedance softkey to select the output impedance value. For Bal, Com, and IEC60268 $-600~\Omega$ $-100~\Omega$ $-40~\Omega$ For UnBal $-600~\Omega$ $-50~\Omega$ $-20~\Omega$
IEC60268 10 Ω	Press the IEC60268 10 $\Omega$ softkey to select the additional 10 $\Omega$ output series resistance for pin 2 or 3 of the XLR connecto in the common IEC60268 configuration. This setting is only available when the output connector type is set to IEC60268.  - Pin2 Additional 10 $\Omega$ is added to pin 2.  - Pin3 Additional 10 $\Omega$ is added to pin 3.
Ground	Press the <b>Ground</b> softkey to select the grounding type.  Float In the floating grounding type, the signal return line (XLR pin 1 for balanced output or BNC return for unbalanced output) is not grounded to the chassis earth and is "floating".  Ground In the ground grounding type, the signal return line (XLR pin 1 for balanced output or BNC return for unbalanced output is connected to the chassis earth.
Max Voltage	Press the <b>Max Voltage</b> softkey to set the maximum voltage. The maximum voltage value set will limit the maximum amplitude output from the generator and prevent any excessive high voltage values from damaging the DUT.
Reference	Press the <b>Reference</b> softkey to set the output references for generator.  - Impedance Set the reference impedance for the unit conversion of dBm measurements.

### Output configuration (Bluetooth)

The TSA > Project > Test > IO Configuration > Output Configuration menu page is displayed as shown in **Figure 7-8**.

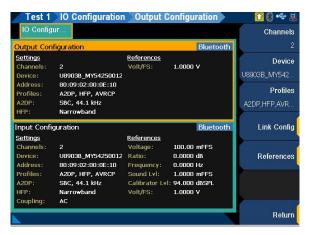


Figure 7-8 TSA > Project > Test > IO Configuration > Output Configuration menu page (*Bluetooth*)

**Table 7-7** TSA > Project > Test > IO Configuration > Output Configuration menu description (*Bluetooth*)

Menu	Description
Channels	Press the Channels softkey to select the number of output channels in use.  None (External) Disable the generator outputs and configure the analyzer for external source (open-loop) measurements.  1 This is only applicable if the Profiles consist of only HFP, or HFP and AVRCP.  2 This is only applicable if the Profiles consist of A2DP.
Device	Press the <b>Device</b> softkey to select the paired or connected <i>Bluetooth</i> device.
	Press the <b>Profiles</b> softkey to select the profile that will be used in the test. If the connected <i>Bluetooth</i> device is selected in <b>Device</b> , the profile used will be fixed to the connected profile(s).
Profiles	- A2DP
	- HFP
	- AVRCP
Link Config	Press the Link Config softkey to configure the <i>Bluetooth</i> link settings. Refer to "Link Configuration (Bluetooth Generator)" on page 147.
References	Press the <b>Reference</b> softkey to set the output references for generator.
	- Volt/FS
	Set the volts/FS reference value.

### Input configuration (Analog)

The TSA > Project > Test > IO Configuration > Input Configuration menu page is displayed as shown in **Figure 7-9**.



Figure 7-9 TSA > Project > Test > IO Configuration > Input Configuration menu page (Analog)

Table 7-8 TSA > Project > Test > IO Configuration > Input Configuration menu description (Analog)

Menu	Description
Channels	Press the <b>Channels</b> softkey to select the number of input channels in use.
Connector	Press the Connector softkey to select the input connector type.  - UnBal Unbalanced connector type routes the signal from the BNC input connector. The signal in the inner conductor of the coaxial connector is referenced to the ground for measurement.  - Bal Balanced connector type routes the signal from the XLR input connectors in the front panel to the analog analyzer. The signals on the positive and negative pins of the XLR connector enter a differential amplifier where they are subtracted before passing on to the detector.  - Loopback Loopback connector type routes the signal from the generator to the analyzer internally. The generator channel 1 signal will be routed to the analyzer odd channels (1, 3, 5, and 7), and the generator channel 2 signal will be routed to the analyzer even channels (2, 4, 6, and 8). For example, if you select Loopback in any of the analyzer odd channels, the output connector type of the generator channel 1 will automatically be set to Loopback.
Impedance	Press the <b>Impedance</b> softkey to select the input impedance value. This setting is only available when <b>Connector</b> is set to UnBal or Bal.  - $100 \text{ k}\Omega$ (for Unbalanced)  - $200 \text{ k}\Omega$ (for Balanced)  - $600 \Omega$ - $300 \Omega$

 Table 7-8
 TSA > Project > Test > IO Configuration > Input Configuration menu description (continued)(Analog)

Menu	Description
Coupling	Press the Coupling softkey to select the input coupling type.  DC DC coupling allows both the AC and DC analog input signals to pass through to the analog analyzer and to be measured down to 0 Hz. This setting should be selected when making DC voltage measurements.  AC AC coupling blocks the DC component of the analog input signal by switching a capacitor in series to the input path. This setting should be selected when you need to measure only the AC component of a signal. For example, use AC coupling when you are making an rms or peak-to-peak voltage measurement.
Bandwidth	Press the <b>Bandwidth</b> softkey to select the input bandwidth value.  - 90 kHz (This is the default setting with sampling rate of 192 kHz)  - 1.5 MHz  - This setting is only available with Option N3431A. Refer to "U8903B Options" on page 37 for more information.
Reference	Press the <b>Reference</b> softkey to set the input references for analyzer.  - Voltage - Ratio - Frequency - Impedance - Sound level - Calibrator level

### Input configuration (Bluetooth)

The TSA > Project > Test > IO Configuration > Input Configuration menu page is displayed as shown in **Figure 7-9**.



Figure 7-10 TSA > Project > Test > IO Configuration > Input Configuration menu page (Bluetooth)

Table 7-9 TSA > Project > Test > IO Configuration > Input Configuration menu description (Bluetooth)

Menu	Description
Channels	Displays the number of input channels in use. If the Profiles consist of A2DP, the input channels in use will be fixed to 2 channels. If the Profiles consist of only HFP or HFP and AVRCP, the input channels in use will be fixed to 1 channel.
Device	Press the <b>Device</b> softkey to select the paired or connected <i>Bluetooth</i> device.
Profiles	Press the <b>Profiles</b> softkey to select the profile that will be used in the test. If the connected <i>Bluetooth</i> device is selected in <b>Device</b> , the profile used will be fixed to the connected profile(s).
	- A2DP
	- HFP
	- AVRCP
Link Config	Press the <b>Link Config</b> softkey to configure the <i>Bluetooth</i> link settings. Refer to " <b>Link Configuration (Bluetooth Generator)</b> " on page 147.

 Table 7-9
 TSA > Project > Test > IO Configuration > Input Configuration menu description (continued)(Bluetooth)

Menu	Description
Coupling	Press the Coupling softkey to select the coupling type.  DC DC coupling allows both AC and DC input signals to pass through to the Bluetooth analyzer and to be measured down to 0 Hz. This setting should be selected when making DC voltage measurements.  AC AC coupling blocks the DC component of the input signal. This setting should be selected when you need to measure only the AC component of a signal. For example, select this setting when you are making rms or peak-to-peak voltage measurement.
References	Press the Reference softkey to set the input references for generator.  - Voltage Set the reference voltage value.  - Ratio Set the reference ratio value.  - Frequency Set the reference frequency value.  - Sound Lvl Set the sound level value.  - Calibrator Lvl Set the calibration level value value.  - Volt/FS Set the volts/FS reference value.

### **Properties**

The TSA > Project > Test > IO Configuration > Properties menu page is displayed as shown in **Figure 7-11**.



Figure 7-11 Test > IO Configuration > Properties menu page

**Table 7-10** TSA > Project > Test > IO Configuration > Properties menu description

Menu	Description
Name	Press the <b>Name</b> softkey to rename the IO configuration.
Sub-Steps	Press the <b>Sub-Steps</b> softkey to configure the sub-steps settings. Refer to " <b>Sub-steps</b> " on page 309 for more information on the sub-steps settings.
Failure	Press the Failure softkey to edit the failure message. If one or more measurements in the test sequence fails, the failure message is displayed. The default message is "Failed". This setting is only available when Pass/Fail Msg is enabled.

# Sub-steps

You can add any number of sub-steps to the measurement. The sub-steps can be enabled, disabled, or deleted and moved into any order. You can add delay, prompts, and send SCPI commands to the sub-steps. Press the **Add Sub-Step** softkey to add sub-step and press the up and down arrow keys to select the desired sub-step.

The delay sub-step menu page is displayed as shown in Figure 7-12.



Figure 7-12 Delay sub-step menu page

Table 7-11 Sub-step menu description

Menu	Description
Enable	Press the <b>Enable</b> softkey to enable or disable the selected sub-step. The check box of the sub-step will be selected when enabled.
	Press the <b>Add Sub-Step</b> softkey to add sub-step to the list.
Add Sub-Step	- Delay
Auu Sub-Step	- Prompt
	- Send SCPI
Delete Sub-Step	Press the <b>Delete Sub-Step</b> softkey to delete the selected sub-step.
Edit	Press the Edit softkey to move or copy the selected sub-step, or paste a copied sub-step after the selected sub-step.
	Press the <b>Settings</b> softkey to configure the sub-step settings.
	- Delay
	Set the delay time in seconds.
	Minimum: 0 s
Settings	Maximum: 3600 s (1 hour)
	- Prompt
	Refer to " <b>Prompt sub-step settings</b> " on page 310 for more information.
	- Send SCPI
	Refer to "Send SCPI sub-step settings" on page 311 for more information.
Properties	Press the <b>Properties</b> softkey to rename the sub-step.

### Prompt sub-step settings

The prompt sub-step inserts a prompt message with reply option to the measurement. This provides you the information and opportunity to interact with the sequence. Press OK to close the prompt window and continue the test sequence. The prompt sub-step settings menu page is displayed as shown in **Figure 7-13**.

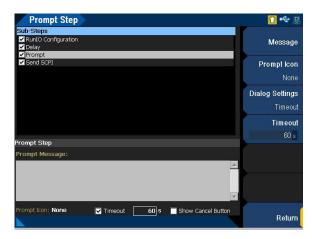


Figure 7-13 Prompt sub-step settings menu page

 Table 7-12
 Prompt sub-step settings menu description

Description
Press the <b>Message</b> softkey to set the prompt message at the lower half of the main display.
Press the <b>Prompt Icon</b> softkey to select the prompt icon to be displayed.
- None
- Hand
- Question
- Exclamation
- Asterisk
Press the <b>Dialog Settings</b> softkey to add additional settings to the prompt window.
<ul> <li>Timeout         When selected, the timeout value sets the maximum prompt window display time, in seconds. If the timeout is reached, the current measurement fails. When unselected, the prompt window will remain open until user closes it.     </li> </ul>
- Cancel
When selected, a Cancel button will be added to the prompt window. Press the Cancel button to close the prompt window and stop the test sequence.
Press the <b>Timeout</b> softkey to set the prompt timeout value in seconds. This setting is only available if Timeout is selected in the dialog settings.
Minimum: 1 s Maximum: 3600 s (1 hour)

### Send SCPI sub-step settings

The send SCPI sub-step can be inserted into any measurement in the test sequence to issue SCPI command(s) to a connected external instrument and to pause for a specified delay time after the command(s) is issued. This sub-step is useful for setting up an external instrument connected through a USB/GPIB interface before a measurement is performed. The send SCPI sub-step settings menu page is displayed as shown in **Figure 7-14**.

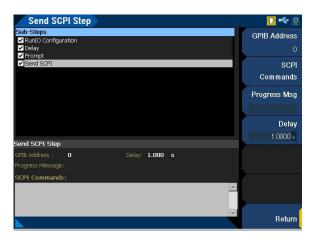


Figure 7-14 Send SCPI sub-step settings menu page

Table 7-13 Send SCPI sub-step settings menu description

Menu	Description
GPIB Address	Press the <b>GPIB Address</b> softkey to select the desired GPIB address.
	Press the SCPI Commands softkey to configure the SCPI commands.
	- Edit
SCPI Commands	Set the SCPI commands at the lower half of the main display.
	– Import
	Load the SCPI commands from a file. Refer to " <b>Recall</b> " on page 95 for more information on the Recall menu page.
Progress Msg	Press the <b>Progress Msg</b> softkey to set the optional text message that will be displayed on a dialog box for the time length set in <b>Delay</b> .
Delay	Press the <b>Delay</b> softkey to set the delay time length after the SCPI command(s) is issued. The SCPI command(s) may start an external event that takes some time to complete. An optional delay time can be set to wait for completion. The next sub-step in the test sequence will not be executed until the delay time has passed.

### Measurements

The U8903B allows up to 20 results in a single measurement. You can move a selected measurement within the same test sequence. An example of the measurement menu page is displayed as shown in **Figure 7-15**.



Figure 7-15 TSA > Project > Test > AC Level menu page

Table 7-14 TSA > Project > Test > Measurement menu description

Menu	Description
Enable	Press the <b>Enable</b> softkey to enable or disable the selected measurement. The check box for the measurement will be selected when enabled.
Add Measurement	Press the Add Measurement softkey to add measurements.
Delete Measurement	Press the <b>Delete Measurement</b> softkey to delete the selected measurement.
Edit	Press the <b>Edit</b> softkey to move or copy the selected measurement, or paste a copied measurement after the selected measurement.

**Table 7-14** TSA > Project > Test > Measurement menu description (continued)

Menu	Description
Menu	Press the Settings softkey to configure the selected measurement. Refer to the respective measurement settings for more information.  AC level Frequency Phase SNR THD+N DC level Crosstalk SMPTE IMD DFD IMD Multitone analyzer Stepped frequency sweep SMPTE frequency sweep SMPTE frequency sweep Stepped level sweep SMPTE level sweep DFD level sweep DFD level sweep DFD level sweep
	- Receiver sensitivity
	•
	·
	- Receiver sensitivity
	- Measurement recorder
	- Voice quality
Properties	Press the <b>Properties</b> softkey to configure the measurement properties. Refer to " <b>Properties</b> " on page 314 for more information.

### **Properties**

An example of the measurement properties menu page is displayed as shown in **Figure 7-16**.



Figure 7-16 TSA > Project > Test > AC Level > Properties menu page

 Table 7-15
 TSA > Project > Test > Measurement > Properties menu description

Menu	Description
Name	Press the <b>Name</b> softkey to rename the selected measurement.
Sub-Steps	Press the <b>Sub-Steps</b> softkey to configure the sub-steps settings. Refer to " <b>Sub-steps</b> " on page 309 for more information on the sub-steps settings.
Failure Handling	Press the Failure Handling softkey to select the failure handling type for the selected measurement. When a measurement exceeded its preset limit or faced failure due to improper configuration (for example, calling for a file that does not exist or sending a SCPI sub-step to an unconnected devices), you can direct the application to the following:  - Cancel Seq. Stop the test sequence.  - Allow Retry Display a prompt window with Abort, Retry, and Ignore commands. Abort will immediately stop the test sequence. Retry will rerun the selected measurements. Ignore will flag the measurement as failed and continue with the test sequence.  - Continue Seq. Flag the measurement as failed and continue with the test sequence.

#### AC level

AC level measurement provides a single value measurement of the output level from each DUT channel, as measured at each of the analyzer input. The AC level measurement settings allows you to configure the signal generation and signal analysis settings. The result for the AC level measurement for all the selected channels are displayed in a bar chart (AC Level and Gain). The gain result is not available if None is selected for the output configuration channels. Refer to "Measurement Results" on page 401 for more information on the respective result menu page.

Use the arrow keys to navigate through the respective tabs and to display the menu page.

## Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The AC level signal generation settings menu page is displayed as shown in Figure 7-17.



Figure 7-17 TSA > Project > Test > AC Level > Settings > Signal Generation menu page

Table 7-16 TSA > Project > Test > AC Level > Settings > Signal Generation menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to select the waveform type.  - Sine - Variable Phase - Square - Arbitrary
Output	Press the <b>Output</b> softkey to select the output channel.
	Press the Waveform Config softkey to set the waveform configuration. The available settings depend on the waveform type.  - Track 1st Ch If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1 waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the Track 1st Ch to set the individual channels.
Waveform Config	<ul> <li>Frequency Set the frequency value.</li> <li>Amplitude Set the amplitude value.</li> <li>DC Offset Set the DC offset value.</li> <li>Phase-&gt;1st Ch Set the phase value. This setting is only available when channel 2 is selected.</li> </ul>

### Signal analysis

The AC level signal analysis settings menu page is displayed as shown in Figure 7-18.

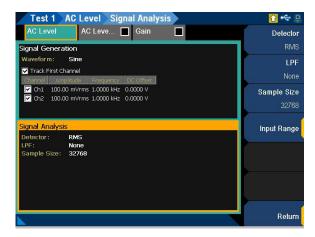


Figure 7-18 TSA > Project > Test > AC Level > Settings > Signal Analysis menu page

 Table 7-17
 TSA > Project > Test > AC Level > Settings > Signal Analysis menu description

Menu	Description
Detector	Press the <b>Detector</b> softkey to select the AC level detector type.
	- RMS
	AC level measurement is expressed in an rms value.
	- Pk-Pk
	AC level measurement is expressed in a Vpp value.
	Press the <b>LPF</b> softkey to select the low-pass filter.
	- None
	- 2 kHz
	- 3 kHz
	- 5 kHz
	- 8 kHz
	- 10 kHz
LPF	- 15 kHz
	- 20 kHz
	- 22 kHz
	- 30 kHz
	- 40 kHz
	- 50 kHz
	- 80 kHz
	- Custom
	Press the <b>Sample Size</b> softkey to select the number of samples to be acquired for the measurement.
	- 2048
	- 4096
	- 8192
	- 16384
	- 32768
Sample Size	- 65536
	- 131072
	- 262144
	- 524288
	- 1M
	- 2M
	Press the Input Range softkey to configure the input range settings.
	- Auto Range
Input Range	Enable or disable the auto input range.
	If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input
	signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to
	move up or down for a proper ranging.
	If auto range is disabled, you can set a fixed input voltage range for each analog input channel.
	<ul> <li>Track 1st Ch</li> <li>If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to</li> </ul>
	channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual
	channels.
	- Voltage Range
	Set the input voltage range.

### Frequency

Frequency measurement provides a single value frequency measurement of the strongest component in the output signal of each DUT channel. The frequency measurement settings allows you to configure the signal generation settings and signal analysis settings.

The result for the frequency measurement for all the selected channels are displayed in a bar chart (Frequency). Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

### Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The frequency signal generation settings menu page is displayed as shown in Figure 7-19.

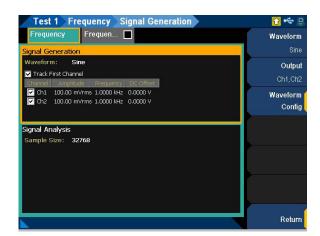


Figure 7-19 Frequency > Signal Generation settings menu page

 Table 7-18
 Frequency > Signal Generation settings menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to select the waveform type.  - Sine  - Variable Phase  - Square  - Arbitrary
Output	Press the <b>Output</b> softkey to select the output channel.
Waveform Config	Press the Waveform Config softkey to set the waveform configuration. The available settings depend on the waveform type.  - Track 1st Ch  If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1 waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the Track 1st Ch to set the individual channels.  - Frequency  Set the frequency value.  - Amplitude  Set the amplitude value.  - DC Offset  Set the DC offset value.  - Phase->1st Ch  Set the phase value. This setting is only available when channel 2 is selected.

### Signal analysis

The frequency signal analysis settings menu page is displayed as shown in Figure 7-20.

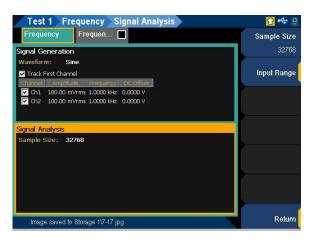


Figure 7-20 Frequency > Signal Analysis settings menu page

**Table 7-19** Frequency > Signal Analysis settings menu description

Menu	Description
Sample Size	Press the <b>Sample Size</b> softkey to select the number of samples to be acquired for the measurement.  - 2048  - 4096  - 8192  - 16384  - 32768  - 65536  - 131072  - 262144  - 524288  - 1M  - 2M
Input Range	Press the Input Range softkey to configure the input range settings.  - Auto Range             Enable or disable the auto input range.             If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to move up or down for a proper ranging.             If auto range is disabled, you can set a fixed input voltage range for each analog input channel.  - Track 1st Ch             If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.  - Voltage Range             Set the input voltage range.

#### Phase

Phase measurement provides a single value measurement of the relative phase of the DUT channels. One channel is chosen as the phase reference channel and the remaining channels are measured against it. The phase measurement settings allows you to configure the signal generation settings and signal analysis settings.

The result for the phase measurement for all the selected channels are displayed in a bar chart (Phase). Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

## Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The phase signal generation settings menu page is displayed as shown in Figure 7-21.



Figure 7-21 Phase > Signal Generation settings menu page

 Table 7-20
 Phase > Signal Generation settings menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to select the waveform type.  - Sine - Variable Phase - Square - Arbitrary
Output	Press the <b>Output</b> softkey to select the output channel.
Waveform Config	Press the Waveform Config softkey to set the waveform configuration. The available settings depend on the waveform type.  - Track 1st Ch If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1 waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the Track 1st Ch to set the individual channels.  - Frequency Set the frequency value.  - Amplitude Set the amplitude value.  - DC Offset Set the DC offset value.  - Phase->1st Ch Set the phase value. This setting is only available when channel 2 is selected.

# Signal analysis

The phase signal analysis settings menu page is displayed as shown in **Figure 7-22**.

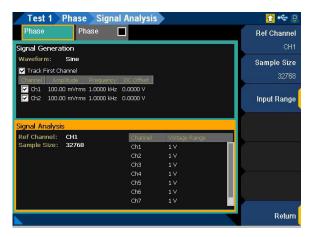


Figure 7-22 Phase > Signal Analysis settings menu page

Table 7-21 Phase > Signal Analysis settings menu description

Menu	Description
Ref Channel	Press the <b>Ref Channel</b> softkey to set the reference channel number. The phase of each channel is measured against the reference channel. The phase result for the reference channel should always be displayed zero.
Sample Size	Press the Sample Size softkey to select the number of samples to be acquired for the measurement.
	- 2048
	- 4096
	- 8192
	- 16384
	- 32768
	- 65536
	- 131072
	- 262144
	- 524288
	- 1M
	- 2M
Input Range	Press the Input Range softkey to configure the input range settings.
	<ul> <li>Track 1st Ch If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.</li> <li>Voltage Range Set the input voltage range.</li> </ul>

SNR

SNR measurement provides a single value measurement of the signal to noise ratio of the output signal from each DUT channel. SNR is used to evaluate the intelligibility of a signal by expressing the difference between the nominal signal level and the noise. SNR is formed by two measurements where the first measurement is the signal level and the second measurement is the noise level with the signal turned off. These two measurements are expressed as ratio and displayed in decibels. The SNR measurement settings allows you to configure the signal generation settings and signal analysis settings.

The result for the SNR measurement for all the selected channels are displayed in a bar chart (SNR). Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

## Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The SNR signal generation settings menu page is displayed as shown in Figure 7-23.



Figure 7-23 SNR > Signal Generation settings menu page

 Table 7-22
 SNR > Signal Generation settings menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to select the waveform type.  - Sine  - Variable phase  - Square  - Arbitrary
Output	Press the <b>Output</b> softkey to select the output channel.
Waveform Config	Press the Waveform Config softkey to set the waveform configuration. The available settings depend on the waveform type.  - Track 1st Ch  If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1 waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the Track 1st Ch to set the individual channels.  - Frequency  Set the frequency value.  - Amplitude  Set the amplitude value.  - DC Offset  Set the DC offset value.  - Phase->1st Ch  Set the phase value. This setting is only available when channel 2 is selected.

The SNR signal analysis settings menu page is displayed as shown in Figure 7-24.



Figure 7-24 SNR > Signal Analysis settings menu page

Table 7-23 SNR > Signal Analysis settings menu description

Menu	Description
SNR Mode	Press the SNR Mode softkey to select the SNR measurement mode.  - Fast The SNR measurement is based on the frequency domain computation method.  - Standard The SNR measurement is measured by an internal routine that alternatively switches the U8903B generator output on and off. This mode is a closed-loop configuration which requires both the generator and analyzer in the test setup.
SNR Delay	Press the <b>SNR Delay</b> softkey to set the SNR delay. This setting is only available when <b>SNR Mode</b> is set to Standard.
	Press the <b>Freq Lock</b> softkey to select the searching method for the fundamental frequency. This setting is only available when <b>SNR Mode</b> is set to Fast.
Freq Lock	<ul> <li>Auto Selecting Auto will allow the U8903B to search for the fundamental frequency automatically.</li> <li>Gen Lock Selecting Gen Lock will allow the U8903B to search for the fundamental frequency based on the generator frequency value of the respective generator channel. This Gen Lock method is only useful if you use the internal audio generator.</li> <li>Custom If you have a known input signal, you can define the fundamental frequency value by setting the searching method to Custom and setting the frequency value in Fund Freq.</li> </ul>
Fund Freq	Press the <b>Fund Freq</b> softkey to set the fundamental frequency value. This setting is only available when <b>SNR Mode</b> is set to Fast and <b>Freq Lock</b> is set to Custom.
Harmonic Cnt	Press the <b>Harmonic Cnt</b> softkey to set the number of harmonic order to be removed. This setting is ony available when <b>SNR Mode</b> is set to Fast.

**Table 7-23** SNR > Signal Analysis settings menu description (continued)

Table 7-20	ont > signar Analysis settings menu description (continued)
Menu	Description
	Press the <b>Filtering</b> softkey to select the low-pass filter.
LPF	- None
	- 2 kHz
	- 3 kHz
	- 5 kHz
	- 8 kHz
	- 10 kHz
	- 15 kHz
	- 20 kHz
	- 22 kHz
	- 30 kHz
	- 40 kHz
	- 50 kHz
	- 80 kHz
	- Custom
	Press the <b>HPF</b> softkey to select the high-pass filter.
	- None
	- 15 Hz
	- 20 Hz
	- 22 Hz
	- 30 Hz
HPF	- 50 Hz
	- 70 Hz
	- 100 Hz
	- 200 Hz
	- 300 Hz
	- 400 Hz
	- Custom
	Press the <b>Weighting</b> softkey to select the weighting filter.
	- None
	- A
Weighting	- CCIR 1k
	- CCIR 2k
	- CCITT
	- C-Message
	- Custom
	Press the <b>Deemphasis</b> softkey to select the de-emphasis filter.
	- None
Deemphasis	- 50 μs
	- 75 μs
	- Custom

Table 7-23 SNR > Signal Analysis settings menu description (continued)

Menu	Description
Sample Size	Press the <b>Sample Size</b> softkey to select the number of samples to be acquired for the measurement.  - 2048  - 4096  - 8192  - 16384  - 32768  - 65536  - 131072  - 262144  - 524288  - 1M  - 2M
Input Range	Press the Input Range softkey to configure the input range settings.  Auto Range Enable or disable the auto input range. If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to move up or down for a proper ranging. If auto range is disabled, you can set a fixed input voltage range for each analog input channel.  Track 1st Ch If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.  Voltage Range Set the input voltage range.

#### THD+N

THD+N measurement provides a single value measurement of the THD+N (Total Harmonic Distortion with Noise) in the output signal from each DUT channel, as measured at each of the analyzer input. The THD+N measurement settings allows you to configure the signal generation settings and signal analysis settings.

The result for the THD+N measurement for all the selected channels are displayed in a bar chart (SINAD, THD Level, THD Ratio, THD+N Level, and THD+N Ratio). Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

#### Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The THD+N signal generation settings menu page is displayed as shown in Figure 7-25.



Figure 7-25 THD+N > Signal Generation settings menu page

**Table 7-24** THD+N > Signal Generation settings menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to select the waveform type.  - Sine - Variable phase - Square - Arbitrary
Output	Press the <b>Output</b> softkey to select the output channel.
	Press the Waveform Config softkey to set the waveform configuration. The available settings depend on the waveform type.  - Track 1st Ch If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1 waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the Track 1st Ch to set the individual channels.
Waveform Config	<ul> <li>Frequency Set the frequency value.</li> <li>Amplitude Set the amplitude value.</li> <li>DC Offset Set the DC offset value.</li> <li>Phase-&gt;1st Ch Set the phase value. This setting is only available when channel 2 is selected.</li> </ul>

The THD+N signal analysis settings menu page is displayed as shown in **Figure 7-26**.

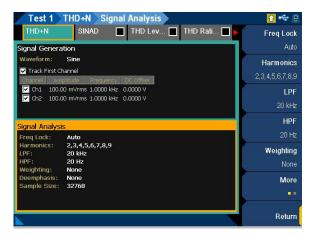


Figure 7-26 THD+N > Signal Analysis settings menu page

**Table 7-25** THD+N > Signal Analysis settings menu description

Mann	Trip+N > Signal Analysis Sectings menu description
Menu	Description
	Press the <b>Freq Lock</b> softkey to select the searching method for the fundamental frequency.
	<ul> <li>Auto</li> <li>Selecting Auto will allow the U8903B to search for the fundamental frequency automatically.</li> </ul>
Freq Lock	- Gen Lock
	Selecting Gen Lock will allow the U8903B to search for the fundamental frequency based on the generator frequency value of the respective generator channel. This Gen Lock method is only useful if you use the internal audio generator.
	<ul> <li>Custom</li> <li>If you have a known input signal, you can define the fundamental frequency value by setting the searching method to Custom and setting the frequency value in Fund Freq.</li> </ul>
Fund Freq	Press the <b>Fund Freq</b> softkey to set the fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.
	Press the Harmonics softkey to select the harmonics count to be used in the THD ratio and THD level results.
Harmonics	- All
	- 2 to 9
	Press the LPF softkey to select the low-pass filter.
	- None
	- 2 kHz
	- 3 kHz
	- 5 kHz
	- 8 kHz
	- 10 kHz
LPF	- 15 kHz
	- 20 kHz
	- 22 kHz
	- 30 kHz
	- 40 kHz
	- 50 kHz
	- 80 kHz
	- Custom
	Press the <b>HPF</b> softkey to select the high-pass filter.
	- None
НРБ	- 15 Hz
	– 20 Hz – 22 Hz
	- 22 Hz - 30 Hz
	- 50 Hz
	- 70 Hz
	- 70 Hz
	- 100 Hz
	- 300 Hz
	- 400 Hz
	- Custom

Table 7-25 THD+N > Signal Analysis settings menu description (continued)

Menu	Description
Weighting	Press the Weighting softkey to select the weighting filter.  None  CCIR 1k  CCIR 2k  CCITT  C-Message  Custom
Deemphasis	Press the <b>Deemphasis</b> softkey to select the de-emphasis filter.   - None   - 50 $\mu s$ - 75 $\mu s$ - Custom
Sample Size	Press the <b>Sample Size</b> softkey to select the number of samples to be acquired for the measurement.  - 2048  - 4096  - 8192  - 16384  - 32768  - 65536  - 131072  - 262144  - 524288  - 1M  - 2M
Input Range	Press the Input Range softkey to configure the input range settings.  Auto Range Enable or disable the auto input range. If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to move up or down for a proper ranging. If auto range is disabled, you can set a fixed input voltage range for each analog input channel.  Track 1st Ch If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.  Voltage Range Set the input voltage range.

#### DC level

DC level measurement provides a single value measurement of the DC voltage present at the output of each DUT channel. If AC coupling is selected in the input configuration settings, it will change to DC coupling when the DC level measurement is being performed. The DC level measurement settings allows you to configure the signal generation settings and signal analysis settings.

The result for the DC level measurement for all the selected channels are displayed in a bar chart (DC Level). Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

#### Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The DC level signal generation settings menu page is displayed as shown in Figure 7-27.



Figure 7-27 DC Level > Signal Generation settings menu page

 Table 7-26
 DC Level > Signal Generation settings menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to select the waveform type.  - Sine - Arbitrary
Output	Press the <b>Output</b> softkey to select the output channel.
Waveform Config	Press the Waveform Config softkey to set the waveform configuration. The available settings depend on the waveform type.  - Track 1st Ch If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1 waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the Track 1st Ch to set the individual channels.  - Frequency Set the frequency value.  - Amplitude Set the amplitude value.  - DC Offset Set the DC offset value.

The DC level signal analysis settings menu page is displayed as shown in Figure 7-28.

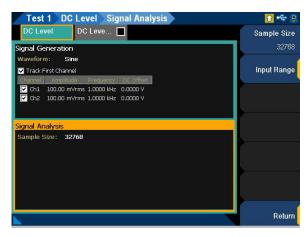


Figure 7-28 DC Level > Signal Analysis settings menu page

Table 7-27 DC Level > Signal Analysis settings menu description

Menu	Description
Sample Size	Press the <b>Sample Size</b> softkey to select the number of samples to be acquired for the measurement.  - 2048  - 4096  - 8192  - 16384  - 32768  - 65536  - 131072  - 262144  - 524288  - 1M
Input Range	<ul> <li>- 2M</li> <li>Press the Input Range softkey to configure the input range settings.</li> <li>- Auto Range</li></ul>

#### Crosstalk

Crosstalk is the unwanted leakage or bleed of a signal from one or more channels to other channels in a DUT. Crosstalk measurement provides the measurement of the crosstalk into the unstimulated DUT channel(s) when one channel is stimulated.

The generator will output the test signal to the DUT on the selected driven channel. The crosstalk in each of the remaining channels is then measured. The crosstalk measurement settings allows you to configure the signal generation settings and signal analysis settings.

The crosstalk measured in each channels are displayed in a bar chart (Crosstalk). Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

### Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The crosstalk signal generation settings menu page is displayed as shown in Figure 7-29.



Figure 7-29 Crosstalk > Signal Generation settings menu page

 Table 7-28
 Crosstalk > Signal Generation settings menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to select the waveform type.  - Sine - Arbitrary
Output	Press the <b>Output</b> softkey to select the output channel.
Waveform Config	Press the Waveform Config softkey to set the waveform configuration. The available settings depend on the waveform type.  - Track 1st Ch If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1 waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the Track 1st Ch to set the individual channels.  - Frequency Set the frequency value.  - Amplitude Set the amplitude value.  - DC Offset Set the DC offset value.

The crosstalk signal analysis settings menu page is displayed as shown in Figure 7-30.

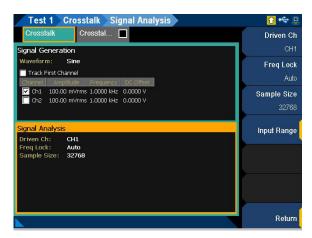


Figure 7-30 Crosstalk > Signal Analysis settings menu page

 Table 7-29
 Crosstalk > Signal Analysis settings menu description

Menu	Description
Driven Ch	Press the <b>Driven Ch</b> softkey to select the driven channel number from the generator.
Freq Lock	Press the <b>Freq Lock</b> softkey to select the searching method for the fundamental frequency.  - Auto Selecting Auto will allow the U8903B to search for the fundamental frequency automatically.
	<ul> <li>Gen Lock</li> <li>Selecting Gen Lock will allow the U8903B to use the driven channel frequency value. You can select the generator channel by setting the <b>Driven Ch</b>. This Gen Lock method is only useful if you use the internal audio generator.</li> <li>Custom</li> </ul>
	If you have a known input signal, you can define the fundamental frequency value by setting the searching method to Custom and setting the frequency value in <b>Fund Freq</b> .
Fund Freq	Press the <b>Fund Freq</b> softkey to set the fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.
Sample Size	Press the Sample Size softkey to select the number of samples to be acquired for the measurement.  - 2048  - 4096  - 8192  - 16384  - 32768  - 65536  - 131072  - 262144  - 524288  - 1M  - 2M
Input Range	Press the Input Range softkey to configure the input range settings.  - Auto Range Enable or disable the auto input range. If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to move up or down for a proper ranging. If auto range is disabled, you can set a fixed input voltage range for each analog input channel.  - Track 1st Ch If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.  - Voltage Range Set the input voltage range.

#### SMPTE IMD

SMPTE IMD measurement provides a single value measurement of the IMD ratio in the output signal from each DUT channel using the SMPTE method. The SMPTE IMD measurement settings allows you to configure the signal generation settings and signal analysis settings.

The result for the SMPTE ratio measurement for all the selected channels are displayed in a bar chart (SMPTE Ratio). Refer to "**Measurement Results**" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

NOTE

This measurement requires a closed-loop configuration in which both the generator and the analyzer are used in the test setup. If None is selected for the output configuration channel, this measurement is unavailable.

#### Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The SMPTE IMD signal generation settings menu page is displayed as shown in Figure 7-31.



Figure 7-31 SMPTE IMD > Signal Generation settings menu page

 Table 7-30
 SMPTE IMD > Signal Generation settings menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to select the waveform type.  - SMPTE 1:1  - SMPTE 4:1  - SMPTE 10:1
Output	Press the <b>Output</b> softkey to select the output channel.
Waveform Config	Press the Waveform Config softkey to set the waveform configuration. The available settings depend on the waveform type.  - Track 1st Ch  If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1 waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the Track 1st Ch to set the individual channels.  - Upper Freq  Set the upper frequency value.  - Lower Freq  Set the lower frequency value.  - Amplitude  Set the amplitude value.  - DC Offset  Set the DC offset value.

The SMPTE IMD signal analysis settings menu page is displayed as shown in Figure 7-32.



Figure 7-32 SMPTE IMD > Signal Analysis settings menu page

 Table 7-31
 SMPTE IMD > Signal Analysis settings menu description

Menu	Description
Freq Lock	Press the Freq Lock softkey to select the searching method for the upper and lower frequencies.  Gen Lock Selecting Gen Lock will allow the U8903B to search for the upper and lower frequencies of the input signal based on the upper and lower frequencies of the respective generator channel. This Gen Lock method is only useful if you use the internal audio generator.  Custom If you have a known input signal, you can define the upper and lower frequency values by setting the searching method to Custom and setting the frequency value in Upper Freq and Lower Freq.
Upper Freq	Press the <b>Upper Freq</b> softkey to set the upper fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.
Lower Freq	Press the <b>Lower Freq</b> softkey to set the lower fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.
Sample Size	Press the <b>Sample Size</b> softkey to select the number of samples to be acquired for the measurement.  - 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M
Input Range	Press the Input Range softkey to configure the input range settings.  Auto Range Enable or disable the auto input range. If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to move up or down for a proper ranging. If auto range is disabled, you can set a fixed input voltage range for each analog input channel.  Track 1st Ch If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.  Voltage Range Set the input voltage range.

#### DFD IMD

DFD IMD measurement provides a single value measurement of the IMD ratio in the output signal from each DUT channel using the DFD method. The DFD measurement settings allows you to configure the signal generation settings and signal analysis settings.

The result for the DFD ratio measurement for all the selected channels are displayed in a bar chart (DFD Ratio). Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

#### Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The DFD IMD signal generation settings menu page is displayed as shown in Figure 7-33.



Figure 7-33 DFD IMD > Signal Generation settings menu page

**Table 7-32** DFD IMD > Signal Generation settings menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to select the waveform type.  - IEC60118  - IEC60268
Output	Press the <b>Output</b> softkey to select the output channel.
Waveform Config	Press the Waveform Config softkey to set the waveform configuration. The available settings depend on the waveform type.  - Track 1st Ch If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1 waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the Track 1st Ch to set the individual channels.  - Upper Freq Set the upper frequency value.  - Center Freq Set the center frequency value.  - Diff Freq Set the difference frequency value.  - Amplitude Set the amplitude value.  - DC Offset Set the DC offset value.

The DFD IMD signal analysis settings menu page is displayed as shown in **Figure 7-34**.

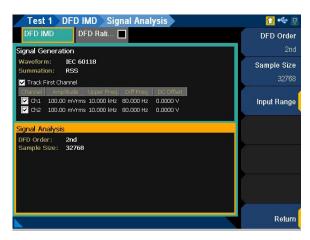


Figure 7-34 DFD IMD > Signal Analysis settings menu page

 Table 7-33
 DFD IMD > Signal Analysis settings menu description

Menu	Description
DFD order	Press the <b>DFD order</b> softkey to select the distortion order to be measured.  - 2nd  - 3rd
Sample Size	Press the <b>Sample Size</b> softkey to select the number of samples to be acquired for the measurement.  - 2048  - 4096  - 8192  - 16384  - 32768  - 65536  - 131072  - 262144  - 524288  - 1M  - 2M
Input Range	Press the Input Range softkey to configure the input range settings.  Auto Range Enable or disable the auto input range. If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to move up or down for a proper ranging. If auto range is disabled, you can set a fixed input voltage range for each analog input channel.  Track 1st Ch If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.  Voltage Range Set the input voltage range.

#### Multitone analyzer

Multitone analyzer measurement uses the FFT analysis with a multitone stimulus waveform. The multitone stimulus signal is the combination of two or more sine waveforms. The multitone signal is applied to the DUT, and the DUT output is acquired for measurement. You can create a multitone from the Tones Config menu page in the signal generation settings.

The result for the multitone analyzer measurement for all the selected channels are displayed in a graph (Spectrum, Waveform, Level, and Gain) and in a bar chart (Max Tone Level, Min Tone Level, TD+N Level, TD+N Ratio, and Tone Level). Refer to "**Measurement Results**" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

NOTE

This measurement requires a closed-loop configuration in which both the generator and the analyzer are used in the test setup. If None is selected for the output configuration channel, this measurement is unavailable. This measurement is also unavailable if a different interface is selected for the output and input configuration channel.

### Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The multitone analyzer signal generation settings menu page is displayed as shown in **Figure 7-35**.

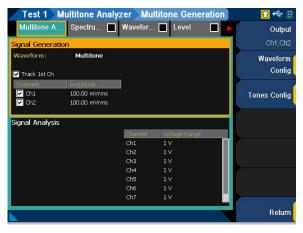


Figure 7-35 Multitone Analyzer > Signal Generation settings menu page

 Table 7-34
 Multitone Analyzer > Signal Generation settings menu description

Menu	Description
Output	Press the <b>Output</b> softkey to select the output channel.
Waveform Config	Press the Waveform Config softkey to set the waveform configuration.  - Track 1st Ch If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1 waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the Track 1st Ch to set the individual channels.  - Amplitude Set the amplitude value.
Tones Config	Press the Tones Config softkey to set the tones.  Start freq The lowest frequency in the multitone waveform.  Stop freq The highest frequency in the multitone waveform.  Freq Spacing The frequency spacing between the tones.  Tone Count The number of signal frequency components. The maximum number of tones that can be generated is 60 for analog and 64 for digital/Bluetooth.  Length The waveform length that determines the number of samples used to create one iteration of the multitone waveform. Longer waveform length provides higher frequency resolution but will take more time to generate and process.  Apply Apply the multitone after it has been customized.  Optimize Optimize Optimize the multitone.  Amplitude Dist: Zero Set the amplitude of all tones to 0 db.  Phase Dist: Zero Set thephase of all tones to 0 degrees.  Phase Dist: Random Set thephase of all tones to random phase in degrees.
	<ul> <li>Edit Tones</li> <li>Edit the individual tones frequency, amplitude, and phase.</li> <li>Active Channel</li> <li>The active channel for the absolute amplitude for each tone to be displayed in a table.</li> </ul>

The multitone analyzer signal analysis settings menu page is displayed as shown in **Figure 7-36**.

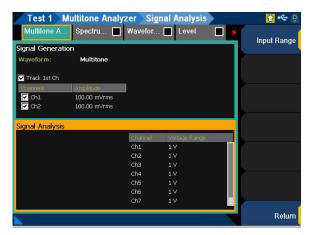


Figure 7-36 Multitone Analyzer > Signal Analysis settings menu page

 Table 7-35
 Multitone Analyzer > Signal Analysis settings menu description

Menu	Description
Input Range	Press the Input Range softkey to configure the input range settings.  - Track 1st Ch  If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.  - Voltage Range Set the input voltage range.

#### Stepped frequency sweep

Stepped sweep is an audio testing method where one parameter is swept across a range of values while one or more other parameters are measured. The stepped frequency sweep measurement provides a sine wave stimulus signal that is moved across a range of frequencies in a specified number of points. The DUT output is acquired by the analyzer and the results are displayed on an X-Y graph, with the generator frequency on the X-axis and the measured results from the DUT on the Y-axis (AC Level, Gain, Phase, THD Ratio, THD Level, THD+N Ratio, THD+N Level, and SINAD).

Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Auto ranging is not supported for the phase result. Use the arrow keys to navigate through the respective tabs and to display the menu page.

NOTE

This measurement requires a closed-loop configuration in which both the generator and the analyzer are used in the test setup. If None is selected for the output configuration channel, this measurement is unavailable.

## Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The stepped frequency sweep signal generation settings menu page is displayed as shown in **Figure 7-37**.



Figure 7-37 Stepped Frequency Sweep > Signal Generation settings menu page

 Table 7-36
 Stepped Frequency Sweep > Signal Generation settings menu description

Menu	Description
Output	Press the <b>Output</b> softkey to select the output channel.
	Press the Sweep Config softkey to set the sweep configuration.  - Start Set the start value for the sweep parameter.
	Set the start value for the sweep parameter.  - Stop Set the stop value for the sweep parameter.
	- Spacing Select Log, Linear, or Custom for the sweep spacing.
Sweep Config	- Points Set the number of sweep points.
	<ul> <li>Step Size</li> <li>Set the step size for linear spacing. This setting is only available when spacing is set to Linear.</li> </ul>
	- Dwell Time Set the delay between the sweep points.
	<ul> <li>Edit Points</li> <li>Edit the individual points value, insert or remove points, load points, and save the points.</li> </ul>
	Press the Waveform Config softkey to set the waveform configuration.
Waveform Config	<ul> <li>Track 1st Ch         If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels         and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1         waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the         Track 1st Ch to set the individual channels.</li> </ul>
	- Amplitude Set the amplitude value.
	- DC Offset Set the DC offset value.

The stepped frequency sweep signal analysis settings menu page is displayed as shown in **Figure 7-38**.



Figure 7-38 Stepped Frequency Sweep > Signal Analysis settings menu page

Table 7-37 Stepped Frequency Sweep > Signal Analysis settings menu description

Menu	Description
Ref Channel	Press the <b>Ref Channel</b> softkey to set the reference channel number. The phase of each channel is measured against the reference channel. The phase result for the reference channel should always be displayed zero.
	Press the <b>Wrap Phase</b> softkey to enable or disable the wrap phase.
	- On
Wrap Phase	The phase result is wrapped so that it falls within the range of $-180^{\circ} \sim 180^{\circ}$ .
	- Off
	The result displayed is the exact value after substracted from the reference channel.
Harmonics	Press the <b>Harmonics</b> softkey to select the harmonics count to be used in the THD ratio and THD level results.
	- All
	- 2 to 9

 Table 7-37
 Stepped Frequency Sweep > Signal Analysis settings menu description (continued)

	otepped Trequency oweep 7 dignat Analysis settings ment description (continued)
Menu	Description
	Press the LPF softkey to select the low-pass filter.
LPF	- None
	- 2 kHz
	- 3 kHz
	- 5 kHz
	- 8 kHz
	- 10 kHz
	- 15 kHz
	- 20 kHz
	- 22 kHz
	- 30 kHz
	- 40 kHz
	- 50 kHz
	- 80 kHz
	- Custom
	Press the <b>HPF</b> softkey to select the high-pass filter.
	- None
	- 15 Hz
	- 20 Hz
	- 22 Hz
	- 30 Hz
HPF	- 50 Hz
	- 70 Hz
	- 100 Hz
	- 200 Hz
	- 300 Hz
	- 400 Hz
	- Custom
	Press the <b>Weighting</b> softkey to select the weighting filter.
	- None
	- A
Weighting	- CCIR 1k
weighting	- CCIR 2k
	- CCITT
	- C-Message
	- Custom
	Press the <b>Deemphasis</b> softkey to select the de-emphasis filter.
	- None
Deemphasis	- 50 μs
	- 75 μs
	- Custom

Table 7-37 Stepped Frequency Sweep > Signal Analysis settings menu description (continued)

Menu	Description
Sample Size	Press the <b>Sample Size</b> softkey to select the number of samples to be acquired for the measurement.  - 2048  - 4096  - 8192  - 16384  - 32768  - 65536  - 131072  - 262144  - 524288  - 1M  - 2M
Input Range	Press the Input Range softkey to configure the input range settings.  Auto Range Enable or disable the auto input range. If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to move up or down for a proper ranging. If auto range is disabled, you can set a fixed input voltage range for each analog input channel.  Track 1st Ch If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.  Voltage Range Set the input voltage range.

#### SMPTE frequency sweep

SMPTE frequency sweep measurement will hold one of the two tones at a fixed frequency while the other is swept through a range of frequencies. The results are displayed on an X-Y graph, with the swept frequency on the X-axis and the measured SMPTE ratio on the Y-axis.

Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

NOTE

This measurement requires a closed-loop configuration in which both the generator and the analyzer are used in the test setup. If None is selected for the output configuration channel, this measurement is unavailable.

### Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The SMPTE frequency sweep signal generation settings menu page is displayed as shown in **Figure 7-39**.



Figure 7-39 SMPTE Frequency Sweep > Signal Generation settings menu page

 Table 7-38
 SMPTE Frequency Sweep > Signal Generation settings menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to select the waveform type.  - SMPTE 1:1  - SMPTE 4:1  - SMPTE 10:1
Output	Press the <b>Output</b> softkey to select the output channel.
Sweep Config	Press the Sweep Config softkey to set the sweep configuration.  - Swept Select Upper Freq or Lower Freq as the sweep parameter.  - Start Set the start value for the sweep parameter.  - Stop Set the stop value for the sweep parameter.  - Spacing Select Log, Linear, or Custom for the sweep spacing.  - Points Set the number of sweep points.  - Step Size Set the step size for linear spacing. This setting is only available when spacing is set to Linear.  - Dwell Time Set the delay between the sweep points.  - Edit Points Edit the individual points value, insert or remove points, load points, and save the points.
Waveform Config	Press the Waveform Config softkey to set the waveform configuration.  - Track 1st Ch  If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1 waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the Track 1st Ch to set the individual channels.  - Upper Freq  Set the upper frequency value. This setting is only available if Swept is set to Lower Freq.  - Lower Freq  Set the lower frequency value. This setting is only available if Swept is set to Upper Freq.  - Amplitude  Set the amplitude value.  - DC Offset  Set the DC offset value.

The SMPTE frequency sweep signal analysis settings menu page is displayed as shown in **Figure 7-40**.



Figure 7-40 SMPTE Frequency Sweep > Signal Analysis settings menu page

 Table 7-39
 SMPTE Frequency Sweep > Signal Analysis settings menu description

Menu	Description
Sample Size	Press the <b>Sample Size</b> softkey to select the number of samples to be acquired for the measurement.  - 2048  - 4096  - 8192  - 16384  - 32768  - 65536  - 131072  - 262144  - 524288  - 1M  - 2M
Input Range	Press the Input Range softkey to configure the input range settings.  Auto Range Enable or disable the auto input range. If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to move up or down for a proper ranging. If auto range is disabled, you can set a fixed input voltage range for each analog input channel.  Track 1st Ch If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.  Voltage Range Set the input voltage range.

#### DFD frequency sweep

DFD frequency sweep measurement will hold one of the two frequencies (IEC60118 upper or difference frequency and IEC60268 center or difference frequency) at a fixed frequency while the other is swept through a range of frequencies. The results are displayed on an X-Y graph, with the swept frequency on the X-axis and the measured DFD ratio on the Y-axis.

Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

NOTE

This measurement requires a closed-loop configuration in which both the generator and the analyzer are used in the test setup. If None is selected for the output configuration channel, this measurement is unavailable.

## Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The DFD frequency sweep signal generation settings menu page is displayed as shown in **Figure 7-41**.



Figure 7-41 DFD Frequency Sweep > Signal Generation settings menu page

 Table 7-40
 DFD Frequency Sweep > Signal Generation settings menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to select the waveform type.  - IEC60118  - IEC60268
Output	Press the <b>Output</b> softkey to select the output channel.
Sweep Config	Press the Sweep Config softkey to set the sweep configuration.  - Swept Select Upper Freq or Diff Freq as the sweep parameter.  - Start Set the start value for the sweep parameter.  - Stop Set the stop value for the sweep parameter.  - Spacing Select Log, Linear, or Custom for the sweep spacing.  - Points Set the number of sweep points.  - Step Size Set the step size for linear spacing. This setting is only available when spacing is set to Linear.  - Dwell Time Set the delay between the sweep points.  - Edit Points Edit the individual points value, insert or remove points, load points, and save the points.
Waveform Config	Press the Waveform Config softkey to set the waveform configuration.  - Track 1st Ch If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1 waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the Track 1st Ch to set the individual channels.  - Upper Freq Set the upper frequency value. This setting is only available if Swept is set to Diff Freq.  - Diff Freq Set the difference frequency value. This setting is only available if Swept is set to Upper Freq.  - Amplitude Set the amplitude value.  - DC Offset Set the DC offset value.

The DFD frequency sweep signal analysis settings menu page is displayed as shown in **Figure 7-42**.



Figure 7-42 DFD Frequency Sweep > Signal Analysis settings menu page

 Table 7-41
 DFD Frequency Sweep > Signal Analysis settings menu description

Menu	Description
DFD order	Press the <b>DFD order</b> softkey to select the distortion product order to be measured.
	- 2nd
	- 3rd
	Press the Sample Size softkey to select the number of samples to be acquired for the measurement.
	- 2048
	- 4096
	- 8192
	- 16384
Comple Cire	- 32768
Sample Size	- 65536
	- 131072
	- 262144
	- 524288
	- 1M
	- 2M

 Table 7-41
 DFD Frequency Sweep > Signal Analysis settings menu description (continued)

Menu	Description
Input Range	Press the Input Range softkey to configure the input range settings.  Auto Range Enable or disable the auto input range. If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to move up or down for a proper ranging. If auto range is disabled, you can set a fixed input voltage range for each analog input channel.  Track 1st Ch If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.  Voltage Range Set the input voltage range.

#### External frequency sweep

Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

#### Signal generation

The external frequency sweep signal generation settings menu page is displayed as shown in **Figure 7-43**.



Figure 7-43 External Frequency Sweep > Signal Generation settings menu page

Table 7-42 External Frequency Sweep > Signal Generation settings menu description

Menu	Description
Instrument	Press the Instrument softkey to select the instrument model.  Keysight 33220A  Keysight 33250A  Keysight 33500A  Keysight 33600A  Other
GPIB Address	Press the <b>GPIB Address</b> softkey to select the GPIB address.  - 0 to 30
Init Instrument	Press the <b>Init Instrument</b> softkey to enable or disable the U8903B to send SCPI commands to initialize the connected signal generator.
Init SCPI	Press the Init SCPI softkey to set the SCPI commands that initialize the connected instrument. You can set the SCPI command directly or load from a file.  - Edit - Import (Refer to "Recall" on page 95 for more information on the Recall menu page.)

 Table 7-42
 External Frequency Sweep > Signal Generation settings menu description (continued)

Menu	Description
Sweep SCPI	Press the <b>Sweep SCPI</b> softkey to set the sweep SCPI commands that initialize the connected instrument. You can set the SCPI command directly or load from a file.  - Edit
	- Import (Refer to " <b>Recall</b> " on page 95 for more information on the Recall menu page.)
	Press the <b>Sweep Config</b> softkey to set the sweep configuration.
	- Start Set the start value for the sweep parameter.
	- Stop Set the stop value for the sweep parameter.
	<ul> <li>Spacing</li> <li>Select Log, Linear, or Custom for the sweep spacing.</li> </ul>
Sweep Config	- Points Set the number of sweep points.
	<ul> <li>Step Size</li> <li>Set the step size for linear spacing. This setting is only available when spacing is set to Linear.</li> </ul>
	- Dwell Time Set the delay between the sweep points.
	<ul> <li>Edit Points</li> <li>Edit the individual points value, insert or remove points, load points, and save the points.</li> </ul>

The external frequency sweep signal analysis settings menu page is displayed as shown in **Figure 7-44**.



Figure 7-44 External Frequency Sweep > Signal Analysis settings menu page

Table 7-43 External Frequency Sweep > Signal Analysis settings menu description

Menu	Description
Ref Channel	Press the <b>Ref Channel</b> softkey to select the reference channel number. The phase of each channel is measured against the reference channel. The phase result for the reference channel should always be displayed zero.
	Press the <b>Harmonics</b> softkey to select the harmonics count to be used in the THD ratio and THD level results.
Harmonics	- All
	- 2 to 9
	Press the LPF softkey to select the low-pass filter.
	- None
	- 2 kHz
	- 3 kHz
	- 5 kHz
	- 8 kHz
	- 10 kHz
LPF	- 15 kHz
	- 20 kHz
	- 22 kHz
	- 30 kHz
	- 40 kHz
	- 50 kHz
	- 80 kHz
	- Custom

 Table 7-43
 External Frequency Sweep > Signal Analysis settings menu description (continued)

Menu	Description
НРБ	Press the HPF softkey to select the high-pass filter.  None  15 Hz  20 Hz  21 Hz  30 Hz  50 Hz  70 Hz  100 Hz  200 Hz  200 Hz  Custom
Weighting	Press the <b>Weighting</b> softkey to select the weighting filter.  - None  - A  - CCIR 1k  - CCIR 2k  - CCITT  - C-Message  - Custom
Deemphasis	Press the <b>Deemphasis</b> softkey to select the de-emphasis filter.   - None   - 50 $\mu s$ - 75 $\mu s$ - Custom
Notch Filter	Press the Notch Filter softkey to configure the notch filter settings.  HP8903B Enable or disable the HP8903B mode.  Custom Notch Enable or disable the custom notch.  Center Freq Set the center frequency value. This is only applicable when custom notch is enabled.  Bandwidth Set the bandwidth value. This is only applicable when custom notch is enabled.

Table 7-43 External Frequency Sweep > Signal Analysis settings menu description (continued)

Menu	Description
Sample Size	Press the <b>Sample Size</b> softkey to select the number of samples to be acquired for the measurement.  - 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M
Input Range	Press the Input Range softkey to configure the input range settings.  Auto Range Enable or disable the auto input range. If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to move up or down for a proper ranging. If auto range is disabled, you can set a fixed input voltage range for each analog input channel.  Track 1st Ch If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.  Voltage Range Set the input voltage range.

### Stepped level sweep

Stepped sweep is an audio testing method where one parameter is swept across a range of values while one or more other parameters are measured. The stepped level sweep measurement provides a sine wave stimulus signal that is moved across a range of levels in a specified number of points. The DUT output is acquired by the analyzer and the results are displayed on an X-Y graph, with the generator level on the X-axis and the measured results from the DUT on the Y-axis (AC Level, Gain, THD Ratio, THD Level, THD Ratio Vs Measured Amplitude, THD Level Vs Measured Amplitude, THD+N Level, THD+N Ratio Vs Measured Amplitude, and SINAD).

Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

NOTE

This measurement requires a closed-loop configuration in which both the generator and the analyzer are used in the test setup. If None is selected for the output configuration channel, this measurement is unavailable.

### Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The stepped level sweep signal generation settings menu page is displayed as shown in **Figure 7-45**.



Figure 7-45 Stepped Level Sweep > Signal Generation settings menu page

 Table 7-44
 Stepped Level Sweep > Signal Generation settings menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to select the waveform type.  - Sine - Arbitrary
Output	Press the <b>Output</b> softkey to select the output channel.
Sweep Config	Press the Sweep Config softkey to set the sweep configuration.  - Start Set the start value for the sweep parameter.  - Stop Set the stop value for the sweep parameter.  - Spacing Select Log, Linear, or Custom for the sweep spacing.  - Points Set the number of sweep points.  - Step Size Set the step size for linear spacing. This setting is only available when spacing is set to Linear.  - Dwell Time Set the delay between the sweep points.  - Edit Points Edit the individual points value, insert or remove points, load points, and save the points.
Waveform Config	Press the Waveform Config softkey to set the waveform configuration.  - Track 1st Ch  If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1 waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the Track 1st Ch to set the individual channels.  - Frequency  Set the frequency value.  - DC Offset  Set the DC offset value.

The stepped level sweep signal analysis settings menu page is displayed as shown in **Figure 7-46**.



Figure 7-46 Stepped Level Sweep > Signal Analysis settings menu page

 Table 7-45
 Stepped Level Sweep > Signal Analysis settings menu description

Menu	Description
Freq Lock	Press the Freq Lock softkey to select the searching method for the fundamental frequency.  - Auto Selecting Auto will allow the U8903B to search for the fundamental frequency automatically.  - Gen Lock Selecting Gen Lock will allow the U8903B to search for the fundamental frequency based on the generator frequency value of the respective generator channel. This Gen Lock method is only useful if you use the internal audio generator.  - Custom If you have a known input signal, you can define the fundamental frequency value by setting the searching method to Custom and setting the frequency value in Fund Freq.
Fund Freq	Press the <b>Fund Freq</b> softkey to set the fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.

Table 7-45 Stepped Level Sweep > Signal Analysis settings menu description (continued)

Menu	Description
	Press the LPF softkey to select the low-pass filter.
	- None
	- 2 kHz
	- 3 kHz
	- 5 kHz
	- 8 kHz
	- 10 kHz
LPF	- 15 kHz
	- 20 kHz
	- 22 kHz
	- 30 kHz
	- 40 kHz
	- 50 kHz
	- 80 kHz
	- Custom
	Press the <b>HPF</b> softkey to select the high-pass filter.
	- None
	- 15 Hz
	- 20 Hz
	- 22 Hz
	- 30 Hz
HPF	- 50 Hz
	- 70 Hz
	- 100 Hz
	- 200 Hz
	- 300 Hz
	- 400 Hz
	- Custom
	Press the <b>Weighting</b> softkey to select the weighting filter.
	- None
	- A
	- CCIR 1k
Weighting	- CCIR 2k
	- CCITT
	- C-Message
	- Custom
	Press the <b>Deemphasis</b> softkey to select the de-emphasis filter.
	- None
Deemphasis	- 50 μs
	<ul><li>75 μs</li><li>Custom</li></ul>

 Table 7-45
 Stepped Level Sweep > Signal Analysis settings menu description (continued)

Menu	Description
Sample Size	Press the <b>Sample Size</b> softkey to select the number of samples to be acquired for the measurement.  - 2048  - 4096  - 8192  - 16384  - 32768  - 65536  - 131072  - 262144  - 524288  - 1M  - 2M
Input Range	Press the Input Range softkey to configure the input range settings.  Auto Range Enable or disable the auto input range. If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to move up or down for a proper ranging. If auto range is disabled, you can set a fixed input voltage range for each analog input channel.  Track 1st Ch If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.  Voltage Range Set the input voltage range.

#### SMPTE level sweep

SMPTE level sweep measurement will add two tones of different frequencies into a stimulus signal to sweep through a range of levels. The results are displayed on an X-Y graph, with the swept generator level or measured DUT level on the X-axis and the measured SMPTE ratio on the Y-axis.

Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

NOTE

This measurement requires a closed-loop configuration in which both the generator and the analyzer are used in the test setup. If None is selected for the output configuration channel, this measurement is unavailable.

## Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The SMPTE level sweep signal generation settings menu page is displayed as shown in **Figure 7-47**.



Figure 7-47 SMPTE Level Sweep > Signal Generation settings menu page

 Table 7-46
 SMPTE Level Sweep > Signal Generation settings menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to select the waveform type.  - SMPTE 1:1  - SMPTE 4:1  - SMPTE 10:1
Output	Press the <b>Output</b> softkey to select the output channel.
Sweep Config	Press the Sweep Config softkey to set the sweep configuration.  - Start Set the start value for the sweep parameter.  - Stop Set the stop value for the sweep parameter.  - Spacing Select Log, Linear, or Custom for the sweep spacing.  - Points Set the number of sweep points.  - Step Size Set the step size for linear spacing. This setting is only available when spacing is set to Linear.  - Dwell Time Set the delay between the sweep points.  - Edit Points Edit the individual points value, insert or remove points, load points, and save the points.
Waveform Config	Press the Waveform Config softkey to set the waveform configuration.  - Track 1st Ch  If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1 waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the Track 1st Ch to set the individual channels.  - Upper Freq  Set the upper frequency value.  - Lower Freq  Set the lower frequency value.  - DC Offset  Set the DC offset value.

The SMPTE level sweep signal analysis settings menu page is displayed as shown in **Figure 7-48**.



Figure 7-48 SMPTE Level Sweep > Signal Analysis settings menu page

Table 7-47 SMPTE Level Sweep > Signal Analysis settings menu description

Menu	Description
Freq Lock	Press the Freq Lock softkey to select the searching method for the upper and lower frequencies.  - Gen Lock Selecting Gen Lock will allow the U8903B to search for the upper and lower frequencies of the input signal based on the upper and lower frequencies of the respective generator channel. This Gen Lock method is only useful if you use the internal audio generator.
	<ul> <li>Custom</li> <li>If you have a known input signal, you can define the upper and lower frequency values by setting the searching method to Custom and setting the frequency value in Upper Freq and Lower Freq.</li> </ul>
Upper Freq	Press the <b>Upper Freq</b> softkey to set the upper fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.
Lower Freq	Press the <b>Lower Freq</b> softkey to set the lower fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.

 Table 7-47
 SMPTE Level Sweep > Signal Analysis settings menu description (continued)

Menu	Description
Sample Size	Press the <b>Sample Size</b> softkey to select the number of samples to be acquired for the measurement.  - 2048  - 4096  - 8192  - 16384  - 32768  - 65536  - 131072  - 262144  - 524288  - 1M  - 2M
Input Range	Press the Input Range softkey to configure the input range settings.  Auto Range Enable or disable the auto input range. If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to move up or down for a proper ranging. If auto range is disabled, you can set a fixed input voltage range for each analog input channel.  Track 1st Ch If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.  Voltage Range Set the input voltage range.

#### DFD level sweep

DFD level sweep measurement will add up two tones of different frequencies into a stimulus signal to sweep through a range of levels. The results are displayed on an X-Y graph, with the swept generator level or measured DUT level on the X-axis and the measured DFD ratio on the Y-axis.

Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

NOTE

This measurement requires a closed-loop configuration in which both the generator and the analyzer are used in the test setup. If None is selected for the output configuration channel, this measurement is unavailable.

## Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The DFD level sweep signal generation settings menu page is displayed as shown in **Figure 7-49**.



Figure 7-49 DFD Level Sweep > Signal Generation settings menu page

 Table 7-48
 DFD Level Sweep > Signal Generation settings menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to select the waveform type.  - IEC60118  - IEC60268
Output	Press the <b>Output</b> softkey to select the output channel.
Sweep Config	Press the Sweep Config softkey to set the sweep configuration.  - Start Set the start value for the sweep parameter.  - Stop Set the stop value for the sweep parameter.  - Spacing Select Log, Linear, or Custom for the sweep spacing.  - Points Set the number of sweep points.  - Step Size Set the step size for linear spacing. This setting is only available when spacing is set to Linear.  - Dwell Time Set the delay between the sweep points.  - Edit Points Edit the individual points value, insert or remove points, load points, and save the points.
Waveform Config	Press the Waveform Config softkey to set the waveform configuration.  - Track 1st Ch  If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1 waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the Track 1st Ch to set the individual channels.  - Upper Freq  Set the upper frequency value.  - Diff Freq  Set the difference frequency value.  - DC Offset  Set the DC offset value.

The DFD level sweep signal analysis settings menu page is displayed as shown in **Figure 7-50**.



Figure 7-50 DFD Level Sweep > Signal Analysis settings menu page

Table 7-49 DFD Level Sweep > Signal Analysis settings menu description

Menu	Description
DFD order	Press the <b>DFD order</b> softkey to select the distortion product order to be measured.
	- 2nd
	- 3rd
	Press the Sample Size softkey to select the number of samples to be acquired for the measurement.
	- 2048
	- 4096
	- 8192
	- 16384
Comple Cire	- 32768
Sample Size	- 65536
	- 131072
	- 262144
	- 524288
	- 1M
	- 2M

 Table 7-49
 DFD Level Sweep > Signal Analysis settings menu description (continued)

Menu	Description
Input Range	Press the Input Range softkey to configure the input range settings.  - Auto Range

#### DC level sweep

DC level sweep measurement sweeps a DC signal across a range of values in a series of points and the DUT output is acquired by the analyzer. The results are displayed on an X-Y graph, with the generator DC level on the X-axis and the measured result on the Y-axis. If AC coupling is selected in the input configuration settings, it will temporary be set to DC coupling while the DC level sweep measurement is performed.

Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

NOTE

This measurement requires a closed-loop configuration in which both the generator and the analyzer are used in the test setup. If None is selected for the output configuration channel, this measurement is unavailable.

### Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The DC level sweep signal generation settings menu page is displayed as shown in Figure 7-51.



Figure 7-51 DC Level Sweep > Signal Generation settings menu page

 Table 7-50
 DC Level Sweep > Signal Generation settings menu description

Menu	Description
Output	Press the <b>Output</b> softkey to select the output channel.
Sweep Config	Press the Sweep Config softkey to set the sweep configuration.  Start Set the start value for the sweep parameter.  Stop Set the stop value for the sweep parameter.  Spacing Select Log, Linear, or Custom for the sweep spacing.  Points Set the number of sweep points.  Step Size Set the step size for linear spacing. This setting is only available when spacing is set to Linear.  Dwell Time Set the delay between the sweep points.  Edit Points Edit Points Edit the individual points value, insert or remove points, load points, and save the points.

The DC level sweep signal analysis settings menu page is displayed as shown in **Figure 7-52**.



Figure 7-52 DC Level Sweep > Signal Analysis settings menu page

 Table 7-51
 DC Level Sweep > Signal Analysis settings menu description

Menu	Description
	Press the <b>LPF</b> softkey to select the low-pass filter.
	- None
	- 2 kHz
	- 3 kHz
	- 5 kHz
	- 8 kHz
	- 10 kHz
LPF	- 15 kHz
	- 20 kHz
	- 22 kHz
	- 30 kHz
	- 40 kHz
	- 50 kHz
	- 80 kHz
	- Custom
	Press the <b>HPF</b> softkey to select the high-pass filter.
	- None
	- 15 Hz
	- 20 Hz
	- 22 Hz
	- 30 Hz
HPF	- 50 Hz
	- 70 Hz
	- 100 Hz
	- 200 Hz
	- 300 Hz
	- 400 Hz
	- Custom
	Press the <b>Weighting</b> softkey to select the weighting filter.
	- None
	- A
Weighting	- CCIR 1k
weighting	- CCIR 2k
	- CCITT
	- C-Message
	- Custom
	Press the <b>Deemphasis</b> softkey to select the de-emphasis filter.
	- None
Deemphasis	- 50 μs
	- 75 μs
	- Custom

 Table 7-51
 DC Level Sweep > Signal Analysis settings menu description (continued)

Menu	Description
Sample Size	Press the <b>Sample Size</b> softkey to select the number of samples to be acquired for the measurement.  - 2048  - 4096  - 8192  - 16384  - 32768  - 65536  - 131072  - 262144  - 524288  - 1M  - 2M
Input Range	Press the Input Range softkey to configure the input range settings.  Auto Range Enable or disable the auto input range. If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to move up or down for a proper ranging. If auto range is disabled, you can set a fixed input voltage range for each analog input channel.  Track 1st Ch If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.  Voltage Range Set the input voltage range.

### Receiver sensitivity

Receiver sensitivity measurement uses an external RF (radio frequency) signal generator to create a RF stimulus signal that is moved across a range of powers in a specified number of points. The DUT output which is in analog audio is acquired by the analyzer and processed for display.

The receiver sensitivity measurement is typically used for characterizing radio sensitivity by measuring SINAD. SINAD is an audio quality value that is used to specify the RF sensitivity of radio receivers. A higher SINAD value indicates higher quality audio.

**Figure 7-53** shows a general setup for the receiver sensitivity measurement. A signal generator provides its own modulation and the U8903B controls the signal generator through Keysight 82357B USB/GPIB interface. A receiver such as a two-way radio is connected to the U8903B either by a direct connection or through an acoustic coupler.

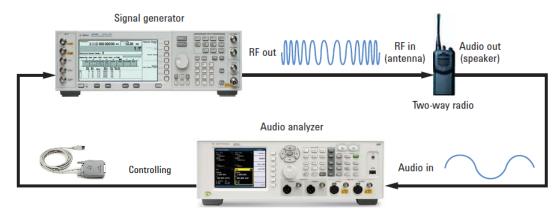


Figure 7-53 General setup for the receiver sensitivity measurement

Set the audio output level of the receiver as required and the signal generator settings to the desired value. The U8903B will automatically adjust the RF power output from the signal generator so that the targeted SINAD is produced at the receiver output. The targeted SINAD value is generally 12 dB for a communications receiver and 23 dB (mono) or 26 dB (stereo) for a broadcast receiver such as a car radio or Hi-Fi tuner.

The results are displayed on an X-Y graph, with the RF power parameter on the X-axis and the measured SINAD results on the Y-axis. Refer to "**Measurement Results**" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

NOTE

Receiver sensitivity measurement will be unavailable if the *Bluetooth* interface is selected for the input configuration.

## Signal generation

The receiver sensitivity signal generation settings menu page is displayed as shown in **Figure 7-54**.



Figure 7-54 Receiver Sensitivity > Signal Generation settings menu page

 Table 7-52
 Receiver Sensitivity > Signal Generation settings menu description

Menu	Description
Instrument	Press the <b>Instrument</b> softkey to select the signal generator model.  - Keysight E4438C  - Other
GPIB address	Press the <b>GPIB address</b> softkey to set the GPIB address for the connected signal generator.
Start Power	Press the <b>Start Power</b> softkey to set the sweep start RF power.
Stop Power	Press the <b>Stop Power</b> softkey to set the sweep stop RF power.
Step Size	Press the <b>Step Size</b> softkey to set the step size.
Dwell Time	Press the <b>Dwell Time</b> softkey to set the delay between each measured SINAD in seconds.
Init Instrument	Press the <b>Init Instrument</b> softkey to enable or disable the U8903B to send SCPI commands to initialize the connected signal generator.
FM Frequency	Press the <b>FM Frequency</b> softkey to set the RF signal output frequency. This setting is only available if <b>Instrument</b> is set to Keysight E4438C and the <b>Init Instrument</b> is enabled.
FM Deviation	Press the <b>FM Deviation</b> softkey to set the RF signal frequency modulation deviation. This setting is only available if <b>Instrument</b> is set to Keysight E4438C and the <b>Init Instrument</b> is enabled.
FM Rate	Press the <b>FM Rate</b> softkey to set the RF signal internal frequency modulation rate. This setting is only available if <b>Instrument</b> is set to Keysight E4438C and the <b>Init Instrument</b> is enabled.

Table 7-52 Receiver Sensitivity > Signal Generation settings menu description (continued)

Menu	Description
Init SCPI	Press the Init SCPI softkey to set the SCPI commands that initialize the connected signal generator. You can set the SCPI command directly or load from a file. This setting is only available if Instrument is set to Other and the Init Instrument is enabled.
	Press the <b>Output Power SCPI</b> softkey to edit the SCPI command that adjusts the RF power of the connected signal generator. The command must be in the following pattern.
Output Power SCPI	Cmds <val></val>
	Cmds is the SCPI command and $$ is the value that will be filled up by the measurement to perform sweep. For example, $:$ POW $$ DBM. This setting is only available if Instrument is set to Other.

The receiver sensitivity signal analysis settings menu page is displayed as shown in **Figure 7-55**.



Figure 7-55 Receiver Sensitivity > Signal Analysis settings menu page

**Table 7-53** Receiver Sensitivity > Signal Analysis settings menu description

Menu	Description
Meas Channel	Press the <b>Meas Channel</b> softkey to set the measured channel number.
Target SINAD	Press the Target SINAD softkey to set the target SINAD value measured from the Meas Channel.
Min 1st Value	Press the Min 1st Value softkey to set the minimum first value.
Stop Condition	Press the <b>Stop Condition</b> softkey to select the stop condition.  - Until End  - On Target

 Table 7-53
 Receiver Sensitivity > Signal Analysis settings menu description (continued)

Menu	Description
	Press the Freq Lock softkey to select the searching method for the fundamental frequency.
Freq Lock	- Auto
	Selecting Auto will allow the U8903B to search for the fundamental frequency automatically.
	- Custom
	If you have a known input signal, you can define the fundamental frequency value by setting the searching method to Custom and setting the frequency value in <b>Fund Freq</b> .
Fund Freq	Press the <b>Fund Freq</b> softkey to set the fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.
	Press the LPF softkey to select the low-pass filter.
	- None
	- 2 kHz
	- 3 kHz
	- 5 kHz
	- 8 kHz
	- 10 kHz
LPF	- 15 kHz
	- 20 kHz
	- 22 kHz
	- 30 kHz
	- 40 kHz
	- 50 kHz
	- 80 kHz
	- Custom
	Press the <b>HPF</b> softkey to select the high-pass filter.
	- None
	- 15 Hz
	- 20 Hz
	- 22 Hz
	- 30 Hz
HPF	- 50 Hz
	- 70 Hz
	- 100 Hz
	- 200 Hz
	- 300 Hz
	- 400 Hz
	- Custom
	Press the <b>Weighting</b> softkey to select the weighting filter.
	- None
	- A
	- CCIR 1k
Weighting	- CCIR 2k
	- CCITT
	- C-Message
	- Custom

Table 7-53 Receiver Sensitivity > Signal Analysis settings menu description (continued)

Menu	Description
Deemphasis	Press the <b>Deemphasis</b> softkey to select the de-emphasis filter.
	- None
	- 50 μs
	- 75 μs
	- Custom
	Press the <b>Notch Filter</b> softkey to configure the notch filter settings.
	- HP8903B
	Enable or disable the HP8903B notch filter mode.
Marak Eller	- Custom Notch
Notch Filter	Enable or disable custom notch filter.
	<ul> <li>Center Freq</li> <li>Set the center frequency value. This is only available when the Custom Notch is enabled.</li> </ul>
	- Bandwidth
	Set the bandwidth value. This is only available when the Custom Notch is enabled.
Average Points	Press the <b>Average Points</b> softkey to set the number of measurement readings to be used for the average calculation. This is useful for noisy signals. Applying the average points will smooth out the fluctuations introduced by the noise that causes
•	the inconsistencies in the measurement reading.
	Press the Sample Size softkey to select the number of samples to be acquired for the measurement.
	- 2048
	- 4096
	- 8192
	- 16384
Cample Cire	- 32768
Sample Size	- 65536
	- 131072
	- 262144
	- 524288
	- 1M
	- 2M
	Press the Input Range softkey to configure the input range settings.
	- Auto Range
	Enable or disable the auto input range.
	If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to
Input Range	move up or down for a proper ranging.
	If auto range is disabled, you can set a fixed input voltage range for each analog input channel.
	- Track 1st Ch
	If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.
	<ul> <li>Voltage Range</li> <li>Set the input voltage range.</li> </ul>

## External level sweep

Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

# Signal generation

The external level sweep signal generation settings menu page is displayed as shown in **Figure 7-56**.



Figure 7-56 External Level Sweep > Signal Generation settings menu page

Table 7-54 External Level Sweep > Signal Generation settings menu description

Menu	Description
Instrument	Press the Instrument softkey to select the instrument model.  Keysight 33220A  Keysight 33250A  Keysight 33500A  Other
GPIB Address	Press the <b>GPIB Address</b> softkey to select the GPIB address.  - 0 to 30
Init Instrument	Press the <b>Init Instrument</b> softkey to enable or disable the U8903B to send SCPI commands to initialize the connected signal generator.
Init SCPI	Press the Init SCPI softkey to set the SCPI commands that initialize the connected instrument. You can set the SCPI command directly or load from a file.  - Edit - Import (Refer to "Recall" on page 95 for more information on the Recall menu page.)

External Level Sweep > Signal Generation settings menu description (continued)

Menu	Description
Oursell CODI	Press the <b>Sweep SCPI</b> softkey to set the sweep SCPI commands that initialize the connected instrument. You can set the SCPI command directly or load from a file.
Sweep SCPI	- Edit
	<ul> <li>Import (Refer to "Recall" on page 95 for more information on the Recall menu page.)</li> </ul>
	Press the <b>Sweep Config</b> softkey to set the sweep configuration.
	- Start
	Set the start value for the sweep parameter.
	- Stop
	Set the stop value for the sweep parameter.
	- Spacing
	Select Log, Linear, or Custom for the sweep spacing.
Sweep Config	- Points
	Set the number of sweep points.
	- Step Size
	Set the step size for linear spacing. This setting is only available when spacing is set to Linear.
	- Dwell Time
	Set the delay between the sweep points.
	- Edit Points
	Edit the individual points value, insert or remove points, load points, and save the points.

The external frequency sweep signal analysis settings menu page is displayed as shown in **Figure 7-57**.



Figure 7-57 External Level Sweep > Signal Analysis settings menu page

 Table 7-55
 Stepped Level Sweep > Signal Analysis settings menu description

Menu	Description
Freq Lock	Press the Freq Lock softkey to select the searching method for the fundamental frequency.  - Auto Selecting Auto will allow the U8903B to search for the fundamental frequency automatically.  - Gen Lock Selecting Gen Lock will allow the U8903B to search for the fundamental frequency based on the generator frequency value of the respective generator channel. This Gen Lock method is only useful if you use the internal audio generator.  - Custom If you have a known input signal, you can define the fundamental frequency value by setting the searching method to Custom and setting the frequency value in Fund Freq.
Fund Freq	Press the <b>Fund Freq</b> softkey to set the fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.

Table 7-55 Stepped Level Sweep > Signal Analysis settings menu description (continued)

Table 7-33	Stepped Level Sweep > Signal Analysis Settings mend description (continued)
Menu	Description
	Press the LPF softkey to select the low-pass filter.
	- None
	- 2 kHz
	- 3 kHz
	- 5 kHz
	- 8 kHz
	- 10 kHz
LPF	- 15 kHz
	- 20 kHz
	- 22 kHz
	- 30 kHz
	- 40 kHz
	- 50 kHz
	- 80 kHz
	- Custom
	Press the <b>HPF</b> softkey to select the high-pass filter.
	- None
	- 15 Hz
	- 20 Hz
	- 22 Hz
	- 30 Hz
HPF	- 50 Hz
	- 70 Hz
	- 100 Hz
	- 200 Hz
	- 300 Hz
	- 400 Hz
	- Custom
	Press the <b>Weighting</b> softkey to select the weighting filter.
Weighting	- None
	- A
	- CCIR 1k
	- CCIR 2k
	- CCITT
	- C-Message
	- Custom
Deemphasis	Press the <b>Deemphasis</b> softkey to select the de-emphasis filter.
	- None
	- 50 μs
	- 75 μs
	- Custom
	Outlon

 Table 7-55
 Stepped Level Sweep > Signal Analysis settings menu description (continued)

Menu	Description
Notch Filter	Press the Notch Filter softkey to configure the notch filter settings.  HP8903B Enable or disable the HP8903B mode.  Custom Notch Enable or disable the custom notch.  Center Freq Set the center frequency value.  Bandwidth
	Set the bandwidth value.
Sample Size	Press the <b>Sample Size</b> softkey to select the number of samples to be acquired for the measurement.  - 2048  - 4096  - 8192  - 16384  - 32768  - 65536  - 131072  - 262144  - 524288  - 1M  - 2M
Input Range	Press the Input Range softkey to configure the input range settings.  Auto Range Enable or disable the auto input range. If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to move up or down for a proper ranging. If auto range is disabled, you can set a fixed input voltage range for each analog input channel.  Track 1st Ch If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.  Voltage Range Set the input voltage range.

#### Measurement recorder

Measurement recorder is a tool that provides a record of a number of measurements versus elapsed time. It is useful to monitor the output of a DUT over an extended period of time. The measurement recorder does not require a specific test signal. It can be used with any audio signal within the input range of the analyzer or with no signal.

The reading rate of the measurement recorder is dependent on the channel count, sample size, and result type. A reading is obtained at the beginning of the measurement and throughout the duration set until the elapsed time.

The results are displayed on an X-Y graph, with the time parameter on the X-axis and the measured results on the Y-axis (AC Level, Gain, Phase, THD+N Ratio, THD+N Level, DC Level, Frequency, and SINAD). Refer to "Measurement Results" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

#### NOTE

- Auto ranging is not supported for the phase result.
- DC level result is not available if AC coupling is selected in the output configuration settings.

## Signal generation

NOTE

The signal generation is disabled if None is selected for the output configuration channel.

The measurement recorder signal generation settings menu page is displayed as shown in **Figure 7-58**.



Figure 7-58 Measurement Recorder > Signal Generation settings menu page

 Table 7-56
 Measurement Recorder > Signal Generation settings menu description

Menu	Description
Waveform	Press the <b>Waveform</b> softkey to select the waveform type.  - Sine  - Variable Phase  - Square  - Arbitrary
Output	Press the <b>Output</b> softkey to select the output channel.
Waveform Config	Press the Waveform Config softkey to set the waveform configuration.  - Track 1st Ch  If Track 1st Ch is enabled, the generator channel 1 waveform configuration settings will be copied to the other channels and the waveform configuration settings for the other channels cannot be edited. Any changes made to channel 1 waveform configuration settings will be reproduced in the other channels waveform configuration settings. Disable the Track 1st Ch to set the individual channels.  - Frequency  Set the frequency value.  - Amplitude  Set the amplitude value.  - DC Offset  Set the DC offset value.

The measurement recorder signal analysis settings menu page is displayed as shown in **Figure 7-59**.

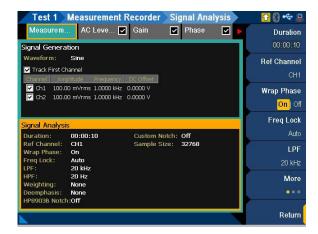


Figure 7-59 Measurement Recorder > Signal Analysis settings menu page

Table 7-57 Measurement Recorder > Signal Analysis settings menu description

Menu	Description
Duration	Press the <b>Duration</b> softkey to set the length of the measurement record. The duration is in the following pattern.  hh:mm:ss  hh is the hours, mm is the minutes, and ss is the seconds.  The minimum duration is 0 s, and the maximum duration is 3 days (71:59:59). When the duration is set to 0 s, a single measurement will be made.
Ref Channel	Press the <b>Ref Channel</b> softkey to set the reference channel number. The phase of each channel is measured against the reference channel. The phase result for the reference channel should always be displayed zero.
Wrap Phase	Press the <b>Wrap Phase</b> softkey to enable or disable the wrap phase.  On The phase result is wrapped so that it falls within the range of -180° ~ 180°.  Off The result displayed is the exact value after substracted from the reference channel.
Freq Lock	Press the Freq Lock softkey to select the searching method for the fundamental frequency.  Auto Selecting Auto will allow the U8903B to search for the fundamental frequency automatically.  Gen Lock Selecting Gen Lock will allow the U8903B to search for the fundamental frequency based on the generator frequency value of the respective generator channel. This Gen Lock method is only useful if you use the internal audio generator.  Custom If you have a known input signal, you can define the fundamental frequency value by setting the searching method to Custom and setting the frequency value in Fund Freq.
Fund Freq	Press the <b>Fund Freq</b> softkey to set the fundamental frequency value. This setting is only available when <b>Freq Lock</b> is set to Custom.

 Table 7-57
 Measurement Recorder > Signal Analysis settings menu description (continued)

Menu	Description
	Press the LPF softkey to select the low-pass filter.
	- None
	- 2 kHz
	- 3 kHz
	- 5 kHz
	- 8 kHz
	- 10 kHz
LPF	- 15 kHz
	- 20 kHz
	- 22 kHz
	- 30 kHz
	- 40 kHz
	- 50 kHz
	- 80 kHz
	- Custom
	Press the <b>HPF</b> softkey to select the high-pass filter.
	- None
	- 15 Hz
	- 20 Hz
	- 22 Hz
	- 30 Hz
HPF	- 50 Hz
	- 70 Hz
	- 100 Hz
	- 200 Hz
	- 300 Hz
	- 400 Hz
	- Custom
	Press the <b>Weighting</b> softkey to select the weighting filter.
	- None
	- A
Weighting	- CCIR1k
weighting	- CCIR 2k
	- CCITT
	- C-Message
	- Custom
Deemphasis	Press the <b>Deemphasis</b> softkey to select the de-emphasis filter.
	- None
	- 50 μs
	- 75 μs
	- Custom

Table 7-57 Measurement Recorder > Signal Analysis settings menu description (continued)

Menu	Description
Sample Size	Press the <b>Sample Size</b> softkey to select the number of samples to be acquired for the measurement.  - 2048  - 4096  - 8192  - 16384  - 32768  - 65536  - 131072  - 262144  - 524288  - 1M  - 2M
Input Range	Press the Input Range softkey to configure the input range settings.  Auto Range Enable or disable the auto input range. If auto range is enabled, each analog channel input range is determined automatically, based on the level of the input signal. If the input signal level changes beyond the ranging threshold, auto range will cause the input ranging circuits to move up or down for a proper ranging. If auto range is disabled, you can set a fixed input voltage range for each analog input channel.  Track 1st Ch If Track 1st Ch is enabled, all the other channels will be set to follow the channel 1 range setting. Any changes made to channel 1 range setting will be reproduced in the other channels. Disable the Track 1st Ch to set the individual channels.  Voltage Range Set the input voltage range.

#### Voice quality

#### NOTE

POLQA measurement is only available with N3432A. Refer to "**U8903B Options**" on page **37** for more information.

This measurement is unavailable if a different interface is selected for the output and input configuration channel.

Perceptual Objective Listening Quality Assessment (POLQA) is the next-generation voice quality testing technology for fixed, mobile, and IP-based networks. POLQA was standardized by the ITU-T (International Telecommunication Union) as the new Recommendation P.863 and can be applied for voice quality analysis of high definition voice, 3G, and 4G/LTE networks. POLQA is licensed by OPTICOM GmbH.

#### NOTE

Perceptual Objective Listening Quality Analysis (POLQA) according to ITU-T Recommendation P. 863 included in this product is protected by copyright and by European, US and other International patents and patent applications and is provided under license from OPTICOM Dipl.-Ing. M. Keyhl GmbH, Erlangen, Germany, 2011 - www.opticom.de.

POLQA® is a registered trademark of OPTICOM GmbH. Used by permission.

© 2011 by the POLQA Coalition of OPTICOM GmbH, Germany - SwissQual AG, Switzerland - KPN, The Netherlands - TNO, The Netherlands.

Copying, modifying, translating, reverse engineering or decompiling the POLQA Software is prohibited. Acknowledgement of the rights in the POLQA software shall not be removed from the POLQA software or any installation of it.

For further information please refer to www.polqa.info.

POLQA provides significantly improved benchmark accuracy for 3G and strong support for testing of most recent technologies such as Unified Communications, Next Gen Networks, and 4G/LTE compared to PESQ/P8.862 that was originally released in the year 2001.

POLQA measurement working model is to predict speech quality by analysing digital speech signal. The objective measures should be as close as possible to the subjective quality scores as if it would be obtained from subjective listening tests. Typically, POLQA measurement uses real speech as a test stimulus to assess the quality and performance of telephony networks. POLQA measurement is the successor to PESQ/P8.862 measurement.

The result for the voice quality measurement for all the selected channels are displayed in a bar chart (MOS-LQO and Levels). Refer to "**Measurement Results**" on page 401 for more information on the respective result menu page. Use the arrow keys to navigate through the respective tabs and to display the menu page.

#### NOTE

POLQA voice quality analysis may have a reduced wave file recording duration compared to the PESQ voice quality analysis based on the different option card configuration and settings in the U8903B. For more information, please refer to "**POLQA Recording Duration Analysis**" on page 604.

#### Signal generation and analysis

The voice quality signal generation and analysis settings menu page is displayed as shown in **Figure 7-60**.



Figure 7-60 Voice Quality > Signal Generation and Analysis settings menu page

 Table 7-58
 Voice Quality > Signal Generation and Analysis settings menu description

Menu	Description		
	Press the <b>Test Config</b> softkey to set the test configurations.  - Standard Select POLQA as the test standard.		
Test Config	<ul> <li>Bandwidth         Select Narrowband or Super Wideband as the bandwidth type for POLQA standard.</li> <li>Level Align         Enable or disable the automatic level alignment. This setting is only applicable for POLQA standard.</li> </ul>		

Table 7-58 Voice Quality > Signal Generation and Analysis settings menu description (continued)

#### Menu Description

Press the Reference softkey to set the reference source configuration.

- Source

Select the reference source.

- File

Use the Reference File as the comparison file.

Congrator

Use the Reference File options to determine the comparison file.

- Reference File

Use the Reference File as the comparison file if the **Source** is set to File.

Use the following Reference File options as the comparison file if the **Source** is set to Generator:

- Playback File

Use the Playback File as the comparison file.

- Recorded

Use the Recorded Playback File as the comparison file.

- Custom File

Use the Custom File as the comparison file.

- Playback File

This setting is only available when the **Reference Source** is set to Generator. Set the playback file to be used as the comparison file if **Reference File** is set to Playback File. Set the playback file to be recorded as the comparison file if **Reference File** is set to Recorded. Set the playback file to be recorded and the Custom File to be used as the comparison file if **Reference File** is set to Custom.

- Custom File

Set the custom file to be used as the comparison file. This setting is only available when **Reference Source** is set to Generator and **Reference File** is set to Custom.

- Rec Channel

Set the channel number to be recorded from. This setting is only available when **Source** is set to Generator and **Reference File** is set to Recorded.

- Rec Duration

Set the recording duration to be recorded. This setting is only available when **Source** is set to Generator and **Reference File** is set to Recorded.

- Rec Step

Set the start recording type. This setting is only available when **Source** is set to Generator and **Reference File** is set to Recorded.

- Auto

Start the recording automatically.

- Delay

Start the recording after a delay.

Prompt

Start the recording after the user presses the Enter key to proceed in the confirmation prompt.

- Rec Delay

Set the delay time before a recording is performed. This setting is only available when **Source** is set to Generator, **Reference File** is set to Recorded, and **Rec Step** is set to Delay.

- Rec to File

Enable or disable exporting the recording function. This setting is only available when **Source** is set to Generator and **Reference File** is set to Recorded.

Yes

Export the recording to the file path specified in Rec File.

- No

Do not export the recording.

Rec File

Set the file path for the exported recording destination. This setting is only available when **Source** is set to Generator, **Reference File** is set to Recorded, and **Rec To File** is set to Yes.

#### Reference

Voice Quality > Signal Generation and Analysis settings menu description (continued)

Menu	Description				
Degraded	Press the Degraded softkey to set the degraded source configuration.  Source Select the degraded source.  File Use the Degraded File as the comparison file.  Analyzer Use the Analyzer recording as the comparison file.  Degraded File Set the degraded file as the comparison file.  Press the Degraded File Set the Analyzer recording as the comparison file.  Rec Channel Set the channel number to be recorded from. This setting is only available when Source is set to Analyzer.  Rec Duration Set the recording duration to be recorded. This setting is only available when Source is set to Analyzer.  Rec Step Set the start recording type. This setting is only available when Source is set to Analyzer.  Auto Start the recording automatically.  Delay Start the recording after a delay.  Prompt Start the recording after the user presses the Enter key to proceed in the confirmation prompt.  Rec Delay Set the delay time before a recording is performed. This setting is only available when Source is set to Analyzer and Rec Step is set to Delay.  Rec to File Enable or disable exporting the recording function. This setting is only available when Source is set to Analyzer.  Yes Export the recording to the file path specified in Rec File.  No Do not export the recording.  Rec File Set the file path for the exported recording destination. This setting is only available when Source is set to Analyzer and Rec To File is set to Yes.				
IO Config	Press the IO Config softkey to set the IO configuration.  Output Level Set the output level value.				
Show/Hide POLQA License	Press the <b>Show/Hide POLQA License</b> softkey to show or hide the POLQA license information.				

### Measurement Results

The test sequence application allows you to display the measurement results in a bar chart or graph.

#### Bar chart

An example of the bar chart result menu page is displayed as shown in Figure 7-61.



Figure 7-61 AC Level > Settings > Result (AC level) menu page

 Table 7-59
 TSA > Project > Test > Measurement > Settings > Result (bar chart) menu description

Menu	Description	
Enable	Press the <b>Enable</b> softkey to enable or disable the selected result tab.	
Add Result	Press the <b>Add Result</b> softkey to add a new result tab to the measurement.	
Delete Result	Press the <b>Delete Result</b> softkey to delete the selected result tab from the measurement.	
Save Data	Press the <b>Save Data</b> softkey to save the selected result data to a CSV file format in the internal storage or external USB flash storage. Refer to " <b>Save</b> " on page 94 for the Save menu page.	

Table 7-59 TSA > Project > Test > Measurement > Settings > Result (bar chart) menu description (continued)

Menu	Description		
Edit Limits	Press the Edit Limits softkey to configure the limits settings.  - Track 1st If Track 1st trace is enabled, the channel 1 limits settings will be copied to the other channels and the limits settings for the other channels cannot be edited. Any changes made to the channel 1 limits settings will be reproduced in the other channels limits settings. Disable the Track 1st trace to set the individual channels limits.  - Lower Limit Enable or disable the lower limit.  - Upper Limit Enable or disable the upper limit.  - Lower Limit Set the lower limit value.  - Upper Limit Set the upper limit value.		
Graph Properties	Press the Graph Properties softkey to set the graph properties.  - Title Edit the bar chart title.  - X-axis  - Auto Scale Enable or disable the X-axis autoscale.  - Unit Select the X-axis unit type.  - Left Set the X-axis left edge value. This setting is only available when Auto Scale is disabled.  - Right Set the X-axis right edge value. This setting is only available when Auto Scale is disabled.		

### Graph

An example of the graph result menu page is displayed as shown in Figure 7-62.

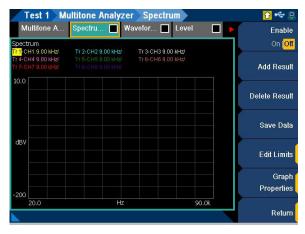


Figure 7-62 Multitone Analyzer > Settings > Result (Spectrum) menu page

 Table 7-60
 TSA > Project > Test > Measurement > Settings > Result (graph) menu description

Menu	Description				
Enable	Press the <b>Enable</b> softkey to enable or disable the selected result tab.				
Add Result	Press the <b>Add Result</b> softkey to add a new result tab to the measurement.				
Delete Result	Press the <b>Delete Result</b> softkey to delete the selected result tab from the measurement.				
Save Data	Press the <b>Save Data</b> softkey to save the selected result data to a CSV file format in the internal storage or external USB flash storage. Refer to " <b>Save</b> " on page 94 for the Save menu page.				
Edit Limits	Press the Edit Limits softkey to configure the limits settings.  - Trace Select the trace channel number or the trace type (POLQA measurement)  - Limit Type Select Upper or Lower as the limit type.  - Track 1st If Track 1st trace is enabled, the channel 1 limits settings will be copied to the other channels and the limits settings for the other channels cannot be edited. Any changes made to the channel 1 limits settings will be reproduced in the other channels limits settings. Disable the Track 1st trace to set the individual channels limits.  - Limit Enable or disable the limit.  - Points  - Point No Set the point number.  - X Set the X-axis value for the selected point number.  - Y Set the Y-axis value for the selected point number.  - Add Point Add a limit point.  - Remove Point Remove the selected limit point.  - Clear Points Clear all the limit points.  - Load limit points from a file. Refer to "Recall" on page 95 for the Recall menu page.  - Save Points Save the selected limit points to a file. Refer to "Save" on page 94 for the Save menu page.				

Table 7-60 TSA > Project > Test > Measurement > Settings > Result (graph) menu description (continued)

#### Menu Description Press the Graph Properties softkey to set the graph properties. Edit the graph title. - X-axis Auto Scale Enable or disable the X-axis autoscale. Spacing Select Linear or Log for the spacing. Select the X-axis unit type. Left Set the X-axis left edge value. This setting is only available when Auto Scale is disabled. Set the X-axis right edge value. This setting is only available when **Auto Scale** is disabled. Set the X-axis center value. This setting is only available when Auto Scale is disabled. Set the X-axis span value. This setting is only available when Auto Scale is disabled. **Graph Properties** Y-axis Auto Scale Enable or disable the Y-axis autoscale. Spacing Select Linear or Log for the spacing. Select the Y-axis unit type. Set the Y-axis top value. This setting is only available when Auto Scale is disabled. Set the Y-axis bottom value. This setting is only available when Auto Scale is disabled. Traces Trace Select the analyzer trace channel. Enable or disable the trace. Color Set the trace color. Press the **Graph Properties** softkey to set the graph properties. Set the bar chart title. Auto Scale Enable or disable autoscale. **Graph Properties** (This is only applicable for - Left Set the X-axis left edge value. This setting is only available when **Auto Scale** is disabled. POLQA measurement MOS-LQO and Delay results) Set the X-axis right edge value. This setting is only available when Auto Scale is disabled. Set the Y-axis top edge value. This setting is only available when Auto Scale is disabled. Set the Y-axis bottom edge value. This setting is only available when Auto Scale is disabled.

## Report

The U8903B allows you to generate a report of the test sequence results. The TSA > Report menu page is displayed as shown in **Figure 7-63**.

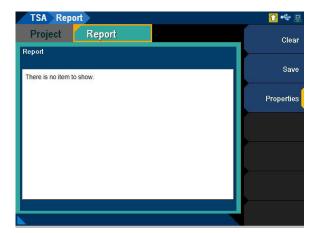


Figure 7-63 TSA > Report menu page

Table 7-61 TSA > Report menu description

Menu	Description		
Clear	Press the <b>Clear</b> softkey to clear all the report data.		
Save	Press the <b>Save</b> softkey to save the report to a DOCX file format. Refer to " <b>Save</b> " on page 94 for more information on the Save menu page.		
Properties	Press the <b>Properties</b> softkey to configure the auto save settings. Refer to " <b>Properties</b> " on page 406 for more information.		

### Properties

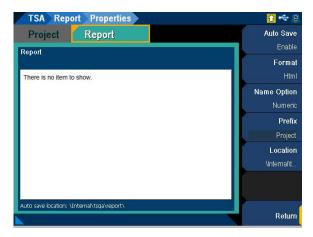


Figure 7-64 TSA > Report > Properties menu page

Table 7-62 TSA > Report > Properties menu description

Menu	Description		
Auto Save	Press the <b>Auto Save</b> softkey to enable or disable saving the report automatically at the end of a test sequence.		
Format	Press the <b>Format</b> softkey to select the report file format to be saved.  - Docx - Html		
Name Option	Press the Name Option softkey to select the naming convention of the file name for the automatically saved report.  - Timestamp Save the report in a time stamp suffix file name.  - Numeric Save the report in a numerical suffix file name that increments with each save.  - Prompt Prompts for the file name at the end of a test sequence.		
Prefix Press the Prefix softkey to set the prefix for the file name.			
Location	Press the <b>Location</b> softkey to select the folder for the automatically saved report. Refer to " <b>Location</b> " on page 407 for more information.		

#### Location

Select the '...' item at the list and press to move up a level from the current folder or to another directory. Use the arrow keys to navigate through the files or select the desired folder or file.

Press the **Select** softkey to select the current folder as the location to be saved to. Press the **New Folder** softkey to create a new folder at the current directory or folder.

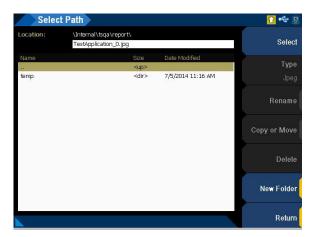


Figure 7-65 Select Path menu page

7

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

### Keysight U8903B Performance Audio Analyzer User's Guide

## 8 HP8903B

```
HP8903B 410

Measurement 412

Generator 414

Sweep 415

Special function code list 416

SPCL 418
```

This chapter describes the various configurations for the HP8903B mode..

### NOTE

The HP8903B mode is only available when GPIB is initialized successfully. Entering or exiting the HP8903B mode will cause the system to reset. Some of the SCPI commands for the active channel of the analog analyzer and analog generator that work in the standard view mode will not work in the HP8903B mode.



### HP8903B

Press and select **HP8903B** to access the HP8903B menu page. The U8903B allows you to emulate the HP8903B audio analyzer behavior in the HP8903B mode.

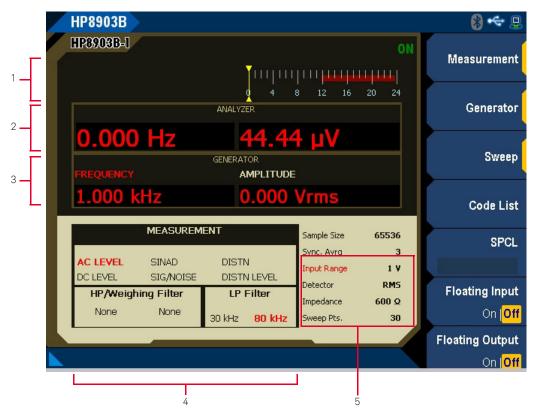


Figure 8-1 HP8903B menu page

Table 8-1 U8903B LCD display description

	Item	Description
1	SINAD meter	Display the SINAD measurement mode readings.
2	Analyzer panel	Display the measurement results. The left panel reading shows the frequency result while the right panel reading shows the result of the selected measurement modes. Refer to "Measurement" on page 412 for the available measurement modes.
3	Generator panel	Display the frequency and amplitude values of the sine waveform. The highlighted generator parameter label in red indicates the current increment parameter. You can use the up or down arrow keys to increment/decrement the current parameter value according to the parameter step value. Refer to "Generator" on page 414 for more information.
4	Measurement setting panel	Display the current measurement settings in red.
5	HP8903B settings panel	Display the current setting for input range, detector, impedance, and sweep points. If the auto range is selected, the input range parameter will be highlighted in red.

#### Measurement

Select **Measurement** in the HP8903B menu page to configure the HP8903B measurement settings.

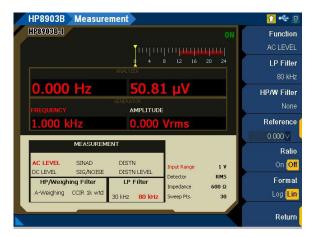


Figure 8-2 HP8903B > Measurement menu page

Table 8-2 HP8903B > Measurement menu description

Menu	Description		
	Press the <b>Function</b> softkey to select the HP8903B measurement mode.		
	- AC LEVEL		
	- SINAD		
Function	- DISTN		
	- DC LEVEL		
	- SIG / NOISE		
	- DISTN LEVEL		
	Press the LP Filter softkey to select the HP8903B measurement low-pass filter value. The default low-pass filter can be set at "HP8903B Config" on page 89.		
LP Filter	- None		
	- 30 kHz		
	- 80 kHz		
HP/W Filter	Press the <b>HP/W Filter</b> softkey to select the HP8903B high-pass or weighting filter value. The filter selection depent the left and right filters set at " <b>HP8903B Config</b> " on page 89.		
Reference	Press the <b>Reference</b> softkey to set the reference value to be compared with the measured value in ratio mode. Changing the reference value will enable the measurement ratio mode.		
Ratio	Press the <b>Ratio</b> softkey to enable or disable the HP8903B measurement ratio mode.		
	Press the <b>Format</b> softkey to select the HP8903B measurement format type.		
Format	- Log		
	- Lin		

**Table 8-3** shows the measurement units that are applicable for the individual HP8903B measurement modes.

Table 8-3 HP8903B unit charts

Measurement	Ratio On		On Ratio Off	
	LOG	LIN	LOG	LIN
AC LEVEL	dB	%	dBm into 600 $\Omega$	V
DC LEVEL	dB	%	dBm into 600 $\Omega$	V
SINAD	dB	%	dB	%
SIG/NOISE	dB	%	dB	%
DSTN	dB	%	dB	%
DSTN LEVEL	dB	%	dBm into 600 $\Omega$	V

#### Generator

Select **Generator** in the HP8903B menu page to configure the HP8903B generator settings.

NOTE

The generator in the HP8903B generates sine waveform.



Figure 8-3 HP8903B > Generator menu page

Table 8-4 HP8903B > Generator menu description

Menu	Description		
Frequency	Press the <b>Frequency</b> softkey to set the HP8903B generator frequency value. Changing the frequency value will also set the step parameter to frequency.		
Amplitude	Press the <b>Amplitude</b> softkey to set the HP8903B generator amplitude value. Changing the amplitude value will also set the step parameter to amplitude.		
Step Param	Press the <b>Step Param</b> softkey to select the HP8903B generator step parameter type Frequency - Amplitude		
Freq. Step	Press the <b>Freq. Step</b> softkey to set the HP8903B generator frequency step value. This setting is only available when the step parameter is set to frequency.		
Amp. Step	Press the <b>Amp. Step</b> softkey to set the HP8903B generator amplitude step value. This setting is only available when the step parameter is set to amplitude.		
x 10	Press the x 10 softkey to multiply the current parameter step value by 10.		
÷ 10	Press the ÷ 10 softkey to divide the current parameter step value by 10.		

#### Sweep

In HP8903B mode, the source frequency is logarithmically swept. The number of frequency points in a sweep is determined by the sweep width (ratio of the stop and start frequencies) and the selected sweep resolution. The maximum number of points allowable in a sweep is 255. The frequency points in a sweep can be computed by using the following formulas:

Frequency = Start frequency 
$$\times$$
 10

Where n is the frequency point number (0 is the start frequency) and k is the number of points per decade. Refer to the HP8903B special function codes, 17.0 to 17.9 as listed in **Table 8-6**. The frequency point formula for reverse sweep is as follows:

Frequency = Start frequency 
$$\times$$
 10

Select **Sweep** in the HP8903B menu page to configure the HP8903B sweep settings.



Figure 8-4 HP8903B > Sweep menu page

Table 8-5 HP8903B > Sweep menu description

Menu	Description	
Freq. Start	Press the <b>Freq. Start</b> softkey to set the HP8903B sweep frequency start value.	
Freq. Stop	Press the <b>Freq. Stop</b> softkey to set the HP8903B sweep frequency stop value.	
Sweep Status	Press the <b>Sweep Status</b> softkey to start or abort sweeping in the HP8903B mode.	

### Special function code list

Select **Code List** in the HP8903B menu page to display the list of supported HP8903B special function codes. The special function codes will be displayed in the lower main display as shown in **Figure 8-5**. Press the up or down arrow keys to scroll up or down the selected special function code list respectively. The HP8903B special function code are as listed in **Table 8-6**.



Figure 8-5 HP8903B > Code List menu page (Input Level Range (except DC Level))

Table 8-6 HP8903B special function code list description

Special function	Code	Description
	1.0	Auto range
	1.3	140 V range
	1.4 ~ 1.5	100 V range
Input Lovel Dange (eveent DC Lovel)	1.6 ~ 1.8	32 V range
Input Level Range (except DC Level)	1.9 ~ 1.10	10 V range
	1.11 ~ 1.13	3.2 V range
	1.14 ~ 1.15	1 V range
	1.16 ~ 1.19	0.32 V range
	2.0	Auto Range
Input Lovel Dange (DC Lovel only)	2.2	100 V range
Input Level Range (DC Level only)	2.3	32 V range
	2,4	10 V range
Post Notch Detector Response (except in SINAD)	5.0 ~ 5.1	RMS Detector
Display Source Settings	10.0	Activate the generator menu.
	11.0	Restore last RATIO reference and enter RATIO
Re-enter Ratio Mode		mode if allowed
	11.1	Display RATIO reference (measurement menu will be activated)

 Table 8-6
 HP8903B special function code list description (continued)

Special function	Code	Description
	12.0	No delay
	12.1	200 ms delay
	12.2	400 ms delay
	12.3	600 ms delay
Circul to Naise Massaurement Delay.	12.4	800 ms delay
Signal-to-Noise Measurement Delay	12.5	1.0 s delay
	12.6	1.2 s delay
	12.7	1.4 s delay
	12.8	1.6 s delay
	12.9	1.8 s delay
CINAR and Cinard to Main Pinelou Resolution	16.0	0.01 dB above 25 dB 0.5 dB below 25 dB
SINAD and Signal-to-Noise Display Resolution	16.1	0.01 dB all ranges
	17.0	10 points/decade
	17.1	1 point/decade
	17.2	2 points/decade
	17.3	5 points/decade
	17.4	10 points/decade
Sweep Resolution (maximum 255 points/sweep)	17.5	20 points/decade
	17.6	50 points/decade
	17.7	100 points/decade
	17.8	200 points/decade
	17.9	500 points/decade
Display Level in Watts	19.0	Display level as watts into 8 $\Omega$
Display Level III walls	19.NNN	Display level as watts into NNN $\Omega$
Read Display to SCPI	20.0	Read right display
nead Display to corr	20.1	Read left display (Frequency)
GPIB Address (SCPI Only)	21.1	Displays GPIB address in decimal
GPIB Service Request Condition (SCPI Only)	22.N	Enable a Condition to cause a service request. N is the sum of any combination of the weighted conditions below:  1 - Data Ready 2 - GPIB error 4 - Instrument Error The instrument powers up in the 22.2 state.
	47.0	600 Ω
Source Output Impedance (Instrument powers up at 600 $\Omega$ )	47.1	50 Ω

SPCL

Press the **SPCL** softkey to set the HP8903B special function code except those indicated as SCPI only, and execute the special function. The HP8903B special function code are as listed in **Table 8-6**.

### Floating input

Table 8-7 Floating input settings

Floating input	Analog analyzer settings
Off (default)	Analyzer connector is unbalanced and the analyzer impedance is 100 k $\Omega$ (default).
On	Analyzer connector is balanced and the analyzer impedance is 200 k $\Omega$ .

Table 8-8 Floating output settings

Floating output	Analog analyzer settings
Off (default)	Generator connector is unbalanced with unbalanced impedance of 600 $\Omega$ (default) or 50 $\Omega$ .
On	Generator connector is balanced with balanced impedance of 600 $\Omega$ or 40 $\Omega.$

 Table 8-9
 Floating output settings and special functions to change the generator impedance

Floating output	Special function	Generator impedance	
Off	47.0SP	Change the generator impedance to 600 $\Omega$ .	
Off	47.1SP	Change the generator impedance to 50 $\Omega$ .	
On	47.0SP	Change the generator impedance to 600 $\Omega$ .	
On	47.1SP	Change the generator impedance to 40 $\Omega$ .	

Keysight U8903B Performance Audio Analyzer User's Guide

# 9 Characteristics and Specifications

For the characteristics and specifications of the U8903B Performance Audio Analyzer, refer to the data sheet at http://literature.cdn.keysight.com/litweb/pdf/5991-4551EN.pdf.



9

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

## Keysight U8903B Performance Audio Analyzer User's Guide

# Appendixes

Appendix 1: FUNCTION panel 423 Appendix 2: Graph Panel Menu Tree 424 Appendix 3: System Panel Menu Tree 426 Appendix 4: Analog Generator Menu Tree 430 Appendix 5: Digital Generator Menu Tree 434 Appendix 6: Bluetooth Generator Menu Tree 445 Appendix 7: Analog Analyzer Menu Tree 452 Appendix 8: Digital Analyzer Menu Tree 464
Appendix 9: Bluetooth Analyzer Menu Tree 476
Appendix 10: Graph Analysis Menu Tree 488
Appendix 11: Sweep Function Menu Tree 492
Appendix 12: Save Menu Tree 495
Appendix 13: Recall Menu Tree 496
Appendix 14: Test Sequence Menu Tree 497
Measurement settings 505  Measurement results 550
Appendix 15: HP8903B Menu Tree 554
Appendix 16: Units of the Measurement Function Returned Values 556
Analog analyzer 556
Digital analyzer 557
Bluetooth analyzer 558
Units for digital audio measurements 560
Appendix 17: Arbitrary File Format 561
Appendix 18: User-defined Filter File Format 563
Appendix 19: DSI Input and Output Interface 566
Appendix 20: Digital System Clock Distribution Block Diagram 567
Appendix 21: Typical DSI Test Configurations 568
Configuration 1 568
Configuration 2 569
Configuration 3 570
Configuration 4 571
Configuration 5 572



```
Appendix 22: U8903B Configuration Examples
   Example 1: Generating a sine waveform with the digital generator and measuring its
   voltage with the digital analyzer 573
   Example 2: Establishing a connection to a Bluetooth device and generating a sine
   waveform with the Bluetooth generator. 575
   Example 3: Generating a multitone waveform with the analog generator and viewing
   the multitone spectrum in the graph 577
   Example 4: Running the Test Sequence App for the multitone analyzer measurement
     579
   Example 5: Configuring the system clock reference settings
   Example 6: Configuring the digital generator DSI output settings 582
Appendix 23: Relationship between Digital Waveform Parameters and Channels
                                                                            583
Appendix 24: Word Length, Sampling Rate, and Multiplier for DSI 585
Appendix 25: Word Length, Sampling Rate, and Multiplier for Master Clock In
Appendix 26: U8903B Default Settings
                                      597
   Analog generator
                     597
   Analog analyzer
                    598
   Sweep 601
   HP8903B 602
   System 602
Appendix 27: Procedure to Rename, Copy, Move, and Delete Files
                                                               603
Appendix 28: POLQA Recording Duration Analysis
                                                604
Appendix 29: Audio Measurement Ranging
   Manual ranging 605
   Auto ranging
                  605
   Using manual ranging for continuous sweep and frequency response measurements
     606
```

# Appendix 1: FUNCTION panel

Table A-1 FUNCTION panel description

Кеу	Description
Interface	Switch between the analog, digital, or <i>Bluetooth</i> interface.
	Switch between the generator or analyzer mode.
Generator Analyzer	Refer to "Appendix 4: Analog Generator Menu Tree" on page 430 and "Appendix 7: Analog Analyzer Menu Tree" on page 452 for the analog generator and analog analyzer menu trees.
	Access the graph analysis mode.
Graph	Refer to " <b>Appendix 10: Graph Analysis Menu Tree</b> " on page 488 for the graph analysis menu tree.
	Access the sweep function mode.
Sweep	Refer to "Appendix 11: Sweep Function Menu Tree" on page 492 for the sweep function menu tree.
Full Screen	Maximize the graph view to the full display size.
rutt Scieen	This function is only applicable in the graph analysis mode.
Diamlass	Switch among the 2-panel view, 4-panel view, or 10-panel view in the analyzer and generator mode.
Display	Switch between single panel view and 2-panel view in the graph analysis mode.
Shortcut 1	Customizable shortcut key. Refer to "Appendix 3: System Panel Menu Tree" on page 426 for more information.
Shortcut 2	Customizable shortcut key. Refer to "Appendix 3: System Panel Menu Tree" on page 426 for more information.

# Appendix 2: Graph Panel Menu Tree

**Table A-2** GRAPH panel menu tree description

Кеу	Level 1	Level 2	Description		
Peak Search	Max Peak		Search and move the active marker to the highest peak which is higher than the peak threshold value.		
	Next Peak		Search and move the active marker to the next peak which is higher than the peak threshold value.		
	Prev Peak		Search and move the active marker to the previous peak which is higher than the peak threshold value.		
	Next Min		Search and move the active marker to the previous peak which is lower than the minimum threshold value.		
	Prev Min		Search and move the active marker to the next peak which is lower than the minimum threshold value. $ \\$		
	Threshold	Line Visible	Enable or disable the threshold line in the graph.  - On - Off		
		Peak Thres	Set the peak threshold value.		
		Min Thres	Set the minimum threshold value.		
	Active Marker	M1 to M8	Select the active marker number.		
	State - On - Off		Enable or disable the active marker.		
	Trace	1 to 8	Select the trace number for the active marker.		
	- OFF Ref Mkr - M1 to M8		Select the reference marker number.		
Marker	- Single - Pair  Movement - Bin - Peak - Harmonic		Select the marker movement type.		
	Function	<ul><li>None</li><li>Slope</li><li>PSD</li></ul>	Select the marker function type.		
		-> Start	Set the left value of the graph to the current marker location.		
		-> Stop	Set the right value of the graph to the current marker location.		
		-> Center	Set the center value of the graph to the current marker location.		
	Marker ->	-> Delta	Set the left and right values of the graph to the current marker and the reference marker location.		
		Move to 3 dB	Place the marker on the nearest -3 dB value data point.		
		Move to 6 dB	Place the marker on the nearest -6 dB value data point.		

**Table A-2** GRAPH panel menu tree description (continued)

Кеу	Level 1	Level 2	Description
		Trace	Set the trace number to place the marker.
Marker	Harmonics	Enabled	Show or hide the markers.  - On - Off
	Rdg at Mkr	- On - Off	Enable or disable the readings at the marker.
Print (Shift + Marker)			Print the current display to a file.
	AutoScale		Perform autoscaling on the X-axis and Y-axis.
Scale	AutoScale X		Perform autoscaling on the X-axis by searching for the most optimum scale (left and right values) for the X-axis based on the data being displayed in the graph.
	AutoScale Y		Perform autoscaling on the Y-axis by searching for the most optimum scale (top and bottom values) for the Y-axis based on the data being displayed in the graph.
Zoom			Magnify a section of the graph.

## Appendix 3: System Panel Menu Tree

**Table A-3** SYSTEM panel menu tree description

Key	Level 1	Level 2	Level 3	Description
	(Current mode)			Reset the current mode to its default settings.
Preset	Save User State			Save the current user state.
	Mode			Reset all modes to the default settings without deleting the user-defined files.
	To Factory Settings			Reset the U8903B to the factory default settings, delete all the files saved in the internal flash memory (for example, state file, arbitrary waveform, test sequence project files, and so on), and reset the GUI state to the Standard View mode. If the HP8903B mode is turned on, the GUI state will remain at the HP8903B mode.
	User State			Reset the U8903B to the previously saved user state.
	Save Channel (x) (x) = current channel number			Save the current channel state to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
HATTA.	Save (x) (x) = current mode			Save the current mode state to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
Utility (if the mode is in the Analyzer or Generator mode)	Recall			Recall a saved U8903B state from a file.  Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
	Сору То			Copy the current channel state to other channel(s).
	Copy From			Select a channel number to copy the state to the current channel.
	File Explorer			Rename, delete, copy, or move files.
	Save Graph			Save the current graph state to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
<b>Utility</b> (if the mode is in Graph Analysis mode)	Save Channels	Channel (x) (x) = current channel		Save the current channel graph state to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
	Settings	All Channels Settings		Save all channels graph state to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.

 Table A-3
 SYSTEM panel menu tree description (continued)

Key	Level 1	Level 2	Level 3	Description
	Save Traces	Trace (x) (x) = current trace number		Save the active trace to a CSV file format.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
		All Traces		Save all traces state to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
		Axis Settings		Save the axis settings state to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
Utility (if the mode is in		Traces + Axis		Save all traces and axis settings states.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
Graph Analysis mode)		Save Trace (x) Data (x) = current channel		Save the active trace data to a CSV file format.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
	Recall			Load a trace from a CSV file into the active trace. Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
	Сору То			Copy the current channel graph state to other channel(s).
	Copy Graph From			Select a channel number to copy the graph state to the current channel.
	File Explorer			Rename, delete, copy, or move files.
Help (Shift + Utility)				Display the help mode. Press <b>Shift</b> + <b>Utility</b> to close the help mode.
	Error Info	Load File		Select the log file to be loaded in the error log viewing panel.
		Load File		Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
	1/0		Reset	Reset the LAN settings.
			Hostname	Set the LAN hostname.
System			Config Mode	Select the LAN configuration mode.  - Auto - Manual
		LAN Settings	IP Address	Set the LAN IP address.
			Subnet mask	Set the LAN subnet mask address.
			Gateway	Set the LAN gateway address.
			DNS 1	Set the LAN DNS 1 address.
			DNS 2	Set the LAN DNS 2 address.
,		GPIB	0 to 30	Set the desired GPIB address.

#### A Appendixes

 Table A-3
 SYSTEM panel menu tree description (continued)

Кеу	Level 1	Level 2	Level 3	Description
	1/0	FTP	<ul><li>Enabled</li><li>Disabled</li></ul>	Enable or disable the FTP control.
	Firmware	Update		Load the update files.  Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
		EULA		Display the Keysight EULA page.
		Self-Test	Customize Test	Select all or deselect the desired tests. LAN Test Card Self Test
			Run Test	Run the selected tests.
			Clear Result	Clear the previous self-test results.
		Diagnostic	Front Panel	Perform the front panel diagnostics.
		Diagnostic	Display	Perform the display diagnostics.
	Service	Secure Erase		Securely erase all the files saved in the internal flash memory (for example, state file, arbitrary waveform, test sequence project files, and so on), It does not affect the U8903B settings and license information.
System		Options	Add Option	Add a new U8903B option. Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
System			Remove Option	Remove the selected U8903B option.
		Date		Edit the date in dd/mm/yyyy format.
		Time		Edit the current time in 24-hour format.
		Brightness	0 to 6	Adjust the LCD display brightness value.
		Key Sound	- On - Off	Enable or disable the front panel key sound.
		Power Up State	- Last - Default	Select the power up state.
	Settings	Shortcut 1	<ul><li>Error List</li><li>Auto-Scale</li><li>File Explorer</li><li>Audio Monitor</li><li>Audio Volume</li></ul>	Select a specific function to map the shortcut 1 key.
		Shortcut 2	<ul><li>Error List</li><li>Auto-Scale</li><li>File Explorer</li><li>Audio Monitor</li><li>Audio Volume</li></ul>	Select a specific function to map the shortcut 2 key.

 Table A-3
 SYSTEM panel menu tree description (continued)

Key	Level 1	Level 2	Level 3	Description
System	HP8903B Config	Active Channel	- 1 - 2	Select the HP8903B active channel.
		Left Filter	<ul> <li>None</li> <li>A-Weighing</li> <li>CCIR 1k wtd</li> <li>CCIR 2k wtd</li> <li>C-Message</li> <li>CCITT</li> <li>400 Hz</li> </ul>	Select the left filter type.
		Right Filter	<ul> <li>None</li> <li>A-Weighing</li> <li>CCIR 1k wtd</li> <li>CCIR 2k wtd</li> <li>C-Message</li> <li>CCITT</li> <li>400 Hz</li> </ul>	Select the right filter value.
		Default LPF	<ul><li>None</li><li>30 kHz</li><li>80 kHz</li></ul>	Select the default filter for the HP8903B mode.
	Fan & Temperature			Display the temperatures of the available cards and the speed of the three 80 mm fans in the U8903B.
	Aux Output	Audio Monitor	- On - Off	Enable or disable the aux audio monitor.
		Audio Output	<ul><li>Speaker</li><li>Phone</li></ul>	Select the aux audio output type.
		Audio Mode	- Stereo - Mono	This is only available when audio output is Phone. Select the aux audio mode type.
		Volume	0 to 100	Select the aux audio volume.
		DC Output		Set the aux DC output value.
	Board Info			Display the U8903B available cards information.
	Legacy Sweep	- On - Off		Enable or disable the legacy sweep.
Macro (Shift + System)				Reserved for future expansion.
Local				Switch from remote control mode to local mode. The front panel keys are locked in the remote mode.
Lock/Unlock				Lock or unlock the front panel keys in the local mode. A dialog box will pop-up for confirmation.

## Appendix 4: Analog Generator Menu Tree

Table A-4 Analog generator menu tree description

Level 1	Level 2	Level 3	Description	
Waveform	- Sine - V. Phase - Dual - SMPTE 1:1 - SMPTE 4:1 - SMPTE 10:1 - IEC 60118 - IEC 60268 - Gaus. Noise - Rect. Noise - Pink Noise - Pink Noise - Square - DC - Sine Burst - Arbitrary - Multitone - DTMF		Select the waveform type.	
Waveform Config	Amplitude		Set the signal amplitude value.	
(Sine)	Frequency		Set the signal frequency value.	
	DC Offset		Set the signal DC offset value.	
	Amplitude		Set the signal amplitude value.	
Waveform Config	Frequency		Set the signal frequency value.	
(V. Phase)	Phase -> 1		This is only available when the analog generator is in channel 2. Set the phase of the channel 2 sine waveform with reference to channel 1.	
Waveform Config (Dual)	Amplitude		Set the signal amplitude value.	
	Frequency		Set the signal frequency value.	
	Frequency 2		Set the second sine wave signal frequency value. This setting is only applicable for the dual waveform.	
	DC Offset		Set the signal DC offset value.	
	Ratio		Set the ratio of the amplitude of the second sine wave over the first sine wave.	
	Summation	- RSS - Linear	Summation refers to the method to sum up two levels.	

 Table A-4
 Analog generator menu tree description (continued)

Level 1	Level 2	Level 3	Description	
Waveform Config (SMPTE 1:1/4:1/10:1)	Amplitude		Set the signal amplitude value.	
	Lower Freq		Set the lower frequency value.	
	Upper Freq		Set the higher frequency value.	
	DC Offset		Set the signal DC offset value.	
	Summation	- RSS - Linear	Summation refers to the method to sum up two levels.	
	Amplitude		Set the signal amplitude value.	
	Upper Freq		Set the higher frequency value.	
Waveform Config	Diff Freq		Set the difference frequency of the waveform.	
(IEC 60118)	DC Offset		Set the signal DC offset value.	
	Summation	- RSS - Linear	Summation refers to the method to sum up two levels.	
	Amplitude		Set the signal amplitude value.	
	Center Freq		Set the center frequency of the waveform.	
Waveform Config	Diff Freq		Set the difference frequency of the waveform.	
(IEC 60268)	DC Offset		Set the signal DC offset value.	
	Summation	- RSS - Linear	Summation refers to the method to sum up two levels.	
Waveform Config	Amplitude		Set the signal amplitude value.	
(Gaus. Noise)	DC Offset		Set the signal DC offset value.	
Waveform Config	Amplitude		Set the signal amplitude value.	
(Rect. Noise)	DC Offset		Set the signal DC offset value.	
Waveform Config	Amplitude		Set the signal amplitude value.	
(Pink Noise)	DC Offset		Set the signal DC offset value.	
Waveform Config	Amplitude		Set the signal amplitude value.	
(Square)	Frequency		Set the signal frequency value.	
Waveform Config (DC)	Voltage		Set the signal voltage value.	
Waveform Config (Sine Burst)	Amplitude		Set the signal amplitude value.	
	Frequency		Set the signal frequency value.	
	DC Offset		Set the signal DC offset value.	
	Burst On		Set the number of cycles at which the amplitude is at the highest level.	
	Period		Set the number of cycles from the beginning of one burst to the beginning of the next burst.	
	Low Level		Set the amplitude ratio of Burst On over Burst Off.	

#### A Appendixes

 Table A-4
 Analog generator menu tree description (continued)

Level 1	Level 2	Level 3 Description	
Waveform Config (Abitrary)	Amplitude		Set the signal amplitude value.
	DC Offset		Set the signal DC offset value.
	Load File		Load a waveform from a file.  Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
	Info		Display the loaded waveform information.
	Amplitude		Set the signal amplitude value.
	DC Offset		Set the signal DC offset value.
	Start Freq		Set the lowest frequency in the multitone waveform which is usually the frequency for the first tone.
	Stop Freq		Set the highest frequency in the multitone waveform which is usually the frequency for the last tone.
	Freq Spacing	<ul><li>Linear</li><li>Log</li><li>Custom</li></ul>	Select frequency spacing between the tones.  Custom is selected when the custom multitone waveform is set.
	Tones		Set the number of signal frequency components.
Waveform Config (Multitone)	Length	- 1024 - 2048 - 4096 - 8192 - 16384 - 32768 - 65536	Select the waveform length that determines the number of samples used to create one iteration of the multitone waveform.
	Custom	Apply	Apply the current setting on the selected tone for the custom multitone waveform.
		Optimize	Optimize the crest factor for the custom multitone waveform.
		Frequency	Set the frequency value for the custom multitone waveform.
		Amplitude	Set the amplitude value for the custom multitone waveform.
		Phase	Set the phase value for the custom multitone waveform.
		Add Above	Add the tone above the selected tone for the custom multitone waveform.
		Add Below	Add the tone below the selected tone for the custom multitone waveform.
		Remove	Remove the selected tone for the custom multitone waveform.
		Clear	Clear all the tones in the custom multitone waveform list.

 Table A-4
 Analog generator menu tree description (continued)

Level 1	Level 2	Level 3	Description
		Mode	Select the mode of operation for the dial mode. Single Sequence
Waveform Config (DTMF)	Dial	A B C D	Single dial mode  - Press and hold the A, B, C, or D softkey to dial the A, B, C, or D tone respectively.  Sequence dial mode  - Press the A, B, C, or D softkey to add the A tone to the DTMF sequence.
		Pause	Add a pause to the DTMF sequence in the form of a comma.
	Amplitude		Set the amplitude level of the DTMF signal.
	Ratio		Set the level difference between the high-frequency tone and low-frequency tone.
	Tone Duration		Set the DTMF signal duration.
	Tone Delay		Set the delay between two DTMF tones.
Waveform Config	Pause Time		Set the interval time for the DTMF sequence.
(DTMF)	Repeat		Enable or disable repeating the DTMF sequence.
	Summation	- RSS - Linear	Summation refers to the method to sum up two levels.
	Connector	- Bal - UnBal - Com - IEC60268	Select the output connector type.
Output Config	Impedance	For Bal, Com, and IEC60268 $-600\Omega$ $-100\Omega$ $-40\Omega$ For UnBal $-600\Omega$ $-50\Omega$ $-20\Omega$	Select the output impedance value.
	IEC60268 10 Ω	- Pin 2 - Pin 3	Select the additional 10 $\Omega$ output series resistance for pin 2 or 3 of the XLR connector in the common IECIEC 6026860268 configuration. This setting is only available when the output connector type is set to IEC 60268.
	Ground	- Float - Ground	Select the grounding type.
	Max Voltage		Set the maximum voltage value.
References	Ref Impedance		Set the reference impedance for the unit conversion of dBm measurements.

# Appendix 5: Digital Generator Menu Tree

Table A-5 Digital generator menu tree description

Level 1	Level 2	Level 3	Level 4	Description
Waveform	- Sine - V. Phase - Dual - SMPTE 1:1 - SMPTE 4:1 - SMPTE 10:1 - IEC 60118 - IEC 60268 - Gaus. Noise - Rect. Noise - Tri. Noise - Pink Noise - Square - Sine Burst - Stereo - Monotonicity - Constant - Walking Zero - Walking One - Multitone - Arbitrary			Select the waveform type.
Waveform Config	Amplitude Frequency			Set the signal amplitude value.  Set the signal frequency value.
(Sine)	DC Offset			Set the signal DC offset value.
-	Amplitude			Set the signal amplitude value.
	Frequency			Set the signal frequency value.
Waveform Config (V. Phase)	Phase -> 1			This is only available when the digital generator is in channel 2.  Set the phase of the channel 2 sine waveform with reference to channel 1.

 Table A-5
 Digital generator menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
	Amplitude			Set the signal amplitude value.
	Frequency			Set the signal frequency value.
Waveform Config	Frequency 2			Set the second sine wave signal frequency value. This setting is only applicable for the dual waveform.
(Dual)	DC Offset			Set the signal DC offset value.
	Ratio			Set the ratio of the amplitude of the second sine wave over the first sine wave.
	Summation	- RSS - Linear		Summation refers to the method to sum up two levels.
	Amplitude			Set the signal amplitude value.
	Lower Freq			Set the lower frequency value.
Waveform Config	Upper Freq			Set the higher frequency value.
(SMPTE 1:1/4:1/10:1)	DC Offset			Set the signal DC offset value.
	Summation	- RSS - Linear		Summation refers to the method to sum up two levels.
	Amplitude			Set the signal amplitude value.
	Upper Freq			Set the higher frequency value.
Waveform Config	Diff Freq			Set the difference frequency of the waveform.
(IEC 60118)	DC Offset			Set the signal DC offset value.
	Summation	- RSS - Linear		Summation refers to the method to sum up two levels.
	Amplitude			Set the signal amplitude value.
	Center Freq			Set the center frequency of the waveform.
Waveform Config	Diff Freq			Set the difference frequency of the waveform.
(IEC 60268)	DC Offset			Set the signal DC offset value.
	Summation	- RSS - Linear		Summation refers to the method to sum up two levels.
Waveform Config	Amplitude			Set the signal amplitude value.
(Gaus. Noise)	DC Offset			Set the signal DC offset value.
Waveform Config	Amplitude			Set the signal amplitude value.
(Rect. Noise)	DC Offset			Set the signal DC offset value.
Waveform Config	Amplitude			Set the signal amplitude value.
(Triangular Noise)	DC Offset			Set the signal DC offset value.
Waveform Config	Amplitude			Set the signal amplitude value.
(Pink Noise)	DC Offset			Set the signal DC offset value.

 Table A-5
 Digital generator menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
	Amplitude			Set the signal amplitude value.
Waveform Config (Square)	Frequency			Set the signal frequency value.
(- 4 /	DC Offset			Set the signal DC offset value.
	Amplitude			Set the signal amplitude value.
	Frequency			Set the signal frequency value.
Waveform Config (Sine Burst)	Burst On			Set the number of cycles at which the signal amplitude will be at the higher level.
	Period			Set the number of cycles from the beginning of one burst to the beginning of the next burst.
	Low Level			Set the amplitude ratio of Burst On over Burst Off.
	Amplitude			Set the signal amplitude value.
Waveform Config (Stereo)	Frequency			Set the signal frequency value.
,	DC Offset			Set the signal DC offset value.
Waveform Config (Monotonicity)	Samples/Step			Set the duration for each half cycle of the square wave.
Waveform Config (Constant)	Voltage			Set the signal voltage value.
Waveform Config (Walking Zero)	Samples/Step			Set the speed the single bit 0 is incremented.
Waveform Config (Walking One)	Samples/Step			Set the speed the single bit 1 is incremented.
	Amplitude			Set the signal amplitude value.
	Start Freq			Set the lowest frequency in the multitone waveform which is usually the frequency for the first tone.
	Stop Freq			Set the highest frequency in the multitone waveform which is usually the frequency for the last tone.
		– Linear		Select frequency spacing between the tones.
Waveform Config (Multitone)	Freq Spacing	<ul><li>Log</li><li>Custom</li></ul>		Custom is selected when the custom multitone waveform is set.
	Tones			Set the number of signal frequency components.
	Length	- 1024 - 2048 - 4096 - 8192 - 16384 - 32768 - 65536		Select the waveform length that determines the number of samples used to create one iteration of the multitone waveform.

 Table A-5
 Digital generator menu tree description (continued)

Level 1	Level 2	Level 3 Level 4	Description
		Apply	Apply the current setting on the selected tone for the custom multitone waveform.
		Optimize	Optimize the crest factor for the custom multitone waveform.
		Frequency	Set the frequency value for the custom multitone waveform.
		Amplitude	Set the amplitude value for the custom multitone waveform.
Waveform Config (Multitone)	Custom	Phase	Set the phase value for the custom multitone waveform.
		Add Above	Add the tone above the selected tone for the custom multitone waveform.
		Add Below	Add the tone below the selected tone for the custom multitone waveform.
		Remove	Remove the selected tone for the custom multitone waveform.
		Clear	Clear all the tones in the custom multitone waveform list.
	Amplitude		Set the signal amplitude value.
	DC Offset		Set the signal DC offset value.
Waveform Config			Load a waveform from a file.
(Abitrary)	Load File		Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
	Info		Display the loaded waveform information.
	Connector	– Bal – UnBal	Select the output connector type.
	AES Output	- On - Off	Enable or disable the AES output.
	Optical Output	- On - Off	Enable or disable the optical output.
Output Config	Sample Rate		Set the sample rate value.
Cutput Colling	Audio Format	<ul><li>Linear PCM</li><li>A-Law</li><li>μ-Law</li></ul>	Select the encoding audio format.
	Dither	<ul><li>Off</li><li>Rectangular</li><li>Triangular</li><li>Shaped</li></ul>	Select the dither type.

 Table A-5
 Digital generator menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
DSI Config	Voltage	<ul><li>1.2 Vpp</li><li>1.5 Vpp</li><li>1.8 Vpp</li><li>2.5 Vpp</li><li>3 Vpp</li><li>3.3 Vpp</li></ul>		Select the output voltage or set your desired output voltage.
	Channels	- 2 - 4 - 6 - 8 - 10 - 12 - 14 - 16		Select the number of channels.
	Format	<ul><li>Left</li><li>Right</li><li>I2S</li><li>DSP</li></ul>		Select the DSI output format.
	Resolution		8 to 24	Set the audio resolution.
	BClk Edge	<ul><li>Rising</li><li>Falling</li></ul>		Select the clock edge type.
	Fsync Polarity	<ul><li>Rising</li><li>Falling</li></ul>		Select the sync polarity.
	Fsync Width	<ul><li>One Bit Clock</li><li>One Subframe</li><li>50% Duty Cycle</li></ul>		Select the sync width.
	Data Shift Cnt			Set the data shift count value.
	Data Shift Dir	– Left – Right		Select the data shift direction.
DSI Config	Master Output	- On - Off		Enable or disable the master clock output.
	Word Length			Set the master clock word length value. The word length cannot be less than the audio resolution.  - 8 to 32
	Multiplier			Set the multiplier value.
	Sample Rate			Set the sample rate value.

 Table A-5
 Digital generator menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
	Level			Set the output voltage level.
	Resolution		8 to 24	Set the audio resolution value.
	Validity Bit	- Set - Clear		Select the vailidity bit.
	Mode	<ul><li>Consumer</li><li>Professional</li></ul>		Select the AES3/SPDIF format.
	Status Bits	- Channel - User		Select the status bits type.
AES3/SPDIF	Edit Bits (Consumer)	Select Byte		Select the byte and edit the byte.
		Audio Mode	<ul><li>Non-Linear PCM</li><li>Linear PCM</li></ul>	Select the audio mode.
		Copyright	<ul><li>Copyright</li><li>Non-copyright</li></ul>	Select the copyright type.
		Emphasis	<ul><li>No pre-emphasis</li><li>50/15 is</li><li>Reserved 1</li><li>Reserved 2</li></ul>	Select the emphasis type.
		Channel Mode	0 to 3	Set the channel mode value.

 Table A-5
 Digital generator menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
		Category	<ul> <li>General</li> <li>Laser Optical</li> <li>D/D Converter</li> <li>Magnetic</li> <li>Digital Broadcast 1</li> <li>Digital Broadcast 2</li> <li>Musical Instrument</li> <li>ADC Non Copyright</li> <li>Solid State Memory</li> <li>ADC Copyright</li> <li>Experimental</li> <li>Reserved 1</li> <li>Reserved 2</li> </ul>	Select the category code type.
	AES3/SPDIF Edit Bits (Consumer)	Source Num	0 to 15	Set the source number.
		Channel Num	0 to 15	Set the channel number.
AES3/SPDIF		Sample Freq	<ul> <li>Not indicated</li> <li>22.05 kHz</li> <li>24 kHz</li> <li>32 kHz</li> <li>44.1 kHz</li> <li>48 kHz</li> <li>88.2 kHz</li> <li>96 kHz</li> <li>176.4 kHz</li> <li>192 kHz</li> <li>768 kHz</li> </ul>	Select the sample frequency value.
		Clk Accuracy	<ul><li>Level 1</li><li>Level 2</li><li>Level 3</li><li>Reserved</li></ul>	Select the clock accuracy type.
		Max Word Len	<ul><li>24 bits</li><li>20 bits</li></ul>	Select the maximum word length.

 Table A-5
 Digital generator menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
AES3/SPDIF		Word Length	24 bits maximum word length  Not indicated  20 bits  21 bits  22 bits  23 bits  24 bits  20 bits maximum word length  Not indicated  16 bits  17 bits  18 bits  20 bits  20 bits	Select the word length.
	Edit Bits (Consumer)	Orig S.Freq	<ul> <li>Not indicated</li> <li>8 kHz</li> <li>11.025 kHz</li> <li>12 kHz</li> <li>16 kHz</li> <li>22.05 kHz</li> <li>24 kHz</li> <li>32 kHz</li> <li>44.1 kHz</li> <li>48 kHz</li> <li>88.2 kHz</li> <li>96 kHz</li> <li>176.4 kHz</li> <li>Reserved 1</li> <li>Reserved 2</li> </ul>	Select the original sample frequency value.
		CGMA-A	<ul> <li>Copying Permitted</li> <li>Condition Not Used</li> <li>One Generation Copy</li> <li>Copying Denied</li> </ul>	Select the CGMA-A type.
		Select Byte		Select the byte and edit the byte.
	Edit Bits	Audio Mode	<ul><li>Non-Linear PCM</li><li>Linear PCM</li></ul>	Select the audio mode.
	(Professional)	Emphasis	<ul><li>Not indicated</li><li>No pre-emphasis</li><li>50/15 µs</li><li>CCITT J.17</li></ul>	Select the emphasis type.

 Table A-5
 Digital generator menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
		Freq Mode	<ul><li>Locked</li><li>Unlocked</li></ul>	Select the frequency mode.
		Sample Freq	<ul> <li>Not indicated</li> <li>22.05 kHz</li> <li>24 kHz</li> <li>32 kHz</li> <li>44.1 kHz</li> <li>48 kHz</li> <li>88.2 kHz</li> <li>96 kHz</li> <li>176.4 kHz</li> <li>192 kHz</li> </ul>	Select the sample frequency value.
	AES3/SPDIF Edit Bits (Professional)	Freq Scaling	– On – Off	Enable or disable frequency scaling.
AES3/SPDIF		Chan Mode	<ul> <li>Not indicated</li> <li>2-channel</li> <li>Single channel</li> <li>Primary-Secondary</li> <li>Stereo</li> <li>Reserved 1</li> <li>Reserved 2</li> <li>Mono Double Rate</li> <li>Left Double Rate</li> <li>Right Double Rate</li> <li>Multichannel</li> </ul>	Select the channel mode.
		User Bits	<ul> <li>Not indicated</li> <li>192-bit block</li> <li>Reserved for AES18</li> <li>User defined</li> <li>Reserved for Metadata</li> <li>As in IEC60958-3</li> </ul>	Select the user bits type.
		Aux Bits	<ul><li>20-bit not defined</li><li>24-bit main audio</li><li>20-bit single</li><li>Reserved</li></ul>	Select the auxiliary bits.

 Table A-5
 Digital generator menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
		Word Length	24 bits maximum word length  Not indicated  20 bits  21 bits  22 bits  23 bits  24 bits  20 bits maximum word length  Not indicated  16 bits  17 bits  18 bits  20 bits  21 bits	Select the word length.
		Alignment	<ul><li>Not Indicated</li><li>-18.06 dBFS</li><li>-20 dBFS</li><li>Reserved</li></ul>	Select the alignment level.
	Edit Bits	Multi-Channel	<ul><li>Defined</li><li>Undefined</li></ul>	Select the multi-channel status.
AES3/SPDIF	(Professional)	Multi-Ch Mode	<ul><li>Mode 0</li><li>Mode 1</li><li>Mode 2</li><li>Mode 3</li><li>User Defined</li></ul>	This is only available when the multi-channel status is set to Defined. Select the multi-channel mode.
		Channel Num	- 1 to 16 (Defined multi-channel status) - 1 to 128 (Undefined multi-channel status)	Set the channel number.
		Ref Signal	<ul><li>Not a ref. signal</li><li>Grade 1</li><li>Grade 2</li><li>Reserved</li></ul>	Select the reference signal type.
		Channel Origin		Set the channel origin value (4 alphanumeric digit).
		Channel Dest		Set the channel destination value (4 alphanumeric digit).
		Local Addr	0 to 2 <sup>32</sup> –1	Set the local address value.
-		Time of Day	0 to 2 <sup>32</sup> –1	Set the time of day.

 Table A-5
 Digital generator menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
	Edit Bits (Professional)	Rel Flags	- 0-5 - 6-13 - 14-17 - 18-21	Select the reliability flags.
4.500 (ODD).5	Clear Bits			Clear all the bits.
AES3/SPDIF	Save File			Save the bits to a file. Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
	Load File			Load the bits from a file. Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
References	Volts/FS			Set the volts/FS reference for the analog output voltage (in Volts) of the DAC used when converted to digital full scale (1 FS).
	Ref Clock	Source	<ul><li>Internal</li><li>AES RClk</li><li>External</li></ul>	Select the reference clock source.
		Output	- On - Off	Enable or disable the synchronous clock output.
	Sync Clock	Divider	- 1 - 128	Select the synchronous clock divider value.
Olask Osafia		Source	<ul><li>Internal</li><li>AES RCIk</li><li>External</li></ul>	Select the synchronous clock source.
Clock Config		Туре	MClk Sync In     Frame Clk In     DSI Gen FS     DSI Gen Clk	Select the external reference clock type.
	Ext Clock	Word Length		Set the external reference clock word length value.
		Multiplier		Set the external reference clock multiplier value. The selection available in the external reference clock multiplier depends on the external reference clock word length
		Frequency		Set the external reference clock frequency value.

## Appendix 6: Bluetooth Generator Menu Tree

 Table A-6
 Bluetooth generator menu tree description

Level 1	Level 2	Level 3	Level 4	Description
Waveform	- Sine - V. Phase - Dual - SMPTE 1:1 - SMPTE 4:1 - SMPTE 10:1 - IEC 60118 - IEC 60268 - Gaus. Noise - Rect. Noise - Pink Noise - Square - Sine Burst - Constant - Arbitrary - Multitone			Select the waveform type.
	Amplitude			Set the signal amplitude value.
Waveform Config (Sine)	Frequency			Set the signal frequency value.
	DC Offset			Set the signal DC offset value.
	Amplitude			Set the signal amplitude value.
	Frequency			Set the signal frequency value.
Waveform Config (V. Phase)	Phase -> 1			This is only available when the analog generator is in channel 2.  Set the phase of the channel 2 sine waveform with reference to channel 1.
	Amplitude			Set the signal amplitude value.
	Frequency 1			Set the signal frequency value.
	Frequency 2			Set the second sine wave signal frequency value. This setting is only applicable for the dual waveform.
Waveform Config (Dual)	DC Offset			Set the signal DC offset value.
	Ratio			Set the ratio of the amplitude of the second sine wave over the first sine wave.
	Summation	- RSS - Linear	-	Summation refers to the method to sum up two levels.

 Table A-6
 Bluetooth generator menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
	Amplitude			Set the signal amplitude value.
	Lower Freq			Set the lower frequency value.
Waveform Config (SMPTE 1:1/4:1/	Upper Freq			Set the higher frequency value.
10:1)	DC Offset			Set the signal DC offset value.
	Summation	- RSS - Linear	-	Summation refers to the method to sum up two levels.
	Amplitude			Set the signal amplitude value.
	Upper Freq			Set the higher frequency value.
Waveform Config	Diff Freq			Set the difference frequency of the waveform.
(IEC 60118)	DC Offset			Set the signal DC offset value.
	Summation	- RSS - Linear	-	Summation refers to the method to sum up two levels.
	Amplitude			Set the signal amplitude value.
	Center Freq			Set the center frequency of the waveform.
Waveform Config	Diff Freq			Set the difference frequency of the waveform.
(IEC 60268)	DC Offset			Set the signal DC offset value.
	Summation	- RSS - Linear	-	Summation refers to the method to sum up two levels.
Waveform Config	Amplitude			Set the signal amplitude value.
(Gaus. Noise)	DC Offset			Set the signal DC offset value.
Waveform Config	Amplitude			Set the signal amplitude value.
(Rect. Noise)	DC Offset			Set the signal DC offset value.
Waveform Config	Amplitude			Set the signal amplitude value.
(Pink Noise)	DC Offset			Set the signal DC offset value.
Waveform Config	Amplitude			Set the signal amplitude value.
(Square)	Frequency			Set the signal frequency value.
	Amplitude			Set the signal amplitude value.
	Frequency			Set the signal frequency value.
	DC Offset			Set the signal DC offset value.
Waveform Config (Sine Burst)	Burst On			Set the number of cycles at which the amplitude is at the highest level.
	Period			Set the number of cycles from the beginning of one burst to the beginning of the next burst.
	Low Level			Set the amplitude ratio of Burst On over Burst Off.

 Table A-6
 Bluetooth generator menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
Waveform Config (Constant)	Voltage			Set the signal voltage value.
	Amplitude			Set the signal amplitude value.
	DC Offset			Set the signal DC offset value.
Waveform Config (Abitrary)	Load File			Load a waveform from a file. Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
	Info			Display the loaded waveform information.
	Amplitude			Set the signal amplitude value.
	DC Offset			Set the signal DC offset value.
	Start Freq			Set the lowest frequency in the multitone waveform which is usually the frequency for the first tone.
	Stop Freq			Set the highest frequency in the multitone waveform which is usually the frequency for the last tone.
Waveform Config	Freq Spacing	<ul><li>Linear</li><li>Log</li><li>Custom</li></ul>		Select frequency spacing between the tones.  Custom is selected when the custom multitone waveform is set.
(Mutitione)	Tones Count			Set the number of signal frequency components.
	Length	- 1024 - 2048 - 4096 - 8192 - 16384 - 32768 - 65536		Select the waveform length that determines the number of samples used to create one iteration of the multitone waveform.

 Table A-6
 Bluetooth generator menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
		Apply		Apply the current setting on the selected tone for the custom multitone waveform.
		Optimize		Optimize the crest factor for the custom multitone waveform.
		Frequency		Set the frequency value for the custom multitone waveform.
		Amplitude		Set the amplitude value for the custom multitone waveform.
Waveform Config (Multitone)	Custom	Phase		Set the phase value for the custom multitone waveform.
(matations)		Add Above		Add the tone above the selected tone for the custom multitone waveform.
		Add Below		Add the tone below the selected tone for the custom multitone waveform.
		Remove		Remove the selected tone for the custom multitone waveform.
		Clear		Clear all the tones in the custom multitone waveform list.
	Device Scan	Device Search		Search for the discoverable <i>Bluetooth</i> devices within range.
		Max Scan	1 to 16	Set the maximum number of <i>Bluetooth</i> devices to be identified.
Link Config		Filter Class	- All - Custom	Select the filter class type.
		Custom		Set the <i>Bluetooth</i> device class.
		Refresh Device		Refresh the friendly name of the selected <i>Bluetooth</i> device.

 Table A-6
 Bluetooth generator menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
		Pair/Unpair Device		Pair/Unpair with the selected <i>Bluetooth</i> device.
		Unpair All Device		Unpair all the paired Bluetooth devices.
Link Config D		Profile Connection	- Connect/ Disconnect All - Connect/ Disconnect A2DP - Connect/ Disconnect HFP - Connect/ Disconnect AVRCP	Connect or disconnect the <i>Bluetooth</i> profiles for the connection.
		A2DP Operation	<ul> <li>Open Media Connection</li> <li>Close Media Connection</li> <li>Start Streaming</li> <li>Pause Streaming</li> </ul>	Select the advanced audio distribution profile operation settings.
	Device Action	HFP Operation (Handsfree/ Headset)	<ul> <li>Dial</li> <li>Answer Call</li> <li>End Call</li> <li>Reject Call</li> <li>Toggle Audio</li> <li>Button Press</li> <li>Send AT Command</li> </ul>	Select the HFP (Handsfree/Headset) profile operation settings.
		HFP Operation (Audio Gateway)	<ul><li>Connect</li><li>Disconnect</li><li>Call</li><li>Hang Up</li><li>Send AT Command</li></ul>	Select the HFP (Audio Gateway) profile operation settings.
		AVRCP Operation	- Volume Up - Volume Down - Mute - Play - Stop - Pause - Rewind - Fast Forward - Forward - Backward	Select the audio/video remote control profile operation settings.

 Table A-6
 Bluetooth generator menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
		Profile	<ul> <li>A2DP SRC, HFP AG, AVRCP TRGT</li> <li>A2DP SNK, HFP HF, AVRCP CTRL</li> </ul>	Select the U8903B's <i>Bluetooth</i> card profile.
		Friendly Name		Set the friendly name of the U8903B's Bluetooth card.
		Device PIN		Set the passkey of the U8903B's Bluetooth card.
		Device Class	- Auto - Custom	Select the device class based on the configured profile.
		Custom		Set the device class.
		SSP Mode	<ul><li>Just Works</li><li>Man-In-The-Middle</li></ul>	Select the U8903B's <i>Bluetooth</i> card simple secure pairing mode.
	Common Settings	Auto Pair		Enable or disable the auto-pairing function.
		IO Capability		Select the IO capability of the U8903B's Bluetooth card.
Link Config		Discoverable		Enable or disable the discoverability function of the U8903B's <i>Bluetooth</i> card.
		Connectable		Enable or disable the connectability function of the U8903B's <i>Bluetooth</i> card.
		Loopback		Enable or disable the integrated interchip sound audio loopback function.
		Link Status		Enable or disable the link status of the U8903B's Bluetooth card.
		RF Port	- RF1 - RF2	Select the U8903B's <i>Bluetooth</i> card RF port connector.
		Codec	- SBC - apt-X	Select the codec for the A2DP profile.
	A2DP Settings	Sampling Rate	<ul><li>16 kHz</li><li>32 kHz</li><li>44.1 kHz</li><li>48 kHz</li></ul>	Select the audio sampling rate for the A2DP profile.

 Table A-6
 Bluetooth generator menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
		Wideband		Enable or disable the wideband speech mode in the HFP profile connection.
		Latency	4 to 65534	Set the HFP's codec channel latency in miliseconds.
		Retransmit	<ul><li>No Transmission</li><li>Power Saving</li><li>Link Quality</li><li>No Preference</li></ul>	Select the HFP's codec retransmission effort.
Link Config	HFP Settings	Packet Types	- HV1 - HV2 - HV3 - EV3 - EV4 - EV5 - 2EV3 - 3EV3 - 3EV5	Select the packet type used in the HFP's codec.
	AVDOD L Vi	Clear Log		Clear the AVRCP operation log history.
	AVRCP Log View	Refresh Log		Refresh the AVRCP operation log history.
References	Ref Impedance			Set the reference impedance for the unit conversion of dBm measurements.

# Appendix 7: Analog Analyzer Menu Tree

Table A-7 Analog analyzer menu tree description

Level 1	Level 2	Level 3	Description
	Multi-Chn	- Off - Phase - X-Talk	Select the multichannel mode.
	Function No.	- 1 - 2 - 3 - 4	Select the active function number to configure the settings.
Functions	Meas. Func.	- None - Frequency - AC Voltage - DC Voltage - THD+N Ratio - THD+N Level - SINAD - THD Ratio - THD Level - SMPTE IMD - DFD60268 2nd - DFD 60268 3rd - DFD 60118 2nd - DFD 60118 3rd - SNR - SNR (Fast) - J-Test	Select the measurement function. This setting is only available when the multichannel mode is set to Off.
	Unit	- Hz - ΔHz	Select the unit type.
Functions (Frequency)	Format	- Off - Delta	Select the reading format of the returned measurement reading.
(oquonoj)	Set result as ref. from	Channels 1 to 8	Store the measurement result from the selected channel as the reference frequency.
	Ref. Freq		Set the reference frequency value.

 Table A-7
 Analog analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Description
Functions (AC Voltage)	Unit	- dBg - dBm - dBr - dBu - dBV - W - V - ΔV - dBSPL - x	Select the unit type.
	Format	<ul><li>Off</li><li>Logarithmic</li><li>Linear</li><li>Delta</li></ul>	Select the reading format of the returned measurement reading.
	Set to OdB		Store the measured level as the reference level, and set the measurement reading format to Logarithmic.
	Set result as ref. from	Channels 1 to 8	Store the measurement result from the selected channel as the reference frequency.
Functions (AC Voltage)	Ref. Level		Set the reference level value. There is only one reference level for each channel.
	Ref. Imp		Set the reference impedance value. This setting is only available when the unit is set to W.
	Cal SPL		Set the calibration level value. This setting is only available when the unit is set to dBSPL.
	Detector	- RMS - Pk-Pk - QPK	Select the AC level detection type.
	Unit	- V - ΔV - x	Select the unit type.
Functions (DC Voltage)	Format	- Off - Linear - Delta	Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 8	Store the measurement result from the selected channel as the reference frequency.
	Ref. Level		Set the reference level value. There is only one reference level for each channel.

 Table A-7
 Analog analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Description
	Unit	- dB - \( \Delta dB - \% - x	Select the unit type.
Functions	Format	- Off - Linear - Delta	Select the reading format of the returned measurement reading.
	Set to OdB		Store the measured ratio as the reference ratio, and set the measurement reading format to Delta.
(THD+N Ratio)	Set result as ref. from	Channels 1 to 8	Store the measurement result from the selected channel as the reference ratio.
	Ref. Ratio		Set the reference ratio value. There is only one reference ratio for each channel.
	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>	Select the searching method for the fundamental frequency.
	Fund Freq		Set the fundamental frequency value.  This setting is only available when the frequency lock is set to Custom.
	Analog Notch	- Enable - Disable	Enable or disable the analog notch filter.  This filter is used to emulate the analog notch filter used in the HP8903B.

 Table A-7
 Analog analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Description
	Unit	- dBg - dBm - dBr - dBu - dBV - W - V - ΔV - dBSPL - x	Select the unit type.
Functions (THD+N Level)	Format	<ul><li>Off</li><li>Logarithmic</li><li>Linear</li><li>Delta</li></ul>	Select the reading format of the returned measurement reading.
	Set to OdB		Store the measured level as the reference level, and set the measurement reading format to Logarithmic.
	Set result as ref. from	Channels 1 to 8	Store the measurement result from the selected channel as the reference frequency.
	Ref. Level		Set the reference level value. There is only one reference level for each channel.
	Ref. Imp		Set the reference impedance value. This setting is only available when the unit is set to W.
	Cal SPL		Set the calibration level value. This setting is only available when the unit is set to dBSPL.
Functions (THD+N Level)	Freq Lock	- Auto - Gen Lock - Custom	Select the searching method for the fundamental frequency.
(TIDTN LEVEL)	Fund Freq		Set the fundamental frequency value.  This setting is only available when the frequency lock is set to Custom.
	Analog Notch	- Enable - Disable	Enable or disable the analog notch filter.  This filter is used to emulate the analog notch filter used in the HP8903B.

 Table A-7
 Analog analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Description
	Unit	- dB - ΔdB - % - x	Select the unit type.
	Format	- Off - Linear - Delta	Select the reading format of the returned measurement reading.
Functions	Set to OdB		Store the measured ratio as the reference ratio, and set the measurement reading format to Delta.
(SINAD)	Set result as ref. from	Channels 1 to 8	Store the measurement result from the selected channel as the reference ratio.
	Def Detie		Set the reference ratio value.
	Ref. Ratio		There is only one reference ratio for each channel.
	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>	Select the searching method for the fundamental frequency.
	Fund Freq		Set the fundamental frequency value.
			This setting is only available when the frequency lock is set to Custom.
	Unit	- dB - ΔdB - % - x	Select the unit type.
	Format	- Off - Linear - Delta	Select the reading format of the returned measurement reading.
Functions	Set to OdB		Store the measured ratio as the reference ratio, and set the measurement reading format to Delta.
(THD Ratio)	Set result as ref. from	Channels 1 to 8	Store the measurement result from the selected channel as the reference ratio.
	Ref. Ratio		Set the reference ratio value. There is only one reference ratio for each channel.
	Even Harmonic	- ALL - 2 - 4 - 6	Display the even harmonics order selection.

 Table A-7
 Analog analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Description		
Functions	Odd Harmonic	- ALL - 3 - 5 - 7 - 9	Display the odd harmonics order selection.		
(THD Ratio)	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>	Select the searching method for the fundamental frequency.		
	Fund Freq		Set the fundamental frequency value. This setting is only available when the frequency lock is set to Custom.		
	Unit	- dBg - dBm - dBr - dBu - dBV - W - V - ΔV - dBSPL - X	Select the unit type.		
	Format	<ul><li>Off</li><li>Logarithmic</li><li>Linear</li><li>Delta</li></ul>	Select the reading format of the returned measurement reading.		
Functions (THD Level)	Set to OdB		Store the measured level as the reference level, and set the measurement reading format to Logarithmic.		
	Set result as ref. from	Channels 1 to 8	Store the measurement result from the selected channel as the reference frequency.		
	Ref. Level		Set the reference level value. There is only one reference level for each channel.		
	Ref. Imp		Set the reference impedance value. This setting is only available when the unit is set to W.		
	Cal SPL		Set the calibration level value.  This setting is only available when the unit is set to dBSPL.		
	Even Harmonic	- ALL - 2 - 4 - 6	Select the even harmonics values.		

 Table A-7
 Analog analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Description
Functions	Odd Harmonic	- ALL - 3 - 5 - 7 - 9	Select the odd harmonics values.
(THD Level)	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>	Select the searching method for the fundamental frequency.
	Fund Freq		Set the fundamental frequency value. This setting is only available when the frequency lock is set to Custom.
	Unit	- dB - ΔdB - % - x	Select the unit type.
	Format	- Off - Linear - Delta	Select the reading format of the returned measurement reading.
	Set to OdB		Store the measured ratio as the reference ratio, and set the measurement reading format to Delta.
Functions (SMPTE IMD)	Set result as ref. from	Channels 1 to 8	Store the measurement result from the selected channel as the reference ratio.
	Ref. Ratio		Set the reference ratio value. There is only one reference ratio for each channel.
	Freq Lock - Gen Lock - Custom		Select the searching method for the upper and lower frequencies.
	Upper Freq		Set the upper frequency value. This setting is only available when the frequency lock is set to Custom.
	Lower Freq		Set the lower frequency value. This setting is only available when the frequency lock is set to Custom.

 Table A-7
 Analog analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Description
	Unit	- dB - ΔdB - %	Select the unit type.
Functions (DFD60268 2nd/ DFD 60268 3rd/	Format	- Off - Linear - Delta	Select the reading format of the returned measurement reading.
DFD 60118 2nd/ DFD 60118 3rd)	Set to OdB		Store the measured ratio as the reference ratio, and set the measurement reading format to Delta.
	Set result as ref. from	Channels 1 to 8	Store the measurement result from the selected channel as the reference ratio.
	Ref. Ratio		Set the reference ratio value. There is only one reference ratio for each channel.
	Unit	- dB - ∆dB - % - x	Select the unit type.
Functions	Format	- Off - Linear - Delta	Select the reading format of the returned measurement reading.
(SNR)	Set to OdB		Store the measured ratio as the reference ratio, and set the measurement reading format to Delta.
	Set result as ref. from	Channels 1 to 8	Store the measurement result from the selected channel as the reference ratio.
	Ref. Ratio		Set the reference ratio value. There is only one reference ratio for each channel.
	SNR Delay		Set the SNR delay value.
	Unit	<ul><li>dB</li><li>ΔdB</li><li>%</li><li>x</li></ul>	Select the unit type.
Functions (SNR (Fast))	Format	- Off - Linear - Delta	Select the reading format of the returned measurement reading.
(Oran (1 dot/)	Set to OdB		Store the measured ratio as the reference ratio, and set the measurement reading format to Delta.
	Set result as ref. from	Channels 1 to 8	Store the measurement result from the selected channel as the reference frequency.
	Ref. Ratio		Set the reference ratio value. There is only one reference ratio for each channel.

 Table A-7
 Analog analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Description	
Functions	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>	Select the searching method for the fundamental frequency.	
(SNR (Fast))	SNR (Fast)) Set the fund	Set the fundamental frequency value. This setting is only available when the frequency lock is set to Custom.		
	Harmonics		Set the number of harmonics order to be removed.	
	Ref. Channel		Set the reference channel number.	
Functions (Phase)	Freq Lock	- Auto - Gen Lock - Custom	Select the searching method for the fundamental frequency.	
	Fund Freq		Set the fundamental frequency value.  This setting is only available when the frequency lock is set to Custom.	
	Ref. Channel		Set the driven channel.	
	- dB - ΔdB - % - x		Select the unit type.	
	- Off Format - Linear - Delta		Select the reading format of the returned measurement reading.	
Functions (X-Talk)	Set to 0dB		Store the measured ratio as the reference ratio, and set the measurement reading format to Delta.	
( <b>^-</b> Idik)	Set result as ref. from	Channels 1 to 8	Store the measurement result from the selected channel as the reference ratio.	
	Ref. Ratio		Set the reference ratio value. There is only one reference ratio for each channel.	
	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>	Select the searching method for the fundamental frequency.	
	Fund Freq		Set the fundamental frequency value.  This setting is only available when the frequency lock is set to Custom.	

 Table A-7
 Analog analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Description
	Clear Filters		Clear all the filter settings.
	LPF	- None - 2 kHz - 3 kHz - 5 kHz - 8 kHz - 10 kHz - 15 kHz - 20 kHz - 22 kHz - 30 kHz - 40 kHz - 50 kHz - 80 kHz - Custom	Select the low-pass filter.
Filters Config	HPF	<ul> <li>None</li> <li>15 Hz</li> <li>20 Hz</li> <li>22 Hz</li> <li>30 Hz</li> <li>50 Hz</li> <li>70 Hz</li> <li>100 Hz</li> <li>200 Hz</li> <li>300 Hz</li> <li>400 Hz</li> <li>Custom</li> </ul>	Select the high-pass filter.
	Weighting	- None - A - CCIR 1k - CCIR 2k - C-Message - CCITT - Custom	Select the weighting filter.
	Deemphasis	<ul><li>None</li><li>50 μs</li><li>75 μs</li><li>Custom</li></ul>	Select the filter de-emphasis value.
	Notch Filter	State	Enable or disable the notch filter.  - Enable - Disable
		Center Freq	Set the frequency of the component to be removed from the input signal.
		Bandwidth	Set the bandwidth of the signal component to be removed.

 Table A-7
 Analog analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Description	
	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M	Select the sample size.	
Meas Config	Mov Average	1 to 50	Set the number of measurement readings to be used for the moving average calculation.	
	Sync Average	1 to 64	Set the number of points for the synchronous averaging in the analyzer meter mode.	
	Src Channel		Select the internal generator channel as the reference channel used in the following situations.  For the result calculation in unit dBg.  For the frequencies searching algorithm when the frequency lock is set to Gen Lock.	
	Trigger Source	<ul><li>Free Run</li><li>External</li></ul>	Select the trigger source	
	Trigger Edge	<ul><li>Rising</li><li>Falling</li></ul>	Select the trigger edge type.	
	Connector	– UnBal – Bal – Loopback	Select the input connector type.	
	Impedance	<ul> <li>100 kΩ         (for UnBal)</li> <li>200 kΩ         (for Bal)</li> <li>600 Ω</li> <li>300 Ω</li> </ul>	Select the input impedance value. This setting is only available when the input connector is set to UnBal or Bal.	
Input Config	Auto Range	- On - Off	Enable or disable the auto range.	
	Range	- 140 V - 100 V - 32 V - 10 V - 3.2 V - 1 V - 320 mV	Select the input voltage range value. This setting is only available when the auto range is disabled.	

 Table A-7
 Analog analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Description
	Bandwidth	- 90 kHz - 1.5 MHz	Select the input bandwidth value.  This setting is only available with Option N3431A. Refer to "U8903B Options" on page 37 for more information.
nput Config	Coupling	- DC - AC	Select the input coupling type.
	Ext. Gain		Set the input external gain value.
Wave File	Channel	<ul><li>Left</li><li>Right</li><li>Stereo</li></ul>	Select the wave file channel type.
	Bits/Sample	- 8 - 16 - 24	Select the wave file number of bits per sample.
	Duration	1 s to 600 s	Set the recording duration of the wave file.
	Record		Start recording and save the measurement into a wave file.
	Show Stats	- On - Off	Enable or disable the statistics calculation.
	No. of Reading	2 to 20	Set the number of readings used for the statistics calculation.
Statistics	Stat 1 Stat2 Stat3	<ul><li>Min</li><li>Max</li><li>Average</li><li>Std Dev</li><li>ΔMinMax</li></ul>	Select the statistics calculation type.
	Clear		Reset the statistics results of the current analog analyzer.

# Appendix 8: Digital Analyzer Menu Tree

Table A-8 Digital analyzer menu tree description

Level 1	Level 2	Level 3	Level 4	Description
Meas Mode	<ul><li>Standard</li><li>Process Delay</li><li>BERT</li></ul>			Select the analysis mode.
Unit	- Hex - Dec			This is only available when the analysis mode is BERT. Select the unit for the BERT analysis mode.
	Multi-Chn	- Off - Phase - X-Talk		Select the multichannel mode.
	Function No.	- 1 - 2 - 3 - 4		Select the active function number to configure the settings.
Functions	Meas Func	- None - Frequency - AC Voltage - DC Voltage - THD+N Ratio - THD+N Level - SINAD - THD Ratio - THD Level - SMPTE IMD - DFD60268 2nd - DFD 60268 3rd - DFD 60118 2nd - DFD 60118 3rd - Positive Peak - Negative Peak		Select the measurement function. This setting is only available when the multichannel mode is set to Off.
	Unit	– Hz – ΔHz		Select the unit type.
Functions (Frequency)	Format	- Off - Delta		Select the reading format of the returned measurement reading.
(oquonoj)	Set result as ref. from	Channels 1 to 8		Store the measurement result from the selected channel as the reference frequency.
	Ref. Freq			Set the reference frequency value.

 Table A-8
 Digital analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
Functions	Unit	- FFS - dBFS - %FS - V - dB - dBV - dBr - x - LSB - Hex - Dec - dBSPL		Select the unit type.
(AC Voltage)	Format	<ul><li>Off</li><li>Logarithmic</li><li>Linear</li></ul>		Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference frequency.
	Ref. Level			Set the reference level value. There is only one reference level for each channel.
	Volt/FS			Set the volts/FS reference value.
	Detector	- RMS - Pk-Pk		Select the AC level detection type.
	Unit	- FFS - V - Hex - x		Select the unit type.
Functions (DC Voltage)	Format	- Off - Linear		Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference frequency.
	Ref. Voltage			Set the reference voltage value. There is only one reference level for each channel.

 Table A-8
 Digital analyzer menu tree description (continued)

Level 1	Level 2	Level 3 Level 4	Description
	Unit	- dB - ΔdB - % - x	Select the unit type.
	Format	- Off - Linear - Delta	Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2	Store the measurement result from the selected channel as the reference ratio.
Functions (THD+N Ratio)	Ref. Ratio		Set the reference ratio value. There is only one reference ratio for each channel.
	Precision	- On - Off	Enable or disable the precision mode.
	Freq Lock	- Auto - Gen Lock - Custom	Select the searching method for the fundamental frequency.
	Fund Freq		Set the fundamental frequency value. This setting is only available when the frequency lock is set to Custom.
Functions (THD+N Level)	Unit	- FFS - dBFS - %FS - V - dB - dBV - dBr - x - LSB - Hex - Dec - dBSPL - Off	Select the unit type.
	Format	- Linear	Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2	Store the measurement result from the selected channel as the reference frequency.
	Ref. Level		Set the reference level value. There is only one reference level for each channel.
	Volt/FS		Set the volts/FS reference value.
	Precision	- On - Off	Enable or disable the precision mode.

 Table A-8
 Digital analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
Functions	Freq Lock	- Auto - Gen Lock - Custom		Select the searching method for the fundamental frequency.
(THD+N Level)	Fund Freq			Set the fundamental frequency value. This setting is only available when the frequency lock is set to Custom.
	Unit	- dB - \( \Delta dB - \% - \( \times \)		Select the unit type.
	Format	- Off - Linear - Delta		Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference ratio.
Functions (SINAD)	Ref. Ratio			Set the reference ratio value. There is only one reference ratio for each channel
	Precision	- On - Off		Enable or disable the precision mode.
	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>		Select the searching method for the fundamental frequency.
	Fund Freq			Set the fundamental frequency value.  This setting is only available when the frequency lock is set to Custom.
	Unit	<ul><li>dB</li><li>∆dB</li><li>%</li><li>x</li></ul>		Select the unit type.
	Format	- Off - Linear - Delta		Select the reading format of the returned measurement reading.
Functions (THD Ratio)	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference ratio.
	Ref. Ratio			Set the reference ratio value. There is only one reference ratio for each channel
	Even Harmonic	- ALL - 2 - 4 - 6 - 8		Display the even harmonics order selection.

 Table A-8
 Digital analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
Functions (THD Ratio)	Odd Harmonic	- ALL - 3 - 5 - 7 - 9		Display the odd harmonics order selection.
	Unit	- FFS - dBFS - %FS - V - dB - dBV - dBr - x - LSB - Hex - Dec - dBSPL		Select the unit type.
	Format	<ul><li>Off</li><li>Logarithmic</li><li>Linear</li></ul>		Select the reading format of the returned measurement reading.
Functions (THD Level)	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference frequency.
	Ref. Level			Set the reference level value. There is only one reference level for each channel.
	Volt/FS			Set the volts/FS reference value.
	Even Harmonic	- ALL - 2 - 4 - 6 - 8		Select the even harmonics values.
	Odd Harmonic	- ALL - 3 - 5 - 7 - 9		Select the odd harmonics values.

 Table A-8
 Digital analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
	Unit	- dB - \( \Delta dB - \% - \( \times \)		Select the unit type.
Functions (SMPTE IMD)	Format	- Off - Linear - Delta		Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference ratio.
	Ref. Ratio			Set the reference ratio value.
	Unit	- dB - \( \Delta dB - \% - \( \times \)		Select the unit type.
Functions (DFD60268 2nd/ DFD 60268 3rd/ DFD 60118 2nd/	Format	- Off - Linear - Delta		Select the reading format of the returned measurement reading.
DFD 60118 3rd)	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference ratio.
	Ref. Ratio			Set the reference ratio value.
	Nei. Nado			There is only one reference ratio for each channel.
Functions (Positive peak)	Unit	- FFS - dBFS - %FS - V - dB - dBV - dBr - x - LSB - Hex - Dec - dBSPL		Select the measurement unit type.
	Format	<ul><li>Off</li><li>Logarithmic</li><li>Linear</li></ul>		Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference frequency.
Functions (Positive peak)	Ref. Level			Set the reference level value. There is only one reference level for each channel.
	Volt/FS			Set the volts/FS reference value.

 Table A-8
 Digital analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
Functions (Negative peak)	Unit	- FFS - dBFS - %FS - V - dB - dBV - dBr - x - LSB - Hex - Dec - dBSPL		Select the measurement unit type.
	Format	<ul><li>Off</li><li>Logarithmic</li><li>Linear</li></ul>		Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference frequency.
	Ref. Level			Set the reference level value. There is only one reference level for each channel.
	Volt/FS			Set the volts/FS reference value.
Functions (Phase)	Ref. Channel			Set the reference channel number.
	Fund Freq			Set the fundamental frequency value. This setting is only available when the frequency lock is set to Custom.
	Ref. Channel			Set the driven channel.
Functions	Unit	<ul><li>dB</li><li>ΔdB</li><li>%</li><li>x</li></ul>		Select the unit type.
(X-Talk)	Format	- Off - Linear - Delta		Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference ratio.

 Table A-8
 Digital analyzer menu tree description (continued)

Level 1	Level 2	Level 3 Level 4	Description
	Ref. Ratio		Set the reference ratio value. There is only one reference ratio for each channel.
Functions (X-Talk)	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>	Select the searching method for the fundamental frequency.
	Fund Freq		Set the fundamental frequency value.  This setting is only available when the frequency lock is set to Custom.
	Clear Filters		Clear all the filter settings.
	LPF	<ul> <li>None</li> <li>15 kHz</li> <li>20 kHz</li> <li>22 kHz</li> <li>30 kHz</li> <li>Custom</li> </ul>	Select the low-pass filter.
	НРБ	<ul><li>None</li><li>20 Hz</li><li>100 Hz</li><li>400 Hz</li><li>Custom</li></ul>	Select the high-pass filter.
Filters Config	Weighting	<ul> <li>None</li> <li>A</li> <li>CCIR 1k</li> <li>CCIR 2k</li> <li>C-Message</li> <li>CCITT</li> <li>Custom</li> </ul>	Select the weighting filter.
	Deemphasis	<ul><li>None</li><li>50 μs</li><li>75 μs</li><li>Custom</li></ul>	Select the filter de-emphasis value.
	Sample Rate	<ul> <li>32 kHz</li> <li>44.1 kHz</li> <li>48 kHz</li> <li>88.2 kHz</li> <li>96 kHz</li> <li>176.4 kHz</li> <li>192 kHz</li> </ul>	Select the sample rate.

 Table A-8
 Digital analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
	Coupling	- DC - AC		Select the coupling type.
	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the sample size.
	Mov Average	1 to 20		Set the number of measurement readings to be used for the moving average calculation.
Meas Config	Trigger	Trigger Source	<ul><li>Free Run</li><li>External</li><li>Channel</li></ul>	Select the trigger source.
		Trigger Edge	- Rising - Falling	This is only available when the trigger source is External or Channel. Select the trigger edge type.
		Interface	– Analog – Digital	This is only available when the trigger source is Channel. Select the trigger interface.
		Channel		This is only available when the trigger source is Channel. Set the channel number.
		Trigger Level		This is only available when the trigger source is Channel. Set the trigger level.

 Table A-8
 Digital analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
	Connector	- UnBal - Bal - Optical - DSI		Select the input connector type.
Input Config	Impedance	Unbalanced connector type  - 75 Ω  - HiZ  Balanced connector type  - 110 Ω  - HiZ		Select the input impedance value.
	Freq Scaling	- MISR - Custom		Select the frequency scaling type.
	Ref SR			This is only available when frequency scaling is Custom. Set the reference sample rate value.

 Table A-8
 Digital analyzer menu tree description (continued)

Level 1	Level 2	Level 3 Level 4	Description
	Format	- Left - Right - I2S - DSP	Select the data format
	Fsync Polarity	- Rising - Falling	This is only available when the format is Left or Right. Select the frame clock edge synchronization.
	Fsync Width	<ul><li>One Bit Clock</li><li>One Subframe</li><li>50% Duty Cycle</li></ul>	This is only available when the format is Left or Right. Select the frame clock synchronization width.
	Data Shift Cnt		This is only available when the format is Left or Right. Set the data shift count value.
	Data Shift Dir	– Left – Right	This is only available when the format is Left or Right. Select the data shift direction.
DSI Config	Word Length	8 to 32	Set the word length value. The word length value must be greater than or equal to the audio resolution.
	Resolution	8 to 24	Set the audio resolution value.
	Decoding	- Linear PCM - A-Law - μ-Law	Select the decoding format.
	W/Bclk Dir	- In - Out	Select the word/bit clock direction.
	Bit Clk Edge	- Rising - Falling	Select the bit clock edge.
	Voltage	- 1.2 Vpp - 1.5 Vpp - 1.8 Vpp - 2.5 Vpp - 3 Vpp - 3.3 Vpp - Custom	Select the input voltage value.

 Table A-8
 Digital analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
	Decoding	- Linear PCM - A- Law - μ- Law		Select the decoding format.
	Resolution	8 to 24		Set the audio resolution value.
AES Config	Status Bits	- Channel - User		Select the status bits type.
	Save in Hex			Save the status bits to a HEX file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
	Save in Xml			Save the status bits to an XML file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
	Refresh Rate			Set the refresh rate.
Bits Analysis	Bit Types	<ul><li>Data</li><li>Active</li></ul>		Select the bit type.
	Show Stats	– On – Off		Enable or disable the statistics calculation.
	No. of Reading	2 to 20		Set the number of readings used for the statistics calculation.
Statistics	Stat 1 Stat2 Stat3	<ul><li>Min</li><li>Max</li><li>Average</li><li>Std Dev</li><li>ΔMinMax</li></ul>		Select the statistics calculation type.
	Clear			Reset the statistics results of the current analog analyzer.

# Appendix 9: Bluetooth Analyzer Menu Tree

Table A-9 Bluetooth analyzer menu tree description

Level 1	Level 2	Level 3	Level 4	Description
	Multi-Chn	<ul><li>Off</li><li>Phase</li><li>X-Talk</li></ul>		Select the multichannel mode.
	Function No.	- 1 - 2 - 3 - 4		Select the active function number to configure the settings.
Functions	Meas. Func.	- 4  - None - Frequency - AC Voltage - DC Voltage - THD+N Ratio - THD+N Level - SINAD - THD Ratio - THD Level - SMPTE IMD - DFD60268 2nd - DFD 60118 2nd - DFD 60118 3rd - SNR (Fast)		Select the measurement function. This setting is only available when the multichannel mode is set to Off.
	Unit	– Hz – ΔHz		Select the unit type.
Functions (Frequency)	Format	- Off - Delta		Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference frequency.
	Ref. Freq			Set the reference frequency value.

 Table A-9
 Bluetooth analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
Functions (AC Voltage)	Unit	- FFS - dBFS - %FS - V - dB - dBV - dBr - x - LSB - Hex - Dec - dBSPL		Select the unit type.
	Format	<ul><li>Off</li><li>Logarithmic</li><li>Linear</li></ul>		Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference frequency.
	Ref. Level			Set the reference level value. There is only one reference level for each channel.
	Cal SPL			Set the calibration level value. This setting is only available when the unit is set to dBSPL.
	Detector	- RMS - Pk-Pk		Select the AC level detection type.
	Unit	- FFS - V - LSB - Hex - Dec		Select the unit type.
Functions (DC Voltage)	Format	- Off - Linear		Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference frequency.
	Ref. Level			Set the reference level value. There is only one reference level for each channel.

 Table A-9
 Bluetooth analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
	Unit	- dB - ΔdB - % - x		Select the unit type.
	Format	– Off – Linear – Delta		Select the reading format of the returned measurement reading.
Functions (THD+N Ratio)	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference ratio.
(TID-IN NUCLO)	Ref. Ratio			Set the reference ratio value. There is only one reference ratio for each channel.
	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>		Select the searching method for the fundamental frequency.
	Fund Freq			Set the fundamental frequency value. This setting is only available when the frequency lock is set to Custom.
Functions (THD+N Level)	Unit	- FFS - dBFS - %FS - V - dBu - dBV - dBr - x - LSB - Hex - Dec - dBSPL		Select the unit type.
	Format	<ul><li>Off</li><li>Logarithmic</li><li>Linear</li></ul>		Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference frequency.
	Ref. Level			Set the reference level value. There is only one reference level for each channel.
	Cal SPL			Set the calibration level value. This setting is only available when the unit is set to dBSPL.

 Table A-9
 Bluetooth analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
Functions	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>		Select the searching method for the fundamental frequency.
(THD+N Level)	Fund Freq			Set the fundamental frequency value. This setting is only available when the frequency lock is set to Custom.
	Unit	- dB - ΔdB - % - x		Select the unit type.
Functions (SINAD)	Format	- Off - Linear - Delta		Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference ratio.
	Ref. Ratio			Set the reference ratio value. There is only one reference ratio for each channel.
	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>		Select the searching method for the fundamental frequency.
	Fund Freq			Set the fundamental frequency value.  This setting is only available when the frequency lock is set to Custom.
	Unit	- dB - ΔdB - % - x		Select the unit type.
	Format	- Off - Linear - Delta		Select the reading format of the returned measurement reading.
Functions (THD Ratio)	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference ratio.
	Ref. Ratio			Set the reference ratio value. There is only one reference ratio for each channel.
	Even Harmonic	- ALL - 2 - 4 - 6 - 8		Display the even harmonics order selection.

 Table A-9
 Bluetooth analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
	Odd Harmonic	- ALL - 3 - 5 - 7 - 9		Display the odd harmonics order selection.
Functions (THD Ratio)	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>		Select the searching method for the fundamental frequency.
	Fund Freq			Set the fundamental frequency value. This setting is only available when the frequency lock is set to Custom.
	Unit	- FFS - dBFS - WFS - V - dBu - dBV - dBr - x - LSB - Hex - Dec - dBSPL		Select the unit type.
Functions (THD Level)	Format	<ul><li>Off</li><li>Logarithmic</li><li>Linear</li></ul>		Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference frequency.
	Ref. Level			Set the reference level value. There is only one reference level for each channel.
	Cal SPL			Set the calibration level value. This setting is only available when the unit is set to dBSPL.
	Even Harmonic	- ALL - 2 - 4 - 6 - 8		Select the even harmonics values.

 Table A-9
 Bluetooth analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
	Odd Harmonic	- ALL - 3 - 5 - 7 - 9		Select the odd harmonics values.
Functions (THD Level)	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>		Select the searching method for the fundamental frequency.
	Fund Freq			Set the fundamental frequency value. This setting is only available when the frequency lock is set to Custom.
	Unit	- dB - ΔdB - % - x		Select the unit type.
	Format	- Off - Linear - Delta		Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference ratio.
Functions (SMPTE IMD)	Ref. Ratio			Set the reference ratio value. There is only one reference ratio for each channel.
	Freq Lock	- Gen Lock - Custom		Select the searching method for the upper and lower frequencies.
	Upper Freq			Set the upper frequency value. This setting is only available when the frequency lock is set to Custom.
	Lower Freq			Set the lower frequency value.  This setting is only available when the frequency lock is set to Custom.
Functions (DFD60268 2nd/ DFD 60268 3rd/ DFD 60118 2nd/	Unit	- dB - ΔdB - % - x		Select the unit type.
	Format	- Off - Linear - Delta		Select the reading format of the returned measurement reading.
DFD 60118 3rd)	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference ratio.
	Ref. Ratio			Set the reference ratio value. There is only one reference ratio for each channel.

 Table A-9
 Bluetooth analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
	Unit	- dB - ΔdB - % - x		Select the unit type.
	Format	- Off - Linear - Delta		Select the reading format of the returned measurement reading.
Functions	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference frequency.
(SNR (Fast))	Ref. Ratio			Set the reference ratio value. There is only one reference ratio for each channel.
	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>		Select the searching method for the fundamental frequency.
	Fund Freq			Set the fundamental frequency value. This setting is only available when the frequency lock is set to Custom.
	Harmonics			Set the number of harmonics order to be removed.
	Ref. Channel			Set the reference channel number.
Functions (Phase)	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>		Select the searching method for the fundamental frequency.
	Fund Freq			Set the fundamental frequency value. This setting is only available when the frequency lock is set to Custom.
	Ref. Channel			Set the driven channel.
	Unit	- dB - ΔdB - % - x		Select the unit type.
Functions (X-Talk)	Format	- Off - Linear - Delta		Select the reading format of the returned measurement reading.
	Set result as ref. from	Channels 1 to 2		Store the measurement result from the selected channel as the reference ratio.
	Ref. Ratio			Set the reference ratio value. There is only one reference ratio for each channel.
	Fund Freq			Set the fundamental frequency value. This setting is only available when the frequency lock is set to Custom.

 Table A-9
 Bluetooth analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
	Clear Filters			Clear all the filter settings.
	LPF	<ul><li>None</li><li>15 kHz</li><li>20 kHz</li><li>Custom</li></ul>	-	Select the low-pass filter.
Filters Config	НРБ	<ul><li>None</li><li>22 Hz</li><li>100 Hz</li><li>400 Hz</li><li>Custom</li></ul>	-	Select the high-pass filter.
	Weighting	- None - A - CCIR 1k - CCIR 2k - C-Message - CCITT - Custom	-	Select the weighting filter.
	Deemphasis	<ul><li>None</li><li>50 μs</li><li>75 μs</li><li>Custom</li></ul>	-	Select the filter de-emphasis value.
Filters Config		State		Enable or disable the notch filter.  - Enable  - Disable
	Notch Filter	Center Freq		Set the frequency of the component to be removed from the input signal.
		Bandwidth		Set the bandwidth of the signal component to be removed.

 Table A-9
 Bluetooth analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
	Coupling	- DC - AC		Select the coupling type.
	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144		Select the sample size.
Meas Config	Mov Average	- 524288 1 to 20		Set the number of measurement readings to be used for the moving average calculation.
	Sync Average	1 to 64		Set the number of points for the synchronous averaging in the analyzer meter mode.
	Src Channel			Select the internal generator channel as the reference channel used in the following situations.  For the result calculation in unit dBg.  For the frequencies searching algorithm when the frequency lock is set to Gen Lock.
	Trigger	Trigger Source	<ul><li>Free Run</li><li>External</li><li>Channel</li></ul>	Select the trigger source
		Device Search		Search for the discoverable <i>Bluetooth</i> devices within range.
		Max Scan	1 to 16	Set the maximum number of <i>Bluetooth</i> devices to be identified.
Link Config	Device Scan	Filter Class	- All - Custom	Select the filter class type.
		Custom		Set the Bluetooth device class.
		Refresh Device		Refresh the friendly name of the selected <i>Bluetooth</i> device.

 Table A-9
 Bluetooth analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
		Pair/Unpair Device		Pair/Unpair with the selected <i>Bluetooth</i> device.
		Unpair All Device		Unpair all the paired Bluetooth devices.
		Profile Connection	- Connect/ Disconnect All - Connect/ Disconnect A2DP - Connect/ Disconnect HFP - Connect/ Disconnect AVRCP	Connect or disconnect the <i>Bluetooth</i> profiles for the connection.
		A2DP Operation	<ul> <li>Open Media Connection</li> <li>Close Media Connection</li> <li>Start Streaming</li> <li>Pause Streaming</li> </ul>	Select the advanced audio distribution profile operation settings.
Link Config	Device Action	HFP Operation (Handsfree/ Headset)	- Dial - Answer Call - End Call - Reject Call - Toggle Audio - Button Press - Send AT Command	Select the HFP (Handsfree/Headset) profile operation settings.
		HFP Operation (Audio Gateway)	<ul><li>Connect</li><li>Disconnect</li><li>Call</li><li>Hang Up</li><li>Send AT Command</li></ul>	Select the HFP (Audio Gateway) profile operation settings.
		AVRCP Operation	- Volume Up - Volume Down - Mute - Play - Stop - Pause - Rewind - Fast Forward - Forward - Backward	Select the audio/video remote control profile operation settings.

 Table A-9
 Bluetooth analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
		Profile	<ul> <li>A2DP SRC, HFP AG, AVRCP TRGT</li> <li>A2DP SNK, HFP HF, AVRCP CTRL</li> </ul>	Select the U8903B's <i>Bluetooth</i> card profile.
		Friendly Name		Set the friendly name of the U8903B's Bluetooth card.
		Device PIN		Set the passkey of the U8903B's Bluetooth card.
		Device Class	- Auto - Custom	Select the device class based on the configured profile.
		Custom		Set the device class.
		SSP Mode	<ul><li>Just Works</li><li>Man-In-The-Middle</li></ul>	Select the U8903B's <i>Bluetooth</i> card simple secure pairing mode.
	Common Settings	Auto Pair		Enable or disable the auto-pairing function.
		IO Capability		Select the IO capability of the U8903B's Bluetooth card.
Link Config		Discoverable		Enable or disable the discoverability function of the U8903B's <i>Bluetooth</i> card.
		Connectable		Enable or disable the connectability function of the U8903B's <i>Bluetooth</i> card.
		Loopback		Enable or disable the integrated interchip sound audio loopback function.
		Link Status		Enable or disable the link status of the U8903B's Bluetooth card.
		RF Port	- RF1 - RF2	Select the U8903B's <i>Bluetooth</i> card RF port connector.
		Codec	- SBC - apt-X	Select the codec for the A2DP profile.
	A2DP Settings	Sampling Rate	<ul><li>16 kHz</li><li>32 kHz</li><li>44.1 kHz</li><li>48 kHz</li></ul>	Select the audio sampling rate for the A2DP profile.

 Table A-9
 Bluetooth analyzer menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
		Wideband		Enable or disable the wideband speech mode in the HFP profile connection.
Link Config		Latency	4 to 65534	Set the HFP's codec channel latency in miliseconds.
		Retransmit	<ul><li>No Transmission</li><li>Power Saving</li><li>Link Quality</li><li>No Preference</li></ul>	Select the HFP's codec retransmission effort.
	HFP Settings	Packet Types	- HV1 - HV2 - HV3 - EV3 - EV4 - EV5 - 2EV3 - 3EV3 - 3EV5	Select the packet type used in the HFP's codec.
	AVRCP Log View	Clear Log		Clear the AVRCP operation log history.
	AVINOI LOG VIEW	Refresh Log		Refresh the AVRCP operation log history.
	Channel	<ul><li>Left</li><li>Right</li><li>Stereo</li></ul>	-	Select the wave file channel type.
Wave File	Bits/Sample	- 8 - 16	-	Select the wave file number of bits per sample.
	Duration	1 s to 600 s		Set the recording duration of the wave file.
	Record			Start recording and save the measurement into a wave file.
	Show Stats	– On – Off	-	Enable or disable the statistics calculation.
Statistics	No. of Reading	2 to 20		Set the number of readings used for the statistics calculation.
	Stat 1 Stat2 Stat3	<ul><li>Min</li><li>Max</li><li>Average</li><li>Std Dev</li><li>ΔMinMax</li></ul>	-	Select the statistics calculation type.
	Clear			Reset the statistics results of the current analog analyzer.

## Appendix 10: Graph Analysis Menu Tree

 Table A-10
 Graph analysis menu tree description

Level 1	Level 2	Level 3	Description
Analysis Mode	<ul><li>Frequency</li><li>Phase</li><li>Time</li><li>PSD</li></ul>		Select the graph analysis mode to be plotted on the current graph panel.  This setting is not available when the graph analysis display option is Harmonics.
	Active	AA1 to AA8	Select the active channel.  This setting is only available when the graph analysis display option is Harmonics.  AA2: Analog Analyzer channel 2
Harm Settings	Odd	- ALL - 3 - 5 - 7 - 9	Select the odd harmonics values.  This setting is only available when the graph analysis display option is Harmonics.
	Even	- ALL - 2 - 4 - 6 - 8	Select the even harmonics values.  This setting is only available when the graph analysis display option is Harmonics.
	Display	- Harmonics - THD	Select the harmonics display option.  This setting is only available when the graph analysis display option is Harmonics.
	THD Unit	- dB - %	Select the unit for THD measurements.  This setting is only available when the graph analysis display option is Harmonics.
	Active Channel	AA1 to AA8	Select the available active channel. AA2: Analog Analyzer channel 2
Graph Settings	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M	Select the graph sample size value.

 Table A-10
 Graph analysis menu tree description (continued)

Level 1	Level 2	Level 3	Description
Graph Settings	Window	<ul> <li>Rectangular</li> <li>Hanning</li> <li>Blackman</li> <li>Rife-Vincent</li> <li>Rife-Vincent 3</li> <li>Hamming</li> <li>Flat Top</li> <li>Kaiser</li> </ul>	Select the window function to be applied to the data before the FFT process.
	Sync Avg	1 to 64	Set the number of samples to be acquired and averaged before the FFT process is performed.
	Hold	<ul><li>None</li><li>Average</li><li>Min</li><li>Max</li></ul>	Select the type of hold to be performed after the FFT process.
	Axis	<ul><li>Primary</li><li>Secondary</li></ul>	Select the active axis to be configured.
	Enabled	- On - Off	Enable or disable the axis settings.  This setting is only available when the axis type is secondary. If the axis type is primary, this setting is always set to On.
	Left		Set the left axis limit value.
	Right		Set the right axis limit value.
Axis Settings	Span		Set the total X-axis span or total range to be monitored in the graph.
	Center		Set the X-axis center point in the graph.
	Тор		Set the top axis limit value.
	Bottom		Set the bottom axis limit value.
	X-Scale	- Linear - Log	Select the X-axis scale type.
	Y-Scale	– Linear – Log	Select the Y-axis scale type.
	Active Trace	1 to 8	Select the active trace channel.
	Source		Select data source of the active trace from the available channels, traces, files, and memory.
Trace Settings	Enabled	– On – Off	Enable or disable the active trace data.
		Save To Memory	Save the active trace to the memory buffer.
	Memory	Load From Memory	Load a trace from the memory buffer into the active trace.
		Clear Memory	Clear the trace from the memory buffer.

 Table A-10
 Graph analysis menu tree description (continued)

Level 1	Level 2	Level 3	Description	
		Apply Math	Apply the corresponding math function to the trace data or turn off the math function.  - On - Off	
	Math	Function	Select the math function to be applied on the active trace.  - f(Source)  - f(Source) + x  - f(Source) - x  - f(Source) * x  - f(Source) / x	
		X	Set the x value in the selected math function.	
Trace Settings	- V - dBV - dBu - W - dBm - dBSPL		Select the trace unit type.	
		Persist	Enable or disable the persistence on the active trace.	
	Persistence	Persist Count	Set the number of previous sets of trace data to be displayed in the graph before they are removed.	
			This setting is only available when persistence is enabled.	
	Axis	<ul><li>Primary</li><li>Secondary</li></ul>	Attach the active trace to the primary or secondary axis.	
	Color	<ul><li>Yellow</li><li>Cyan</li><li>White</li><li>Pink</li><li>Green</li><li>Orange</li><li>Red</li><li>Purple</li></ul>	Select the color of the active trace.	
Display Option	<ul> <li>Graph</li> <li>Data Table</li> <li>Marker Table</li> <li>Statistics</li> <li>Harmonics</li> <li>Signal Analysis</li> </ul>		Select the graph analysis display option.	
Running mode	Continuous Single		Select the graph analysis running mode.	

 Table A-10
 Graph analysis menu tree description (continued)

Level 1	Level 2	Level 3	Description	
	Enabled	- On - Off	Enable or disable the measurements in the graph.	
		Interface	Select the measurement interface type.	
	Measurement 1	Channel	Select the desired channel to perform the measurement.	
Measurement		Function No	Select the function to be displayed based on the function number (1 to 4).	
		Interface	Select the measurement interface type.	
	Measurement 2	Channel	Select the desired channel to perform the measurement.	
		Function No	Select the function to be displayed based on the function number (1 to 4).	

## Appendix 11: Sweep Function Menu Tree

Table A-11 Sweep function menu tree description

Level 1	Level 2	Level 3	Level 4	Description
Арр.Туре	<ul><li>Sweep</li><li>Group Delay</li></ul>			Select the sweep application type.
				This is only available when the sweep application type is Sweep.
Parameter				Select the sweep parameter type.
				The parameter selection depends on the waveform type set at the analog generator.
	Spacing	– Log – Linear – Custom		Select the spacing type.
		- Vrms - dBV		
		– Vp		Select the sweep unit.
	Unit	<ul><li>Vpp</li><li>dBm</li><li>dBu</li></ul>		This setting is only available when the sweep parameter is amplitude.
		- dBSPL		
Points Settings	Start			Set the sweep start value. This setting is only available when the sweep spacing is Log or Linear.
	Stop			Set the sweep stop value. This setting is only available when the sweep spacing is Log or Linear.
	Step			Set the sweep step value. This setting is only available when the sweep spacing is Log or Linear.
	Points			Set the sweep points value. This setting is only available when the sweep spacing is Log or Linear.
	Edit Points			Refer to " <b>Edit points</b> " on page 494 for the edit points menu tree.
Dwell Time				Set the delay in ms for the generator to output the signal.
Sweep Mode	Continuous Single			Select the sweep mode.
	Source	1 to 2		Select the source channel(s).
Channels	Measure	1 to 8		Select the measure channel(s). The available selection depends on the number of installed analog analyzer cards.

 Table A-11
 Sweep function menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
		Active Axis	<ul><li>Primary</li><li>Secondary</li></ul>	Select the active axis.
		Left		Set the left axis value.
		Right		Set the right axis value.
	Axis Settings	Тор		Set the top axis value.
	· ·	Bottom		Set the bottom axis value.
		X-Scale	<ul><li>Linear</li><li>Log</li></ul>	Select the X-axis scale type.
		Y-Scale	- Linear - Log	Select the Y-axis scale type.
		Data Channel		Select the trace data channel number to be plotted.
Plot View		Y Data	<ul> <li>S: <sweep parameter=""></sweep></li> <li>F1: <measurement 1="" function=""></measurement></li> <li>F2: <measurement 2="" function=""></measurement></li> <li>F3: <measurement 3="" function=""></measurement></li> <li>F4: <measurement 4="" function=""></measurement></li> </ul>	Select the Y-axis trace data source.
	Plot Settings	Y2 Data	<ul> <li>S: <sweep parameter=""></sweep></li> <li>F1: <measurement 1="" function=""></measurement></li> <li>F2: <measurement 2="" function=""></measurement></li> <li>F3: <measurement 3="" function=""></measurement></li> <li>F4: <measurement 4="" function=""></measurement></li> </ul>	Select the second Y-axis trace data source.
		X Data	<ul> <li>S: <sweep parameter=""></sweep></li> <li>F1: <measurement 1="" function=""></measurement></li> <li>F2: <measurement 2="" function=""></measurement></li> <li>F3: <measurement 3="" function=""></measurement></li> <li>F4: <measurement 4="" function=""></measurement></li> </ul>	Select the X-axis trace data source.
		Wrap Phase	- On - Off	Enable of disable the wrap phase.

 Table A-11
 Sweep function menu tree description (continued)

Level 1	Level 2	Level 3	Level 4	Description
	Plot Settings	Hold Type	<ul><li>None</li><li>Average</li><li>Max</li><li>Min</li></ul>	Select the data type to be plotted in the graph.
		Data Channel		Select the trace data channel number to be plotted.
		Wrap Phase	– On – Off	Enable of disable the wrap phase.
		Goto Point		Set the sweep point number to go to.
		Point Value		Set the currently selected sweep point value.
	Edit points	Add Point		Add a sweep point.
		Remove Point		Remove the selected sweep point.
		Load Points		Load the sweep points from a file.  Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
PL 11/		Save Points		Save the sweep points to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
Plot View	Save Pts			Save the sweep points to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.

## Appendix 12: Save Menu Tree

Table A-12 Save menu tree description

Level 1	Level 2	Description
Save		Save to a file.
Туре		Select the file type to be displayed on the current directory.
Rename	OK	Set the file name and select OK to rename the file name.
	Mark	Mark the selected file.
Copy or Move	Copy Marked To Folder	Copy the marked file to the selected folder.
	Move Marked To Folder	Move the marked file to the selected folder.
Delete		Delete the selected file.
New Folder	OK	Set the new folder name and select OK to create a new folder.

## Appendix 13: Recall Menu Tree

Table A-13 Recall menu tree description

Level 1	Level 2	Description
Recall		Recall a saved file.
Туре		Select the file type to be displayed on the current directory.
Rename	OK	Set the file name and select OK to rename the file name.
	Mark	Mark the selected file.
Copy or Move	Copy Marked To Folder	Copy the marked file to the selected folder.
	Move Marked To Folder	Move the marked file to the selected folder.
Delete		Delete the selected file.
New Folder	OK	Set the new folder name and select OK to create a new folder.

## Appendix 14: Test Sequence Menu Tree

Table A-14 Test sequence menu tree description

Tab	Level 1	Level 2	Level 3	Description
	New Project			Create a new project.
	Open Project			Load a project from a file.  Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
	Save Project			Save the project to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
		Prompt DUT ID	- On - Off	Enable or disable the prompt for device ID (device serial number) at the start of a test sequence.
Project		Prompt Msg		Set the prompt message. This setting is only available when Prompt DUT ID is enabled.
	Properties	Pass/Fail Msg	- On - Off	Enable or disable the on-screen message dialog box that can be displayed at the end of a test sequence. Press Enter to close the dialog box.
		Pass Message		Edit the pass message. This setting is only available when Pass/Fail Msg is enabled.
		Fail Message		Edit the fail message. This setting is only available when Pass/Fail Msg is enabled.
	Clear			Clear all the report data.
	Save			Save the report to a DOCX file format.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
		Auto Save	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable saving the report automatically at the end of a test sequence.
Report		Format	- Docx - Html	Select the report file format to be saved.
Керит	Properties  Name Option  Prefix  Location	Name Option	<ul><li>Timestamp</li><li>Numeric</li><li>Prompt</li></ul>	Select the naming convention of the file name for the automatically saved report.
		Prefix		Set the prefix for the file name.
		Location	Select	Select the folder for the automatically saved report.
		LOCATION	New Folder	Create a new folder at the current directory or folder.

 Table A-14
 Test sequence menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
	Enable		- On - Off	Enable or disable the selected test sequence.
	Add Test Sequence	New Saved		Add a new test sequence.
	Delete Test Sequence			Delete the selected test sequence.
Test	Save			Save the test sequence to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
		Move		Move the selected test sequence.
	Edit	Сору		Copy the selected test sequence.
		Paste		Paste a copied test sequence after the selected test sequence.
	Properties	Name		Set the test sequence name.
	Add Measurement			Add measurements to the selected test sequence. Refer to "Add Measurement" on page 502 for the list of test measurements.
	Edit	Paste		Paste a copied measurement after the IO configuration. The IO Configuration cannot be moved or copied.
	Settings: Output Configuration (Analog)	Channels	<ul><li>None (External)</li><li>1</li><li>2</li></ul>	Select the number of output channels in use.
		Connector	- Bal - UnBal - Com - IEC60268	Select the output connector type.
IO Configuration		Impedance	- For Bal, Com, and IEC60268 - 600 $\Omega$ - 100 $\Omega$ - 40 $\Omega$ - For UnBal - 600 $\Omega$ - 50 $\Omega$ - 20 $\Omega$	Select the output impedance value.
		IEC60268	- Pin 2 - Pin 3	Select the additional 10 Ω output series resistance for pin 2 or 3 of the XLR connector in the common IEC 60268 configuration.  This setting is only available when the output connector type is set to IEC 60268.
		Ground	- Float - Ground	Select the grounding type.

 Table A-14
 Test sequence menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
	Settings: Output	Max Voltage		Set the maximum voltage.
	Configuration (Analog)	Reference	Impedance	Set the reference impedance for the unit conversion of dBm measurements.
		Channels	<ul><li>None (External)</li><li>2</li></ul>	Select the number of output channels in use.
		Device		Select the paired Bluetooth device.
	Settings: Output Configuration (Bluetooth)	Profiles	- A2DP - HFP - AVRCP	Select the U8903B's <i>Bluetooth</i> card profile.
		Link Config		Configure the <i>Bluetooth</i> link settings.
		References	Volt/FS	Set the output references for generator.
	Settings: Input Configuration (Analog)	Channels		Display the number of input channels in use.
		Connector	– UnBal – Bal – Loopback	Select the input connector type.
IO Configuration		Impedance	- 100 k $\Omega$ (for Unbalanced) - 200 k $\Omega$ (for Balanced) - 600 $\Omega$ - 300 $\Omega$	Select the input impedance value. This setting is only available when Connector is set to UnBal or Bal.
		Coupling	- DC - AC	Select the input coupling type.
		Bandwidth	<ul><li>90 kHz</li><li>1.5 MHz</li></ul>	Select the input bandwidth value. This setting is only available with Option N3431A.
			Voltage	Set the input voltage value.
			Ratio	Set the input ratio value.
		Reference	Frequency	Set the input frequency value.
		Koleielice	Impedance	Set the input impedance value.
			Sound level	Set the input sound level value.
			Calibrator level	Set the input calibrator level value.

 Table A-14
 Test sequence menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
		Channels		Select the number of input channels in use.
		Device		Select the paired Bluetooth device.
		Profiles	- A2DP - HFP - AVRCP	Select the U8903B's <i>Bluetooth</i> card profile.
		Link Config		Configure the <i>Bluetooth</i> link settings.
	Settings: Input Configuration (Bluetooth)	Coupling	- DC - AC	Select the input coupling type.
	(Bluetooth)		Voltage	Set the input voltage value.
			Ratio	Set the reference ratio value.
		Reference	Frequency	Set the reference frequency value.
		кетенсе	Sound Lvl	Set the sound level value.
			Calibrator Lvl	Set the calibration level value value.
10.0 5 1:			Volt/FS	Set the volts/FS reference value.
IO Configuration		Name		Rename the IO configuration.
		Sub-Steps: RunIO Configuration	Add Sub-Step	Add sub-step to the list.  - Delay  - Prompt  - Sent SCPI
			Edit	Move the RunIO Configuration sub-step in the list.
	Properties	Sub-Steps: Delay	Enable	Enable or disable the delay sub-step.  On Off
			Add Sub-Step	Add sub-step to the list.  - Delay  - Prompt  - Sent SCPI
			Delete Sub-Step	Delete the selected sub-step.
			Edit	Move or copy the selected sub-step, or paste a copied sub-step after the selected sub-step.

 Table A-14
 Test sequence menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
		Sub-Steps: Delay	Settings	Configure the delay sub-step settings.  - Delay Set the delay time in seconds.
			Properties	Rename the delay sub-step name.
			Enable	Enable or disable the prompt sub-step.
				Add sub-step to the list.
			Add Sub-Step	- Delay
			Auu Sub-Step	- Prompt
				- Sent SCPI
			Delete Sub-Step	Delete the selected sub-step.
			Edit	Move or copy the selected sub-step, or paste a copied sub-step after the selected sub-step.
				<ul> <li>Message         Set the prompt message at the lower half of         the main display.</li> </ul>
		Sub-Steps: Prompt	Settings	<ul> <li>Prompt Icon</li> <li>Select the prompt icon to be displayed.</li> </ul>
				- None
IO Configuration	Properties			- Hand
				<ul> <li>Question</li> </ul>
				<ul> <li>Exclamation</li> </ul>
				- Asterisk
				- Dialog Settings
				Add additional settings to the prompt window.
				- Timeout
				- Cancel Button
				- Timeout
				Set the prompt timeout value in seconds.
			Properties	Set the prompt sub-step name.
			Enable	Enable or disable the send SCPI sub-step.
				Add sub-step to the list.
			Add Sub-Step	– Delay
		Sub-Steps:	Aud Oub-Olep	- Prompt
		Send SCPI		- Sent SCPI
			Delete Sub-Step	Delete the selected sub-step.
			Edit	Move or copy the selected sub-step, or paste a copied sub-step after the selected sub-step.

 Table A-14
 Test sequence menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
IO Configuration	Properties	Sub-Steps: Send SCPI	Settings	- GPIB Address Select the desired GPIB address.  - SCPI Commands  - Edit Set the SCPI commands at the lower half of the main display.  - Import Load the SCPI commands from a file. Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.  - Progress Msg Set the optional text message that will be displayed on a dialog box for the time length set in Delay.  - Delay Set the delay time length after the SCPI command(s) is issued.
			Properties	Set the prompt sub-step name.
Measurement	Add Measurement	- AC level - Frequency - Phase - SNR - THD+N - DC level - Crosstalk - SMPTE IMD - DFD IMD - Multitone analyzer - POLQA - Stepped frequency - SMPTE frequency swe - SMPTE level sweep - DFD level sweep - DFD level sweep - DC level sweep - Receiver Sensitivity - Measurement recor	weep ep p	Enable or disable the selected measurement.  Add measurements.
	Delete Measurement			Delete the selected test measurement.  Move or copy the selected measurement, or paste
	Edit			a copied measurement after the selected measurement.
	Settings			Configure the selected test measurement.  Refer to "Measurement settings" on page 505 for the respective test measurement settings.

 Table A-14
 Test sequence menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
		Name		Rename the selected measurement.
		Sub-Steps: RunIO Configuration	Add Sub-Step	Add sub-step to the list.  - Delay  - Prompt  - Sent SCPI
			Edit	Move the RunIO Configuration sub-step in the list.
			Enable	Enable or disable the delay sub-step.
			Add Sub-Step	Add sub-step to the list.  - Delay  - Prompt  - Sent SCPI
		Sub-Steps:	Delete Sub-Step	Delete the selected sub-step.
		Delay	Edit	Move or copy the selected sub-step, or paste a copied sub-step after the selected sub-step.
			Settings	Configure the delay sub-step settings.  - Delay Set the delay time in seconds.
			Properties	Rename the delay sub-step name.
			Enable	Enable or disable the prompt sub-step.
Measurement	Properties		Add Sub-Step	Add sub-step to the list.  - Delay  - Prompt  - Sent SCPI
			Delete Sub-Step	Delete the selected sub-step.
			Edit	Move or copy the selected sub-step, or paste a copied sub-step after the selected sub-step.
		Sub-Steps: Prompt	Settings	<ul> <li>Message Set the prompt message at the lower half of the main display.</li> <li>Prompt Icon Select the prompt icon to be displayed.</li> <li>None Hand Question Exclamation Asterisk</li> <li>Dialog Settings Add additional settings to the prompt window.</li> <li>Timeout Cancel Button</li> <li>Timeout Set the prompt timeout value in seconds.</li> </ul>

 Table A-14
 Test sequence menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
		Sub-Steps: Prompt	Properties	Set the prompt sub-step name.
			Enable	Enable or disable the send SCPI sub-step.
				Add sub-step to the list.
			Add Sub-Step	- Delay
				- Prompt - Sent SCPI
			Delete Sub-Step	Delete the selected sub-step.
			Edit	Move or copy the selected sub-step, or paste a copied sub-step after the selected sub-step.
				- GPIB Address Select the desired GPIB address.
				- SCPI Commands
Measurement	Properties	Sub-Steps: Send SCPI		<ul> <li>Edit         Set the SCPI commands at the lower half of         the main display.</li> </ul>
			Settings	<ul> <li>Import         Load the SCPI commands from a file. Refer         to "Appendix 13: Recall Menu Tree" on             page 496 for the recall menu tree.     </li> </ul>
				<ul> <li>Progress Msg         Set the optional text message that will be displayed on a dialog box for the time length set in Delay.     </li> </ul>
				<ul> <li>Delay</li> <li>Set the delay time length after the SCPI command(s) is executed.</li> </ul>
			Properties	Set the prompt sub-step name.
		Failure Handling	<ul><li>Cancel Seq.</li><li>Allow Retry</li><li>Continue Seq.</li></ul>	Select the failure handling type for the selected measurement.

# Measurement settings

### AC level

 Table A-15
 Measurement settings > AC Level menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Waveform	Sine Variable Phase Square Arbitrary		Select the waveform type.
	Output			Select the output channel.
AC Level (Signal Generation)		Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Frequency		Set the frequency value.
	Waveform Config	Amplitude		Set the amplitude value.
		DC Offset		Set the DC offset value.
		Phase->1st Ch		Set the phase value. This setting is only available when channel 2 is selected.
	Detector	- RMS - Pk-Pk		Select the AC level detector type.
AC Level (Signal Analysis)	LPF	<ul> <li>None</li> <li>2 kHz</li> <li>3 kHz</li> <li>5 kHz</li> <li>8 kHz</li> <li>10 kHz</li> <li>15 kHz</li> <li>20 kHz</li> <li>22 kHz</li> <li>30 kHz</li> <li>40 kHz</li> <li>50 kHz</li> <li>80 kHz</li> <li>Custom</li> </ul>		Select the low-pass filter.

 Table A-15
 Measurement settings > AC Level menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
AC Level (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
	Input Range	Auto Range	- On - Off	Enable or disable the auto input range.
		Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
AC Level Gain				Refer to "Bar chart" on page 550 for the bar chart menu tree.

# Frequency

 Table A-16
 Measurement settings > Frequency menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Waveform	<ul><li>Sine</li><li>Variable Phase</li><li>Square</li><li>Arbitrary</li></ul>		Select the waveform type.
	Output			Select the output channel.
Frequency (Signal Generation)		Track 1st Ch	Enable Disable	Enable or disable the tracking of the first channel.
	Waveform Config	Frequency		Set the frequency value.
		Amplitude		Set the amplitude value.
		DC Offset		Set the DC offset value.
	Waveform Config	Phase->1st Ch		Set the phase value. This setting is only available when channel 2 is selected.
Frequency (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
	Input Range	Auto Range	- On - Off	Enable or disable the auto input range.
		Track 1st Ch	- Enable - Disable	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
Frequency				Refer to "Bar chart" on page 550 for the bar chart menu tree.

## Phase

 Table A-17
 Measurement settings > Phase menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Waveform	<ul><li>Sine</li><li>Variable Phase</li><li>Square</li><li>Arbitrary</li></ul>		Select the waveform type.
	Output			Select the output channel.
Phase (Signal Generation)	Waveform Config	Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Frequency		Set the frequency value.
		Amplitude		Set the amplitude value.
	Waveform Config	DC Offset		Set the DC offset value.
		Phase->1st Ch		Set the phase value. This setting is only available when channel 2 is selected.
	Ref Channel			Set the reference channel number.
Phase (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
	Input Range	Track 1st Ch	- Enable - Disable	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
Phase				Refer to "Bar chart" on page 550 for the bar chart menu tree.

## **SNR**

 Table A-18
 Measurement settings > SNR menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Waveform	<ul><li>Sine</li><li>Variable phase</li><li>Square</li><li>Arbitrary</li></ul>		Select the waveform type.
	Output			Select the output channel.
SNR (Signal Generation)		Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Frequency		Set the frequency value.
	Waveform Config	Amplitude		Set the amplitude value.
		DC Offset		Set the DC offset value.
		Phase->1st Ch		Set the phase value. This setting is only available when channel 2 is selected.
	SNR Mode	<ul><li>Fast</li><li>Standard</li></ul>		Select the SNR measurement mode.
	SNR Delay			Set the SNR delay.
				This setting is only available when SNR Mode is set to Standard.
SNR	Freq Lock	- Auto - Gen Lock		Select the searching method for the fundamental frequency.
(Signal Analysis)	Fled Lock	- Gen Lock - Custom		This setting is only available when SNR Mode is set to Fast.
				Set the fundamental frequency value.
	Fund Freq			This setting is only available when SNR Mode is set to Fast and Freq Lock is set to Custom.
				Set the number of harmonics order to be removed.
	Harmonic Cnt			This setting is ony available when SNR Mode is set to Fast.

 Table A-18
 Measurement settings > SNR menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
SNR (Signal Analysis)	LPF	- None - 2 kHz - 3 kHz - 5 kHz - 8 kHz - 10 kHz - 15 kHz - 20 kHz - 22 kHz - 30 kHz - 40 kHz - 50 kHz - 80 kHz - Custom		Select the low-pass filter.
	HPF	- None - 15 Hz - 20 Hz - 22 Hz - 30 Hz - 50 Hz - 70 Hz - 100 Hz - 200 Hz - 300 Hz - 400 Hz - Custom		Select the high-pass filter.
	Weighting	- None - A - CCIR 1k - CCIR 2k - CCITT - C-Message - Custom		Select the weighting filter.
	Deemphasis	- None - 50 μs - 75 μs - Custom		Select the de-emphasis filter.

 Table A-18
 Measurement settings > SNR menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
SAR (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
	Input Range	Auto Range	- On - Off	Enable or disable the auto input range.
		Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
SNR				Refer to " <b>Bar chart</b> " on page 550 for the bar chart menu tree.

## THD+N

 Table A-19
 Measurement settings > THD+N menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Waveform	<ul><li>Sine</li><li>Variable phase</li><li>Square</li><li>Arbitrary</li></ul>		Select the waveform type.
	Output			Select the output channel.
THD+N (Signal Generation)		Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
	Waveform Config	Frequency		Set the frequency value.
		Amplitude		Set the amplitude value.
		DC Offset		Set the DC offset value.
	Waveform Config	Phase->1st Ch		Set the phase value. This setting is only available when channel 2 is selected.
	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>		Select the searching method for the fundamental frequency.
	Fund Freq			Set the fundamental frequency value. This setting is only available when Freq Lock is set to Custom.
	Harmonics	- All - 2 to 9		Select the harmonics count to be used in the THD ratio and THD level results.
THD+N (Signal Analysis)	LPF	- None - 2 kHz - 3 kHz - 5 kHz - 8 kHz - 10 kHz - 15 kHz - 20 kHz - 22 kHz - 30 kHz - 40 kHz - 50 kHz - 80 kHz - Custom		Select the low-pass filter.

**Table A-19** Measurement settings > THD+N menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
	HPF	- None - 15 Hz - 20 Hz - 22 Hz - 30 Hz - 50 Hz - 70 Hz - 100 Hz - 200 Hz - 300 Hz - 400 Hz - Custom		Select the high-pass filter.
	Weighting	- None - A - CCIR 1k - CCIR 2k - CCITT - C-Message - Custom		Select the weighting filter.
THD+N (Signal Analysis)	Deemphasis	- None - 50 μs - 75 μs - Custom		Select the de-emphasis filter.
	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
	Input Range	Auto Range	- On - Off	Enable or disable the auto input range.
		Track 1st Ch	– Enable – Disable	Enable or disable the tracking of the first channel.
SINAD		Voltage Range		Set the input voltage range.
THD Level THD Ratio THD+N Level THD+N Ratio				Refer to " <b>Bar chart</b> " on page 550 for the bar chart menu tree.

## DC level

Table A-20 Measurement settings > DC Level menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Waveform	<ul><li>Sine</li><li>Arbitrary</li></ul>		Select the waveform type.
	Output			Select the output channel.
DC Level (Signal Generation)		Track 1st Ch	– Enable – Disable	Enable or disable the tracking of the first channel.
	Waveform Config	Frequency		Set the frequency value.
		Amplitude		Set the amplitude value.
		DC Offset		Set the DC offset value.
DC Level (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
		Auto Range	- On - Off	Enable or disable the auto input range.
	Input Range	Track 1st Ch	– Enable – Disable	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
DC Level				Refer to "Bar chart" on page 550 for the bar chart menu tree.

## Crosstalk

 Table A-21
 Measurement settings > Crosstalk menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Waveform	<ul><li>Sine</li><li>Arbitrary</li></ul>		Select the waveform type.
	Output			Select the output channel.
Crosstalk (Signal Generation)		Track 1st Ch	– Enable – Disable	Enable or disable the tracking of the first channel.
	Waveform Config	Frequency		Set the frequency value.
		Amplitude		Set the amplitude value.
		DC Offset		Set the DC offset value.
	Driven Ch			Select the driven channel number from the generator.
	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>		Select the searching method for the fundamental frequency.
	Fund Freq			Set the fundamental frequency value. This setting is only available when Freq Lock is set to Custom.
Crosstalk (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
		Auto Range	- On - Off	Enable or disable the auto input range.
	Input Range Input Range	Track 1st Ch	– Enable – Disable	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
Crosstalk				Refer to "Bar chart" on page 550 for the bar chart menu tree.

## **SMPTE IMD**

 Table A-22
 Measurement settings > SMPTE IMD menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Waveform	- SMPTE 1:1 - SMPTE 4:1 - SMPTE 10:1		Select the waveform type.
	Output			Select the output channel.
SMPTE IMD (Signal Generation)		Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Upper Freq		Set the upper frequency value.
	Waveform Config	Lower Freq		Set the lower frequency value.
		Amplitude		Set the amplitude value.
		DC Offset		Set the DC offset value.
	Freq Lock	Gen Lock Custom		Select the searching method for the upper and lower frequencies.
	Upper Freq			Set the upper fundamental frequency value. This setting is only available when Freq Lock is set to Custom.
	Lower Freq			Set the lower fundamental frequency value. This setting is only available when Freq Lock is set to Custom.
SMPTE IMD (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
		Auto Range	- On - Off	Enable or disable the auto input range.
	Input Range	Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
SMPTE Ratio				Refer to "Bar chart" on page 550 for the bar chart menu tree.

## DFD IMD

 Table A-23
 Measurement settings > DFD IMD menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Waveform	- IEC60118 - IEC60268		Select the waveform type.
	Output			Select the output channel.
DFD IMD		Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
(Signal Generation)		Upper Freq		Set the upper frequency value.
	Waveform Config	Center Freq		Set the center frequency value.
		Diff Freq		Set the difference frequency value.
		Amplitude		Set the amplitude value.
		DC Offset		Set the DC offset value.
	DFD order	- 2nd - 3rd		Select the distortion order to be measured.
DFD IMD (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
		Auto Range	- On - Off	Enable or disable the auto input range.
	Input Range	Track 1st Ch	– Enable – Disable	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
DFD Ratio				Refer to "Bar chart" on page 550 for the bar chart menu tree.

# Multitone analyzer

 Table A-24
 Measurement settings > Multitone Analyzer menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Output			Select the output channel.
	Waveform Config	Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Amplitude		Set the total amplitude value.
		Start Freq		Set the lowest frequency in the multitone waveform.
		Stop Freq		Set the highest frequency in the multitone waveform.
		Freq Spacing	<ul><li>Linear</li><li>Log</li><li>Custom</li></ul>	Select the frequency spacing between the tones.
		Tone Count		Set the number of signal frequency components.
Multitone (Signal Generation)		Length	- 1024 - 2048 - 4096 - 8192 - 16384 - 32768 - 65536	Select the waveform length value.
	Tones Config	Apply		Apply the multitone after it has been customized.
	· ·	Optimize		Optimize the multitone.
		Amplitude Dist	- Zero	Set the phase of all tones to 0 degrees.
		Phase Dist	<ul><li>Zero</li><li>Random</li></ul>	Select the phase distribution of all tones in degrees.
			Frequency	Set the frequency value.
			Amplitude	Set the amplitude value.
			Phase	Set the phase value.
		Edit Tones	Add Above	Add a tone above the selected tone.
			Add Below	Add a tone below the selected tone.
			Remove	Remove the selected tone.
			Clear All	Remove all the tones in the list.
		Active Channel		Set the active channel for the absolute amplitude for each tone to be displayed in a table.
Multitone (Signal Analysis)	Input Range	Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
(Signal Analysis)		Voltage Range		Set the input voltage range.

 Table A-24
 Measurement settings > Multitone Analyzer menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
<ul><li>Spectrum</li><li>Waveform</li><li>Level</li><li>Gain</li></ul>				Refer to " <b>Graph</b> " on page 551 for the graph menu tree.
<ul><li>Max Tone Level</li><li>Min Tone Level</li><li>TD+N Level</li><li>TD+N Ratio</li><li>Tone Level</li></ul>				Refer to "Bar chart" on page 550 for the bar chart menu tree.

# Stepped frequency sweep

 Table A-25
 Measurement settings > Stepped Frequency Sweep menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Output			Select the output channel.
		Start		Set the start value for the sweep parameter.
		Stop		Set the stop value for the sweep parameter.
		Spacing		Select Log, Linear, or Custom for the sweep spacing.
		Points		Set the number of sweep points.
		Step Size		Set the step size for linear spacing. This setting is only available when spacing is set to Linear.
		Dwell Time		Set the delay between the sweep points.
			Point No	Set the point number.
			Point Value	Set the point value.
	Sweep Config		Insert Point Above	Insert a point above the selected point.
		Edit Points	Insert Point Below	Insert a point below the selected point.
Stepped Frequency			Remove Point	Remove the selected point.
Sweep (Signal Generation)			Clear	Clear all points.
(Signal Generation)			Reverse Order	Reverse the order of the points.
			Sort	Sort the points in ascending order.
				Load points from a file.
			Load Points	Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
				Save the points to a file.
			Save Points	Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
		Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
	Waveform Config	Amplitude		Set the amplitude value.
		DC Offset		Set the DC offset value.
	Ref Channel			Set the reference channel number.
	Harmonics	- All - 2 to 9		Select the harmonics count to be used in the THD ratio and THD level results.

 Table A-25
 Measurement settings > Stepped Frequency Sweep menu tree description (continued)

Tab	Level 1	Level 2	evel 3 Description
Stepped Frequency Sweep	Ref Channel	- CH1 - CH2 - CH3 - CH4	Select the reference channel.
	Wrap Phase	- On - Off	Enable or disable the wrap phase.
	Harmonics	- ALL - 2 - 3 - 4 - 5 - 6 - 7 - 8 - 9	Select the harmonics counts to be used.
	nal Analysis)  LPF	- None - 2 kHz - 3 kHz - 5 kHz - 8 kHz - 10 kHz - 15 kHz - 20 kHz - 22 kHz - 30 kHz - 40 kHz - 50 kHz - 80 kHz - Custom	Select the low-pass filter.
	НРГ	- None - 15 Hz - 20 Hz - 22 Hz - 30 Hz - 50 Hz - 70 Hz - 100 Hz - 200 Hz - 300 Hz - 400 Hz - Custom	Select the high-pass filter.

 Table A-25
 Measurement settings > Stepped Frequency Sweep menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
	Weighting	- None - A - CCIR 1k - CCIR 2k - CCITT - C-Message - Custom		Select the weighting filter.
	Deemphasis	– None – 50 μs – 75 μs – Custom		Select the de-emphasis filter.
Stepped Frequency	Notch Filter	<ul><li>HP8903B</li><li>Custom Notch</li><li>Center Freq</li><li>Bandwidth</li></ul>		Select the notch filter.
Sweep (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
	Input Range	Auto Range	- On - Off	Enable or disable the auto input range.
		Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
- AC Level - Gain - Phase - THD Ratio - THD Level - THD+N Ratio - THD+N Level - SINAD				Refer to " <b>Graph</b> " on page 551 for the graph menu tree.

# SMPTE frequency sweep

 Table A-26
 Measurement settings > SMPTE Frequency Sweep menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Waveform	- SMPTE 1:1 - SMPTE 4:1 - SMPTE 10:1		Select the waveform type.
	Output			Select the output channel.
		Swept	<ul><li>Upper Freq</li><li>Lowe Freq</li></ul>	Select the sweep parameter.
		Start		Set the start value for the sweep parameter.
		Stop		Set the stop value for the sweep parameter.
		Spacing		Select Log, Linear, or Custom for the sweep spacing.
		Points		Set the number of sweep points.
		Step Size		Set the step size for linear spacing. This setting is only available when spacing is set to Linear.
		Dwell Time		Set the delay between the sweep points.
		Edit Points	Point No	Set the point number.
	Sweep Config		Point Value	Set the point value.
SMPTE Frequency Sweep			Insert Point Above	Insert a point above the selected point.
(Signal Generation)			Insert Point Below	Insert a point below the selected point.
			Remove Point	Remove the selected point.
			Clear	Clear all points.
			Reverse Order	Reverse the order of the points.
			Sort	Sort the points in ascending order.
			Load Points	Load points from a file.  Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
		Edit Points		Save the points to a file.
			Save Points	Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
		Track 1st Ch	- Enable - Disable	Enable or disable the tracking of the first channel.
	Warneston O. C.	Upper Freq		Set the upper frequency value.
	Waveform Config	Lower Freq		Set the lower frequency value.
		Amplitude		Set the amplitude value.
		DC Offset		Set the DC offset value.

 Table A-26
 Measurement settings > SMPTE Frequency Sweep menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
SMPTE Frequency Sweep (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
	Input Range	Auto Range	- On - Off	Enable or disable the auto input range.
		Track 1st Ch	– Enable – Disable	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
SMPTE Ratio				Refer to " <b>Graph</b> " on page 551 for the graph menu tree.

# DFD frequency sweep

 Table A-27
 Measurement settings > DFD Frequency Sweep menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Waveform	- IEC60118 - IEC60268		Select the waveform type.
	Output			Select the output channel.
		Swept	<ul><li>Upper Freq</li><li>Lower Freq</li></ul>	Select the sweep parameter.
		Start		Set the start value for the sweep parameter.
		Stop		Set the stop value for the sweep parameter.
		Spacing		Select Log, Linear, or Custom for the sweep spacing.
		Points		Set the number of sweep points.
		Step Size		Set the step size for linear spacing. This setting is only available when spacing is set to Linear.
		Dwell Time		Set the delay between the sweep points.
	Sweep Config		Point No	Set the point number.
		Edit Points	Point Value	Set the point value.
DED Francisco Corea			Insert Point Above	Insert a point above the selected point.
DFD Frequency Sweep (Signal Generation)			Insert Point Below	Insert a point below the selected point.
			Remove Point	Remove the selected point.
			Clear	Clear all points.
			Reverse Order	Reverse the order of the points.
			Sort	Sort the points in ascending order.
			Load Points	Load points from a file.  Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
	Sweep Config	Edit Points	Save Points	Save the points to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
		Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Upper Freq		Set the upper frequency value.
	Waveform Config	Diff Freq		Set the difference frequency value.
		Amplitude		Set the amplitude value.
		DC Offset		Set the DC offset value.

 Table A-27
 Measurement settings > DFD Frequency Sweep menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
	DFD order	<ul><li>2nd</li><li>3rd</li></ul>		Select the distortion product order to be measured.
DFD Frequency Sweep (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
		Auto Range	- On - Off	Enable or disable the auto input range.
	Input Range	Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
DFD Ratio				Refer to " <b>Graph</b> " on page 551 for the graph menu tree.

# External frequency sweep

 Table A-28
 Measurement settings > External Frequency Sweep menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Instrument	<ul><li>Keysight 33220A</li><li>Keysight 33250A</li><li>Keysight 33500A</li><li>Keysight 33600A</li><li>Other</li></ul>		Select the instrument model.
	GPIB Address	- 0 to 30		Select the GPIB address.
	Init Instrument	- On - Off		Enable or disable the U8903B to send SCPI commands to initialize the connected signal generator.
	Init SCPI	– Edit – Import		Set the SCPI commands that initialize the connected instrument. You can set the SCPI command directly or load from a file.
	Sweep SCPI	– Edit – Import		Set the sweep SCPI commands that initialize the connected instrument. You can set the SCPI command directly or load from a file.
		Start		Set the start value for the sweep parameter.
		Stop		Set the stop value for the sweep parameter.
Fishers I Francisco		Spacing		Select Log, Linear, or Custom for the sweep spacing.
External Frequency Sweep		Points		Set the number of sweep points.
(Signal Generation)		Step Size		Set the step size for linear spacing. This setting is only available when spacing is set to Linear.
		Dwell Time		Set the delay between the sweep points.
			Point No	Set the point number.
			Point Value	Set the point value.
	Sweep Config		Insert Point Above	Insert a point above the selected point.
			Insert Point Below	Insert a point below the selected point.
			Remove Point	Remove the selected point.
			Clear	Clear all points.
		Edit Points	Reverse Order	Reverse the order of the points.
			Sort	Sort the points in ascending order.
			Load Points	Load points from a file.  Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
			Save Points	Save the points to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.

 Table A-28
 Measurement settings > External Frequency Sweep menu tree description (continued)

Tab	Level 1	Level 2 Level 3	Description
	Ref Channel	- CH1 to CH8	Select the reference channel number. The phase of each channel is measured against the reference channel. The phase result for the reference channel should always be displayed zero.
	Harmonics	- All - 2 to 9	Select the harmonics count to be used in the THD ratio and THD level results.
	LPF	- None - 2 kHz - 3 kHz - 5 kHz - 8 kHz - 10 kHz - 15 kHz - 20 kHz - 22 kHz - 30 kHz - 40 kHz - 50 kHz - 80 kHz - Custom	Select the low-pass filter.
External Frequency Sweep (Signal Analysis)	НРБ	- None - 15 Hz - 20 Hz - 22 Hz - 30 Hz - 50 Hz - 70 Hz - 100 Hz - 200 Hz - 300 Hz - 400 Hz - Custom	Select the high-pass filter.
	Weighting	- None - A - CCIR 1k - CCIR 2k - CCITT - C-Message - Custom	Select the weighting filter.
	Deemphasis	- None - 50 μs - 75 μs - Custom	Select the de-emphasis filter.

 Table A-28
 Measurement settings > External Frequency Sweep menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
		HP8903B	– On – Off	Enable or disable the HP8903B mode.
	Notch Filter	Custom Notch	– On – Off	Enable or disable the custom notch.
	Noton Filter	Center Freq		Set the center frequency value. This is only applicable when custom notch is enabled.
		Bandwidth		Set the bandwidth value. This is only applicable when custom notch is enabled.
Stepped Frequency Sweep (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
		Auto Range	- On - Off	Enable or disable the auto input range.
	Input Range	Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel
		Voltage Range		Set the input voltage range.
- AC Level - Gain - Phase - THD Ratio - THD Level - THD+N Ratio				Refer to " <b>Graph</b> " on page <mark>551</mark> for the graph menu tree.

- THD+N Level
- SINAD

# Stepped level sweep

 Table A-29
 Measurement settings > Stepped Level Sweep menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Waveform	<ul><li>Sine</li><li>Arbitrary</li></ul>		Select the waveform type.
	Output			Select the output channel.
		Start		Set the start value for the sweep parameter.
		Stop		Set the stop value for the sweep parameter.
		Spacing		Select Log, Linear, or Custom for the sweep spacing.
		Points		Set the number of sweep points.
		Step Size		Set the step size for linear spacing. This setting is only available when spacing is set to Linear.
		Dwell Time		Set the delay between the sweep points.
	Sweep Config		Point No	Set the point number.
			Point Value	Set the point value.
Stepped Level Sweep			Insert Point Above	Insert a point above the selected point.
(Signal Generation)			Insert Point Below	Insert a point below the selected point.
		5 III D	Remove Point	Remove the selected point.
		Edit Points	Clear	Clear all points.
			Reverse Order	Reverse the order of the points.
			Sort	Sort the points in ascending order.
			Load Points	Load points from a file. Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
	Sweep Config	Edit Points	Save Points	Save the points to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
		Track 1st Ch	– Enable – Disable	Enable or disable the tracking of the first channel.
	Waveform Config	Frequency		Set the frequency value.
		DC Offset		Set the DC offset value.

 Table A-29
 Measurement settings > Stepped Level Sweep menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>		Select the searching method for the fundamental frequency.
	Fund Freq			Set the fundamental frequency value. This setting is only available when Freq Lock is set to Custom.
	LPF	- None - 2 kHz - 3 kHz - 5 kHz - 8 kHz - 10 kHz - 15 kHz - 20 kHz - 22 kHz - 30 kHz - 40 kHz - 50 kHz - 80 kHz - 80 kHz		Select the low-pass filter.
Stepped Level Sweep (Signal Analysis)	НРБ	- None - 15 Hz - 20 Hz - 22 Hz - 30 Hz - 50 Hz - 70 Hz - 100 Hz - 300 Hz - 400 Hz - Custom		Select the high-pass filter.
	Weighting	- None - A - CCIR 1k - CCIR 2k - CCITT - C-Message - Custom		Select the weighting filter.
	Deemphasis	- None - 50 μs - 75 μs - Custom		Select the de-emphasis filter.

 Table A-29
 Measurement settings > Stepped Level Sweep menu tree description (continued)

		·	·	
Tab	Level 1	Level 2	Level 3	Description
Stepped Level Sweep (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
	Input Range	Auto Range	- On - Off	Enable or disable the auto input range.
		Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
- AC Level - Gain - THD Ratio - THD Level - THD Ratio Vs Measu - THD Level Vs Measu - THD+N ratio - THD+N Ratio Vs Me - THD+N Ratio Vs Me - THD+N Level Vs Me - SINAD	ured Amplitude easured Amplitude			Refer to " <b>Graph</b> " on page <mark>551</mark> for the graph menu tree.

# SMPTE level sweep

 Table A-30
 Measurement settings > SMPTE Level Sweep menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Waveform	- SMPTE 1:1 - SMPTE 4:1 - SMPTE 10:1		Select the waveform type.
	Output			Select the output channel.
		Start		Set the start value for the sweep parameter.
		Stop		Set the stop value for the sweep parameter.
	Sweep Config	Spacing		Select Log, Linear, or Custom for the sweep spacing.
		Points		Set the number of sweep points.
		Step Size		Set the step size for linear spacing. This setting is only available when spacing is set to Linear.
		Dwell Time		Set the delay between the sweep points.
			Point No	Set the point number.
		Edit Points	Point Value	Set the point value.
CMPTE Lavel Covers			Insert Point Above	Insert a point above the selected point.
SMPTE Level Sweep (Signal Generation)			Insert Point Below	Insert a point below the selected point.
	Sweep Config		Remove Point	Remove the selected point.
	Sweep Coming		Clear	Clear all points.
			Reverse Order	Reverse the order of the points.
			Sort	Sort the points in ascending order.
				Load points from a file.
			Load Points	Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
				Save the points to a file.
			Save Points	Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
		Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
	Waveform Config	Upper Freq		Set the upper frequency value.
		Lower Freq		Set the lower frequency value.
		DC Offset		Set the DC offset value.

 Table A-30
 Measurement settings > SMPTE Level Sweep menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
	Freq Lock	- Gen Lock - Custom		Select the searching method for the upper and lower frequencies.
	Upper Freq			Set the upper fundamental frequency value. This setting is only available when Freq Lock is set to Custom.
	Lower Freq			Set the lower fundamental frequency value. This setting is only available when Freq Lock is set to Custom.
SMPTE Level Sweep (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
		Auto Range	- On - Off	Enable or disable the auto input range.
	Input Range	Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
- SMPTE Ratio - SMPTE Ratio Vs Me	asured Amplitude			Refer to " <b>Graph</b> " on page 551 for the graph menu tree.

# DFD level sweep

 Table A-31
 Measurement settings > DFD Level Sweep menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Waveform	- IEC60118 - IEC60268		Select the waveform type.
	Output			Select the output channel.
	Sweep Config	Start		Set the start value for the sweep parameter.
		Stop		Set the stop value for the sweep parameter.
		Spacing		Select Log, Linear, or Custom for the sweep spacing.
		Points		Set the number of sweep points.
		Step Size		Set the step size for linear spacing. This setting is only available when spacing is set to Linear.
		Dwell Time		Set the delay between the sweep points.
			Point No	Set the point number.
	Sweep Config	Edit Points	Point Value	Set the point value.
			Insert Point Above	Insert a point above the selected point.
DFD Level Sweep			Insert Point Below	Insert a point below the selected point.
(Signal Generation)			Remove Point	Remove the selected point.
			Clear	Clear all points.
			Reverse Order	Reverse the order of the points.
			Sort	Sort the points in ascending order.
			Load Points	Load points from a file.
				Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
				Save the points to a file.
			Save Points	Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
		Track 1st Ch	- Enable - Disable	Enable or disable the tracking of the first channel.
	Waveform Config	Upper Freq		Set the upper frequency value.
		Diff Freq		Set the difference frequency value.
		DC Offset		Set the DC offset value.

 Table A-31
 Measurement settings > DFD Level Sweep menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
	DFD order	– 2nd – 3rd		Select the distortion product order to be measured.
DFD Level Sweep (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
	Input Range	Auto Range	– On – Off	Enable or disable the auto input range.
		Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
<ul><li>DFD Ratio</li><li>DFD Ratio Vs Mea</li></ul>	sured Amplitude	Refer to " <b>Graph</b> " on page 551 for the graph menu tree.		

# DC level sweep

 Table A-32
 Measurement settings > DC Level Sweep menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Output			Select the output channel.
		Start		Set the start value for the sweep parameter.
	Sweep Config	Stop		Set the stop value for the sweep parameter.
	onesp coming	Spacing		Select Log, Linear, or Custom for the sweep spacing.
		Points		Set the number of sweep points.
		Step Size		Set the step size for linear spacing. This setting is only available when spacing is set to Linear.
		Dwell Time		Set the delay between the sweep points.
			Point No	Set the point number.
DC Level Sweep			Point Value	Set the point value.
(Signal Generation)			Insert Point Above	Insert a point above the selected point.
			Insert Point Below	Insert a point below the selected point.
	Sweep Config		Remove Point	Remove the selected point.
			Clear	Clear all points.
		Edit Points	Reverse Order	Reverse the order of the points.
			Sort	Sort the points in ascending order.
			Load Points	Load points from a file.  Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
			Save Points	Save the points to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
DC Level Sweep (Signal Analysis)	LPF	- None - 2 kHz - 3 kHz - 5 kHz - 8 kHz - 10 kHz - 15 kHz - 20 kHz - 22 kHz - 30 kHz - 40 kHz - 50 kHz - 80 kHz - Custom		Select the low-pass filter.

 Table A-32
 Measurement settings > DC Level Sweep menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
	HPF	- None - 15 Hz - 20 Hz - 22 Hz - 30 Hz - 50 Hz - 70 Hz - 100 Hz - 200 Hz - 300 Hz - 400 Hz - Custom		Select the high-pass filter.
	Weighting	- None - A - CCIR 1k - CCIR 2k - CCITT - C-Message - Custom		Select the weighting filter.
DC Level Sweep (Signal Analysis)	Deemphasis	- None - 50 μs - 75 μs - Custom		Select the de-emphasis filter.
	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
		Auto Range	- On - Off	Enable or disable the auto input range.
	Input Range	Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
DC Level				Refer to " <b>Graph</b> " on page 551 for the graph menu tree.

# Receiver sensitivity

 Table A-33
 Measurement settings > Receiver Sensitivity menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Instrument	<ul><li>Keysight E4438C</li><li>Other</li></ul>		Select the signal generator model.
	GPIB address			Set the GPIB address for the connected signal generator.
	Start Power			Set the sweep start RF power.
	Stop Power			Set the sweep stop RF power.
	Step Size			Set the step size.
	Dwell Time			Set the delay between each measured SINAD in seconds.
	Init Instrument	- On - Off		Enable or disable the U8903B to send SCPI commands to initialize the connected signal generator.
				Set the RF signal output frequency.
Receiver Sensitivity (Signal Generation)	FM Frequency			This setting is only available if Instrument is set to Keysight E4438C and the Init Instrument is enabled.
				Set the RF signal frequency modulation deviation.
	FM Deviation			This setting is only available if Instrument is set to Keysight E4438C and the Init Instrument is enabled.
				Set the RF signal internal frequency modulation rate.
	FM Rate			This setting is only available if Instrument is set to Keysight E4438C and the Init Instrument is enabled
	Init SCPI	– Edit		Set the SCPI commands that initialize the connected signal generator. You can set the SCPI command directly or load from a file.
		- Import		This setting is only available if Instrument is set to Other and the Init Instrument is enabled.
	Output Power SCPI			Set the SCPI command that adjusts the RF power of the connected signal generator.
	Meas Channel			Set the measured channel number.
	Target SINAD			Set the target SINAD value measured from the Meas Channel.
Receiver Sensitivity	Min 1st Value			Set the minimum first value.
(Signal Analysis)	Stop Condition	<ul><li>Until End</li><li>On Target</li></ul>		Select the stop condition.
	Freq Lock	- Auto - Custom		Select the searching method for the fundamental frequency.

 Table A-33
 Measurement settings > Receiver Sensitivity menu tree description (continued)

Tab	Level 1	Level 2 Level 3	Description
	Fund Freq		Set the fundamental frequency value. This setting is only available when Freq Lock is set to Custom.
	LPF	- None - 2 kHz - 3 kHz - 5 kHz - 8 kHz - 10 kHz - 15 kHz - 20 kHz - 22 kHz - 30 kHz - 40 kHz - 50 kHz - 80 kHz - Custom	Select the low-pass filter.
Receiver Sensitivity (Signal Analysis)	HPF	- None - 15 Hz - 20 Hz - 22 Hz - 30 Hz - 50 Hz - 70 Hz - 100 Hz - 200 Hz - 300 Hz - 400 Hz - Custom	Select the high-pass filter.
	Weighting	- None - A - CCIR 1k - CCIR 2k - CCITT - C-Message - Custom	Select the weighting filter.
	Deemphasis	– None – 50 μs – 75 μs – Custom	Select the de-emphasis filter.

 Table A-33
 Measurement settings > Receiver Sensitivity menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
		HP8903B	– On – Off	Enable or disable the HP8903B notch filter mode.
	Notch Filter	Custom Notch	- On - Off	Enable or disable custom notch filter.
		Center Freq		Set the center frequency value. This is only available when the Custom Notch is enabled.
		Bandwidth		Set the bandwidth value. This is only available when the Custom Notch is enabled.
	Mov Average			Set the number of measurement readings to be used for the average calculation.
Receiver Sensitivity (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
	Input Range	Auto Range	– On – Off	Enable or disable the auto input range.
		Track 1st Ch	– Enable – Disable	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
SINAD Vs RF Power				Refer to " <b>Graph</b> " on page 551 for the graph menu tree.

## External level sweep

 Table A-34
 Measurement settings > External Level Sweep menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Instrument	<ul><li>Keysight 33220A</li><li>Keysight 33250A</li><li>Keysight 33500A</li><li>Keysight 33600A</li><li>Other</li></ul>		Select the instrument model.
	GPIB Address	- 0 to 30		Select the GPIB address.
	Init Instrument	- On - Off		Enable or disable the U8903B to send SCPI commands to initialize the connected signal generator.
	Init SCPI	– Edit – Import		Set the SCPI commands that initialize the connected instrument. You can set the SCPI command directly or load from a file.
	Sweep SCPI	– Edit – Import		Set the sweep SCPI commands that initialize the connected instrument. You can set the SCPI command directly or load from a file.
		Start		Set the start value for the sweep parameter.
		Stop		Set the stop value for the sweep parameter.
		Spacing		Select Log, Linear, or Custom for the sweep spacing.
Stepped Level Sweep (Signal Generation)		Points		Set the number of sweep points.
(orginal donoration)		Step Size		Set the step size for linear spacing. This setting is only available when spacing is set to Linear.
		Dwell Time		Set the delay between the sweep points.
			Point No	Set the point number.
			Point Value	Set the point value.
	Sweep Config		Insert Point Above	Insert a point above the selected point.
			Insert Point Below	Insert a point below the selected point.
		E.W. B	Remove Point	Remove the selected point.
		Edit Points	Clear	Clear all points.
			Reverse Order	Reverse the order of the points.
			Sort	Sort the points in ascending order.
			Load Points	Load points from a file.  Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
		Edit Points	Save Points	Save the points to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.

 Table A-34
 Measurement settings > External Level Sweep menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>		Select the searching method for the fundamental frequency.
	Fund Freq			Set the fundamental frequency value. This setting is only available when Freq Lock is set to Custom.
	LPF	- None - 2 kHz - 3 kHz - 5 kHz - 8 kHz - 10 kHz - 15 kHz - 20 kHz - 22 kHz - 30 kHz - 40 kHz - 50 kHz - 80 kHz - Custom		Select the low-pass filter.
Stepped Level Sweep (Signal Analysis)	НРЕ	<ul> <li>None</li> <li>15 Hz</li> <li>20 Hz</li> <li>22 Hz</li> <li>30 Hz</li> <li>50 Hz</li> <li>70 Hz</li> <li>100 Hz</li> <li>200 Hz</li> <li>300 Hz</li> <li>400 Hz</li> <li>Custom</li> </ul>		Select the high-pass filter.
	Weighting	<ul> <li>None</li> <li>A</li> <li>CCIR 1k</li> <li>CCIR 2k</li> <li>CCITT</li> <li>C-Message</li> <li>Custom</li> </ul>		Select the weighting filter.
	Deemphasis	- None - 50 μs - 75 μs - Custom		Select the de-emphasis filter.

#### A Appendixes

 Table A-34
 Measurement settings > External Level Sweep menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
		HP8903B	- On - Off	Enable or disable the HP8903B mode.
	Notch Filter	Custom Notch	- On - Off	Enable or disable the custom notch.
		Center Freq		Set the center frequency value. This is only applicable when custom notch is enabled.
		Bandwidth		Set the bandwidth value. This is only applicable when custom notch is enabled.
Stepped Level Sweep (Signal Analysis)	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
		Auto Range	- On - Off	Enable or disable the auto input range.
	Input Range	Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.
- AC Level - Gain - THD Ratio - THD Level - THD Ratio Vs Measu - THD Level Vs Measu - THD+N ratio - THD+N Ratio Vs Me - THD+N Ratio Vs Me	ured Amplitude asured Amplitude			Refer to " <b>Graph</b> " on page 551 for the graph menu tree.

- SINAD

### Measurement recorder

 Table A-35
 Measurement settings > Measurement Recorder menu tree description

Tab	Level 1	Level 2	Level 3	Description
	Waveform	<ul><li>Sine</li><li>Variable Phase</li><li>Square</li><li>Arbitrary</li></ul>		Select the waveform type.
Measurement	Output			Select the output channel.
Recorder (Signal Generation)		Track 1st Ch	– Enable – Disable	Enable or disable the tracking of the first channel.
	Waveform Config	Frequency		Set the frequency value.
		Amplitude		Set the amplitude value.
		DC Offset		Set the DC offset value.
	Duration			Set the length of the measurement record,
	Ref Channel			Set the reference channel number.
	Wrap Phase	- On - Off		Enable or disable the wrap phase.
	Freq Lock	<ul><li>Auto</li><li>Gen Lock</li><li>Custom</li></ul>		Select the searching method for the fundamental frequency.
	Fund Freq			Set the fundamental frequency value. This setting is only available when Freq Lock is set to Custom.
Measurement Recorder (Signal Analysis)	LPF	- None - 2 kHz - 3 kHz - 5 kHz - 8 kHz - 10 kHz - 15 kHz - 20 kHz - 22 kHz - 30 kHz - 40 kHz - 50 kHz - 80 kHz - Custom		Select the low-pass filter.

#### A Appendixes

 Table A-35
 Measurement settings > Measurement Recorder menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
	HPF	- None - 15 Hz - 20 Hz - 22 Hz - 30 Hz - 50 Hz - 70 Hz - 100 Hz - 200 Hz - 300 Hz - 400 Hz - Custom		Select the high-pass filter.
	Weighting	- None - A - CCIR 1k - CCIR 2k - CCITT - C-Message - Custom		Select the weighting filter.
Measurement Recorder (Signal Analysis)	Deemphasis	<ul><li>None</li><li>50 μs</li><li>75 μs</li><li>Custom</li></ul>		Select the de-emphasis filter.
	Sample Size	- 2048 - 4096 - 8192 - 16384 - 32768 - 65536 - 131072 - 262144 - 524288 - 1M - 2M		Select the number of samples to be acquired for the measurement.
		Auto Range	- On - Off	Enable or disable the auto input range.
	Input Range	Track 1st Ch	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the tracking of the first channel.
		Voltage Range		Set the input voltage range.

 Table A-35
 Measurement settings > Measurement Recorder menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
- AC Level - Gain, Phase - THD+N Ratio - THD+N Level - DC Level - Frequency - SINAD				Refer to " <b>Graph</b> " on page 551 for the graph menu tree.

## Voice Quality

 Table A-36
 Measurement settings > Voice Quality menu tree description

Tab	Level 1	Level 2	Level 3	Description
		Standard	POLQA	Select POLQA as the test standard.
	Test Config	Bandwidth	<ul><li>Narrowband</li><li>Wideband</li><li>Super Wideband (POLQA standard)</li></ul>	Select Narrowband or Super Wideband as the bandwidth type for POLQA standard.
		Level Align		Enable or disable the automatic level alignment. This setting is only applicable for POLQA standard.
		Source	- File - Generator	Select the reference source to be used.
		Reference File	<ul><li>Playback File</li><li>Recorded</li><li>Custom File</li></ul>	Use the Reference File as the comparison file if the Source is set to File. Use the Reference File option as the comparison file if the Source is set to Generator.
Voice Quality		Playback File		This setting is only available when the Reference Source is set to Generator. Set the playback file to be used as the comparison file if Reference File is set to Playback File. Set the playback file to be recorded as the comparison file if Reference File is set to Recorded. Set the playback file to be recorded and the Custom File to be used as the comparison file if Reference File is set to Custom.
	Reference	Custom File		Set the custom file to be used as the comparison file. This setting is only available when Reference Source is set to Generator and Reference File is set to Custom.
	кететенсе	Rec Channel		Set the channel number to be recorded from. This setting is only available when Source is set to Generator and Reference File is set to Recorded.
		Rec Duration		Set the recording duration to be recorded. This setting is only available when Source is set to Generator and Reference File is set to Recorded.
		Rec Step	– Auto – Delay – Prompt	Set the start recording type. This setting is only available when Source is set to Generator and Reference File is set to Recorded.
		Rec Delay		Set the delay time before a recording is performed. This setting is only available when Source is set to Generator, Reference File is set to Recorded, and Rec Step is set to Delay.
		Rec to File	- Yes - No	Enable or disable exporting the recording function. This setting is only available when <b>Source</b> is set to Generator and <b>Reference File</b> is set to Recorded.

 Table A-36
 Measurement settings > Voice Quality menu tree description (continued)

Tab	Level 1	Level 2	Level 3	Description
	Reference	Rec File		Set the file path for the exported recording destination. This setting is only available when Source is set to Generator, Reference File is set to Recorded, and Rec To File is set to Yes.
	Degraded	Source	– File – Analyzer	Select file or analyzer as the reference source.
		Degraded File		Set the degraded file as the comparison file. This setting is only available when Source is set to File.
		Rec Channel		Set the channel number to be recorded from. This setting is only available when Source is set to Analyzer.
		Rec Duration		Set the recording duration to be recorded. This setting is only available when Source is set to Analyzer.
Voice Quality		Rec Step	<ul><li>Auto</li><li>Delay</li><li>Prompt</li></ul>	Set the start recording type. This setting is only available when Source is set to Analyzer.
		Rec Delay		Set the delay time before a recording is performed. This setting is only available when Source is set to Analyzer and Rec Step is set to Delay.
		Rec to File	- Yes - No	Enable or disable exporting the recording function. This setting is only available when Source is set to Analyzer.
		Rec File		Set the file path for the exported recording destination. Set the file path for the exported recording destination. This setting is only available when Source is set to Analyzer and Rec To File is set to Yes.
	IO Config	Output Level		Set the output level value.
	Show/Hide POLQA License			Show or hide the POLQA license information.
- MOS-LQO - Levels				Refer to " <b>Bar chart</b> " on page 550 for the bar chart menu tree.

### Measurement results

### Bar chart

 Table A-37
 Measurement Results > Bar chart menu tree description

Level 1	Level 2	Level 3	Description
Enable			Enable or disable the selected result tab.
Add Result			Add a new result tab to the measurement.
Delete Result			Delete the selected result tab from the measurement.
Save Data			Save the selected result data to a CSV file format in the internal storage or external USB flash storage.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
	Track 1st	- Enable - Disable	Enable or disable the tracking of the first trace.
nda Coda	Lower limit	- Enable - Disable	Enable or disable the lower limit.
Edit Limits	Upper limit	- Enable - Disable	Enable or disable the upper limit.
	Lower limit		Set the lower limit value.
	Upper limit		Set the upper limit value.
	Title		Edit the bar chart title.
		Auto Scale	Enable or disable the X-axis autoscale. On Off
Graph Properties	V avia	Unit	Select the X-axis unit type.
	X-axis Left Right	Left	Set the X-axis left value. This setting is only available when the Autoscale is disabled.
		Right	Set the X-axis right value. This setting is only available when the Autoscale is disabled.

### Graph

 Table A-38
 Measurement results > Graph menu tree description

Level 1	Level 2	Level 3	Description
Enable			Enable or disable the selected result tab.
Add Result			Add a new result tab to the measurement.
Delete Result			Delete the selected result tab from the measurement.
Save Data			Save the selected result data to a CSV file format in the internal storage or external USB flash storage.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.
Trace	- CH1 to CH8 - POLQA - Reference - Degraded - Error	Select the trace channel number or the trace type (POLQA)	
	Limit Type	- Upper - Lower	Select the limit type.
	Track 1st	– Enable – Disable	Enable or disable the tracking of the first trace.
Edit Limits	Limit	<ul><li>Enable</li><li>Disable</li></ul>	Enable or disable the limit.
		Point No	Set the point number.
		X	Set the X-axis value for the selected point number.
		Υ	Set the Y-axis value for the selected point number.
		Add Point	Add a limit point.
	Points	Remove Point	Remove the selected limit point.
		Clear Points	Clear all the limit points.
		Load Points	Load limit points from a file.  Refer to "Appendix 13: Recall Menu Tree" on page 496 for the recall menu tree.
Edit Limits	Points	Save Points	Save the selected limit points to a file.  Refer to "Appendix 12: Save Menu Tree" on page 495 for the save menu tree.

#### A Appendixes

 Table A-38
 Measurement results > Graph menu tree description (continued)

Level 1	Level 2	Level 3	Description
	Title		Edit the graph title.
		Auto Scale	Enable or disable the X-axis autoscale. - On - Off
		Spacing	Select the X-axis spacing type Log - Linear
		Unit	Select the X-axis unit type.
	X-axis	Left	Set the X-axis left value.  This setting is only available when the X-axis autoscale is disabled.
		Right	Set the X-axis right value. This setting is only available when the X-axis autoscale is disabled.
		Center	Set the X-axis center value.  This setting is only available when the X-axis autoscale is disabled.
		Span	Set the X-axis span value. This setting is only available when the X-axis autoscale is disabled.
	Y-axis	Auto Scale	Enable or disable the Y-axis autoscale. - On - Off
Graph Properties		Spacing	Select the Y-axis spacing type Log - Linear
		Unit	Select the Y-axis unit type.
	Y-axis	Тор	Set the Y-axis bottom value.  This setting is only available when the Y-axis autoscale is disabled.
	1-axi3	Bottom	Set the Y-axis top value.  This setting is only available when the Y-axis autoscale is disabled.
		Trace	Select the analyzer trace channel CH1 to CH8
		State	Enable or disable the trace.  - On - Off
	Trace	Color	Select the trace color.  - Yellow  - Cyan  - White  - Pink  - Green  - Orange  - Red  - Purple

 Table A-38
 Measurement results > Graph menu tree description (continued)

Level 1	Level 2	Level 3	Description
	Title		Edit the graph title.
	Auto Scale	- On - Off	Enable or disable the X-axis autoscale.
Graph Properties	Left		Set the X-axis left edge value.
(This is only applicable			This setting is only available when the Autoscale is disabled.
for POLQA measurement	Right	Set the X-axis right edge value.	
MOS-LQO and Delay	Rigiit		This setting is only available when the Autoscale is disabled.
results)	Тор		Set the X-axis top edge value.
			This setting is only available when the Autoscale is disabled.
	Bottom		Set the Y-axis bottom edge value.
			This setting is only available when the Autoscale is disabled.

# Appendix 15: HP8903B Menu Tree

Table A-39 HP8903B menu tree description

Level 1	Level 2	Level 3	Description
	Function	- AC LEVEL - SINAD - DISTN - DC LEVEL - SIG / NOISE - DISTN LEVEL	Select the HP8903B measurement mode.
	LP Filter	<ul><li>None</li><li>30 kHz</li><li>80 kHz</li></ul>	Select the HP8903B measurement low-pass filter value.
Measurement	HP/W Filter		Select the HP8903B high-pass or weighting filter value.  The filter selection depends on the left and right filters set at HP8903B Config.
	Reference		Set the reference value to be compared with the measured value in ratio mode.  Changing the reference value will enable the measurement ratio mode.
	Ratio	- On - Off	Enable or disable the HP8903B measurement ratio mode.
	Format	- Log - Lin	Select the HP8903B measurement format type.
	Frequency		Set the HP8903B generator frequency value.  Changing the frequency value will also set the step parameter to frequency.
Generator	Amplitude		Set the HP8903B generator amplitude value.  Changing the amplitude value will also set the step parameter to amplitude.
	Step Param	<ul><li>Frequency</li><li>Amplitude</li></ul>	Select the HP8903B generator step parameter type.
	Freq. Step		Set the HP8903B generator frequency step value.  This setting is only available when the step parameter is set to frequency.
Generator	Amp. Step		Set the HP8903B generator amplitude step value. This setting is only available when the step parameter is set to amplitude.
	x 10		Multiply the current parameter step value by 10.
	÷ 10		Divide the current parameter step value by 10.
	Freq. Start		Set the HP8903B sweep frequency start value.
Sweep	Freq. Stop		Set the HP8903B sweep frequency stop value.
2.100р	Sweep Status	- On - Off	Start or abort sweeping in the HP8903B mode.

Table A-39 HP8903B menu tree description (continued)

Level 1	Level 2	Level 3	Description
Code List	SINAD)  - Display Source Sett  - Re-enter Ratio Mod  - Signal-to-Noise Me  - SINAD and Signal-t Resolution  - Sweep Resolution ( sweep)  - Display Level in Wa  - Read Display to SC  - GPIB Address (SCP	DC Level only) r Response (except in ings e assurement Delay o-Noise Display maximum 255 points/ tts Pl only) est Condition (SCPI only)	Select the HP8903B special function codes list to be displayed.
SPCL			Set the HP8903B special function code except those indicated as SCPI only and execute the special function.

## Appendix 16: Units of the Measurement Function Returned Values

### Analog analyzer

 Table A-40
 Analog analyzer units of the meaurement function returned values

Measurement function	Unit	Default
Frequency	– Hz – ΔHz	Hz
AC voltage THD+N level THD level	- dBg - dBm - dBr - dBu - dBV - W - V - ΔV - dBSPL - x	V
DC voltage	- V - ΔV - x	V
THD+N ratio SINAD THD ratio SMPTE IMD DFD IEC 60118 (2nd order) DFD IEC 60118 (3rd order) DFD IEC 60268 (2nd order) DFD IEC 60268 (3rd order) SNR SNR (Fast) Crosstalk	- dB - ΔdB - % - x	dB
Phase	0	0

## Digital analyzer

 Table A-41
 Digital analyzer units of the meaurement function returned values

Measurement function	Unit	Default
Frequency	– Hz – ΔHz	Hz
AC voltage Max peak value Min peak value	- V - dBFS - dBr - dBu - dBV - FFS - x - pctFS - LSB - Hex - Dec	FFS
DC voltage	- FFS - V - LSB - Hex - Dec - x	FFS
THD+N level THD level	- V - dBFS - dBr - dBu - dBV - FFS - x - pctFS - LSB - Hex - Dec	dBFS
THD+N ratio SINAD SMPTE IMD DFD IEC 60118 (2nd order) DFD IEC 60118 (3rd order) DFD IEC 60268 (2nd order) DFD IEC 60268 (3rd order) Crosstalk (channel driven)	- dB - ΔdB - % - x	dB
Phase	0	0

### Bluetooth analyzer

 Table A-42
 Bluetooth analyzer units of the meaurement function returned values

Measurement function	Unit	Default
Frequency	- Hz	Hz
AC voltage	- \( \Delta Hz \) - \( \V \) - \( dBFS \) - \( dBr \) - \( dBu \) - \( dBV \) - \( FFS \) - \( \x \) - \( pctFS \) - \( LSB \) - \( Hex \) - \( Dec \) - \( FFS \)	FFS
DC voltage	- V - LSB - Hex - Dec - x	FFS
THD+N level THD level	- V - dBFS - dBr - dBu - dBV - FFS - x - pctFS - LSB - Hex - Dec	dBFS
THD+N ratio SINAD SMPTE IMD DFD IEC 60118 (2nd order) DFD IEC 60118 (3rd order) DFD IEC 60268 (2nd order) DFD IEC 60268 (3rd order) Crosstalk (channel driven) SNR (Fast)	- dB - ΔdB - % - x	dB
Phase	0	0

The units can be computed using the following formulas.

Table A-43 Unit conversion formula

Unit	Formula	Description
ΔΗz	f – f <sub>ref</sub>	f <sub>ref</sub> = Reference frequency
dB	20 × log <sub>10</sub> (ratio)	-
$\Delta dB$	(ratio) - R <sub>ref</sub>	R <sub>ref</sub> = Reference ratio
dBg	$20 \times \log_{10} \left( \frac{v_{rms}^2}{v_{gen}} \right)$	V <sub>gen</sub> = Amplitude of the generator signal for a corresponding channel
dBm	$10 \times \log_{10} \left( \frac{1000  V_{rms}^{2}}{Z_{ref}} \right)$	Z <sub>ref</sub> = Reference impedance
dBr	$20 \times \log_{10} \left( \frac{v_{rms}^2}{v_{ref}} \right)$	V <sub>ref</sub> = Reference level
dBu	$20 \times \log_{10} \left( \frac{V_{rms}}{\sqrt{0.6}} \right)$	-
dBv	$20 \times \log_{10}(V_{rms})$	-
W	$\frac{V}{Z_{ref}}$	Z <sub>ref</sub> = Reference impedance <sup>[a]</sup>
ΔV	V - V <sub>ref</sub>	V <sub>ref</sub> = Reference level <sup>[b]</sup>
	$\frac{V}{V_{ref}}$	V <sub>ref</sub> = Reference level <sup>[b]</sup>
Х	or	
	Ratio (in %) R <sub>ref</sub> (in %)	R <sub>ref</sub> = Reference ratio
%	100 × (ratio)	-

<sup>[</sup>a] When the Vrms measurement unit is changed to Watt or dBm, the reference impedance setting will be used for the power level calculation. The reference impedance refers to the circuitry impedance or load impedance connected to the analyzer when calculating power level. Note that in a loopback test with no load impedance, the measured voltage value will be twice the expected value as there is no voltage divider present. This will return a power measurement greater than 6.02 dB if a load is present.

<sup>[</sup>b] Reference level is defined as a user-entered or a captured value from the current reading as a relative level for the subsequent measurement reading. It can be set to delta, linear, or log scale.

#### A Appendixes

### Units for digital audio measurements

Table A-44 Units for digital audio measurements

Unit	Description
FFS	Fractional of Full Scale
%FS	Percent of Full Scale
dBFS	Decibels relative to Full Scale
LSB	Least Significant Bit
FS/Vrms	Ratio between cross-domain input and output levels measurements (analog input and digital output)
Vrms/FS	Ratio between cross-domain input and output levels measurements (digital input and analog output)

## Appendix 17: Arbitrary File Format

The U8903B arbitrary waveform mode allows you to load an arbitrary file or a wave file. To load waveform file for the analog arbitrary waveform, press the **Waveform Config** > **Recall** softkeys. The Recall menu page will be displayed to allow you to select the file to be loaded. Once you load the waveform file, press the **Info** softkey in the Waveform Config menu page to display the arbitrary waveform information as shown in **Figure A-1**.



Figure A-1 Analog Generator > Waveform Config > Info menu page (arbitrary waveform)

You may configure the arbitrary file format (\*.arb) with the parameters as shown below.

```
#Vpeak: 2
#DC Offset: 0
#Points:
0
-0.2
-0.4
...
```

The allowable range of values for each arbitrary file parameters are as shown in **Table A-45**.

 Table A-45
 Allowable range for arbitrary file parameters

Parameter	Range	
Vpeak	<ul> <li>0 to 22.6 Vp (Balanced output connection)</li> <li>0 to 11.3 Vp (Unbalanced or common output connection)</li> </ul>	
DC Offset	-11.3 V to 11.3 V	
Points	32 to 8000000 points	

#### NOTE

When the DC offset and amplitude are added together, it must not exceed the maximum voltage for the current output connection type:

- For the balanced output connection, (Vpeak + |DC offset|) must be within 0 V and 22.6 V.
- For the unbalanced and common mode output connections, (Vpeak + |DC offset|) must be within 0 V and 11.3 V.

The sampling rate for the arbitrary waveform is fixed at 192 kHz. Thus, the interval between samples is 1/192000 s.

For the following arbitrary file example, the highest numerical number of the sample points, which is 6, is output with the Vpeak. The other samples are level-controlled according to their ratio to the maximum.

```
#Vpeak: 2
#DC offset: -3
#Points:
0
-1
-1.5
-1
0
2
4
6
4
2
...
```

Any of the following conditions may cause an error or warning message to appear.

- Unable to load the sample points, as the points may not be a valid float.
- Summation of the Vpeak and DC offset exceeds the maximum voltage for the current output connection type.
- Invalid Vpeak and DC offset values.
- Total of sample points less than 32.
- The arbitrary file does not exist.

## Appendix 18: User-defined Filter File Format

Selecting Custom in either the low-pass, high-pass, or weighting filters menu enables you to load a user-defined filter file.

The available user-defined filter types are IIR (Infinite Impulse Response) and FIR (Finite Impulse Response). You need to specify the coefficients or sections as well as group delay for the respective filter type. Use the following examples to configure the filter file format. The file is saved in the \*.juf format.

Example of an FIR filter file format is as follows.

```
#Type: FIR

#Delay: 250

#Coefficients:

0.00023394

-1.69E-05

-1.61E-05

-1.57E-05

...
```

The coefficients of the FIR filter are described as follows.

```
0.00023394 //A[0]
-1.69E-05 //A[1]
-1.61E-05 //A[2]
-1.57E-05 //A[3]
```

NOTE

The FIR filter transfer function, H(z), is defined as:

$$H(z) = A[0] + A[1]z^{-1} + A[2]z^{-2} + A[3]z^{-3} + ...$$

where z = complex variable

Example of an IIR filter file format is as follows.

```
#Type: IIR
#Delay: 250
#Sections:
0.02188812
1
-1.852219
0.9397715
2
1
0.02067037
-1.749171
0.8318526
1
2
1
```

The coefficients of the IIR filter are described as follows.

```
0.02188812
               //Section 1: Gain1
               //Section 1: A1[0]
1
-1.852219
               //Section 1: A1[1]
0.9397715
               //Section 1: A1[2]
               //Section 1: B1[0]
1
2
               //Section 1: B1[1]
1
               //Section 1: B1[2]
               //Section 2: Gain2
[0.02067037
1
               //Section 2: A2[0]
-1.749171
               //Section 2: A2[1]
0.8318526
               //Section 2: A2[2]
1
               //Section 2: B2[0]
2
               //Section 2: B2[1]
1
               //Section 2: B2[2]
```

where Ax = Denominator and Bx = Numerator

NOTE

The IIR filter transfer function, H(z), is defined as:

$$H(z) = \prod_{X=1}^{N} Gain_{X} \left( \frac{B_{X}[0] + B_{X}[1]z^{-1} + B_{X}[2]z^{-1}}{A_{X}[0] + A_{X}[1]z^{-1} + A_{X}[2]z^{-1}} \right)$$

where z = complex variable, N = number of sections, x = section number

You may set up to 256 coefficients for the FIR filter type, and up to 36 sections for the IIR filter. The number of FIR coefficients must not be less than four, while the minimum number of sections allowed for IIR is one (seven coefficients). The delay is specified in the form of samples and within the range of 0 to 65535.

# Appendix 19: DSI Input and Output Interface

The DSI input and output interface uses the 25-pin female D-SUB connector. The pins assignment for the connector are shown in **Figure A-2** and **Table A-46**.

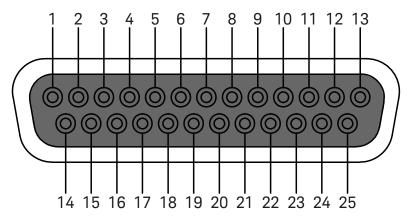



Figure A-2 25-pin female D-SUB connector

Table A-46 25-pin female D-SUB connector pins assignment

Pin no.	Label	Direction	Description
1	Master Clk Out	Out	Master clock out for digital audio
2	GND	-	Digital ground
3	DSI Gen Data-Out	Out	Digital generator DSI data output
4	DSI Gen FS-InOut	In/Out	DSI generator DSI frame sync
5	DSI Gen CLK-InOut	In/Out	DSI generator DSI bit clock
6	-	-	Unused
7	+5.0 V	-	+5.0 V supply with over-current protection
8	+3.3 V	-	+3.3 V supply with over-current protection
9	DSI Ana Data-In	In	Digital analyzer DSI data input
10	DSI Ana FS-InOut	In/Out	Digital analyzer DSI frame sync
11	DSI Ana Clk-InOut	In/Out	Digital analyzer DSI bit clock
12	GND	-	Digital ground
13	Sync Clock Out	Out	Sync clock output for AES3/SPDIF and DSI
14 - 25	GND	-	Digital ground

# Appendix 20: Digital System Clock Distribution Block Diagram

The digital system clock distribution block diagram is shown in Figure A-3.

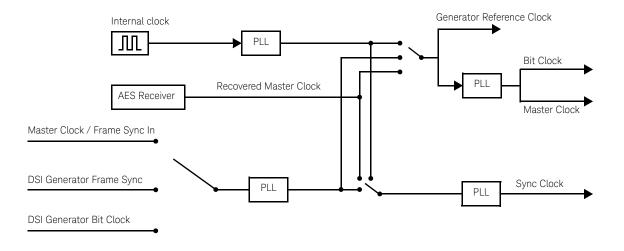

PLL = Phase-Locked Loop

Figure A-3 Digital system clock distribution block diagram

## Appendix 21: Typical DSI Test Configurations

The following sections describe the possible serial audio input and output configurations.

NOTE

Refer to "**Appendix 19: DSI Input and Output Interface**" on page 566 for more information on the pins assignment.

### Configuration 1

In this configuration, the DUT uses the U8903B internal reference clock source as the reference clock. The DUT receives the clock references and data from the U8903B.

Press on the FUNCTION panel to switch between audio generator or audio analyzer mode, and press on the FUNCTION panel to switch to digital interface.

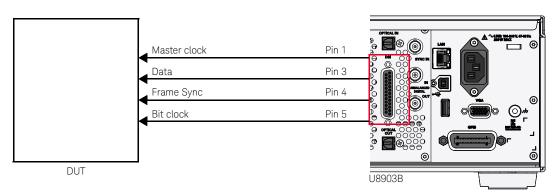


Figure A-4 DSI test configuration 1

- 1 At the digital generator, press DSI Config > Master Clock, and select On to enable the master clock.
- 2 At the digital generator, press **DSI Config > Sample Rate**, and set the sample rate.
- 3 At the digital generator, press DSI Config > Word Length, and set the word length. The bit clock rate is determined by the multiplication of the sample rate, word length, and number of channels.
- 4 At the digital generator, press **DSI Config > Multiplier**, and select the multiplier. The master clock rate is determined by the multiplication of the sample rate and multiplier.
- 5 At the digital generator, press **DSI Config > Fsync Polarity**, and select either **Rising** or **Falling** as the edge synchronization to the leading edge of the frame clock.

### Configuration 2

In this configuration, the DUT uses an external master clock as the reference clock. The U8903B receives the data, frame sync, and bit clock from the DUT. A typical application for this configuration is analog to digital converter (ADC) evaluation.

Press on the FUNCTION panel to switch between audio generator or audio analyzer mode, and press on the FUNCTION panel to switch to digital interface.

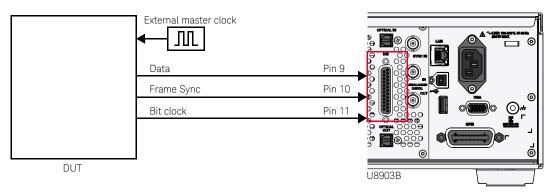


Figure A-5 DSI test configuration 2

- 1 At the digital analyzer, press **Input Config > Connector**, and select **DSI** as the digital analyzer input type.
- 2 At the digital generator, press DSI Config > Master Clock, and select Off to turn off the master clock.
- **3** At the digital analyzer, press **DSI Config > W/Bclk Dir**, and select **In** as the word and bit clock direction.

#### Α

### Configuration 3

In this configuration, an external master clock is used to synchronize the DUT and U8903B. A phase-locked loop (PLL) is used in the U8903B to lock the incoming master clock and regenerate the frame sync and bit clock. Data will be clocked in on each bit clock.

Press Analyzer on the FUNCTION panel to switch between audio generator or audio analyzer mode, and press Interface on the FUNCTION panel to switch to digital interface.

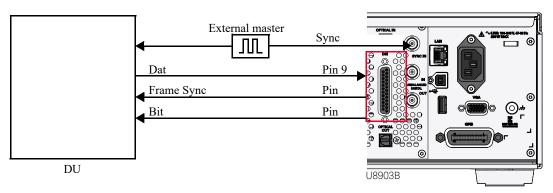


Figure A-6 DSI test configuration 3

- 1 At the digital analyzer, press Input Config > Connector, and select DSI as the digital analyzer input type.
- 2 At the digital generator, press DSI Config > Master Clock, and select Off to turn off the master clock.
- 3 At the digital analyzer, press DSI Config > W/Bclk Dir, and select Out as the word and bit clock direction.
- 4 At the digital generator, press DSI Config > Multiplier, and set the multiplier to determine the sampling rate.

### Configuration 4

This configuration is similar to configuration 2, except that the DUT uses the U8903B internal reference clock source as the reference clock.

Press on the FUNCTION panel to switch between audio generator or audio analyzer mode, and press on the FUNCTION panel to switch to digital interface.

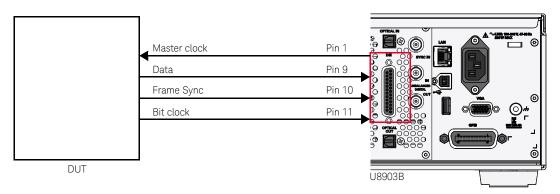


Figure A-7 DSI test configuration 4

- 1 At the digital analyzer, press **Input Config > Connector**, and select **DSI** as the digital analyzer input type.
- 2 At the digital generator, press **DSI Config > Master Clock**, and select **On** to turn on the master clock.
- **3** At the digital analyzer, press **DSI Config > W/Bclk Dir**, and select **In** as the word and bit clock direction.
- 4 At the digital generator, press **DSI Config > Sample Rate**, and set the sample rate.
- **5** At the digital generator, press **DSI Config > Multiplier**, and set the multiplier to determine the master clock rate.

#### A Appendixes

#### Configuration 5

This configuration is similar to configuration 3, except that the DUT uses the U8903B internal reference clock source as the reference clock.

Press Press on the FUNCTION panel to switch between audio generator or audio analyzer mode, and press on the FUNCTION panel to switch to digital interface.

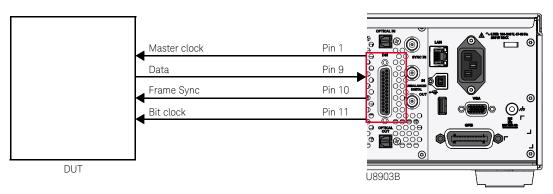


Figure A-8 DSI test configuration 5

- 1 Press Input Config > Connector, and select DSI as the digital analyzer input type.
- 2 At the digital generator, press DSI Config > Master Clock, and select On to turn on the master clock.
- 3 Press DSI Config > W/Bclk Dir, and select Out as the word and bit clock direction.

## Appendix 22: U8903B Configuration Examples

Example 1: Generating a sine waveform with the digital generator and measuring its voltage with the digital analyzer

In this example, you will learn how to generate a simple sine waveform from the U8903B digital generator and measure its voltage using the U8903B digital analyzer.

To generate a sine waveform from the digital unbalanced output with a frequency of 1 kHz and amplitude of 1 FFS, perform the following steps.

- 1 Connect the digital generator unbalanced output to the digital analyzer unbalanced input channel in the rear panel using a BNC cable.
- 2 Press Generator on the FUNCTION panel to switch to audio generator mode, and press on the FUNCTION panel to switch to digital interface.
- **3** Press **Waveform**, and select **Sine** as the waveform type.
- 4 Press Output Config > Connector, and select Unbalanced as the digital generator output type.
- 5 Press Output Config > AES Output, and enable the AES output.
- **6** Press **Waveform Config > Frequency**, and set the frequency to 1 kHz.
- 7 Press Waveform Config > Amplitude, and set the amplitude to 1 FFS.
- 8 Press of to start the signal generation on the digital generator channel 1.
- **9** After you have completed the steps above, the U8903B display should look as follows.



Figure A-9 Digital generator sine waveform generation

To measure the voltage of the sine waveform, perform the following steps.

- Press Generator on the FUNCTION panel to switch to audio analyzer mode, and press terface on the FUNCTION panel to switch to digital interface.
- Press **Analysis Mode**, and select **Standard** as the digital analyzer analysis mode.
- Press Input Config > Connector, and select Unbalanced as the digital analyzer input type.
- 4 Press Functions > Function No., and select 1.
- 5 Press Functions > Function 1, and select Frequency as the first measurement function.
- 6 Press Functions > Function No., and select 2.
- Press Functions > Function 2, and select AC Voltage as the second measurement function.
- Press to start the signal measurement on the digital analyzer channel 1.

You should now obtain an AC voltage reading of 1 FFS for the generated sine waveform, within the tolerance as stated in "Characteristics and Specifications" on page 419. The U8903B display should look as follows.

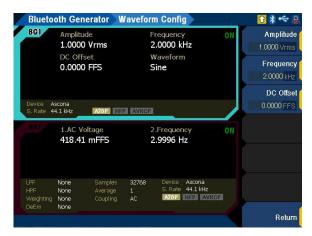


Figure A-10 Digital analyzer voltage measurement

Example 2: Establishing a connection to a *Bluetooth* device and generating a sine waveform with the *Bluetooth* generator.

In this example, you will learn how to establish an A2DP profile connection to a *Bluetooth* device and generate a sine waveform with the U8903B's *Bluetooth* generator.

- 1 Connect the *Bluetooth* RF1 port to the DUT RF port using an RF cable.
- 2 Press on the FUNCTION panel to switch to audio generator mode, and press on the FUNCTION panel to switch to *Bluetooth* interface.
- **3** Press **Waveform**, and select **Sine** as the waveform type.
- 4 Press Link Config > Common Settings, and select Profile as A2DP SRC, HFP AG, AVRCP TRGT.
- 5 Press Link Config > Device Scan, and select Device Search to scan for all discoverable Bluetooth device.
- 6 Press Link Config > Device Action, and select the *Bluetooth* device to be paired. Press Pair Device to begin the pairing procedure.
- 7 Press Link Config > Device Action, and select Profile Connection as Connect A2DP to connect using the A2DP profile.
- **8** Press **Link Config > Device Action**, and select **A2DP Operation** as Open Media Connection to establish the media connection and start the audio streaming from the *Bluetooth* card to the connected device.
- **9** Press **Waveform Config > Frequency**, and set the frequency to 1 Vrms.
- 10 Press Waveform Config > Amplitude, and set the amplitude to 2 FFS.
- 11 Press of off to start the signal generation on the *Bluetooth* generator channel 1.
- **12** After you have completed the steps above, the U8903B display should look as follows.



**Figure A-11** Bluetooth generator sine waveform generation

Example 3: Generating a multitone waveform with the analog generator and viewing the multitone spectrum in the graph

In this example, you will learn how to generate a multitone waveform from the U8903B analog generator and view the multitone spectrum in the U8903B graph.

- 1 Connect the analog generator unbalanced output to the analog analyzer unbalanced input channel using a BNC cable.
- 2 Press Generator on the FUNCTION panel to switch to audio generator mode, and press on the FUNCTION panel to switch to analog interface.
- **3** Press **Waveform**, and select **Multitone** as the waveform type.
- 4 Press Output Config > Connector, and select Unbalanced as the analog generator output type.
- **5** Press **Waveform Config > Amplitude**, and set the amplitude to 1 Vrms.
- **6** Press **Waveform Config > Start Freg**, and set the start frequency to 937.5 Hz.
- 7 Press Waveform Config > Stop Freq, and set the stop frequency to 5.0625 kHz.
- 8 Press of to start the signal generation on the analog generator channel 1.
- 9 Press Generator on the FUNCTION panel to switch to audio analyzer mode, and press on the FUNCTION panel to switch to analog interface.
- 10 Press Input Config > Connector, and select UnBal as the analog analyzer input type.
- 11 Press on to start the signal measurement on the analog analyzer channel 1.
- 12 After you have completed the steps above, the U8903B display should look as follows.



Figure A-12 Analog analyer multitone waveform measurement

To view the multitone spectrum in the U8903B graph, perform the following steps.

- 1 Press on the FUNCTION panel to access the graph analysis mode.
- 2 Press on to enable the graph analysis mode.
- 3 Use the final function to select and measure the two-tone spectrum amplitude.
- 4 An example of the U8903B graph display is shown as follows.

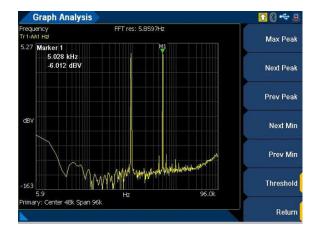


Figure A-13 Graph analysis for multitone spectrum

# Example 4: Running the Test Sequence App for the multitone analyzer measurement

In this example, you will learn how to use the Test Sequence App for the multitone analyzer measurement in the U8903B.

- 1 Press menu to switch to Test Sequence App mode.
- 2 In the Project tab, press **Add Measurement**, and select **Multitone Analyzer** to be added for Test 1.
- **3** Press **Settings** to configure the multitone analyzer. For example, you can press **Waveform Config** to set the amplitude, and press **Tones Config** to set the start and stop frequency.
- 4 The multitone measurement results can be displayed in a graph (Spectrum, Waveform, Level, and Gain) and in a bar chart (Max Tone Level, Min Tone Level, TD+N Level, TD+N Ratio, and Tone Level). Refer to "Multitone analyzer" on page 345 for more information.
- 5 Press on and select Start Test App to begin the test sequence.
- **6** Depending on the settings parameter set for the multitone analyzer, the result will return as PASS or FAIL and is shown as follows.



Figure A-14 Test Sequence App result for multitone analyzer

7 Select the Report tab to view the test sequence results in the U8903B display. You can also save the result file as a .docx file type by pressing **Save**.



Figure A-15 Test Sequence App report for multitone analyzer

#### Example 5: Configuring the system clock reference settings

In this example, you will learn how to configure the U8903B system clock reference settings.

To configure the system clock reference source to external Master clock in with word length of 24 and multiplier of 192, perform the following steps.

- 1 Connect the external Master clock signal to the Sync In connector in the rear panel using a BNC cable.
- 2 Press on the FUNCTION panel to switch to audio generator mode, and press on the FUNCTION panel to switch to digital interface.
- 3 Press Output Config > Ref Clock > Source, and select External as the reference clock source.
- 4 Press Output Config > Ref Clock > Type, and select MCLK to set the external clock source type as Master clock.
- Fress Output Config > Ref Clock > Word Length, and set the Master clock word length to 24 [1][2]
- 6 Press Output Config > Ref Clock > Multiplier, and set the Master clock multiplier to 192. [3]

<sup>[1]</sup> Sampling rate constrains the master clock in word length values. Refer to "Appendix 25: Word Length, Sampling Rate, and Multiplier for Master Clock In" on page 591 for the range of word length that can be set with different sampling rate.

<sup>[2]</sup> When setting the word length, the error message, -221, "Settings conflict..." may be generated. This error message can be ignored as this is to notify that the word length or multiplier is auto adjusted to the nearest allowable value due to the settings conflict.

<sup>[3]</sup> Sampling rate and word length constrain the multiplier values. Refer to "Appendix 25: Word Length, Sampling Rate, and Multiplier for Master Clock In" on page 591 for the range of multiplier that can be set with different master clock in word length and sampling rate.

#### Example 6: Configuring the digital generator DSI output settings

In this example, you will learn how to configure the U8903B digital generator DSI output settings.

To configure the digital generator DSI output settings to DSP format, sampling rate of 192 kHz, word length of 24, and multiplier of 192, perform the following steps.

- 1 Press formation on the FUNCTION panel to switch to audio generator mode, and press on the FUNCTION panel to switch to digital interface.
- 2 Press **DSI Config > Format**, and select **DSP** as the DSI output format.
- 3 Press DSI Config > Sample Rate, and set the sampling rate to 192 kHz.
- 4 Press **DSI Config > Word Length**, and set the DSI word length to **24**. [1][2]
- **5** Press **DSI Config > Multiplier**, and set the DSI multiplier to **192**. [3]

<sup>[1]</sup> Sampling rate constrains the DSI word length values. Refer to "Appendix 24: Word Length, Sampling Rate, and Multiplier for DSI" on page 585 for the range of word length that can be set with different sampling rate.

<sup>[2]</sup> When setting the word length, the error message, -221, "Settings conflict..." may be generated. This error message can be ignored as this is to notify that the word length or multiplier is auto adjusted to the nearest allowable value due to the settings conflict.

<sup>[3]</sup> Sampling rate and word length constrain the multiplier values. Refer to "Appendix 24: Word Length, Sampling Rate, and Multiplier for DSI" on page 585 for the range of multiplier that can be set with different DSI word length and sampling rate.

# Appendix 23: Relationship between Digital Waveform Parameters and Channels

 Table A-47
 Relationship between digital waveform parameters and channels

Waveform	Parameter	Channel
	Frequency	Channel 1 and Channel 2 are the same
Sine	Amplitude	Channel 1 and Channel 2 can be different
	DC Offset	Channel 1 and Channel 2 are the same
	Frequency	Channel 1 and Channel 2 can be different
Stereo	Amplitude	Channel 1 and Channel 2 can be different
	DC Offset	Channel 1 and Channel 2 are the same
	Frequency	Channel 1 and Channel 2 are the same
Square	Amplitude	Channel 1 and Channel 2 can be different
	DC Offset	Channel 1 and Channel 2 are the same
	Frequency	Channel 1 and Channel 2 are the same
	Amplitude	Channel 1 and Channel 2 can be different
Sine burst	Burst On	Channel 1 and Channel 2 are the same
	Period	Channel 1 and Channel 2 are the same
	Low Level	Channel 1 and Channel 2 are the same
	Frequency	Channel 1 and Channel 2 are the same
Variable phase	Amplitude	Channel 1 and Channel 2 can be different
	Phase -> 1	Channel 1 and Channel 2 are the same
	Frequency 1	Channel 1 and Channel 2 are the same
	Frequency 2	Channel 1 and Channel 2 are the same
Dual	Amplitude	Channel 1 and Channel 2 are the same
	Ratio	Channel 1 and Channel 2 are the same
	DC Offset	Channel 1 and Channel 2 are the same
	Lower Frequency	Channel 1 and Channel 2 are the same
SMPTE IMD 1:1/ 4:1/ 10:1	Upper Frequency	Channel 1 and Channel 2 are the same
OWN 12 IWD 1.17 4.17 10.1	Amplitude	Channel 1 and Channel 2 are the same
	DC Offset	Channel 1 and Channel 2 are the same
	Difference Frequency	Channel 1 and Channel 2 are the same
DFD IEC 60118	Upper Frequency	Channel 1 and Channel 2 are the same
51512000110	Amplitude	Channel 1 and Channel 2 are the same
	DC Offset	Channel 1 and Channel 2 are the same
	Difference Frequency	Channel 1 and Channel 2 are the same
DFD IEC 60268	Center Frequency	Channel 1 and Channel 2 are the same
5.5.2000200	Amplitude	Channel 1 and Channel 2 are the same
	DC Offset	Channel 1 and Channel 2 are the same
Gaussian/Rectangular/	Amplitude	Channel 1 and Channel 2 can be different
Triangular/Pink	DC Offset	Channel 1 and Channel 2 are the same
Constant	Amplitude	Channel 1 and Channel 2 are the same

 Table A-47
 Relationship between digital waveform parameters and channels (continued)

Waveform	Parameter	Channel
	Amplitude	Channel 1 and Channel 2 can be different
	Start Frequency	Channel 1 and Channel 2 are the same
	Stop Frequency	Channel 1 and Channel 2 are the same
	Frequency Spacing	Channel 1 and Channel 2 are the same
Multitone	Count	Channel 1 and Channel 2 are the same
	Crest Factor	Channel 1 and Channel 2 can be different
	Tone Frequency	Channel 1 and Channel 2 are the same
	Tone Amplitude	Channel 1 and Channel 2 are the same
	Tone Phase	Channel 1 and Channel 2 are the same
Arhitron	Amplitude	Channel 1 and Channel 2 can be different
Arbitrary	DC Offset	Channel 1 and Channel 2 are the same

# Appendix 24: Word Length, Sampling Rate, and Multiplier for DSI

Table A-48 Word Length, Sampling Rate, and Multiplier for DSI

Sampling rate (kHz) <sup>[a]</sup>	Word length	Multiplier
400	8	128
400	9	72, 144
400	10	80, 160
400	11	88, 176
400	12	96, 192
400	13	104, 208
400	14	112, 224
400	15	120, 240
400	16	64, 128
400	17	68, 136
400	18	72, 144
400	19	76, 152
400	20	80, 160
400	21	84, 168
400	22	88, 176
400	23	92, 184
400	24	96, 192
400	25	100, 200
400	26	104, 208
400	27	108, 216
400	28	112, 224
400	29	116, 232
400	30	120, 240
400	31	124, 248
400	32	128
200	8	128, 256
200	9	72, 144, 288
200	10	80, 160, 320
200	11	88, 176, 352
200	12	96, 192, 384
200	13	104, 208, 416

 Table A-48
 Word Length, Sampling Rate, and Multiplier for DSI (continued)

Sampling rate (kHz) <sup>[a]</sup>	Word length	Multiplier
200	14	112, 224, 448
200	15	120, 240, 480
200	16	64, 128, 256
200	17	68, 136, 272
200	18	72, 144, 288
200	19	76, 152, 304
200	20	80, 160, 320
200	21	84, 168, 336
200	22	88, 176, 352
200	23	92, 184, 368
200	24	96, 192, 384
200	25	100, 200, 400
200	26	104, 208, 416
200	27	108, 216, 432
200	28	112, 224, 448
200	29	116, 232, 464
200	30	120, 240, 480
200	31	124, 248, 496
200	32	128, 256
100	8	128, 256, 512
100	9	72, 144, 288, 576
100	10	80, 160, 320, 640
100	11	88, 176, 352, 704
100	12	96, 192, 384, 768
100	13	104, 208, 416, 832
100	14	112, 224, 448, 896
100	15	120, 240, 480, 960
100	16	64, 128, 256, 512
100	17	68, 136, 272, 544
100	18	72, 144, 288, 576
100	19	76, 152, 304, 608
100	20	80, 160, 320, 640
100	21	84, 168, 336, 672

 Table A-48
 Word Length, Sampling Rate, and Multiplier for DSI (continued)

100         22         88,176,352,704           100         23         92,184,368,736           100         24         96,192,384,768           100         25         100,200,400,800           100         26         104,208,416,832           100         27         108,216,432,864           100         28         112,224,448,896           100         30         120,240,480,960           100         31         124,248,496,992           100         32         128,256,512,1024           50         8         128,256,512,1024           50         9         72,144,288,576           50         10         80,160,320,640           50         11         88,176,352,704           50         12         96,192,384,768           50         13         104,208,416,832           50         13         104,208,416,832           50         14         112,224,448,896           50         13         104,208,416,832           50         13         104,208,416,832           50         14         112,224,448,896           50         17         68,136,272,544           <	Sampling rate (kHz) <sup>[a]</sup>	Word length	Multiplier
100         24         96, 192, 384, 768           100         25         100, 200, 400, 800           100         26         104, 208, 416, 832           100         27         108, 216, 432, 864           100         28         112, 224, 448, 896           100         29         116, 232, 464, 928           100         30         120, 240, 480, 960           100         31         124, 248, 496, 992           100         32         128, 256, 512           50         8         128, 256, 512           50         9         72, 144, 288, 576           50         10         80, 160, 320, 640           50         11         88, 176, 352, 704           50         12         96, 192, 384, 768           50         13         104, 208, 416, 832           50         14         112, 224, 448, 896           50         15         120, 240, 480, 960           50         16         64, 128, 256, 512           50         17         68, 136, 272, 544           50         18         72, 144, 288, 576           50         19         76, 152, 304, 608           50         20	100	22	88, 176, 352, 704
100         25         100, 200, 400, 800           100         26         104, 208, 416, 832           100         27         108, 216, 432, 864           100         28         112, 224, 448, 896           100         29         116, 232, 464, 928           100         30         120, 240, 480, 960           100         31         124, 248, 496, 992           100         32         128, 256, 512           50         8         128, 256, 512, 1024           50         9         72, 144, 288, 576           50         10         80, 160, 320, 640           50         11         88, 176, 352, 704           50         12         96, 192, 384, 768           50         13         104, 208, 416, 832           50         13         104, 208, 416, 832           50         13         104, 208, 416, 832           50         14         112, 224, 448, 896           50         15         120, 240, 480, 960           50         16         64, 128, 256, 512           50         17         68, 136, 272, 544           50         18         72, 144, 288, 576           50         19	100	23	92, 184, 368, 736
100       26       104, 208, 416, 832         100       27       108, 216, 432, 864         100       28       112, 224, 448, 896         100       29       116, 232, 464, 928         100       30       120, 240, 480, 960         100       31       124, 248, 496, 992         100       32       128, 256, 512         50       8       128, 256, 512, 1024         50       9       72, 144, 288, 576         50       10       80, 160, 320, 640         50       11       88, 176, 352, 704         50       12       96, 192, 384, 768         50       13       104, 208, 416, 832         50       14       112, 224, 448, 896         50       15       120, 240, 480, 960         50       16       64, 128, 256, 512         50       16       64, 128, 256, 512         50       17       68, 136, 272, 544         50       18       72, 144, 288, 576         50       19       76, 152, 304, 608         50       20       80, 160, 320, 640         50       21       84, 168, 336, 672         50       22       88, 176, 352, 704 <td>100</td> <td>24</td> <td>96, 192, 384, 768</td>	100	24	96, 192, 384, 768
100       27       108, 216, 432, 864         100       28       112, 224, 448, 896         100       29       116, 232, 464, 928         100       30       120, 240, 480, 960         100       31       124, 248, 496, 992         100       32       128, 256, 512         50       8       128, 256, 512, 1024         50       9       72, 144, 288, 576         50       10       80, 160, 320, 640         50       11       88, 176, 352, 704         50       12       96, 192, 384, 768         50       13       104, 208, 416, 832         50       13       104, 208, 416, 832         50       14       112, 224, 448, 896         50       15       120, 240, 480, 960         50       16       64, 128, 256, 512         50       16       64, 128, 256, 512         50       17       68, 136, 272, 544         50       18       72, 144, 288, 576         50       18       72, 144, 288, 576         50       19       76, 152, 304, 608         50       20       80, 160, 320, 640         50       21       84, 168, 336, 672	100	25	100, 200, 400, 800
100       28       112, 224, 448, 896         100       29       116, 232, 464, 928         100       30       120, 240, 480, 960         100       31       124, 248, 496, 992         100       32       128, 256, 512         50       8       128, 256, 512, 1024         50       9       72, 144, 288, 576         50       10       80, 160, 320, 640         50       11       88, 176, 352, 704         50       12       96, 192, 384, 768         50       13       104, 208, 416, 832         50       13       104, 208, 416, 832         50       14       112, 224, 448, 896         50       15       120, 240, 480, 960         50       15       120, 240, 480, 960         50       16       64, 128, 256, 512         50       17       68, 136, 272, 544         50       18       72, 144, 288, 576         50       19       76, 152, 304, 608         50       20       80, 160, 320, 640         50       21       84, 168, 336, 672         50       22       88, 176, 352, 704         50       23       92, 184, 368, 736	100	26	104, 208, 416, 832
100       29       116,232,464,928         100       30       120,240,480,960         100       31       124,248,496,992         100       32       128,256,512         50       8       128,256,512,1024         50       9       72,144,288,576         50       10       80,160,320,640         50       11       88,176,352,704         50       12       96,192,384,768         50       13       104,208,416,832         50       13       104,208,416,832         50       14       112,224,448,896         50       15       120,240,480,960         50       16       64,128,256,512         50       17       68,136,272,544         50       18       72,144,288,576         50       19       76,152,304,608         50       20       80,160,320,640         50       21       84,168,336,672         50       21       84,168,336,672         50       22       88,176,352,704         50       23       92,184,368,736         50       24       96,192,384,768         50       25       100,200,400,800<	100	27	108, 216, 432, 864
100         30         120,240,480,960           100         31         124,248,496,992           100         32         128,256,512           50         8         128,256,512,1024           50         9         72,144,288,576           50         10         80,160,320,640           50         11         88,176,352,704           50         12         96,192,384,768           50         13         104,208,416,832           50         13         104,208,416,832           50         14         112,224,448,896           50         15         120,240,480,960           50         16         64,128,256,512           50         17         68,136,272,544           50         18         72,144,288,576           50         19         76,152,304,608           50         20         80,160,320,640           50         21         84,168,336,672           50         21         84,168,352,704           50         23         92,184,368,736           50         24         96,192,384,768           50         25         100,200,400,800           50	100	28	112, 224, 448, 896
100       31       124,248,496,992         100       32       128,256,512         50       8       128,256,512,1024         50       9       72,144,288,576         50       10       80,160,320,640         50       11       88,176,352,704         50       12       96,192,384,768         50       13       104,208,416,832         50       14       112,224,448,896         50       15       120,240,480,960         50       16       64,128,256,512         50       17       68,136,272,544         50       18       72,144,288,576         50       18       72,144,288,576         50       19       76,152,304,608         50       20       80,160,320,640         50       21       84,168,336,672         50       21       84,168,336,672         50       23       92,184,368,736         50       23       92,184,368,736         50       24       96,192,384,768         50       25       100,200,400,800         50       26       104,208,416,832         50       26       104,208,416,832 <td>100</td> <td>29</td> <td>116, 232, 464, 928</td>	100	29	116, 232, 464, 928
100       32       128, 256, 512         50       8       128, 256, 512, 1024         50       9       72, 144, 288, 576         50       10       80, 160, 320, 640         50       11       88, 176, 352, 704         50       12       96, 192, 384, 768         50       13       104, 208, 416, 832         50       14       112, 224, 448, 896         50       15       120, 240, 480, 960         50       16       64, 128, 256, 512         50       17       68, 136, 272, 544         50       18       72, 144, 288, 576         50       18       72, 144, 288, 576         50       19       76, 152, 304, 608         50       20       80, 160, 320, 640         50       21       84, 168, 336, 672         50       21       84, 168, 336, 672         50       23       92, 184, 368, 736         50       23       92, 184, 368, 736         50       24       96, 192, 384, 768         50       25       100, 200, 400, 800         50       26       104, 208, 416, 832         50       26       104, 208, 416, 832 <tr< td=""><td>100</td><td>30</td><td>120, 240, 480, 960</td></tr<>	100	30	120, 240, 480, 960
50       8       128,256,512,1024         50       9       72,144,288,576         50       10       80,160,320,640         50       11       88,176,352,704         50       12       96,192,384,768         50       13       104,208,416,832         50       14       112,224,448,896         50       15       120,240,480,960         50       16       64,128,256,512         50       17       68,136,272,544         50       18       72,144,288,576         50       19       76,152,304,608         50       20       80,160,320,640         50       21       84,168,336,672         50       21       84,168,336,672         50       23       92,184,368,736         50       24       96,192,384,768         50       24       96,192,384,768         50       25       100,200,400,800         50       26       104,208,416,832         50       27       108,216,432,864         50       28       112,224,448,896	100	31	124, 248, 496, 992
50       9       72,144,288,576         50       10       80,160,320,640         50       11       88,176,352,704         50       12       96,192,384,768         50       13       104,208,416,832         50       14       112,224,448,896         50       15       120,240,480,960         50       16       64,128,256,512         50       17       68,136,272,544         50       18       72,144,288,576         50       19       76,152,304,608         50       20       80,160,320,640         50       21       84,168,336,672         50       21       84,168,336,672         50       22       88,176,352,704         50       23       92,184,368,736         50       24       96,192,384,768         50       25       100,200,400,800         50       26       104,208,416,832         50       26       104,208,416,832         50       27       108,216,432,864         50       28       112,224,448,896	100	32	128, 256, 512
50       10       80,160,320,640         50       11       88,176,352,704         50       12       96,192,384,768         50       13       104,208,416,832         50       14       112,224,448,896         50       15       120,240,480,960         50       16       64,128,256,512         50       17       68,136,272,544         50       18       72,144,288,576         50       19       76,152,304,608         50       20       80,160,320,640         50       21       84,168,336,672         50       21       84,168,336,672         50       22       88,176,352,704         50       23       92,184,368,736         50       24       96,192,384,768         50       25       100,200,400,800         50       26       104,208,416,832         50       26       104,208,416,832         50       27       108,216,432,864         50       28       112,224,448,896	50	8	128, 256, 512, 1024
50       11       88, 176, 352, 704         50       12       96, 192, 384, 768         50       13       104, 208, 416, 832         50       14       112, 224, 448, 896         50       15       120, 240, 480, 960         50       16       64, 128, 256, 512         50       17       68, 136, 272, 544         50       18       72, 144, 288, 576         50       19       76, 152, 304, 608         50       20       80, 160, 320, 640         50       21       84, 168, 336, 672         50       22       88, 176, 352, 704         50       23       92, 184, 368, 736         50       24       96, 192, 384, 768         50       25       100, 200, 400, 800         50       26       104, 208, 416, 832         50       27       108, 216, 432, 864         50       28       112, 224, 448, 896	50	9	72, 144, 288, 576
50       12       96, 192, 384, 768         50       13       104, 208, 416, 832         50       14       112, 224, 448, 896         50       15       120, 240, 480, 960         50       16       64, 128, 256, 512         50       17       68, 136, 272, 544         50       18       72, 144, 288, 576         50       19       76, 152, 304, 608         50       20       80, 160, 320, 640         50       21       84, 168, 336, 672         50       22       88, 176, 352, 704         50       23       92, 184, 368, 736         50       23       92, 184, 368, 736         50       24       96, 192, 384, 768         50       25       100, 200, 400, 800         50       26       104, 208, 416, 832         50       26       104, 208, 416, 832         50       27       108, 216, 432, 864         50       28       112, 224, 448, 896	50	10	80, 160, 320, 640
50       13       104, 208, 416, 832         50       14       112, 224, 448, 896         50       15       120, 240, 480, 960         50       16       64, 128, 256, 512         50       17       68, 136, 272, 544         50       18       72, 144, 288, 576         50       19       76, 152, 304, 608         50       20       80, 160, 320, 640         50       21       84, 168, 336, 672         50       22       88, 176, 352, 704         50       23       92, 184, 368, 736         50       24       96, 192, 384, 768         50       24       96, 192, 384, 768         50       25       100, 200, 400, 800         50       26       104, 208, 416, 832         50       27       108, 216, 432, 864         50       28       112, 224, 448, 896	50	11	88, 176, 352, 704
50       14       112, 224, 448, 896         50       15       120, 240, 480, 960         50       16       64, 128, 256, 512         50       17       68, 136, 272, 544         50       18       72, 144, 288, 576         50       19       76, 152, 304, 608         50       20       80, 160, 320, 640         50       21       84, 168, 336, 672         50       22       88, 176, 352, 704         50       23       92, 184, 368, 736         50       24       96, 192, 384, 768         50       24       96, 192, 384, 768         50       25       100, 200, 400, 800         50       26       104, 208, 416, 832         50       27       108, 216, 432, 864         50       28       112, 224, 448, 896	50	12	96, 192, 384, 768
50       15       120, 240, 480, 960         50       16       64, 128, 256, 512         50       17       68, 136, 272, 544         50       18       72, 144, 288, 576         50       19       76, 152, 304, 608         50       20       80, 160, 320, 640         50       21       84, 168, 336, 672         50       22       88, 176, 352, 704         50       23       92, 184, 368, 736         50       24       96, 192, 384, 768         50       25       100, 200, 400, 800         50       26       104, 208, 416, 832         50       27       108, 216, 432, 864         50       28       112, 224, 448, 896	50	13	104, 208, 416, 832
50       16       64, 128, 256, 512         50       17       68, 136, 272, 544         50       18       72, 144, 288, 576         50       19       76, 152, 304, 608         50       20       80, 160, 320, 640         50       21       84, 168, 336, 672         50       22       88, 176, 352, 704         50       23       92, 184, 368, 736         50       24       96, 192, 384, 768         50       25       100, 200, 400, 800         50       26       104, 208, 416, 832         50       27       108, 216, 432, 864         50       28       112, 224, 448, 896	50	14	112, 224, 448, 896
50       17       68, 136, 272, 544         50       18       72, 144, 288, 576         50       19       76, 152, 304, 608         50       20       80, 160, 320, 640         50       21       84, 168, 336, 672         50       22       88, 176, 352, 704         50       23       92, 184, 368, 736         50       24       96, 192, 384, 768         50       25       100, 200, 400, 800         50       26       104, 208, 416, 832         50       27       108, 216, 432, 864         50       28       112, 224, 448, 896	50	15	120, 240, 480, 960
50       18       72,144,288,576         50       19       76,152,304,608         50       20       80,160,320,640         50       21       84,168,336,672         50       22       88,176,352,704         50       23       92,184,368,736         50       24       96,192,384,768         50       25       100,200,400,800         50       26       104,208,416,832         50       27       108,216,432,864         50       28       112,224,448,896	50	16	64, 128, 256, 512
50       19       76, 152, 304, 608         50       20       80, 160, 320, 640         50       21       84, 168, 336, 672         50       22       88, 176, 352, 704         50       23       92, 184, 368, 736         50       24       96, 192, 384, 768         50       25       100, 200, 400, 800         50       26       104, 208, 416, 832         50       27       108, 216, 432, 864         50       28       112, 224, 448, 896	50	17	68, 136, 272, 544
50       20       80, 160, 320, 640         50       21       84, 168, 336, 672         50       22       88, 176, 352, 704         50       23       92, 184, 368, 736         50       24       96, 192, 384, 768         50       25       100, 200, 400, 800         50       26       104, 208, 416, 832         50       27       108, 216, 432, 864         50       28       112, 224, 448, 896	50	18	72, 144, 288, 576
50       21       84, 168, 336, 672         50       22       88, 176, 352, 704         50       23       92, 184, 368, 736         50       24       96, 192, 384, 768         50       25       100, 200, 400, 800         50       26       104, 208, 416, 832         50       27       108, 216, 432, 864         50       28       112, 224, 448, 896	50	19	76, 152, 304, 608
50     22     88, 176, 352, 704       50     23     92, 184, 368, 736       50     24     96, 192, 384, 768       50     25     100, 200, 400, 800       50     26     104, 208, 416, 832       50     27     108, 216, 432, 864       50     28     112, 224, 448, 896	50	20	80, 160, 320, 640
50       23       92, 184, 368, 736         50       24       96, 192, 384, 768         50       25       100, 200, 400, 800         50       26       104, 208, 416, 832         50       27       108, 216, 432, 864         50       28       112, 224, 448, 896	50	21	84, 168, 336, 672
50     24     96, 192, 384, 768       50     25     100, 200, 400, 800       50     26     104, 208, 416, 832       50     27     108, 216, 432, 864       50     28     112, 224, 448, 896	50	22	88, 176, 352, 704
50     25     100, 200, 400, 800       50     26     104, 208, 416, 832       50     27     108, 216, 432, 864       50     28     112, 224, 448, 896	50	23	92, 184, 368, 736
50     26     104, 208, 416, 832       50     27     108, 216, 432, 864       50     28     112, 224, 448, 896	50	24	96, 192, 384, 768
50     27     108, 216, 432, 864       50     28     112, 224, 448, 896	50	25	100, 200, 400, 800
50 28 112, 224, 448, 896	50	26	104, 208, 416, 832
	50	27	108, 216, 432, 864
50 29 116, 232, 464, 928	50	28	112, 224, 448, 896
	50	29	116, 232, 464, 928

 Table A-48
 Word Length, Sampling Rate, and Multiplier for DSI (continued)

Sampling rate (kHz) <sup>[a]</sup>	Word length	Multiplier
50	30	120, 240, 480, 960
50	31	124, 248, 496, 992
50	32	128, 256, 512, 1024
25	8	128, 256, 512, 1024
25	9	72, 144, 288, 576
25	10	80, 160, 320, 640
25	11	88, 176, 352, 704
25	12	96, 192, 384, 768
25	13	104, 208, 416, 832
25	14	112, 224, 448, 896
25	15	120, 240, 480, 960
25	16	64, 128, 256, 512
25	17	68, 136, 272, 544
25	18	72, 144, 288, 576
25	19	76, 152, 304, 608
25	20	80, 160, 320, 640
25	21	84, 168, 336, 672
25	22	88, 176, 352, 704
25	23	92, 184, 368, 736
25	24	96, 192, 384, 768
25	25	100, 200, 400, 800
25	26	104, 208, 416, 832
25	27	108, 216, 432, 864
25	28	112, 224, 448, 896
25	29	116, 232, 464, 928
25	30	120, 240, 480, 960
25	31	124, 248, 496, 992
25	32	128, 256, 512, 1024
12.5	8	128, 256, 512, 1024
12.5	9	72, 144, 288, 576
12.5	10	80, 160, 320, 640
12.5	11	88, 176, 352, 704
12.5	12	96, 192, 384, 768

 Table A-48
 Word Length, Sampling Rate, and Multiplier for DSI (continued)

12.5       13       104, 208, 416, 832         12.5       14       112, 224, 448, 896         12.5       15       120, 240, 480, 960         12.5       16       64, 128, 256, 512         12.5       17       68, 136, 272, 544         12.5       18       72, 144, 288, 576         12.5       19       76, 152, 304, 608         12.5       20       80, 160, 320, 640         12.5       21       84, 168, 336, 672         12.5       22       88, 176, 352, 704         12.5       23       92, 184, 368, 736         12.5       23       92, 184, 368, 736         12.5       24       96, 192, 384, 768         12.5       25       100, 200, 400, 800         12.5       26       104, 208, 416, 832         12.5       27       108, 216, 432, 864         12.5       28       112, 224, 448, 896         12.5       30       120, 240, 480, 980         12.5       31       124, 248, 496, 992         12.5       32       128, 256, 512, 1024         6.75       3       120, 240, 480, 990         6.75       10       80, 160, 320, 640         6.75       12 </th <th>Sampling rate (kHz)<sup>[a]</sup></th> <th>Word length</th> <th>Multiplier</th>	Sampling rate (kHz) <sup>[a]</sup>	Word length	Multiplier
12.5       15       120, 240, 480, 960         12.5       16       64, 128, 256, 512         12.5       17       68, 136, 272, 544         12.5       18       72, 144, 288, 576         12.5       19       76, 152, 304, 608         12.5       20       80, 160, 320, 640         12.5       21       84, 168, 336, 672         12.5       22       88, 176, 352, 704         12.5       23       92, 184, 368, 736         12.5       24       96, 192, 384, 768         12.5       25       100, 200, 400, 800         12.5       26       104, 208, 416, 832         12.5       27       108, 216, 432, 864         12.5       28       112, 224, 448, 896         12.5       29       116, 232, 464, 928         12.5       30       120, 240, 480, 960         12.5       31       124, 248, 496, 992         12.5       32       128, 256, 512, 1024         6.75       8       128, 256, 512, 1024         6.75       10       80, 160, 320, 640         6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14<	12.5	13	104, 208, 416, 832
12.5       16       64,128,256,512         12.5       17       68,136,272,544         12.5       18       72,144,288,576         12.5       19       76,152,304,608         12.5       20       80,160,320,640         12.5       21       84,168,336,672         12.5       22       88,176,352,704         12.5       23       92,184,368,736         12.5       24       96,192,384,768         12.5       25       100,200,400,800         12.5       26       104,208,416,832         12.5       27       108,216,432,864         12.5       28       112,224,448,896         12.5       29       116,232,464,928         12.5       30       120,240,480,960         12.5       31       124,248,496,992         12.5       32       128,256,512,1024         6.75       8       128,256,512,1024         6.75       10       80,160,320,640         6.75       12       96,192,384,768         6.75       13       104,208,416,832         6.75       14       112,224,448,896         6.75       15       120,240,480,960         6	12.5	14	112, 224, 448, 896
12.5       17       68, 136, 272, 544         12.5       18       72, 144, 288, 576         12.5       19       76, 152, 304, 608         12.5       20       80, 160, 320, 640         12.5       21       84, 168, 336, 672         12.5       22       88, 176, 352, 704         12.5       23       92, 184, 368, 736         12.5       24       96, 192, 384, 768         12.5       25       100, 200, 400, 800         12.5       26       104, 208, 416, 832         12.5       27       108, 216, 432, 864         12.5       28       112, 224, 448, 896         12.5       29       116, 232, 464, 928         12.5       30       120, 240, 480, 960         12.5       31       124, 248, 496, 992         12.5       32       128, 256, 512, 1024         6.75       8       128, 256, 512, 1024         6.75       9       72, 144, 288, 576         6.75       10       80, 160, 320, 640         6.75       12       96, 192, 384, 768         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16 </td <td>12.5</td> <td>15</td> <td>120, 240, 480, 960</td>	12.5	15	120, 240, 480, 960
12.5       18       72,144,288,576         12.5       19       76,152,304,608         12.5       20       80,160,320,640         12.5       21       84,168,336,672         12.5       22       88,176,352,704         12.5       23       92,184,368,736         12.5       24       96,192,384,768         12.5       25       100,200,400,800         12.5       26       104,208,416,832         12.5       27       108,216,432,864         12.5       28       112,224,448,896         12.5       29       116,232,464,928         12.5       30       120,240,480,960         12.5       31       124,248,496,992         12.5       32       128,256,512,1024         6.75       8       128,256,512,1024         6.75       10       80,160,320,640         6.75       11       88,176,352,704         6.75       12       96,192,384,768         6.75       13       104,208,416,832         6.75       14       112,224,448,896         6.75       15       120,240,480,960         6.75       16       128,256,512         6.75	12.5	16	64, 128, 256, 512
12.5       19       76, 152, 304, 608         12.5       20       80, 160, 320, 640         12.5       21       84, 168, 336, 672         12.5       22       88, 176, 352, 704         12.5       23       92, 184, 368, 736         12.5       24       96, 192, 384, 768         12.5       25       100, 200, 400, 800         12.5       26       104, 208, 416, 832         12.5       27       108, 216, 432, 864         12.5       28       112, 224, 448, 896         12.5       29       116, 232, 464, 928         12.5       30       120, 240, 480, 960         12.5       31       124, 248, 496, 992         12.5       32       128, 256, 512, 1024         6.75       8       128, 256, 512, 1024         6.75       9       72, 144, 288, 576         6.75       10       80, 160, 320, 640         6.75       11       88, 176, 352, 704         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       16	12.5	17	68, 136, 272, 544
12.5       20       80, 160, 320, 640         12.5       21       84, 168, 336, 672         12.5       22       88, 176, 352, 704         12.5       23       92, 184, 368, 736         12.5       24       96, 192, 384, 768         12.5       25       100, 200, 400, 800         12.5       26       104, 208, 416, 832         12.5       27       108, 216, 432, 864         12.5       28       112, 224, 448, 896         12.5       29       116, 232, 464, 928         12.5       30       120, 240, 480, 960         12.5       31       124, 248, 496, 992         12.5       32       128, 256, 512, 1024         6.75       8       128, 256, 512, 1024         6.75       9       72, 144, 288, 576         6.75       10       80, 160, 320, 640         6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       16       128, 256, 512         6.75       16	12.5	18	72, 144, 288, 576
12.5       21       84, 168, 336, 672         12.5       22       88, 176, 352, 704         12.5       23       92, 184, 368, 736         12.5       24       96, 192, 384, 768         12.5       25       100, 200, 400, 800         12.5       26       104, 208, 416, 832         12.5       27       108, 216, 432, 864         12.5       28       112, 224, 448, 896         12.5       29       116, 232, 464, 928         12.5       30       120, 240, 480, 960         12.5       31       124, 248, 496, 992         12.5       32       128, 256, 512, 1024         6.75       8       128, 256, 512, 1024         6.75       9       72, 144, 288, 576         6.75       10       80, 160, 320, 640         6.75       11       88, 176, 352, 704         6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       16       128, 256, 512         6.75       17	12.5	19	76, 152, 304, 608
12.5       22       88,176,352,704         12.5       23       92,184,368,736         12.5       24       96,192,384,768         12.5       25       100,200,400,800         12.5       26       104,208,416,832         12.5       27       108,216,432,864         12.5       28       112,224,448,896         12.5       29       116,232,464,928         12.5       30       120,240,480,960         12.5       31       124,248,496,992         12.5       32       128,256,512,1024         6.75       8       128,256,512,1024         6.75       9       72,144,288,576         6.75       10       80,160,320,640         6.75       12       96,192,384,768         6.75       13       104,208,416,832         6.75       14       112,224,448,896         6.75       15       120,240,480,960         6.75       16       128,256,512         6.75       16       128,256,512         6.75       16       128,256,512         6.75       16       128,256,512         6.75       16       128,256,512         6.75       <	12.5	20	80, 160, 320, 640
12.5       23       92, 184, 368, 736         12.5       24       96, 192, 384, 768         12.5       25       100, 200, 400, 800         12.5       26       104, 208, 416, 832         12.5       27       108, 216, 432, 864         12.5       28       112, 224, 448, 896         12.5       29       116, 232, 464, 928         12.5       30       120, 240, 480, 960         12.5       31       124, 248, 496, 992         12.5       32       128, 256, 512, 1024         6.75       8       128, 256, 512, 1024         6.75       9       72, 144, 288, 576         6.75       10       80, 160, 320, 640         6.75       11       88, 176, 352, 704         6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       16       128, 256, 512         6.75       16       128, 256, 512         6.75       16       128, 256, 512         6.75       18       1	12.5	21	84, 168, 336, 672
12.5       24       96, 192, 384, 768         12.5       25       100, 200, 400, 800         12.5       26       104, 208, 416, 832         12.5       27       108, 216, 432, 864         12.5       28       112, 224, 448, 896         12.5       29       116, 232, 464, 928         12.5       30       120, 240, 480, 960         12.5       31       124, 248, 496, 992         12.5       32       128, 256, 512, 1024         6.75       8       128, 256, 512, 1024         6.75       9       72, 144, 288, 576         6.75       10       80, 160, 320, 640         6.75       11       88, 176, 352, 704         6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       16       128, 256, 512         6.75       16       128, 256, 512         6.75       16       128, 256, 512         6.75       16       128, 256, 512         6.75       18       144,	12.5	22	88, 176, 352, 704
12.5       25       100, 200, 400, 800         12.5       26       104, 208, 416, 832         12.5       27       108, 216, 432, 864         12.5       28       112, 224, 448, 896         12.5       29       116, 232, 464, 928         12.5       30       120, 240, 480, 960         12.5       31       124, 248, 496, 992         12.5       32       128, 256, 512, 1024         6.75       8       128, 256, 512, 1024         6.75       9       72, 144, 288, 576         6.75       10       80, 160, 320, 640         6.75       11       88, 176, 352, 704         6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       16       128, 256, 512         6.75       17       136, 272, 544         6.75       18       144, 288, 576         6.75       19       152, 304, 608	12.5	23	92, 184, 368, 736
12.5       26       104, 208, 416, 832         12.5       27       108, 216, 432, 864         12.5       28       112, 224, 448, 896         12.5       29       116, 232, 464, 928         12.5       30       120, 240, 480, 960         12.5       31       124, 248, 496, 992         12.5       32       128, 256, 512, 1024         6.75       8       128, 256, 512, 1024         6.75       9       72, 144, 288, 576         6.75       10       80, 160, 320, 640         6.75       11       88, 176, 352, 704         6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       17       136, 272, 544         6.75       18       144, 288, 576         6.75       19       152, 304, 608	12.5	24	96, 192, 384, 768
12.5       27       108, 216, 432, 864         12.5       28       112, 224, 448, 896         12.5       29       116, 232, 464, 928         12.5       30       120, 240, 480, 960         12.5       31       124, 248, 496, 992         12.5       32       128, 256, 512, 1024         6.75       8       128, 256, 512, 1024         6.75       9       72, 144, 288, 576         6.75       10       80, 160, 320, 640         6.75       11       88, 176, 352, 704         6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       17       136, 272, 544         6.75       18       144, 288, 576         6.75       18       144, 288, 576         6.75       19       152, 304, 608	12.5	25	100, 200, 400, 800
12.5       28       112, 224, 448, 896         12.5       29       116, 232, 464, 928         12.5       30       120, 240, 480, 960         12.5       31       124, 248, 496, 992         12.5       32       128, 256, 512, 1024         6.75       8       128, 256, 512, 1024         6.75       9       72, 144, 288, 576         6.75       10       80, 160, 320, 640         6.75       11       88, 176, 352, 704         6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       17       136, 272, 544         6.75       18       144, 288, 576         6.75       18       144, 288, 576         6.75       19       152, 304, 608	12.5	26	104, 208, 416, 832
12.5       29       116, 232, 464, 928         12.5       30       120, 240, 480, 960         12.5       31       124, 248, 496, 992         12.5       32       128, 256, 512, 1024         6.75       8       128, 256, 512, 1024         6.75       9       72, 144, 288, 576         6.75       10       80, 160, 320, 640         6.75       11       88, 176, 352, 704         6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       17       136, 272, 544         6.75       18       144, 288, 576         6.75       19       152, 304, 608	12.5	27	108, 216, 432, 864
12.5       30       120, 240, 480, 960         12.5       31       124, 248, 496, 992         12.5       32       128, 256, 512, 1024         6.75       8       128, 256, 512, 1024         6.75       9       72, 144, 288, 576         6.75       10       80, 160, 320, 640         6.75       11       88, 176, 352, 704         6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       17       136, 272, 544         6.75       18       144, 288, 576         6.75       19       152, 304, 608	12.5	28	112, 224, 448, 896
12.5       31       124, 248, 496, 992         12.5       32       128, 256, 512, 1024         6.75       8       128, 256, 512, 1024         6.75       9       72, 144, 288, 576         6.75       10       80, 160, 320, 640         6.75       11       88, 176, 352, 704         6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       17       136, 272, 544         6.75       18       144, 288, 576         6.75       19       152, 304, 608	12.5	29	116, 232, 464, 928
12.5       32       128, 256, 512, 1024         6.75       8       128, 256, 512, 1024         6.75       9       72, 144, 288, 576         6.75       10       80, 160, 320, 640         6.75       11       88, 176, 352, 704         6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       17       136, 272, 544         6.75       18       144, 288, 576         6.75       19       152, 304, 608	12.5	30	120, 240, 480, 960
6.75       8       128, 256, 512, 1024         6.75       9       72, 144, 288, 576         6.75       10       80, 160, 320, 640         6.75       11       88, 176, 352, 704         6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       17       136, 272, 544         6.75       18       144, 288, 576         6.75       19       152, 304, 608	12.5	31	124, 248, 496, 992
6.75       9       72,144,288,576         6.75       10       80,160,320,640         6.75       11       88,176,352,704         6.75       12       96,192,384,768         6.75       13       104,208,416,832         6.75       14       112,224,448,896         6.75       15       120,240,480,960         6.75       16       128,256,512         6.75       17       136,272,544         6.75       18       144,288,576         6.75       19       152,304,608	12.5	32	128, 256, 512, 1024
6.75       10       80, 160, 320, 640         6.75       11       88, 176, 352, 704         6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       17       136, 272, 544         6.75       18       144, 288, 576         6.75       19       152, 304, 608	6.75	8	128, 256, 512, 1024
6.75       11       88, 176, 352, 704         6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       17       136, 272, 544         6.75       18       144, 288, 576         6.75       19       152, 304, 608	6.75	9	72, 144, 288, 576
6.75       12       96, 192, 384, 768         6.75       13       104, 208, 416, 832         6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       17       136, 272, 544         6.75       18       144, 288, 576         6.75       19       152, 304, 608	6.75	10	80, 160, 320, 640
6.75     13     104, 208, 416, 832       6.75     14     112, 224, 448, 896       6.75     15     120, 240, 480, 960       6.75     16     128, 256, 512       6.75     17     136, 272, 544       6.75     18     144, 288, 576       6.75     19     152, 304, 608	6.75	11	88, 176, 352, 704
6.75       14       112, 224, 448, 896         6.75       15       120, 240, 480, 960         6.75       16       128, 256, 512         6.75       17       136, 272, 544         6.75       18       144, 288, 576         6.75       19       152, 304, 608	6.75	12	96, 192, 384, 768
6.75     15     120, 240, 480, 960       6.75     16     128, 256, 512       6.75     17     136, 272, 544       6.75     18     144, 288, 576       6.75     19     152, 304, 608	6.75	13	104, 208, 416, 832
6.75     16     128, 256, 512       6.75     17     136, 272, 544       6.75     18     144, 288, 576       6.75     19     152, 304, 608	6.75	14	112, 224, 448, 896
6.75     17     136, 272, 544       6.75     18     144, 288, 576       6.75     19     152, 304, 608	6.75	15	120, 240, 480, 960
6.75     18     144, 288, 576       6.75     19     152, 304, 608	6.75	16	128, 256, 512
6.75 19 152, 304, 608	6.75	17	136, 272, 544
	6.75	18	144, 288, 576
6.75 20 160, 320, 640	6.75	19	152, 304, 608
	6.75	20	160, 320, 640

 Table A-48
 Word Length, Sampling Rate, and Multiplier for DSI (continued)

Sampling rate (kHz) <sup>[a]</sup>	Word length	Multiplier
6.75	21	168, 336, 672
6.75	22	176, 352, 704
6.75	23	184, 368, 736
6.75	24	192, 384, 768
6.75	25	200, 400, 800
6.75	26	208, 416, 832
6.75	27	216, 432, 864
6.75	28	224, 448, 896
6.75	29	116, 232, 464, 928
6.75	30	120, 240, 480, 960
6.75	31	124, 248, 496, 992
6.75	32	128, 256, 512, 1024

<sup>[</sup>a]For sampling rate less than or equal to.

# Appendix 25: Word Length, Sampling Rate, and Multiplier for Master Clock In

Table A-49 Word Length, Sampling Rate, and Multiplier for Master Clock In

Sampling rate (kHz) <sup>[a]</sup>	Word length	Multiplier
400	8	64, 128
400	9	72, 144
400	10	80, 160
400	11	88
400	12	96
400	13	104
400	14	112
400	15	120
400	16	64, 128
400	17	68, 136
400	18	72, 144
400	19	76
400	20	80
400	21	84
400	22	88
400	23	92
400	24	96, 192
400	25	100
400	26	104
400	27	108
400	28	112
400	29	116
400	30	120
400	31	124
400	32	128
200	8	64, 128, 256
200	9	72, 144, 288
200	10	80, 160
200	11	88, 176
200	12	96, 192

 Table A-49
 Word Length, Sampling Rate, and Multiplier for Master Clock In (continued)

Sampling rate (kHz) <sup>[a]</sup>	Word length	Multiplier
200	13	104, 208
200	14	112, 224
200	15	120, 240
200	16	64, 128, 256
200	17	68, 136, 272
200	18	72, 144, 288
200	19	76, 152
200	20	80, 160
200	21	84, 168
200	22	88, 176
200	23	92, 184
200	24	96, 192
200	25	100, 200
200	26	104, 208
200	27	108, 216
200	28	112, 224
200	29	116, 232
200	30	120, 240
200	31	124, 248
200	32	128, 256
100	8	64, 128, 256, 512
100	9	72, 144, 288, 576
100	10	80, 160, 320
100	11	88, 176, 352
100	12	96, 192, 384
100	13	104, 208, 416
100	14	112, 224, 448
100	15	120, 240, 480
100	16	64, 128, 256, 512
100	17	68, 136, 272, 544
100	18	72, 144, 288, 576
100	19	76, 152, 304
100	20	80, 160, 320

Table A-49 Word Length, Sampling Rate, and Multiplier for Master Clock In (continued)

Sampling rate (kHz) <sup>[a]</sup>	Word length	Multiplier
100	21	84, 168, 336
100	22	88, 176, 352
100	23	92, 184, 368
100	24	96, 192, 384
100	25	100, 200, 400
100	26	104, 208, 416
100	27	108, 216, 432
100	28	112, 224, 448
100	29	116, 232, 464
100	30	120, 240, 480
100	31	124, 248, 496
100	32	128, 256, 512
50	8	64, 128, 256, 512
50	9	72, 144, 288, 576
50	10	80, 160, 320, 640
50	11	88, 176, 352, 704
50	12	95, 192, 384, 768
50	13	104, 208, 416, 832
50	14	112, 224, 448, 896
50	15	120, 240, 480, 960
50	16	64, 128, 256, 512
50	17	68, 136, 272, 544
50	18	72, 144, 288, 576
50	19	76, 152, 304, 608
50	20	80, 160, 320, 640
50	21	84, 168, 336, 672
50	22	88, 176, 352, 704
50	23	92, 184, 368, 736
50	24	96, 192, 384, 768
50	25	100, 200, 400, 800
50	26	104, 208, 416, 832
50	27	108, 216, 432, 864
50	28	112, 224, 448, 896

 Table A-49
 Word Length, Sampling Rate, and Multiplier for Master Clock In (continued)

Sampling rate (kHz) <sup>[a]</sup>	Word length	Multiplier
50	29	116, 232, 464, 928
50	30	120, 240, 480, 960
50	31	124, 248, 496, 992
50	32	128, 256, 512
25	8	64, 128, 256, 512
25	9	72, 144, 288, 576
25	10	80, 160, 320, 640
25	11	88, 176, 352, 704
25	12	96, 192, 384, 768
25	13	104, 208, 416, 832
25	14	112, 224, 448, 896
25	15	120, 240, 480, 960
25	16	64, 128, 256, 512
25	17	136, 272, 544
25	18	72, 144, 288, 576
25	19	152, 304, 608
25	20	80, 160, 320, 640
25	21	168, 336, 672
25	22	88, 176, 352, 704
25	23	184, 368, 736
25	24	96, 192, 384, 768
25	25	200, 400, 800
25	26	104, 208, 416, 832
25	27	216, 432, 864
25	28	112, 224, 448, 896
25	29	232, 464, 928
25	30	120, 240, 480, 960
25	31	248, 496, 992
25	32	128, 256, 512
12.5	8	64, 128, 256, 512
12.5	9	144, 288, 576
12.5	10	80, 160, 320, 640
12.5	11	176, 352, 704

Table A-49 Word Length, Sampling Rate, and Multiplier for Master Clock In (continued)

Sampling rate (kHz) <sup>[a]</sup>	Word length	Multiplier
12.5	12	96, 192, 384, 768
12.5	13	208, 416, 832
12.5	14	112, 224, 448, 896
12.5	15	240, 480, 960
12.5	16	64, 128, 256, 512
12.5	17	272, 544
12.5	18	144, 288, 576
12.5	19	304, 608
12.5	20	160, 320, 640
12.5	21	336, 672
12.5	22	176, 352, 704
12.5	23	368, 736
12.5	24	192, 384, 768
12.5	25	400, 800
12.5	26	208, 416, 832
12.5	27	432, 864
12.5	28	224, 448, 896
12.5	29	464, 928
12.5	30	240, 480, 960
12.5	31	496, 992
12.5	32	128, 256, 512
6.75	8	64, 128, 256, 512
6.75	9	288, 576
6.75	10	160, 320, 640
6.75	11	352, 704
6.75	12	192, 384, 768
6.75	13	416, 832
6.75	14	224, 448, 896
6.75	15	480, 960
6.75	16	64, 128, 256, 512
6.75	17	544
6.75	18	288, 576
6.75	19	608

 Table A-49
 Word Length, Sampling Rate, and Multiplier for Master Clock In (continued)

Sampling rate (kHz) <sup>[a]</sup>	Word length	Multiplier
6.75	20	320, 640
6.75	21	672
6.75	22	352, 704
6.75	23	736
6.75	24	384, 768
6.75	25	800
6.75	26	416, 832
6.75	27	864
6.75	28	448, 896
6.75	29	928
6.75	30	480, 960
6.75	31	992
6.75	32	128, 256, 512

<sup>[</sup>a]For sampling rate less than or equal to.

# Appendix 26: U8903B Default Settings

### Analog generator

 Table A-50
 Analog generator default settings

Level 1	Level 2	evel 3 Default
Waveform		Sine
	Amplitude	0 Vrms
	Frequency	1 kHz
	DC Offset	0 V
	Phase -> 1	0°
	Frequency 2	2 kHz
	Ratio	100%
	Lower Feq	60 Hz
	Upper Freq (SMPTE 1:1/4:1/10:1)	7 kHz
	Upper Freq (IEC 60118)	10 kHz
	Diff Freq	80 Hz
	Center Freq	10 kHz
Waveform Config	Voltage	0 V
	Start Freq	1001.35803222656
	Stop Freq	4997.25341796875
	Freq Spacing	Linear
	Tones	2
	Length	1024
	Dial (DTMF)	ode Single
	Amplitude (DTMF)	-4.5 dBu
	Ratio (DTMF)	2 dB
	Tone Duration (DTMF)	90 ms
	Tone Delay (DTMF)	90 ms
	Pause Time (DTMF)	90 ms
	Repeat (DTMF)	Off

 Table A-50
 Analog generator default settings (continued)

Level 1	Level 2	Level 3	Default
Output Config	Connector		UnBal
	Impedance		600 Ω
	IEC60268 10 Ω		Pin 2
	Ground		Float
	Max Voltage		22.6 Vrms
References	Ref Impedance		600 Ω

## Analog analyzer

Table A-51 Analog analyzer default settings

Level 1	Level 2	Level 3	Default
	Multi-Chn Mode		Off
	Function No.		1
Functions	Meas. Func. (Function 1)		AC Voltage
runctions	Meas. Func. (Function 2)		Frequency
	Meas. Func. (Function 3)		None
	Meas. Func. (Function 4)		None
Functions	Unit		Hz
(Frequency)	Format		Off
	Unit		V
Functions (AC Voltage)	Format		Off
	Detector		RMS
Functions	Unit		V
(DC Voltage)	Format		Off
	Unit		dB
Functions	Format		Off
(THD+N Ratio/SINAD)	Freq Lock		Auto
	Fund Freq		1000
	Unit		V
Functions	Format		Off
(THD+N Level)	Freq Lock	Freq Lock	
	Fund Freq		1000

 Table A-51
 Analog analyzer default settings (continued)

Level 1	Level 2 Level 3	Default
Functions	Unit	dB
	Format	Off
	Even Harmonic	2, 4, 6, 8
(THD Ratio)	Odd Harmonic	3, 5, 7, 9
	Freq Lock	Auto
	Fund Freq	1000
	Unit	V
	Format	Off
Functions	Even Harmonic	2, 4, 6, 8
(THD Level)	Odd Harmonic	3, 5, 7, 9
	Freq Lock	Auto
	Fund Freq	1000
Functions	Unit	dB
(DFD60268 2nd/ DFD 60268 3rd/ DFD 60118 2nd/ DFD 60118 3rd)	Format	Off
	Unit	dB
	Format	Off
Functions (SMPTE IMD)	Freq Lock	Gen Lock
	Upper Freq	60
	Lower Freq	7000
	Unit	dB
Functions (SNR)	Format	Off
, ,	SNR Delay	0 ms
	Unit	dB
	Format	Off
Functions (SNR (Fast))	Freq Lock	Auto
. , "	Fund Freq	1000
	Harmonics	5
	Ref. Channel	1
Functions (Phase)	Freq Lock	Auto
(Thusby	Fund Freq	1000

 Table A-51
 Analog analyzer default settings (continued)

Level 1	Level 2	Level 3	Default
Functions (X-Talk)	Ref. Channel		1
	Unit		dB
	Format		Off
, ,	Freq Lock		Auto
	Fund Freq		1000
	LPF		None
	HPF		None
	Weighting		None
Filters Config	Deemphasis		None
		State	Disabled
	Notch Filter	Center Freq	1000 Hz
		Bandwidth	500 Hz
	Auto Range		On
	Range		1 V
	Sample Size		32768
Meas Config	Mov Average		1
	Src Channel		1
	Trigger Source		Free Run
	Trigger Edge		Rising
	Connector		UnBal
	Impedance		100 k $\Omega$ (Unbal) 200 k $\Omega$ (Bal)
Input Config	Coupling		AC
	Bandwidth		90 kHz
	Ext. Gain		0 dB
	Channel		Left
Wave File	Bits/Sample		8
	Duration		10 s
	Show Stats		Off
	No. of Reading		10
Statistics	Stat 1		Min
	Stat 2		Max
	Stat 3		Average

### Sweep

 Table A-52
 Sweep default settings

Level 1	Level 2	Default
Legacy Status		Off
Parameter		Frequency
	Spacing	Log
	Unit	Hz
Points Settings	Start	20
Tomas Settings	Stop	2000
	Step	1.268961003
	Points	30
	Spacing	Linear
	Unit	Vrms
Points Settings	Start	0.1
(Parameter = Amplitude)	Stop	1
	Step	0.031034483
	Points	30
	Spacing	Linear
	Unit	0
Points Settings	Start	0
(Parameter = Phase)	Stop	90
	Step	3.103448276
	Points	30
Dwell Time		0
Sweep Mode		Continuous
Channels	Source	1
Gilaillets	Measure	1

#### HP8903B

Table A-53HP8903B default settings

Level 1	Level 2	Default
	Function	AC level
	LP Filter	80 kHz
Measurement	HP/W Filter	None
	Ratio	Off
	Format	Lin
	Frequency	1 kHz
	Amplitude	0 V
Generator	Step Param	Frequency
	Freq. Step	1 kHz
	Amp. Step	100 mVrms
Sweep	Freq. Start	20 Hz
	Freq. Stop	20 kHz

## System

Table A-54 System default settings

Кеу	Level 1	Level 2	Default
System	HP8903B Config	Active Channel	1
		Left Filter	None
		Right Filter	None
		Default LPF	80 kHz

### Appendix 27: Procedure to Rename, Copy, Move, and Delete Files

#### Renaming a file

- 1 In the file view, select the file to rename.
- 2 Press the Rename softkey.
- 3 Enter the new file name in the **New name** text box.
- 4 Press the **OK** softkey when done.
- **5** The selected file is renamed.

#### Copying a file

- 1 In the file view, navigate to the folder that contains the file to copy.
- 2 Press the Copy or Move softkey.
- **3** Press the **Mark** softkey to mark the file or multiple files to copy.
- 4 Navigate to the folder where the file is to be copied.
- 5 Press the Copy Marked To Folder softkey.
- 6 The marked file will be copied to the specified folder. Press the Return softkey when done.
- 7 If the file name to be copied already exists in the destination folder, the copied file name will be renamed to **Copy of [file name]**.

#### Moving a file

- 1 In the file view, navigate to the folder that contains the file to to move.
- 2 Press the Copy or Move softkey.
- **3** Press the **Mark** softkey to mark the file or multiple files to move.
- 4 Navigate to the folder where the file is to be moved.
- 5 Press the Move Marked To Folder softkey.
- 6 The marked file will be moved to the specified folder. Press the Return softkey when done.

#### Deleting a file

- 1 In the file view, select the file to delete.
- 2 Press the **Delete** softkey.
- 3 A dialog box will pop up prompting confirmation to delete the file. To delete the file, select **Yes** and press . To abort, select **No** and press .

## Appendix 28: POLQA Recording Duration Analysis

The following shows the maximum wave file recording duration allowed for POLQA analysis based on the different option card configuration and settings in the U8903B.

Table A-55 U8903B option configuration

Option	Configuration
1	Analog cards only
2	Analog cards and Digital card
3	Analog cards and Bluetooth card
4	Analog cards, Digital card, and Bluetooth card

 Table A-56
 Maximum wave file recording duration for the POLQA narrowband and super-wideband analysis

		Narrowband analysis		Super-wideband analysis
Option Configuration	Maximum wave file recording duration for 8 kHz sample rate	Maximum wave file recording duration for 16 kHz sample rate	Maximum wave file recording duration for 48 kHz sample rate	Maximum wave file recording duration for 48 kHz sample rate
Option 1	30 s	16 s	5 s	5 s
Option 2	20 s	14 s	5 s	4 s
Option 3	20 s	16 s	5 s	5 s
Option 4	16 s	10 s	4 s	4 s

## Appendix 29: Audio Measurement Ranging

In order to obtain measurements with high accuracy and resolution, selecting the appropriate audio measurement range is crucial. The U8903B is covered by switchable attenuation or gain from the input circuits of the audio analyzer. The two types of audio measurement ranging are manual ranging and auto ranging.

#### Manual ranging

Manual ranging is used to configure the level of the input signal to the optimum range for measurements. This allows you to set the gain of the analyzer to amplify a low input signal or attenuate a high input signal as required.

The U8903B provides the following input voltage ranges for both unbalanced and balanced inputs:

- 140 V
- 100 V
- 32 V
- 10 V
- 3.2 V
- 1 V
- 320 mV

For optimum range, you should select the lowest range with its upper limit exceeding the expected maximum input signal.

#### Auto ranging

The auto ranging mode automatically selects an appropriate range for each measurement. Auto ranging determines the correct range to use according to the signal level to achieve the optimum measurement accuracy for the input signal.

Auto ranging is suitable for measuring stable signals with levels that do not vary greatly. It is however not suitable for signals with rapid-changing pulses or spikes. As auto ranging needs to determine which range to use for each signal level, it may not be fast enough to accommodate signals with rapid-changing pulses or spikes. This may result in ranging errors leading to incorrect measurements.

Therefore in this case, manual ranging provides better and faster performance for your measurement needs.

It is recommended to know the characteristics of the input signal and its level variation before applying the manual or auto ranging mode.

Using manual ranging for continuous sweep and frequency response measurements

For continuous sweep and frequency response measurements, manual ranging is a better option as it ensures signals across all frequency ranges are measured within the same range.

This information is subject to change without notice. Always refer to the English version at the Keysight Web site for the latest revision.

© Keysight Technologies 2014–2024 Edition 9, January 2024



U8903-90045 www.keysight.com

