

# Keysight V3500A Handheld RF Power Meter

# Notices

## Copyright Notice

© Keysight Technologies 2010-2017

No part of this manual may be reproduced in any form or by any means (including electronic storage and retrieval or translation into a foreign language) without prior agreement and written consent from Keysight Technologies as governed by United States and international copyright laws.

## Manual Part Number

V3500-90006

## Edition

Edition 6, December 1, 2017

## Printed in:

Printed in Malaysia

## Published by:

Keysight Technologies  
Bayan Lepas Free Industrial Zone,  
11900 Penang, Malaysia

## Technology Licenses

The hardware and/or software described in this document are furnished under a license and may be used or copied only in accordance with the terms of such license.

## Declaration of Conformity

Declarations of Conformity for this product and for other Keysight products may be downloaded from the Web. Go to <http://www.keysight.com/go/conformity>. You can then search by product number to find the latest Declaration of Conformity.

## U.S. Government Rights

The Software is "commercial computer software," as defined by Federal Acquisition Regulation ("FAR") 2.101. Pursuant to FAR 12.212 and 27.405-3 and Department of Defense FAR Supplement ("DFARS") 227.7202, the U.S. government acquires commercial computer software under the same terms by which the software is customarily provided to the public. Accordingly, Keysight provides the Software to U.S. government customers under its standard commercial license, which is embodied in its End User License Agreement (EULA), a copy of which can be found at <http://www.keysight.com/find/sweula>. The license set forth in the EULA represents the exclusive authority by which the U.S. government may use, modify, distribute, or disclose the Software. The EULA and the license set forth therein, does not require or permit, among other things, that Keysight: (1) Furnish technical information related to commercial computer software or commercial computer software documentation that is not customarily provided to the public; or (2) Relinquish to, or otherwise provide, the government rights in excess of these rights customarily provided to the public to use, modify, reproduce, release, perform, display, or disclose commercial computer software or commercial computer software documentation. No additional government requirements beyond those set forth in the EULA shall apply, except to the extent that those terms, rights, or licenses are explicitly required from all providers of commercial computer software pursuant to the FAR and the DFARS and are set forth specifically in writing elsewhere in the EULA. Keysight shall be under no obligation to update, revise or otherwise modify the Software. With respect to any technical data as defined by FAR 2.101, pursuant to FAR 12.211 and 27.404.2 and DFARS 227.7102, the U.S. government acquires no greater than Limited Rights as defined in FAR 27.401 or DFAR 227.7103-5 (c), as applicable in any technical data.

## Warranty

THE MATERIAL CONTAINED IN THIS DOCUMENT IS PROVIDED "AS IS," AND IS SUBJECT TO BEING CHANGED, WITHOUT NOTICE, IN FUTURE EDITIONS. FURTHER, TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, KEYSIGHT DISCLAIMS ALL WARRANTIES, EITHER EXPRESS OR IMPLIED, WITH REGARD TO THIS MANUAL AND ANY INFORMATION CONTAINED HEREIN, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. KEYSIGHT SHALL NOT BE LIABLE FOR ERRORS OR FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES IN CONNECTION WITH THE FURNISHING, USE, OR PERFORMANCE OF THIS DOCUMENT OR OF ANY INFORMATION CONTAINED HEREIN. SHOULD KEYSIGHT AND THE USER HAVE A SEPARATE WRITTEN AGREEMENT WITH WARRANTY TERMS COVERING THE MATERIAL IN THIS DOCUMENT THAT CONFLICT WITH THESE TERMS, THE WARRANTY TERMS IN THE SEPARATE AGREEMENT SHALL CONTROL.

## Safety Information

### CAUTION













 



A CAUTION notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in damage to the product or loss of important data. Do not proceed beyond a CAUTION notice until the indicated conditions are fully understood and met.

### WARNING

A WARNING notice denotes a hazard. It calls attention to an operating procedure, practice, or the like that, if not correctly performed or adhered to, could result in personal injury or death. Do not proceed beyond a WARNING notice until the indicated conditions are fully understood and met.

## Safety Symbols

The following symbols on the instrument and in the documentation indicate precautions which must be taken to maintain safe operation of the instrument.

	Direct current (DC)		Equipment protected throughout by double insulation or reinforced insulation
	Alternating current (AC)		Off (mains supply)
	Both direct and alternating current		On (mains supply)
	Three-phase alternating current		Caution, risk of electric shock
	Earth (ground) terminal		Caution, risk of danger (refer to this manual for specific Warning or Caution information)
	Protective earth (ground) terminal		Caution, hot surface
	Frame or chassis (ground) terminal		Out position of a bi-stable push control
	Equipotentiality		In position of a bi-stable push control

## Safety Considerations

Read the information below before using this instrument.

The following general safety precautions must be observed during all phases of operation, service, and repair of this instrument. Failure to comply with these precautions or with specific warnings elsewhere in this manual violates safety standards for design, manufacture, and intended use of the instrument. Keysight Technologies assumes no liability for the customer's failure to comply with these requirements.

### WARNING

- Observe all markings on the instrument before connecting any wiring to the instrument.
  - Do not operate the instrument in an explosive atmosphere or in the presence of flammable gases or fumes.
  - Do not service or perform adjustments alone. Under certain condition, hazardous voltages may exist, even with the equipment switched off. To avoid dangerous electric shock, service personnel must not attempt internal service or adjustment unless another person, capable of rendering resuscitation or first aid, is present.
  - Do not substitute parts or modify equipment to avoid the danger of introducing additional hazards. Return the instrument to Keysight Sales Office for service and repair to ensure the safety features are maintained.
  - Do not operate damaged equipment as the safety protection features built into this instrument may have been impaired, either through physical damage, excessive moisture, or any other reason. Remove power and do not use the instrument until safe operation can be verified by service-trained personnel. If necessary, return the instrument to Keysight Technologies Sales and Service Office for service and repair to ensure the safety features are maintained.
- 

### CAUTION

Ensure proper insertion of battery in the power meter, and follow the correct polarity.

---

## Regulatory Markings

	The CE mark is a registered trademark of the European Community. This CE mark shows that the product complies with all the relevant European Legal Directives.		The RCM mark is a registered trademark of the Australian Communications and Media Authority.
<b>ICES/NMB-001</b>	ICES/NMB-001 indicates that this ISM device complies with the Canadian ICES-001. Cet appareil ISM est conforme a la norme NMB-001 du Canada.		This instrument complies with the WEEE Directive (2002/96/EC) marking requirement. This affixed product label indicates that you must not discard this electrical or electronic product in domestic household waste.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

# Table of Contents

	Safety Symbols	3
	Safety Considerations	4
	Regulatory Markings	5
1	Characteristics and Specifications	
2	Service and Maintenance	
	General Information	16
	Cleaning	16
	RF connectors care	16
	Battery Replacement	17
3	Performance Tests	
	Performance Tests	20
	Test Procedures	20
	Equipment List	21
	Performance Verification	23
	Power source test	23
	SWR Test	23
	Frequency Response Test	26
	Linearity Test	29
	Noise Test	34
	Performance Test Record	35
4	Repair Guide	
	Introduction	38
	Replaceable Parts	39
	Required Tools	44
	Disassembly Instructions	45
	Reassembly Instructions	48
	Returning Instrument for Service	51

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

## List of Figures

Figure 3-1	SWR test setup	24
Figure 3-2	UUT connected to Port 1 of the VNA	25
Figure 3-3	Frequency response test setup	26
Figure 3-4	UUT connected for frequency response test	27
Figure 3-5	Linearity test setup	30

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

## List of Tables

Table 3-1	Equipment required for performance tests . . . . .	21
Table 3-2	Attenuator settings . . . . .	32

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

# 1 Characteristics and Specifications

For the characteristics and specifications of the V3500A Handheld RF Power Meter, refer to the datasheet at

<http://literature.cdn.keysight.com/litweb/pdf/5990-5483EN.pdf>.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

## 2 Service and Maintenance

General Information	16
Battery Replacement	17

This chapter provides you with the general service and maintenance information, and battery replacement procedure.

## General Information

### Cleaning

Use a clean, damp cloth to clean the body of the V3500A Handheld RF Power Meter.

### RF connectors care

Use a solution of pure isopropyl or ethyl alcohol to clean the connectors but do keep in mind that these solutions are flammable.

Clean the connector only at a static free workstation. Electrostatic discharge to the center pin of the connector will render the power meter inoperative.

Clean the connector face by first using a blast of compressed air. If the compressed air fails to remove contaminants, use a cotton swab dipped in isopropyl or ethyl alcohol. If the swab is too big, use a round wooden toothpick wrapped in a lint free cloth dipped in isopropyl or ethyl alcohol.

#### CAUTION

The RF connector bead deteriorates when contacted with any chlorinated or aromatic hydrocarbon such as acetone, trichlorethane, carbon tetrachloride, and benzene.

Do not attempt to clean connectors with anything metallic such as pins or paper clips.

---

## Battery Replacement

The V3500A is powered by two 1.5 V AA batteries. To ensure that the meter performs as specified, it is recommended that you replace the battery as soon as the low battery indicator is flashing. See the following procedures for battery replacement:

- 1** Loosen the screw on the battery cover using a Phillips screwdriver.
- 2** Replace the specified batteries, ensure the correct polarity of the batteries.
- 3** Tighten the screw on the battery cover and turn on the power meter.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

# 3 Performance Tests

Performance Tests	20
Test Procedures	20
Equipment List	21
Performance Verification	23
Performance Test Record	35

This chapter provides you the step-by-step performance verification and adjustment test for the V3500A Handheld RF Power Meter.

## Performance Tests

The procedures in this chapter test the power meter electrical performance using the specification in [Chapter 1](#) as the performance standards. The performance tests given in this chapter are suitable for incoming inspection or preventive maintenance. During any performance test, all shields and connecting hardware must be in place.

## Test Procedures

It is assumed that the person performing the following tests understands how to operate the specified test equipment. Equipment settings, other than those for the power meter, are stated in general terms. It is assumed that the person will select the proper cables, adapters, and probes required for the test setup illustrated in this chapter.

## Equipment List

**Table 3-1** lists all the equipment required for the performance tests. If a substitution must be made, the equipment used must meet the critical specifications.

**Table 3-1** Equipment required for performance tests

Equipment Required	Recommended Models	Critical Specifications
Network analyzer	<ul style="list-style-type: none"> <li>– Keysight E5071C (Option 280)</li> <li>– Keysight 8753ES (Option 006)</li> <li>– Keysight 8753E (Option 006)</li> </ul>	Frequency range: 10 MHz to 6 GHz
Calibration kit	<ul style="list-style-type: none"> <li>– Keysight 85032B</li> <li>– Keysight 85032E</li> <li>– Keysight 85032F</li> </ul>	Type-N connector 50 $\Omega$ characteristic impedance Frequency range: 10 MHz to 6 GHz
Signal source	Keysight E8257D (Option 520, 532, 540, 550 1EA, 550 1EU)	Ability to output +6 dBm from 10 MHz to 6 GHz
Power splitter	Keysight 11667A	
Power meter	<ul style="list-style-type: none"> <li>– Keysight E4417A</li> <li>– Keysight E4419A/B</li> <li>– Keysight E4418B</li> </ul>	Dual channel Absolute accuracy: $\pm 0.5\%$ Power reference accuracy: $\pm 0.9\%$
Power sensor	<ul style="list-style-type: none"> <li>– Keysight 8481A</li> <li>– Keysight E9301A</li> <li>– Keysight N8482A</li> </ul>	Ability to measure 0 dBm power from 10 MHz to 6 GHz
Incident sensor	<ul style="list-style-type: none"> <li>– Keysight 8481A</li> <li>– Keysight E9301A</li> <li>– Keysight N8482A</li> </ul>	Ability to measure 0 dBm power from 10 MHz to 6 GHz
Function generator	33250A	Ability to output +12 dBm at 50 MHz
Fixed attenuator	8491A (Option 010)	
1 dB step attenuator	Keysight 8494G	Characterized by standard lab Accuracy: $\pm 0.01$ dB VSWR @ 50 MHz: $\leq 1.05$

**Table 3-1** Equipment required for performance tests (continued)

Equipment Required	Recommended Models	Critical Specifications
10 dB step attenuator	Keysight 8496G	Characterized by standard lab Accuracy: $\pm 0.005$ dB+0.0052 dB/step VSWR @ 50 MHz: $\leq 1.05$
Switch driver	Keysight 11713A	

# Performance Verification

## Power source test

- 1 Remove the battery cover of the power meter using a Phillips screw driver.
- 2 Insert two 1.5 V alkaline AA batteries into the battery holder and turn the power meter ON. Make sure that the display and the keypad are working by pressing every key on the keypad.
- 3 Leave the AA batteries in the battery holder and connect the USB interface cable (Standard- A to Type-B) to the PC. Make sure that the power meter continues to operate normally without any interruptions such as display glitch or any sort of display changes when the USB interface cable is inserted.
- 4 Using the universal switching power supply, plug the adaptor output into the 5 V, 150 mA input on the power meter. Make sure that the power meter continues to operate normally without any interruptions such as display glitch or any sort of display changes.
- 5 Remove the two 1.5 V alkaline AA batteries from the power meter, and make sure that the power meter is still operating normally.
- 6 Unplug the USB interface cable and make sure that the power meter is still operating normally with the universal switching power supply connected.

## SWR Test


### Specifications

Electrical Characteristics	Performance Limits
SWR (10 MHz to 3.75 GHz)	1.13
SWR (3.75 GHz to 6 GHz)	1.22

## Equipment

- Network analyzer: Keysight E5071C (Option 280), 8753ES (Option 006), or 8753E (Option 006)
- Calibration kit: Keysight 85032B, 85032E, or 85032F

## Test setup

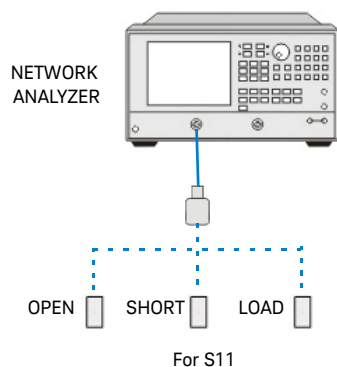


**Figure 3-1** SWR test setup

## Procedure

- 1** Preset the vector network analyzer (VNA) to factory default settings.
- 2** Set the stimulus of VNA to the following settings and select Channel 1 as the test channel.
  - Power level = 0 dBm
  - IF BW = 10 Hz
  - Averaging = 1
- 3** Select the proper calibration kit shown on the calibration menu of VNA.
- 4** Select 1-Port (S11) calibration on the calibration menu of VNA.
- 5** Perform calibration using open, short, and load as shown in [Figure 3-1](#).
- 6** Save the calibration results and recall calibration results.

- 7 Set the VNA to the following settings:
  - Measure S11 parameter
  - Display format as SWR
  - Output format as linear marker
  - Auto scale
- 8 Connect the unit under test (UUT) directly to Port 1 of VNA as shown in **Figure 3-2**.

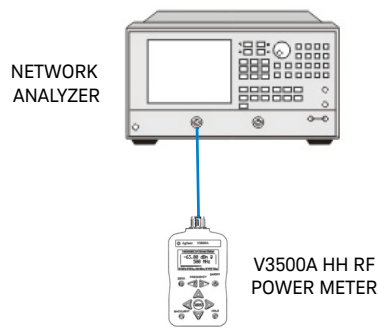

**Figure 3-2** UUT connected to Port 1 of the VNA

- 9 Perform a sweep and read the trace data for all sweep points.
- 10 Find the test point readings from the trace data array. The output reading shows SWR results.

**NOTE**

The sweep segment one is an extra sweep segment which allows VTO saturation and settling time to get better results. The trace data from segment one should be thrown away before the results are obtained.

## Frequency Response Test


### Specifications

Electrical Characteristics	Performance Limits
Frequency response (10 MHz to 3.75 GHz)	$\pm 0.26$ dB
Frequency response (3.75 GHz to 6 GHz)	$\pm 0.4$ dB

### Equipment

- Signal source: Keysight E8257D Keysight E8257D (Option 520, 532, 540, 550 1EA, or 550 1EU)
- Power meter: Keysight E4417A or E4419A/B
- Power sensor: Keysight 8481A, E9301A, or N8482A
- Incident sensor: Keysight 8481A, E9301A, or N8482A
- Power splitter: Keysight 11667A

### Test setup

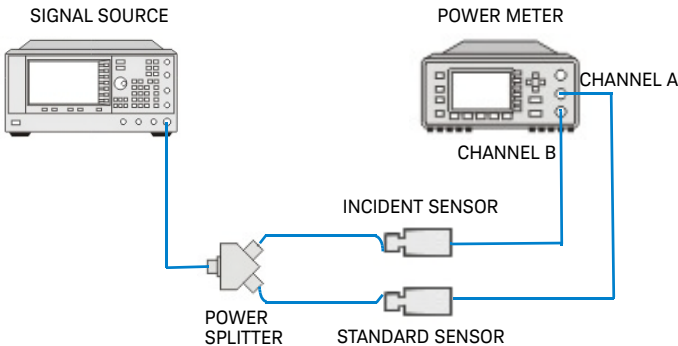


**Figure 3-3** Frequency response test setup

## Procedure

- 1 Set the power meter measurement unit as dBm.
- 2 Zero and calibrate the incident sensor on the power meter Channel B and the power sensor (standard sensor) on the power meter Channel A, respectively.
- 3 Set up the instruments as shown in [Figure 3-3](#).
- 4 Set the source frequency as 10 MHz and power level as 6 dBm. Turn on RF output.
- 5 Load the calibration factor of the standard sensor and incident sensor for the current frequency into power meter if necessary.
- 6 Measure and store the power ratio of Channel A to Channel B for the current frequency.

$$\text{Ratio} = P_{\text{STD}} - P_{\text{INCO}}$$

- 7 Repeat [step 4](#) to [step 6](#) for each frequency point between 10 MHz and 6 GHz.
- 8 Turn off the source RF output.
- 9 Zero the UUT and set the measurement unit to dBm.
- 10 Make connections as indicated in [Figure 3-4](#).

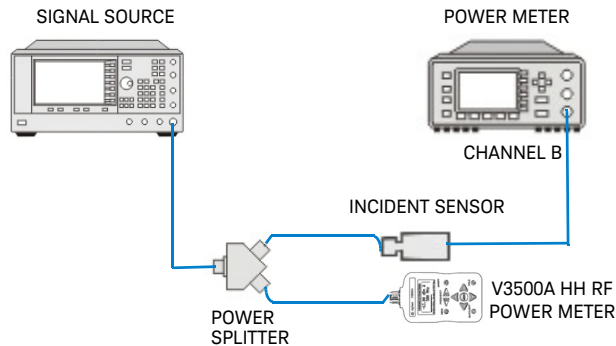

**Figure 3-4** UUT connected for frequency response test

- 11 Set the source frequency based on the test frequency and turn on RF output.

- 12** Load the calibration factor of incident sensor for the current frequency into the power meter if necessary.
- 13** Set the current frequency for UUT.
- 14** Measure and store the power meter Channel B input power for the current frequency ( $P_{INC}$ ).
- 15** Measure and store the UUT input power for the current frequency ( $P_{UUT}$ ).
- 16** Repeat **step 11** to **step 15** for each test frequency determined in **step 7**.
- 17** Turn off the source RF output.
- 18** Calculate the UUT frequency response at each frequency.

$$\text{UUT Frequency Response} = P_{UUT} - (P_{INC} + (P_{STD} - P_{INC0}))$$

## Linearity Test


### Specifications

Electrical Characteristics	Performance Limits
Linearity test	±0.1 dB

### Equipment

- Function generator: Keysight 33250A
- Power splitter: Keysight 11667A
- Fixed attenuator: Keysight 8491A (Option 010)
- Power meter: Keysight E4418B
- Power sensor: Keysight N8482A
- 1 dB step attenuator: Keysight 8494G
- 10 dB step attenuator: Keysight 8496G
- Switch driver: 11713A

### Test setup

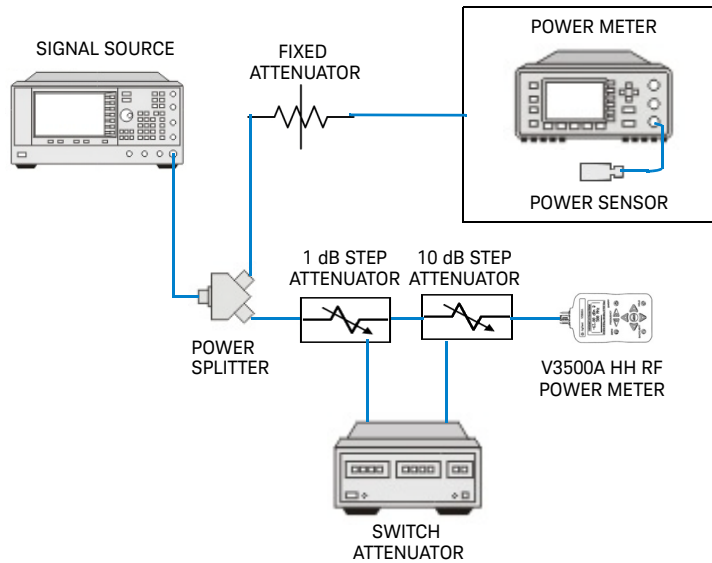

**Figure 3-5** Linearity test setup

### Procedure

- 1 Zero the UUT.
- 2 Zero and calibrate the reference sensor using a power meter.
- 3 Set up the instruments as shown in [Figure 3-5](#).
- 4 Set the UUT measurement unit as dBm.
- 5 Set the UUT test frequency as 50 MHz.
- 6 Set the power meter measurement unit as dBm.
- 7 Set both 1 dB step attenuator and 10 dB step attenuator to 0 dB attenuation.
- 8 Obtain the total insertion loss of the two step attenuators,  $Att_0$ .
- 9 Set the source to output 50 MHz and 6 dBm CW signal.
- 10 Fine-tune the source until the UUT reading of  $0.00 \text{ dBm} \pm 0.01 \text{ dB}$ . Record the UUT reading as  $P_{t0}$  and record the power meter reading as  $P_{m0}$ .
- 11 Increase the source output power by 6 dB.

- 12** Set the attenuation of 1 dB step attenuator and 10 dB step attenuator for the current test point according to [Table 3-2](#).
- 13** Obtain the precise attenuation of the two step attenuators for the current test point  $Att_1$  and  $Att_{10}$ .
- 14** Record the UUT reading as  $P_t$  and record the power meter reading as  $P_m$ .
- 15** Calculate the linearity error according to the equation below, and compare it with its specification.

$$\text{Linearity} = P_t - P_S$$

$$P_S = P_m - \text{Offset} - (Att_{10} + Att_1)$$

$$\text{Offset} = P_{m0} - (P_{t0} + Att_0)$$

**Table 3-2** Attenuator settings

Test Condition	Total Attenuation (dB)	8494G Setting (dB)	8496G Setting (dB)	11713A SCPI Command
+6 dBm	0	0	0	B12345678
+5 dBm	1	1	0	A5B1234678
+4 dBm	2	2	0	A6B1234578
+3 dBm	3	3	0	A56B123478
+2 dBm	4	4	0	A7B1234568
+1 dBm	5	5	0	A57B123468
0 dBm	6	6	0	A67B123458
-1 dBm	7	7	0	A567B12348
-2 dBm	8	8	0	A78B123456
-3 dBm	9	9	0	A578B12346
-4 dBm	10	10	0	A678B12345
-5 dBm	11	1	10	A15B234678
-6 dBm	12	2	10	A16B234578
-7 dBm	13	3	10	A156B23478
-8 dBm	14	4	10	A17B234568
-9 dBm	15	5	10	A157B23468
-10 dBm	16	6	10	A167B23458
-11 dBm	17	7	10	A1567B2348
-12 dBm	18	8	10	A178B23456
-13 dBm	19	9	10	A1578B2346
-14 dBm	20	10	10	A1678B2345
-15 dBm	21	1	20	A25B134678
-16 dBm	22	2	20	A26B134578
-17 dBm	23	3	20	A256B13478

**Table 3-2** Attenuator settings (continued)

Test Condition	Total Attenuation (dB)	8494G Setting (dB)	8496G Setting (dB)	11713A SCPI Command
-18 dBm	24	4	20	A27B134568
-19 dBm	25	5	20	A257B13468
-20 dBm	26	6	20	A267B13458
-21 dBm	27	7	20	A2567B1348
-22 dBm	28	8	20	A278B13456
-23 dBm	29	9	20	A2578B1346
-24 dBm	30	10	20	A2678B1345
-25 dBm	31	1	30	A125B34678
-26 dBm	32	2	30	A126B34578
-27 dBm	33	3	30	A1256B3478
-28 dBm	34	4	30	A127B34568
-29 dBm	35	5	30	A1257B3468
-30 dBm	36	6	30	A1267B3458
-31 dBm	37	7	30	A12567B348
-32 dBm	38	8	30	A1278B3456
-33 dBm	39	9	30	A12578B346
-34 dBm	40	10	30	A12678B345
-35 dBm	41	1	40	A35B124678
-36 dBm	42	2	40	A36B124578
-37 dBm	43	3	40	A356B12478
-38 dBm	44	4	40	A37B124568
-39 dBm	45	5	40	A357B12468
-40 dBm	46	6	40	A367B12458

# Noise Test

## Specifications

Electrical Characteristics	Performance Limits
Noise test	-61 dBm

## Procedure

- 1 Zero the UUT.
- 2 Set the UUT measurement unit as dBm.
- 3 Set the UUT averaging to 32.
- 4 Set the UUT measurement mode to normal speed.
- 5 Record the UUT reading as  $P_t$  and compare against specification.

# Performance Test Record

Keysight V3500A Handheld RF Power Meter

Tested by \_\_\_\_\_

Serial Number \_\_\_\_\_

Date \_\_\_\_\_

## SWR

Frequency	SWR

## Accuracy

Frequency	P <sub>STD</sub>	P <sub>INC0</sub>	P <sub>UUT</sub>	P <sub>INC</sub>	Frequency Response <sup>[a]</sup>

[a] Frequency response = P<sub>UUT</sub> - (P<sub>INC</sub> + (P<sub>INC</sub> + (P<sub>STD</sub> - P<sub>INC0</sub>))

## Linearity

A<sub>TT0</sub> = 0

P<sub>t0</sub> = \_\_\_\_\_

P<sub>m0</sub> = \_\_\_\_\_

Offset = P<sub>m0</sub> - (P<sub>t0</sub> + A<sub>TT0</sub>)

Att <sub>1</sub>	Att <sub>10</sub>	P <sub>t</sub>	P <sub>m</sub>	P <sub>S</sub> <sup>[a]</sup>	Linearity <sup>[b]</sup>

[a] P<sub>S</sub> = P<sub>m</sub> - Offset - (Att<sub>10</sub> + Att<sub>1</sub>)

[b] Linearity = P<sub>t</sub> - P<sub>S</sub>

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

## 4 Repair Guide

Introduction	38
Replaceable Parts	39
Required Tools	44
Disassembly Instructions	45
Reassembly Instructions	48
Returning Instrument for Service	51

This chapter details the replaceable parts for the V3500A Handheld RF Power Meter. It also explains how to assemble and disassemble the power meter.

## Introduction

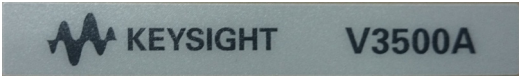


This chapter contains details of some of the higher level components and assemblies which can be ordered from Keysight Technologies. It also details how to assemble and disassemble the V3500A Handheld RF Power Meter for repair. The contents included are:


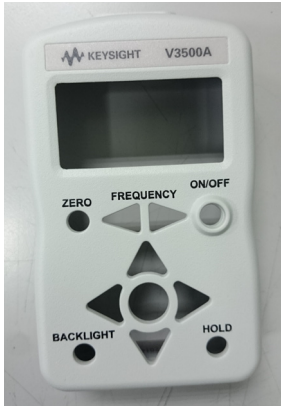
- Replaceable Parts
- Required Tools
- Disassembly Instructions
- Reassembly Instructions

To order a part, contact your local Keysight, quote the Keysight part number, specify the quantity required, and address the order to the nearest Keysight Technologies Sales and Service Office.

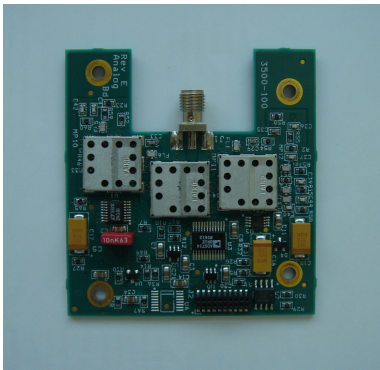
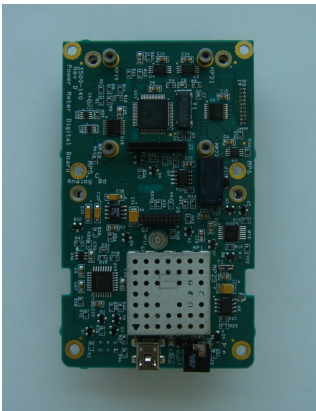
To return your instrument for repair or replacement, refer to “[Returning Instrument for Service](#)” on page 51.

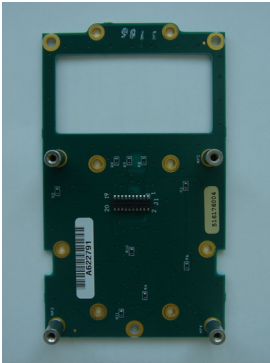
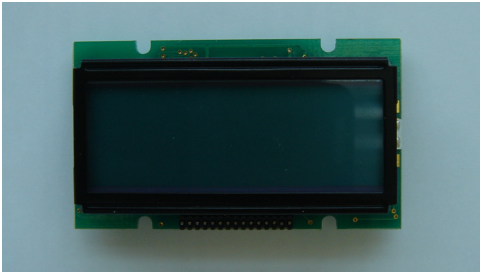
Replaceable Parts

Keysight Part Number	Description	Visual
V3500-34301	Front panel label	
V3500-34302	USB and power label	
V3500-34303	Rear panel label	
V3500-36005	N-male to SMA female connector	

Keysight Part Number	Description	Visual
V3500-40001	Keypad	
V3500-40100	Housing	

Keysight Part Number	Description	Visual
V3500-40101	Back cover	
V3500-40102	Battery door	
V3500-61300	Semi rigid cable 0.085	

Keysight Part Number	Description	Visual
V3500-66500	Analog board assembly	
V3500-66503	Digital board assembly SPO kit - Programmed	

Keysight Part Number	Description	Visual
V3500-66501	Keyboard assembly	
V3500-69300	Display assembly	

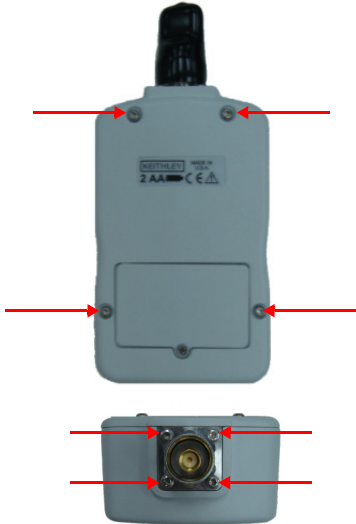
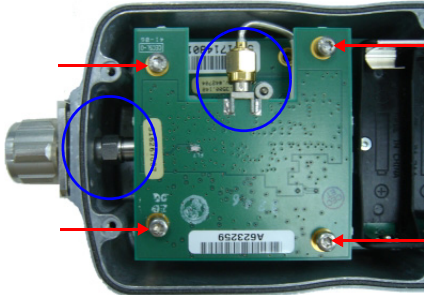
# Required Tools

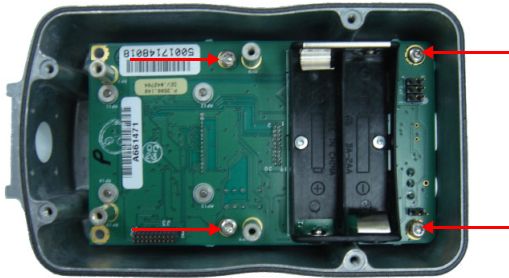
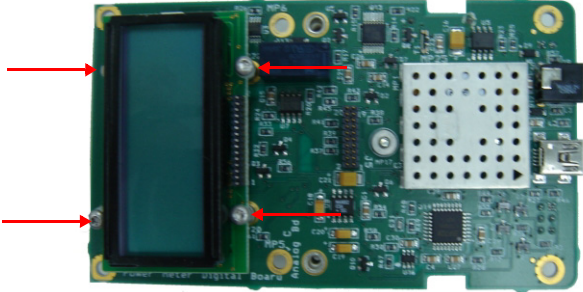
The required tools and torque values for fasteners are listed below:

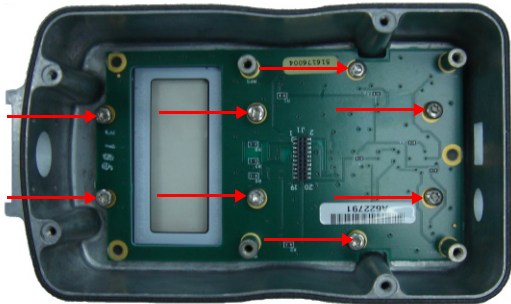
Item	Description/Default	Range of Values
Fit battery door and back cover	T10 screwdriver	5 in-lbs
Fit analog board assembly	T10 screwdriver	5 in-lbs
Fit digital board assembly	T10 screwdriver	5 in-lbs
Fit display board assembly	T10 screwdriver	5 in-lbs
Fit character LCD display module	T7 screwdriver	1 in-lb
Fit character LCD display module	3.5 mm torque wrench	8 in-lbs

# Disassembly Instructions

Follow the instructions below to disassemble the V3500A Handheld RF Power Meter.

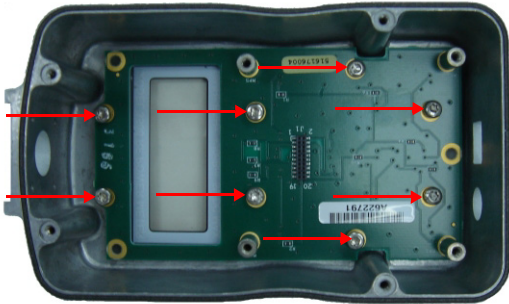
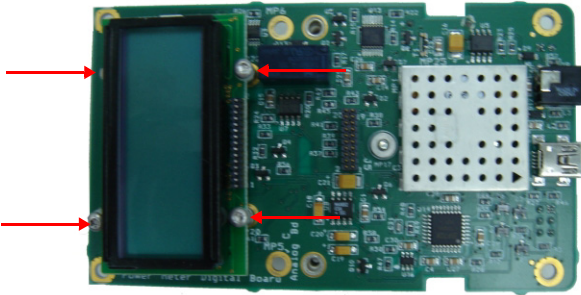
Instructions	Visual
<ul style="list-style-type: none"><li>– Remove the 4-40x3/8 TPH screw from the back cover with 5 in-lbs T10 driver.</li><li>– Remove the 4-40x1/4 TPH screws from N-male to SMA female connector with 5 in-lbs T10 driver (if RF connector needs to be replaced).</li></ul>	
<ul style="list-style-type: none"><li>– Remove the 4-40x1/4 TPH screws from the analog board assembly with 5 in-lbs T10 driver.</li><li>– Remove the connections (between attenuator and SMA port of type-N connector and between semi-rigid cable and SMA (f) (connector of analog board) to 8 in-lbs using 3.5 mm torque wrench.</li></ul>	

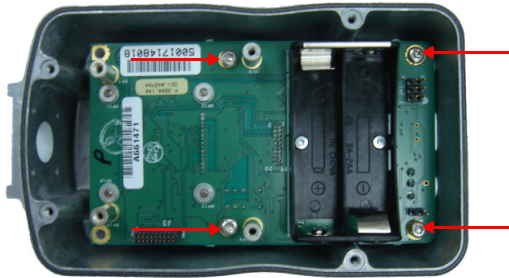
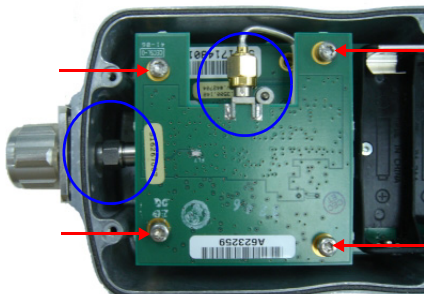
Instructions	Visual
Remove the 4-40x1/4 TPH screws from the digital board assembly with 5 in-lbs T10 driver.	 A photograph of the digital board assembly inside a device's casing. Four screws are highlighted with red arrows: two on the left side and two on the right side of the board.
Remove the 2-56x1/4 TPH screws from the character LCD display module with 1 in-lb T7 driver.	 A photograph of the character LCD display module. Two screws are highlighted with red arrows: one on the left side and one on the right side of the module.


Instructions	Visual
<p>Remove the 4-40x3/16 TPH screws from the display assembly with 5 in-lbs T10 driver.</p>	 A photograph showing the internal components of the Keysight V3500A device. The display assembly is visible, and eight screws are highlighted with red arrows, indicating they are to be removed. The screws are located around the perimeter of the display assembly. The device is housed in a black plastic casing.

# Reassembly Instructions

The reassembly process is simply the reverse of the disassembly process. Follow the instructions below to reassemble the V3500A Handheld RF Power Meter.

Instructions	Visual
<p>Insert the 4-40x3/16 TPH screw (V3500-36002) – 8 pieces, into the indicated locations of the display board using a T10 driver and torque it to 5 in-lbs.</p>	
<ul style="list-style-type: none"><li>– Put the nylon washers on top of standoffs.</li><li>– Insert the character LCD display module into J2 on the digital board assemble.</li><li>– Place another nylon washer on a 2-56x1/4 TPH screw and then insert the screw through the slot in the display, through the washer, and into standoff. Turn the screw enough to engage with the threads in the standoff, but do not tighten it down. This will make it easier to insert the washers between the display and the other three standoffs.</li><li>– Repeat the above steps for the other three standoffs of the digital board.</li><li>– Once they are all done, torque the 4 screws using to 1 in-lb using T7 driver.</li></ul>	

Instructions	Visual
<ul style="list-style-type: none"> <li>– The four locations indicated show where each hole in the digital board will line up with the standoffs on the keyboard. Look through the holes indicated in the picture. Shift the board until the holes are concentric with the threaded holes in the standoffs in the keyboard. Once the board is aligned, press down on it so that the connector J5 on the digital board engages with the connector J1 on the keyboard. Be sure to have the jumper wire clamped the hole on the digital board and the standoff on the keyboard.</li> <li>– Insert the 4-40x1/4 TPH screw (V3500-36001) – 4 pieces, into the four holes and torque it to 5-in lbs using T10 driver.</li> </ul>	
<ul style="list-style-type: none"> <li>– Connect the attenuator to the SMA port of the N type connector, finger tighten it.</li> <li>– Set the analog board (V3500-66500) loosely into the housing.</li> <li>– Thread the nut of the semi-rigid cable onto the SMA connector (J1) of the analog board. Fingers tighten it only at this point.</li> <li>– Use the screw holes as the visual alignment guide. Align the board until the holes in the analog board are aligned with the threaded holes in the standoffs on the digital board. Once they are aligned, press down the analog board to engage connector J2 to connector J3 on the digital board.</li> <li>– Insert the 4-40x1/4 TPH screw – 4 pieces, into the four holes and torque it to 5 in-lbs using a T10 driver.</li> <li>– Using a 3.5mm torque wrench, tighten the connections (between the attenuator and the SMA port of type-N connector and between the semi-rigid cable and SMA (f) connector of analog board) to 8 in-lbs using 3.5 mm torque wrench.</li> </ul>	

Instructions	Visual
<p>Attach the battery door onto back cover. Insert the split ring washer – 4 pieces and 4-40x3/8 TPH screw – 4 pieces. Tighten the connections to 5 in-lbs using a T10 driver.</p>	 The image shows the back of a light blue rectangular electronic device. At the top, there is a black connector. Below it, the back cover has four screws at the corners and a central rectangular battery door. A label on the back cover reads "N9791A.011" and "2 AA" with a battery icon and CE mark. The device is shown against a white background.

## Returning Instrument for Service

Before shipping your instrument for repair or replacement, Keysight recommends that you acquire the shipping instructions from the Keysight Technologies Service Center. A clear understanding of the shipping instructions is necessary to secure your product for shipment.

- 1** Write the following information on a tag and if attach to the instrument.
  - Name and address of owner
  - Instrument model number
  - Instrument serial number
  - Description of the service required or failure indications
- 2** Remove all accessories from the instrument. Do not include accessories unless they are associated with the failure symptoms.
- 3** Protect the instrument by wrapping in plastic or heavy paper.
- 4** Pack the instrument using foam or other shock absorbing material and place it in a strong shipping container.

You are recommended to use the original shipping material or order materials from a Keysight Technologies Sales Office. If both options are not available, place 8 to 10 cm (3 to 4 inches) of shock-absorbing and static-free packaging material around the instrument to avoid movement during shipping.

- 5** Seal the shipping container securely.
- 6** Mark the shipping container as FRAGILE.

In the ensuing correspondence, refer to the instrument by its model number and full serial number.

### NOTE

It is recommended that you always insure your shipments.

THIS PAGE HAS BEEN INTENTIONALLY LEFT BLANK.

This information is subject to change without notice. Always refer to the English version at the Keysight website for the latest revision.

© Keysight Technologies 2010-2017  
Edition 6, December 1, 2017

Printed in Malaysia



V3500-90006

[www.keysight.com](http://www.keysight.com)