



Network Time Machine

Quick Start Guide: Premium 3 Model


Your Network Time Machine (NTM) comes with the software already installed and licensed. After you have unpacked it from its shipping container, proceed as follows:

- 1. Install the NTM in a 19-inch rack.
- 2. Connect cables as shown in the figure below.
- 3. Turn on AC power to the storage units. Wait until all the green front panel LEDs on the disk drives have stopped flashing (up to 3 minutes). Then turn on the processor unit.
- 4. When the Windows 2008 server login screen appears, login with username **operator** and password **ClearSight1**.
- 5. Start the NTM application by selecting **Start > All Programs > ClearSight Distributed > ClearSight Network Time Machine Distributed Agent Manager**.
- 6. After it launches, add the Agent:


Host: localhost
Username: Admin
Password: (leave blank)

7. Connect to the Agent.

If you are using a 1 Gbps adapter, the ports will look like this:

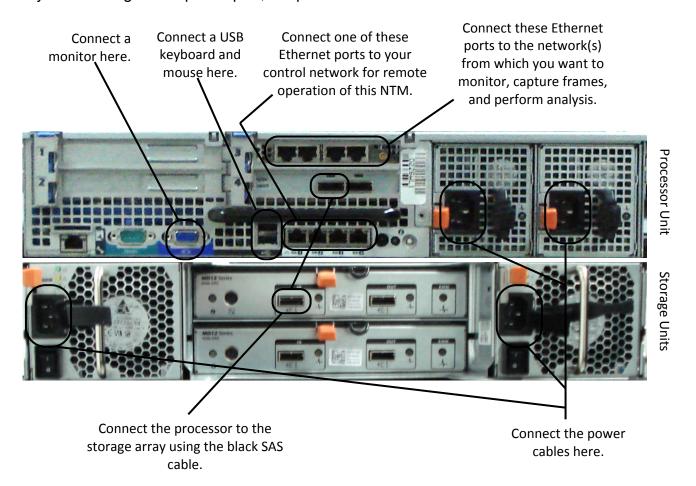

If you are using a 10 Gbps adapter, the ports will look like this:

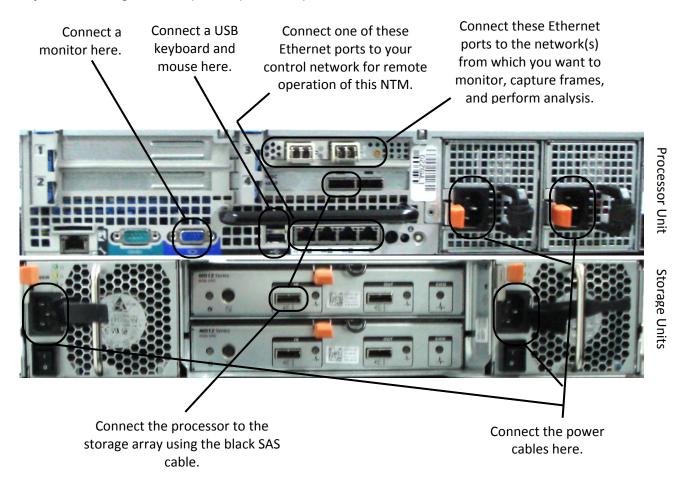

Contacting Fluke Networks



support@flukenetworks.com

+1-425-446-4519

Australia: 61 (2) 8850-3333 or 61 (3) 9329 0244

• Beijing: 86 (10) 6512-3435

Brazil: 11 3759 7600

• Canada: 1-800-363-5853

• Europe: +31-(0) 40 2675 600

• Hong Kong: 852 2721-3228

Japan: 03-6714-3117

Korea: 82 2 539-6311

• Singapore: 65-6799-5566

Taiwan: (886) 2-227-83199

USA: 1-800-283-5853

• Anywhere in the world: +1-425-446-4519

Visit our website for a complete list of phone numbers.

