

the AdjustaGrill™ & Sear

Instruction Book - LGR350



Breville®



Contents

- 2 Breville Recommends Safety First
- 2 Limited Product Warranty
- 8 Components
- 9 Functions
- 11 Care, Cleaning & Storage



Limited Product Warranty

Breville's warranty for this product covers the repair or replacement if it's found to be defective due to faulty materials, workmanship, or function within the warranty period. All legal warranty rights under applicable national legislation will be respected and will not be impaired by our warranty. For details on length of warranty, to obtain a printed copy or to read full terms and conditions please

scan the QR code or visit www.breville.com. Alternatively, call the Breville Service Centre (see back cover for contact details).



QR149

BREVILLE RECOMMENDS SAFETY FIRST

At Breville, we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

READ ALL
INSTRUCTIONS BEFORE
USE AND SAVE FOR
FUTURE REFERENCE

- Carefully read all instructions before operating the grill for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional stickers before using the grill for the first time.

- The grill and its cord should be kept out of reach of children aged 8 years or younger.
- Do not place the grill near the edge of a bench or table during operation.
- Ensure that the surface is level, clean and free of water, etc.
- Keep the grill clear of walls, curtains and other heat or steam sensitive materials.
- The grill must be used on a properly grounded outlet. If you are not sure if the power outlets are properly grounded, please consult your electrician.
- Do not, under any circumstances, modify the power plug or use an adapter.
- Do not place the grill on or near a hot gas or electric burner, or where it could touch a heated oven. Use the grill well away from walls.
- Provide adequate space above and on all sides around the grill for air circulation.
- Do not place the grill on any surface that may be affected by heat. The use of a heat resistant mat under the grill is recommended on these surfaces.
- Always operate the grill on a stable and heat resistant surface. Do not use on a cloth-covered surface, near curtains or other flammable materials.
- Do not use on a sink drain board.
- Do not touch hot surfaces. Use the handle to lift and open the top plate. Take care when using the height-adjustable control clip.
- Do not leave the grill unattended when in use.
- Do not allow the power cord to come in contact with the hot cooking plates. Ensure the power cord does not become trapped

between the cooking plates during use and storage.

- Always keep the power cord away from any heat source including the accessible surfaces of the grill, and those of other appliances nearby.
- The grill is not suitable to be used in a small enclosure. Ensure to leave adequate space all around the grill. Minimum space of 20cm is recommended.
- Do not place anything on top of the grill when the lid is closed, during operation and when storing.
- Always switch the grill off at the power outlet, then unplug the power cord and allow to cool. Ensure the unit has cooled down before cleaning, attempting to move the appliance, disassembling, assembling and when storing the appliance.
- Cleaning and user maintenance of the grill should not be carried out by children.
- Do not use chemicals, steel wool, metal scouring pad, harsh abrasives, caustic cleaners or oven cleaners to clean the grill as these can damage the housing or the coating of the cooking plates.
- Always remove the food from the grill with a heatproof utensil e.g., silicone spatula or tongs. Never use your hands.
- Do not use sharp objects or utensils inside the grill as they may scratch or damage the surface of the cooking plates.
- The grill is not intended to be operated by means of an external timer or separate remote control system.
- Do not place the grill in direct sunlight. Colour fading and discolouration

may occur when the grill is consistently exposed to UV light.

- Keep the exterior housing and the non-stick cooking plates clean. Follow the cleaning instructions provided in this book. Refer to Care, Cleaning and Storage (Page 11).



CAUTION

Do not touch hot surfaces. The accessible surfaces will be hot when the grill is operating and for some time after use.



**CAUTION: Hot Surfaces.
Do Not Touch.**

This appliance is marked with a hot surface symbol.



WARNING

Fully unwind the power cord from the cord wrap on base before use.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the part, unless it is recommended in the cleaning instructions.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the

appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and /or repair.

- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.

- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.

Misuse may cause injury.

- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- During electrical storms, the appliance should be disconnected from the power source at the wall socket to prevent any electrical surges that may arise during the storm and

which may inadvertently cause damage to the appliance and its electronic componentry.

- Always turn the appliance to the off position by switching off at the power outlet and unplugging from the power outlet
- Before cleaning, always turn the appliance to the off position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**



Components



- A. Heavy-duty stainless-steel arms handle
- B. Drip tray (dishwasher safe)
- C. 'Power' and 'Ready' lights
- D. Height-adjustable control clip
- E. Variable temperature control dial with 7 settings

- F. Floating hinge top plate
- G. Non-stick cooking plates
- H. Safety storage lock
- I. Swing feet

Not shown

- Non-slip feet
- Cord wrap on base



Functions

BEFORE FIRST USE

Remove any promotional materials and packaging materials before use. Check that the cooking plates are clean and free of dust. If necessary, wipe over the plates with a damp cloth.



NOTE

When using the grill for the first time you may notice a fine smoke haze. This is caused by the heating of some of the components. There is no need for concern.



WARNING

Before use, fully unwind the power cord from the cord storage facility.

HOW TO USE GRILL

1. Insert the power plug into a 230/240V power outlet and turn the power on. The red POWER light will illuminate.
2. Turn the temperature dial to LO, MED, HI, or SEAR. Allow the grill to preheat with the grill fully closed until the green READY light illuminates.
3. While the grill is preheating, prepare and assemble ingredients to be cooked. Once the grill has preheated, open grill using the handle and place food towards the back of the bottom cooking plate.



NOTE

The grill can be used to cook foods, in the open or closed position.



NOTE

The storage clip should not be used to clamp down the top plate when food is in the grill.

4. Use the height-adjustable control clip located on the right-hand side of the grill, to adjust the desired height of the top plate according to your cooking needs. To create grill marks, lower the top plate so that it makes direct contact with the food.
5. When the food is cooked through, use the handle to open the grill. Remove food using a silicone, plastic, or wooden utensil. Never use metal tongs or a knife, as these can cause damage to the non-stick coating.



NOTE

Always allow the grill to preheat until the green READY light illuminates before cooking.



WARNING

Fully unwind the power cord from the cord storage facility before use.

USING THE HEIGHT-ADJUSTABLE CONTROL CLIP

The height-adjustable control clip enhances the versatility of your grill, enabling it to accommodate various cooking needs. Whether you are searing meats and vegetables, grilling delicate ingredients like fish or toasting open sandwich melts, this feature comes in handy.

Located on the right-side of the grill, the height-adjustable control clip allows you to position the top plate at one of seven different height settings above the bottom plate. This flexibility allows you to toast a variety of bread sizes and thicknesses while also accommodating open sandwich melts.



ADJUSTABLE COOKING PLATE ANGLE

The AdjustaGrill™ & Sear, features unique swing feet which are designed to enable the bottom plate to switch between angled and flat surface when cooking different types of food. For example, when cooking steaks, extending the swing feet creates a flat cooking surface that prevents the steaks from sliding off the cooking area while still maximizing the fat drained into the drip tray while cooking.



VARIABLE TEMPERATURE CONTROL DIAL

The grill includes a temperature control dial for versatile cooking. Use the LO setting for toasting sandwiches, and the SEAR setting for foods that require high heat for cooking e.g., steaks.





Care & Cleaning

Before cleaning, switch the power off at the power outlet, and then remove the power plug. Allow your grill to cool before cleaning. The grill is easier to clean when slightly warm. Always clean your grill after each use to prevent a build up of baked-on foods. Wipe cooking plates with a soft cloth to remove food residue. For baked-on food, squeeze some warm water mixed with detergent over the residue, then, clean with a non-abrasive plastic scouring pad.

CLEANING THE DRIP TRAY

Remove and empty the drip tray after each use and wash in warm, soapy water. Rinse and dry thoroughly with a clean, soft cloth.

Alternatively, you can clean the drip tray by placing it on the top shelf of the dishwasher.



WARNING

Do not immerse any other part of the grill or the power cord in the dishwasher, water or any other liquid.

DURABLE NON-STICK COATING

Cooking on a non-stick surface minimises the need for oil, reduces the likelihood of food sticking to the surface and makes cleaning easier. Any discolouration that may occur will only detract from the appearance of the grill and will not affect the cooking performance. Do not use metal or other abrasive scourers when cleaning the non-stick coating. Wipe with a warm, soapy damp soft cloth. Remove stubborn residue with a non-abrasive plastic scouring pad or nylon washing brush.



NOTE

The cooking plates are coated with a non-stick surface, do not use abrasives.



NOTE

Do not use oil cooking spray on non-stick coating as this may affect the performance of the non-stick cooking plates.

STORAGE

To store your grill:

1. Switch off the grill and unplug power cord from the power outlet and allow to cool.
2. Clean as per instructions given.
3. Close the grill and slide the height-adjustable control clip towards the front handle to the LOCK position so that the top and bottom cooking plates are locked together.
4. Click the removable drip tray into place.
5. Wrap the power cord in the cord storage area below the grill.
6. Store on a flat, dry level surface.



NOTE

The storage clip should not be used to clamp down the top plate when food is in the grill.

Breville Customer Service Centre

Australian Customers

Phone: 1300 139 798

Web: www.breville.com

New Zealand Customers

Phone: 0800 273 845

Web: www.breville.com

Breville®

Breville and the Breville Logo are trademarks of Breville Pty Ltd ("Breville") and Breville's products are distributed in Australia and New Zealand under license.
Copyright Breville Pty. Ltd. 2023.

Due to continued product improvement, the products illustrated/photographed in this booklet may vary slightly from the actual product.