

the Brunch Set™

Instruction Book – Suits all LTA822 & LKE822 Models



Breville®



Contents

LTA822 Toaster:

- 2 Important Safeguards
- 7 Components
- 8 Functions
- 10 Care, Cleaning & Storage

LKE822 Kettle:

- 11 Important Safeguards
- 16 Components
- 17 Functions
- 18 Care & Cleaning/ Storage

IMPORTANT SAFEGUARDS

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions. Misuse can cause potential injuries.

BREVILLE RECOMMENDS SAFETY FIRST

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Remove and safely discard any packaging material and promotional labels before using the toaster for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this toaster.
- Do not place the toaster near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water and other substances.
- Do not operate the toaster on a sink drain board.
- Do not place the toaster on or near a hot gas or electric burner, or where it could touch a heated oven.
- Keep the toaster clear of walls and other heat sensitive materials such as cloths and curtains.
- Always ensure the toaster is properly assembled before use. Follow the instructions provided in this book.

- The toaster is not intended to be operated by means of an external timer or separate remote control system.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge in the bread carriage.
- Never cover the toaster when it is plugged into the power outlet or while hot.
- Do not place cold toast directly on top of toasting slots to warm toast as this may prevent correct air circulation and damage the toaster.
- Do not move the toaster whilst in operation or when hot.
- The temperature of accessible surfaces may be high when the toaster is in operation and also for some time after use.
- When operating the toaster, keep a minimum distance of 10cm of space from the surrounding sides & 20cm above.
- Do not place the toaster in enclosed areas
- Do not leave unattended when in use as toast may jam or wedge in the bread carriage. Never attempt to extract toast or any other item that has jammed or wedged in the toaster with a knife or any other object as contact with live elements may not only damage the element but cause electrocution.
- Do not touch hot surfaces. Use side areas and oven mitt for lifting and carrying the toaster.
- Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the toaster, when the toaster is not in use and before cleaning or storing.
- Do not operate the toaster without the removable crumb tray in place.

- The crumb tray should be regularly cleaned. Do not allow breadcrumbs to accumulate in the bottom of the toaster. Failure to clean the crumb tray regularly may result in a fire hazard. To clean any additional crumbs, turn the toaster upside down over a sink and shake crumbs free.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.
- Do not place the toaster in direct sunlight. Colour fading and discolouration may occur when the toaster is consistently exposed to UV light.
- Keep the toaster clean. Follow the cleaning instructions provided in this book.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.
- The appliance must be used on a properly grounded outlet. If it is not sure, please consult a qualified electrician.
- Do not, under any circumstances, modify the power plug or use a power plug adapter.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.

- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
May cause injury.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the parts, unless it is recommended in the cleaning instructions.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way.
- Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See a qualified electrician for professional advice.

- During electrical storms, the appliance should be disconnected from the power source at the wall socket to prevent any electrical surges that may arise during the storm and which may inadvertently cause damage to the appliance and its electronic componentry.

NOTE

This Breville 2 Slice Toaster is electronically controlled and will not operate until the toaster is plugged into a 230V or 240V power point, switched on and the lever latched down.

WARNING

- Never operate the toaster on its side.
- Never add any food substance to the bread, muffins or crumpets as this can lead to electrocution or fire.
- This toaster is for toasting bread, crumpets and muffins only. Placing other items in the toaster can lead to electrocution or a fire.


WARNING

Do not carry or move the toaster by holding the top metal cover between toasting slots as sharp edges may cause injury.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**



Components

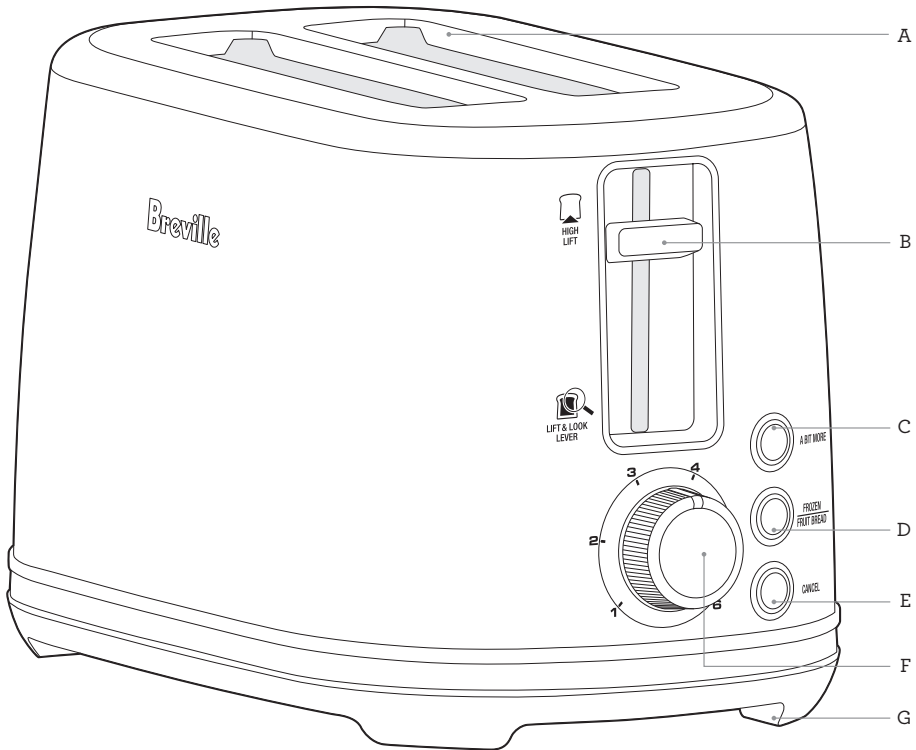

- A.** Self-centring, extra wide and deep toasting slots.
- B.** Carriage Control Lever with **LIFT & LOOK™/HIGH LIFT**
Lower the lever to lock the carriage into place for toasting or use the lever during the toasting cycle to raise the carriage so you can check the toasting progress without interrupting the toasting cycle. Once the toasting cycle has completed, raise the high lift lever to make it easier to remove smaller items.
- C.** **A BIT MORE™** If your toast comes up too light, lower the carriage and press once to add a little extra toasting time.

- D.** **FROZEN/FRUIT BREAD** button
Press Frozen/Fruit bread button to toggle between these two modes. Frozen setting activates additional toasting time required to toast frozen bread.
- E.** **CANCEL** button
Press to cancel the toasting cycle.
- F.** **Browning Control Dial**
Select the desired browning setting from '1' lightest to '6' darkest.
- G.** Non-slip feet

NOT SHOWN

- Power cord storage
- Slide out crumb tray



Functions

BEFORE FIRST USE

Before first use, remove any packaging material or promotional labels attached to your toaster.

1. Place the toaster on a dry, level heat resistant surface and unwrap the power cord from the base of the toaster.
1. Insert the power plug into a 220-240 volt power outlet and then turn the power on.



NOTE

When using the toaster for the first time, we suggest toasting on the maximum setting without bread. The toaster may emit a thin smoke or distinct odour on initial use. This is normal and not detrimental to the performance of the toaster .

2. Place only 1 slice of bread into each of the toasting slots. Ensure the bread slices are not too large or thick to fit the slots. If less than 2 slices are inserted, the usual browning setting may need to be reduced to avoid the toast burning.
3. Select the desired browning setting using the browning control dial. Colour settings range from '1' lightest to '6' darkest.



NOTE

When using the toaster for the first time, we suggest toasting the bread on setting 3 or 2. Varying types of bread and personal preference may require a different browning setting, for example, raisin toast and white light-textured breads may require a lower setting, whilst heavier textured rye breads may require a darker setting.

4. Press the carriage control lever down until it locks into position. The toasting cycle will automatically commence.



NOTE

If the toaster is not plugged in and switched on at the power outlet, the carriage control lever will not lock into position.

5. The toaster stops toasting when it has reached the end of the selected browning cycle. The toast will automatically rise in the slots. The toasting process can be stopped at any time by pressing the CANCEL button.



WARNING

Do not leave unattended when in use as toast may jam or wedge in the bread carriage. Never attempt to extract toast, crumpets or muffins or any other item that has jammed or wedged in the toaster with a knife or any other object, as contact with live elements may not only damage the elements, but can cause electrocution.

'LIFT & LOOK'[™] FEATURE

This feature can be used to check on the progress of the toasting cycle without interrupting it. Simply raise the carriage control lever to check on the browning progress of the toast and lower it down again if you wish to continue to toast.

HIGH LIFT FEATURE

Once the toasting cycle has completed, to remove smaller items such as crumpets and muffins, lift the carriage control lever to the HIGH LIFT position, approximately 1cm above the starting position. In the unlikely event that the bread, crumpet or muffins become jammed, switch the power off at the power outlet, then remove the power plug from the power outlet and use the high lift lever to carefully ease the bread out of the toaster, ensuring that you do not damage the self-centring slots or the elements.

'A BIT MORE™' SETTING

For additional toasting time or reheating, use this feature after the toasting cycle has completed if your toast requires a bit more toasting or needs reheating. Once the toast has popped up, lower the carriage control lever back down and then press the A BIT MORE™ button.



NOTE

The 'A Bit More™' setting will bypass the normal toasting cycle and toast for approximately 30 seconds when using the toast setting or approximately 15 seconds with the FRUIT BREAD setting.

FROZEN/FRUIT BREAD SETTING

To toast frozen bread (white light surround)

1. Place the frozen bread into the toasting slots.
2. Select the browning setting you would normally select if the bread was fresh.
3. Lower the carriage control lever until it locks into position.
4. Press the FROZEN/FRUIT BREAD button once and the button will illuminate white.
5. Once the toasting cycle has finished, the carriage will rise automatically.
6. Remove the toast.

To toast fruit bread (red light surround)

1. Place the fruit bread into the toasting slots.
2. To start the toasting process, press down the carriage control lever until it locks into place.
3. To select the FRUIT BREAD setting, press the FROZEN/FRUIT BREAD button twice and the button will illuminate red.
4. Select the desired browning setting by adjusting the BROWNING CONTROL DIAL from setting, '1' (lightest) to '6' (darkest).
5. Once the toasting cycle has finished, the carriage will rise automatically.
6. Remove the fruit toast.



NOTE

The FROZEN BREAD function and A BIT MORE™ function cannot be operated at the same time.

CANCEL BUTTON

The toasting and defrosting cycles can be cancelled at any time by pressing the CANCEL button. When the CANCEL button is pressed, the toaster will turn off and automatically raise the toast.



Care, Cleaning & Storage

CARE AND CLEANING

1. Switch the toaster off at the power outlet and then remove the power plug from the power outlet. Allow the toaster to cool completely before cleaning.
2. The crumb tray will need to be cleaned regularly to avoid breadcrumbs, dried fruits, crusts etc. accumulating in the bottom of the toaster.
3. To remove the crumbs from the toaster, slide the crumb tray out from under the toaster carriage by pulling outwards away from the toaster.
4. Discard the crumbs and wipe tray over with a soft, damp cloth and dry thoroughly.
5. To remove any additional crumbs that have accumulated in the toasting carriages, turn the toaster upside down over a sink or bin and shake crumbs free.
6. Ensure crumb tray are dried thoroughly. Place crumb tray back into position by sliding the tray back and push in until completely locked into place.
7. Wipe the outside of the toaster with a slightly dampened soft cloth and then dry it with a soft dry cloth to dry completely.



NOTE

Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.

STORAGE

Switch the toaster off at the power outlet and remove the power plug from the power outlet. Allow the toaster to cool completely before storing. Follow the directions for cleaning and store in an upright position on a flat surface on a bench top or in an accessible cupboard. Do not store anything on top of the toaster.



WARNING

Do not immerse the toaster or power cord in water or any other liquid.



WARNING

Do not use the toaster without the slide-out crumb tray in position. Do not allow crumbs to build up in the crumb tray. Failure to clean the crumb tray regularly may result in a fire hazard.



NOTE

Exposure to cooking oils and cleaning chemicals may cause colour fading and discolouration to the toaster. If the toaster is exposed to oils or chemicals, turn off and unplug the appliance and use a damp cloth to clean the exterior surface of the toaster. Dry thoroughly before use.

IMPORTANT SAFEGUARDS

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions. Misuse can cause potential injuries.

BREVILLE RECOMMENDS SAFETY FIRST

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Remove and safely discard any packaging material and promotional labels before using the kettle for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this kettle.
- Always ensure the kettle is properly assembled before use. Follow the instructions provided in this book.
- The kettle must be used only with the power base supplied. This kettle is not intended to be operated by means of an external timer or separate remote-control system.
- This kettle has been designed specifically for the purpose of boiling drinking quality water only. Under no circumstances should this product be used to boil any other liquids or foodstuffs.
- Do not place the kettle near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water and other substances.
- Do not operate the kettle on a sink drain board.
- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.

- Do not place anything on top of the lid.
- Do not release the lid while the water is boiling. Ensure the lid is closed whilst boiling.
- Do not press the lid release button to open the lid during and after operation. This may result in boiling water splashing from the kettle. Pour out all the hot water from the kettle before opening the lid to refill.
- Never immerse the kettle base, power base, power cord or power plug in water, or allow moisture to come into contact with these parts.
- To prevent damage to the kettle do not use chemicals, alkaline cleaning agents, steel wool or abrasive cleaners to clean the inside or outside of the kettle. Use a mild cleaning agent with a soft damp cloth.
- Do not move the kettle while it is switched on.
- Always ensure the kettle switch is in the 'off' position, then turn the power off at the power outlet and remove the power plug from the power outlet before attempting to move the kettle, when the kettle is not in use and before cleaning and storing.
- Use caution when pouring water from the kettle, as boiling water and steam will scald. Do not pour the water too quickly.
- To protect against electric shock, do not immerse the kettle base, power base, power cord or power plug in water or allow moisture to come in contact with these parts.
- Do not remove the kettle from the power base during operation. Ensure the kettle has switched off after the water has boiled or reached the selected temperature, before removing the kettle from the power base. If the kettle is removed from the power base during the boiling cycle, the kettle will automatically switch off.
- Always fill the kettle with water between the minimum (MIN) and maximum (MAX) marks on the water window on the kettle. Too little water will result in the kettle switching 'OFF'. Filling above the maximum mark (MAX) may result in boiling water splashing from the kettle.
- The lid should always be locked firmly in place in the closed position before and during use.

- Do not open the lid during operation as this may result in boiling water splashing from the kettle. Pour all the hot water from the kettle before opening the lid to refill.
- Do not place the kettle in direct sunlight. Colour fading and discolouration may occur when the kettle is consistently exposed to sunlight.
- When using the kettle, avoid spillage of water on the kettle base and connector as this may cause damage to the kettle.
- Care should be taken when handling the kettle during use, ensuring that the kettle body and parts are not touched as these may still be hot due to residual heat after boiling. Always ensure to use the kettle handle when removing the kettle or pouring water after kettle has boiled.
- Do not use chemicals, steel wool, or abrasive cleaners to clean the outside of the kettle.
- The filter could become damaged with time. Check regularly and replace if found to be damaged.
- Ensure the kettle has cooled down before attempting to clean the filter and kettle.

WARNING

- Do not operate the kettle on an inclined plane. Do not move while the kettle is switched on.
- The appliance is designed for boiling of drinking quality water only.
- Never use to heat or boil any other liquids or foodstuffs. The lid should always be firmly in place and locked into the closed position before use.
- Keep the kettle clean. Follow the cleaning instructions provided in this book.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.
- The appliance must be used on a properly grounded outlet. If it is not sure, please consult a qualified electrician.
- Do not, under any circumstances, modify the power plug or use a power plug adapter.


- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
 - Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.
 - Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
 - This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- Misuse may cause injury.**
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - Children should be supervised to ensure that they do not play with the appliance.
 - Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
 - Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
 - To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the parts, unless it is recommended in the cleaning instructions.
 - Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
 - It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way.
 - Return the entire appliance to the nearest authorized Breville Service Centre for examination and/or repair.

- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See a qualified electrician for professional advice.
- During electrical storms, the appliance should be disconnected from the power source at the wall socket to prevent any electrical surges that may arise during the storm and which may inadvertently cause damage to the appliance and its electronic componentry.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**



Components

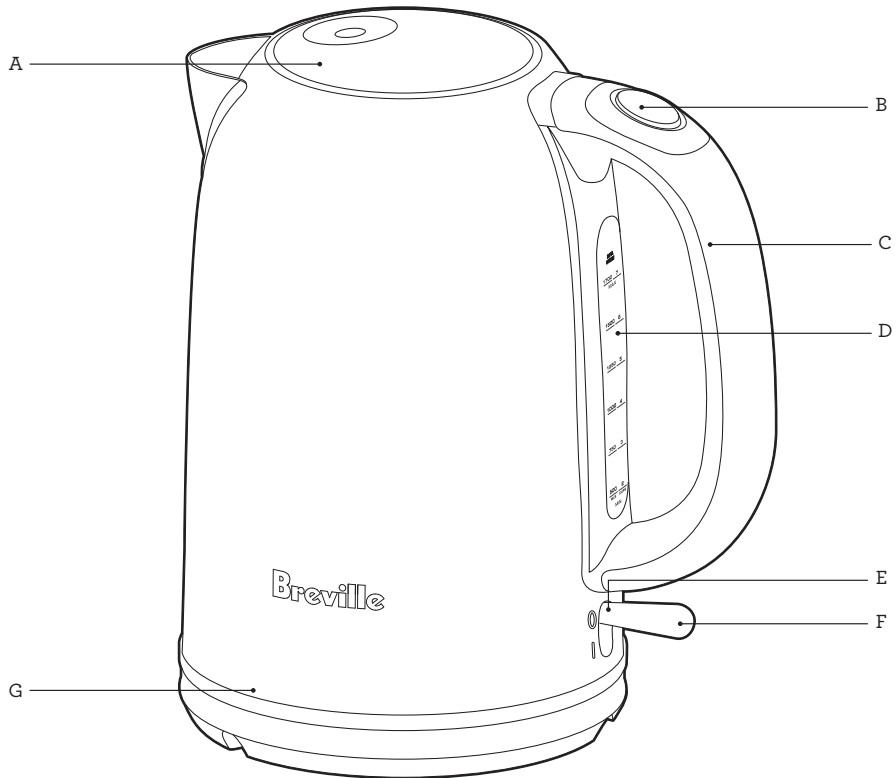

- A. Wide hinged lid pops open for easy filling and cleaning. Lid locks into place when pressed closed for additional safety
 - B. One touch pop-up lid release button
 - C. Cool-touch handle is comfortable to use and suitable for all hand sizes.
 - D. BPA Free* water level indicator
 - E. Illuminated 'ON' Light indicates power on when heating.
 - F. Power on/off switch with automatic cut off
 - G. Cord free kettle easily detaches from power base for ease of use.
- Not Shown**
- Power cord storage
 - Safety Boil Dry Protection ensures kettle automatically switches off if the kettle boils empty.

*Breville makes its BPA free claim for this product based on independent laboratory testing performed for all the food contact plastic materials of the product per EU Commission regulation No.10/2011.



Functions

BEFORE FIRST USE

Remove any promotional material attached to your kettle. It is recommended that before first use, the kettle is filled to the maximum level with cold tap water, boiled and water discarded. Your kettle will only operate when positioned on the power base with the 'On/Off' switch in the 'On' position. The kettle will automatically switch off once the water has boiled.

OPERATION OF YOUR KETTLE

1. To fill the kettle, remove it from the power base and open lid by pressing the lid release button. Fill with the desired amount of water.



NOTE

Always fill the kettle between the minimum (500ml) and maximum (1700ml) marks on the water window. Too little water will result in the kettle switching 'Off' before the water has boiled. Filling above the maximum mark (MAX) may result in boiling water splashing from the kettle.

2. Ensure the lid is locked firmly into place. Position the kettle securely onto the power base. Insert the power plug into a 230/240V power outlet and switch on.
3. Press the 'On/Off' switch to the 'On' position for water to boil.



NOTE

This kettle must only be used with the power base supplied. Use caution when pouring water from your kettle, as boiling water will scald. Do not pour the water too quickly.

The kettle will automatically switch 'off' once the water has boiled. Lift the kettle from the power base and pour the water. Take care to hold the kettle level, especially when filled to the maximum level. To re-boil it may be necessary to wait for a few seconds to allow the control to reset.

If further heating of the kettle is not required, switch 'Off' at the power outlet, unplug the power cord and empty the water from the kettle. Replace the kettle onto the power base and close the lid.

SAFETY BOIL DRY PROTECTION

The kettle is fitted with a safety device, which protects against overheating should the appliance be operated with insufficient water. If this occurs, the kettle will stop heating. Switch 'Off' at the power outlet and allow kettle to cool before refilling. Remove the kettle from the power base and add water. Return the kettle to the power base. The safety device will then automatically reset.



Care & Cleaning/ Storage

Always switch 'off' at the power outlet and unplug the appliance from the power outlet before cleaning.

REMOVABLE FILTER

The kettle features a removable mesh filter to remove scale deposits for cleaner water. To remove the scale deposits from the filter, open the lid and slide the filter up and out of the kettle.

The filter can be cleaned by running under hot water and rubbing with a cleaning cloth or brush. To replace filter, simply slide the filter down into the slot behind the spout of the kettle and push back into position.



NOTE

The filter could become damaged with time. Please check regularly and replace if found damaged.

MINERAL DEPOSITS AND DISCOLOURATION

Due to the large surface area of the concealed element in the interior base of the kettle, discolouration due to mineral deposits from tap water may appear more obvious by leaving a brown stain on the base. THIS IS NOT RUST.

Removal of Mineral Deposits

Mineral deposits in tap water may cause the kettle interior and water gauge to discolour over time. This may be removed by using Breville Kettle Cleaner (BKC250) or a proprietary kettle descaler which is available from most leading supermarkets, department and hardware stores.

BREVILLE KETTLE CLEANER

Directions for use:

1. Add 125ml of Breville Kettle Cleaner to 2 litres of water.
2. Fill kettle with mixture on a protected surface.

3. Bring kettle to boil and let stand for 30 minutes.
4. Clean spout by using a cloth dampened with Breville Kettle Cleaner and rub well then wipe off.
5. Bring the kettle to boil for a second time, then empty solution.
6. Fill kettle with fresh water and bring to the boil, discard boiled water.
Your kettle is now ready to make your next cup of tea/coffee.

ALTERNATIVELY

Fill the kettle until $\frac{3}{4}$ full with 1 part vinegar (or a few slices of lemon) and 2 parts water, bring to the boil and allow to stand overnight.

Empty the solution from the kettle. Fill the kettle with clean water, bring to boil and discard the water. Repeat and the kettle will be ready for use.

TO CLEAN THE EXTERIOR

The outside of the kettle may be wiped over with a damp cloth and polished with a soft dry cloth.



NOTE

Do not use chemicals, alkaline cleaning agents, steel wool or abrasive cleaners to clean the inside or outside of the kettle. Use a mild cleaning agent with a soft damp cloth.



NOTE

Exposure to cooking oils and cleaning chemicals may cause colour fading and discolouration to the kettle. If the kettle is exposed to oils or chemicals, turn off and unplug the appliance and use a damp cloth to clean the exterior surface of the kettle. Dry thoroughly before use.

STORAGE

Ensure the kettle is switched off, clean and dry before storing. Ensure the lid is closed and locked securely into place. Wrap the power cord around the cord storage under the power base. Stand the kettle upright on the power base. Do not store anything on top.



Notes

Breville Customer Service Centre

Australian Customers

Phone: 1300 139 798

Web: www.breville.com

New Zealand Customers

Phone: 0800 273 845

Web: www.breville.com

Breville®

Master Every Moment™

Breville, the Breville logo, Master Every Moment and Brunch Set
are trademarks of Breville Pty. Ltd. A.B.N. 98 000 092 928.
Copyright Breville Pty. Ltd. 2023.

Due to continued product improvement, the products illustrated/photographed in this booklet
may vary slightly from the actual product.

LKT822 (LTA822 & LKE822) - A23