

Cuisinart®

Core Collection 2-Slice XL Stainless Steel Toaster CPT-1600XA



Instruction
Booklet



www.cuisinart.com.au

Follow us @cuisinart_au



For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

IMPORTANT SAFEGUARDS

When using an electrical appliance, especially when children are present, basic safety precautions should always be taken, including the following:



- **CAUTION: BURN HAZARD - Hot surface.**
- The temperature of accessible surfaces may be high when the appliance is in use.
- This appliance is for indoor use only.
- To move the appliance only lift by the base. Lifting the appliance by the trays instead of the base could result in electrocution if energized.
- Never insert any hard, sharp or metal instruments into the slots as this could damage the toaster and cause a safety hazard. Risk of electrocution if metal objects are inserted when plugged in.
- Because the bread can burn, do not use the toaster near or under combustible materials like curtains or under kitchen wall cabinets.
- This appliance is intended for strictly domestic use and is not intended to be used in applications such as staff kitchen areas in shops, offices and other working environments; farmhouses; by clients in hotels, motels and other residential type environments; bed and breakfast type environments.
- If the power cable is damaged, it should be replaced by the manufacturer, its after-sales service or a similarly qualified professional to avoid danger.
- This appliance is not intended for use by persons (including children) with reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Let the appliance cool down completely and disconnect it before cleaning. Wipe the outside of the toaster with a clean damp cloth, then dry it carefully. To remove crumbs, slide out the crumb tray and throw the breadcrumbs away, then put the crumb collector back in place. Do not use the toaster without the crumb collector. To remove pieces remaining in the toaster, turn it upside down and shake gently to cause the pieces to drop.
- Do not place the appliance on or near a hot appliance. Do not use on heat-sensitive surfaces.
- Do not attempt to dislodge food when the toaster is plugged into an electrical outlet.
- Do not leave the appliance unattended when on.

- Always unplug the appliance after use and before cleaning. Never leave the appliance unattended when plugged in. Pull on the plug to unplug, never on the cable.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts, involving a risk of electric shock.
- The appliance should not be used with an external timer or with a separate remote-control system.
- Do not use the appliance if it has fallen or if it looks damaged.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

WARNING

Never operate the toaster on its side. Never add toppings or spreads to bread, crumpets, or muffins before toasting as this can lead to electrocution or fire.


SPECIAL CORDSET INSTRUCTIONS

A short power supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Extension cords may be used if care is exercised in their use. If an extension cord is used, the marked electrical rating of the extension cord must be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the countertop or tabletop where it can be tripped over unintentionally or pulled on by children.

CONTENTS

Important safeguards	2
Parts & features	3
Operating Instructions.....	4
Functions	4
Tips and hints	5
Cleaning & maintenance	5
Warranty.....	6

PARTS & FEATURES

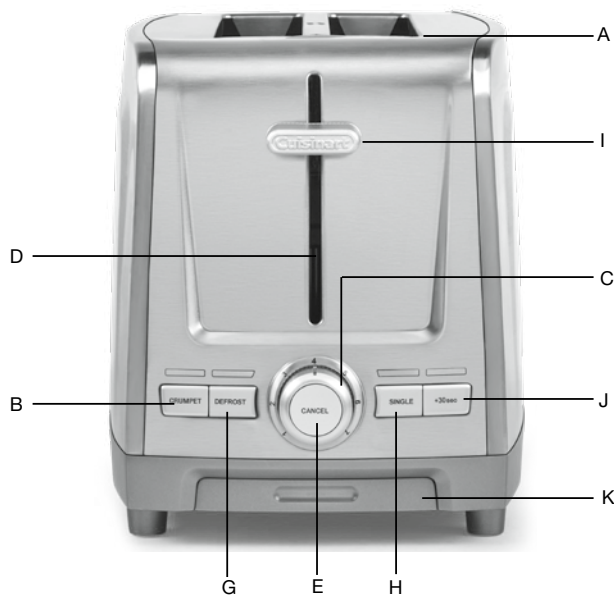

A. Extra Large Dual Toasting Slots

XL slots to accommodate a variety of bread types.

B. Crumpet Button

Press to activate the Crumpet setting. The crumpet feature reduces heat on one side of the toasting slot. This toasts the side of the crumpet slightly more than the other side, ideal for crumpets, bagels, burger buns, and more. The button lights up solid while toasting..

C. Toast Shade Dial (7 Settings)

Turn to select desired shade level (1-7).

D. Toast Activation

Activate the toasting function by pushing the lever down towards the Toast Shade Dial; the carriage will lower the bread into the toasting chamber.

E. Cancel Button

Press the CANCEL button in the centre of the Toast Shade Dial to stop the toasting process and eject the bread.

F. Audible Tone (not shown)

Lets you know when toasting is finished.

G. Defrost Button

Defrost and toast frozen bread. LED indicator will illuminate when selected.

H. Single Slice Toast Button

Adjusts the heat from the middle elements to evenly toast one slice of bread. LED indicator will illuminate when selected. Don't use for crumpets or English muffins.

I. QuickView™ Lever

Lever allows you to momentarily lift the bread during toasting to observe the shade status without interrupting the toasting cycle.

J. +30Sec Button

Can be used to toast for 30 seconds or to extend an originally selected browning shade setting for an additional 30 seconds.

K. Slide Out Crumb Tray

A removable tray located at the front of toaster that collects crumbs and slides out for easy cleaning.

L. Cord Storage (not shown)

Wraps the excess cord to keep countertop neat.

OPERATING INSTRUCTIONS

- **Place the toaster on a flat, even surface**
- **Check that the crumb collector is installed in the appliance**
- **Insert slice(s) of bread into the slots**
- **Select relevant function**
- **Set the browning shade** - Use the dial to select your desired shade setting.
- **To begin toasting** - Push down the lever towards the control dial. The bread will lower into the toasting chamber and toasting will begin. Countdown bars will flash to indicate how much toasting time remains.
- **To view the toast mid cycle** - Mid cycle, to check on the toast shade, use the QuickView™ Lever to raise and lower the toast. Cycle will not be interrupted.
- **To stop the toast cycle** - When the toasting cycle is finished, the toast will be raised. If you wish to stop the cycle before it is finished, simply press the CANCEL button.
- After use, unplug the toaster from the electrical outlet.

FUNCTIONS

A. Crumpet

The **Crumpet** function is designed to perfectly toast Crumpets by directing more heat to the cut side and gently warming the outer crust. This ensures a crispy inside and a soft, chewy outside.

B. Defrost

The **Defrost** function is a longer cycle designed to first defrost and then toast the bread to the desired browning shade.

C. Single

The **Single** button adjusts heat to evenly toast one slice of bread. **NOTE:** While both slots heat up, the heaters automatically adjust time and intensity to ensure great results with even side-to-side browning. Do not use this setting for Crumpets or English Muffins.

D. +30Sec

The **+30Sec** function allows you to extend the toasting time by 30 seconds.

If selected during toasting cycle:

The +30Sec LED indicator will flash. Current shade countdown will be paused. Upon completion of the 30-second cycle, the originally selected browning shade cycle will resume.

If selected after toasting cycle has completed:

The +30Sec LED indicator will light and shade setting will disappear. Once toasting begins the +30Sec indicator will flash until time has elapsed.

E. QuickView™

The QUICKVIEW™ feature allows you to check on the toasting progress without interrupting the cycle. Simply raise the lever during toasting to momentarily lift the bread to observe the shade status. Then lower the bread and continue toasting without interrupting the cycle.

FUNCTION	OUTCOME
Crumpet	for toasting crumpets, bagels, burger buns and more
Defrost	for frozen slices
Single	for toasting 1 slice
+30Sec	toast/heat for extra 30 seconds

SETTING	COLOUR
1-2	light
3-5	medium
6-7	dark

HINTS & TIPS

- Bread rolls, muffins or thick slices should be toasted longer.
- To toast croissants, cut them in half horizontally. To reheat them only, use the reheat setting.
- When toasting fruit breads, remove any loose fruits from the surface of the bread to prevent fruit pieces from falling into the toaster or sticking on the guide wires in the slots.
- If you are toasting a single slice of bread, set the heat selector to a lighter setting than you normally would.
- Never force foods into the toasting slots. Foods should fit freely between the guide wires.
- Do not place buttered breads in the toaster, as this could create a fire hazard.
- Uneven toasting is usually due to inserting slices of uneven thickness.

CLEANING & MAINTENANCE

- Always disconnect the toaster from the mains immediately after use and allow to cool completely before cleaning.
- Do not immerse the appliance in water or any other liquid or place in a dishwasher.
- Do not use abrasive cleaners. Simply wipe the exterior with a clean damp cloth and dry thoroughly. Always apply any cleaning agent to a cloth, not to the toaster.
- To remove crumbs, slide out the crumb tray and throw the breadcrumbs away, then put the crumb collector back in place.
- To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake.
- Never wrap the cord around the outside of the toaster.

IMPORTANT: Never insert any hard, sharp or metal instruments into the slots as this could damage the toaster and cause a safety hazard.

Warranty

Cuisinart warrants that, in the unlikely event that this product develops any malfunction within 36 months of purchase of the product used for household or domestic use (or within 3 months of purchase of the product used for commercial use) due to faulty workmanship, materials or manufacture, we will either (at our discretion) repair or replace it for you.

This warranty applies for a period of 36 months for products purchased for household or domestic use (and 3 months for products purchased for commercial use) from the date of purchase of the product after which time the warranty expires and has no further force of effect.

Should you experience any operating difficulties refer to the FAQ in this booklet or contact Customer Service for advice on **1800 566 567 in Australia or 0800 456 546 in New Zealand.**

Please retain your **Purchase Receipt** as proof of purchase in order for your warranty entitlement to be valid. This document must be presented in the event of making a claim under the terms of the Cuisinart Warranty Policy.

During the warranty period Cuisinart will repair or replace (at our discretion) any defective product. However, if the product includes a number of accessories, only the defective part or relevant accessory will be replaced. Cuisinart reserves the right to make minor adjustments to fix any defect instead of replacing the entire product or accessory. Packaging, instructions, recipe books etc. will not be replaced unless faulty. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

If a spare part is required under warranty it will be shipped to the customer or retailer at No Charge.

In the event of a product or accessory being replaced during the warranty period, the guarantee on the replacement product or accessory will expire 36 months for household or domestic use (or 3 months for commercial use) from the original purchase date.

This warranty does not include or cover the following:

- Defects caused by the product not being used in accordance with instructions;
- Defects caused by accidental damage;
- Defects caused by misuse or negligent handling of the product;
- Defects caused by the product not being maintained or cleaned according to instructions;
- Defects caused by being tampered with by unauthorised persons;
- Defects which are normal or fair wear and tear;
- Freight or any other costs incurred in making a claim;
- Consumable items or accessories that by their nature and limited lifespan require periodic renewal (such as filters, seals, blades or related accessories, such as trays, racks or utensils);
- Products serviced or modified other than by Cuisinart or an authorised Cuisinart representative;
- To any claims made beyond 12 months if the filament of the light bulb breaks i.e. the light bulb has burned out;
- Exposure of the product to abnormally corrosive conditions;
- Any product which has its serial number or appliance plate removed or defaced;
- To any claims made beyond 3 months from the date of purchase if the product is used in commercial, industrial, educational or rental applications; or
- To any claims made beyond 36 months from the date of purchase if the product is used in household or domestic applications.
- Products purchased from any person who is not a retailer serviced by Conair's authorised distributors, overseas retailers, parallel importers or purchased second hand.

The benefits given to you by our warranty are in addition to other rights and remedies under the Australian Consumer Law.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Our goods also come with guarantees that cannot be excluded under the New Zealand Guarantees Act.

To make a warranty claim or spare part, contact our customer service agents:

Cuisinart Australia

Ph: 1800 566 567

PO Box 146, Terrey Hills

NSW 2084 AUSTRALIA

Cuisinart New Zealand

Ph: 0800 456 546

YOU MUST provide your full name, address, email and phone details. A copy of your proof of purchase must be supplied.

You can contact Cuisinart Australia/New Zealand via email at aus_cuisinart@conair.com or through the “Contact Us” option on the Cuisinart website www.cuisinart.com.au

The warranty contained in this document is provided by:

Conair Australia Pty Ltd (ACN 068 492 044) (Cuisinart)

18 Rodborough Rd,

Frenchs Forest, NSW 2086

Australia

Cuisinart®

www.cuisinart.com.au

©2026 Cuisinart
Suite 101 Ground Floor
18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

Visit our Website:
www.cuisinart.com.au

Printed in China

Trademarks or service marks of third parties referred to herein are the trademarks or service marks of their respective owners.

IB-25/514