

Cuisinart®

Core Collection 1.7L Brushed Stainless Steel Kettle

JK-1600XA



Instruction
Booklet

For your safety and continued enjoyment of this product, always
read the instruction book carefully before using.

IMPORTANT SAFETY CAUTIONS

Carefully read all the instructions before using the appliance and keep in a safe place for future reference.

IMPORTANT SAFEGUARDS



- **WARNING:** Burn hazard - Do not touch very hot surfaces. Always use the handle.
- **THIS IS AN ATTENDED APPLIANCE.** Do not leave unattended during use, unplug after each use.
- **WARNING:** Use extra care when working with hot liquids to avoid injury from overflowing, steaming and splattering.
- **WARNING:** Do not remove or open the lid while the water is boiling.
- **CAUTION:** Position the lid so that the steam is directed away from the handle.
- **CAUTION:** Do not operate the kettle on an inclined plane. Do not switch on the kettle if there is no water in the kettle. Do not operate the kettle unless the element is fully immersed.
- **CAUTION:** Please be cautious of spillage on the base connector. Spillage can cause significant damage and lead to malfunctions. Ensure that liquids are handled carefully and that the connector is protected from any exposure to water or other liquids.
- The appliance is not intended to be operated by means of external timer or separate remote control system.
- Never pull the plug out of the mains socket by the supply cord.
- Always ensure that your hands are dry before touching the supply cord or removing the plug from the mains socket.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped. In the event of damage, or if the appliance develops a fault, contact the Cuisinart Customer Care Line.
- Do not leave the supply cord hanging over the edge of a kitchen table or worktop.
- Do not use the appliance if the supply cord is damaged. In the event of supply cord damage, discontinue use immediately.
- Take care not to allow the appliance surfaces to come into contact with other heat sensitive surfaces.
- Always unplug the appliance from the mains outlet and allow to cool before cleaning.
- Do not exceed the maximum fill level as clearly marked on the water level indicator. If the kettle is overfilled, boiling water may be ejected.

CAUTION: BURN HAZARD

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should always be supervised to ensure that they do not play with this appliance.

This appliance is intended for HOUSEHOLD USE ONLY and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- clients in hotels, motels and other residential type environments;
- bed and breakfast settings

WARNING! Do not immerse the kettle or the power base in water or any other liquid. Ensure the electric kettle socket is kept dry.

At no time, before or during boiling and cleaning immerse unit, plug or cord in water, or any other liquids similarly under running water too – this is to protect against the starting of a fire and electric shock that could induce injury to persons. If the unit, plug or cord should fall into water or other liquids, unplug the cord from the electrical output immediately. DO NOT reach into the water.

CONTENTS

Important Safeguards 2

Parts & Features 4

Before the First Use 5

Operating Instructions 5


Hints & Tips 5

Cleaning & Maintenance 5

Descaling 5

WARRANTY..... 6

PARTS & FEATURES

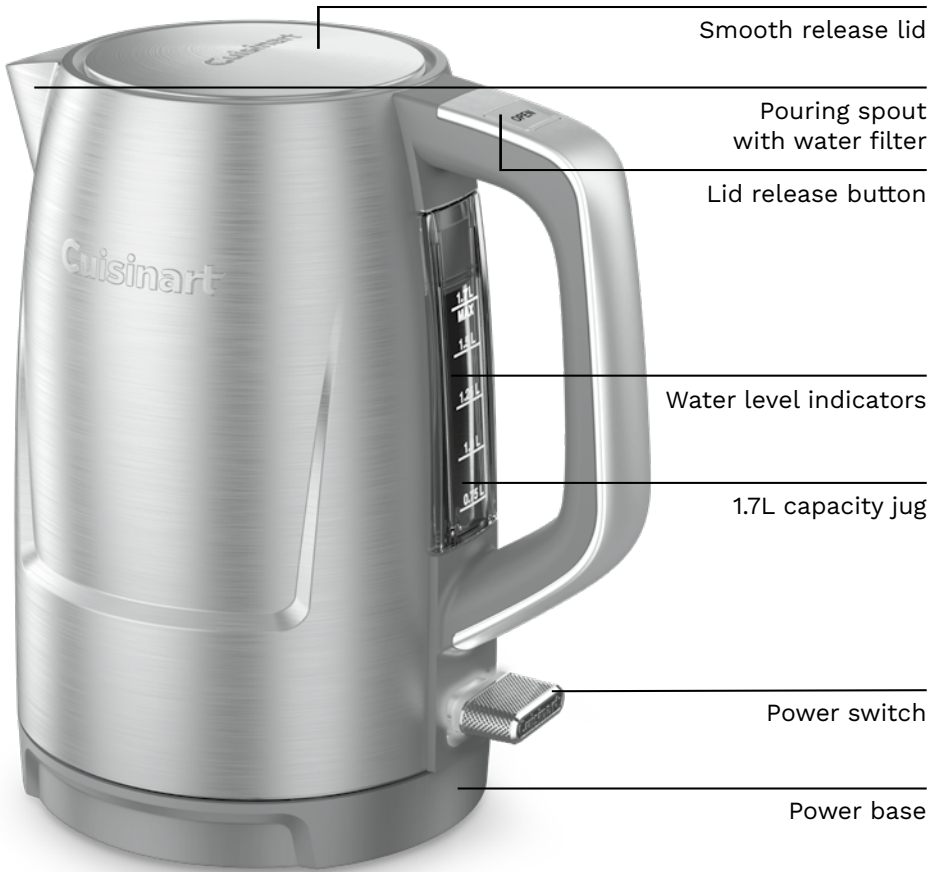

BEFORE THE FIRST USE

Before using for the first time, we recommend operating the kettle 2 or 3 times. This will remove any dust or residue remaining from its manufacture. Fill to the MAX mark level, bring to the boil and when boiling has finished and the kettle has switched off, discard the water and rinse out the inside.

OPERATING INSTRUCTIONS

Open the lid by pressing the lid release button located on top of the handle.

Fill the kettle with the required amount of cold water. The water gauge is on the side of the kettle and is marked with MIN and MAX.

N.B. Take care not to exceed the MAX mark as this may cause spitting or leaking from the spout when boiling.

Push the lid to close it; you will feel and hear a slight click.

Align the kettle over the power base with the spout facing away from you and gently lower it into position, sitting it firmly on the power base.

Switch the kettle on by pressing down the power switch at the rear of the kettle.

The kettle will switch off automatically when it has finished boiling. However, the kettle can be switched off at any time by simply lifting the power switch.

Pour water out slowly and return the kettle to the power base after pouring. If you wish to re-boil the water, you must press the power switch again.

N.B. A couple of water droplets or condensation may appear on the power base, this is quite normal and not a leak.

N.B. Do not open the lid of the kettle or during the heating process when pouring; escaping steam may scald.

Once the kettle is re-located on the power base, it can be switched on again at any time. If the switch will not stay down, it means the control is still a little warm; this is normal and it will simply re-set itself in a few seconds when cooled and will be ready to boil again.

BOIL-DRY PROTECTION: If the kettle is accidentally switched on without a sufficient water level, a boil dry mechanism will automatically switch the kettle off.

HINTS & TIPS

Always use fresh, cold water each time you boil.

For best results, empty the kettle after each use. Do not leave water standing in the kettle. This is to help prevent build up of hard water limescale.

CLEANING & MAINTENANCE

Always unplug the appliance from the mains outlet before cleaning.

Allow to cool before cleaning the appliance.

Clean the exterior surface of the kettle with a clean damp cloth to preserve its original finish. Dry and polish with a soft cloth.

Do not use abrasive cleaners or scouring agents of any kind on the interior or exterior of the kettle.

WARNING! Do not immerse the kettle or the power base in water or any other liquid. Ensure the electric kettle socket is kept dry.

DESCALING

To limit scale build-up, we recommend you use only filtered or low-calcium water.

During use, lime deposits will form on the inside of your Cuisinart Jug Kettle. To get the best performance from the kettle, we recommend descaling it from time to time. Frequency depends on the hardness of your tap water and how often you use your kettle.

We suggest use of a kettle descaler in order to dissolve the scale. Simply follow the manufacturer's guidelines on the packaging. Alternatively pour in enough white vinegar to cover the bottom of the kettle by about 2cm. Bring the vinegar to the boil; you may need to repeat this several times with cooled vinegar to remove the build-up completely.

When the kettle is descaled, empty the kettle and rinse out several times with clean water. Take care not to inhale fumes.

WARRANTY

Cuisinart warrants that, in the unlikely event that this product develops any malfunction within 36 months of purchase of the product used for household or domestic use (or within 3 months of purchase of the product used for commercial use) due to faulty workmanship, materials or manufacture, we will either (at our discretion) repair or replace it for you.

This warranty applies for a period of 36 months for products purchased for household or domestic use (and 3 months for products purchased for commercial use) from the date of purchase of the product after which time the warranty expires and has no further force of effect.

Should you experience any operating difficulties refer to the FAQ in this booklet or contact Customer Service for advice on **1800 566 567 in Australia or 0800 456 546 in New Zealand.**

Please retain your **Purchase Receipt** as proof of purchase in order for your warranty entitlement to be valid. This document must be presented in the event of making a claim under the terms of the Cuisinart Warranty Policy.

During the warranty period Cuisinart will repair or replace (at our discretion) any defective product. However, if the product includes a number of accessories, only the defective part or relevant accessory will be replaced. Cuisinart reserves the right to make minor adjustments to fix any defect instead of replacing the entire product or accessory. Packaging, instructions, recipe books etc. will not be replaced unless faulty. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

If a spare part is required under warranty it will be shipped to the customer or retailer at No Charge.

In the event of a product or accessory being replaced during the warranty period, the guarantee on the replacement product or accessory will expire 36 months for household or domestic use (or 3 months for commercial use) from the original purchase date.

This warranty does not include or cover the following:

- Defects caused by the product not being used in accordance with instructions;
- Defects caused by accidental damage;
- Defects caused by misuse or negligent handling of the product;
- Defects caused by the product not being maintained or cleaned according to instructions;
- Defects caused by being tampered with by unauthorised persons;
- Defects which are normal or fair wear and tear;
- Freight or any other costs incurred in making a claim;
- Consumable items or accessories that by their nature and limited lifespan require periodic renewal (such as filters, seals, blades or related accessories, such as trays, racks or utensils);
- Products serviced or modified other than by Cuisinart or an authorised Cuisinart representative;
- To any claims made beyond 12 months if the filament of the light bulb breaks i.e. the light bulb has burned out;
- Exposure of the product to abnormally corrosive conditions;
- Any product which has its serial number or appliance plate removed or defaced;
- To any claims made beyond 3 months from the date of purchase if the product is used in commercial, industrial, educational or rental applications; or
- To any claims made beyond 36 months from the date of purchase if the product is used in household or domestic applications.
- Products purchased from any person who is not a retailer serviced by Conair's authorised distributors, overseas retailers, parallel importers or purchased second hand.

The benefits given to you by our warranty are in addition to other rights and remedies under the Australian Consumer Law.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law.

You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Our goods also come with guarantees that cannot be excluded under the New Zealand Guarantees Act.

To make a warranty claim or spare part, contact our customer service agents:

Cuisinart Australia

Ph: 1800 566 567

PO Box 146, Terrey Hills

NSW 2084 AUSTRALIA

Cuisinart New Zealand

Ph: 0800 456 546

YOU MUST provide your full name, address, email and phone details.

A copy of your proof of purchase must be supplied.

You can contact Cuisinart Australia/New Zealand via email at aus_cuisinart@conair.com or through the “Contact Us” option on the Cuisinart website www.cuisinart.com.au

The warranty contained in this document is provided by:

Conair Australia Pty Ltd (ACN 068 492

044) (Cuisinart)

18 Rodborough Rd,

Frenchs Forest, NSW 2086

Australia

**Scan to get started with
your new Kettle.**



www.cuisinart.com.au