

Cuisinart®

Retro Collection Toasters

CPT-3200BXA & CPT-3400BXA



Instruction
Booklet

For your safety and continued enjoyment of this product, always
read the instruction book carefully before use.

IMPORTANT SAFEGUARDS

When using an electrical appliance, especially when children are present, basic safety precautions should always be taken, including the following:

1. Read all instructions.
2. Always unplug from outlet when not in use and before cleaning. Allow to cool before cleaning or handling.
3. Do not touch hot surfaces. Use handles, levers, or dials.
4. To protect against electric shock, do not immerse cord, plug, or any part of the toaster in water or other liquids. See instructions for cleaning.
5. This appliance should not be used by or near children, or individuals with certain disabilities. Close supervision is necessary when any appliance is used by or near children.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance has malfunctioned or has been dropped, dropped in water, or damaged in any way, or if it is not operating properly. Return the toaster to the nearest authorised service facility for examination, repair, or adjustment.
7. The use of accessory attachments not recommended by Cuisinart may cause injury.
8. Do not use outdoors.
9. Do not let cord hang over the edge of the table or benchtop or touch hot surfaces.
10. Do not place toaster on or near a hot gas or electric burner or in a heated oven.
11. Do not use this toaster for anything other than its intended use.
12. Oversize foods, metal foil packages, or utensils must not be inserted in the toaster, as they may involve a risk of fire or electric shock.
13. A fire may occur if the toaster is covered or touching flammable materials, such as curtains, draperies, or walls, when in operation. Do not operate under wall cabinets.
14. Do not attempt to dislodge food when the toaster is plugged into an electrical outlet.
15. To avoid possibility of fire, do not leave toaster unattended during use.
16. To disconnect, push the Cancel button, then remove plug from wall

outlet. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.

17. Do not operate your appliance in an appliance garage or under a wall cabinet. When storing in an appliance garage, always unplug the unit from the electrical outlet. Not doing so could create a risk of fire, especially if the appliance touches the walls of the garage or the door touches the unit as it closes.
18. When heating toaster pastries, always use the lightest toast shade setting.
19. This toaster is not intended to be operated by means of an external timer or separate remote-control system.
20. The bread may burn; therefore, do not use the toaster near or below combustible material, such as curtains.
21. Children should be supervised to ensure that they do not play with the appliance.
22. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

SPECIAL CORD SET INSTRUCTIONS

A short power-supply cord is provided to reduce the risks resulting from becoming entangled in or tripping over a longer cord. Longer extension cords are available and may be used if care is exercised in their use. If a long extension cord is used, the marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance, and the longer cord should be arranged so that it will not drape over the benchtop or tabletop where it can be pulled on by children or tripped over unintentionally.

NOTICE: This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

CONTENTS

Important safeguards	2
Electrical safety	2
Before first use	3
Parts & features	3
General operation	4
Tips and hints	4
Cleaning & maintenance	5
Warranty	6

BEFORE FIRST USE

Unwind the power cord. Check that the crumb tray is in place and that there is nothing in the toaster slots. Plug power cord into the wall outlet.

PARTS & FEATURES

A. Toasting Slots

Extra long toasting slots to accommodate a variety of bread types.

B. Crumpet Button

The Crumpet function is designed to toast crumpet to perfection.

C. Single Slice Button

The Single slice function toasts a single slice of bread evenly.



CPT-3400BXA



CPT-3200BXA

D. Cancel Button

Press the Cancel button to stop the toasting process and eject the bread.

E. Defrost Button

The Defrost function is a longer cycle designed to first defrost and then toast the bread to the desired browning shade. The LED indicator will illuminate when selected.

F. Browning Control Dial (7 Settings)

Adjust the control dial to select your desired browning level (1-7).

G. QuickView™ Lever

Allows you to momentarily raise the bread during toasting to check the browning level without interrupting the toasting cycle.

H. Crumb Tray

A conveniently located tray collects crumbs and slides out for easy cleaning.

I. Cord Storage (not shown)

Stores excess cord neatly to keep your benchtop tidy.

GENERAL OPERATION

1. Insert slice(s) of bread

Be sure that the QuickView™ Lever is in the up position.

2. Set the browning level

Turn the Browning Control Dial to your desired shade setting from 1-7. Shade range is as follows:

Control Setting	Color
1-2	light
3-5	medium
6-7	dark

3. Optional: Select desired toast function

Press the Crumpet Button, Single-slice Button, or the Defrost Button to program your toaster according to what you are toasting, if desired. The LED indicator will illuminate for your selection.

4. Begin toasting

Lower the QuickView™ Lever until it locks in the down position. The Cancel Button LED indicator will illuminate. When the cycle finishes, whatever you are toasting will pop up and the QuickView™ Lever will spring back its off position.

5. To stop cycle

If you wish to stop the cycle before it is complete, press the Cancel Button. The LED indicator will turn off and the QuickView™ Lever will return to its original position.

6. After use, unplug the toaster from the electrical outlet.

TIPS AND HINTS

Notes on browning

Toasting is a combination of cooking and drying of the bread. Therefore, differences in moisture level from one item to another can result in varying toasting times.

- For slightly dry bread, use a lower setting than you normally would.
- For very fresh bread or whole-wheat bread, use a higher setting than normal.
- Breads with very uneven surfaces (such as English muffins) will require a higher toast setting.
- Thickly cut pieces of bread will take longer to toast, sometimes significantly longer, since more moisture must be evaporated from the bread before toasting can occur. Very thick pieces may require two cycles.
- When toasting raisin or other fruit breads, remove any loose fruit from the surface of the bread before placing into the toaster. This will help prevent fruit pieces from falling into the toaster or sticking on the guide wires in the slots.

Frozen Bread, Waffles, Pancakes, French Toast, and Crumpets

Use the Defrost function to defrost and then toast these items. Simply insert the frozen item, select desired browning setting (1–7), press down the carriage lever, then press the Defrost Button. The LED indicator will illuminate.

Toaster Pastries

Exercise caution with toaster pastries; the filling can become quite hot long before the surface of the pastry becomes browned. Start by using the lightest setting. Never leave toaster pastries unattended while toasting or warming.

For Best Results

- Never force foods into the toasting slots. Foods should fit freely between the guide wires.
- Do not place buttered breads in the toaster, as this could create a fire hazard.
- Uneven toasting is usually due to inserting slices of uneven thickness.

CLEANING AND MAINTENANCE

1. Always allow the toaster to cool completely before cleaning.
2. Always unplug the toaster from the electrical outlet before cleaning.
3. Do not use abrasive cleaners. Simply wipe the exterior with a clean, damp cloth and dry thoroughly.
4. To remove crumbs, slide out the Crumb Tray and discard crumbs. Wipe clean and replace. Never operate the toaster without the crumb tray in place.
5. To remove any pieces of bread remaining in the toaster, turn the toaster upside down and gently shake. Never insert any hard or sharp instruments into the slots, as this could damage the toaster and cause a safety hazard.
6. Never wrap the cord around the outside of the toaster. Use the cord storage cleats on the underside of the toaster.
7. Any other servicing should be performed by an authorised service representative.

Warranty

Cuisinart warrants that, in the unlikely event that this product develops any malfunction within 3 years of purchase when the product is used for household or domestic purposes, due to faulty workmanship, materials or manufacture, we will either (at our discretion) repair or replace it for you.

This warranty applies for a period of 3 years for products purchased for household or domestic use from the date of purchase of the product after which time the warranty expires and has no further force of effect.

Should you experience any operating difficulties refer to the FAQ in this booklet or website for tips on how to use your product.

Please retain your **Purchase Receipt** as proof of purchase in order for your warranty entitlement to be valid. This document must be presented in the event of making a claim under the terms of the Cuisinart Warranty Policy.

During the warranty period Cuisinart will repair or replace (at our discretion) any defective product. However, if the product includes a number of accessories, only the defective part or relevant accessory will be replaced. Cuisinart reserves the right to make minor adjustments

to fix any defect instead of replacing the entire product or accessory. Packaging, instructions, recipe books etc. will not be replaced unless faulty. A product presented for repair may be replaced by a refurbished product of the same type rather than being repaired. Refurbished parts may be used to repair the product.

If a spare part is required under warranty it will be shipped to the customer or retailer at no charge.

In the event of a product or accessory being replaced during the warranty period, the guarantee on the replacement product or accessory will expire 3 years for household or domestic use from the original purchase date.

This warranty does not include or cover the following:

- Defects caused by the product not being used in accordance with instructions;
- Defects caused by accidental damage;
- Defects caused by misuse or negligent handling of the product;
- Defects caused by the product not being maintained or cleaned according to instructions;
- Defects caused by being tampered with by unauthorised persons;
- Defects which are normal or fair wear and tear;
- Freight or any other costs incurred in making a claim;
- Consumable items or accessories that by their nature and limited lifespan require periodic renewal (such as filters, seals, blades or related accessories, such as trays, racks or utensils);
- Products serviced or modified other than by Cuisinart or an authorised Cuisinart representative;
- To any claims made beyond 12 months if the filament of the light bulb breaks i.e. the light bulb has burned out;
- Exposure of the product to abnormally corrosive conditions;
- Any product which has its serial number or appliance plate removed or defaced;
- To any claims made beyond 3 years from the date of purchase if the product is used in household or domestic applications.
- Products purchased from any person who is not a retailer serviced by Conair's authorised distributors, overseas retailers, parallel importers or purchased second hand.

The benefits given to you by our warranty are in addition to other rights and remedies under the Australian Consumer Law.

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Our goods also come with guarantees that cannot be excluded under the New Zealand Guarantees Act.

To make a warranty claim, return your product to the place of purchase with your original receipt as proof, we recommend keeping a copy. If you cannot return it, contact Cuisinart Customer Service for assistance.

Cuisinart Australia & New Zealand

Ph: 1800 566 567

Email: aus_cuisinart@conair.com

Website: Contact us via www.cuisinart.com.au

PO Box 146, Terrey Hills

NSW 2084 AUSTRALIA

The warranty contained in this document is provided by:

Conair Australia Pty Ltd (ACN 068 492 044) (Cuisinart)

18 Rodborough Rd,

Frenchs Forest, NSW 2086

Australia

Cuisinart®

www.cuisinart.com.au

©2026 Cuisinart
Suite 101 Ground Floor
18 Rodborough Rd
Frenchs Forest NSW, 2086
Australia

Visit our Website:
www.cuisinart.com.au

Printed in China

IB-26/517