


DAVIS & WADDELL

essentials

Retro 4 Slice Toaster
G0000814 & G0000885

Thank you for choosing the Davis & Waddell Retro 4 Slice Toaster. To ensure proper operation and to maintain the lifespan of your appliance, please read these instructions carefully before use.

Product Overview

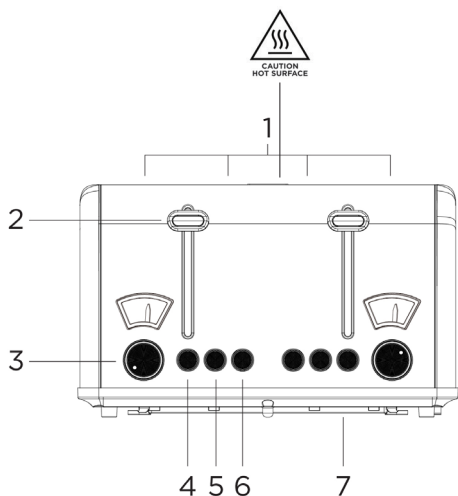

1. Bread slots
2. Toast lever
3. Browning dial
4. Cancel button
5. Reheat button
6. Defrost button
7. Crumb tray

Important Safety Instructions

- Please read these instructions carefully and store them in a safe place for future reference.

- Before plugging the toaster into the mains, ensure it is intact and has not suffered any damage. This appliance is for toasting bread only. Do not use this appliance for anything other than its intended purpose.
- CAUTION! The bread may burn, therefore do not use the toaster near or below combustible materials, such as curtains. The toaster should be attended when in use.
- Always ensure the appliance is plugged into a power outlet with the same voltage rating as the appliance. Do not touch the live plug when in use. Unplug appliance when not in use.
- Surface temperature may be high when the appliance is running, avoid contact



- Check the power cord regularly for visible damage. If it is damaged, do not use the appliance. A damaged cord must be replaced by the manufacturer, its authorised service centres or similarly qualified personnel to avoid any hazards.
- Do not let the cord hang over the edge of a table or counter or touch hot surfaces.
- Do not use the appliance or touch the plug with wet or damp hands, on a damp floor or when the appliance itself is wet.
- Do not kink, squash, or strain the power cord and protect it from sharp edges and heat, including hot cooking surfaces when in use. Do not place anything on top of the cord.
- Do NOT wrap the cord around the appliance, and never pull the cord to lift, carry or unplug the appliance. If winding the power cord, avoid tight bends as this could damage the cord.
- Do not connect the appliance to an external switching device such as an external timer or a separate remote-control system.
- To reduce the risk of electric shock, do NOT immerse the cord, plug or appliance in water or other liquids when cleaning. If it falls into water, immediately unplug it from the electrical outlet. Do not touch it or reach into the water.

- This appliance is suitable for indoor domestic use only. Do not use this appliance outdoors or in humid areas.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do not allow children to play with the appliance. Ensure close supervision of children when operating the appliance.
- Do not submerge appliance in water or pour water directly on it. Do NOT place appliance or any part of it in a dishwasher.
- Place the appliance on an accessible, stable, level and dry surface such as a kitchen counter or table. Do not place any cloth or tea towel beneath the appliance to avoid risk of fire, shock or overheating. Keep appliance away from the edge of the counter or table where it can fall.
- Do not place objects (e.g. cold toast) on top of the appliance during operation.
- Ensure there is at least 20cm of free space around the appliance. Do not operate appliance near flammable surfaces or any materials susceptible to damage from steam.
- Always ensure no foreign objects are trapped in the toaster slots before operation. Do NOT insert foods wrapped in foil or cling film in the toaster to avoid risk of fire.
- Do not leave the appliance unattended during operation. If a malfunction occurs such as overheating, jammed bread or smoke emitted from the slots, immediately press CANCEL, switch off and unplug the appliance. Wait for the toaster to cool down before removing any jammed bread.
- When retrieving bread from the toaster, ensure not to damage the heating elements on each side of the slots.
- Always operate the toaster with the crumb tray in place to avoid charred crumbs collecting at the bottom of the toaster and sticking to internal surfaces.
- Always disconnect appliance from power supply and allow to cool before cleaning. Always hold the appliance on its side walls when moving or lifting.
- This toaster is suitable for bread slices of maximum 12x12cm size and up to 2.4cm thick. Do NOT insert bread covered with any kind of spread (jam, butter etc) or bread that protrudes too far outside the slots.
- CAUTION: The surface of the appliance will be hot during operation. Do not touch external surfaces of the toaster when in use. Always keep hands, face and arms as well as any clothing and other heat-sensitive objects away from the slots during use.
- Ensure the browning dial is always set to the correct level and not too high.

Packaging and Recycling

The materials used for this product's packaging can be reused, recycled, and disposed of through specific waste streams.

- REUSE: Keep packaging to safely store or transport your appliance, preventing damage.
- RECYCLE: Look for recycling symbols on packaging components to identify if they are recyclable. Check with your local authority to find out what materials are accepted for recycling in your area.
- DISPOSE: Look for symbols on packaging components and dispose of materials accordingly.

Technical Information

Voltage supply	220-240V-, 50/60Hz
Power consumption	1370 - 1630W

Before First Use

- Carefully unpack the appliance and check for any damaged or missing parts.
- Make sure to remove all packaging materials (including those in the slots and under the toast lever), but do not remove any warning or model labels on the appliance. Ensure no foreign objects remain in the slots before operating the appliance.
- This toaster operates with electronic control. The toast lever will only engage in the toasting position when the toaster is connected to the power supply and switched on.

- When using the toaster for the first time, you may notice a slight smoky haze from first use of the heating elements. This is normal. To avoid any impact on the taste or smell of your food, it is recommended to heat the appliance on browning level 5 before placing bread in the slots (see Operating Instructions).
- If a burnt smell occurs again in subsequent use, please clean the toaster (see Care Instructions). If the smell persists after cleaning, return the appliance to the place of purchase for inspection, a refund, or a replacement.

Operating Instructions

1. Place the toaster on a level, dry, and heat-resistant surface.
2. Unwind the power cord completely, connect the plug to a power socket.
3. Insert bread slices into the toaster slots.
4. Adjust the browning control to the desired setting.
5. Press the toast lever down to begin toasting the bread.
6. When completed, the bread slot lever will automatically rise and lift the toast ready to serve.
7. The cancel button light will remain on when the lever is pressed down and will only turn off once you press the cancel button.

If bread gets stuck or jammed in the slots

1. Press CANCEL, switch off the mains and unplug the toaster. Allow the toaster to cool down. The LED display will remain lit until the power cord is removed from the outlet.
2. Remove the bread slices carefully without using force.
3. Be sure not to touch the heating elements on the sides of the slots to avoid damaging them.
4. Empty the crumb tray after each use to avoid crumbs becoming charred and sticking to the tray. Do not use the toaster without the crumb tray in place.

Tips

- The required browning level depends on personal preference and the type of bread. For example, a lower browning level is sufficient for raisin bread and white bread, while rye bread may need a higher browning level.
- Smaller bread slices can be removed more easily by lifting the toast lever upwards about 2cm above the steady position.
- Ensure you make an even, smooth cut using a sharp bread knife. Remove crumbs and protruding edges.
- When toasting frozen bread, keep the Browning Control at your usual setting. Place the frozen bread in the bread slots, press the lever down and then press the defrost button. The button will light up, and the toaster will run for an extended time to defrost and toast the bread.
- If you want to reheat bread that was previously toasted but gone cold. Press the lever down until it is locked in place, then press REHEAT button. The REHEAT button will light up, and the toaster will run briefly to reheat the bread.
- If any function buttons (DEFROST, REHEAT) are pressed, the toaster will return to normal operation once the function has finished.
- The reheat and defrost functions cannot be used simultaneously.
- Always press the CANCEL button and unplug the toaster when not in use.

Care Instructions

- Always switch off the toaster, unplug the power cord, and allow the toaster to cool before cleaning or moving it.
- Never immerse the toaster or power cord in water or any liquids.
- Do not place the toaster or any parts in a dishwasher.
- Clean the toaster and power cord with a damp sponge or tissue. Dry thoroughly after cleaning. Avoid using abrasive cleaners, cleaning pads, or sharp objects (e.g. metal scouring pads).
- Do not forcefully handle the appliance or insert foreign objects into the slots.

Cleaning

- Press the CANCEL button, switch off the mains and unplug the power cord, and let the toaster cool down.
- Remove and empty the crumb tray from the back of the toaster. Clean the crumb tray with warm water. Dry the tray thoroughly after cleaning and let it air-dry for a few minutes.
- Hold the toaster by both sides, turn it upside down over a sink or large bowl, and gently shake to remove crumbs. Rotate the toaster in all directions for thorough cleaning.
- Wipe the exterior with a damp, soft cloth, avoiding water in the toaster. Clean the power cord the same way if needed.
- Dry the toaster and power cord with a dry soft cloth.
- Make sure the crumb tray is completely dry before reinserting it into the toaster.

Storage

- Store the toaster on a clean, dry surface, away from heat, moisture, direct sunlight, and out of children's reach.
- Do not place heavy or hard objects on the toaster.
- Clean the toaster before storing it for an extended period.
- If necessary, wind the power cord around the cord storage at the bottom of the toaster. Avoid tight bends as this could damage the cord.

Our 12-Month Guarantee

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable losses or damage. You are also entitled to have the goods repaired if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

We stand by this product and therefore, we offer a 12-month guarantee. The benefits of this guarantee are in addition to any rights and remedies imposed by the Australian Consumer Law. Our guarantee excludes normal wear and tear and instances where

care and use instructions have not been followed.

What IsAlbi will do: During this guarantee period, IsAlbi will repair, replace, or refund any defective product. If identical product is not available for replacement, a similar product may be offered. IsAlbi asks you to cover the cost of postage/transit if the product needs to be sent back to us for inspection. If IsAlbi deems the product is defective, we will reimburse your postage/transit expenses. IsAlbi will be responsible for the postage/transit of the repaired/replacement product back to you.

What to do: If a fault/defect is identified, cease using the product immediately. To make a claim on this guarantee, take the product, proof of purchase, and full details of the alleged defect to the retailer from whom the product was purchased. If you cannot access the retailer or are unsatisfied with the solution offered by the retailer, contact IsAlbi via the details below.

IsAlbi

87 Chifley Drive, Preston, Victoria 3072

P: +61 (03) 9474 1300

E: enquiries@isalbi.com.au

isalbi.com.au