


DEVANTI

Food Warmer Showcase

Model:CFW-480M-SI

User Manual

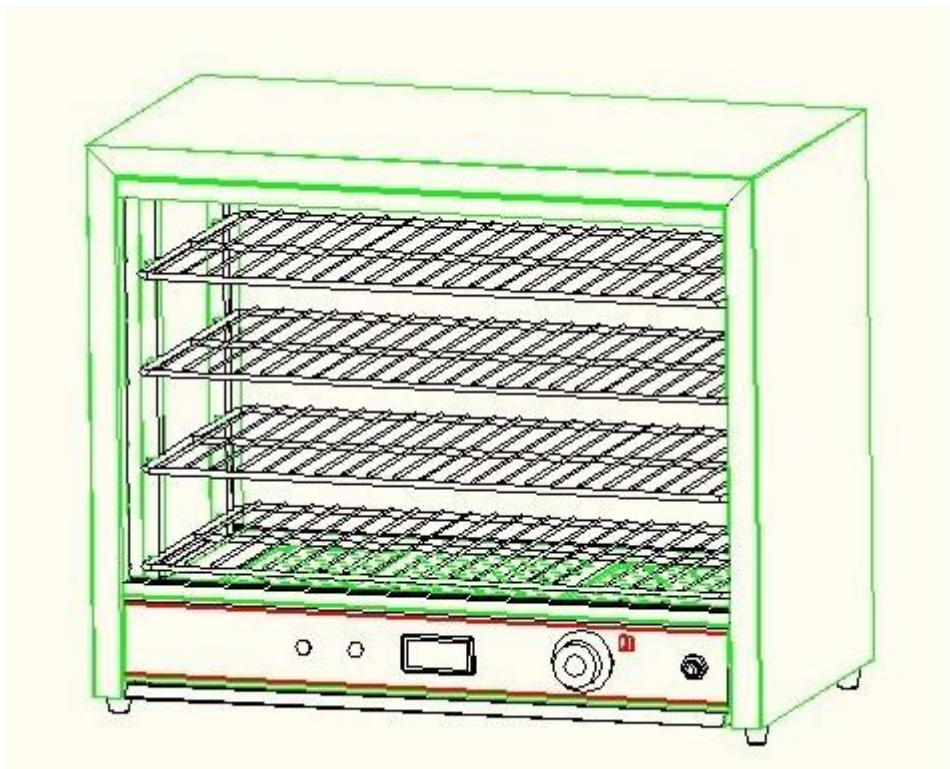

- ★All stainless steel construction
- ★Automatic thermostat
- ★High-efficient, easy operable & safe
- ★Durable and elegant design

I .Introduction:

This Series Food Warmer Showcase adopts the international popular style, body made by good quality stainless steel, luxurious and good-looking. It is equipped with good quality electrical elements, so that it is energy-saving and safety. Be provided with thermostat function, easy control. The surface has been polished, easy for cleaning and good heating distributed. removable stainless steel tray, easy for cleaning the dregs. It is the best choice for the hotels, restaurants, and west-style food shops, etc.

II.Main specification

Model	Voltage	Frequency	Power	Size(mm)
CFW-480M-SI	220v~240v	50Hz-60Hz	1.0KW	537*360*532

III.Operation

Turn on the Thermostat and set the heating temperature that you want, and then the temperature will be constant and the same as every player.

When finish using, please make the power dump during cleaning, and it is limited to spurt the electric part in case of the contretemps.

IV.Transportation and Preservation

Please avoid serious shocking, colliding, converting and squeezing while transporting.

It must be placed in none causticity warehouse.

V.Installed Notes:

1. It must be place horizontal stably, provide a good ventilate environment, and make sure there is more than 5cm from the wall.

2. Before use, check the power supply is corresponds to the required of this machine. The electric wire must be connected with the leakage protection switch (the leakage rated current is 30mA). Make sure the power switch can cut off all electrodes. It should be put on the floor dependable.
3. If the wire is damage to avoid the danger, please ask the repairer to change the same model wire.

VI.Operating Instruction:

1. Before use please read the specification, and comprehends the feature of this item.
2. Place the item stably, and then connect the power, then the green light turn on. Just base on the requirement to adjust the temperature to the fitting one, now yellow light is turn on, heating tube start to work.
3. When the temperature reach the setting one, then the item start to keep warm.
4. To avoid the metal tong damage the item, please use the wood or bamboo tong to take out the food.
5. When the temperature reaches the setting one, thermostat will shut down the power, yellow light will turn off, heating tube will stop working. When the temperature comes down, the thermostat will start working again automatically, yellow light turns on, and the heating tube also starts to work again. This process is cycling repeatedly, guarantee the temperature is on the set up scope.

VII.Maintenance and Maintain:

1. Please use a wet cloth to clean, or use neutral vinegar to clean if necessary, do not rinse the machine with water directly to avoid the fire ware and electric control parts damage.
2. If the item appear trouble, do not dismount the machine, and send it to our company's authorized service department or distributor for repair.

3. Make sure the power is turned off when all the maintenances are in process.
4. If long time nonuse, it should be cleaned up and keep it in ventilate and non-fret environment.

Notes:

- To avoid scald, please don't touch the heating plate when it is working.
- When the item is stopped working please take out the plug or cut off the power.
- Forbidden to put the flammable material in the item.

Circuit diagram

