


4. If the warmer will not be used for a long time, please clean it and store in a well-ventilated environment.

Notes:

- To avoid scalding, please do not touch the heating plate when it is working.
- When the item has stopped working, please remove the plug or cut off the power.
- It is forbidden to place any flammable product inside the warmer.

Circuit diagram

220~240V/50Hz

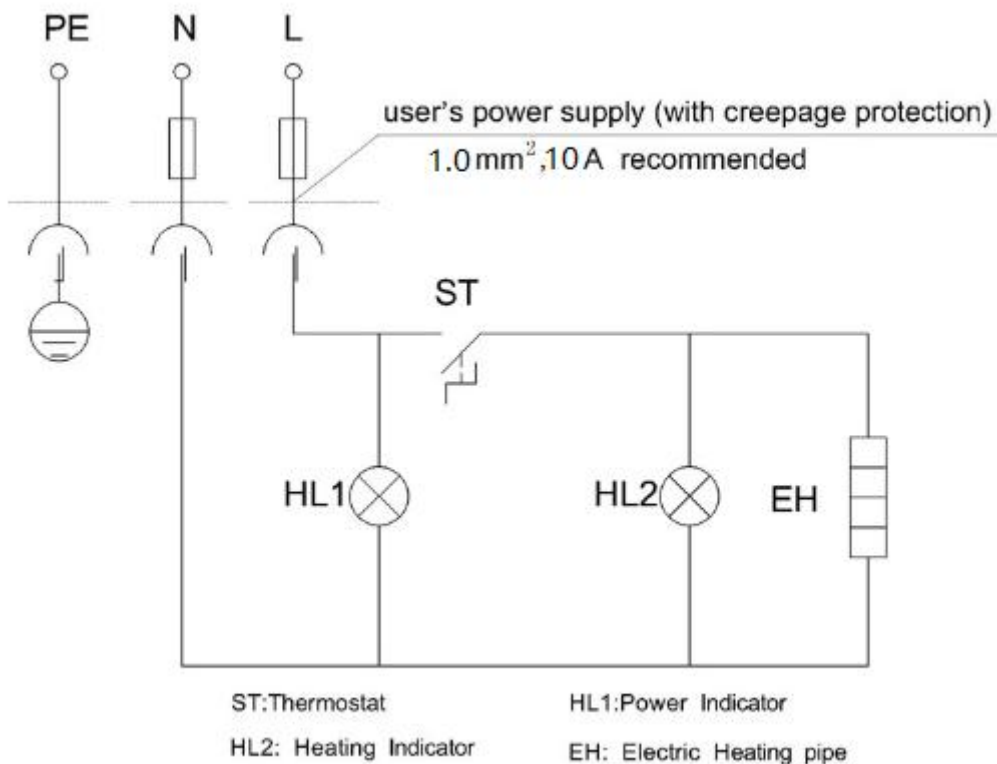

DEVANTI®

Food Warmer Showcase

Model:CFW-580M-SI

User Manual



- ★All stainless steel construction
- ★Automatic thermostat
- ★High-efficient, easy operable and safe
- ★Durable and elegant design

I .Introduction:

This Food Warmer Showcase adopts the international popular style, with a body made of good quality stainless steel and an elegant design. It is equipped with quality electrical components for better energy-saving and safety. It also comes with a thermostat function, for easy control. The polished surface finish enables easy cleaning and good heating dissipation. Not least, the removable stainless steel tray makes for hassle-free cleaning. The food warmer is suitable for commercial use in food stalls and kitchens.

II .Main specifications

Model	Voltage	Frequency	Power	Size(mm)	Net Weight
CFW-580M-SI	220V-240V	50Hz	1.0KW	640 x 360 x 540	19.1kgs

III.Operation

Turn on the Thermostat and set the desired heating temperature. After that, the temperature will be constant throughout. When finish using, please switch off the warmer and ensure that it is cool before touching any surface.

IV.Transportation

Please handle the warmer carefully when transporting it. Do not subject the warmer to serious shocks, knocks or collisions.

V.Installation Notes:

1. It must be placed on a stable and horizontal surface and in a well ventilated environment with a minimum distance of 5cm away from any wall.
2. Before use, check that the power supply corresponds to the specifications of this warmer. The power cord must be connected with a leakage protection switch (the

leakage rated current is 30mA). Make sure the power switch can cut off all electrodes.

3. If the power cord, please replace it with one that is supplied by the manufacturer or qualified service personnel to avoid any hazard.

VI. Operating Instructions:

1. Before use, please read the specifications, and understand the features of this Product.
2. Place the item on a stable surface, and then connect the power. A green light will turn on. Set the temperature and a yellow light is turn on. The heating tube is now beginning to work.
3. When the temperature has reached the desired setting, the warmer will start to warm the food.
4. Avoid using metal tongs as it may damage the product. Instead, please use wooden or bamboo tongs to take out the food.
5. When the temperature reaches the set temperature, thermostat will shut off the power, the yellow light will turn off, and the heating tube will stop working. When the temperature comes down, the thermostat will start working again automatically. The yellow light turn on, and the heating tube will also star to work again. This process is repeated as a cycle to guarantee that the temperature is maintained at the desired setting.

VII. Maintenance

1. Please use a wet cloth or neutral vinegar to clean if necessary. Do not rinse the machine with water directly to avoid fires and damage to electrical components inside the warmer.

1. If the warmer is not working properly, do not attempt to repair the warmer on your own. Consult professional advice from qualified service personnel.
2. Make sure the power is turned off when the maintenances is in process.