 


DEVANTI®

INSTRUCTION MANUAL

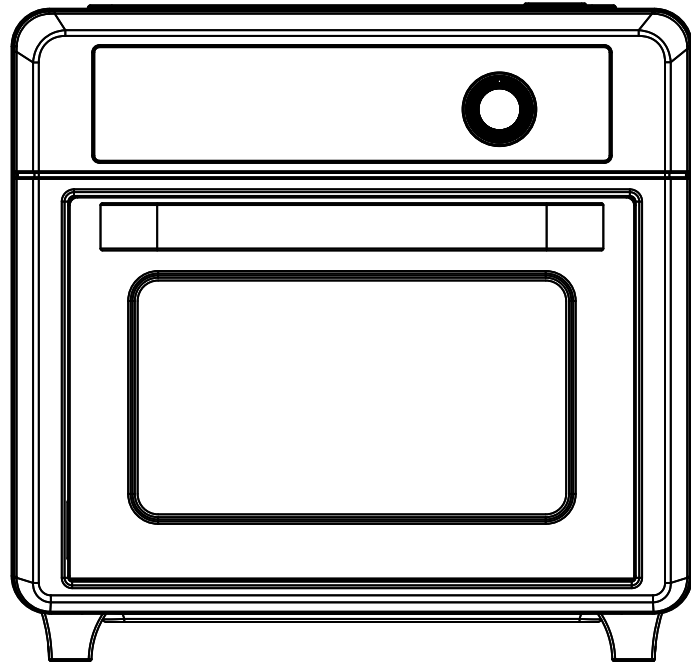


AIR FRYER OVEN

Model No.: AF-K-K-D15L-BK, AF-K-K-D20L-BK

Please read the manual carefully before operation

IMPORTANT SAFEGUARDS


When using this electric oven, basic precautions should always be followed, included the followings:

1. Do not touch hot surface, use handles and knobs.
2. Close supervision is necessary when any appliance is used by or near children.
3. To protect against electric shock, do not immerse cord, plug or any parts of the oven in water or other liquids.
4. Do not let cord hang over edge of table or counter, or touch hot surface.
5. Do not operate appliances with damaged cord or plug or after the appliance malfunctions, or have been damaged in any manner. Return the appliance to the nearest authorized service center for examination, repair, or adjustment.
6. Do not use other mismatched accessory, it may cause hazard or injury.
7. Do not place on or near a hot gas or electric burner, or in a heated oven or in a microware oven.
8. When operating the oven keep at least 4 inches of space on all sides of the oven to allow for adequate air circulation.
9. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning.
10. To disconnect, turn the timer control knob to OFF position, then remove the plug. Always hold the plug, but never pull the cord.
11. Extreme cautions must be used when moving an appliance containing hot oil or other hot liquid.
12. Do not use metal to touch any part of oven when operating.
13. Be extreme cautions when remove the tray or disposing of hot grease or other hot liquid.
14. Do not clean with metal scouring pads pieces can break off the pad and touch electric parts, creating a risk of electric shock.
15. Never leave the appliances unattended while broiling or toasting.
16. Oversized foods and metal utensils must not be inserted in the oven as they may create a fire or risk of electric shock.
17. A fire may cause if oven is covered or touching inflammable material, including curtains draperies, walls and like, when on operation, Do not store any item on the oven during operation.
18. Extreme caution should be exercised when using containers constructed of anything other than metal or glass.
19. Do not place any of the following materials on the oven: cardboard, plastic, paper or anything similar.
20. Do not store any materials, other than recommended accessories in the oven.
21. Always wear protective, insulated oven gloves or use the tray handle when inserting or removing any items from the hot oven. Allow for metal parts to cool down completely before cleaning.
22. This appliance is for household use only, do not use outdoor.
23. Do not use appliance for other than intended use.
24. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
25. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervised.
26. If the supply cord is damaged, it must be replaced by the After-sales Service Center or a similarly qualified person in order to avoid a hazard.
27. Symbol  its meaning is: Caution, hot surface!
28. Caution: the oven is hot when working and after use. Do not touch.

PRODUCT SPECIFICATION

Model	AF-K-K-D15L-BK	AF-K-K-D20L-BK
Capacity	15L	20L
Voltage	220-240V~50-60Hz	220-240V~50-60Hz
Power	1200W	1400W
Function	Air Frying and oven	Air Frying and oven

 PARTS OF APPLIANCE

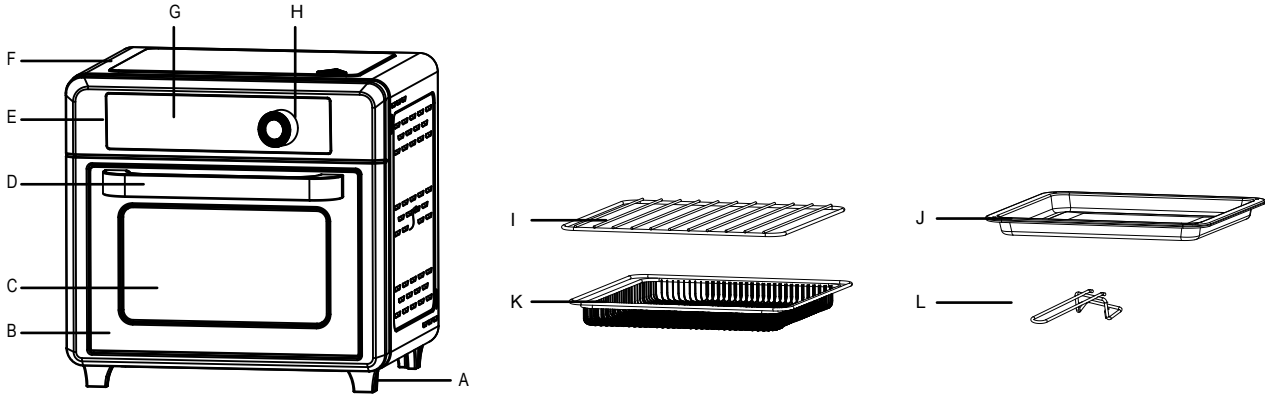

A	Bottom foot	G	Display area
B	Door fame	H	Control knob
C	Door glass	I	Bake rack
D	Door handle	J	Bake tray
E	Control panel	K	Frying basket
F	Housing	L	Tray/rack/baasket handle

OPERATING INSTRUCTION

Before using your oven for the first time

Be sure to

1. Make sure that the oven is unplugged.
2. Remove all the accessories and wash them in hot soak water or in the dishwasher.
3. Thoroughly dry all the accessories and re-assemble in oven. Plug the power cord into the wall socket and you are ready to use your oven.
4. After re-assembling your oven, we recommend that you run the oven at the max temperature for approximately 15 minutes to eliminate any dirty oil on its surface.
5. Set the temperature control dial to "220°C" and select one of the oven function except the fermentation function to heat the empty oven for about 15 minutes.

There may be some smoke and a burning smell at first use, but this is not a malfunction.

Please feel free to use it after the smoke disappear





Control panel explanations









Touch control area







Display area

Control knob for function, temperature, time

Symbol	Working Program
	When the plug is put into the socket, it will light up; Short press to turn on and double press to turn off.
	Short touch to start or pause
	Shift to select the temperature or time
	Short touch to turn on or off the inner light
Oven	Short touch to select the oven mode: 2 pcs of upper heating and 2 pcs of the bottom heating elements will work, the air fan will work
Air Fry	Short touch to select the air fry mode: all upper heating elements and air fan will work

Cooking programs

Mode	Symbol					
Oven						
Cooking Program	Fish	Cookies	Bread	Cake	Pizza	Fermentation
Temperature/ °C	210	180	180	150	210	40
Time/min	25	18	18	45	16	60
Temperature Range/ °C	40-220	40-220	40-220	40-220	40-220	40
Time Range/min	0-60	0-60	0-30	0-60	0-60	30mins-12hours

Mode	Symbol					
Air Fry						
Cooking Program	Bacon	Chicken	Wings	Steak	Chips	Egg Tarts
Temperature/ °C	205	210	210	200	200	200
Time/min	10	40	20	10	20	25
Temperature Range/ °C	150-220	100-220	100-220	150-220	150-220	150-220
Time Range/min	0-30	0-60	0-60	0-40	0-60	0-60

 
CLEANING

1. It is important that you clean the appliance after each use to prevent an accumulation of grease and avoid unpleasant odors.
2. The appliance must be cool down and unplug from outlet before cleaning.
3. Do not immerse appliance in water or wash it under waterspout.
4. Removable grill rack and bake tray can be washed, as normal kitchen ware.
5. Clean outer surface of appliance with damp cloth.
6. Do not use abrasive cleaner or sharp utensils to clean the oven, as scratching may weaker it and cause shattering.
7. Let all removable accessories and surfaces dry thoroughly prior to plugging oven in the wall socket.

SPECIAL WARNING:



Recycling symbol, don't dispose of the product with household refuse.

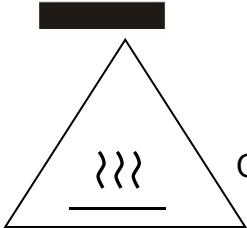

Caution: The temperature of the accessible surface may be high when the appliance is operating.

