

项目名称	V2613 X2 澳版		
版本号	A01		
设计时间	20260603		
物料名称	说明书		
设计师	陈世豪	蒋露露	
审核			
批准			
料号	04170500B08380		
材质工艺要求：	68g 双胶纸 单色 成品尺寸为 210*140mm，骑马钉		
	封底日期以实际生产时间为准		
材质要求：			
颜色及专色：	Pantone Cool Gary 11C		
尺寸要求：			
变更履历：	A01 二供全极耳电池包		

The word "dreame" is the abbreviation of Dreame Technology Co., Ltd. and its subsidiaries in China. It is the transliteration of the company's Chinese name "追觅", which means striving for excellence in every endeavor and reflects the company's vision of continuous pursuit, exploration and search in technology.



For more information & after-sales support, contact us via
support.au@dreame.tech
Tel: (07) 3737 3143
Dreame Trading (Tianjin) Co., Ltd.
Made in China 06/2026

VXV64A-AU-A01



Dreame X2

Cordless Stick Vacuum User Manual

DREAME

THANK YOU

FOR PURCHASING THIS DREAME VACUUM CLEANER.

Registration Quick Start

Welcome to register a Dreame account by scanning the QR code.

You are available for the **User Manual** and **Special Offers**.



The high-quality product is engineered for optimal performance. If you have any questions on the product, please contact us: support.au@dreame.tech or (07) 3737 3143.

Contents

Safety Instructions	01
Product Overview	03
Installation	05
Charging	06
How to Use	08
Care & Maintenance	10
FAQ	15
Troubleshooting	16
Specifications	17



Please scan the QR code for the User Manual.

Safety Instructions

To prevent accidents including electric shock or fire caused by improper use, please read this manual carefully before use and retain it for future reference.

Warning

- This product can be used by children aged from 8 years and above and persons with physical, sensory, intellectual deficiencies, or limited experience or knowledge under the supervision of a parent or guardian to ensure safe operation and to avoid any risk of hazards. Cleaning and maintenance shall not be carried out by children without supervision.
- The vacuum is not a toy. Children shall not play with or operate this product. Please exercise caution when using the vacuum near children. Do not allow children to clean or maintain the vacuum unless supervised by a parent or guardian.
- Do not use the vacuum outdoors or on wet surfaces. Only use the vacuum on dry indoor surfaces. Do not touch the plug or any part of the vacuum with wet hands.
- To reduce the risk of fire, explosion, or injury, make sure that the lithium battery and charging adapter are undamaged before use. Do not use the vacuum if either the lithium battery or charger is damaged.
- The brushes, battery, extension rod, metal connector pin, and vacuum are electrically conductive and should not be immersed in water or other liquid. Make sure to dry all filters after cleaning.
- To prevent injury caused by rotating parts, turn off the vacuum before cleaning them. The brushes, dust compartment and filter must all be properly installed before using the vacuum.
- Only use the original charging adapter. Never use an unoriginal adapter, as this may cause the lithium battery to catch fire.
- Do not use the vacuum to pick up flammable or combustible liquids, such as gasoline, or bleach, ammonia, drain cleaners or other liquids.
- Do not use the vacuum to pick up drywall particles, ashes like fireplace ash, or smoking or burning materials such as coal, cigarette butts or matches.
- Check the area to be cleaned before use. To prevent the openings from being blocked, clear the larger paper, spitball, plastic cloth or sharp objects (such as glass, nails, screws, coins, etc.) and any object which is larger than openings.
- Keep hair, loose clothing, fingers and other parts of the body away from the vacuum's openings and moving parts. Do not point the hose, wand or tools at your eyes or ears or put them in your mouth.
- Do not put any object into the vacuum's openings. Do not use the vacuum with any opening blocked. Keep free of dust, lint, hair, or other items which may reduce airflow.
- Do not lean the vacuum against a chair, table, or other unstable surface, as this may cause damage to the machine or personal injury. If the vacuum becomes damaged or is otherwise malfunctioning, please contact our authorized service department. Never attempt to disassemble the device on your own.
- All instructions in the manual for recharging the battery must be strictly followed. Failure to properly charge the battery within the specified temperature range could damage the battery.

- Only use accessories and replacement parts recommended by the manufacturer.
- Make sure the vacuum is unplugged when not used for extended periods as well as prior to performing any maintenance or repairs.
- Please be extra careful when using the vacuum to clean stairs.
- Do not install, charge, or use this product outdoors, in bathrooms, or around a pool.
- Fire Hazard Warning: Do not apply any type of fragrance to the vacuum's filter. These types of products are known to contain flammable chemicals which may cause the vacuum to catch fire.
- Only use the original charger (Model XHD024-300080AUH). Failing to do so may cause the lithium-ion battery to catch fire.
- WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.
- Only use the approved battery type (Model V2562E-751P-GYA/V2613A-751P-BWA). Failing to do so may cause the lithium-ion battery to catch fire.
- If the battery material is released, remove personnel from area until the batteries cool down and fumes dissipate.
- Provide maximum ventilation to clear out hazardous gases and avoid skin and eye contact or inhalation of vapors.
- Remove spilled liquid with absorbent and incinerate waste.
- Do not use and store in extremely hot or cold environments (below 0°C / 32° F or above 40°C / 104° F). Please charge the cordless vacuum in temperature above 0°C / 32° F and below 40°C / 104° F.
- This product is designed for home use only.
- The supply terminals are not to be short-circuited.



Read operator's manual



Detachable supply unit



For indoor use only

We, Dreame Trading (Tianjin) Co., Ltd., hereby, declares that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address:

<https://global.dreameotech.com>


For detailed e-manual, please go to <https://global.dreameotech.com/pages/usermanuals-and-faqs>

Product Overview


Accessories




Extension Rod

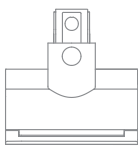

Motorized Mini-Brush

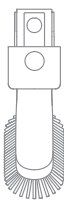


Soft Dusting Brush

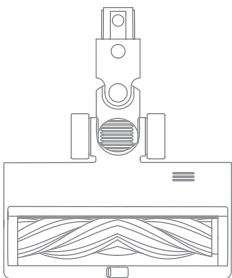


Auto-Cut Multi-Surface Brush



Combination Tool

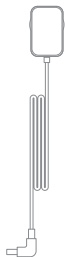

Charger

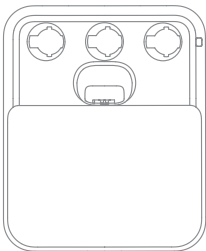


Charging & Storing Mount

Note: The illustrations in this manual are indicative only. The actual product may differ.

Product Overview


Component Names

Vacuum Body

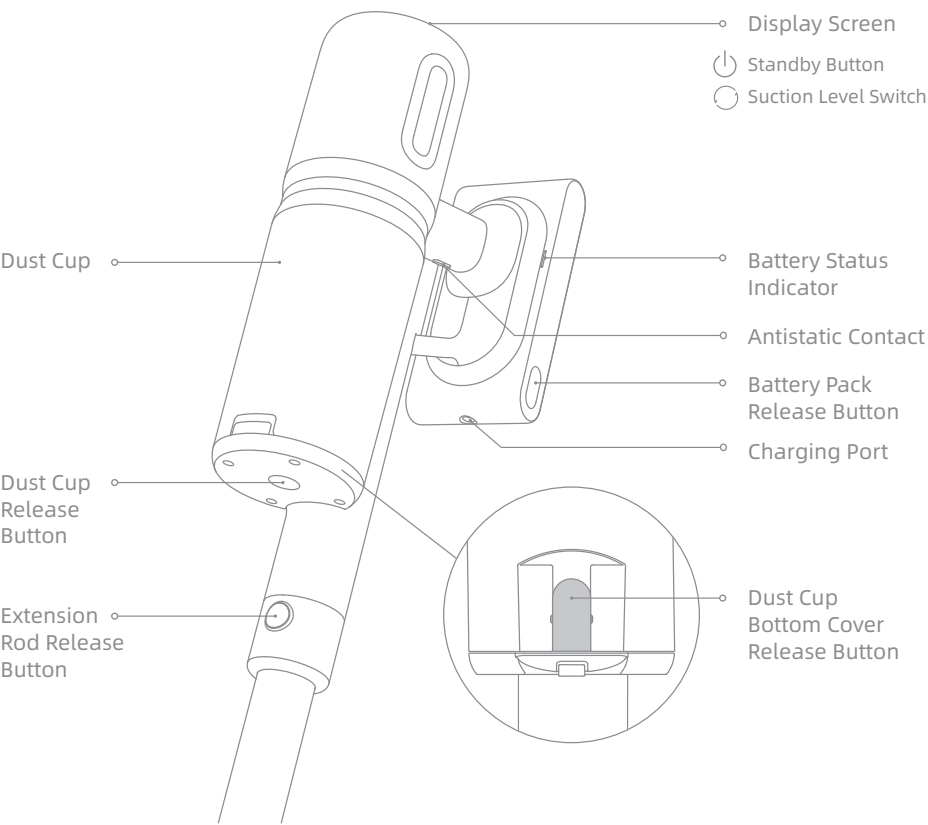

Installation

Installing the Accessories

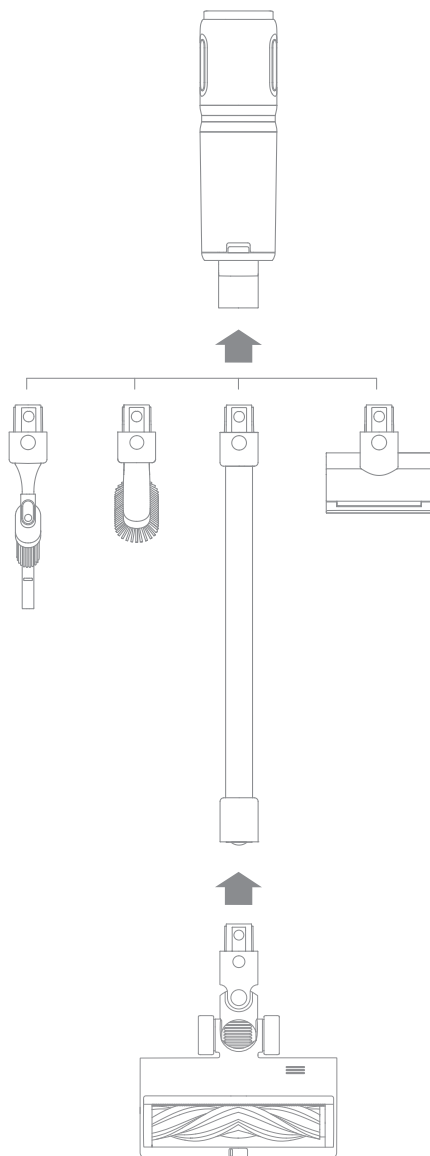


Note:


- It is not recommended to use the motorized mini-brush with the extension rod.
- Please install the accessories according to the actual cleaning needs.

Charging

Method 1 : Connect the charger between the charging port and the power supply.

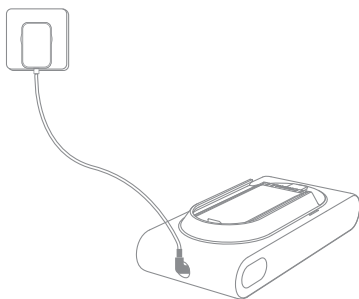

Method 2: Place the vacuum cleaner on the charging & storing mount as shown in the illustration, and then connect the charger between the charging & storing mount and the power supply. The battery status indicator will blink while charging.

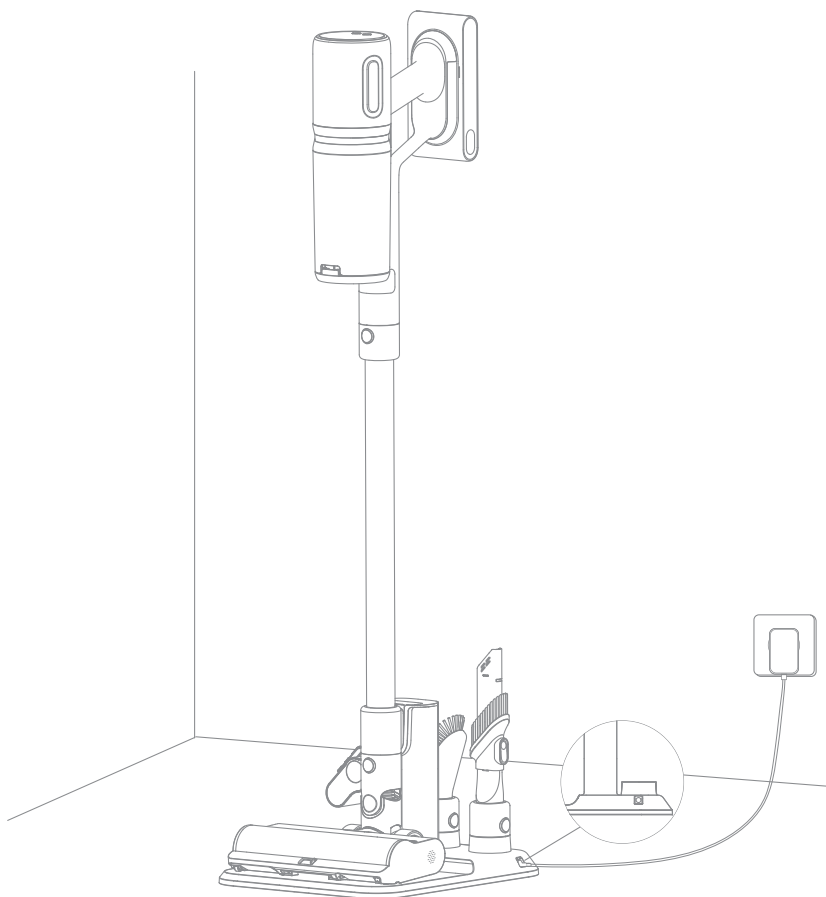

Charging

Note:

- The vacuum cannot be used while charging.
- Please fully charge before first use and after each use. This will take about 4 hours. Vacuuming at Turbo mode for a prolonged period will cause the battery to heat up, which increases charging time. Allow the vacuum to cool down for 30 minutes before charging it.
- When fully charged, the battery status indicator will turn off after 5 minutes and the vacuum will enter the power saving mode.
- When the charging contacts are dirty, please gently wipe them with a dry cloth.


Battery Status Display

Battery Status Indicator

- ☀ Blinking white
- Solid white
- Off

Charging

- Fully charged
- ☀ Charging
- Standby Mode

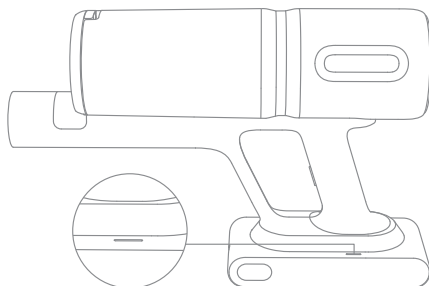

Display Screen

The number on the display screen represents the current battery level in a percentage during charging. When the number becomes 100, the battery is fully charged.



How to Use

Display Screen

Suction Level/Dust Level

The color of fan-shaped icon changes with suction level. Only in Auto Mode, the suction level and the color of fan-shaped icon change with the amount of inhaled dust.

Red: High
Orange: Med
Green: Low

Filter is expiring/
Air Duct Blocked/
Roller stuck
High-temperature
Alert


Suction Level Switch
(Press briefly to switch
between eco, auto and
turbo mode).

Charging/
Low Battery Level
Indicator

Breathing red: Battery
level $\leq 10\%$ (charging)
Breathing green: Battery
level $> 10\%$ (charging)
Blinking red: Battery level
 $\leq 10\%$ (discharging)

Battery Level
When the display screen
shows "LO", it indicates
that the battery level is
lower than 10%.

Standby Button
Press briefly to start or
stop

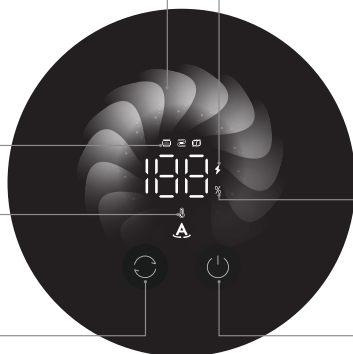

Note:

- If there is no operation for more than 15 seconds, the screen will turn off, and the main interface will be displayed when it is turned on again.
- If the vacuum is not working properly, the screen display will show an error message. Please refer to the troubleshooting table to find your solution.
- When any cleaning mode stops, the vacuum cleaner will default to auto mode when it is restarted. The device defaults to auto mode.


How to Use

Using Different Accessories

Auto-Cut Multi-Surface Brush

When the appliance starts, the lights in front of the brush roller will automatically turn on, which is convenient for use.

- When using on baby play mats, carpets or for vacuuming coffee beans, pop corn and other pellets, turn on the switch on the brush.
 - When vacuuming on tiles, wooden floors or other hard surfaces, turn off the switch.
1. on
 2. off

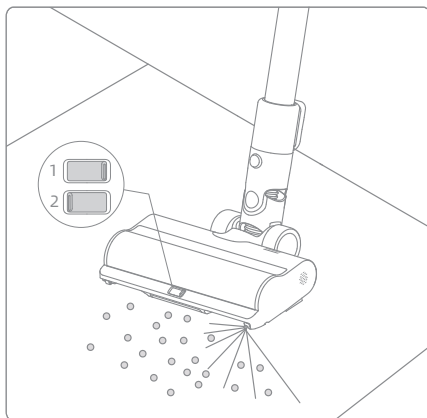


Motorized Mini-Brush

For vacuuming dirt, pet hair, and other stubborn debris from sofas, bedding, and other fabric surfaces.


Note:

It is not recommended to vacuum on fragile surfaces, such as silk.

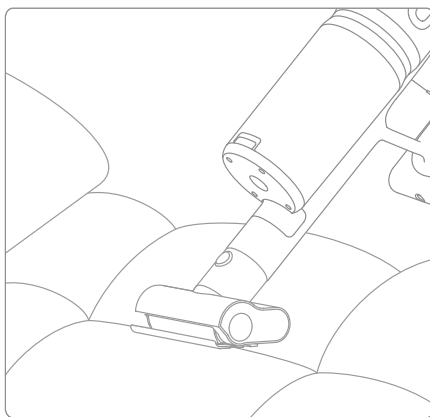

Combination Tool

Suitable for vacuuming cracks, corners of doors and windows, stairs, and other hard-to-reach places.

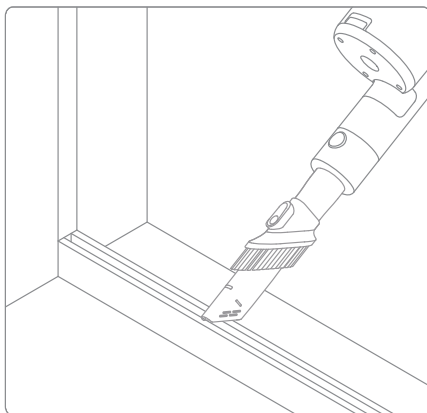


How to Use

Using Different Accessories

Soft Dusting Brush

Suitable for vacuuming on LCDs, keyboards, lampshades, curtains, shutters and other surfaces of fragile objects.

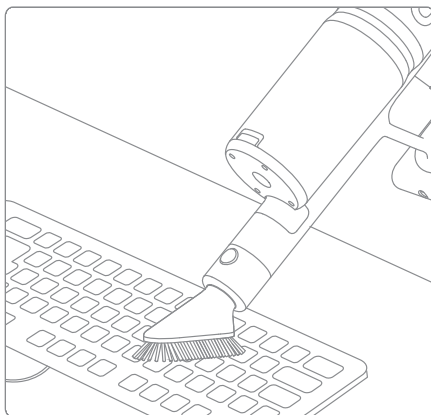

Care & Maintenance

Tips:

- Always use genuine parts to keep your warranty from being void.
- If the filter or nozzle becomes clogged, the vacuum will stop working shortly after being turned on. Clear the tube to restore functionality.
- Before cleaning the dust cup, please confirm that the plug is disconnected and keep the vacuum's standby button in the off position.
- If the vacuum is not used for an extended period, fully charge it, unplug the power cord, remove the battery, and store it in a cool, low-humidity environment away from direct sunlight. To avoid over-discharging the battery, recharge the battery at least once every three months.


Cleaning the Vacuum

Wipe the vacuum with a soft dry cloth.


Care & Maintenance

Cleaning the Dust Cup, Pre-Filter, and Cyclone Assembly


1. Press the dust cup release button and remove the dust cup from the vacuum.

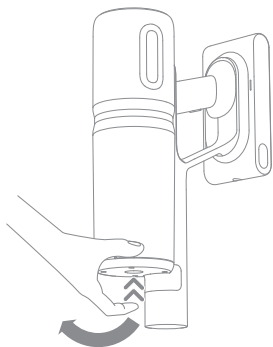


2. Press the dust cup bottom cover release button to empty the dust cup.

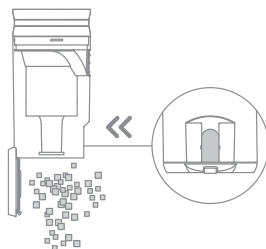

3. Remove the pre-filter first, and then rotate the cyclone system to lift it out.

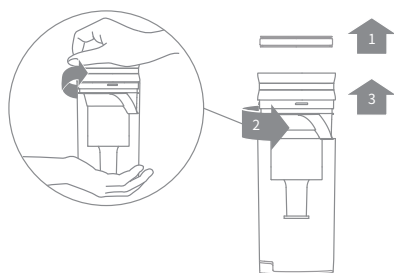

4. Rinse the cyclone assembly, pre-filter, and dust cup until they are clean. After washing, air dry for at least 24 hours.

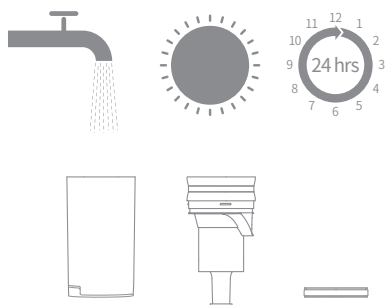


Note:

- It is recommended to clean the dust cup after each use.
- It is recommended to clean the cyclone system and pre-filter at least once every 3 to 4 months.


Care & Maintenance

Cleaning the Filter

1. Remove the dust cup as shown in the figure.

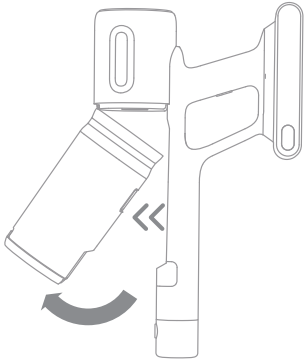


2. Remove the filter from the vacuum by pulling it down in the direction shown in the figure.

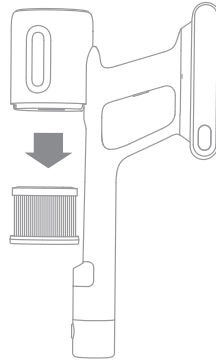

3. Rinse the filter with rotating it 360°. Lightly tap the filter several times to remove any debris caught in it.



4. Allow the filter to air dry for 24 hours.

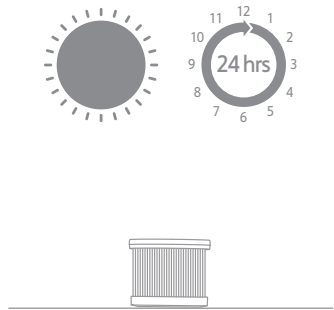


Note:

- Only use clean water to wash the filter. Do not use detergent.
- Do not attempt to clean the filter with a brush or finger.
- It is recommended to clean the filter once every 4 to 6 months.


Care & Maintenance

Cleaning the Auto-Cut Multi-Surface Brush

1. Turn the lock counterclockwise until it stops, then remove the roller from the roller brush.

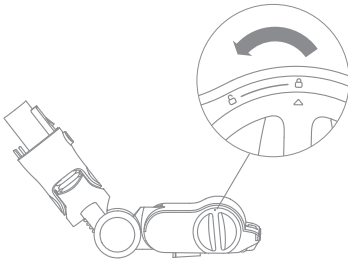

2. Use scissors to cut off the hairs and fibers that get stuck on the brush roller. Wipe the dust from the notch and transparent cover with a dry cloth or paper towel. Thoroughly dry before use.

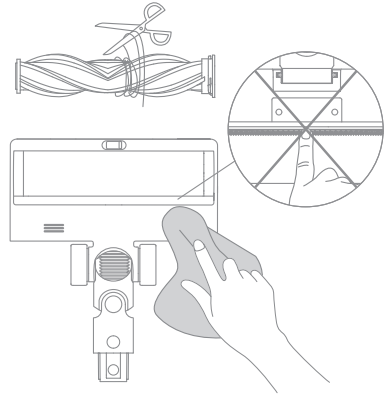


Note:

There is a blade built into the brush, and be careful not to touch it when cleaning.

3. When it is dirty, rinse the brush roller with clean water until it is clean.



4. Stand the brush roller upright for at least 24 hours until it is fully dry.


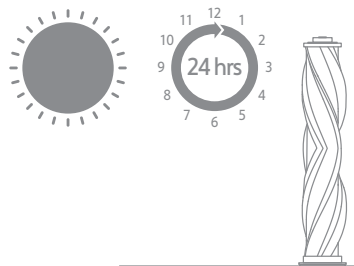


Care & Maintenance


Cleaning the Motorized Mini-Brush

Note: It is recommended to clean after each use.

1. Use a coin as illustrated to rotate the lock counterclockwise until you hear a click. After unlocking the motorized mini-brush, remove the brush roller.

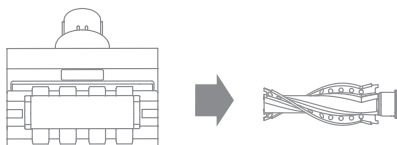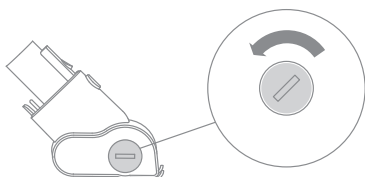

2. Rinse and clean the brush roller. Stand the brush roller upright in a well-ventilated area for at least 24 hours until it is fully dry.

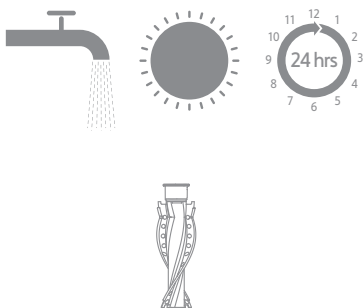


3. Once the brush roller is dry, reinstall it by following the disassembly steps in reverse.



Replacing the Battery Pack

The vacuum contains a removable rechargeable lithium-ion battery pack which has a limited number of recharge cycles. After extended use, the battery pack may no longer hold a charge. If this happens, it means the battery pack has reached the end of its life cycle and needs to be replaced.

1. Press and hold the battery pack release button and slide the battery pack left to remove it.
2. Install a new one.

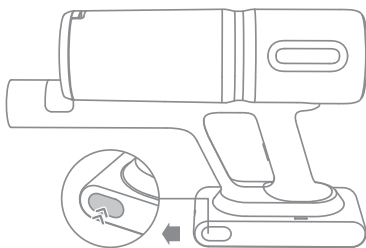


FAQ

If the vacuum is not working properly, please refer to the table below.

Errors	Possible Causes	Solutions
The vacuum does not work.	The appliance is out of battery or its battery level is low.	Fully charge the vacuum, then resume use.
	Overheat protection mode triggered by a blockage.	Clean the suction opening or air duct. Wait until the vacuum cools down, then reactivate it.
	The suction opening or air duct is blocked.	Clear any blockage from the suction opening or air duct.
Weak suction force.	The dust cup is full and/or filter assembly is clogged.	Empty the dust cup and/or clean the filter assembly.
	An attachment is blocked.	Clear any blockage in the attachment.
The motor makes a strange noise.	Main suction opening or extension rod is blocked.	Clear any blockage in the main suction opening or extension rod.
The battery indicator does not light up when charging.	The charger does not plug into the vacuum well.	Check whether the charger is properly plugged into the vacuum.
	The charger does not plug into the charging & storing mount well.	Check whether the charger is properly plugged into the charging & storing mount.
	The appliance is not placed onto the charging & storing mount properly.	Make sure the appliance is placed onto the charging & storing mount properly
	The battery is fully charged and switches to Sleep Mode automatically.	The vacuum runs normally.
	If the problem persists after ruling out the above two possibilities, please contact the after-sales service department for maintenance.	
Charging too slow.	The battery temperature is too low or too high.	Wait until the battery temperature returns normal, and then recharge.
The LED lights of the multi-surface brush do not work.	LED lights are damaged.	Please contact the after-sales department for maintenance.
The brush roller cannot rotate	The brush roller is stuck	Refer to the brush cleaning section to dismantle the roller brush and check if there is hair or other debris tangled on the roller and comb teeth; if any, remove it and restart the machine.

Battery Status Indicator

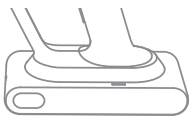Status	Possible Causes	Solutions	
The indicator is red after turning on the vacuum.	Battery pack is damaged.	Please contact the after-sales department for maintenance.	
The indicator blinks red quickly when charging the vacuum.	The charger is incompatible.	Only use the original charger to charge the vacuum.	
The indicator blinks white when using the vacuum.	Out of Battery.	Please charge in time.	

Troubleshooting

If the vacuum is not working properly, the screen display will show an error message. Please refer to the troubleshooting table to find your solution.

Error Icon	Status	Message	Solutions
	Blinking orange	Air duct blocked	Check whether the dust cup, extension rod, or brush is blocked. Check whether the pre-filter or filter is blocked due to excessive dust.
	Blinking orange	Roller stuck	Refer to the [Cleaning the Brush] section to clean the debris and hair tangled on the brush roller.
	Solid orange	Filter is expiring	Please replace the filter in time.
	Blinking red	High Temperature Alert	Wait until the motor's temperature returns normal, then resume use.
If an error code from E0 to E4 or from F0 to F2 appears on the display, please contact the after-sales service team for repair.			

Specifications

Vacuum Cleaner			
Model	VXV64A	Rated Power	540 W
Rated Voltage	25.2 V ===		
Charging Time	approximately 4 hours		
Auto-Cut Multi-Surface Brush		Motorized Mini-Brush	
Model	VMBI	Model	VMMY
Rated Power	40 W	Rated Power	20 W
Rated Voltage	25.2 V ===	Rated Voltage	24 V ===
Charger			
Model	XHD024-300080AUH		
Input	100-240 V ~ 50/60Hz 0.8 A	Output	30 V === 0.8 A
Average Active Efficiency	82.22 %	Efficiency at Low Load (10%)	76.20 %
No-load Power Consumption		≤ 0.3 W	
Rechargeable Lithium-Ion Battery Pack			
Model	V2562E-7S1P-GYA	Nominal Voltage	25.9 V ===
Rated Capacity	2700 mAh	Nominal Capacity	2850 mAh
Energy	69.93 Wh		
Model	V2613A-7S1P-BWA	Nominal Voltage	25.76 V ===
Rated Capacity	2800 mAh	Nominal Capacity	3000 mAh
Energy	72.13 Wh		

The lithium-ion battery pack contains substances that are hazardous to the environment. Before disposing of the vacuum, please remove the battery pack, then discard or recycle it in accordance with local laws and regulations of the country or region it is used in.

WEEE Information



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.

