

项目名称	V2562E-X3 station 澳版		
版本号	A01		
设计时间	20260605		
物料名称	说明书		
设计师	文案		
	聂杰逊	张梓雨	
审核			
批准			
料号	04170500A08530		
材质工艺要求： 封面 157 哑粉内页 68g 双胶纸 单色 成品 尺寸为 210*140mm，骑马钉装订			
材质要求：			
颜色及专色：			
尺寸要求：			
变更履历： A01 全极耳			



For more information & after-sales support, contact us via
support.au@dreame.tech

Tel: (07) 3737 3143

Dreame Trading (Tianjin) Co., Ltd.

Made in China

VXV75E-AU-A01 01/2026



Dreame X3 Station

Cordless Vacuum Cleaner

User Manual

DREAME

Contents

Safety Instructions	1
Product Overview	4
Installation	7
Charging	8
How to Use	10
Care & Maintenance	14
FAQ	21
Troubleshooting	22
Specifications	23



Please scan the QR code
for the User Manual.

THANK YOU

FOR PURCHASING THIS DREAME VACUUM CLEANER.

Registration Quick Start

Welcome to register a Dreame account by scanning the QR code.

You are available for the **User Manual** and **Special Offers**.



The high-quality product is engineered for optimal performance. If you have any questions on the product, please contact us: support.au@dreame.tech or (07) 3737 3143.

Safety Instructions

To prevent accidents including electric shock or fire caused by improper use, please read this manual carefully before use and retain it for future reference.

Warning—To reduce the risk of fire, electric shock, or injury:

- This product can be used by children aged from 8 years and above and persons with physical, sensory, intellectual deficiencies, or limited experience or knowledge under the supervision of a parent or guardian to ensure safe operation and to avoid any risk of hazards. Cleaning and maintenance shall not be made by children without supervision.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- The vacuum is not a toy. Children shall not play with or operate this product. Please exercise caution when using the vacuum near children. Do not allow children to clean or maintain the vacuum unless supervised by a parent or guardian.
- Do not use the vacuum outdoors or on wet surfaces. Only use the vacuum on dry indoor surfaces. Do not touch the plug or any part of the vacuum with wet hands.
- To reduce the risk of fire, explosion, or injury, make sure that the lithium battery and supply cord are undamaged before use. Do not use the vacuum if either the lithium battery or supply cord is damaged.
- The brush heads, battery, metal connector pin, and vacuum are electrically conductive and should not be immersed in water or other liquid. Make sure to dry all filters after cleaning.
- To prevent injury caused by moving parts, turn off the vacuum before cleaning the brush heads. The brush heads, dust compartment and filter must all be properly installed before using the vacuum.
- **WARNING:** Only use the original dust-removal hub. Never use an unoriginal one, as this may cause the lithium battery to catch fire.
- Do not use the vacuum to pick up flammable or combustible liquids, such as gasoline, or bleach, ammonia, drain cleaners or other liquids.
- Do not use the vacuum to pick up sharp or hard objects, such as glass, nails, screws, or coins, which may damage the machine. Do not use the vacuum to pick up drywall particles, ashes like fireplace ash, or smoking or burning materials such as coal, cigarette butts or matches.
- Check the area to be cleaned before use. To prevent the openings from being blocked, clear the larger paper, spitball, plastic cloth or sharp objects (such as glass, nails, screws, coins, etc.) and any object which is larger than openings.
- Keep hair, loose clothing, fingers and other parts of the body away from the vacuum's openings and moving parts. Do not point the extension rod, wand or tools at your eyes or ears or put them in your mouth.

- Do not put any object into the vacuum's openings. Do not use the vacuum with any opening blocked. Keep free of dust, lint, hair, or other items which may reduce airflow.
- Do not rest the vacuum against a chair, table, or other unstable surface, as this may cause damage to the machine or personal injury. If the vacuum becomes damaged from being knocked over or is otherwise malfunctioning, please contact our authorized service department. Never attempt to disassemble the device on your own.
- All instructions in the manual for recharging the battery must be strictly followed. Failure to properly charge the battery within the specified temperature range could damage the battery.
- Only use accessories and replacement parts recommended by the manufacturer.
- Please be extra careful when using the vacuum to clean stairs.
- Make sure the vacuum is unplugged when not used for extended periods as well as prior to performing any maintenance or repairs.
- Do not install, charge, or use this product outdoors, in bathrooms, or around a pool.
- Fire Hazard Warning: Do not apply any type of fragrance to the vacuum's filter. These types of products are known to contain flammable chemicals which may cause the vacuum to catch fire.
- Only use the original dust-removal hub (Model VCBA). Failing to do so may cause the lithium-ion battery to catch fire.
- WARNING: For the purposes of recharging the battery, only use the detachable supply unit provided with this appliance.
- Only use the approved battery type (Model V2562E-7S1P-GYA/V2613A-7S1P-BWA). Failing to do so may cause the lithium-ion battery to catch fire.
- If the battery material is released, remove personnel from area until the batteries cool down and fumes dissipate.
- Provide maximum ventilation to clear out hazardous gases and avoid skin and eye contact or inhalation of vapors.
- Remove spilled liquid with absorbent and incinerate waste.
- Do not use and store in extremely hot or cold environments (below 0°C /32°F or above 40°C /104°F). Please charge the cordless vacuum in temperature above 0°C /32°F and below 40°C /104°F.
- This product is designed for home use only.
- The supply terminals are not to be short-circuited.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



Read operator's manual



Detachable supply unit



For indoor use only



Class II equipment



time-lag miniature fuse-link


where T3.15A is the symbol for the time/current characteristic

We, Dreame Trading (Tianjin) Co., Ltd., hereby, declares that this equipment is in compliance with the applicable Directives and European Norms, and amendments. The full text of the EU declaration of conformity is available at the following internet address: <https://global.dreameotech.com>

For detailed e-manual, please go to <https://global.dreameotech.com/pages/user-manuals-and-faqs>

Product Overview


Accessories

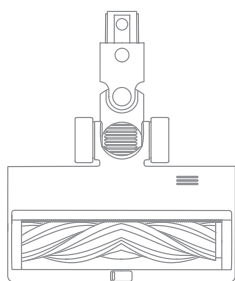

TangleCut™ Multi-Surface Brush




Combination Tool

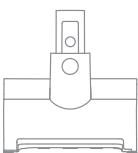

Motorized Mini-Brush



 Soft Dusting Brush



Bendable Extension Rod



Dust-Removal Hub




Dust Collection Bag
(x1 pre-installed, x1 stored in the packaging box)



Accessory Mount

Product Overview


Component Names

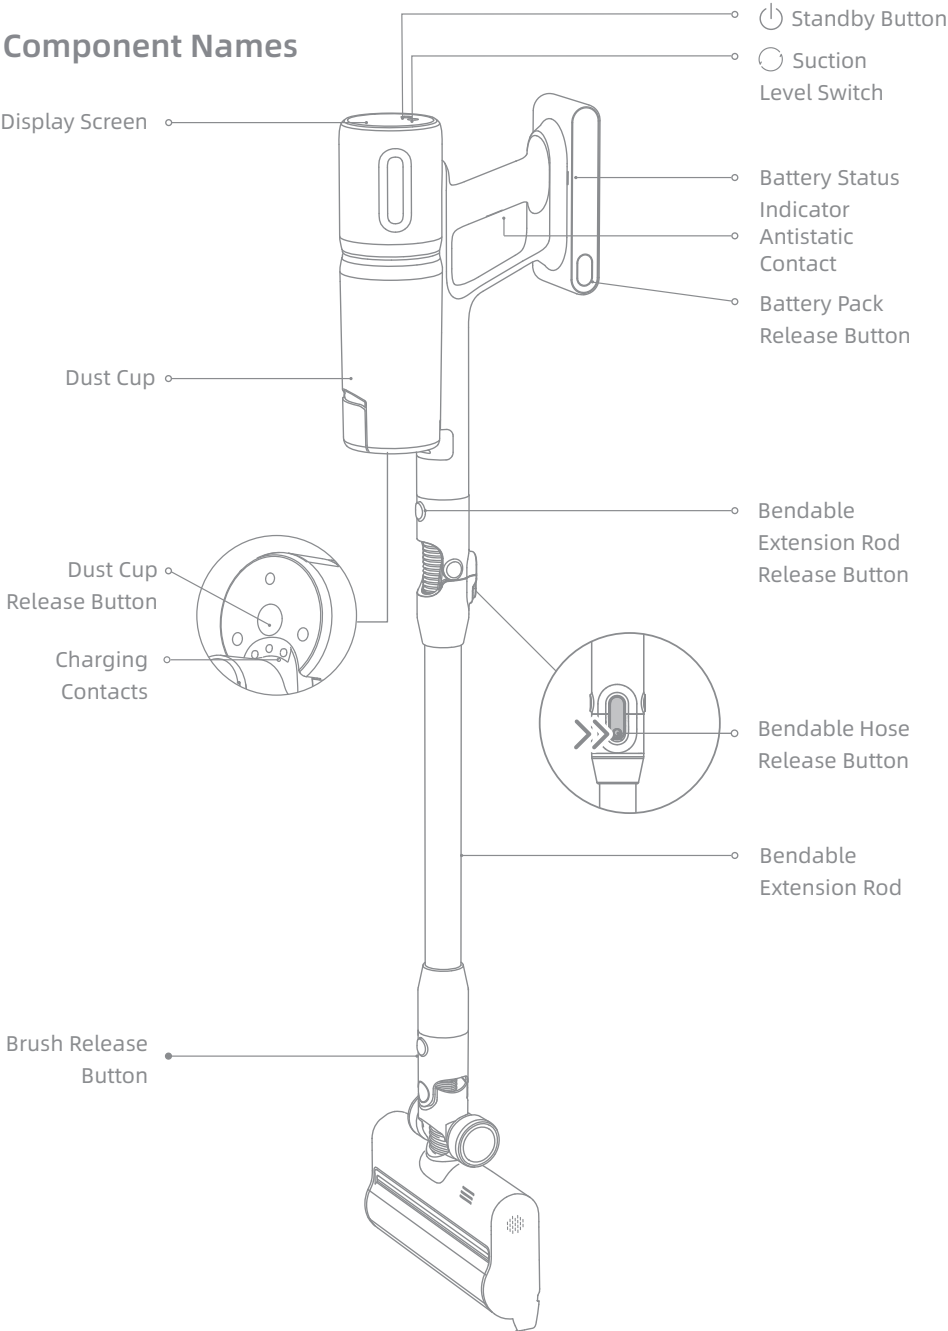


Note: The illustrations in this manual are indicative only. The actual product may differ.

Product Overview

Dust-Removal Hub

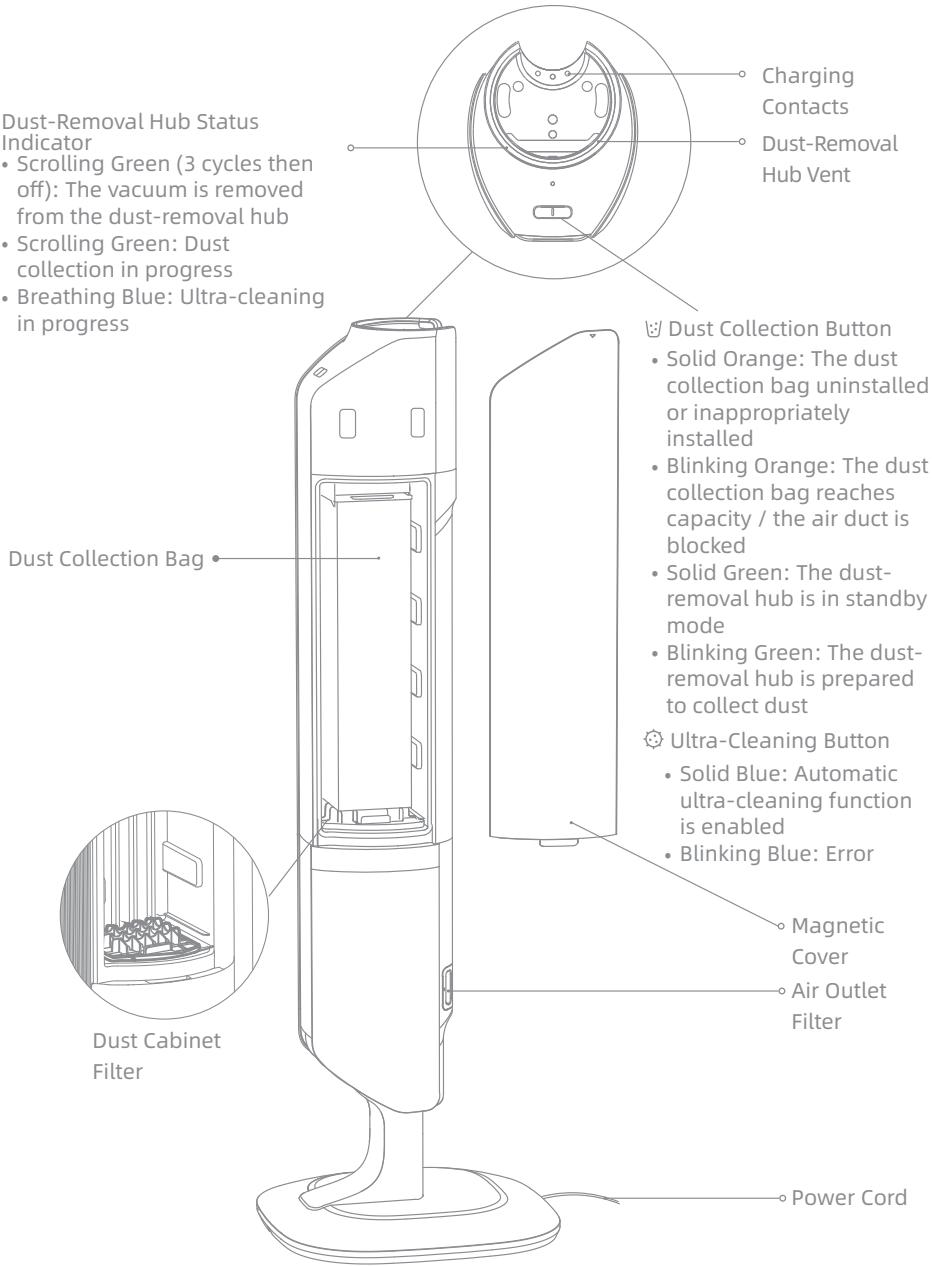

Installation

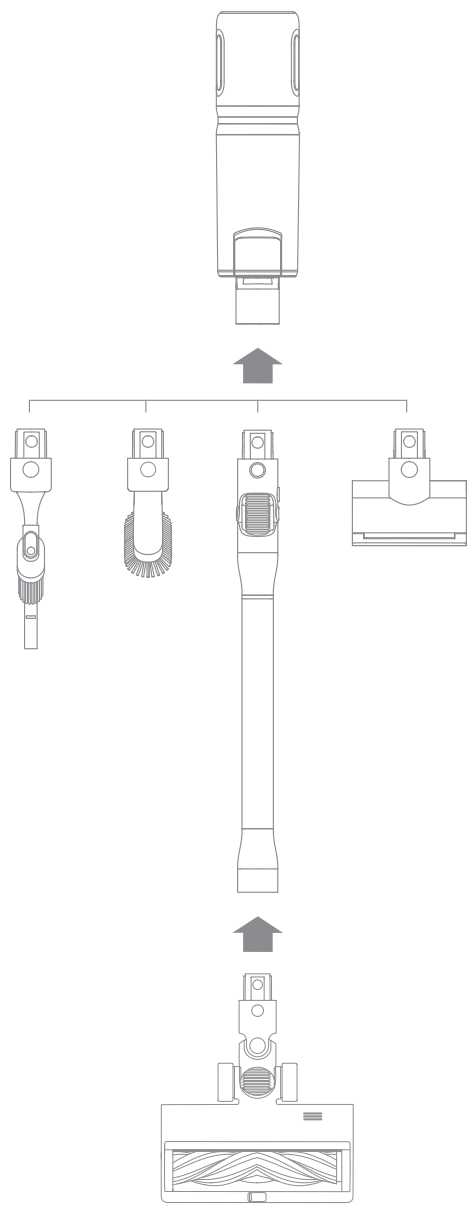


Note:

- It is not recommended to use the motorized mini-brush with the extension rod.
- Please install the accessories according to the actual cleaning needs.

Charging

Charging with the Dust-Removal Hub

Place the dust collection station near a power supply and connect the power cord. Align the vent of the dust cup with the dust-removal hub to position the vacuum. Fully charge the vacuum before first use.

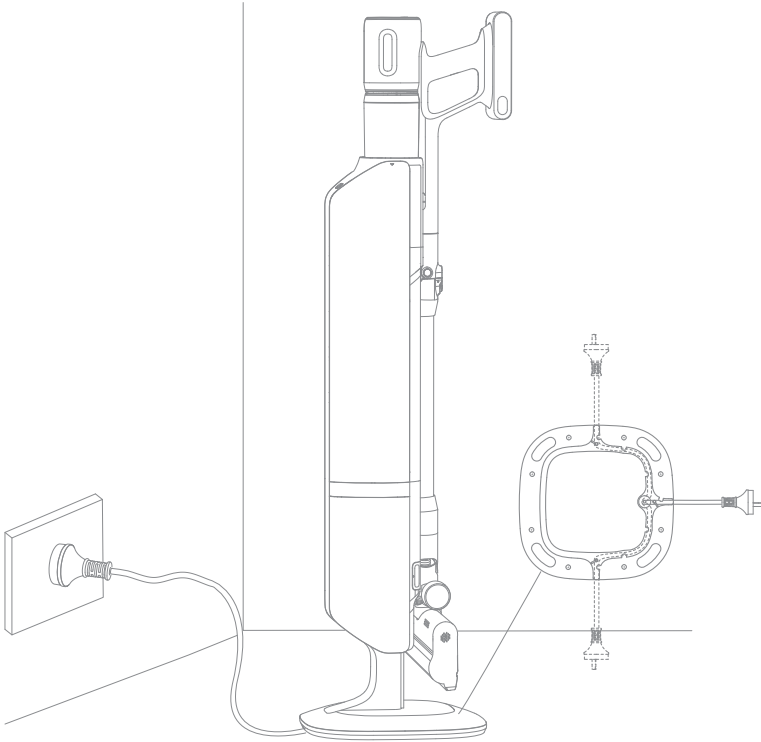

Note:

- Fully charge the vacuum before using it for the first time. This will take about 4 hours.
- The vacuum cannot be used while charging.
- Vacuuming at Turbo mode for a prolonged period will cause the battery to heat up, which increases charging time. Allow the vacuum to cool down for over 30 minutes before charging it.
- When the vacuum is not in use, it can be placed on the dust-removal hub.
- The outlet of the power cord can be adjusted according to users' needs.
- Charging is only permitted in the position shown in the figure.

Charging

Battery Status Display

Battery Status Indicator


☼ Blinking white ○ Solid white ● Off

Charging

- Fully charged
- ☼ Charging
- Standby Mode


Display Screen

The number on the display screen represents the current battery level in a percentage during charging. When the number becomes 100, the battery is fully charged.

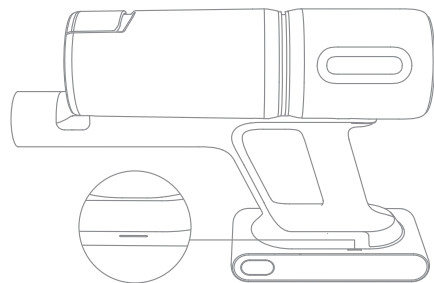

How to Use

Display Screen

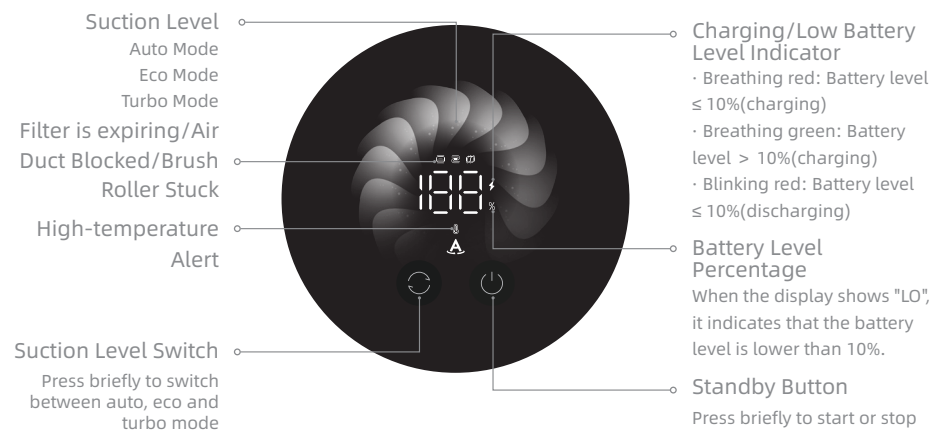

Note:

- If there is no operation for more than 15 seconds, the screen will turn off, and the main interface will be displayed when it is turned on again.
- If the vacuum is not working properly, the screen display will show an error message. Please refer to the troubleshooting table to find your solution.
- When any cleaning mode stops, the vacuum cleaner will default to auto mode when it is restarted. The device defaults to auto mode.


How to Use

Starting Dust Collection

Align the vent of the dust cup with the dust-removal hub to position the vacuum. The dust-removal hub will start dust collection automatically. Briefly press the dust collection button  to stop or restart the dust collection.

Starting Ultra-Cleaning

When the ultra-cleaning button  is solid blue, the dust-removal hub will automatically start deep cleaning after dust collection. Press and hold  for 5 seconds to turn off the ultra-cleaning function.

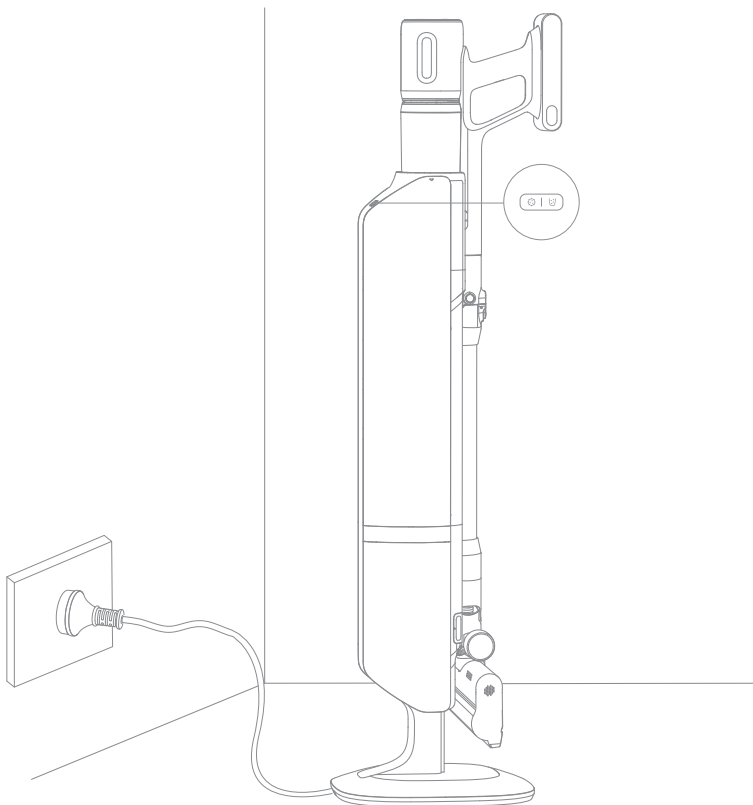

Note:

- The vacuum defaults to automatic dust collection. To switch to manual dust collection, remove the vacuum from the dust-removal hub and press and hold the dust collection button for 5 seconds. The dust collection button will blink green five times to indicate a successful switch. Press the dust collection button for 5 seconds again to switch back to automatic dust collection.
- If the dust collection bag reaches capacity or the air duct is blocked during the dust collection process, the dust-removal hub will stop working after the process is completed and cannot collect dust again.
- If there is a lot of garbage in the dust cup, please perform the dust collection process several times to achieve better cleaning results.

How to Use

Using Different Accessories


TangleCut™ Multi-Surface Brush

- When using on baby play mats, carpets or for vacuuming coffee beans, pop corn and other pellets, turn on the switch on the brush.

- When vacuuming on tiles, wooden floors or other hard surfaces, turn off the switch.

1. on
2. off


Note: When the appliance starts, the lights in front of the brush roller will automatically turn on, which is convenient for use.

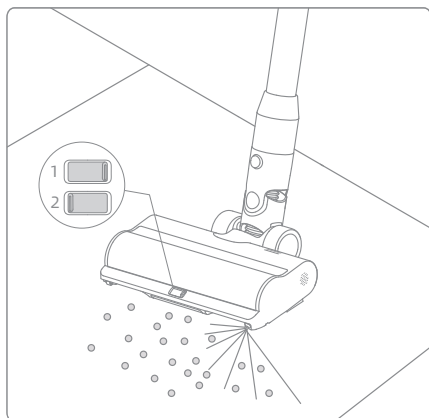

Motorized Mini-Brush


For vacuuming dirt, pet hair, and other stubborn debris from sofas, bedding, and other fabric surfaces.

Note: It is not recommended to vacuum on fragile surfaces, such as silk.

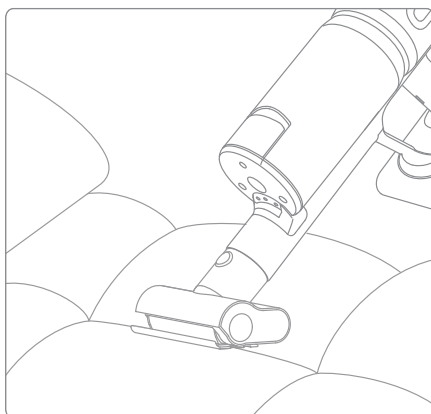


Combination Tool

Suitable for vacuuming cracks, corners of doors and windows, stairs, and other hard-to-reach places.

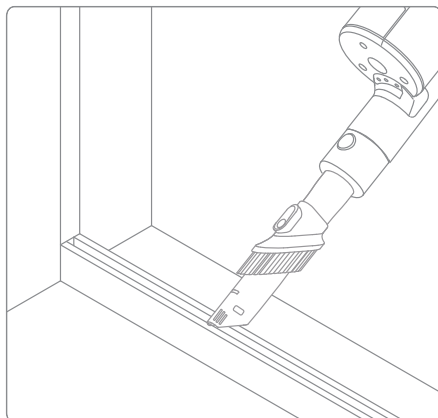

Accessory Mount

The soft dusting brush, combination tool and motorized mini-brush can be placed on the accessory mount when not in use.

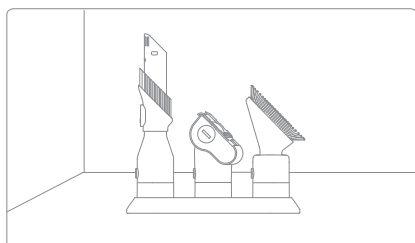


How to Use

Using Different Accessories


Soft Dusting Brush

Suitable for vacuuming on LCDs, keyboards, lampshades, curtains, shutters and other surfaces of fragile objects.

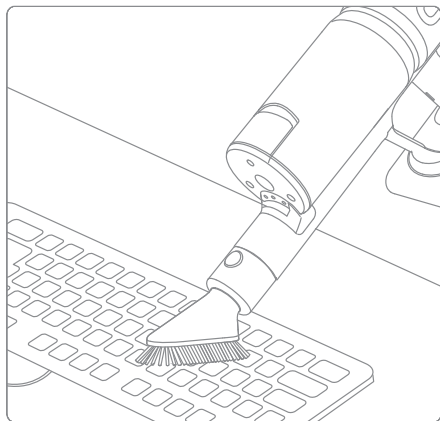

Bendable Extension Rod

Press the release button to bend the rod, allowing for cleaning under low-lying furniture.

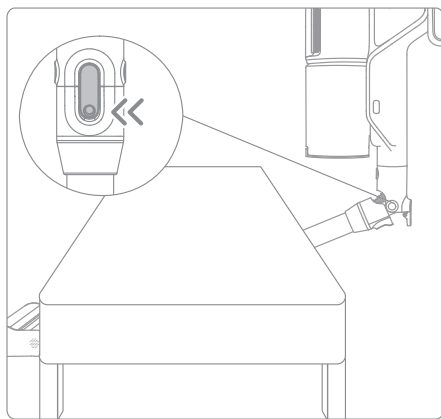

Note:

- If any rotating part becomes stuck, the vacuum may shut off automatically. Remove any trapped foreign objects, then resume use.
- When the battery becomes overheated, the vacuum will automatically shut off. Wait until the battery temperature returns to normal, then resume use.

Care & Maintenance

Tips:

- Always use genuine parts to keep your warranty from being void.
- If the filter or nozzle becomes clogged, the vacuum will stop working shortly after being turned on. Clear the tube to restore functionality.
- Before cleaning the dust cup, please confirm that the plug is disconnected and keep the vacuum's power button in the off position.
- If the vacuum is not used for an extended period, fully charge it, unplug the power cord, remove the battery, and store it in a cool, low-humidity environment away from direct sunlight. To avoid over-discharging the battery, recharge the battery at least once every three months.

Care & Maintenance



Cleaning the Vacuum

Wipe the vacuum with a soft dry cloth.


Cleaning the Dust Cup, Pre-Filter, and Cyclone Assembly

1. Press the dust cup release button and remove it from the vacuum.

2. Remove the pre-filter first, and then rotate the cyclone system to lift it out.

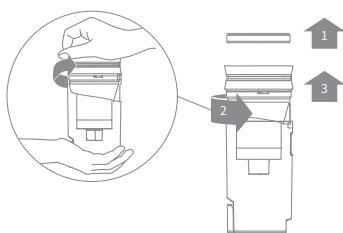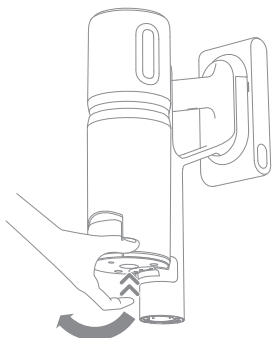

3. Rinse the cyclone assembly, pre-filter, and dust cup until they are clean. After washing, air dry for at least 24 hours.

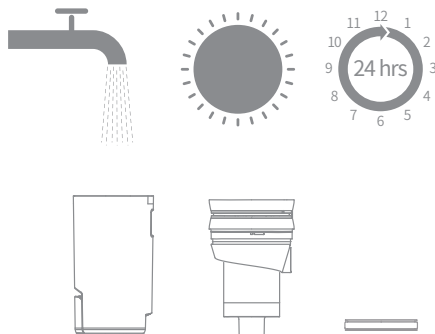


Note:

- Please clean the dust cup as needed.
- It is recommended to clean the cyclone system and pre-filter at least once every 3 to 4 months.


Care & Maintenance

Cleaning the Filter

1. Remove the dust cup as shown in the figure.

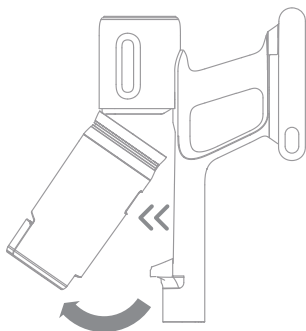


2. Remove the filter from the vacuum by pulling it down in the direction shown in the figure.

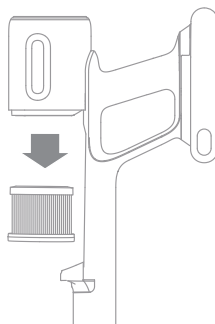

3. Rinse the filter with rotating it 360°. Lightly tap the filter several times to remove any debris caught in it.



4. Allow the filter to air dry for 24 hours.

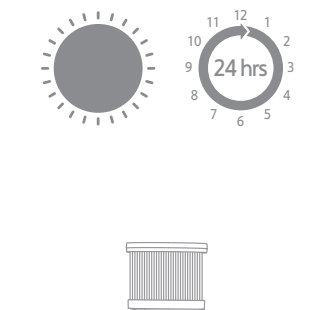


Note:

- Only use clean water to wash the filter. Do not use detergent.
- Do not attempt to clean the filter with a brush or finger.
- It is recommended to clean the filter once every 4 to 6 months.


Care & Maintenance

Replacing the Air Outlet Filter

1. Remove the air outlet filter as shown in the figure.

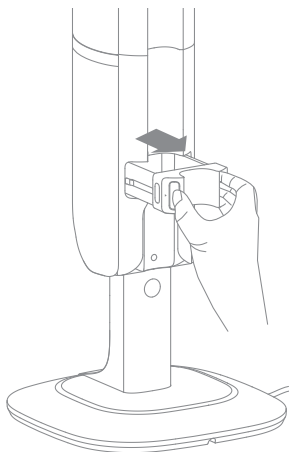

2. Install a new one.

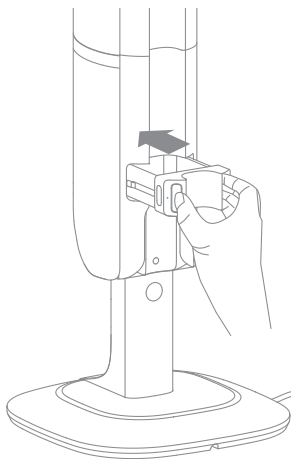

Note:



- The air outlet filter is non washable.
- It is recommended to replace the filter once every 4 to 6 months.

Care & Maintenance

Replacing the Dust Collection Bag



When the dust collection button blinks orange, it means that the dust collection bag reaches capacity and needs to be replaced with a new one.

- 1. Take off the dust-removal hub cover.
- 2. Pull out the dust collection bag and discard it.

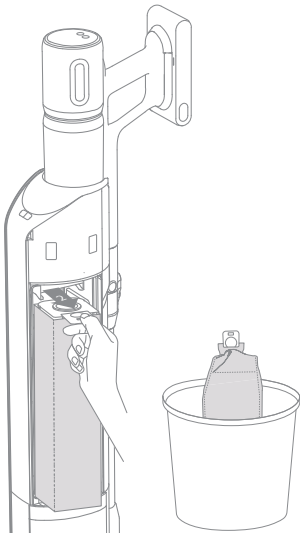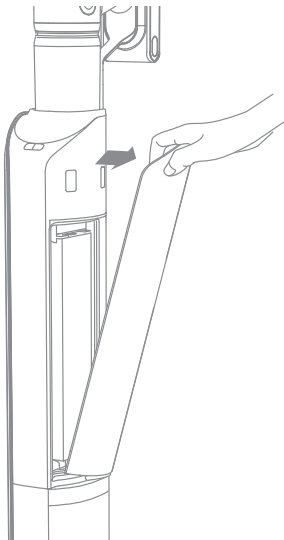


Note: Pulling outwards on the handle of the dust collection bag will seal the bag to prevent the dust and debris from accidentally falling out.

- 3. When the filter is dirty, rinse it with water. Then place it in a well-ventilated place for at least 24 hours to make sure it is thoroughly dry.

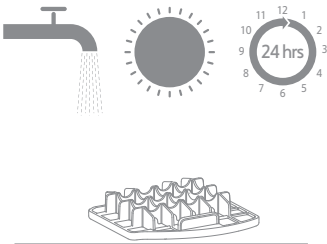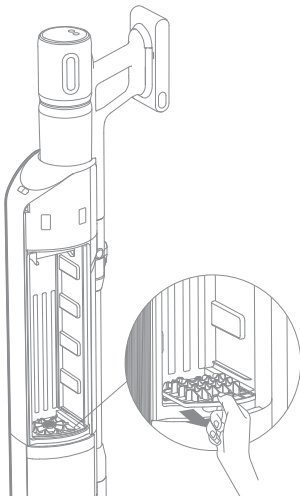


Care & Maintenance

4. Install a new dust collection bag by inserting the bag handle into the card slot.

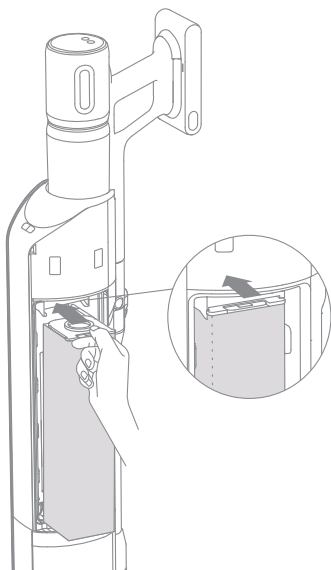

5. Install back the dust-removal hub cover.

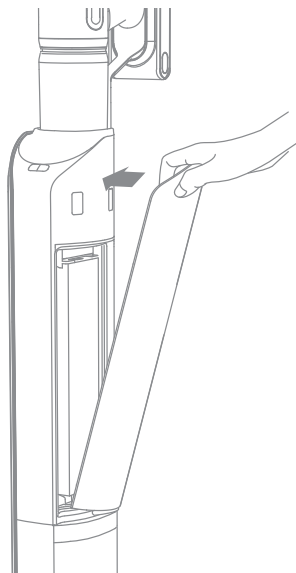


Note: It is recommended to replace the dust collection bag every three months.

Replacing the Battery Pack

The vacuum contains a removable rechargeable lithium-ion battery pack which has a limited number of recharge cycles. After extended use, the battery pack may no longer hold a charge. If this happens, it means the battery pack has reached the end of its life cycle and needs to be replaced.

1. Press down the battery pack release button and slide the battery pack as illustrated to remove it.
2. Install the new battery pack.


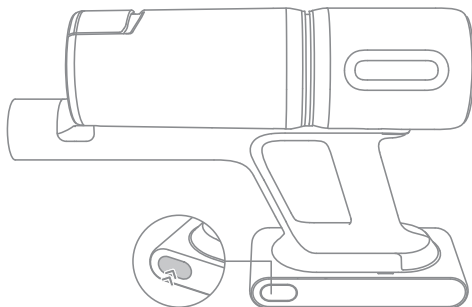


Care & Maintenance

Cleaning the TangleCut™ Multi-Surface Brush

1. Turn the lock counterclockwise until it stops, then remove the roller from the roller brush.


2. Wipe the dust from the notch and transparent cover with a dry cloth or paper towel. Thoroughly dry before use.

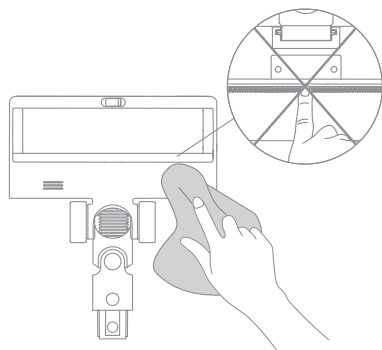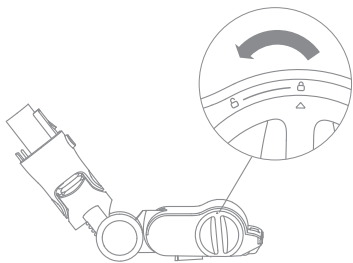

Note: There is a blade built into the brush, and be careful not to touch it when cleaning.

3. When it is dirty, rinse the brush roller with clean water until it is clean.

4. Stand the brush roller upright for at least 24 hours until it is fully dry.

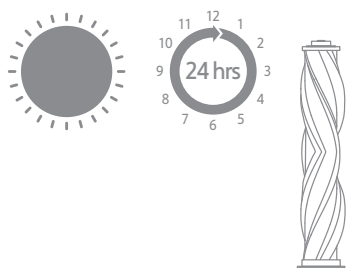


Care & Maintenance

Cleaning the Motorized Mini-Brush


Note: It is recommended to clean after each use.

1. Use a coin as illustrated to rotate the lock counterclockwise until you hear a click.

2. After unlocking the motorized mini-brush, remove the brush roller, then rinse and clean it.

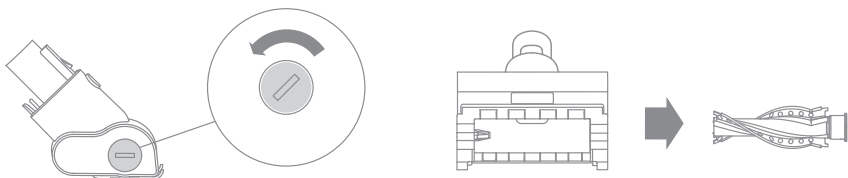

3. Stand the brush roller upright in a well-ventilated area for at least 24 hours until it is fully dry.

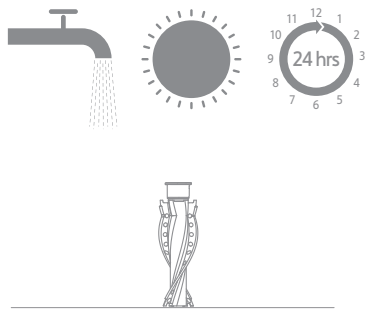

FAQ

If the vacuum is not working properly, please refer to the table below.

Errors	Possible Causes	Solutions
Vacuum does not work.	The appliance is out of battery or its battery level is low.	Fully charge the vacuum, then resume use.
	Overheat protection mode triggered by a blockage.	Clean the suction opening or air duct. Wait until the vacuum cools down, then reactivate it.
	The suction opening or air duct is blocked.	Clear any blockage from the suction opening or air duct.
Weak suction force.	The dust cup is full and/or filter assembly is clogged.	Empty the dust cup and/or clean the filter assembly.
	An attachment is blocked.	Clear any blockage in the attachment.
The motor makes a strange noise.	Main suction opening or extension rod is blocked.	Clear any blockage in the main suction opening or extension rod.
The battery indicator is solid red when charging the vacuum.	Battery pack is damaged.	Please contact after-sales service for maintenance.
The battery indicator blinks red after turning on the vacuum.	The motor temperature is too high. / The brush roller is blocked. / The air duct is blocked.	Check these parts in turn.
The battery indicator does not light up when charging.	The vacuum is not properly placed on the dust-removal hub.	Make sure that the charging contact of the vacuum is aligned with that of the dust-removal hub.
	The battery is charged and switches to Sleep Mode automatically.	The vacuum runs normally.
	The problem persists after ruling out the above two possibilities.	Please contact the after-sales department for maintenance.
Charging too slow.	The battery temperature is too low or too high.	Wait until the battery temperature returns normal, and then recharge.
LED light of the multi-surface brush does not work.	LED light is damaged.	Please contact the after-sales department for maintenance.
The dust collection button is solid orange.	The dust collection bag is uninstalled or inappropriately installed.	Before dust collection starts, confirm that the dust collection bag has been installed or installed in place.
The dust collection button is blinking orange.	The dust collection bag reaches capacity or the air duct is blocked.	Replace a new dust collection bag or clean the air duct. Then press and hold the dust collection button for 3s to troubleshoot the problem.

Errors	Possible Causes	Solutions
The ultra-cleaning button is blinking blue.	The ultra-cleaning is malfunction.	Please contact the after-sales department for maintenance.

Battery Status Indicator

Status	Possible Causes	Solutions	
The indicator is red after turning on the vacuum.	Battery pack is damaged.	Please contact the after-sales department for maintenance.	
The indicator blinks white when using the vacuum.	Out of Battery.	Please charge in time.	

Troubleshooting

If the vacuum is not working properly, the screen display will show an error message. Please refer to the troubleshooting table to find your solution.

Error Icon	Status	Error Message	Solutions
	Blinking orange	Air duct blocked	Check whether the dust cup, extension rod, or brush is blocked. Check whether the pre-filter or filter is blocked due to excessive dust.
	Blinking orange	Brush roller stuck	Refer to the [Cleaning the Brush] section to clean the debris and hair tangled on the brush roller.
	Solid orange for 1 min, then off	Filter is expiring	Please replace the filter in time. Then press the standby button for 5 seconds to reset the filter.
	Blinking red	High-temperature alert	Please wait until the motor temperature returns normal.
If an error code from E0 to E4 or from F0 to F2 appears on the display screen, please contact the after-sales service team.			

Specifications

Vacuum Cleaner			
Model	VXV75E	Charging Time	approximately 4 hours
Rated Power	610W	Rated Voltage	25.2V ===
Charging Voltage	30.8V ===		
TangleCut ™ Multi-Surface Brush			
Model	VMBI		
Rated Power	40W	Rated Voltage	25.2V ===
Motorized Mini-Brush			
Model	VMMY		
Rated Power	20W	Rated Voltage	24V ==
Dust-Removal Hub			
Model	VCBA		
Input	220V-240V ~ 50Hz/60Hz	Output	30.8V === 0.9A
Rated Power	1050W		
Rechargeable Lithium-Ion Battery Pack			
Model	V2562E-7S1P-GYA	Nominal Voltage	25.9V ===
Rated Capacity	2700mAh	Nominal Capacity	2850mAh
Energy	69.93Wh		
Model	V2613A-7S1P-BWA	Nominal Voltage	25.76V ===
Rated Capacity	2800mAh	Nominal Capacity	3000mAh
Energy	72.13Wh		

The lithium-ion pack contains substances that are hazardous to the environment. Before disposing of the vacuum, please remove the battery pack, then discard or recycle it in accordance with local laws and regulations of the country or region it is used in.

The appliance must be disconnected from the power supply when removing the battery. Keep batteries out of the reach of children. Never put batteries in mouth. If swallowed, contact your physician or local poison control.

Under abusive conditions, never contact the battery from which the liquid may be ejected. If contact accidentally occurs, rinse with water. If liquid contacts eyes, seek medical help immediately. Liquid ejected from the battery may cause irritation or burns.

WEEE Information



All products bearing this symbol are waste electrical and electronic equipment (WEEE as in directive 2012/19/EU) which should not be mixed with unsorted household waste. Instead, you should protect human health and the environment by handing over your waste equipment to a designated collection point for the recycling of waste electrical and electronic equipment, appointed by the government or local authorities. Correct disposal and recycling will help prevent potential negative consequences to the environment and human health. Please contact the installer or local authorities for more information about the location as well as terms and conditions of such collection points.