


everten

2 SLICE WAFFLE MAKER

Owner's Manual

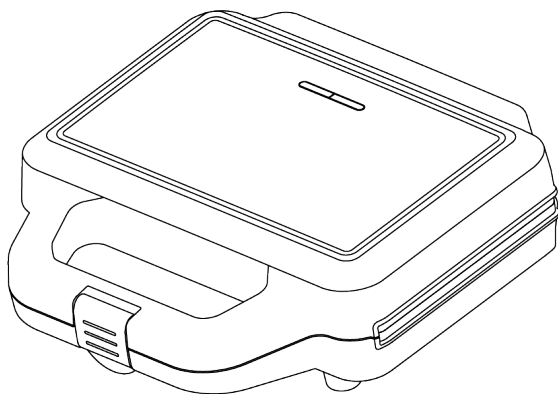

IMPORTANT

Read and follow all warnings and instructions before assembly and use. Keep this manual for future reference.

SPECIFICATIONS

- Model number: 699347
- Voltage: 220 - 240V ~ 50/60Hz
- Power rating: 650-780W

PRODUCT FEATURES

Start your morning right with the Everten 2 Slice Waffle Maker, where crisp, golden perfection meets easy, mess-free cooking. Its CeramiQ™ ceramic non-stick plates create two delicious waffles at once.

- Cast aluminium plates with CeramiQ™ non-stick coating, free from PFAS, PTFE, PFOA, lead and cadmium
- Non-stick plates for effortless food release and easy cleaning
- Quick and even cooking thanks to the cast aluminium plate
- Cool touch handle
- Ready to bake indicator light

ceramiQ™ NON-STICK COATING

The waffle plates feature a hard, durable, ceramic non-stick coating called CeramiQ™ which is more environmentally friendly than traditional non-stick. CeramiQ™ is thermo-resistant, easy to clean, and free from PFAS, PTFE, PFOA, lead and cadmium.

SAFETY PRECAUTIONS

When using this electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions before using.
2. Ensure the voltage is compliant with the voltage range stated on the rating label.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is intended to be used in household and similar applications such as:
 - i. Staff kitchen areas in shops, offices and other working environments.
 - ii. Farmhouses.
 - iii. By clients in hotels, motels and other residential type environments.
 - iv. By bed and breakfast type environments.
7. To protect against risk of electric shock, do not place cord, plug or the base of the appliance in water or any other liquid.
8. Do not use attachments or accessories which are not recommended by the manufacturer.
9. The product is only suitable for the purpose indicated in this manual. Do not use this product or any part for other purposes. If it is operated incorrectly, it may cause injury.
10. Always use the appliance on a firm and stable surface and keep it 30cm from other objects and the wall to ensure heat is easily released.
11. Do not place the appliance on or near a hot surface, including a gas or electric stove, or in a heated oven.
12. Do not move the appliance when in use.
13. Not suitable for use with external timers or remote controls.
14. For indoor household use only.

15. Do not place anything on top of the appliance while in operation or when storing.
16. Appliance surfaces can get hot during and after operation. To prevent burns or personal injury always use heat resistant oven mitts or gloves when opening the lid of the appliance.
17. Allow the appliance to cool before cleaning, disassembling, putting in or taking out parts, and storing.
18. Do not operate the appliance with the lid open.

OPERATING INSTRUCTIONS

1. Open the lid: Use the handle to lift the top lid into the open position.
2. Plug the appliance into power. The power light will illuminate. Close the lid.
3. Preheat:
 - After two to three minutes, the 'ready' light will illuminate, indicating the unit is preheated.
 - For best results brush lightly with oil before filling.
4. Prepare waffle batter while the appliance preheats.
5. Filling the plate:
 - Add approximately one rounded teaspoon to one tablespoon of batter per waffle.
 - Do not use liners. This produces a crispier result.
 - Do not overfill as the batter will expand when cooking.
6. Close the lid: Use the handle to close the lid and bake for 10 to 15 minutes.
 - Use a toothpick to test doneness. If it comes out clean, waffles are ready.
7. Adjust as needed: Cover and cook for 30 second intervals if further browning is desired.

8. The ready light will cycle on and off to regulate baking temperature.
9. When done:
 - Use oven mitts to lift the lid.
 - Remove waffles with a non-metal utensil.
 - Allow the unit to cool before handling or cleaning.

Note: Later batches may cook faster due to retained heat. Use caution when handling the appliance, wear oven mitts when touching the exterior.

CLEANING AND MAINTENANCE

1. Always unplug the appliance before cleaning and let the appliance cool completely.
2. Wipe the exterior and interior with a soft, damp cloth.
3. Use mild dish soap if needed. Avoid harsh chemicals or abrasives.
4. Remove any crumbs or food deposits.
5. Never use steel wool or corrosive cleaners as they can damage the non-stick coating.
6. Dry all parts thoroughly before storage.

WARRANTY

Get in touch with Customer Service

If you experience any issues with your Everten 2 Slice Waffle Maker, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com.au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday. Alternatively you can use the Live Chat function on our website by visiting www.kitchenwarehouse.com.au/contact-us

90 day money back guarantee

We promise you a full refund within 90 days if your Everten product does not fulfil your expectations. This guarantee applies to qualified purchases of all Everten branded products from participating stockists online and in-store from eligible delivery locations. The qualified product must be returned within 90 days from the date of purchase. We shall issue a full refund when the customer presents proof of purchase. We shall issue a store credit when proof of purchase is unavailable. The product packaging is not required to avail of the refund. The amount refunded will be the price of the products in the currency shown on the proof of purchase.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the 12 month warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

Distributed by Kitchen Warehouse.

Everten is a registered trademark of Kitchen Warehouse Pty Ltd. The printed material appearing in this document and related packaging is protected by copyright.

Kitchen Warehouse Pty Ltd

1 Pensioner Guard Road

North Fremantle, WA, 6159

www.kitchenwarehouse.com.au

1800 332 934

customerservice@kitchenwarehouse.com.au