


# everten

## 4 SLICE WAFFLE AND JAFFLE MAKER

Owner's Manual

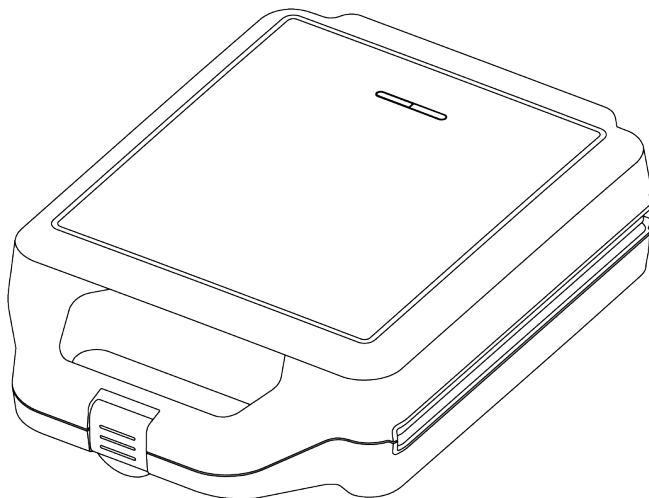

### **IMPORTANT**

Read and follow all warnings and instructions before assembly and use. Keep this manual for future reference.

## SPECIFICATIONS

- Model number: 699348
- Voltage: 220 – 240V ~ 50/60Hz
- Power rating: 1200W

## PRODUCT FEATURES

The Everten 4 Slice Waffle and Jaffle Maker is your go-to for golden, crispy waffles and perfectly toasted jaffles. It features CeramiQ™ ceramic non-stick plates, free from PFAS, PTFE, PFOA, lead and cadmium so you can enjoy comfort food made easy, safe and irresistibly tasty.

- Includes: 1 x set of waffle plates, 1 x set of jaffle plates
- Cast aluminium plates with CeramiQ™ non-stick coating, free from PFAS, PTFE, PFOA, lead and cadmium
- Non-stick plates for effortless food release and easy cleaning
- Quick and even cooking thanks to the cast aluminium plates
- Cool touch handle
- Ready to bake indicator light

## ceramiQ™ NON-STICK COATING

The waffle and jaffle plates feature a hard, durable, ceramic non-stick coating called CeramiQ™ which is more environmentally friendly than traditional non-stick. CeramiQ™ is thermo-resistant, easy to clean, and free from PFAS, PTFE, PFOA, lead and cadmium.

# SAFETY PRECAUTIONS

When using this electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions before using.
2. Ensure the voltage is compliant with the voltage range stated on the rating label.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is intended to be used in household and similar applications such as:
  - i. Staff kitchen areas in shops, offices and other working environments.
  - ii. Farmhouses.
  - iii. By clients in hotels, motels and other residential type environments.
  - iv. By bed and breakfast type environments.
7. To protect against risk of electric shock, do not place cord, plug or the base of the appliance in water or any other liquid.
8. Do not use attachments or accessories which are not recommended by the manufacturer.
9. The product is only suitable for the purpose indicated in this manual. Do not use this product or any part for other purposes. If it is operated incorrectly, it may cause injury.
10. Always use the appliance on a firm and stable surface and keep it 30cm from other objects and the wall to ensure heat is easily released.
11. Do not place the appliance on or near a hot surface, including a gas or electric stove, or in a heated oven.
12. Do not move the appliance when in use.
13. Not suitable for use with external timers or remote controls.
14. For indoor household use only.
15. Do not place anything on top of the appliance while in operation or when storing.
16. Appliance surfaces can get hot during and after operation. To prevent burns or personal injury always use heat resistant oven mitts or gloves when opening the lid of the appliance or removing the cooking plates.

17. Allow the appliance to cool before cleaning, disassembling, putting in or taking out parts, and storing.
18. Do not operate without the waffle or jaffle plates.
19. Do not operate the appliance with the lid open.

## GET TO KNOW THE EVERTEN 4 SLICE WAFFLE AND JAFFLE MAKER

This appliance features removable cooking plates, allowing it to be used as a waffle maker or a jaffle maker.

Choose your desired plate for the task and install as shown below:

### Plate installation and removal

1. Open the appliance lid.
2. To remove a plate, pull the tab outward and lift the plate upward.
3. To install a plate: Align the plate so the slots hook onto the hinge. Press down until you hear a click.

## OPERATING INSTRUCTIONS

### Before first use

1. Remove all packaging materials, promotional labels and tapes from the appliance.
2. Remove all accessories and read this manual carefully. Pay close attention to the operation instructions, warnings and safety guidelines to avoid injury or property damage.
3. Detach and clean the waffle and jaffle plates with warm water and mild detergent. Dry thoroughly. Never wash the main unit in the dishwasher or immerse in water.
4. Insert the desired plates (waffle or jaffle) securely into place.
5. Lightly coat plates with oil or butter.
6. Plug the unit in and preheat. Wait until the red light turns off.
7. Note: A slight smog or odour during first use is normal.

## HOW TO MAKE JAFFLES

1. Plug the appliance in. The red light will illuminate.
2. When preheated, the white light will turn on.
3. Prepare your sandwich: Use two slices of bread with desired fillings.
4. For a golden crisp, lightly butter the outsides.
5. Place the sandwich with the buttered sides facing outwards onto the lower plate.
6. Lower the lid and lock the clasp.
7. Cook for two to three minutes or until golden brown.
8. Open the unit using the handle; remove the sandwich with a non-metal utensil.
9. Unplug the appliance after use.

## HOW TO MAKE WAFFLES

1. Plug the appliance in. The red light will illuminate.
2. When preheated, the white light will turn on.
3. Prepare your waffle batter.
4. Pour the batter onto the lower plate, ensuring not to overfill the plate.
5. Lower the lid and lock the clasp.
6. Cook for two to three minutes or until golden brown.
7. Open the unit using the handle; remove the waffles using a silicone or wooden utensil, not metal.
8. Unplug the appliance after use.

## CLEANING AND MAINTENANCE

1. Unplug and allow the appliance to cool..
2. Clean plates with a damp cloth or sponge.
3. Never immerse the appliance in water.
4. Avoid abrasive cleaners or tools to preserve non-stick surfaces.

# WARRANTY

## Get in touch with Customer Service

If you experience any issues with your Everten 4 Slice Waffle and Jaffle Maker, get in touch with our Customer Service team by email at [customerservice@kitchenwarehouse.com.au](mailto:customerservice@kitchenwarehouse.com.au) or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday. Alternatively you can use the Live Chat function on our website by visiting [www.kitchenwarehouse.com.au/contact-us](http://www.kitchenwarehouse.com.au/contact-us)

## 90 day money back guarantee

We promise you a full refund within 90 days if your Everten product does not fulfil your expectations. This guarantee applies to qualified purchases of all Everten branded products from participating stockists online and in-store from eligible delivery locations. The qualified product must be returned within 90 days from the date of purchase. We shall issue a full refund when the customer presents proof of purchase. We shall issue a store credit when proof of purchase is unavailable. The product packaging is not required to avail of the refund. The amount refunded will be the price of the products in the currency shown on the proof of purchase.

## Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

## Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the 12 month warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

## **Exclusions**

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

## **How to claim**

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

## **Limitations**

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

Distributed by Kitchen Warehouse.

Everten is a registered trademark of Kitchen Warehouse Pty Ltd. The printed material appearing in this document and related packaging is protected by copyright.

## **Kitchen Warehouse Pty Ltd**

1 Pensioner Guard Road

North Fremantle, WA, 6159

[www.kitchenwarehouse.com.au](http://www.kitchenwarehouse.com.au)

1800 332 934

[customerservice@kitchenwarehouse.com.au](mailto:customerservice@kitchenwarehouse.com.au)