


everten

SLOW COOKER 5.5L

Owner's Manual

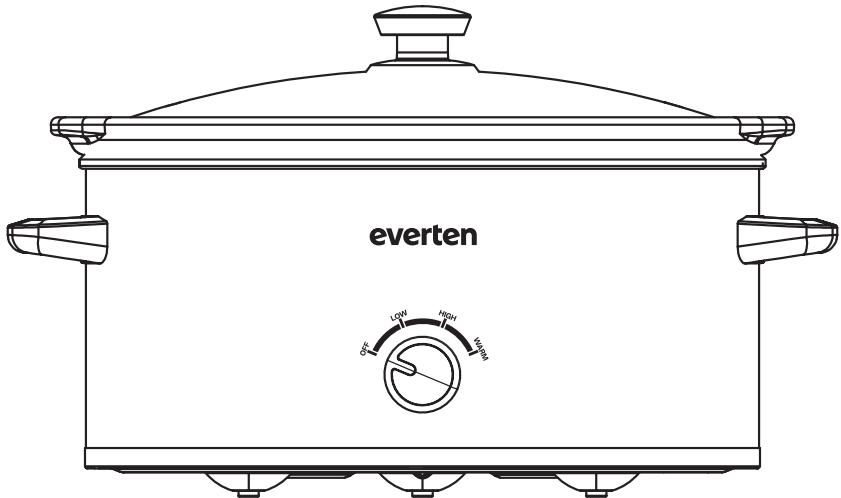

IMPORTANT

Read and follow all warnings and instructions before assembly and use. Keep this manual for future reference.

SPECIFICATIONS

- Model: 710280
- Voltage: 220–240V ~ 50/60Hz
- Power consumption: 230W

PRODUCT FEATURES

Bring warmth, comfort and rich flavour to your kitchen with this traditional slow cooker. With three heat settings and a large family sized capacity of 5.5 litres, it's the secret to hearty, home cooked meals made effortlessly.

- Traditional style slow cooker with an oval glazed ceramic crock insert
- Choose from three heat settings (low, high and keep warm)
- Equipped with a wrap-around heating element to ensure even cooking
- Transparent glass lid lets you monitor cooking progress while keeping ingredients moist
- Includes 1 x glass lid, 1 x ceramic crock insert


SAFETY PRECAUTIONS

Please read these instructions carefully before using the appliance:

1. Read all instructions before using.
2. Ensure the voltage is compliant with the voltage range stated on the rating label.
3. If the electrical cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments.
 - Farmhouses.
 - By clients in hotels, motels and other residential type environments.
 - By bed and breakfast type environments.

7. Always disconnect the appliance from the power supply if unattended and before assembling, disassembling or cleaning.
8. Do not use attachments or accessories which are not recommended by the manufacturer.
9. The product is only suitable for the purpose indicated in this manual. Do not use this product or any part for other purposes. If it is operated incorrectly, it may cause injury.
10. Always use the appliance on a firm and stable surface and keep it 30cm from other objects and the wall to ensure heat is easily released.
11. Keep the appliance and cord away from hot surfaces and sharp edges.
12. Never leave the appliance unattended while plugged in.
13. Turn the appliance off before unplugging.
14. Do not move the appliance while it is operating.
15. Avoid touching hot surfaces, including the heating element and lid. Let the appliance cool fully before cleaning or storing.
16. Always use heat resistant oven gloves when handling hot components.
17. Always place the appliance on a stable, heat resistant surface at a comfortable working height.
18. Do not use the appliance with an extension cord.
19. Do not use external timers or remote control systems not supplied with the appliance.
20. The lid and outer surfaces may become hot during use. The heating element retains heat after switching off.

GET TO KNOW THE EVERTEN SLOW COOKER

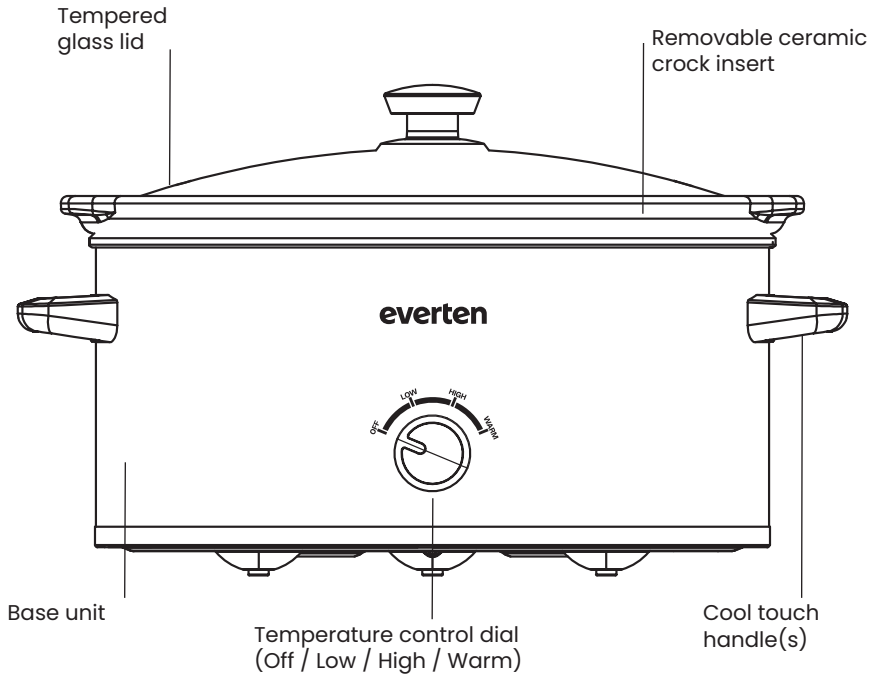

OPERATING INSTRUCTIONS

Before first use

- Clean all removable parts as outlined in the care and maintenance section below.
- Allow for adequate ventilation during initial use as a slight smoke or odour may be emitted, this is normal and will subside.

Using the slow cooker

1. Place the removable ceramic crock insert into the base unit.
2. Add your prepared ingredients to the pot, then fit the glass lid.
3. Plug in the appliance and switch it on.
4. Turn the temperature control dial to your desired setting (Low / High / Warm).
5. Do not stir ingredients while cooking or remove the lid unnecessarily as this causes heat loss.

6. When cooking is complete, turn the dial counterclockwise to the Off position. Switch off and unplug the appliance.
7. Wipe the inner crock insert's outer edge with a dry cloth before placing it back into the base unit to avoid moisture contact with electrical components.

Note: The Warm setting is for keeping food warm only, not for cooking. Do not place food directly into the base unit, always use the ceramic crock insert.

Hints and tips

1. Position the glass lid centrally on the crock insert for best performance.
2. Avoid removing the lid unnecessarily to prevent heat loss.
3. Do not cook without the lid, this affects temperature regulation and hygiene.
4. Cut root vegetables into uniform sizes for even cooking.
5. The Low setting is ideal for stews and slow cooked dishes (eight to 10 hours).
6. The High setting suits pulses, beans, and large cuts of meat (approximately four to six hours).
7. Sauté vegetables before adding them for enhanced flavour.
8. Layer hard vegetables at the bottom for even heat distribution.
9. Pre-soak dried beans/pulses to remove toxins before cooking.

CLEANING AND MAINTENANCE

1. Always unplug the appliance and allow it to cool fully before cleaning.
2. Wipe the slow cooker's exterior with a soft, damp cloth and dry thoroughly.
3. Clean the tempered glass lid and removable ceramic crock insert in warm, soapy water. Rinse and dry thoroughly.
4. Do not immerse the base unit in water or any liquid.
5. Never use harsh or abrasive cleaners or scourers, these may damage the ceramic pot or accessories.
6. Ensure the appliance is cool, dry, and clean before storing. Store in a dry location.
7. Do not wrap the cord tightly around the base – loosely coil it to prevent damage.

WARRANTY

Get in touch with Customer Service

If you experience any issues with your Everten Slow Cooker 5.5L, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com.au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday. Alternatively you can use the Live Chat function on our website by visiting www.kitchenwarehouse.com.au/contact-us

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discolouration or damage caused by misuse.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the 12 month warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

90 day money back guarantee

We promise you a full refund within 90 days if your Everten product does not fulfil your expectations. This guarantee applies to qualified purchases of all Everten branded products from participating stockists online and in-store from eligible delivery locations. The qualified product must be returned within 90 days from the date of purchase. We shall issue a full refund when the customer presents proof of purchase. We shall issue a store credit when proof of purchase is unavailable. The product packaging is not required to avail of the refund. The amount refunded will be the price of the products in the currency shown on the proof of purchase.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

everten

Distributed by Kitchen Warehouse.

Everten is a registered trademark of Kitchen Warehouse Pty Ltd. The printed material appearing in this document and related packaging is protected by copyright.

Kitchen Warehouse Pty Ltd
1 Pensioner Guard Road
North Fremantle, WA, 6159
www.kitchenwarehouse.com.au
1800 332 934
customerservice@kitchenwarehouse.com.au