


FELLOW®

AIDEN™

Precision Coffee Maker

SAFETY INFORMATION

 Diagram A: Product Diagram

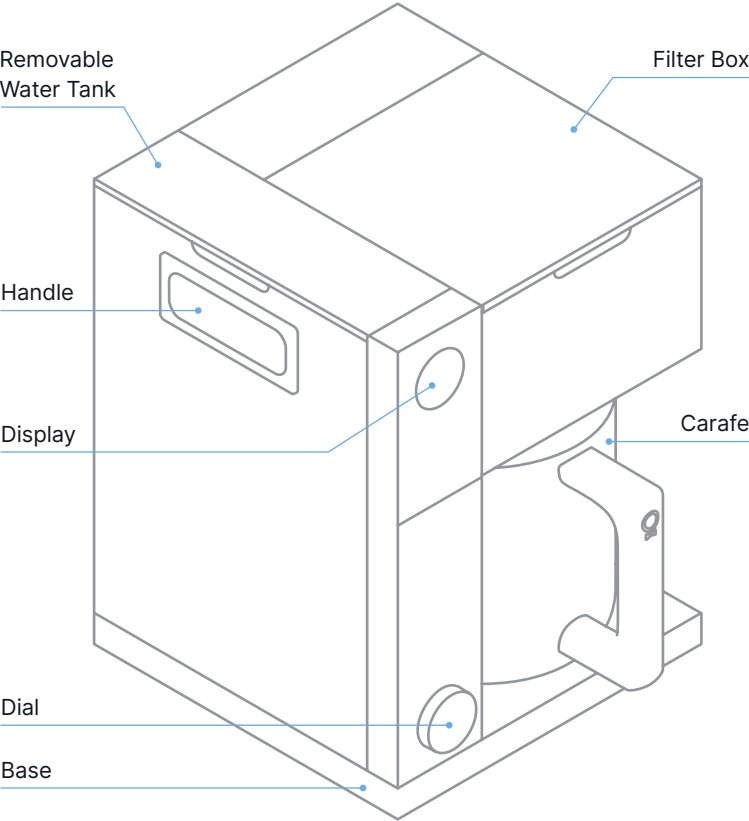

AIDEN

Fellow Industries Inc.
Fellowproducts.com
Email: hello@fellowproducts.com
San Francisco, CA 94110

Product Name: Aiden Precision Coffee Maker
Patents and Patents Pending: fellowproducts.com/pages/patents
2-Year Limited Warranty | Designed in San Francisco, Made in China

MODEL	SPECIFICATIONS
BR01AAUK	220-240V~ 50Hz 1700W Weight: 9.4 lbs / 4.26 kg Dimensions (LxWxH): 237 mm x 229 mm x 305 mm Capacity: 50.72 oz (1.5 L)



Do not discard as unsorted waste. To be sent to separate collection facilities for recovery and recycling.

THIS PRODUCT IS FOR HOUSEHOLD USE ONLY
More info at Fellowproducts.com/aiden-guide

Read and Follow All Instructions.
Keep This Safety and Maintenance Manual for Future Reference.

WARNING!

Shock Hazard: This appliance has a grounded, three-pronged plug. To ensure protection against risk of electric shock or fire, connect to properly grounded outlets only. The plug fits only one way into an outlet. Do not defeat the safety purpose of the plug by modifying the plug in any way or using an adapter. Do not plug this appliance into an outlet with a voltage other than specified on the bottom of this appliance.

Do not use an adapter with this appliance.

A short power supply cord is provided to reduce the risk of becoming entangled in or tripping over a longer cord. To avoid an electrical circuit overload, do not use any high wattage appliance on the same circuit with this appliance.

IMPORTANT SAFEGUARDS

Before use, please read these safety warnings carefully and use the product (Diagram A) properly. These safety warnings are indicated for the safe and proper use of this product to prevent danger to the user or others and damage to property.

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Do not place on or near a hot gas burner or electric burner, in a heated oven, or in a microwave.
- Do not touch the hot surfaces of the product. Use the provided handles at all times.

- Scalding may occur if the lid is opened during brewing cycles.
- Proper installation of filter basket and shower head is required to reduce the risk of splashing hot water.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plug, or any other part of the device in water or other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety and understand the hazards involved.
- Close supervision is necessary when any appliance is used by or near children. Do not use it within a child's reach. Children should be supervised to ensure that they do not play with the appliance.
- Unplug from outlet when not in use for extended periods of time and before cleaning.
- This product contains neodymium magnets. Always keep a safe distance (at least 3.9 in / 10 cm) between magnets and all objects that can be damaged by magnetism.
- Do not use the carafe, which contains a magnet, on top of an electronic scale. It may interfere with the accuracy of or even damage an electronic scale.
- Allow to cool before putting on or taking off parts and before cleaning the appliance.
- To disconnect from power source, make sure the appliance is not in use, and then remove plug from outlet. Do not pull on the cord itself as it may damage the cord and eventually cause electric shock.
- Do not operate Aiden Precision Coffee Maker with a damaged cord or plug, if the appliance malfunctions, or if the product has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair, or adjustment.


IMPORTANT SAFEGUARDS CONTINUED

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- Ensure that your main supply voltage is the same as that marked on the underside of your appliance.
- To avoid an electrical overload, do not operate another high-wattage appliance on the same circuit.
- The use of accessory attachments not recommended by Fellow may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- After unpacking the appliance, dispose of all plastic bags to ensure children and others cannot reach them.
- Do not let cord hang over the edge of the table or counter or touch hot surfaces. Do not use an extension cord.
- The appliance must be operated on a flat surface away from the edge of the counter to prevent accidental tipping.
- Never move the appliance while the unit is in use.
- To avoid burns and risk of personal injury, use extreme caution when carrying the carafe containing hot water or coffee.
- If setting down the carafe on a table surface, use a protective pad under the carafe after it has been filled to prevent damage to surfaces.
- To reduce the risk of fire or electric shock, do not remove bottom cover from base or disassemble the appliance in any way. There are no user-serviceable parts inside. Repair should be done by authorized service personnel only. Opening the appliance will result in a void of the warranty.
- Do not operate in the presence of explosive and/or flammable fumes.

WARNING: Do not fill above the Maximum Fill Point as displayed in the diagram below.

If the device is overfilled, water may leak, increasing the risk for issues to occur. See diagram below for reference.

Diagram B: Fill Points

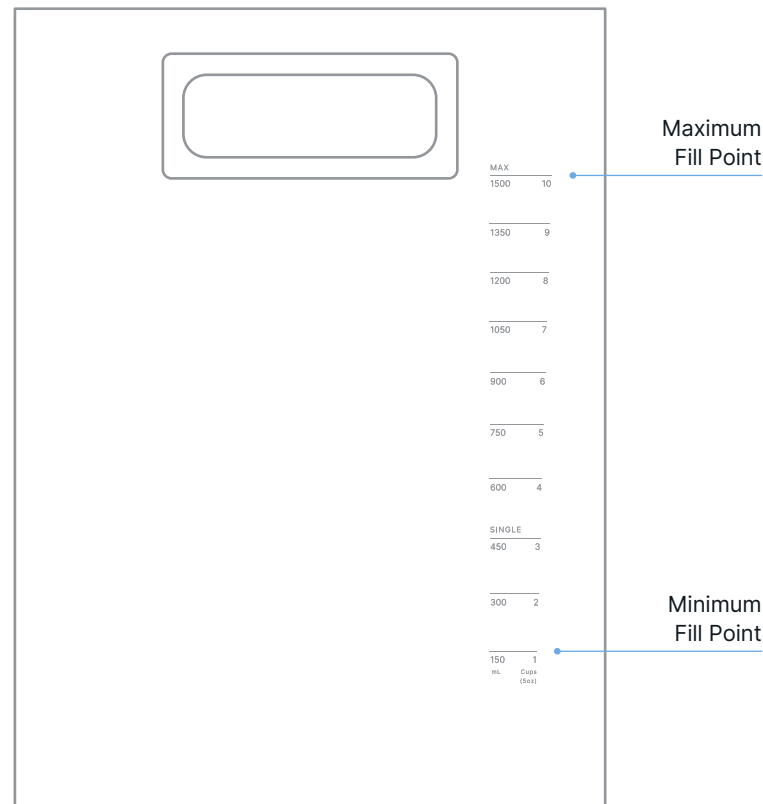

- The heating element surface is subject to residual heat after use.
- Cleaning and user maintenance shall not be made by children without supervision.
- Do not use the appliance for other than intended use. This appliance is intended for household use only. Use for anything other than intended use will void the warranty.

SAVE THESE INSTRUCTIONS

CLEANING AND MAINTENANCE

- Always unplug the power cord from the power outlet before cleaning.
- Allow the coffee maker to cool before cleaning.
- Clean the outside of the coffee maker using only a soft, damp cloth. Paper towels or abrasive cloths and household cleaners may scratch or damage the finish.
- Do not run water over the coffee maker or submerge it in water to clean. Clean individual components as outlined below.
- The single serve and batch brew filter baskets are the only parts of Aiden Precision Coffee Maker that are dishwasher safe. Do not put any other parts of Aiden Precision Coffee Maker in the dishwasher.

CLEANING AFTER BREWING

- Open the filter box lid and remove the filter basket by pulling up on the handle and lifting the basket out of the filter nest.
- Discard any ground coffee and the paper filter in a compost or waste receptacle.
- Rinse the filter basket under running water to remove any remaining grinds. A soft bristled brush and soapy water can be used if desired.

- For a deeper clean, the filter baskets may be placed in the top rack of a dishwasher and run through a normal wash cycle.
- Wipe any remaining grinds out of the filter nest with a soft, damp cloth and replace the desired filter basket back in the nest.

CLEANING THE CARAFE

- Empty the carafe after each use. Leaving coffee in the carafe overnight or for extended periods can cause staining.
- Rinse the carafe and carafe lid using warm running water. A soft bristled brush and soapy water can be used if desired.
- Do not use harsh cleaners or abrasive cloths which can scratch or damage the surfaces.
- Dry the carafe thoroughly after cleaning.


CLEANING THE WATER TANK

- Remove the water tank from the coffee maker and empty it.
- Hand wash with warm, soapy water. Use a soft bristled brush to reach the bottom of the water tank.
- Dry the outside of the water tank and place back in the coffee maker.

CLEANING THE SHOWER HEAD

- Clean the shower head area periodically by wiping down with a soft, damp cloth.
- For a deeper clean, remove the shower head by unlocking it from the filter box lid. Rotate the shower head clockwise until the arrow on the shower head aligns with the open circle icon (see Diagram C). The shower head can now be removed for cleaning.
- Clean the underside of the shower head as well as the socket it fits into with a soft, damp cloth.
- Reinstall the shower head into its socket with the same alignment shown in the second step. Finally, twist the shower head counterclockwise until the arrow is aligned with the closed circle icon.


Diagram C: Rotate Shower Head Clockwise to Remove

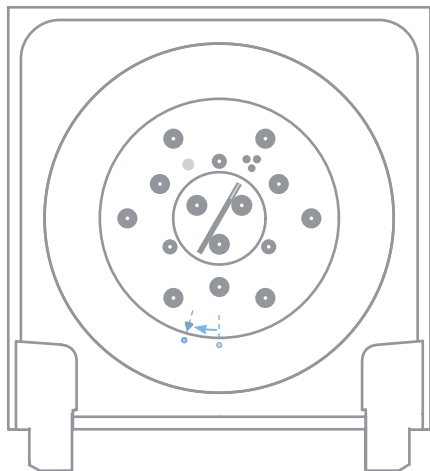

DESCALING

- Hard water may cause mineral build-up on internal components, which will affect the flavor of the coffee as well as the brewing flow and temperature. Fellow recommends descaling regularly, roughly once every three months.
- The coffee maker also tracks the volume of water used over its lifetime and will indicate to the user when descaling is required. When the “descale” notification is visible on the display as shown in Diagram D, the descaling process should be run as soon as possible as outlined below.
- For descaling, use a high quality biodegradable and phosphate-free coffee machine liquid descaler. Fellow does not recommend using vinegar, as it is difficult to rinse from the machine thoroughly and may impact the flavor of the coffee.

Diagram D: Descale Notification

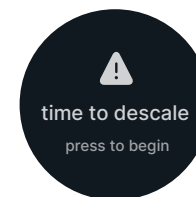

-
- Ensure the coffee maker water tank is empty. Add liquid descaler to the tank in the ratio recommended by the manufacturer (typically around 1:10). Fill the rest of the tank with water up to the MAX fill line (1.5 liter).
 - Ensure the batch brew filter basket and carafe are in position in the coffee maker and are both empty, and the shower head is in batch brew mode.
 - Select the Descale mode from the display menu (located in Settings > Maintenance > Descale) and follow the instructions. The entire process takes about 30 minutes. While each cycle is in progress, the time remaining will be visible on the display.
 - After the descale cycle has ended, empty the carafe and rinse thoroughly.
 - Fellow recommends running 3 regular brew cycles with no coffee present after the descale process to remove any residual solution from the coffee maker.



Find more information at:
Fellowproducts.com/aiden-guide

789-00186 D

UK VERSION – REV C HAS NO ADDITIONAL CERTS – INTERIM VERSION
BEFORE AU, SINGAPORE & MALAYSIA CERTS ARE FINALIZED.

FELLOW®		SENIOR PRINT & PACKAGING DESIGNER Nancy Spellman 560 Alabama St. nancy@fellowproducts.com San Francisco, CA 94110		08.28.24	
CYAN MAGENTA YELLOW BLACK PANTONE BLACK 6 C PANTONE 284 C AO MATTE VARNISH		FILE NAME: 789-00186_D.indd DESCRIPTION: Safety Guide - Brewer UK			
NOTES: 2-color PMS, 12 pages Saddle Stitch		TRIM: 4.5" x 6" MODEL: BR01AAUK		SUBSTRATE: Wood free 70gsm	
		REV: D		- If electronic art supplied does not match this print, contact Fellow. - This laser proof shows representative color only. Refer to the current edition of the Pantone® Formula Guide for color standards. - Fonts provided are for output of this artwork only.	