

Model:BBQ-ELC-STAND


USER MANUAL

BEFORE USE

Please read these instructions carefully. They will give you important advice for use and maintenance of the appliance. Retain this manual for future reference.


The appliance must only be used for its intended purpose according to the instructions in this manual. Observe all legal regulations when using this appliance. Keep and/or dispose of all packaging properly.

COMPONENTS

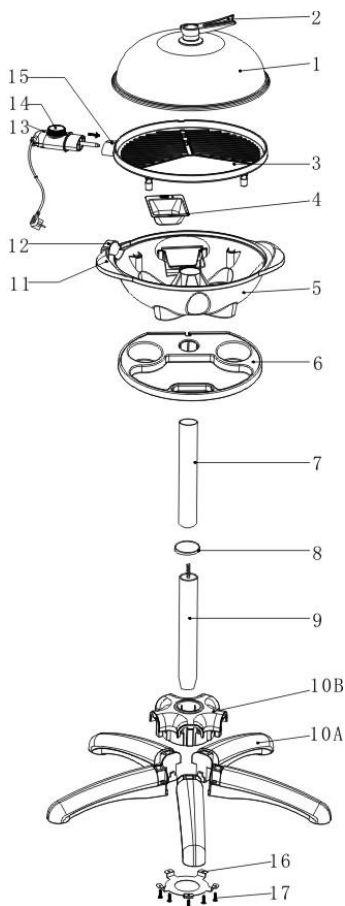


- 1 Metal grill hood
- 2 Hood handle
- 3 Grill Plate
- 4 Grease collection bowl
- 5 Appliance base
- 6 Condiments tray
- 7 Upper stand tube
- 8 Decoration
- 9 Lower stand tube
- 10A Stand foot
- 10B Stand base
- 11 Base handle
- 12 Socket opening
- 13 Detachable temperature regulator with cable
- 14 Temperature indicator lamp
- 15 Appliance socket
- 16 Washer
- 17 Screws


ASSEMBLY INSTRUCTIONS

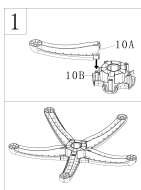


Insert the stand feet (10A) into the stand base (10B) securely. There will be a click sound heard when each stand foot is fixed completely in place. This is the assembled stand base (10).

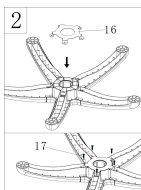


Place the washer (16) onto the assembled stand base and fasten the washer with screws(17) to the stand feet and base securely.

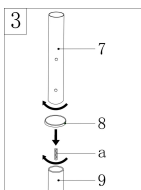


Install half of the threaded rod (a) into the lower tube (9). Place the decoration (8) on the lower tube (9) and assemble both tubes together. Ensure that they are securely fixed

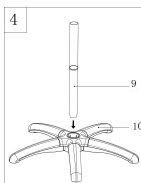


Connect the assembled stand base (10) to the lower tube (9) to form the complete grill stand. The grill can be used with or without this stand.

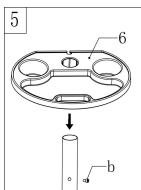

Insert the screw (b) into the upper tube (7) and then place the condiments tray on the upper tube. Ensure the tray is fixed well.

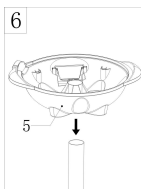


Place the bowl-shaped base of the appliance (5) onto the grill stand. Make sure that the grill stand is placed on a dry, flat and stable surface.

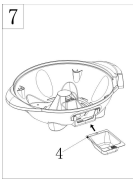


Place the grease collection bowl (4) into the bracket supplied for it at the base of the appliance.


Make sure that the bowl is securely fixed with the screw. (The bowl can be filled with some water for easy cleaning afterwards)

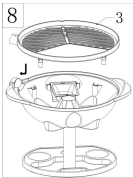


Place the grill plate (3) onto the base of the appliance (5). Ensure that the appliance socket (15) is inserted into the opening (12) intended for it. Then set the grill plate horizontally on the appliance base.

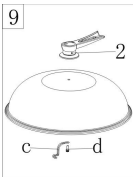

Attach the handle (2) to the metal hood with the screw (d) and hook (c). Then place the hood on the grill plate.

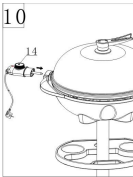

Insert the detachable temperature regulator (13) securely into the grill appliance socket.

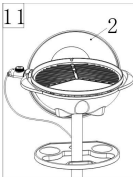

The metal hood (2) can be opened and hooked on the edge of the grill plate.

BEFORE USING THE APPLIANCE FOR THE FIRST TIME

- Remove all packaging materials and wash the grill plate (3), grease collection bowl (4) and metal grill hood (1) thoroughly.

IMPORTANT: Dry all the different parts thoroughly. This applies especially to the appliance socket (15). Never immerse the detachable temperature regulator (13) in water

- Heat the grill to its maximum settings for about 3 to 5 minutes with the metal grill hood closed and without any food on it. Residues left from the manufacturing process may cause some smell and smoke when the appliance is used for the first time.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

WARNING:

- Charcoal or similar combustible fuels must not be used with this appliance;
- the appliance should be supplied through a residual current device (RCD) having a rated residual operating current not exceeding 30 mA;
- the appliance is to be connected to a socket-outlet having an earthing contact (for class I appliances);
- the supply cord should be regularly examined for signs of damage and the appliance is not to be used if the cord is damaged.
- The instructions for appliances intended to be used with water shall state the maximum quantity of water to be poured into the appliance.

OPERATING THE APPLIANCE

- Connect the appliance to the mains electricity supply.
- Set the temperature regulator (13) to the required temperature level. It usually takes about 3 minutes to heat up.
- The temperature indicator lamp (14) will turn off as soon as the required temperature has been reached.
- Place the hood to be grilled on the grill plate (3).

COOKING TIMES

The following are recommended cooking times. Different times will be required for different weights and sizes of foods to be grilled. It will also depend on whether the grilling is done with or without the metal grill hood.

Food to be grilled	Temperature grade setting	Cooking time
Steak/beef	MAX	15-20 mins
Lamb	MAX	12-18 mins
Chicken drumsticks	MAX	25-30 mins
Chops	MAX	20-25 mins
Chicken wings	MAX	15-20 mins
Pork fillet	4-MAX	9-10 mins
Whole fish	MAX	12-15 mins
Kebabs	3-4	10-12 mins
Various sausages	3-4	12-15 mins

COOKING TEMPERATURES

The grill will shut off automatically when it reaches the OFF temperature and restart automatically when it reaches the ON temperature. The OFF and ON temperatures vary with different grades.

Grade	OFF temperature	ON temperature
1	About 170 °C	About 100°C
2	About 195°C	About 115°C
3	About 206°C	About 155°C
4	About 224 °C	About 175°C
MAX	About 235°C	About 185°C

TIPS FOR GRILLING

- The meat will be more tender if it is marinated overnight before cooking. The marinade is always made of oil (to moisten), vinegar (to tenderise) and a mixture of seasonings.
- Always use a pair of tongs or some form of scoop to turn the grilled food. Using a fork to turn the food will dry out and damage the non-stick coating.
- Only turn the meat and fish once during grilling. It is not necessary to turn it more than once. Too much turning will dry out the food.
- Never cook meat for too long. Even pork is better if it is served when it is still somewhat pink and juicy.
- If cooked food sticks to the grill plate, rub the plate with a piece of kitchen paper soaked in oil from time to time.

CLEANING AND MAINTENANCE

- Disconnect the appliance from the mains electricity supply.
- Allow the grill to cool down completely.
- Remove the detachable temperature regulator (13) from the appliance socket.
- Clean the grill plate (3) and grease collection bowl (4) with warm water and a damp cloth. Do not use steel wool pads, brushes or abrasives solutions to avoid any damage to the non-stick coating of the grill.
- Wipe the base of the appliance (5) with a damp cloth. Fat splashes can be removed with a mild cleaning agent.
- The grill plate has a non-stick coating. Do not scratch this coating during grilling or when cleaning it.
- Protect the appliance from dust and dirt if it is not be used for a long time by wrapping it with plastic. Store in a dry place.

DISPOSAL

Disable unserviceable appliances immediately. Remove the mains plug and cut up the mains connection cable. If possible, bring the appliance to an authorised waste collection centre. Most local authorities provide removal services for bulky refuse at least once a year.

SAFETY REGULATIONS

- Plug the appliance only into an outlet that is stated on the rating plate and only plug into a 3-pin earth socket.
- The appliance is not a toy. Children are not aware of the hazards of electrical appliances. Therefore close supervision is necessary when the appliance is used by children. Do not allow the power cable to hang down within easy reach of children. Keep children away from packing materials such as plastic bags.
- The installation of a faulty current protective device offers additional safety by ensuring that 30mA will not be exceeded in home installation. Seek advice from your installation electrician regarding this. Danger also exists when the appliance has already been switched off. That is why the plug should always be removed from