

说明书 130x187mm-2025. 7. 12-YHB




HELLER

MODEL: HCH2000W

Please read this manual carefully before use, and keep it for any future reference

TECHNICAL DATA			
Model/Code	HCH2000W	Power supply	220V-240V~
Power	2000W	Protection class	I
		Dimensions	325x203x133mm

ASSEMBLY OF THE HEATER
 Before using the heater, the feet (supplied separately in the carton) must be fitted to the unit. These are to be attached to the base of the heater using the 4 self-tapping screws provided, taking care to ensure that they are located correctly in the bottom ends of the heater side moldings.



SAFETY PRECAUTIONS

CAUTION: some parts of this product can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.

WARNING: In order to avoid overheating, do not cover the heater.

- Children of less than 3 years should be kept away unless continuously supervised.
- Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Make sure the voltage is the same as that indicated on the rating plate of the appliance.
- Not suitable for use in bathrooms.
- The heater must not be located immediately below a socket outlet.
- This appliance must be properly grounded.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool, or other humid places.
- Do not use outdoors, the product is designed only for indoor household use.
- Do not operate this appliance with a damaged plug or cord, after a malfunction

- or after being dropped or damaged in any way.
- Keep furniture, curtains and other flammable material at least 1 meter away from the appliance. Never close to curtains and other combustible material, otherwise may cause risk.
- Do not operate this appliance if the cable or plug becomes damaged.
- Keep the appliance and cable away from sources of heat, sharp objects or anything that may cause damage.
- If the cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Ensure the appliance is switched off before connecting to the mains power supply.
- Switch off the power supply and disconnect from mains supply when not in use, before cleaning or other maintenance.
- To disconnect the appliance, switch it off, and then remove the plug from outlet. Do not pull the cord to disconnect the plug.
- Do not operate in areas where gasoline, paint or other flammable liquids are used or stored.
- To prevent a possible fire, do not block air intakes or exhaust in any manner.
- Don't touch the hot surfaces.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening, as this may cause an electric shock, fire or damage to the appliance.
- Always ensure that hands are dry before operating or adjusting any switch on the product or touching the plug and socket-outlet.
- Do not leave this appliance unattended when it is in use.
- The most common cause of overheating is deposits of dust or fluff in the appliance. Ensure these deposits are removed regularly by disconnect the appliance and vacuum cleaning air vents and grilles.
- Do not place the heater on carpet, don't place the cable under carpets. Arrange cord away from traffic areas so that it will not be tripped over.
- Do not use this heater in the immediate surroundings of a bath, a shower or a swimming pool.
- Do not store away until the heater cools down, store the heater in cool dry location when not in use.
- **CAUTION:** Do not use this heater with a programmer, timer or any other device that switches the heater on automatically, since a fire risk exists if the heater is covered or positioned incorrectly.

INSTALLATION

ASSEMBLY

1. Before using the heater, the feet (supplied separately in the carton) must be fitted to the unit.
2. These are to be attached to the base of the heater using the 4 self-tapping screws provided taking care to ensure that they are located correctly in the bottom ends of the heater side moldings.

OPERATION

Note: It is normal when the heaters are turned on for the first time or when they are turned on after having been used for a long period of time the heaters may emit some smell and fumes. This will disappear when the heater has been on a short while.

1. Choose a suitable location for the heater, taking into account the safety instructions above.
2. Insert the plug of the heater into a suitable socket outlet.
3. Turn the thermostat knob fully in a clockwise direction to the maximum setting.
4. Turn on the heater by the power switches on the side of the heater, once these will illuminate. For the maximum heat setting both switches should be on.
5. When the room temperature has risen to a comfortable level, slowly turn thermostat counter-clockwise until you hear a click. The thermostat will now attempt to maintain the room at this temperature by automatically cycling on and off.

SAFETY FEATURES

Your heater is fitted with a safety device to switch off the heater in the event of overheating. If the safety device operated, please turn the heater off, unplug the appliance and let it completely cool. Inspect for blockage of air intake or outlet, attempting to restart the heater then after. If the heater fails to operate or the safety device switches the heater off again, return heater to your nearest service center for examination or repair.

CLEANING & MAINTENANCE

WARNING: ALWAYS UNPLUG THE CORD BEFORE MOVING OR SERVICING

CLEANING:

IMPORTANT! DO NOT IMMERSE HEATER IN WATER! DO NOT TRY TO DISASSEMBLE THE HEATER. DO NOT REMOVE GRILL.

CAUTION: Do not use gasoline, benzene, thinner, harsh cleaners, etc. as they will damage the heater. NEVER use alcohol or solvents.

1. Before cleaning, turn off the heater, unplug the power cord and allow the heater to cool.
2. Do not immerse power cord, plug or heater in water or other liquid, or pour water or other liquids over the heater.
3. Use a vacuum cleaner to remove dust and lint at the metal grill of the heater. Wipe the heater with a dry cloth to remove dust and a damp cloth (not wet) to clean off stains.

STORAGE: Store the heater with these instructions in the original carton in a cool, dry place.

WARNING: To avoid danger of electric shock, unplug from outlet when not in use and before cleaning. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

WARNING: The Main Power Switch and the On/Off switch should not be used as the sole means of disconnecting power. Always unplug the power cord before servicing or moving the unit.

CUSTOMER SERVICE

Australian Customer Service
 GDF Customer Services Pty Ltd
 P.O. Box 19
 Albion North, Victoria 3025
 Phone: 1300 366 466
 Email: help@hellerelectrical.com
www.hellerelectrical.com

This product may vary slightly in the period of distribution due to ongoing product development.