



KALAITZIDIS STYLIANOS OF KONSTANTINOS
ARKADIOU KALOCHORI, 57009 ECHEDOROU, THESSALONIKI, GREECE
T.0030 2310 735444 | kalko@kalko.gr | www.kalko.gr | www.frappes.gr

DRINK MIXER/FRAPPE MIXER KDM450/KDM450A

SAFETY AND USE INSTRUCTIONS

- Thank you for choosing a commercial drink mixer/frappe mixer KALKO. It is made of stainless steel, and assembled with components designed for high performance and durability
- It can be used for the preparation of edible/drinkable products by mixing (coffee, cocoa, milk shake, milk froth etc.)
- Is not intended for solid objects (e.g. ice) which can cause damage to the parts of the appliance or the motor. You can mix grated ice, milk powder or ice cream.
- The agitator of the appliance is not designed to grind, crush or cut edible and non-edible material, but only to mix edible or drinkable liquids or soft foods (eg ice cream)
- Do not place any material (supplement or other) in the malt cup or other utensil while the shaft is inside and mixing. Remove the utensil or malt, add the ingredients and place again for mixing/stirring
- Do not fill the malt cup completely to avoid overflow during the mixing.
- Place the appliance on a flat surface that can withstand its weight and the drinks that you have produced.
- Do not move the appliance while it is in operation.
- After each use, the appliance and the stainless-steel malt cup should be cleaned from any remaining material.
- Clean the appliance always unplugged from the power socket.
- Service the appliance always unplugged from the power socket
- Check the condition of the agitator and the shaft daily. Change the agitator at regular intervals or when it is worn.
- Storage of the appliance should be in safe place not affected by weather

conditions, overflowing of water etc.

- Places with high humidity or dust, direct exposure to sunlight, near heating sources should be avoided.
- Ensure that sufficient space is maintained around the appliance, to make easier the cleaning of it and the installation area, to ensure direct and easy access to the power socket for immediate disconnect if required.
- The agitator has a thread M6, and it is placed by turning it in the shaft clockwise, it is removed counter clockwise. Always unplug the appliance before removing the agitator, and before placing again.
- Do not touch the propeller or shaft of the device while is in operation
- Be careful that the agitator does not strike on the walls of the malt cup.
- Unplug from power socket before moving the appliance. Never lift from the shaft
- Must not be operated by an external control system, which can turn the device on automatically.
- Do not attempt to disassemble or modify the device. The parts of the appliance cannot be serviced by the user. Never attempt a maintenance procedure that is not described in here.
- The finished drink should not remain in the malt cup.

CAUTION !

- This appliance is intended for professional use and should not be used by children. In was of use by children 8-14 years old and persons with reduced physical, sensors or intellectual abilities or lack of experience and knowledge, they should be supervised by a person responsible for their safety or have been given clear instructions about the appliance and understand the dangers might occur
- This appliance can be used by children over the age of 14 and upwards and by persons and must not be used for other purposes.
- Children should not play with the appliances
- Cleaning and maintenance should not by carried out by children.
- Keep the appliance and the power cord away from children under 8 years old.
- Do not switch on the appliance without the malt cup in its place

- Keep the appliance unplugged when not in use.
 - The agitator, the shaft and the malt cup of the appliance are intended to come into contact with food. When cleaning these parts, you should follow the rules of hygiene
 - Do not use a pressurized water tapping device to clean the appliance
 - Do not place the appliance over an electric cooker or on surfaces that cause heat, as well as on flammable surfaces.
 - Select a mounting location near an outlet socket. The device should not be permanently connected to the mains (power supply)
 - Connect only to wall socket with earthing
 - Make sure the cable does not come into contact with surface or other heated appliances
 - Keeping vents clear of foreign matter is crucial to prevent overheating, as obstructions restrict airflow
 - Periodically check that the power cord is not worn. Do not use the appliance if the power cord or plug is worn
 - If the power cord is damaged, it must be replaced by the manufacturer or his dealers.
 - Always turn off the appliance after use and when not in use
 - Do not use the appliance with wet hands
 - Do not place the appliance in water, sinks, bathtubs etc
 - If the appliance falls into water, disconnect it from the power supply
 - Do not use sharp objects that can cause damage to the surface while cleaning.
- Clean with a soft cloth

OPERATION AND USE

Appliance has a double ON-OFF switch (0-1-2) which is mounted on the top of the appliance. The switch is waterproof, and in the OFF disconnects both neutral and live. KDM450A model is also equipped with a hidden switch on the malt cup holder.

Operate the appliance by pressing the switch in position I or II. The I is for slow and II is for fast.

For model KDM450A after pressing the switch in position I or II, you should place the malt cup in one of the two positions of the malt cup holder and secure firmly, then the shaft will start to rotate. Once the malt cup is removed from its position the shaft will stop.

In any case after use the appliance must be set to OFF, with the switch on the top of the appliance in position 0

Caution! A magnetic field is developing near the device. If you are using the a heart pacemaker and feel discomfort, move away from the device and consult your doctor.

CLEANING


- Clean the shaft and the agitator after each use. using warm water with cleanser. Rinse with cold water.
- Clean malt cup after each use, with warm water and cleanser. Rinse with cold water
- Clean the outer parts of the machine every day with a cloth. Do not use sharp objects, which can cause damage to the materials of the appliance.
- Before cleaning, unplug from the power socket, remove the malt cup and remove the agitator. Prevent penetration of water into the head and any part of the device.

INFORMATION TABLE

Model	KDM450A
Weight	5 kg
Motor	230V 50Hz 350W
RPM	10000 - 20000 rpm
Switch 1	DOUBLE ON/OFF 16A
Switch 2	MICRO 16A
Maximum cycle of operation	5 min
Malt Cup	900 ml

ICE FRAPPE WARRANTY – AUSTRALIAN CONSUMER LAW

- Ice Frappe provides a warranty against defects for a period of one (1) year from the date of purchase (“Warranty”). All Warranty claims must be made within this timeframe for the Warranty to be honoured by Ice Frappe.
 - Any defect or fault arising from the misuse or neglect of the goods by the customer, or the customer’s failure to comply with

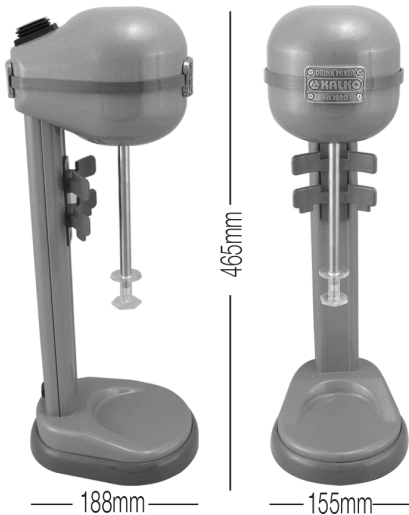

ON-OFF SWITCH



MICRO SWITCH

the manufacturer's directions or instructions for use, is not covered by the Warranty.

- The Warranty is limited to defects in the materials or workmanship of the goods and does not cover expendable parts or the replacement of parts due to fair wear and tear.

- Except as specifically set out herein, or contained in any manufacturer's warranty statement provided with the goods, any term, condition or warranty in respect of the quality, merchantability, fitness for purpose, condition, description, assembly, manufacture, design or performance of the goods or services, whether implied by statute, common law, trade usage, custom or otherwise, is expressly excluded to the maximum extent permitted by Australian law.

- Repair or replacement of the goods, or part of the goods, is the absolute limit of Ice Frappe's liability however arising under or in connection with the use of, storage or any other dealings with the goods by the customer or any third party to the maximum extent permitted by Australian law.

- If a defect appears in the goods before the end of the Warranty period and Ice Frappe finds the goods to be defective ("Valid Warranty Claim"), Ice Frappe will, in its sole discretion and at its cost, either:

1. replace or repair the goods or the defective part of the goods free of charge; or
2. cause the goods or the defective part of the goods to be repaired or replaced by a qualified repairer free of charge.

- Goods presented for repair may be replaced by refurbished goods of the same type rather than being repaired. Refurbished parts may be used to repair the goods.

- If a fault covered by Warranty occurs, the customer must contact Ice Frappe with details of the warranty claim, proof of purchase and the serial number of the goods either by:

1. calling 1800 966 046; or
2. completing the form located at <https://icefrappe.com.au/kalko-machines-warranty-policy/>.

- Provided a Valid Warranty Claim is made, the goods will be returned to Ice Frappe by the customer at the cost of Ice Frappe. The customer will be

reimbursed the reasonable cost of the return of the goods upon production of confirmation of costs incurred by them and provision of their account details to Ice Frappe.

- Ice Frappe goods come with guarantees that cannot be excluded under the Australian Consumer Law. Customers are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. Customers are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
- Where Ice Frappe determines that a Valid Warranty Claim has not been made, the customer will be liable for any third-party service fee incurred by Ice Frappe in having the claim assessed or the goods repaired. No costs of repair will be incurred without prior customer authorisation.

ADDRESS FOR AUSTRALIA

ICE FRAPPE

No1 Browning Crescent Acondale Heights 3034, Melbourne, Australia

T+6148820054

icefrappeaus@gmail.com

CODE: _____

SERIAL NUMBER/SERIENNUMMER: _____

DATE /DATUM: _____

NAME/NAME: _____

SURNAME/NACHNAME: _____

TEL: _____

E-MAIL: _____

ADDRESS/ADRESSE: _____

RETAILER CHOP

European Directive 2002/96 on WEEE

This symbol is placed in accordance with the European Directive 2002/96 on WEEE for electric and electronic waste.

By properly recycling the appliance, you will help reduce the potential negative effects of environmental and human health pollution, which can be caused by inappropriate waste management.

The symbol on the appliance shows that this product should not be treated as ordinary waste. Instead it should be relived to the appropriate point of collection and recycling of electrical and electronic equipment.

Disposal should be in accordance with local environmental regulations for the recycling of waste.

For more information on the procedure for collecting and recycling the product, please contact your local authority, recycling company or the shop where you purchased the appliance

