

OWNER'S MANUAL

K
PRO



AIRE
Fly Repellant Fan
Set of 2

IMPORTANT

Read and follow all warnings and instructions before assembly and use.
Keep this manual for future reference.

Specifications

- Model: 729796, 729797
- Battery voltage: 3.7V DC
- Power consumption: 0.45W
- Charging port: USB Type-C
- Charging input: 5.0V DC

Product features

Enjoy outdoor meals without unwanted pests. The KPRO Aire Fly Repellant Fan provides a chemical free solution for helping keep flies, bees, and wasps away from food and beverages. The fan uses soft rotating blades with holographic reflective strips that create moving light patterns, helping deter insects naturally. This portable fan is ideal for patios, picnics, camping trips, outdoor dining, and other indoor or outdoor gatherings.

Fly and bug repellant fan

Reflective fan blades rotate gently to create moving light patterns that help keep flies, bees, and wasps away from food and drinks both indoors and outdoors.

Safe and non-toxic

No chemicals, sprays, or pesticides are required. The fan uses only gentle spinning motion and light reflections to help protect food and beverages.

Quiet operation

The soft blades rotate slowly and quietly, providing a safe and virtually silent alternative to traditional insect control methods.

Compact and travel friendly

Whether you're at a picnic table, campsite, patio, or outdoor dining area, the lightweight design makes the fan easy to transport and set up.

Overhead hanging option

The integrated pop-out hanging loop allows the fan to be suspended above tables in locations such as patios, tents, gazebos, and canopies where table space is limited.

Flexible power options

The fan may be operated:

- Cordlessly using the built-in rechargeable lithium-ion battery
- While connected to a standard 5V USB Type-C power source

Safety precautions

Read all safety and operating instructions carefully before using the product and retain this manual for future reference.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or by those lacking experience and knowledge unless supervised or instructed by a person responsible for their safety.
- Children should be supervised to ensure they do not play with the product.
- This appliance is intended to be used in household and similar applications such as
 - staff kitchen areas in shops, offices and other working environments;
 - farmhouses and by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments;
 - catering and similar non-retail applications.
- Fully charge the battery before first use.
- Do not use steel wool, abrasive cleaners, or corrosive liquids to clean the product.
- Do not immerse the product in water or any other liquid.
- Clean the product using a soft damp cloth only.

Operating instructions



1. Tabletop use

1. Place the product on a flat, stable surface.
2. Ensure the fan assembly is properly attached to the main unit.
3. Press the power button to start operation.
4. The fan will continue operating until switched off or the battery is depleted.



2. Hanging use

1. Ensure the fan assembly is properly attached to the main unit.
2. Pull out the hanging loop located on the bottom of the unit.
3. Securely hang the product from a suitable fixture.
4. Press the power button to start operation.
5. The fan will continue operating until switched off or the battery is depleted.

3. Corded operation

In addition to cordless battery operation, the product may be powered directly from a standard 5V USB Type-C power source.

Connect the supplied USB cable to a compatible USB power adapter or power source and operate the fan normally.

Charging the fly repellant fan

1. During operation, if the power indicator flashes repeatedly and the fan stops running, the battery level is low.
2. Charge the unit using the supplied USB Type-C charging cable.
3. The charging indicator illuminates white while charging.
4. When charging is complete, the charging indicator turns off.

Cleaning and maintenance

Always turn the product off before cleaning.

1. Wipe the exterior surfaces with a soft, damp cloth.
2. Dry the product thoroughly before storage.
3. Do not use abrasive pads, steel wool, harsh cleaners, gasoline, acetone, or other corrosive liquids.
4. Do not immerse the product in water.
5. Recharge the battery periodically during long-term storage to maintain battery performance.

Get in touch with Customer Service

If you experience any issues with your KPRO Aire Fly Repellent Fan Set of 2, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com.au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the five year warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.



Distributed by Kitchen Warehouse.

KPRO is a registered trademark of Kitchen Warehouse Pty Ltd.

The printed material appearing in this document and related packaging is protected by copyright. Illustrations in this manual are for reference only and may differ from the actual product.

Kitchen Warehouse Pty Ltd

1 Pensioner Guard Road
North Fremantle, WA, 6159
www.kitchenwarehouse.com.au
1800 332 934

customerservice@kitchenwarehouse.com.au