

# KITCHEN PRO

---

## CRUSH RECHARGEABLE SALT AND PEPPER MILL

Owner's Manual



### **IMPORTANT**

Read and follow all warnings and instructions before assembly and use.  
Keep this manual for future reference.

**KITCHEN PRO** CRUSH RECHARGEABLE SALT AND PEPPER MILL  
692825 / 692826 / 692827

## SPECIFICATIONS

Model: KDL-569AH

Rated voltage: 3.7V 400mAh

Rated power: 2.5W

Construction: stainless steel, Tritan, ABS

## PRODUCT FEATURES

- USB-C rechargeable
- Strong ceramic grinding mechanism
- Features five adjustable grind settings
- Lasts 40 minutes off a single charge
- Compact and lightweight, it's perfect for picnics, packed lunches or small kitchens
- Made from stainless steel with a coloured exterior
- Transparent base removes for easy refilling
- Electric grinder suitable for salt and pepper
- Includes USB-C charging cable

## SAFETY PRECAUTIONS

- Do not wash the grinder or put it in the dishwasher.
- Designed only for grinding pepper, salt and other seasonings, do not use for other purposes.
- Do not force or twist the grinder or attempt to speed up the mechanism.
- Do not dismantle the product yourself.
- Keep out of reach of children.
- Store away from flammable, explosive materials, gas and high temperatures.
- This product contains a rechargeable lithium battery. When not in use, charge it once every three months to help extend battery life.

# OPERATING INSTRUCTIONS

## Charging

1. Insert the charging cable into the USB-C charging port at the top of the grinder.
2. When charging, the power indicator flashes white.
3. Once fully charged, the white light remains steady.
4. Charging time is approximately 1.5 to 2 hours.

## How to fill the mill

1. Turn the motor base clockwise to remove the transparent cup.
2. Fill the cup with peppercorns or sea salt crystals, up to 80% full. Do not overfill.

## How to use the mill


1. Press the on/off button to start the grinder.
2. Adjust the bottom base to change coarseness:
  - Turn clockwise for a finer grind.
  - Turn anticlockwise for a coarser grind.

## Troubleshooting

If the grinder doesn't work or stops mid-use, charge the grinder. (Note: Do not use the product while charging.)

If the grinder still doesn't operate, the ceramic grinder may be jammed with granules:

1. Turn the base to the coarsest setting.
2. Gently tap the product to shake loose any grains.
3. Rotate the base again to adjust the coarseness as needed.

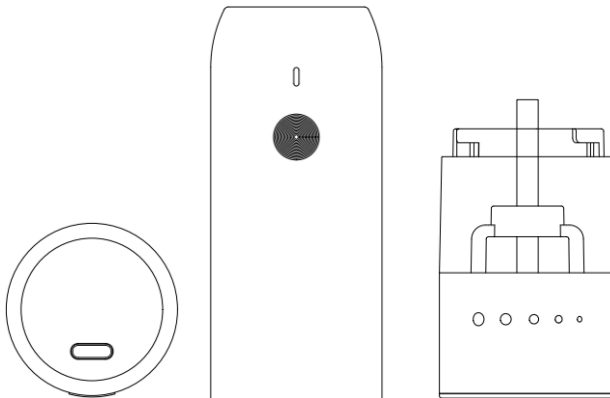

## GET IN TOUCH WITH CUSTOMER SERVICE

If you experience any issues with your Kitchen Pro Crush Rechargeable Salt and Pepper Mill, get in touch with our Customer Service team by email at [customerservice@kitchenwarehouse.com.au](mailto:customerservice@kitchenwarehouse.com.au) or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday. Alternatively you can use the Live Chat function on our website by visiting [www.kitchenwarehouse.com.au/contact-us](http://www.kitchenwarehouse.com.au/contact-us)

### **Warranty**

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

### **Guarantee**

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the 12 month warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

## **Exclusions**

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

## **How to claim**

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

## **Limitations**

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

Distributed by Kitchen Warehouse.

# **KITCHEN PRO**

Kitchen Pro is a registered trademark of Kitchen Warehouse Pty Ltd. The printed material appearing in this document and related packaging is protected by copyright.

Kitchen Warehouse Pty Ltd

1 Pensioner Guard Road

North Fremantle, WA, 6159

[www.kitchenwarehouse.com.au](http://www.kitchenwarehouse.com.au)

1800 332 934

[customerservice@kitchenwarehouse.com.au](mailto:customerservice@kitchenwarehouse.com.au)