

KITCHEN PRO

PRECISION INSTANT READ RECHARGEABLE THERMOMETER

Owner's Manual



IMPORTANT

This instruction manual contains important information necessary for the proper assembly and safe use of the appliance.




Read and follow all warnings and instructions before assembling and using the appliance.

Keep this manual for future reference.

KEY FEATURES AND BENEFITS

- Instant read thermometer with a one second reading time
- Large bright LED display
- The thermometer is waterproof when the Type-C charging port is closed
- Units: °F /°C switchable
- Measurement range: -50°C-300°C (-58°F-572°F).
- Display resolution: 0.1°C/0.2°F.
- Measurement accuracy: ±0.5°C (±0.9°F) at 0°C-100°C (32°F--212°F)
- Strong internal magnet allows the thermometer to be attached to a metal surface
- Hold temperature function to stop the display from changing the readout
- The LED will display a low battery icon when the power is low
- The unit is powered by a 3.7V rechargeable battery, along with Type-C charging cable
- Auto shut-off after three minutes of inactivity

Operation

1. Before using the thermometer, please remove the protective film from the front panel.
2. Fully charge the thermometer before using it.
3. To start the thermometer, unfold the probe and the LED will display as  and will show the temperature immediately. To turn off, just fold the probe back into its body.
4. The default display unit is Celcius. To switch it to Fahrenheit, please long-press the  button for three seconds.
5. Data-hold: Before withdrawing from food, press the  button, which will hold the temperature reading until pressing again.
6. How to recharge: When the power is low, the LED will display only one frame battery capacity and flash the one frame which needs to be recharged.

CARE AND CLEANING

- Do not leave the thermometer in the oven while cooking.
- Do not touch the hot probe with bare hands.
- Wash the metal probe in soapy water. Clean the thermometer using a damp cloth.
- Do not completely immerse the digital thermometer in water.
- Sterilise the metal probe by inserting it into boiling water for several minutes.
- Do not expose the unit to direct heat or a hot surface.
- Do not use stainless steel probes in microwave ovens.
- Do not use the stainless probe sensor above 300°C (572°F), as it may deteriorate the probe.
- Do not drop the unit or subject it to sudden shock or impact, and do not disassemble the unit.

Warning

The thermometer is only waterproof when the USB-C charging port is closed properly.

WARRANTY

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the 12 month warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to a Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the product or the refund of the purchase price is the absolute limit of our liability under this guarantee.