


KITCHEN PRO

PRECISION WATERPROOF THERMOMETER

Owner's Manual

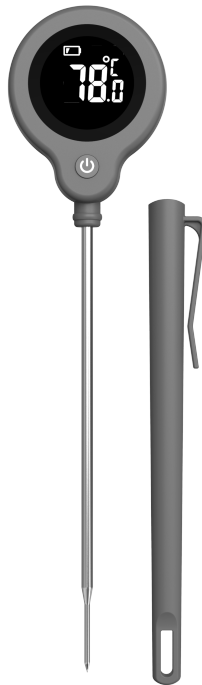

IMPORTANT

Read and follow all warnings and instructions before assembly and use.

Keep this manual for future reference.

KITCHEN PRO PRECISION WATERPROOF THERMOMETER




PRODUCT FEATURES

- Instant read, one second reading time
- Temperature range of -50°C to 300°C and accuracy of +/- 0.5C
- Strong internal magnet allows the thermometer to be attached to the oven, fridge or BBQ
- Waterproof (when the USB-C charging port is closed properly)
- USB-C rechargeable
- Lithium-ion battery lasts five hours
- Auto shut-off after three minutes

SAFETY PRECAUTIONS

- Clean the probe with a damp cloth after each use. Do not submerge the entire unit in water.
- Always close the USB-C charging port cover before exposure to liquids.
- Store the thermometer in a dry, cool place when not in use.
- Keep out of reach of children.

OPERATING INSTRUCTIONS

1. Before first use, remove the protective film from the front panel and fully charge the thermometer using the included USB-C charging cable.
2. Turning On/Off: To power on, briefly press the  power button. The LED display will instantly show the ambient temperature. To power off, briefly press the  power button again.
3. Switching temperature units: The default temperature unit is Celsius (°C). To switch to Fahrenheit (°F), press and hold the  power button for three seconds.
4. Low battery warning: When the battery is low, the LED display will show a single flashing bar icon.

CARE AND CLEANING

- Do not leave the thermometer in the oven while cooking.
- Do not touch the hot probe with bare hands.
- Wash the metal probe in soapy water.

- Clean the thermometer body using a damp cloth.
- Do not immerse the thermometer in water.
- Sterilise the metal probe by inserting it into boiling water for several minutes.
- Do not expose the unit to direct heat or place it on a hot surface.
- Do not use the stainless steel probe in microwave ovens.
- Do not use the stainless steel probe sensor above 300°C (572°F), as it may damage the probe.
- Do not drop or subject the unit to sudden impact, and do not attempt to disassemble it.
- Warning: The thermometer is only waterproof when the USB-C charging port is securely closed.

GET IN TOUCH WITH CUSTOMER SERVICE

If you experience any issues with your Kitchen Pro Precision Waterproof Thermometer, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com.au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday. Alternatively you can use the Live Chat function on our website by visiting www.kitchenwarehouse.com.au/contact-us

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the 12 month warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

Distributed by Kitchen Warehouse.

KITCHEN PRO

Kitchen Pro is a registered trademark of Kitchen Warehouse Pty Ltd. The printed material appearing in this document and related packaging is protected by copyright.

Kitchen Warehouse Pty Ltd
1 Pensioner Guard Road
North Fremantle, WA, 6159
www.kitchenwarehouse.com.au
1800 332 934
customerservice@kitchenwarehouse.com.au