

Leaf+Bean

Electric Kettle 600ml

G0000816


Instruction Manual

Thank you for choosing the Leaf & Bean Electric Kettle.

To ensure proper operation and to maintain the lifespan of your appliance, please read these instructions carefully before first use.

Product Overview

- A. Lid
- B. Handle
- C. Stainless steel body
- D. On switch/indicator light
- E. Power base

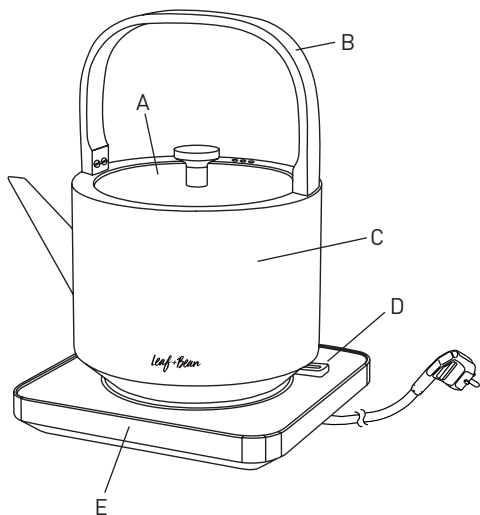

Safety Instructions

- Please read these instructions carefully before using the appliance.
- Make sure the outlet voltage is corresponding to the voltage stated on the rating label of this appliance.

- The power cord should not be hung over the edge of any table or touch a high temperature surface. Please try to prevent any damage to the power cord.
- The kettle will not move when working.
- Unplug the power cord and let the kettle cool before cleaning.
- If the power cord is damaged, it must be replaced by either the manufacturer or its maintenance department, or similar professional personnel.
- This kettle is not suitable for children, disabled people, or anyone who is not familiar with the appliance.
- This appliance cannot be used outdoors.
- If the electric kettle is too full, boiling water may overflow.
- Use this kettle only on the matching base.
- Please keep these instructions for future reference.

Packaging and Recycling

The materials used for this product's packaging can be reused, recycled and disposed of through specific waste streams.

- REUSE: Keep packaging to safely store or transport your appliance, preventing damage.
- RECYCLE: Look for recycling symbols on packaging components to identify if they are recyclable. Check with your local authority to find out what materials are accepted for recycling in your area.
- DISPOSE: Look for symbols on packaging components and dispose of materials accordingly.

Technical Information

Voltage/Frequency	220-240V~50/60Hz
Power	1000-1200W
Capacity	600ML

Before First Use

Pour a decent amount of water into the kettle (not exceeding the maximum water level), boil and discard. Repeat this step twice before boiling water for drinking.

Operating Instructions

- Open the lid and fill the kettle with water to your desired level.
- Place kettle onto the power base and plug in the power (the indicator will turn on for a second and turn off).
- Press the switch button once and the kettle will enter a boiling state (the indicator will light up). When the water temperature reaches 100°C, the power is switched off automatically and the indicator will turn off.

Tip: The amount of water is strictly prohibited from exceeding the maximum scale and must not appear below the minimum scale. If it exceeds the maximum scale, boiled water may overflow and spill out, causing an injury.

Care Instructions

- This appliance cannot be used next to high temperature objects. Please do not dry in an anhydrous state, otherwise damage to the heat plate and heating pipes are likely.
- If water in the kettle is too little or accidentally dries during use, the power cord should be unplugged. Allow it to cool down and then add cold water.
- When using, the kettle should be placed on a flat surface and not easily accessible to children.
- Do not immerse this appliance in water or other liquids.
- When water is boiling, do not touch the steam escaping from the nozzle and do not rush to open the lid as this avoids being scalded by steam.
- When the kettle is not completely cooled down but needs to be refilled, be careful when opening the lid.
- Please make sure the lid is fully locked before turning on the kettle. Do not open the lid when the kettle is on. The automatic Switch Off may not work if the lid is not fully closed.
- Do not open the lid when pouring boiling water.
- This kettle is only intended for boiling water, not coffee, tea, alcohol or chemicals.
- Do not touch the high temperature surface of this kettle when boiling to avoid scalding.
- After boiling, do not press the switch to avoid damage to the thermostat.

- To keep this kettle in good working condition, it must be cleaned frequently. When cleaning the kettle, make sure to disconnect the power cord and wipe the kettle shell with a damp cloth. Do not immerse the kettle in water during cleaning.

Our 12-month Guarantee

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

We stand by this product. Therefore we offer a 12-month guarantee on the heating element. The benefits of this guarantee are in addition to any rights and remedies imposed by Australian Consumer Law. Our guarantee excludes normal wear and tear and instances where care and use instructions have not been followed.

What IsAlbi will do: During this guarantee period, IsAlbi will repair, replace or refund any defective product. If identical product is not available for replacement, a similar product may be offered. IsAlbi asks you to cover the cost of postage/transit if the product needs to be sent back to us for inspection. If IsAlbi deems the product is defective, we will reimburse your postage/transit expenses. IsAlbi will be responsible for the postage/transit of the repaired/replacement product back to you.

What to do: If a fault/defect is identified, cease using the product immediately.

To make a claim on this guarantee, take the product, proof of purchase and full details of the alleged defect to the retailer from whom the product was purchased. If you cannot access the retailer or are unsatisfied with the solution offered by the retailer, contact IsAlbi via the details below.

IsAlbi

87 Chifley Drive, Preston, Victoria 3072
P: +61 (03) 9474 1300
E: enquiries@isalbi.com.au
www.isalbi.com.au