

magivaac[®]

Auto Wet & Dry Cordless Vacuum with self-cleaning roller brush



Model: VW231 | Batch: PR5025

Carefully read all instructions before use and save for future reference.

IMPORTANT SAFEGUARDS


PLEASE READ AND SAVE THIS INSTRUCTION MANUAL FOR FUTURE REFERENCE

When using the appliance, basic safety precautions should be followed, including:

1. This appliance is suitable for children aged 8 years and older, as well as individuals with reduced physical, sensory, or mental capabilities or limited experience, provided they have received supervision or instruction on safe usage and understand the associated hazards. Children should not play with the appliance without supervision during cleaning or maintenance.
2. Individuals (including children) with reduced physical, sensory, or mental capabilities, or limited experience, should not use the appliance unless they have been given supervision or instruction.
3. Use this appliance indoors on hard-floor surfaces like vinyl, tile, sealed wood or low-pile carpets only. Avoid running over loose objects or edges of rugs, as it may cause the brush to stall and lead to belt failure.
4. This appliance is not a toy. Do not allow children to play with the appliance. Pay close attention when children or pets are nearby during operation.
5. Use only as described in this manual. Use only attachments recommended by the manufacturer.
6. Do not use the appliance with a damaged cord or plug. If it has been dropped, damaged, submerged in water, or is malfunctioning, contact Lennox customer service.
7. Do not handle the charger, including the charger plug, with wet hands.
8. Do not insert objects into openings. Do not use when any openings are blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
9. Keep hair, loose clothing, fingers, and all parts of your body away from moving parts and openings.
10. Exercise caution when using the appliance on stairs.
11. Do not use the appliance to pick up flammable liquids or in areas where such liquids may be present.

12. Refrain from picking up burning or smoking items like cigarettes, matches, or hot ashes.
13. Always use the appliance with a filter installed.
14. Turn off the appliance before carrying it, making any adjustments, accessory changes, or storage to prevent accidental activation.
15. Use only the charger provided by the manufacturer. Using a charger not intended for the Auto Wet & Dry Cordless Vacuum may pose a fire risk.
16. Keep the appliance away from fire or excessive heat.
17. Adhere to charging instructions and temperature limits specified in the manual to prevent battery damage and fire risks.
18. The appliance contains non-replaceable battery cells. Do not attempt to modify or repair it.
19. Always switch off the appliance before connecting or disconnecting the motorized nozzle.
20. Store the appliance indoors in a dry place after use. Do not charge or store it outdoors or in a car.
21. Avoid picking up ultrafine particles, sharp objects, hazardous materials or chemicals.
22. Stop using the appliance immediately if it overheats, makes unusual noises, emits odours, has reduced suction, or leaks electricity.
23. Turn off the appliance and disconnect it from the power outlet for long-term storage.
24. Clean the Dirty Water Tank after each use to prevent blockages and maintain performance.
25. Do not immerse the appliance in water or attempt to clean flooded areas.
26. Remove the plug from the power outlet before disassembling and cleaning the appliance.
27. Avoid hazards by preventing the appliance from running over the supply cord.
28. Do not use the appliance when the water depth exceeds 5mm above the surface.
29. Do not use with foam, acidic, alkaline solutions, or any industrial-grade cleaning detergent.

PRODUCT OVERVIEW

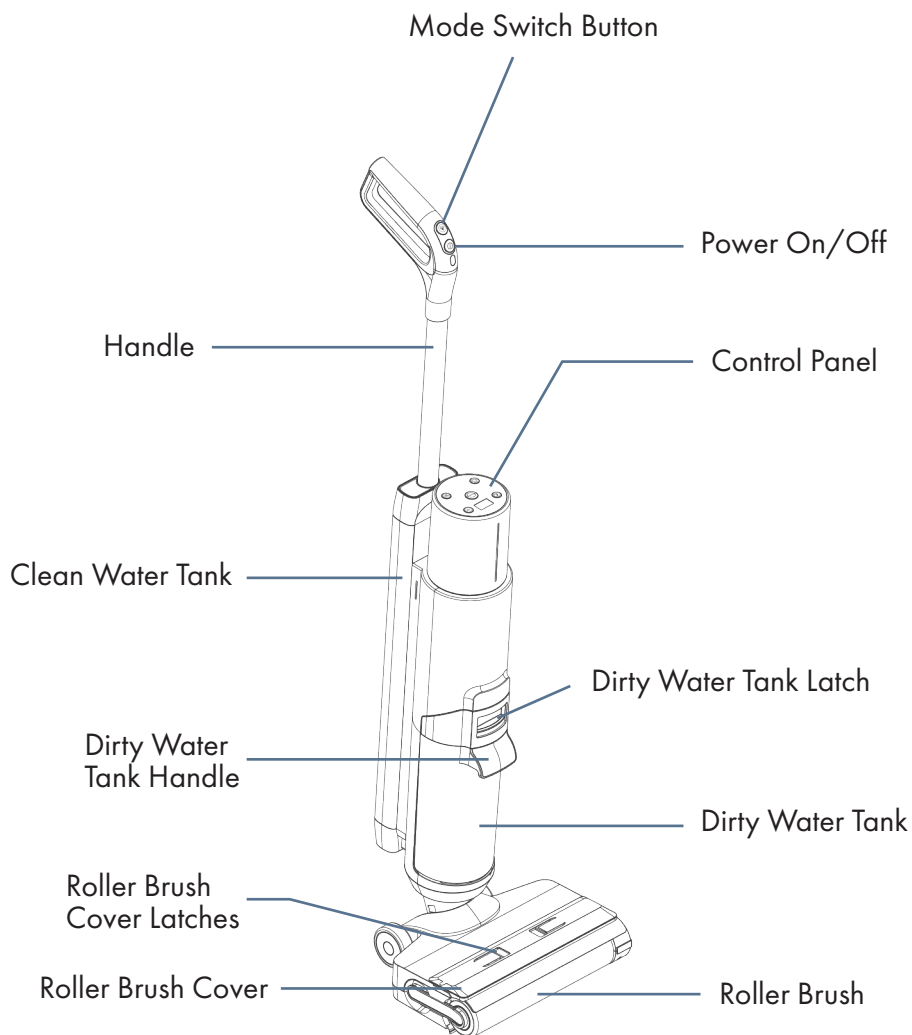


Model	VW231
-------	-------


Rated Power	200W
-------------	------

Size	280 x 270 x 1135 mm
------	---------------------


ACCESSORIES

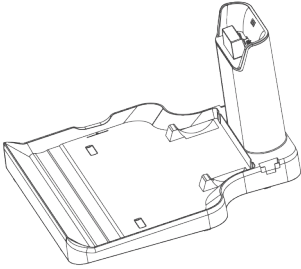


Charging Base

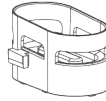


HEPA Filter Holder

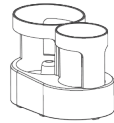


Roller Brush Holder

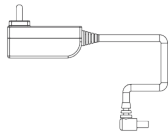

Power Adapter

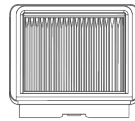

HEPA Filter

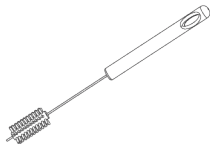


Cleaning Brush




Roller Brush

HANDLE INSTALLATION

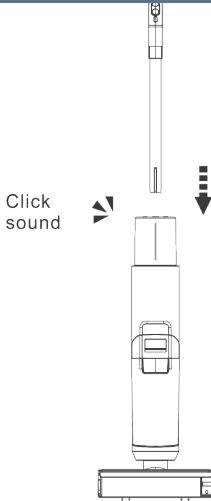


Insert the handle vertically into the main body until you hear a click sound. Ensure it's securely in place.

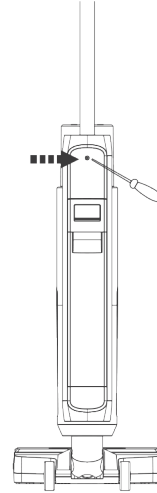


To disassemble this product, press a hard object into the hole at the back of the machine, while pulling the handle of the machine upwards.

CLEAN WATER TANK ASSEMBLY

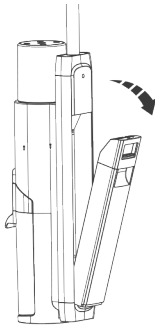


To remove the clean water tank, hold the device body with one hand, and press the button on the clean water tank with your other hand. Pull to take out the clean water tank.

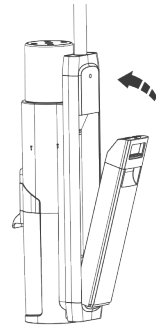


To install the clean water tank, start by placing the bottom of the tank into the opening support position on the device. Then, gently push the tank downward and in until you hear a click, indicating that it's successfully mounted.

DIRTY WATER TANK ASSEMBLY

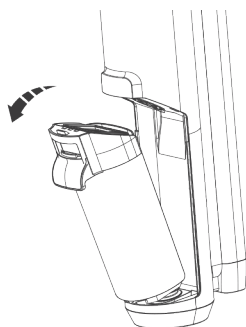


To remove the dirty water tank, hold the device body with one hand and press the button on the dirty water tank with your other hand. Then, pull and take out the dirty water tank.

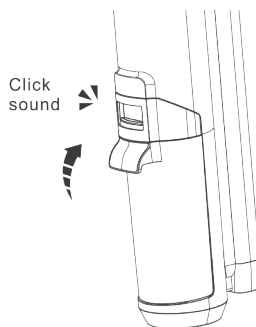


To install the dirty water tank, start by placing the bottom of the tank into the opening support position on the machine. Then, gently push the tank downward and in until you hear a click, indicating that it's successfully mounted.

ROLLER BRUSH COVER ASSEMBLY

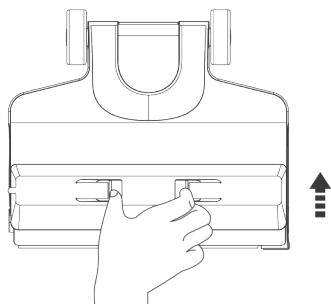

To remove the roller brush cover, place your fingers as shown in the diagram above. Press the release buttons at both ends with your thumb and index finger, then lift up and take out the brush roller cover.

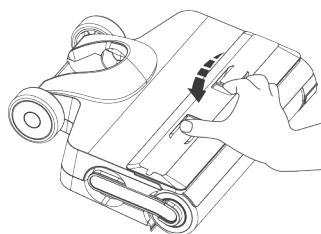


To reinstall the roller brush cover, place your fingers in the position shown in the diagram. Press the release buttons at both ends and place the cover in place. Once you hear a click, it is successfully mounted.


OPERATION

Preparation/Power on

1. **Power on:** After fully charging the battery, press and hold the power on/off button for 3 seconds to turn on the device. Press the button again to turn it off.
2. **Auto/Vacuuming Mode Switch:** The device starts in Auto mode by default. Touch the Mode Switch Button to switch to Vacuuming Mode; press it again to return to Auto Mode.
3. **Auto Mode:** The device's water pump runs and adds moisture to the roller brush when cleaning the floor in Auto mode.
4. **Vacuuming Mode:** In this mode, the device can vacuum dry floors or remove residual water without using the water pump. (Note: Vacuuming mode automatically switches to Auto mode after 6 minutes.)

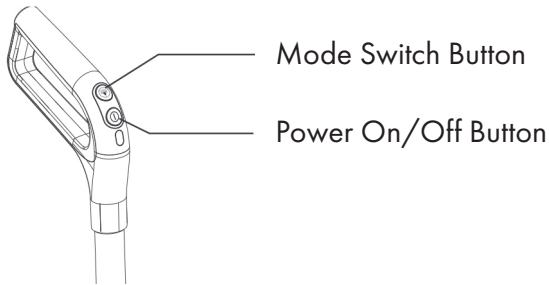


Digital Display & Functions

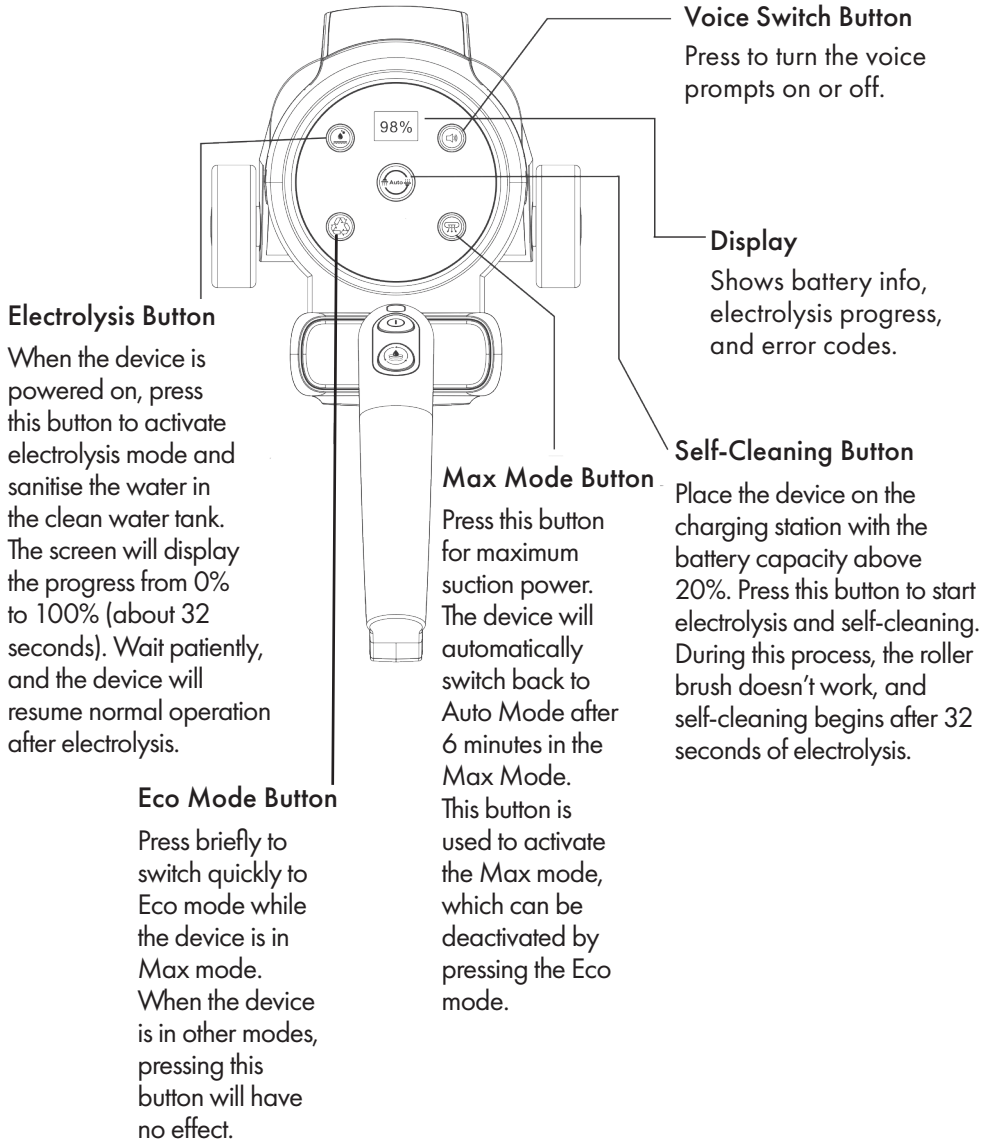


The voice switch on this device has a power-off memory function, which remembers its state before shutting down. If you notice that there are no voice prompts, press this switch to activate the voice function.

Upright Switch

When the device is placed upright, it will stop running and enter standby mode. If there is no operation within 5 minutes in standby mode, the machine will shut down. After completing cleaning with this device, it is recommended to place it vertically on the provided charging dock.

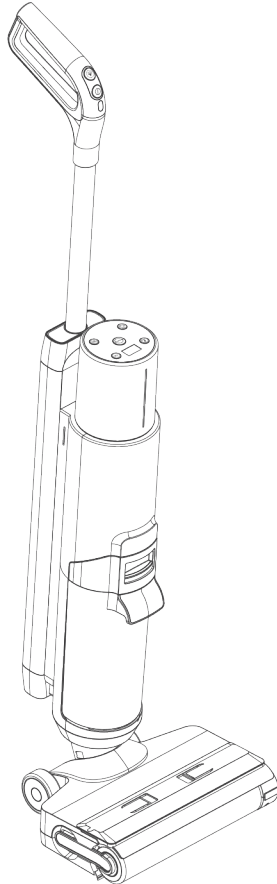


Filling the clean water tank

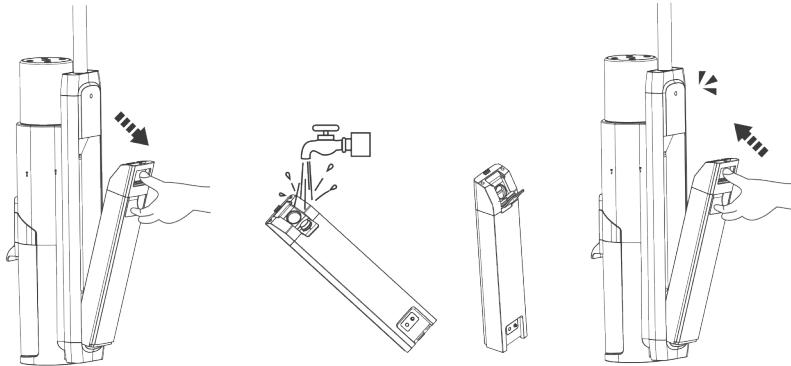

1. Press the release button of the clean water tank to remove it.
2. Open the top cover of the clean water tank and fill it with clean water below 60°C up to the water level mark. Close the top cover tightly to ensure it's not loose.
3. Reinstall the clean water tank onto the device. You will hear a click when it is successfully installed.


Emptying the dirty water tank

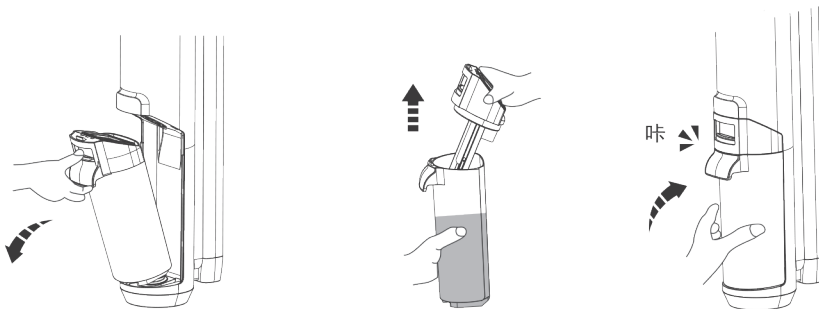

1. Lightly press the release button of the dirty water tank and remove it.
2. Hold the tank with one hand and lift up the cover with your other hand.
3. After draining the dirty water, reinstall the empty dirty water tank back onto the machine. You will hear a click when it is successfully installed.


Smart Sensor Indicator Light

The smart sensor indicator is designed to show the level of dirtiness. Red for dirty, blue for clean. The blue part of the indicator increases as the floor is cleaned, showing that the floor is becoming cleaner.

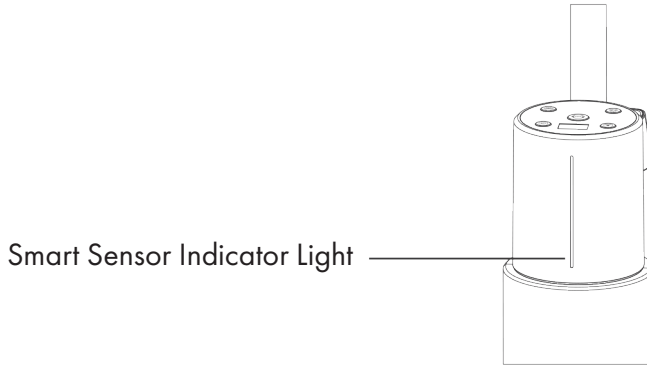

Charging


Place the machine on the charging dock. Connect the charger to the charging dock and plug in the other end. During charging, keep the device upright and near a wall or a corner to avoid tripping hazards.

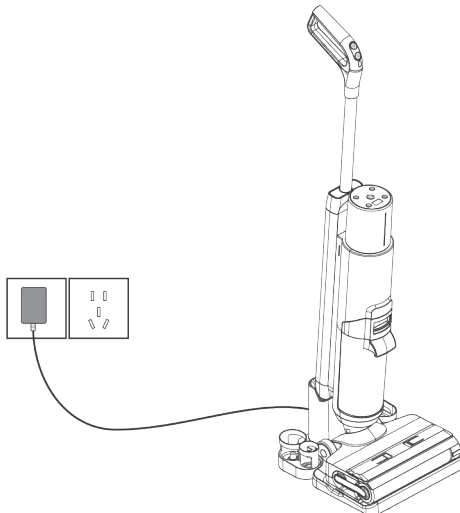

CLEANING & MAINTENANCE


Cleaning the main unit

To ensure optimal performance of the device, regular maintenance of its parts is recommended. After using the device for cleaning, it is advised to place it upright on the charging dock. Avoid placing it in direct sunlight or humid areas.

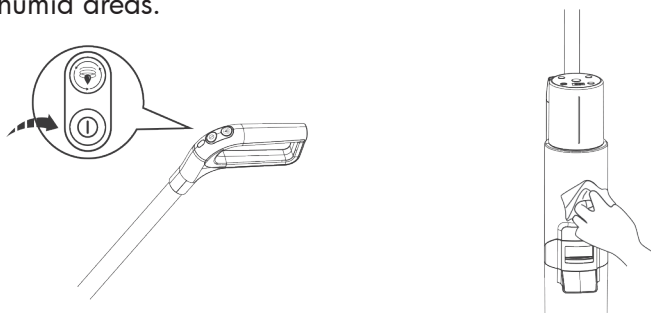

1. Before cleaning the device, please turn it off first.
2. Wipe it gently with water or natural detergent, ensuring the cleaning cloth is wrung dry. Do not allow water to get into the electrical parts of the device.

Cleaning the dirty water tank

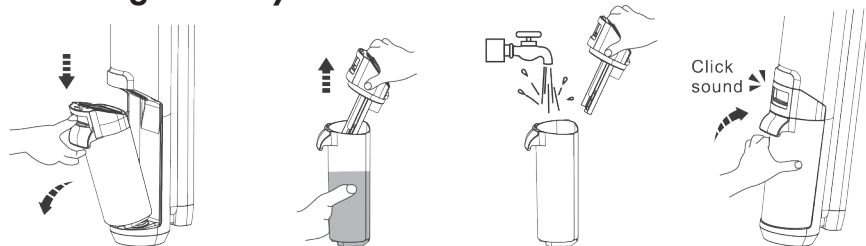

1. When the dirty water tank is full, the device will automatically shut down, and you'll be reminded with voice prompts.
2. For stubborn dirt on the inner wall of the dirty water tank, clean it directly with a cleaning brush.
3. Rinse the tank with clean water.
4. After cleaning the dirty water tank, put on the tank cover and place it back on the device. Install it securely until you hear the click sound.


Cleaning the top cover of the dirty water tank



1. If you find that the dirty water tank is blocked, remove the top cover of the dirty water tank.
2. Rinse the top cover with clean water after removing it. Once it is fully cleaned, put it back onto the dirty water tank.

Cleaning the HEPA filter


It is recommended that after cleaning the entire device, the HEPA filter should be cleaned and dried to maintain cleanliness.

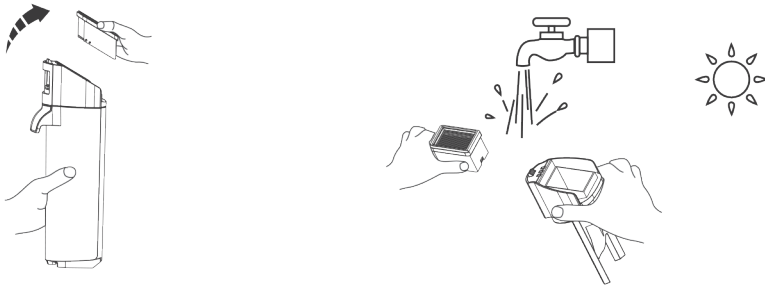

1. Remove the HEPA filter from the top of the dirty water tank.
2. Wash it with clean water, ensuring thorough cleaning.
3. Dry the filter completely.
4. Put the filter back into the cover if the dirty water tank.


Self-Cleaning

- Empty the dirty water tank before starting and after completing the self-cleaning function.
 - If any residual stains appear on the charging dock, please clean them promptly.
1. Place the device back into the charging dock after use.
 2. Press the “Self-cleaning” button on the device to start the self-cleaning process.
 3. The device will perform water electrolysis first, displaying progress from 0% to 100% on the display (takes about 32 seconds).
 4. After the self-cleaning is complete, the device will begin charging.

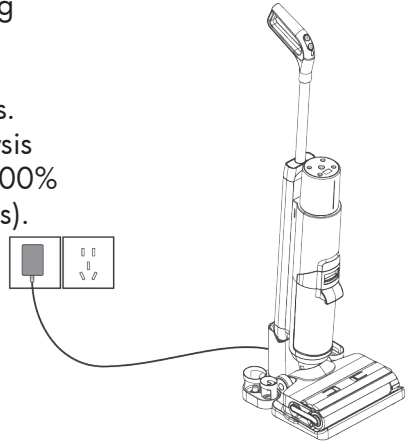

Cleaning the roller brush cover





It is recommended to clean the roller brush cover regularly to maintain cleanliness.

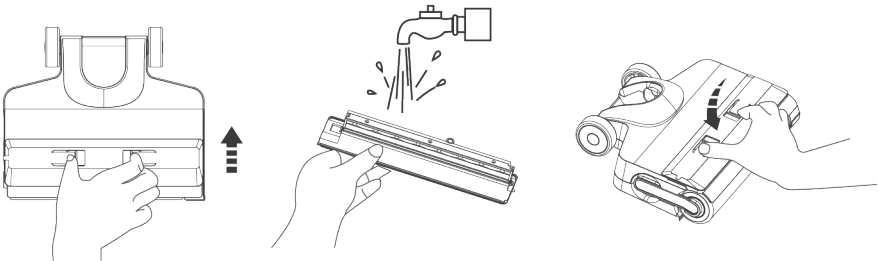

1. To remove the roller brush cover, place your fingers as shown in the diagram above. Press the release buttons at both ends with your thumb and index finger, then lift up and take out the roller brush cover.
2. After taking it out, rinse it with clean water until clean.
3. After cleaning, install the roller brush cover back into the base.

Cleaning the roller brush

It is recommended to clean and dry the roller brush after using the device to keep it clean and tidy. Tips: If you find any residual stains on the tip of the suction nozzle, wipe it with a damp fabric instead of washing it with water.

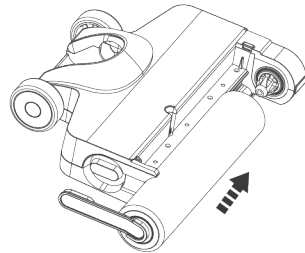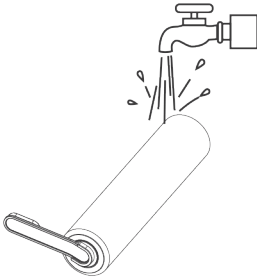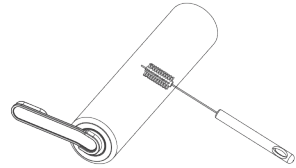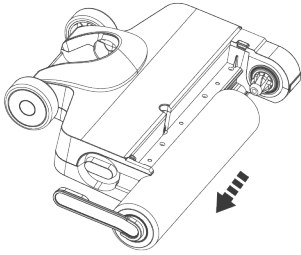

1. Lift up the handle on the left end of the roller brush and remove the roller brush.
2. Remove any entangled hair or debris on the roller brush with the cleaning brush.
3. Rinse the roller brush with clean water.
4. After cleaning, align the right side of the roller brush (without the handle) with the right side of the holder. Then, push the left side (the end with the handle) along the fixed groove to secure it.

TROUBLESHOOTING

If you encounter any issues with the device, refer to the table below for possible causes and solutions.

Issue	Solution
Battery power is low	Fully charge the product before operation.
Dirty water tank is full	Take out the dirty water tank, empty it, and reinstall it.
Nozzle or pipe blockage	Clean the nozzle or pipe.
Dirty or uninstalled HEPA filter	Clean and install the HEPA filter before use.
Blocked nozzle tip	Remove the obstacles from the tip of the nozzle.
Clean water tank not installed	Re-install the clean water tank.
Improperly plugged charger	Check if the plug is connected properly.
Poor contact between the plug and charging dock	Check if the plug is connected to the charging dock properly.
Motor not running properly	Remove blockages in the pipeline and restart the device.
Full dirty water tank or blocked pipe	Drain the dirty water before using it or remove the blockage in the pipeline and restart the device.
Insufficient water in clean water tank	Fill water into the clean water tank first.
Entangled brush roller or improper installation	Clean or install the brush roller.
Malfunctioning or dirty sensor	Check the sensor to ensure it is working properly, and clean the dirty water pipeline with the provided cleaning brush.
Excessive dirt during operation	Start self-cleaning to ensure the cleaning effect.
Excessively worn brush roller	Replace the brush roller if cleaning effectiveness is compromised.
Faulty battery pack	Fully charge and discharge the battery of the product in 3 cycles.

If the problem persists or if you encounter other issues, please contact Lennox customer service for further assistance.

Error Code	Meaning
E01	Dirty water tank if full
E02	Dirty water tank is not installed
E03	Roller brush is entangled or not installed
E04	Not enough water in the clean water tank for self-cleaning or water electrolysis

LENOXX

www.lenoxx.com.au



1300 666 848



LenoxxElectronics



LenoxxElectronics