

nutribullet® ultra plus+

Accessory Kit



User guide

! **WARNING!** Reduce the risk of serious injury by reading the User Guides to your nutribullet® Ultra Plus+ Compact Kitchen System before operating. Save these instructions. Ensure anyone who uses the nutribullet® knows how to do so safely.

Important safeguards.

When operating your nutribullet® Ultra Plus+, remember: SAFETY COMES FIRST. READ THESE SAFEGUARDS CAREFULLY AND THOROUGHLY BEFORE OPERATING.

WARNING! To avoid the risk of serious injury, death, property damage, or damage to your device, carefully read all instructions before operating your nutribullet® Ultra Plus+. If you let anyone else use your nutribullet® device, make sure that they read and understand the health and safety information in this User Guide, as well. When using any electrical appliance, basic safety precautions should always be observed, including the following important information.

! Save these instructions! ● FOR HOUSEHOLD USE ONLY

PERSONAL SAFETY

- **READ ALL INSTRUCTIONS.** Failure to follow all instructions regarding the use of your nutribullet® Ultra Plus+ blender and Ultra Plus+ Processor attachment may result in serious personal injury, death, or property damage.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments
- Never leave your nutribullet® device unattended while in use. Close supervision is required when any appliance is used in the presence of children to ensure that they do not play with the appliance.
- To protect against risk of electrical shock, never operate your nutribullet® device near water or on a wet surface. Do not

immerse the cord, plug, Processor attachment, or Motor Base in water or other liquid.

- Do not let the cord hang over edge of a table or counter, or touch hot surfaces.
- Do not operate your nutribullet® device after a malfunction, or if the unit is dropped or appears to be damaged. Contact Customer Service at **AU: 1300 285 538 / NZ: 0800 232 633** for assistance.
- This device is not microwave-safe. **DO NOT** place any nutribullet® parts or accessories in the microwave.
- Use of incompatible or aftermarket parts may result in damage to your nutribullet® Ultra Plus+ or Ultra Plus+ Processor and may create safety hazards that pose a risk of personal injury or property damage. When ordering replacement parts, always use genuine nutribullet® parts and accessories from a reputable retailer, such as bulletbrands.com.au / bulletbrands.co.nz. You may also contact Customer Service at **AU: 1300 285 538 / NZ: 0800 232 633** for assistance in ordering replacement parts.

PROCESSOR PRECAUTIONS:

Proper operation of the nutribullet® Ultra Plus+ Processor is essential for safety. Using the Ultra Plus+ Processor attachment inconsistent with these instructions may result in bodily injury, property damage, or damage to your unit.

PRODUCT SAFETY:

WARNING! BLADES AND DISCS ARE SHARP! HANDLE WITH CARE.

- Do not attempt to remove the Work Bowl or Lid while the unit is in operation.
- Avoid contact with moving parts. **ALWAYS** make sure that the Motor Base is powered off and the blades are completely stopped before removing any attachment.
- After use, unplug the unit from the outlet and ensure that the blades have come to a complete stop before removing the lid and disassembling parts, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

WORK BOWL AND FEED CHUTE SAFETY:

- Ensure the Processor attachment is securely attached to the nutribullet® Ultra Plus+. The Work Bowl will audibly “click” when it is securely attached to the Motor Base. When attaching the Work Bowl Lid, make sure the arrow on the Lid aligns with the arrow on the Work Bowl. **Note:** the Work Bowl will not disengage from the Motor Base until the Work Bowl Lid is removed. Always remove the Work Bowl Lid first before attempting to disengage the Work Bowl from the Motor Base.
- **NEVER** open the Work Bowl Lid while the unit is operating or when the Blades or Discs are still moving. Doing so may pose a risk of severe

bodily injury or property damage. A scraper or spatula may be used only when the Processor attachment is not running and the unit is **POWERED OFF.**

- **NEVER** place hands, fingers, or utensils inside the Work Bowl when the Blades or Discs are moving. Always allow the Blades or Discs to come to a complete stop before handling.
- Do not allow processed ingredients to exceed the maximum fill line of the Work Bowl.
- Do not remove the Processor attachment until the Blades have come to a complete stop. The Work Bowl Lid must first be removed before the Work Bowl can be disengaged from the Motor Base. Attempting to remove the attachment before the Blades come to a complete stop or failing to first remove the Work Bowl Lid can cause damage to the attachment or unit.
- **NEVER** use your hands, fingers, or utensils to push food down into the Feed Chute or Work Bowl. Doing so may result in severe bodily injury or damage to the machine. Use only the Food Pusher included with your Processor attachment to move ingredients down the Feed Chute.
- **DO NOT** overload the Feed Chute with ingredients or use excessive force on the Food Pusher to push food down the Feed Chute. This may cause the Blades or Discs to seize, which may cause the motor to overheat or the Work Bowl to fracture and break. If the Blades or Discs cease to function, turn off and unplug the unit and wait until all moving parts – Blades included – come to a complete stop. Clear out the contents from the Feed Chute before reattaching and resuming blending.
- For best results, power on your Processor before adding ingredients to the Feed Chute. Use the Food Pusher to slowly and steadily move

ingredients toward the Blades/Discs. Always add ingredients to the Chute at a slow, steady pace.

GENERAL BLADE & DISC SAFETY:

⚠ WARNING! BLADES AND DISCS ARE SHARP! DO NOT TOUCH THE SHARP EDGES OF THE BLADES OR DISCS. HANDLE THE BLADES AND DISCS CAREFULLY BY THE CENTER PLASTIC AREA TO AVOID LACERATION, AMPUTATION, OR OTHER BODILY INJURY.

- Always **POWER OFF** and **UNPLUG** the unit and wait until the Blades or Discs come to a complete stop before assembling, disassembling, changing accessories, or cleaning to avoid laceration or other bodily injury.

⚠ WARNING! ALWAYS REMOVE THE BLADES OR DISCS CAREFULLY BEFORE ACCESSING THE FOOD FROM THE WORK BOWL. NEVER ATTEMPT TO REMOVE THE BLADES OR DISCS BY TILTING THE WORK BOWL FOR THE PURPOSE OF HAVING THE BLADE OR DISC DROP OUT ONTO YOUR HAND. DOING SO MAY CAUSE SEVERE LACERATION INJURIES, AMPUTATION OR BODILY INJURIES.

- **AVOID CONTACT WITH MOVING PARTS!** Do not attempt to defeat any safety interlock mechanisms.
- **DO NOT** leave non-food items (such as a spoon or fork) or use hard ingredients in your Processor attachment. Doing so can damage your nutribullet® device, which may result in bodily injury or property damage.
- **NEVER** leave or store an exposed Blade or Disc directly on top of the Motor Base. Exposed Blades and Discs present a safety hazard that may result in severe laceration injuries. Always place Blades and Discs inside of the Work Bowl and

cover with the Work Bowl Lid when storing.

- Do not use the Blades or Discs for grinding dry ingredients such as grains, cereal, or coffee, as this may damage the motor, Blades, and Discs. Use of dry ingredients may cause the motor to overheat.
- Use only the top rack when using the dishwasher to clean Blades, Discs, and any other nutribullet® part or accessory. Never wash any nutribullet® part or accessory on the bottom rack of the dishwasher, and never use the heat/sanitise cycle when a nutribullet® part or accessory is included in the load.

⚠ WARNING! ALWAYS USE EXTREME CARE AND EXERCISE CAUTION WHEN CLEANING THE BLADES OR DISCS BY HAND. DO NOT TOUCH THE SHARP EDGES OF THE BLADES OR DISCS WITH YOUR HANDS OR FINGERS. DOING SO MAY CAUSE SEVERE LACERATION INJURIES.

- Routinely inspect your nutribullet® device, Blades, and Discs, and discontinue use if damaged. Immediately discontinue use if the device or any part appears to be damaged. Continued use with a damaged nutribullet® device or part, or use inconsistent with these instructions may result in bodily injury, property damage, or further damage to your unit. For assistance with a damaged device or part, contact Customer Service at **AU: 1300 285 538 / NZ: 0800 232 633.**
- Periodically inspect your Blades. If the Blades do not rotate freely or show any other signs of damage, discontinue, discontinue use and contact Customer Service for assistance.
- Do not use after-market replacement parts for your nutribullet®. After-market parts are not made to nutribullet's particular

specifications. Use of these parts may result in damage to your nutribullet® device or create safety hazards that may result in personal injury or property damage. When ordering replacement parts, always use genuine nutribullet® parts and accessories from **bulletbrands.com.au / bulletbrands.co.nz** or order from Customer Service at **AU: 1300 285 538 / NZ: 0800 232 633.**

COFFEE & DRY SPICE GRINDER PRECAUTIONS:

- Always check the device for any foreign objects or damage before use.
- **NEVER** add liquids to the Grinder attachment. Doing so can damage the product.
- Do not grind ice. The Grinder attachment is not intended to be used as an ice crusher. Doing so can damage the product and may cause serious injuries.
- Do not use the Grinder for anything other than its intended use.
- Do not place the Grinder attachment in a microwave, conventional oven, or air fryer, or on a stovetop.
- The Grinder attachment is top-rack dishwasher-safe. **NEVER** use the sanitise or heat cycle when the Grinder attachment is in the dishwasher, as it may warp the product and possibly cause hazardous conditions. **NEVER** place the Motor Base in the dishwasher.
- Do not use the Grinder attachment as a storage container or store it in a refrigerator or freezer.
- Avoid contact with moving parts. **ALWAYS** make sure that the Motor Base is powered off and the blades have come to a complete stop before removing the attachment.
- Unplug the device from the outlet when not in use, and ensure that all moving parts and blades have come

to a complete stop before removing the lid and disassembling parts, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.

- Be aware of possible hazards when using or storing your nutribullet® Ultra Plus+.
- **DO NOT USE OUTDOORS.**

Save these instructions!

Contents



- 2 Important safeguards**
- 8 What's included**
- 9 Assembly guide**
- 11 Using your nutribullet® Ultra Plus+ Processor Attachment**
 - 12 Using the Chopping Blade
 - 15 Using the Reversible Slice/Shred Disc
 - 18 Removing food from the Processor Attachment
 - 20 Troubleshooting
 - 22 Maintenance & storage
- 26 Using your nutribullet® Ultra Plus+ Coffee & Dry Spice Grinder Attachment**
 - 30 Troubleshooting
 - 31 Maintenance & storage
- 33 General care & maintenance**
- 34 nutribullet® Ultra Plus+ Accessory Kit**
- One-Year Limited Warranty**

 
Thank you for purchasing the nutribullet® Ultra Plus+ Accessory Kit.

What's included




Assembly guide

Processor Attachment

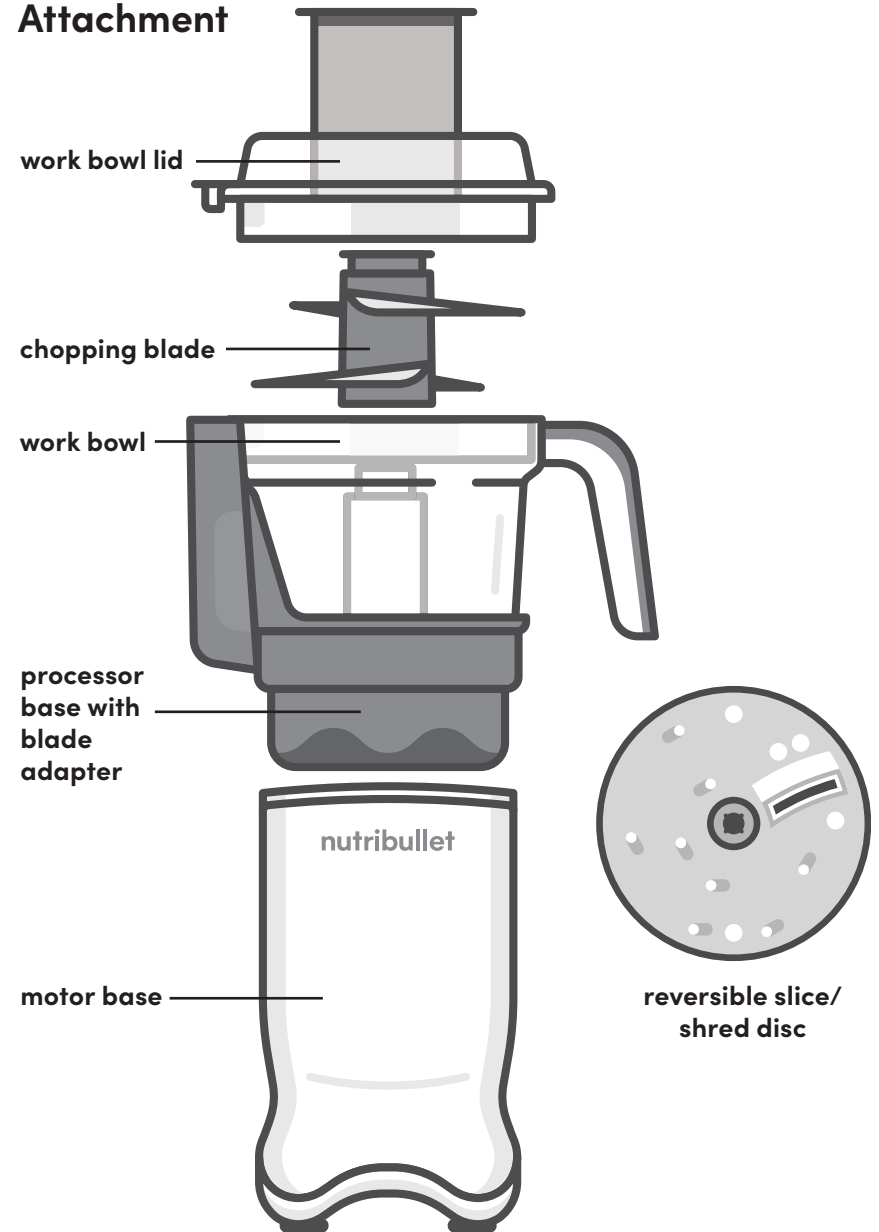

To see our full list of nutribullet® accessories, please visit bulletbrands.com.au / bulletbrands.co.nz.

 Coffee & Dry Spice Grinder Attachment

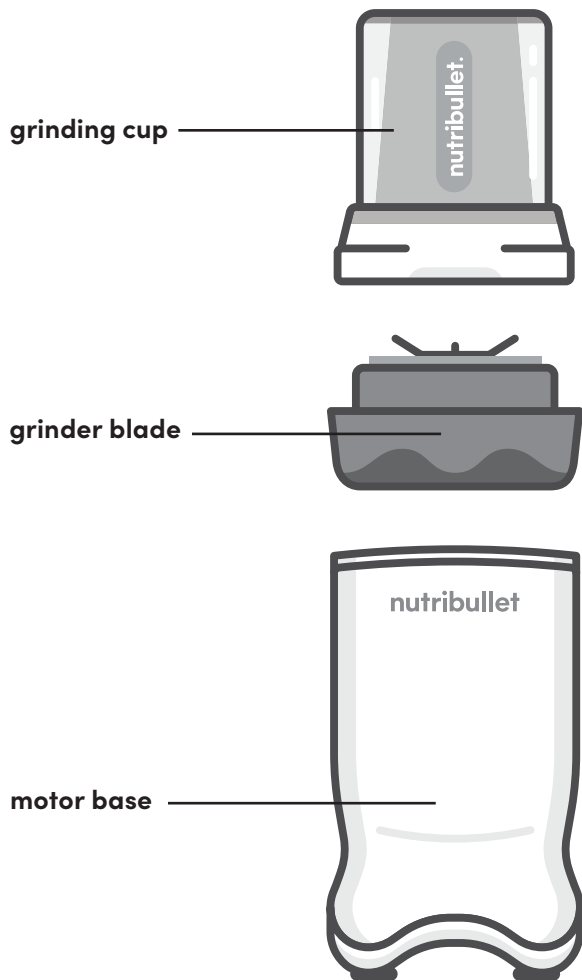

Using your nutribullet® Ultra Plus+ Processor Attachment.



WARNING: USING THE PROCESSOR INCONSISTENT WITH THE INSTRUCTIONS IN THIS USER GUIDE MAY RESULT IN BODILY INJURY, PROPERTY DAMAGE, OR DAMAGE TO YOUR UNIT. TO REDUCE THE RISK OF SEVERE INJURY TO PERSONS OR PROPERTY DAMAGE, INCLUDING LACERATIONS, AMPUTATION OR OTHER BODILY INJURY, FOLLOW THE PRECAUTIONS BELOW:



WARNING: Blades and discs are sharp. Handle with care using the center plastic area.

- Keep away from children.
- **DO NOT** attempt to remove the Work Bowl Lid while the unit is in operation.
- **ALWAYS** make sure that the Motor Base is powered off and the Blades or Discs have come to a complete stop before opening the Work Bowl Lid, removing any attachment, or disassembling or cleaning the unit.
- **DO NOT** overload the Feed Chute with ingredients or use excessive force on the Food Pusher. Slowly and gently guide the food down the Feed Chute.
- **NEVER** place your hands, fingers, or utensils into the

Feed Chute or Work Bowl to push ingredients down toward the blade. Use only the included Food Pusher when adding ingredients.

- Always remove the Blades or Discs before accessing the food from the Work Bowl. **NEVER** attempt to remove the Blades or Discs by tilting the Work Bowl for the purpose of having the Blade or Disc drop out onto your hand. **DOING SO MAY CAUSE SEVERE LACERATION INJURIES, AMPUTATION OR BODILY INJURIES.**
- **NEVER** leave or store an exposed Blade or Disc on the Motor Base. Always place Blades and Discs in the Work Bowl and cover with the Work Bowl Lid.



WARNING: ALWAYS use extreme care and exercise caution when cleaning the Blades or Discs by hand.

 
- Routinely inspect your nutribullet® device, including the Blades and Discs, for damage. Discontinue use if damaged is detected.
- **NEVER** use after-market replacement parts for your nutribullet®.

Using the Chopping Blade:

chop, mix, and mince food.



- 1** Place the **Motor Base**, **Work Bowl**, and **Processor Base & Blade Adapter** on a flat clean and dry surface.

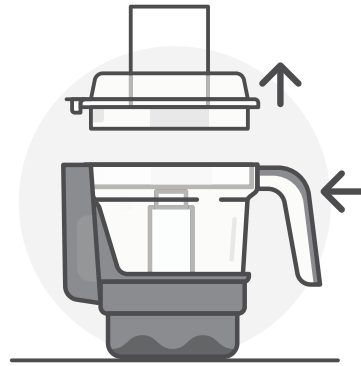

- 2** Remove the **Work Bowl Lid** from the **Work Bowl**, and slide the **Work Bowl** over the **Processor Base & Blade Adapter**. Turn the **Work Bowl** so that the bowl sits flush. The handle of the **Work Bowl** should sit opposite of the lid-locking mechanism on the **Processor Base & Blade Adapter**. Twist the **Work Bowl** clockwise to lock onto the **Processor Base & Blade Adapter**.



- 3** Lower the Chopping Blade atop the central shaft of the Work Bowl and push down to secure into place.

! **WARNING:** The blades are sharp, handle with care.

 


- 4** Prepare ingredients and add them to the **Work Bowl**. Remove seeds, stems, and other non-edible pieces. Cut large items into 2.5 cm to 5 cm pieces before processing.

! **WARNING:** DO NOT fill beyond the **MAX** line.



- 6** Attach the **Work Bowl Lid**. Place the **Work Bowl Lid** on top of the **Work Bowl** and align the locking tab with the locking mechanism on the **Processor Base & Blade Adapter**. Push the **Work Bowl Lid** down while twisting

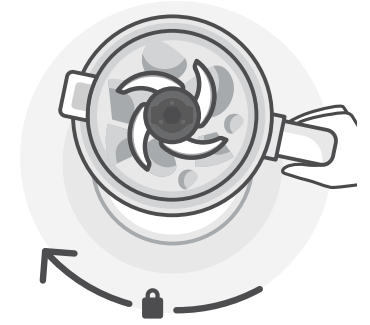


- 5** Place the **Work Bowl & Processor Base** onto the unplugged **Motor Base**. With the **Work Bowl** handle facing to the right side of the **Motor Base**, lower the **Work Bowl** onto the **Motor Base** and turn clockwise. The **Processor Base** will click when locked into place.

clockwise to lock the lid into place. Plug in the **Motor Base**. The control panel will illuminate. The **Processor Attachment** will not work unless both the **Processor Base** and **Work Bowl Lid** are properly locked into place.



 - 7** Press the **Solid Circle** to begin an automated processing cycle of 30 seconds.

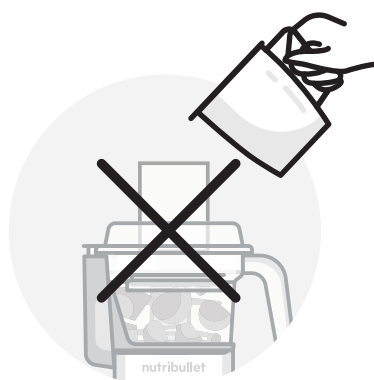

- 8** You may pour liquid through the top chute **ONLY** when the **Processor Attachment** is powered off and the blades are at a complete stop. (**DO NOT** fill ingredients beyond the **Work Bowl's** MAX line).



 
- 9** After processing, wait until the blades have come to a complete stop before attempting to remove the food. **To safely and properly remove/access the food, see the steps on page 18.**

! **WARNING:** Keep fingers away from the **Chopping Blade's** sharp edges. Only handle the chopping blade using the plastic center hub to avoid severe bodily injuries, lacerations, or amputation.


! **WARNING:** Do not remove the **Blades** or **Discs** by **filting** the **Work Bowl** and having the **Blade** or **Disc** drop out onto your hand.

Using the Reversible Slice/Shred Disc:

slice or shred ingredients.

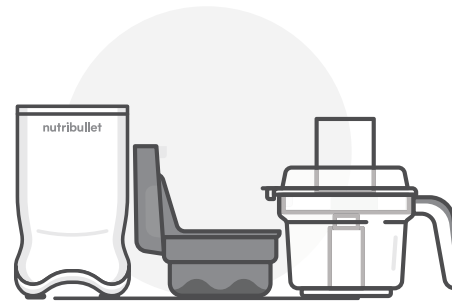

 - 1** Place the **Motor Base**, **Work Bowl**, and **Processor Base & Blade Adapter** on a flat clean and dry surface.

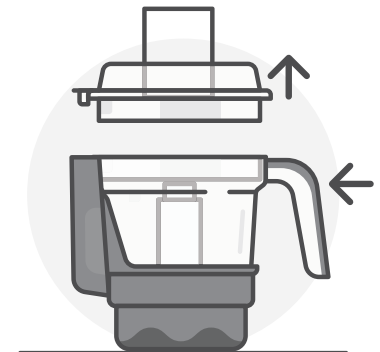


- 2** Remove the **Work Bowl Lid** from the **Work Bowl**, and slide the **Work Bowl** over the **Processor Base & Blade Adapter**. Turn the **Work Bowl** so that the bowl sits flush. The handle of the **Work Bowl** should sit opposite of the lid-locking mechanism on the **Processor Base & Blade Adapter**. Twist the **Work Bowl** clockwise to lock onto the **Processor Base & Blade Adapter**.




- 3** The **Slice/Shred Disc** is reversible, with one side labeled for shredding and the other for slicing. Install the **Disc** on central shaft of the **Work Bowl** with the desired function facing up.

 
! **WARNING:** The **Disc** blades are sharp, handle with care.

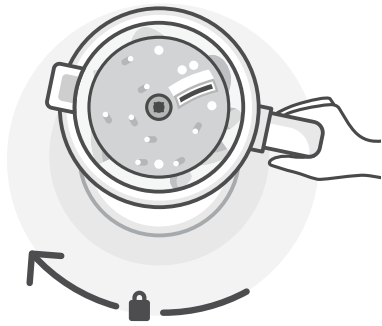

 - 4** Place the **Work Bowl & Processor Base** onto the unplugged **Motor Base**. With the **Work Bowl** handle facing to the right side of the **Motor Base**, lower the **Work Bowl** onto the **Motor Base** and turn clockwise. The **Processor Base** will click when locked into place.

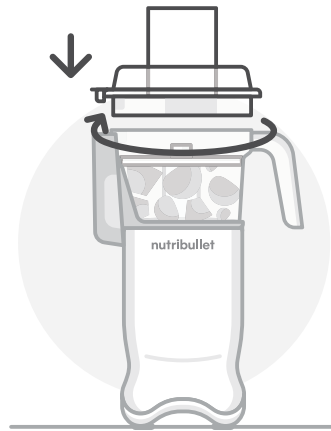


- 5** Attach the **Work Bowl Lid**. Place the **Work Bowl Lid** on top of the **Work Bowl** and align the locking tab with the locking mechanism on the **Processor Base & Blade Adapter**. Push the **Work Bowl Lid** down while twisting clockwise to lock the lid into place. Plug in the **Motor Base**. The control panel will illuminate. The **Processor Attachment** will not work unless both the **Processor Base** and **Work Bowl Lid** are properly locked into place.

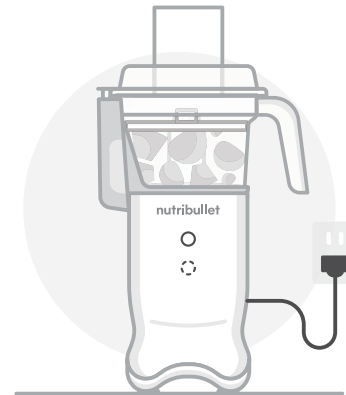 

- 6** Plug in the **Motor Base**. The **Control Panel** will illuminate.



- 7** Press the **Solid Circle** to begin an automated slicing/shredding cycle of 30 seconds.

 **WARNING: Do not apply excessive pressure on the Food Pusher.**

 


- 8** After processing, wait until the **Disc** has come to a complete stop before attempting to remove the food. **To safely and properly remove/access the food, see the steps on page 18.**

Removing food from the Processor Attachment:



- 1** Remove the **Work Bowl Lid**: Turn the Lid counter-clockwise to unlock, then lift from the Work Bowl.

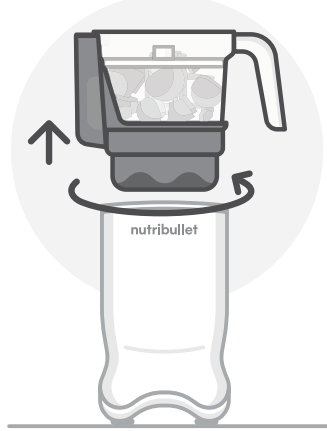

- 2** Remove the **Work Bowl & Processor Base**: Turn the **Work Bowl & Processor Base** counter-clockwise to unlock, then lift from the Motor Base.



- 3** Carefully remove the **Chopping Blade** or **Slice/Shred Disc** from the **Work Bowl** by grasping the central plastic knob of the **Slice/Shred Disc** or **Chopping Blade** and gently pulling upwards.

- !** **WARNING: Keep fingers away from the Chopping Blade and Slice/Shred Disc's sharp edges. Only handle the Disc using the plastic center hub to avoid severe bodily injuries, lacerations, or amputation.**



- 4** Once the **Chopping Blade** or **Slice/Shred Disc** are removed, use a spoon or spatula to remove ingredients from the **Work Bowl**.

- !** **WARNING: NEVER attempt to remove the Blade or Disc by tilting the Work Bowl for the purpose of having the Blade or Disc drop out onto your hand. DOING SO MAY CAUSE SEVERE LACERATION INJURIES, AMPUTATION OR BODILY INJURIES.**



- 5** To remove the **Work Bowl** from the **Processor Base & Blade Adapter**, grasp the **Processor Base** from the bottom with one hand, and with the other hand grasp the handle of the **Work Bowl**. Twist the **Work Bowl** counter-clockwise and carefully lift the **Work Bowl** off of the **Processor Base & Blade Adapter**.

Troubleshooting.

PROBLEM:

My nutribullet® Ultra Plus+ won't turn on.

SOLUTIONS:

- Check your outlet. Ensure that the Motor Base is plugged in properly.
- Check that the Work Bowl is properly attached to the Motor Base. The Work Bowl will audibly “click” when it is securely attached to the Motor Base.
- Check that the arrows on the Work Bowl Lid are aligned with the arrows on the Work Bowl.
- If the other possibilities are determined not to be the issue, it's likely that the unit's thermal breaker was engaged. Allow the unit to cool for at least 30 minutes before attempting to use again.

PROBLEM:

My nutribullet® Ultra Plus+ won't turn off.

SOLUTIONS:

- Unplug the power cord from the outlet. Make sure that the Motor Base is powered off and that the blades have come to a complete stop before removing the Processor Attachment.

PROBLEM:

The ingredients are not chopping properly.

SOLUTIONS:

- Ensure that the Blade Assembly and Chopping Blade are properly attached.
- Ensure that the ingredients do not exceed the MAX fill line on the Work Bowl.
- Ensure sure that the ingredients are suitable for chopping.

PROBLEM:

The ingredients are not slicing or shredding properly.

SOLUTIONS:

- Make sure that the desired Disc function (slicing or shredding) is installed facing up.
- Make sure that the Blade Assembly and Disc are properly attached.
- Make sure the Disc is set in the correct position, with the hash marks on the Disc and Blade Adapter aligned. The Disc should be nearly flush with the top rim of the Work Bowl.
- Make sure that the Feed Chute is not overfilled with ingredients. For best results, start processing before inserting ingredients into the Feed Chute and allow the ingredients to move downwards naturally. Do not apply excessive pressure on the Food Pusher.
- Make sure that the ingredients are suitable for slicing/shredding.

 
Ultra Plus+ Processor Attachment maintenance & storage.




WARNING: FOLLOW THESE IMPORTANT SAFEGUARDS WHEN USING THE ULTRA PLUS+ PROCESSOR ATTACHMENT:

- **SHARP BLADES, ALWAYS** use caution when handling or cleaning the Blade or Disc.
- **NEVER** leave an exposed Blade or Disc on the Motor Base.
- **ALWAYS** store the Blade and Disc in the Processor Attachment with the Work Bowl Lid attached.
- **NEVER** place the Food Processor attachment or any of its parts in the microwave.

CLEANING:

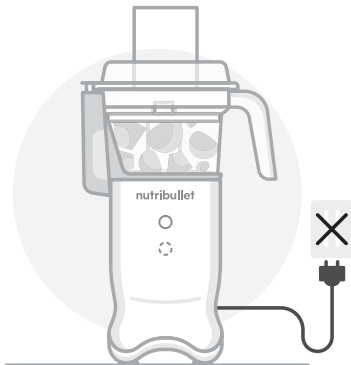

 1 Unplug the **Motor Base** from the outlet.

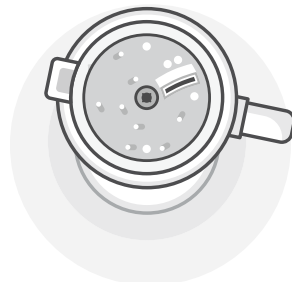

2 Make sure the **Blade or Disc** has come to a complete stop.



3 Carefully remove the **Work Bowl & Processor Base** from the **Motor Base**. Remove the **Work Bowl Lid** from the **Work Bowl**, and follow the disassembly instructions to remove the **Work Bowl** from the **Processor Base & Blade Assembly**. Disassembly should occur in the exact reverse order of assembly.

WARNING: Use caution when handling the Blade or Disc.



5 Alternatively, you can wash the Processor Attachment parts by hand using a sponge or cloth, soap, and water.



4 The **Blades, Discs, Work Bowl & Processor Base**, and **Work Bowl Lid** are top-rack dishwasher-safe.

WARNING: Do not place the Processor Base and Blade Adapter into the dishwasher. The Processor Base and Blade Adapter should be washed by hand.

WARNING: NEVER use the sanitise or heat cycle when any nutriBullet® Ultra Plus+ parts or attachments are in the dishwasher.

WARNING: Blades are sharp, use extreme caution when handling and cleaning the Blade and Disc.

- 6** To remove stubborn residue from **Discs** or **Blades**, immerse in room-temperature water and add 1-2 drops of dish soap. Wait 20-30 seconds to loosen debris enough to scrub away.



- 7** Gently wipe the surface of the Motor Base using a damp sponge or cloth.

! **WARNING: NEVER immerse the Motor Base in water or other liquid.**

STORAGE:

- Store the Blade and Disc inside the Work Bowl. Install the Blade Adapter on the center shaft of the Work Bowl, followed by the Chopping Blade and Slice/Shred Disc.
- When storing the Disc, secure the Disc in the lower position of the Blade Adapter located approximately halfway down the Blade Adapter shaft. Hold the center knob of the Disc, but **DO NOT** align the marks on the Disc with the marks on the Blade Adapter. Lower the Disc down the shaft until it is secured in the lower position.
- Attach the Work Bowl Lid once all components are in place.
- **NEVER** store or leave Blades or Discs exposed. Always cover or store with the appropriate lid or cover.

 
Using your nutribullet® Ultra Plus+ Coffee & Dry Spice Grinder Attachment.




WARNING: KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE NUTRIBULLET®:

- Never leave your nutribullet® device unattended while in use.

- Always check your Coffee & Dry Spice Grinder for any foreign objects or damage before using.
- Do not add liquid ingredients to the Coffee & Dry Spice Grinder.
- Do not grind ice with the Coffee & Dry Spice Grinder.

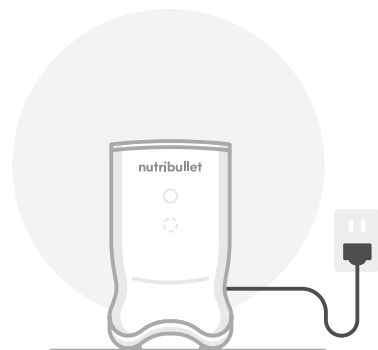

 
- 1** Place the nutribullet® Ultra Plus+ **Motor Base** on a clean, dry, and level surface. Ensure that it is plugged in and powered on.

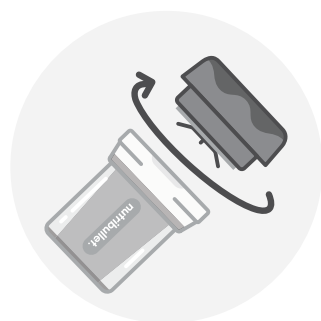

- 2** Open the **Grinder** by twisting the **Grinding Cup** clockwise.



- 3** Add ingredients to the **Grinding Cup**. **DO NOT** exceed the **MAX** line.

-  **WARNING: Do not overfill the Grinder. Overfilling may prevent the blades from spinning freely, causing the Motor Base to overheat and thereby engaging the thermal safety breaker. If the Motor Base comes to an unprompted stop at any point, this likely indicates that the motor has overheated. Wait for the Motor Base to cool down (approximately 15 minutes), then resume use.**



- 4** Secure the **Grinding Cup** onto the **Grinder Blade**, then place it onto the **Motor Base**.

 


- 5** Twist the **Grinder** clockwise until it locks (“clicks”) into place. This will illuminate the **Control Panel**.

NOTE: The nutribullet® Ultra Plus+ will not operate unless the attachment is locked in place.




- 6** For best results, grind ingredients using short 1-to-2 second pulses until reaching your desired consistency. To pulse ingredients, press and hold the **Dashed Circle** on the front of the **Motor Base** for your desired grinding time. Release your finger from the **Dashed Circle** to stop the grinding process.

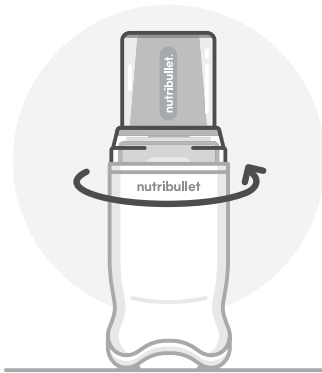

- 7** Once the grinding process has stopped, unlock the **Grinder Attachment** by twisting counter-clockwise.



 - 8** Detach the **Grinder** from the **Motor Base**. Open the **Grinding Cup** to access your ingredients.

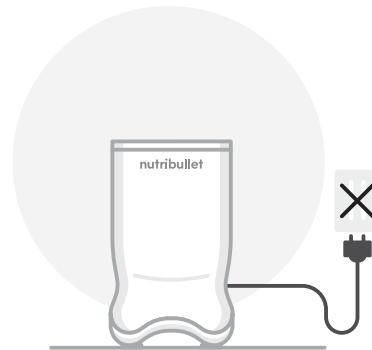

- 9** Remove the plug from the outlet and store your nutribullet® Ultra Plus+ safely, making sure that the cord is not left hanging over the edge of a table or counter, or touching any hot surfaces.

Troubleshooting.

PROBLEM:

My nutribullet® Ultra Plus+ won't turn on.

SOLUTIONS:

- Check your outlet. Ensure that the Motor Base is plugged in properly and that the Grinder is locked ("clicked") into place on the Motor Base.

PROBLEM:

My nutribullet® Ultra Plus+ won't turn off.

SOLUTIONS:

- Unplug the power cord from the outlet. Make sure that the Motor Base is powered off and that the blades are completely stopped before removing the Grinder.

PROBLEM:

The coffee/dry spices are not evenly ground.

SOLUTIONS:

- Select and hold the Dashed Circle on the Control Panel for pulse grinding. Hold the Dashed Circle icon until your coffee or dry spices are ground to satisfaction.

 
Ultra Plus+ Coffee & Dry Spice Attachment maintenance & storage.



WARNING: FOLLOW THESE IMPORTANT SAFEGUARDS WHEN USING THE ULTRA PLUS+ COFFEE & DRY SPICE GRINDER ATTACHMENT:

- **SHARP BLADES, ALWAYS** use caution when handling or cleaning the Blades or Discs.
- **DO NOT** remove any attachment until the Blades or Discs have come to a complete stop.
- **NEVER** place a partially-assembled Blade Assembly onto the Motor Base. Only place fully-assembled components on the Motor Base.
- **ALWAYS** unplug the unit when not in use, before assembling or disassembling parts, and before attempting to clean.
- **DO NOT** use the Grinder Attachment as a storage container.
- **ALWAYS** clean components after each use.


CLEANING:

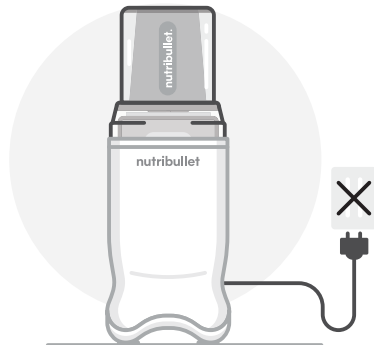


- 1 Unplug the **Motor Base** from the outlet.



 - 2 Disengage the **Grinder** attachment from the **Motor Base**.

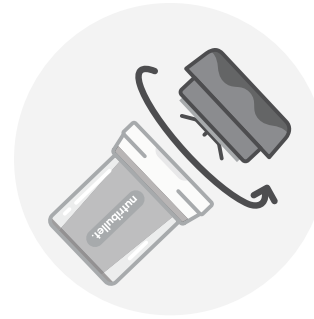

 
- 3 Disassemble the **Grinding Cup** and **Grinder Blade**.
- WARNING: Use caution when handling the Blade.**

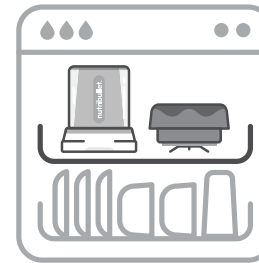

- 4 If using a dishwasher, wash the **Grinder Blade** and **Grinding Cup** in the top rack only.
- WARNING: NEVER wash Grinder components using the sanitise or heat cycle of the dishwasher. DO NOT immerse the Motor Base in water or other liquid.**



 - 5 Alternatively, you can wash the **Grinding Cup** and **Grinder Blade** by hand, using a sponge or cloth, soap, and water.
- WARNING: Blades are sharp, use caution when handling and cleaning the Blade Assembly.**

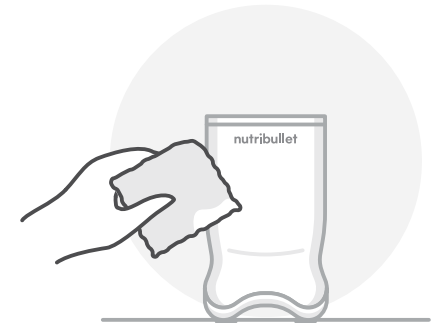

- 6 Clean the **Motor Base** with a damp sponge or cloth.

STORAGE:

- Store your nutriBullet® Ultra Plus+ blender and Coffee & Dry Spice Grinder Attachment in a dry, cool, and clean place. Make sure the power cord is safely tucked away.

- WARNING: Never leave an exposed Blade Assembly in the Motor Base.**

General care & maintenance.



WARNING: KEEP THESE IMPORTANT SAFEGUARDS IN MIND WHEN USING THE NUTRIBULLET®:

- Always power off and unplug your nutribullet® Ultra Plus+ when not in use or when assembling, disassembling, changing accessories, or cleaning.
- Always wait until the motor comes to a complete stop before removing the Cup, Attachments, or when handling the unit.
- Do not place Cups, Attachments, and To-Go Lids in the microwave, they are not microwave safe.
- Do not store an exposed Rapid Extractor Blade on the Motor Base without attaching a Cup.
- **NEVER** place the Rapid Extractor Blade, Cups, Attachments or To-Go Lids on the bottom rack or use the heat/sanitise cycle of your dishwasher when cleaning. It may cause warping and possible safety hazards.
- Do not attempt to clean the Motor Base by immersing in water or other cleaning liquids. Gently wipe and dry with a clean cloth.
- Do not place any parts or accessories in a microwave, conventional oven, air fryer or stovetop pot, or immerse in boiling water to clean or sanitise, as this will damage the part.
- Make sure that the Motor Base ventilation areas are unobstructed and clean.
- Periodically inspect your nutribullet® Ultra Plus+ components for damage or wear that may impair proper function or present a danger or safety hazard. Never operate your nutribullet® Ultra Plus+ with damaged parts or components:
- Discontinue use if you detect cracking, cloudiness, warping, or damage to the Cups or Processor Work Bowl.
- Discontinue use if the Rapid Extractor Blade does not rotate freely, or if the gasket is missing or damaged. Continued use with a damaged blade, or use inconsistent with these instructions may result in bodily injury, property damage, or damage to your unit.
- **NEVER** attempt to use your nutribullet® Ultra Plus+ if it malfunctions, dropped, appears to be damaged or compromised in any manner. Contact Customer Service for assistance.
- **NEVER** use after-market replacement parts for your nutribullet® Ultra Plus+. Aftermarket parts are not made to nutribullet® specifications and may damage your unit or cause serious injury. Use only genuine nutribullet® attachments/accessories specifically designed for your nutribullet® Ultra Plus+ blender by contacting Customer Service.

CDB GOLDAIR

one (1) year limited replacement warranty statement.

If your product becomes defective due to faulty material or workmanship within a period of 1 year from the date of purchase, we warrant to do the following:

- **For New Zealand Consumers:** We will replace the product with a new product, free of charge, or repair the product at our cost, at our discretion.
- **For Australian Consumers:** Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

YOUR WARRANTY IS SUBJECT TO THE FOLLOWING CONDITIONS:

- **DO NOT** operate the appliance with a damaged plug or cord, or if the unit has been dropped, damaged or dropped in water. To avoid the risk of electric shock, do not disassemble or attempt to repair the appliance on your own. If the supply cord is damaged, it must be replaced by a qualified electrician in order to avoid a hazard. Incorrect re-assembly or repair can cause a risk of electric shock or injury to persons when the appliance is used.
- The item has not been misused, abused, neglected, altered, modified or repaired by anyone.
- The item has been subjected to fair wear and tear.
- The item has not been used for trade, professional or hire purposes.

- The item has not sustained damage through foreign objects, substances or accident.

YOUR WARRANTY DOES NOT COVER:

- Components that are subject to natural wear and tear caused by normal use in accordance with operating instructions.
- Unauthorized/improper maintenance/handling or overload is excluded from this warranty.
- For guarantee claims, you will need to submit a proof of purchase in the form of a valid receipt that displays date and place of purchase.

This warranty does not replace but is in addition to your statutory rights.

This warranty does not apply to accessories supplied with the item.

This warranty applies only to the original purchaser and may not be transferred.

Replacement items will be covered by the limited warranty for the balance of the warranty period from the date of the original purchase.

PLEASE NOTE:

Only the defective product or parts returned to place of purchase will be replaced under this warranty.

CDB GOLDAIR

NEW ZEALAND
PO Box 100-707
NSMC
Auckland 0745
0800 232633
bulletbrands.co.nz

AUSTRALIA
PO Box 574
South Morang
Victoria 3752
1300 285538
bulletbrands.com.au

MODEL: (NB-500) NB07550

RATING: AC 220-240V 50-60Hz 1200W

Capital Brands Distribution, LLC | All rights reserved.

nutribullet® Ultra is the trademark of CapBran Holdings, LLC registered in the U.S.A. and worldwide.

Illustrations may differ from the actual product. We are constantly striving to improve our products, therefore the specifications contained herein are subject to change without notice.

ANBFPGRKIT-CDB_250616