

IMPORTANT SAFETY INSTRUCTIONS

SUITABLE FOR OUTDOOR USE & HOUSEHOLD USE ONLY.

⚠ WARNING

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY: READ ALL THESE INSTRUCTIONS BEFORE USE.

- This appliance is operated by a rechargeable battery. ONLY recharge the battery with the charger supplied with the unit, battery charger for use only with model GQ36-120300-AUO power supply from Dongguan Gangqi Electronics Co., Ltd. or with model ZD036S120300US from E-TEK or with model AJJ3-1 from Anlian. A charger that may be suitable for one type of battery may create a risk of fire when used with another battery.
- Do not attempt to destroy, remove, or disassemble the battery pack from the machine. Do not incinerate battery cells. Consult your local waste authority for information regarding available recycling and/or disposal options.
- This appliance comes with a remote control which contains a coin battery. Dispose of batteries properly. Always keep batteries away from children (choke hazard). Even used batteries can cause injury.
- To reduce the risk of electric shock, connect only to an outlet provided with a ground fault circuit interrupting (GFCI) device.
- The fan should be used on a stable and level surface.
- Never use this fan near pools, bathtubs, showers, basins, or other vessels containing water.
- Do not operate any unit with a damaged power supply wire or battery charger. Contact service center.
- Do not run cord under carpeting. Do not cover charge cord with throw rugs, runners, or similar coverings. Do not route charge cord under furniture or appliances. Keep charge cord away from high-traffic areas. Place charger in an area where the cord will not be tripped over.
- If the charger cord is damaged, it should be replaced.
- This appliance is not intended for use by anyone (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they DO NOT play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- Prior to cleaning or other maintenance, the appliance must be unplugged from the electrical outlet.
- Only use Shark branded accessories.
- Do not use if appliance is not working as it should, or has been dropped, damaged, left outdoors, or dropped into water.
- Turn off all controls before plugging in or unplugging the appliance.
- Unplug from electrical outlet when not in use and before any maintenance or cleaning.
- Hand wash exterior/hard plastic/non-electronic parts with water only. Do not immerse. Cleaning with chemicals could damage the unit.
- Do not attempt to repair or adjust any electrical or mechanical functions of this appliance, as this may cause danger and void the warranty.

- Call a local poison control center for treatment information.
- Compatible battery type is CR2025.
- The nominal battery voltage is 3V.
- Non-rechargeable batteries are not to be recharged.
- Do not force discharge, recharge, disassemble, heat above (manufacturer's specified temperature rating) or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
- Ensure the batteries are installed correctly according to polarity (+ and -).
- Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
- Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
- Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

⚠ **WARNING: Not suitable for use with solid-state speed controls.**

LITHIUM BATTERY SAFETY WARNINGS
LITHIUM BATTERIES STORE A LARGE AMOUNT OF ENERGY AND WILL VENT FIRE OR EXPLODE IF MISTREATED.

- DO NOT DO ANY OF THE FOLLOWING TO THE BATTERY PACK:
 - Open
 - Drop
 - Short-circuit
 - Puncture
 - Incinerate
 - Expose to temperatures
- Keep battery pack dry.
- Charge battery pack only according to its charger's instructions.
- Inspect battery pack before every use: do not use or charge if damaged.

BATTERY REMOVAL AND DISPOSAL
This product contains an integral lithium battery (not replaceable), and the remote control uses a lithium coin battery. When the remote battery no longer has a charge, it should be removed from the remote and recycled. DO NOT incinerate or compost the product with its integral battery or the remote battery. When your remote battery needs to be replaced, dispose of it or recycle it in accordance with local ordinances or regulations. In some areas, it is illegal to place spent lithium batteries in the trash or in a municipal solid waste stream. Return spent battery to an authorized recycling center or to retailer for recycling. Contact your local recycling center for information on where to drop off the spent battery.

- POWER SUPPLY SAFETY**
- Read and follow all instructions that are on the product or provided with the product.
 - Do not use an extension cord.
 - Do not use within 10 feet of pool and do not use in a bathroom.
 - WARNING: Risk of Electric Shock.** When used outdoors, install only to a covered Class A GFCI protected receptacle that is weatherproof with the power unit connected to the receptacle. If one is not provided, contact a qualified electrician for proper installation. Ensure that the power unit and cord do not interfere with closing the receptacle cover.

FCC WARNINGS
Note: This equipment has been tested and complies with the limits for a Class B digital device - pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

To see if this equipment interferes with radio or television reception, try turning the equipment off and on.
To correct any interference:
• Reorient or relocate the receiving antenna.
• Increase the distance between the equipment and the receiver.
• Connect the equipment to a different outlet than the receiver.
• Consult the dealer or an experienced technician for help.


This device complies with Part 15 of the FCC Rules. Operation is subject to two conditions:

- This device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

Caution: Any changes or modifications to this unit not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

⚠ WARNING

- INGESTION HAZARD:** This product contains a button cell or coin battery.
- DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause **Internal Chemical Burns** in as little as **2 hours**.
- KEEP** new and used batteries **OUT OF REACH OF CHILDREN**.
- Seek immediate medical attention** if a battery is suspected to be swallowed or inserted inside any part of the body.



- Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. Do NOT dispose of batteries in household trash or incinerate.
- Even used batteries may cause severe injury or death.

READ AND SAVE THESE INSTRUCTIONS

Please be sure to read and save the warnings on other side prior to using your unit.

814100261

 
QUICK START GUIDE

SETTING UP YOUR FAN

Includes:


- Bolt
- Allen Wrench Multi-Tool
- Charging Cable
- Remote
- Fan Head
- Piece Pole
- Base
- Car Charger
- Fan Cover
- Misting Accessory

1

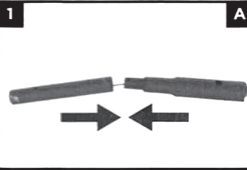

Accessory type and quantity may vary depending on the model.

 
2

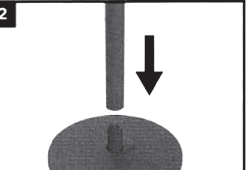

Align using yellow dots.

Accessory type and quantity may vary depending on the model.


3



Rotate clockwise to tighten the bolt.


Accessory type and quantity may vary depending on the model.

4



Accessory type and quantity may vary depending on the model.

5



Charging port labeled with ⚡

Accessory type and quantity may vary depending on the model.


 


 
 
 

 
- Align and insert the **Upper Pole** into the **Lower Pole** until it clicks into place.
- Align the yellow dot on the assembled pole with the yellow dot on the **Base**, then slide the pole down onto the base.
- Insert the **Bolt** in the bottom of the **Base**. Use the **Allen Wrench** to turn the bolt clockwise to fasten it to the assembled pole.
- CAUTION:** finger pinch risk. Holding it by the handle, insert the fan head into the top of the assembled pole until it clicks into place.
- Charge fan to 100% battery** before use without the cord. **First use:** before using remote control, press **Power Button** on fan.


• The images shown here are for illustrative purposes only and may be subject to change.

FEATURES

CORDLESS	OUTDOORS	OSCILLATION	BOOST MODE	REMOTE STORAGE
This is a 2-in-1 fan that can be used with or without the cord.	This fan can be enjoyed indoors or outdoors.	Choose between 3 angles of oscillation to best suit your needs as well as up to 55 degrees of vertical tilt.	Activate the extra-powerful Boost Mode for maximum-strength air flow.	Store the remote on the back of the fan head when it's not in use.

HOW TO USE YOUR FAN

Fan Speeds	1-5	Press  on the fan head or  arrows on the remote to switch between fan speeds 1-5. LED lights will indicate selected fan speed.
	Boost Mode	For maximum-strength airflow, press and hold  on the fan head for 3 seconds, or press  on the remote. During cordless use, fan speed will automatically decrease after 20 minutes to save battery power.
Oscillation	 <p>1 - 45° angle 2 - 90° angle 3 - 180° angle</p>	Press  on the fan head or  arrows on the remote to toggle between oscillation angles. LED lights will indicate which angle is selected.
	Horizontal Angle Adjust	Press the  arrows on the remote to change the horizontal angle of the fan at a distance.
Runtime	MAXIMUM CORDLESS RUNTIME: 20 hours on fan speed 1. MAXIMUM CORDLESS PERFORMANCE: 2 hours on fan speed 5. PLUGGED IN: Indefinite runtime; fan will charge while operating.	
Charge Time	FROM 0% TO FULLY CHARGED BATTERY: 5 hours	
Battery Indicator	 <p>100% charged: white light 6%-20%: red light steady 51%-99%: green light 5% and below: red light blinking 21%-50%: amber light</p>	

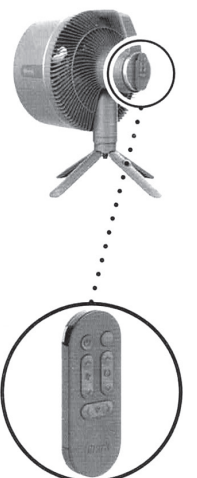 

• Accessory type and quantity may vary depending on the model.

• The images shown here are for illustrative purposes only and may be subject to change.

Please make sure to read the Shark™ Owner's Guide prior to using your fan.

 
Shark Fan Accessories

Car Charger

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE


- SAVE THESE INSTRUCTIONS.** This manual contains important safety and operating instructions for battery charger model FA20XCAR from Dongguan City Gangqi Electronics Co., Ltd.
- Before using this battery charger, read all instructions and cautionary markings on the battery charger, battery, and product using battery.
- CAUTION:** To reduce risk of injury, charge only the provided rechargeable battery. Other types of batteries may burst, causing injury to persons and damage.
- Do not** expose charger to rain, moisture, or snow.
- Use of an attachment not recommended or sold by the battery charger manufacturer may result in a risk of fire, electric shock, or injury to persons.
- To reduce risk of damage to cigarette lighter connector and cord, pull by cigarette lighter connector rather than cord when disconnecting charger.
- To reduce risk of electric shock, unplug charger before attempting any maintenance or cleaning. Turning off controls will not reduce this risk.
- Do not** operate charger with damaged cord or cigarette lighter connector. Replace it immediately.
- The car charger may be wiped clean with water once removed from the power socket. Allow car charger to fully dry prior to use.
- The car charger contains a 5-amp replaceable fuse. Only replace the fuse with a 5-amp fuse, no higher. To do so, unscrew the chrome knob at the top end of the car charging port to access the fuse.

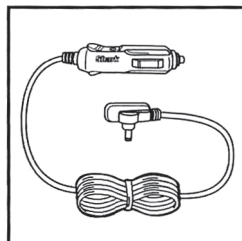

READ AND SAVE THESE INSTRUCTIONS

INSTRUCTIONS FOR USE:

 - Firmly insert the larger end of the car charger into a 12-volt outlet in your vehicle.
- Connect the small end of the car charger to the charging port on the underside of the fan head, between the 4 support legs.
- If the fan is charging in a moving vehicle, be sure to position the fan in a secure location.

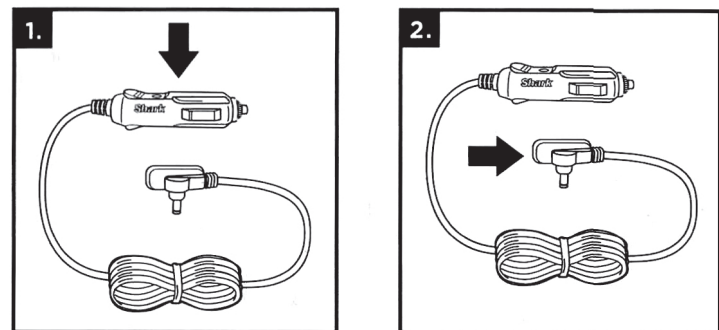

- Accessory type and quantity may vary depending on the model.
- The images shown here are for illustrative purposes only and may be subject to change.

PRINTED IN MEXICO
Elbrd: J.M. SC: 07-24-2024
OBPN: FA20XMIST_QSG_W5_Mv7_231018
SHDML: FA200_E2GB
ADD: FA222_E2GB_FA222Q_E2GB_
FA222QGY_E2GB

814100261

 


Cover

IMPORTANT SAFETY INSTRUCTIONS


READ ALL INSTRUCTIONS BEFORE USE

- The fan cover is not a toy. Children should not play with it as it may become unsanitary during outdoor use.

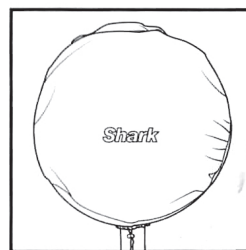

INSTRUCTIONS FOR USE:

 - Position the cover over fan head, then slide it on until the fan is completely covered.
- Cinch the drawstring on the bottom of the cover to secure it in place.
- The cover will protect the fan from dust and light damage. The fan cover does not guarantee that the product can be left outdoors for an extended time.

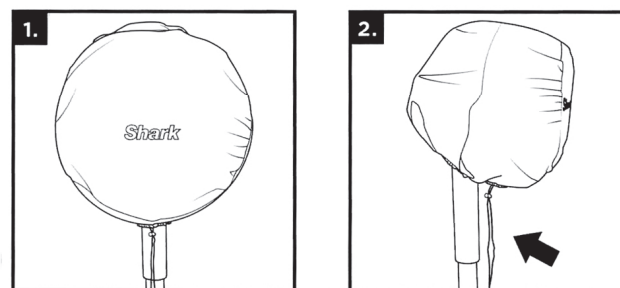

- Accessory type and quantity may vary depending on the model.
- The images shown here are for illustrative purposes only and may be subject to change.

Misting Accessory

IMPORTANT SAFETY INSTRUCTIONS

 
READ ALL INSTRUCTIONS BEFORE USE

- The misting accessory is suitable for **OUTDOOR USE ONLY**.
- The misting accessory will continue to operate when the fan is powered off. Turn off the water source to turn off the accessory.
- DO NOT** operate the misting accessory using water pressure above typical household pressure, 60 psi.
- DO NOT** use warm or hot water. Only use cold or room temperature water.
- DO NOT** handle live electrical products while in range of the misting stream.
- Keep non-waterproof electronic equipment and appliances out of the misting stream.
- Children should be supervised to ensure that they **DO NOT** play with the misting accessory.
- WARNING: CHOKING HAZARD.** Always keep nozzles and any other small parts out of the reach of children.
- Cleaning and user maintenance of the misting accessory shall not be done by children without supervision.

READ AND SAVE THESE INSTRUCTIONS


INCLUDES:

- Misting Accessory
- Brass Nozzles
- Push Connect Hose
- Hose Management Clip
- Accessory type and quantity may vary depending on the model.
- The images shown here are for illustrative purposes only and may be subject to change.

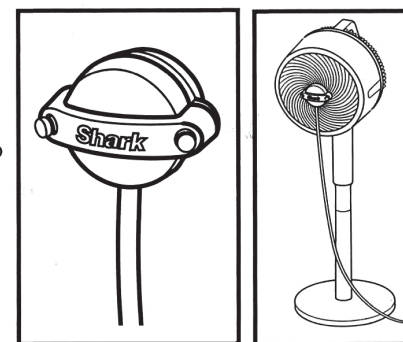

INSTRUCTIONS FOR USE:

 - Carefully align the misting accessory with the circle in the center of the fan grill, and push it in to install. Do not use excessive force.
- Screw the end of the misting accessory into the nozzle of a standard garden hose, (Garden hose not included)
- Turn on the hose to create mist.
- To adjust the amount of mist, increase or decrease the fan speed, or adjust the water pressure from the hose. Higher water pressure or fan speed will mean more mist.

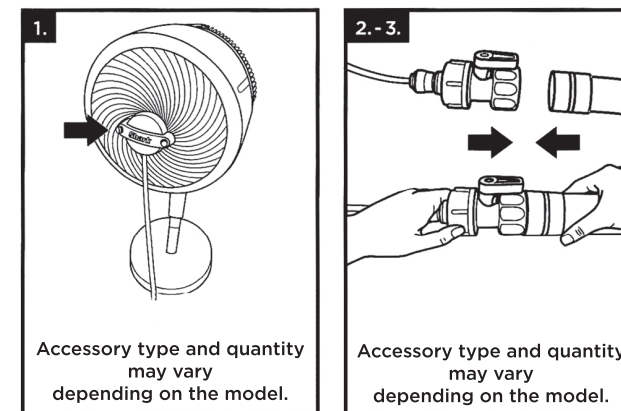

Accessory type and quantity may vary depending on the model.

Accessory type and quantity may vary depending on the model.

INSTRUCTIONS FOR MAINTENANCE:

FOR BEST RESULTS, CLEAN THE MISTING ACCESSORY ONCE A YEAR, OR AS NEEDED. USING HARDER WATER WILL REQUIRE MORE FREQUENT CLEANING.

- Unscrew the misting accessory from the water source, then pull the other end off the fan grill.
- Place the accessory on a flat surface and carefully remove each brass nozzle, one at a time. **CAUTION:** Residual pressure may remain in the misting accessory
- To remove a nozzle, twist it counterclockwise. Do not use a wrench or any other tool. **WARNING: CHOKING HAZARD.** Keep nozzles out of the reach of children.
- To flush the misting system, once the nozzles are all removed, connect the accessory to a garden hose or other outdoor water source. Aim the accessory away from yourself or anyone else, then turn on the water and run it through the system for 30 seconds to flush out any debris.
- Soak the nozzles in a solution of undiluted distilled white vinegar (5% acetic acid by volume) to loosen debris that may be clogging or restricting the nozzle. **DO NOT** soak the nozzles for more than 2 hours.
- After soaking the nozzles in the solution, rinse them thoroughly with water.
- Carefully reinstall each nozzle by twisting clockwise until you feel resistance.

Settings	Runtime
Fan Speed 1	27.0 hours
Fan Speed 1 + Oscillation	10.0 hours
Fan Speed 2	14.0 hours
Fan Speed 2 + Oscillation	7.5 hours
Fan Speed 3	6.3 hours
Fan Speed 3 + Oscillation	4.5 hours
Fan Speed 4	3.5 hours
Fan Speed 4 + Oscillation	2.5 hours
Fan Speed 5	2.0 hours
Fan Speed 5 + Oscillation	1.7 hours
Boost Mode	1.5 hours
Boost Mode + Oscillation	1.3 hours

Runtime subject to 10% variability.

REFURBISHED PRODUCT LIMITED NINETY DAYS WARRANTY

The **Refurbished Product Service Center** offers the following WARRANTY to the ORIGINAL purchaser of a product which we have refurbished.

This product that has been refurbished is warranted against any electronic or mechanical defects for a period of NINETY DAYS from the date of the original purchase by the consumer. Since this unit was sold as a refurbished item, the warranty does not apply to any cosmetic appearance items such as scratches. Should a defect occur, the **Refurbished Product Service Center** will repair or, at its option, replace defective unit/parts with new or rebuilt materials without charge for either parts or labor. Replacement unit/parts will be warranted for the remaining portion of the original warranty period.

This warranty does not cover installation or damage from accident, misuse, abuse, improper wiring, incorrect voltage, operating the unit against the instructions in the owner's manual or any product which has been opened, altered, or tampered with.

This warranty does not cover costs for removal and or installation of the unit for repair. Under no circumstances shall the service center be liable for any special, incidental or consequential damages or for any other expenses incurred by reason of use or sale of this product. This warranty is in lieu of any other warranties expressed or implied warranty of merchantability of fitness for particular use or otherwise.

This warranty gives the consumer specific legal rights and they may also have other rights which vary from State to State. Some States do not follow the exclusion or limitation of incidental or consequential damages, hence the above exclusion and limitations may not apply.

Refurbished Product Service Center
13225 Marquardt Avenue Santa Fe Springs, CA 90670.

WARRANTY REPAIR INFORMATION

If you need service on your unit and this product requires repair during the 90 days warranty period; please go to www.ConsumerServiceRefurbish.com or call the **Refurbished Product Service Center** at 562-946-3531 to obtain the required return authorization (RA) number. Pack the unit properly (the original carton is ideal for this purpose) along with a copy of your purchase receipt and a letter describing the problem. Send the unit freight prepaid and insured to:

Refurbished Product Service Center,
Att: Customer Service Department 13225 Marquardt Avenue
Santa Fe Springs, CA 90670

Your unit will be promptly repaired and returned to you. We will refuse to accept delivery of the returned unit unless the assigned RA number appears on the outside of the shipping carton.

Owner's Information
(Keep for your permanent records)

NAME: _____

ADDRESS: _____

CITY: _____

STATE: _____

ZIP CODE: _____

PHONE: _____

E-MAIL: _____

MODEL: _____

SERIAL NO.: _____