


# Monty

---

## USER GUIDE

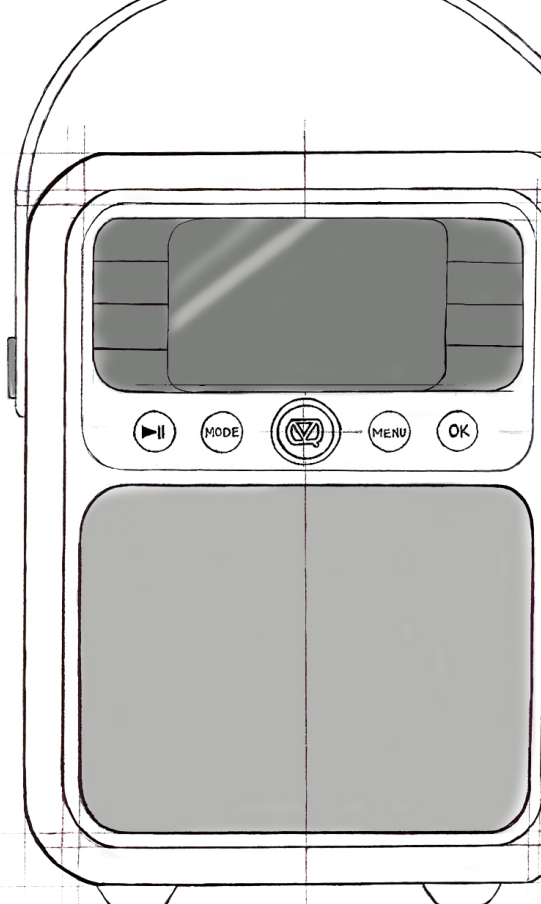

MyVQ.com

BORN IN  
*Britain*



# Contents

Contents .....	2
Basic Features .....	3-4
Power On/Off Monty .....	5
DAB Radio .....	6
FM Radio .....	7
Bluetooth .....	8
Saving Presets DAB/FM .....	9
To Recall a Preset .....	10
Setting an Alarm .....	11-13
Snooze or End a Sounding Alarm .....	14
EQ Setup .....	15-16
Clock Settings .....	17-18
Setting the Clock and Date manually .....	19-22
Sleep .....	23-24
To Cancel the Sleep Timer .....	25-26
Screen Brightness / Backlight .....	27-32
Language .....	33-34
Changing the Display Information Screen .....	35
Troubleshooting .....	36
Factory Reset .....	37-38
Contact Us / Warranty .....	39



 Power On/Off

 Play / Pause

**MODE** Mode

**MENU** Menu

**OK** Select / Enter


 Volume Decrease

 Volume Increase



 Previous / Next

 Presets

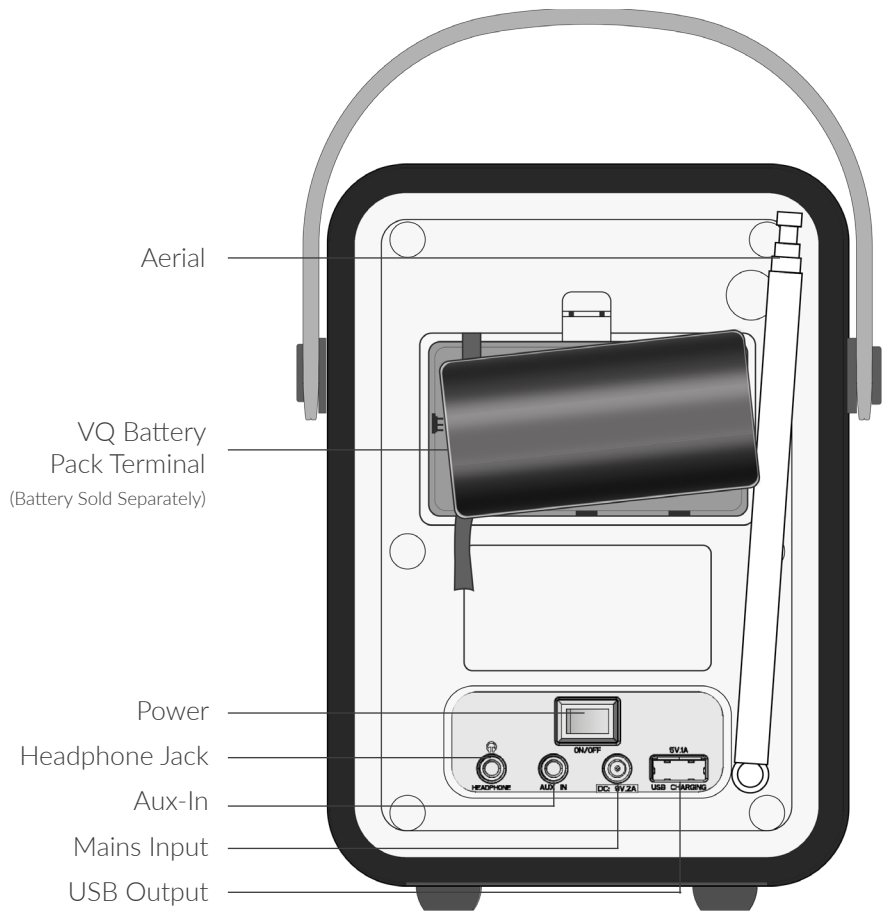 Alarm



# Power On/Off Monty

1. Connect Monty to the mains with the supplied plug and Switch the Rocker Switch on the back of the Monty to **ON**.
2. The Clock and Date remain visible for your convenience when Monty is connected to mains power.
3. Turn on your Monty by pressing .
4. Put your Monty into Standby by pressing .
5. You may also wish to insert the compatible VQ rechargeable battery pack (sold separately).
6. If using your Monty on battery – the screen will fade and will not display the date and time.

1.



2.



3.



4.



# DAB Radio

1. The first time you turn Monty on a full scan will automatically find all available digital radio stations.
2. If you wish to re-scan for available stations, press **Menu** and navigate to “Full Scan” using the **< & >** buttons. Press **OK** button to start a scan.
3. Once your available stations are found you can navigate between them by pressing **< & >** buttons.

1.



2.



3.



# FM Radio

1. Press **Mode** to select FM Radio.
2. To re-scan, Press **Menu**, “Scan setting” will display on the screen, Press the **OK** Button, use the **< & >** buttons to select Scan All Stations or Strong Stations, press the **OK** button to start the scan.
3. To tune to your preferred station, use the **< & >** buttons, short-press for fine tuning or long press for auto-scan.

1.





2.



# Bluetooth

You can listen to any content on your phone, tablet or other smart device via Bluetooth.

1. Press **Mode** to select Bluetooth.
2. Whilst “Pairing” is shown on the screen scan for Bluetooth devices on your smart device.
3. Connect to “Monty” and listen to any of your own content.

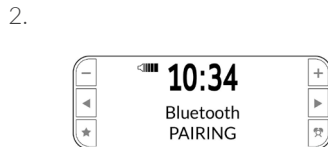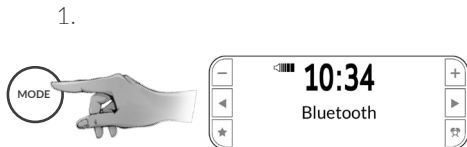


# Saving Presets DAB/FM

You can save separate presets for Digital and FM Radio, with 60 in total.

1. Tune into the station that you wish to save as a preset - **Press and hold** the **★** for approx. 2 seconds until **Preset Store** displays on the screen.
2. Use **< & >** buttons to pick an available preset.
3. Press the **OK** button to confirm and save the preset.

 You can either save to an empty preset or simply save over a previously stored station to replace it.

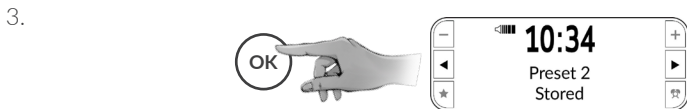

# To Recall a Preset

1. To listen to a saved preset - Press (do not hold) ★, **Preset Recall** will display on the screen.
2. Use < & > buttons to select your preset.
3. Press the **OK** button to listen to the preset.

1.




2.




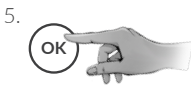 
3.



# Setting an Alarm

 
To set an alarm, press  (1x for Alarm 1 or 2x for Alarm 2) – then all navigation is completed with **< & >** buttons, use **OK** button to select and move to the next step.

1. Press  Button (1x for Alarm 1 or 2x for Alarm 2).
2. Use **< & >** buttons to select alarm 1 or alarm 2.
3. Press the **OK** button to progress.
4. Use **< & >** buttons to turn alarm on/off.
5. Press the **OK** button to progress.
6. Use **< & >** buttons to set the hour of alarm.
7. Press the **OK** button to confirm.




## Setting an Alarm (cont.)

- Use **< & >** buttons to set the minutes of the alarm.
- Press **OK** button to confirm.
- Use **< & >** buttons to select duration of the alarm.
- Press **OK** button to confirm.
- Use **< & >** buttons to choose type of alarm – DAB, FM, Buzzer
- Press **OK** button to confirm.

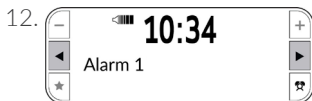


## Setting an Alarm (cont.)

 - Use **< & >** buttons to select your alarm preference – Daily, Once, Weekends, Weekdays.
- Press the **OK** button to confirm.
- Use **< & >** buttons to choose volume of alarm.
- Press **OK** button to confirm.
- Use **< & >** buttons to choose your snooze time.
- Press the **OK** button to confirm.
- Your Monty will display **Alarm Saved** and an Alarm Icon will display on the screen.

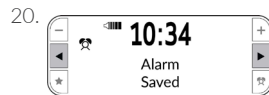


# Snooze or End a Sounding Alarm

Whilst the alarm is sounding press the  button or press the  button twice or the  button once to cancel the alarm.

Whilst the alarm is sounding, press the  button to snooze the alarm.


You can also snooze the alarm by pressing **OK, MODE, MENU, PLAY/PAUSE, < & >** buttons

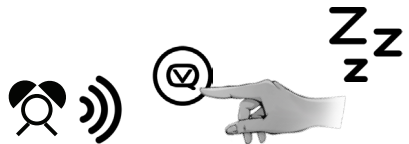

# EQ Setup




You can tailor the acoustics of Monty with the EQ Setup.

1. Turn the radio on so its playing.
2. Press **Menu**.
3. Use **< & >** buttons to find **Systems**.
4. Press **OK** button to confirm.
5. Use the **< & >** buttons to navigate to **Equaliser**.
6. Press **OK** button to confirm.
7. Use the **< & >** buttons to choose from a range of music genre presets or enter the MyEQ menu.

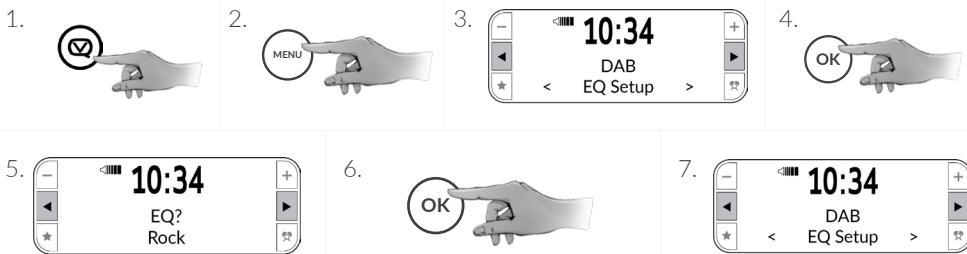

## EQ Setup (cont.)

   
- Press **OK** button to confirm.
- In MyEQ Menu - Use the **< & >** buttons to select either Bass or Treble.
- Press **OK** button to confirm.
- Use **< & >** buttons to adjust Bass and Treble.
- Once you're happy with the MyEQ settings
- Press the **OK** button to confirm.
- To return to the main radio screen press **Menu**.

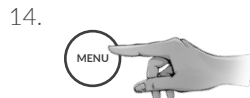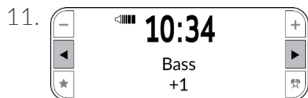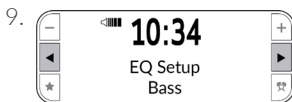

# Clock Settings

The clock display used in standby mode and when the radio is in use can be set to 12 or 24 hour format.

 1. Turn the radio on so its playing.
2. Press **Menu**.
3. Use the **< & >** buttons to navigate to **Systems**.
4. Press **OK** button to confirm.
5. Use the **< & >** buttons to navigate to Time.
6. Press **OK** button to confirm.

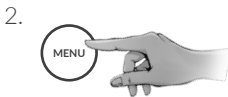

## Clock Settings (cont.)

- Use the **< & >** buttons to select Set 12/24 hour.
- Press **OK** button to confirm.
- Use the **< & >** buttons to select 12 Hour or 24 Hour.
- Press **OK** button to confirm.
- To return to the main radio screen press **Menu**.

7.



8.



9.



10.



11.



# Setting the Clock and Date manually

 
The Monty will set its clock automatically using DAB radio signal, if no DAB signal is available then you can change the date and time manually.

1. Turn the radio on so its playing.
2. Press **Menu**.
3. Use the **< & >** buttons to find System.
4. Press **OK** button to confirm.
5. Use the **< & >** buttons to navigate to Time.
6. Press **OK** button to confirm.



## Setting the Clock and Date manually (cont)

7. Use the **< & >** buttons to select Set Time/Date
8. Press **OK** button to confirm.
9. Use **< & >** buttons to select date and time, pressing the **OK** button in between Year, Month, Day, Hour and Minutes.
10. To return to the main radio screen press **Menu**.

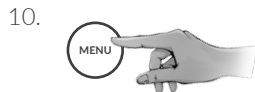

## Setting the Clock and Date manually (cont)

To change back to the DAB radio clock please follow the instructions below:

1. Turn the radio on so its playing.
2. Press **Menu**.
3. Use the **< & >** buttons to find System.
4. Press **OK** button to confirm.
5. Use the **< & >** buttons to navigate to Time.

1.



2.



3.



4.



5.



## Setting the Clock and Date manually (cont)

6. Press **OK** button to confirm.
7. Use the **< & >** buttons to select Auto Update.
8. Press **OK** button to confirm.
9. Use the **< & >** buttons to select Auto Update from Any, FM or DAB.
10. Press **OK** button to confirm.
11. To return to the main radio screen press **Menu**.

6.



7.



8.



9.



10.




 

11.



# Sleep

Sleep timer lets you decide how long you want to listen to the radio for and can be set between 15 and 90 minutes.

1. Turn the radio on so its playing.
2. Press **Menu**.
3. Use the **< & >** buttons to find Systems.
4. Press **OK** button to confirm.
5. Use the **< & >** buttons to navigate to Sleep.

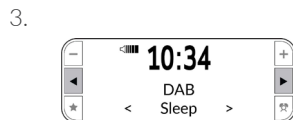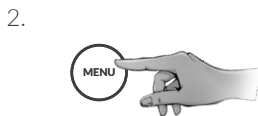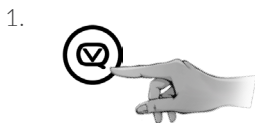

## Sleep (cont)

6. Press **OK** button to confirm.
7. Use the **< & >** buttons to select duration; 15, 30, 45, 60 or 90 minutes.
8. Press **OK** button to confirm.
9. To return to the main radio screen press **Menu**.

The screen displays a countdown, showing how many minutes are left on the timer before turning off e.g. S30 when 30 minutes has been selected.

6.



7.



8.



9.



# To Cancel the Sleep Timer

1. Turn the radio on so its playing.
2. Press **Menu**.
3. Use the **< & >** buttons to find Systems.
4. Press the **OK** button to confirm.
5. Use the **< & >** buttons to select **Off**.
6. Press **OK** button to confirm.

 
1.



2.




3.

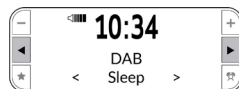

4.



 5.

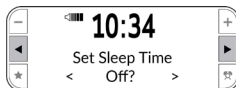

6.



## To Cancel the Sleep Timer (cont)

7. Use the **< & >** buttons to select Off.
8. Press **OK** button to confirm.
9. To return to the main radio screen press **Menu**.

7.



8.



9.



# Screen Brightness / Backlight

Monty has 3 screen brightness settings – Low, Medium and High to adjust to your personal choice.

1. Turn the radio on so its playing.
2. Press **Menu**.
3. Use the **< & >** buttons to find Systems.
4. Press **OK** button to confirm.
5. Use the **< & >** buttons to navigate to Backlight.
6. Press **OK** button to confirm.

1.



2.



 
3.



4.



5.

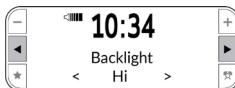

6.



## Screen Brightness / Backlight (cont)

 
7. Use the **< & >** buttons to navigate to On level
8. Press **OK** button to confirm.
9. Use the **< & >** buttons to select your desired brightness setting – Low, Medium or High
10. Press **OK** button to confirm.
11. To return to the main radio screen press **Menu**.

Your Monty display can dim after a certain period of time set, it will brighten up again when a button is pressed.

8.



9.

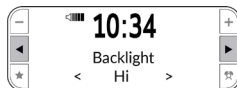

10.



## Screen Brightness / Backlight (cont)

You can choose the time that your Monty display Dims or keep it bright at all times

1. Turn the radio on so its playing.
2. Press **Menu**
3. Use **< & >** buttons to find Systems.
4. Press **OK** button to confirm.
5. Use the **< & >** buttons to navigate to Backlight.
6. Press **OK** button to confirm.

## Screen Brightness / Backlight (cont)

7. Use the **< & >** buttons to navigate to Timeout
8. Press **OK** button to confirm.
9. Use the **< & >** buttons to select your screen dim time - between always on to 10, 20, 30, 45, 60, 90, 120,180 seconds.
10. Press **OK** button to confirm.
11. To return to the main radio screen press **Menu**.

## Screen Brightness / Backlight (cont)

And you can choose what level the screen will dim to – Low, Medium or High

1. Turn the radio on so its playing.
2. Press **Menu**
3. Use **< & >** buttons to find Systems.
4. Press **OK** button to confirm.
5. Use the **< & >** buttons to navigate to Backlight.
6. Press **OK** button to confirm.

## Screen Brightness / Backlight (cont)

7. Use the **< & >** buttons to navigate to Dim level.
8. Press **OK** button to confirm.
9. Use the **< & >** buttons to select your desired brightness setting – Low, Medium or High
10. Press **OK** button to confirm.
11. To return to the main radio screen press **Menu**.

# Language

You may wish to change the language on your Monty.

1. Turn the radio on so its playing.
2. Press **Menu**
3. Use **< & >** buttons to find the System.
4. Press **OK** button.
5. Use the **< & >** buttons to navigate to Language.

1.



2.



 
3.



4.



5.

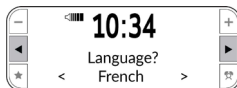

## Language (cont)

6. Press the OK button to confirm.
7. Use the **< & >** buttons to select to choose between language options.
8. Press OK button to confirm.
9. To return to the main radio screen press **Menu**.

# Changing the Display Information Screen

## Changing the DAB display information

If the Monty is in DAB mode, press and hold the **OK** button to select different information screens to show on the display, continue pressing and holding in short bursts to cycle through different information screens such as Power Type (battery charge %), Signal Strength, Program Type, Station Name/Region, Frequency, Signal Error, Data Rate, Date and Radio Text

Please note when you change channel or turn the radio off the screen will revert to Radio Text.


## Changing the FM display information

If the Monty is in FM mode, press and hold the **OK** button to select different information screens to show on the display, continue pressing and holding in short bursts to cycle through different information screens such as Power Type (battery charge %), Program Type, Frequency, Stereo/Mono, Signal Strength, Date and Radio Text

Please note when you turn the radio off the screen will revert to Radio Text.

## Troubleshooting

Make sure that your Monty is connected to the mains power.

To use the features in the Menu button, your radio needs to be turned on by pressing the  button.

Make sure that you have connected the cable to the correct power socket on the rear of your Monty. The power socket is on the right next to the USB socket.

 
 
If using away from mains – has the Monty battery run out of battery power? Try recharging.

If you experience a fault with the radio, you may be advised to complete a factory reset, this will clear the memory of the radio and restart the product.

# Factory Reset

**Please Note:** - After a factory reset your preset stations will need to be re-saved.

1. Turn the radio on so its playing.
2. Press **Menu**.
3. Use **< & >** buttons to find Systems.
4. Press **OK** button to confirm.
5. Use the **< & >** buttons to navigate to **Factory Reset**.

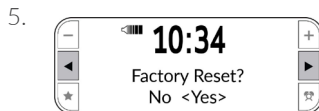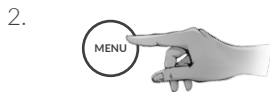

## Factory Reset (cont)

6. Press **OK** button to confirm.
7. Use the **< & >** buttons to change to Yes.
8. Press **OK** button to confirm.
9. The radio will then reboot - all settings will be wiped, a first-time scan will be performed.

6.



 
7.



8.



9.

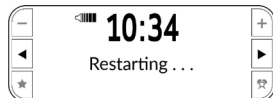

## Contact Us / Warranty

**Still not working?** Please contact our support team it might be something as simple as a replacement plug.

**Need more Help?** If you need a little more help with the set-up or anything related to your Monty, don't worry we are ready to answer your questions or do what we can to help. Please do get in touch.

Email: [support@MyVQ.com](mailto:support@MyVQ.com). Website: [www.MyVQ.com](http://www.MyVQ.com)

### CE & WEE

Waste electrical and electronic products should not be disposed of with household waste. Where facilities exist to do so, please recycle. Check with your Local Authority for further recycling advice.





Need Help?



[www.MyVQ.com](http://www.MyVQ.com)



[support@myvq.com](mailto:support@myvq.com)