

WOLSTEAD[®]

Entertainer Party Grill

Owner's Manual



IMPORTANT:

Read and follow all warnings and instructions before assembly and use.
Keep this manual for future reference.

SPECIFICATIONS

Model: 696236

Voltage: 220-240V ~ 50/60Hz

Power: 1200-1400W

Cooking area: 41.5 x 21 cm

Mini pan area: 8 x 8 cm

Dimensions: 48 x 37.5 x 14.5 cm (with mini pans)

Weight: 2.7 kg

PRODUCT FEATURES

Round up your crew and get sizzling with this two-tiered tabletop party grill! The top tier features a reversible cooking plate, perfect for grilling, searing, or flipping pancakes, while the lower level holds eight mini non-stick pans ideal for melting cheese, warming nibbles, or serving up personalised creations. Whether it's brunch, a backyard barbeque, or a cosy raclette night, this grill brings the fun (and the flavour) to every occasion.

- Reversible cooking plate features a flat griddle and a grill plate
- Eight mini non-stick pans perfect for keeping food warm or melting cheese
- Sleek stainless steel housing with cool touch handles
- Cooking plate and mini pans feature Ceramax™ non-stick ceramic coating for easy food release and cleaning
- Plate measures 41.5 × 21 × 1.5cm

CERAMAX™ NON-STICK COATING

The cooking plates feature a hard, durable, ceramic non-stick coating called Ceramax™ which is a healthier alternative to traditional non-stick. Ceramax™ is thermo-resistant, easy to clean, and free from lead, cadmium, PTFE, PFOA and PFAS.


SAFETY PRECAUTIONS

When using this electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions before using.
2. Ensure the voltage is compliant with the voltage range stated on the rating label.
3. If the electrical cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.

4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is intended to be used in household and similar applications such as:
 - A. Staff kitchen areas in shops, offices and other working environments.
 - B. Farmhouses.
 - C. By clients in hotels, motels and other residential type environments.
 - D. By bed and breakfast type environments.
7. To protect against electric shock, do not place the cord, plug or the base of the appliance in water or any other liquid.
8. Do not use attachments or accessories which are not recommended by the manufacturer.
9. The product is only suitable for the purpose indicated in this manual. Do not use this product or any part for other purposes. If it is operated incorrectly, it may cause injury.
10. Always use the appliance on a firm and stable surface and keep it 30cm from other objects and the wall to ensure heat is easily released.
11. Do not place the appliance on or near a hot surface, including a gas or electric stove, or in a heated oven.
12. Do not move the appliance when in use.
13. Not suitable for use with external timers or remote controls.
14. For indoor household use only.
15. Do not place anything on top of the appliance while in operation or when storing.
16. Appliance surfaces can get hot during and after operation. To prevent burns or personal injury always use heat resistant oven mitts or gloves when opening the lid of the appliance.
17. Allow the appliance to cool before cleaning, disassembling and storing.

GET TO KNOW THE WOLSTEAD ENTERTAINER PARTY GRILL

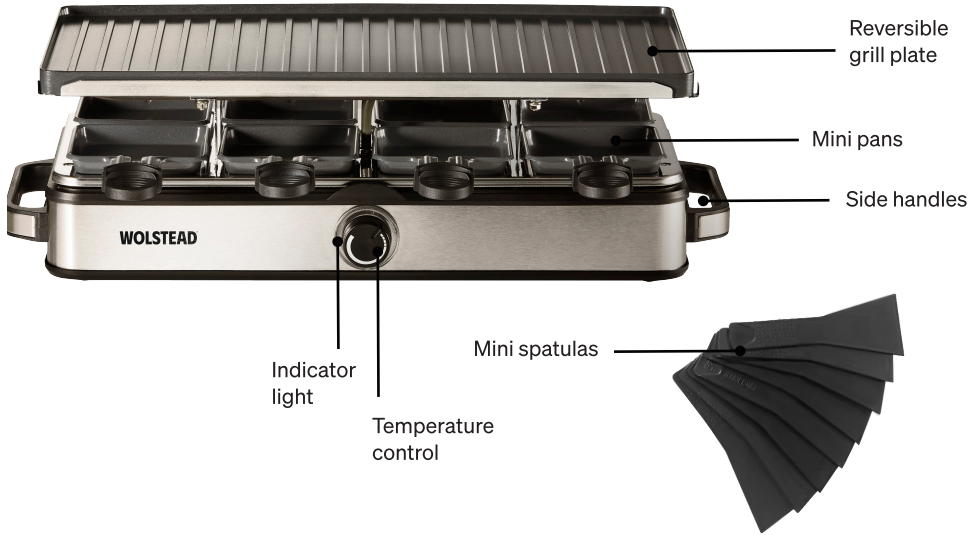

OPERATING INSTRUCTIONS

Before first use

1. Unpack the appliance: Remove all packaging materials. Take out the included accessories and instruction manual.
2. Set up properly: Place the appliance on a clean, stable, and level surface.
3. Clean components: Wash all parts that come into contact with food using warm, soapy water.
4. Rinse and dry thoroughly.
5. Initial burn-in: Plug the unit into a suitable mains socket. The blue power indicator will illuminate.
6. Turn the control knob to the maximum setting.
7. Allow the appliance to run for 20 minutes in a well ventilated area.
8. Some smoke and odor may be present, this is normal as manufacturing residues burn off.
9. Cool down: After the burn-in cycle, unplug the appliance and let it cool completely before use.

To start cooking

1. Choose your cooking surface: Select either the smooth or ribbed grill plate, depending on your preference.
2. Preheat: Plug in the appliance and allow it to preheat for approximately 10 minutes.
3. Add oil and start cooking: Lightly oil the surface. Place your food on the grill plate and/or in the mini pans. Use the provided spatulas for turning and serving. Important: Never use metal utensils, as they can damage the non-stick coating.
4. After cooking: Unplug the appliance when finished. Always use the side handles when moving the unit to avoid burns or spills.

CLEANING AND MAINTENANCE

Clean the appliance thoroughly after each use. Always allow it to cool down before cleaning.

1. Unplug and let the appliance cool completely.
2. Wipe the outside of the appliance clean with a damp cloth. Do not submerge in water or put it in the dishwasher.
3. Wash the grill plate, mini pans, and spatulas with warm soapy water.
4. **WARNING:** Not dishwasher safe. Do not use abrasives or metal utensils.
5. Dry all parts thoroughly.
6. Store in a cool, dry, ventilated place.

WARRANTY

Get in touch with Customer Service

If you experience any issues with your Wolstead Entertainer Party Grill, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com, au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday. Alternatively you can use the Live Chat function on our website by visiting www.kitchenwarehouse.com.au/contact-us

90 day money back guarantee

We promise you a full refund within 90 days if your Wolstead product does not fulfil your expectations. This guarantee applies to qualified purchases of all Wolstead branded products from participating stockists online and in-store from eligible delivery locations. The qualified product must be returned within 90 days from the date of purchase. We shall issue a full refund when the customer presents proof of purchase. We shall issue a store credit when proof of purchase is unavailable. The product packaging is not required to avail of the refund. The amount refunded will be the price of the products in the currency shown on the proof of purchase.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the 12 month warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

WOLSTEAD

Distributed by Kitchen Warehouse.

Wolstead is a registered trademark of Kitchen Warehouse Pty Ltd. The printed material appearing in this document and related packaging is protected by copyright.

Kitchen Warehouse Pty Ltd
1 Pensioner Guard Road
North Fremantle, WA, 6159
www.kitchenwarehouse.com.au
1800 332 934
customerservice@kitchenwarehouse.com.au