

# WOLSTEAD

## Instant Electric Toaster

Owner's Manual



### **IMPORTANT:**

Read and follow all warnings and instructions before assembly and use.  
Keep this manual for future reference.

**WOLSTEAD** Instant Electric Toaster

## SPECIFICATIONS

- Model number: OP-828
- Voltage: 220-240V~ 50/60Hz
- Wattage: 900W

## PRODUCT FEATURES

- Two-slice toaster with seven adjustable heat settings for custom browning
- Features a reheat and defrost mode
- Removable crumb tray
- High rise lift makes it easy to remove bread

## SAFETY PRECAUTIONS

When using this electrical appliance, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury, including the following:

1. Read all instructions before using.
2. Ensure the voltage is compliant with the voltage range stated on the rating label.
3. If the electrical cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is intended to be used in household and similar applications such as:
  - a. Staff kitchen areas in shops, offices and other working environments.
  - b. Farmhouses.
  - c. By clients in hotels, motels and other residential type environments.
  - d. By bed and breakfast type environments.
7. To protect against risk of electric shock, do not place cord, plug or the base of the appliance in water or any other liquid.
8. Do not use attachments or accessories which are not recommended by the manufacturer.
9. To avoid danger, the product is only suitable for the purpose indicated in this manual. Do not use this product or any part for other purposes. If it is operated incorrectly, it may cause injury.
10. Always use the appliance on a firm and stable surface. Keep the appliance 10cm from other objects and the wall to ensure heat is easily released.
11. Don't connect the appliance to a timer or remote control system.
12. Don't use the appliance near or below combustible materials (e.g. curtains).

13. The surfaces of the appliance will get hot. 
14. Remove and empty the crumb tray regularly. Wipe with a damp cloth, dry, then replace it in the toaster.
15. Don't toast or reheat buttered, torn, or misshapen bread.
16. If bread gets jammed, unplug the toaster, let it cool, and carefully remove the bread.
17. Never cover the appliance or put anything on top of it.

## GET TO KNOW THE WOLSTEAD INSTANT ELECTRIC TOASTER



## BEFORE FIRST USE

1. Set the browning level to maximum (7) and do a test run before cooking for the first time. This will cure the elements.
2. During the test run, the toaster might give off a slight odour, this is normal and will cease after the first few uses.

## OPERATING INSTRUCTIONS

1. Sit the toaster upright on a firm, level, heat resistant surface and plug it into power.
2. Turn the browning control to the required setting (1 = low, 7 = high).
3. Put bread into the toasting slots (maximum thickness 27mm).
4. Press the lever down fully. Note that it will not lock down unless the toaster is connected to power.
5. The cancel light will glow, and the elements will heat up.
6. When it's done, the toast will pop up.
7. To stop toasting, press the cancel button.
8. To defrost, leave the browning level at your favoured setting, insert the frozen bread, lower the lever, then press the defrost button.
9. The defrost light will glow, and the toasting time will be altered automatically to give the same degree of browning you get with unfrozen bread.
10. To reheat, leave the browning control at your favoured setting, insert the bread, lower the lever, then press the reheat button.
11. The reheat light will glow, and the toast will be given a short burst of heat.
12. Never reheat buttered, torn or misshapen bread.

## CLEANING AND MAINTENANCE

1. Unplug the toaster and let it cool.
2. Wipe outer surfaces with a damp cloth.
3. Never immerse the toaster in water or try to clean the inside of the toasting slots.
4. Empty the crumb tray and wipe with a damp cloth on a monthly basis.

# WARRANTY

## Get in touch with Customer Service

If you experience any issues with your Wolstead Instant Electric Toaster, get in touch with our Customer Service team by email at [customerservice@kitchenwarehouse.com](mailto:customerservice@kitchenwarehouse.com), au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday. Alternatively you can use the Live Chat function on our website by visiting [www.kitchenwarehouse.com.au/contact-us](http://www.kitchenwarehouse.com.au/contact-us)

## 90 day money back guarantee

We promise you a full refund within 90 days if your Wolstead product does not fulfil your expectations. This guarantee applies to qualified purchases of all Wolstead branded products from participating stockists online and in-store from eligible delivery locations. The qualified product must be returned within 90 days from the date of purchase. We shall issue a full refund when the customer presents proof of purchase. We shall issue a store credit when proof of purchase is unavailable. The product packaging is not required to avail of the refund. The amount refunded will be the price of the products in the currency shown on the proof of purchase.

## Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

## How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

## Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

## Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

## Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the 12 month warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

# WOLSTEAD

Distributed by Kitchen Warehouse.

Wolstead is a registered trademark of Kitchen Warehouse Pty Ltd. The printed material appearing in this document and related packaging is protected by copyright.

Kitchen Warehouse Pty Ltd  
1 Pensioner Guard Road  
North Fremantle, WA, 6159  
[www.kitchenwarehouse.com.au](http://www.kitchenwarehouse.com.au)  
1800 332 934  
[customerservice@kitchenwarehouse.com.au](mailto:customerservice@kitchenwarehouse.com.au)