

WOLSTEAD

Palette

Slicer and Shredder Attachment Set

Owner's Manual



IMPORTANT:

Read and follow all warnings and instructions before assembly and use.
Keep this manual for future reference.

SAFETY PRECAUTIONS

To ensure safe use of the Wolstead Palette Slicer and Shredder Attachment Set follow these safety precautions:

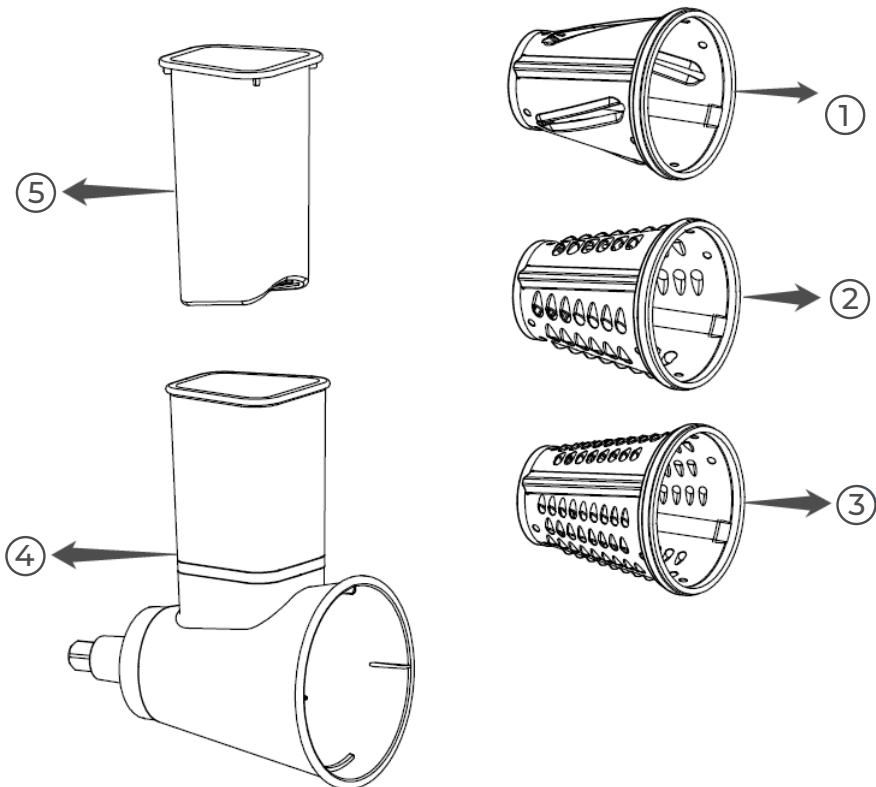 
1. To avoid accidental injury, do not touch the rotating blade during operation and do not move the product or touch the moving parts.
2. To avoid damaging the set do not allow metal utensils or objects to come into contact with the attachments.
3. When pushing food, please use the included food pusher and do not use any items other than the pusher to push food through the feeder.
4. Do not leave the product unattended when in use.
5. Always stop the stand mixer and turn it off before attempting to install or disassemble the slicer and shredder attachment.
6. If any parts of the product are damaged, stop using the product immediately to avoid injury.
7. When using this product, do not wear ties, scarves, long necklaces, or loose accessories or clothing. Long hair should be secured with a hair clip to avoid getting caught in the product and causing injury.
8. Do not put hard foods like nuts into the slicer and shredder, as it may cause severe damage to the product.
9. Do not let this product run idle on the stand mixer for more than 3 minutes.
10. The blades of this product are very sharp. Please handle with care when removing accessories and during cleaning.
11. This slicer and shredder attachment set is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the set by a person responsible for their safety.
12. Children should be supervised to ensure that they do not play with the attachments.
13. If the product jams or exhibits other abnormal behavior during use with the stand mixer, immediately turn off the power, unplug the power plug, and clean the attachments before continuing use.
14. After using the attachments, hand wash the parts that come into contact with food to avoid odour caused by residual substances over time.
15. It is recommended that the product work continuously for 4 to 5 minutes and rest for 15 minutes, which is beneficial to extend the machine's life and prevent potential safety hazards.

GET TO KNOW THE WOLSTEAD PALETTE SLICER AND SHREDDER ATTACHMENT SET

Note: Due to variations in product appearance, the provided product illustration is for reference only. Please refer to the actual product in the packaging.

Slicer and shredder components

1. Slicing blade
2. Coarse shredding blade
3. Fine shredding blade
4. Shredding adapter
5. Food pusher



OPERATING INSTRUCTIONS

Speed settings chart





Note: Do not use hard foods such as nuts with this product as they will damage the blades.


Attachment	Stand mixer speed	Recommended use
Slicing blade	Speed 4	Slicing ingredients including: Carrots, potatoes, cucumber, zucchini, cabbage
Coarse shredding blade	Speed 4	Shred ingredients including: cheese, potatoes, zucchini
Fine shredding blade	Speed 4	Shred ingredients into fine strips including: cheese, potatoes, zucchini

Before first use


Before first use, remove the product packaging and thoroughly clean the product surfaces that come into contact with food. Hand wash only, do not wash the attachments in the dishwasher.

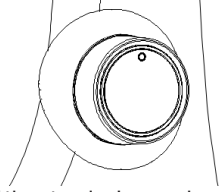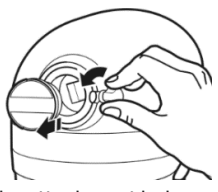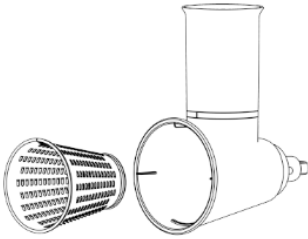   Installation instructions

 <p>1. Turn off the stand mixer and unplug it.</p>	 <p>2. Remove the attachment hub cover.</p>
 <p>3. Place the desired attachment into the shredding adapter.</p>	 <p>4. Ensure each attachment aligns to the pentagon inside the adapter.</p>

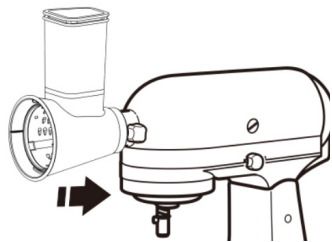 


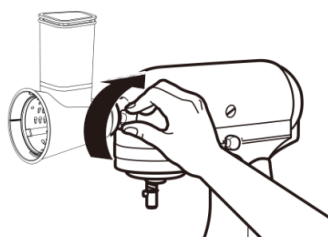 5. Insert the attachment shaft housing into the attachment hub of the stand mixer, ensuring the shaft fits perfectly into the square hole of the interface. Rotate the attachment back and forth as needed to make it fit. When the attachment is correctly placed, the pin on the attachment housing fits into the notch of the hub rim.




6. Tighten the stand mixer attachment hub knob until the attachment is completely secured to the stand mixer.

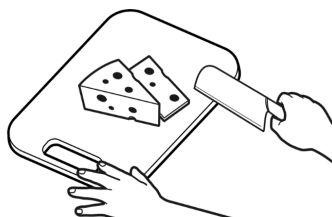 Using the slicer and shredder attachments



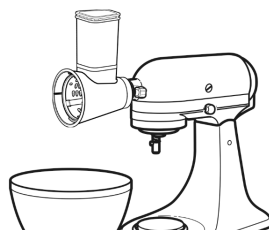 
1. Prepare ingredients: Wash and peel then cut into sizes that can pass through the feeding tube.



2. Place a large bowl under the mixer to catch processed ingredients.







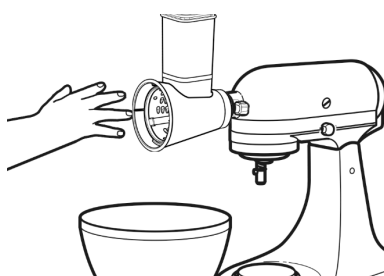 3. Feed the prepared ingredients into the shredding adapter and push them through slowly with the pusher.



4. If there is a blockage of ingredients in the adapter, do not attempt to remove this while the stand mixer is running. Turn the stand mixer off before attempting to clear the blockage.

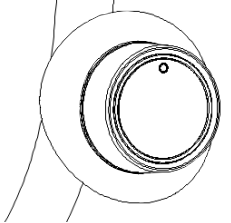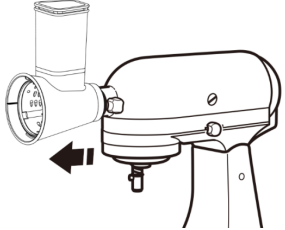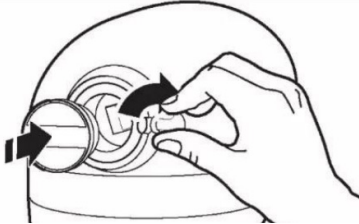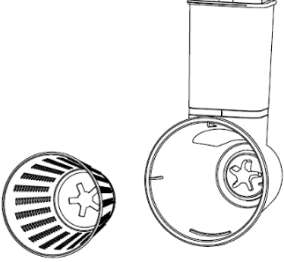    Disassembling the slicer and shredder attachments

 <p>1. Turn off the stand mixer and unplug it.</p>	 <p>2. Remove the shredding adaptor from the attachment hub on the stand mixer.</p>
 <p>3. Replace the attachment hub cover on the stand mixer.</p>	 <p>4. To remove the blade from the shredding adaptor, reach into the adaptor, lift the blade upwards, gently shake the shredding adaptor to loosen the blade, then rotate it slightly counterclockwise and pull it out. Clean any remaining food residue and dry before storing.</p>

CLEANING AND MAINTENANCE

1. Do not use metal objects (knives or any other sharp objects) to clean the attachments.
2. Do not use dish cloths or any other fabrics to clean the blades as they will catch in the blades.
3. Do not leave this product exposed to direct sunlight or high temperatures for an extended period.
4. Hand wash the blade attachments in warm soapy water, rinse clean and dry thoroughly before storing.
5. The blades are extremely sharp, please take protective measures when cleaning, such as wearing protective gloves.
6. If vegetables are still present on the inner wall of the shredding adaptor after use, please wipe it clean with edible oil and then rinse with water (use peanut oil to clean the pigment on the inner wall of the product).
7. Store the blades in a place safe from children to avoid accidents.

TROUBLESHOOTING

To ensure safe use of the Wolstead Palette Slicer and Shredder Attachment Set follow these safety precautions:

1. Is the stand mixer plugged in?
2. Is the fuse in the stand mixer's circuit working properly? If using a circuit breaker, ensure the circuit is closed.
3. Turn off the stand mixer for 10 to 15 seconds, then turn it back on. If the stand mixer still does not start, let it cool for 30 minutes before turning it back on.
4. If the slicer and shredder attachment stops working after running for a period, please stop the stand mixer and check if the tube is damaged.
5. Ensure you are using the appropriate speed for the stand mixer. Refer to the 'speed settings chart' above.
6. If this product runs normally but the food output is slow or no food is coming out, please stop the stand mixer, disassemble the attachment, and clear any blockages.
7. If the tube wobbles inside the body while the stand mixer is running, please stop the stand mixer, disassemble this product, clean any blockages, and confirm if it is installed correctly.

WARRANTY

Get in touch with Customer Service

If you experience any issues with your Wolstead Palette Slicer and Shredder Attachment Set, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com.au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday. Alternatively you can use the Live Chat function on our website by visiting www.kitchenwarehouse.com.au/contact-us

90 day money back guarantee

We promise you a full refund within 90 days if your Wolstead product does not fulfil your expectations. This guarantee applies to qualified purchases of all Wolstead branded products from participating stockists online and in-store from eligible delivery locations. The qualified product must be returned within 90 days from the date of purchase. We shall issue a full refund when the customer presents proof of purchase. We shall issue a store credit when proof of purchase is unavailable. The product packaging is not required to avail of the refund. The amount refunded will be the price of the products in the currency shown on the proof of purchase.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the 12 month warranty period. The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

WARRANTY

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed.

This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee.

The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

WOLSTEAD

Distributed by Kitchen Warehouse.

Wolstead is a registered trademark of Kitchen Warehouse Pty Ltd. The printed material appearing in this document and related packaging is protected by copyright.

Kitchen Warehouse Pty Ltd
1 Pensioner Guard Road
North Fremantle, WA, 6159
www.kitchenwarehouse.com.au
1800 332 934
customerservice@kitchenwarehouse.com.au