

WOLSTEAD®

Owner's Manual



PULSE

Stick Blender 1200W Mega Pack

IMPORTANT

Read and follow all warnings and instructions before assembly and use.
Keep this manual for future reference.

Specifications

- Model: 710272
- Voltage: 220-240V ~ 50/60Hz
- Power consumption: 1200W

Product features

This 1200W stainless steel stick blender delivers powerful, versatile performance for any kitchen. Its durable stainless steel shaft and titanium-plated blade ensure smooth, consistent results. With a mega pack full of seven handy accessories and attachments, it makes blending, chopping, mashing, grinding, beating and mixing fast and effortless.

- Blending shaft and blades are made from premium stainless steel
- Titanium-plated, stainless steel chopping blade stays sharper for longer, delivering exceptional durability and resistance to corrosion
- Ergonomic handle with five adjustable speeds plus turbo
- Mega pack includes seven handy accessories and attachments: beaker, whisk, chopping bowl, blending jug, beater, masher and grinding bowl
- Blending jug has large 1.25L capacity
- Calibrated 500mL chopping bowl and 800mL beaker make it easy to measure ingredients
- Stainless steel grinding bowl can grind nuts, spices, and more
- Beaker includes a silicone lid so you can prep and store in one container

Safety precautions

Please read these instructions carefully before using the appliance:

 
 
 
 
 
 
 
 
 
1. Read all instructions before using.
2. Ensure the voltage is compliant with the voltage range stated on the rating label.
3. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
5. Children should be supervised to ensure that they do not play with the appliance.
6. This appliance is intended to be used in household and similar applications such as:
 - A. Staff kitchen areas in shops, offices and other working environments.
 - B. Farmhouses.
 - C. By clients in hotels, motels and other residential type environments.
 - D. By bed and breakfast type environments.

7. Always disconnect the appliance from the power supply if unattended and before assembling, disassembling or cleaning.
8. Do not use attachments or accessories which are not recommended by the manufacturer.
9. The product is only suitable for the purpose indicated in this manual. Do not use this product or any part for other purposes. If it is operated incorrectly, it may cause injury.
10. Always use the appliance on a firm and stable surface and keep it 30cm from other objects and the wall to ensure heat is easily released.
11. Never plug the appliance into power unless fully assembled. Always unplug before disassembling or handling the blades.
12. The blades are extremely sharp. Handle with care.
13. Keep hands and utensils away from the container while blending.
14. Avoid contact with moving parts.
15. Do not let the cord or motor come into contact with hot surfaces.
16. Do not blend hot liquids.
17. The measuring beaker, chopping bowl, blending jug and grinding bowl are not microwave safe.
18. Use in short intervals (maximum of three cycles)
 - Soft food: maximum of one minute
 - Hard food: maximum 15 seconds per cycle
19. Never place the cutting blade on the base without securing the bowl properly.
20. Ensure the cover is securely locked before use.

Get to know the Wolstead Pulse Stick Blender Mega Pack

Product components


- | | | |
|----------------------------|------------------|----------------------|
| A. Variable speed control | F. Chopper lid | K. Beaker lid |
| B. Speed button i | G. S-Blade | L. Measuring beaker |
| C. Speed button ii (turbo) | H. Chopping bowl | M. Masher attachment |
| D. Release button | I. Whisk holder | N. Blending jug lid |
| E. Blender shaft | J. Whisk | O. Blade assembly |
| | | P. Double blade |

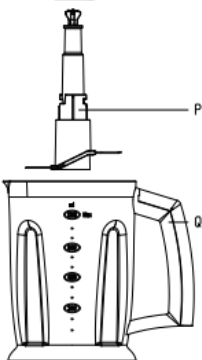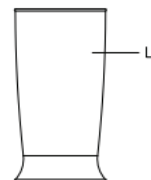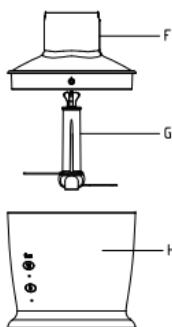

- Q. 1.25L blending jug
R. Double beater attachment
S. Grinding bowl lid
T. Grinding blade
U. Grinding bowl

Operating instructions

 Using the hand blender

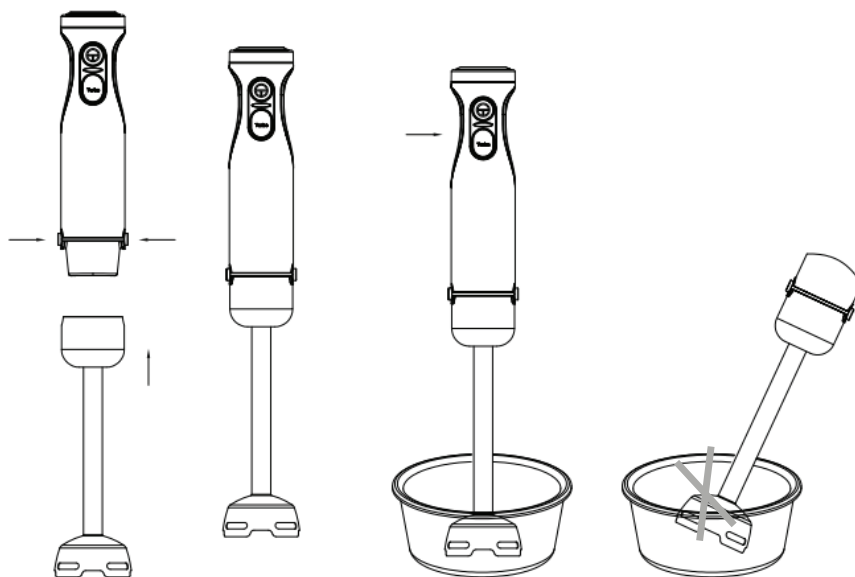


Perfect for preparing dips, sauces, soups, mayonnaise, baby food and milkshakes.

1. Insert the blender shaft into the motor unit until it clicks into place.
2. Place the blender in the vessel or beaker. Press the ON button or the TURBO button to begin blending.
3. Unplug the appliance. Press the release buttons to detach the blender stick.

You can use the hand blender in the included beaker or any other appropriate vessel.

 How to use the chopper

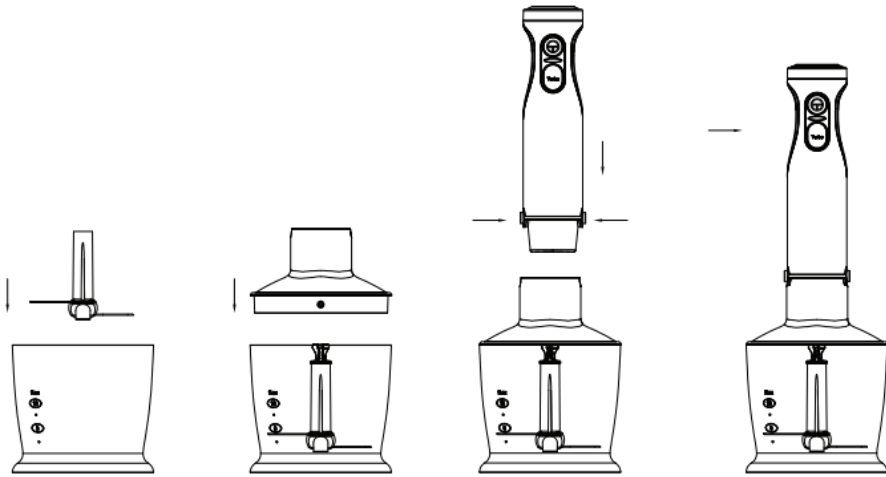

Suitable for chopping meat, cheese, onions, herbs, garlic, carrots, walnuts, almonds, prunes and more. Do NOT use the chopper for extremely hard items like ice cubes, nutmeg, coffee beans, or bones.

Before you start chopping:

1. Carefully remove the plastic cover from the blade. Caution: The blade is very sharp. Always handle it by the plastic part.
2. Place the blade onto the centre pin of the chopping bowl.
3. Add food to the chopping bowl.
4. Place the chopper lid on top.
5. Attach the motor unit securely.
6. Press the ON button or the TURBO button to begin chopping. Hold both the motor unit and the bowl for stability.
7. After use, unplug the appliance and press the release buttons to remove the motor unit.
8. Remove the chopper lid.
9. Carefully remove the blade.
10. Empty the chopped food.


Processing guide (500mL chopping bowl)

Food	Maximum amount	Operation time
Meat	250g	15 sec
Herbs	50g	10 sec
Nut, almonds	150g	15 sec
Cheese	100g	10 sec
Bread	80g	10 sec
Onions	200g	10 sec
Biscuits	150g	10 sec
Soft fruit	200g	10 sec

How to use the whisk

Great for whipping cream, beating egg whites, making sponge mixes, and ready-mix desserts.

 
1. Insert the whisk into the whisk holder. Attach the assembled whisk to the motor unit until it locks.
2. Place the whisk in a vessel or the included beaker. Press the ON button to begin mixing.
3. Unplug after use. Press the release button to detach the whisk attachment then remove the whisk.

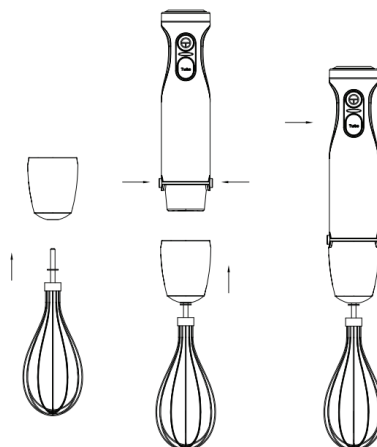


How to use the masher attachment

Suitable for preparing smooth mashed potatoes and vegetable purées.

 1. Insert the masher into the motor unit until it clicks into place.
2. Place cooked potatoes into a suitable bowl.
3. Insert the masher into the potatoes before pressing the ON button.
4. Begin at a low speed.
5. Gradually increase speed if required.
6. Unplug the appliance. Press the release buttons to detach the masher.

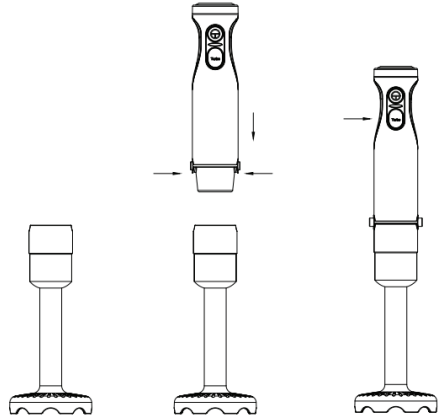

How to use the 1.25 litre blending jug

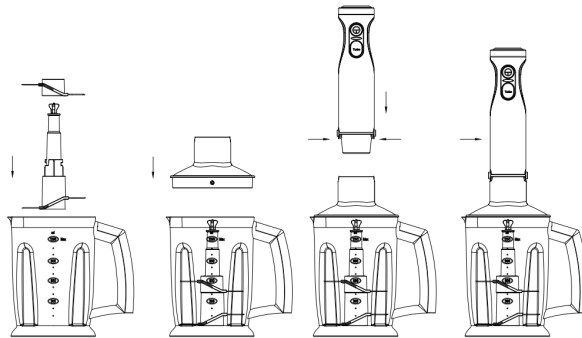 


Suitable for larger food preparation and chopping tasks.

1. Carefully remove the plastic cover from the blade. Caution: The blade is very sharp. Always handle it by the plastic part.
2. Place the blade onto the centre pin of the blending jug.
3. Add food to the blending jug.
4. Place the lid (N) on top.
5. Attach the motor unit securely.
6. Press the ON button or the TURBO button to begin chopping. Hold both the motor unit and the bowl for stability.
7. After use, unplug the appliance and press the release buttons to remove the motor unit.
8. Remove the lid.
9. Carefully remove the blade.
10. Empty the chopped food.

How to use the double beater attachment

Suitable for whipping cream, beating egg whites, mixing cake batter, dessert preparation.

 
1. Insert both beaters into the mixer head.
2. Attach the mixer head to the motor unit until locked.
3. Place ingredients into a mixing bowl or measuring beaker.
4. Insert the beaters into the ingredients before switching on.
5. Select the desired speed and mix until complete.
6. Unplug the appliance.
7. Press the release button.
8. Remove the mixer attachment and beaters.

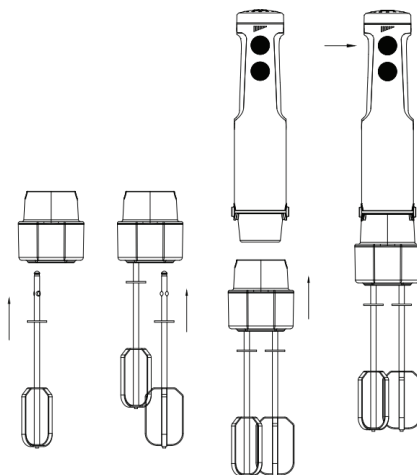

How to use the grinding bowl

Suitable for grinding coffee beans, peppercorns, dried herbs, spices, nuts, seeds, dried beans. Not suitable for grinding ice cubes, frozen ingredients or extremely hard materials.

 1. Install the grinding blade onto the bowl spindle.
2. Add ingredients without exceeding the maximum fill level.
3. Secure the grinding lid.
4. Attach the motor unit firmly.
5. Plug the appliance into a power outlet.
6. Press and hold the power button.
7. Process ingredients until the desired texture is achieved.
8. Unplug the appliance.
9. Remove the motor unit.
10. Remove the lid.
11. Carefully remove the grinding blade.
12. Clean all components immediately after use.

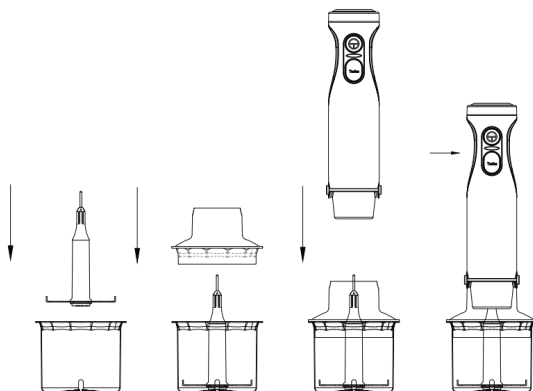

Important: Continuous grinding should not exceed 20 to 30 seconds. Allow the appliance to cool before restarting.

Operating time guidelines

To prevent overheating:

- Soft ingredients: Maximum one minute continuous operation
- Hard ingredients: Maximum 15 seconds continuous operation
- Allow the appliance to rest between cycles

Cleaning and maintenance

Motor unit

- Unplug before cleaning.
- Wipe the motor unit with a soft, damp cloth.
- Never immerse the motor unit in water or any other liquid.

Accessories

All detachable accessories may be washed in warm soapy water.

Dishwasher use

Most detachable accessories are dishwasher safe; however:

- Rinse blades immediately after processing salty foods.
- Avoid excessive detergent use.
- Some plastic components may discolor when processing strongly colored foods.

Blade safety: Always handle blades with extreme care during cleaning and storage.

Troubleshooting

Problem	Cause	Solution
Appliance does not start	Not plugged in	Check power connection
Attachment won't lock	Incorrect alignment	Reinstall attachment correctly
Excessive vibration	Too much food in bowl	Reduce ingredient quantity
Motor stops during use	Overheating protection activated	Allow appliance to cool before restarting
Poor chopping performance	Blade dull or overloaded	Reduce batch size and process in smaller portions

Get in touch with Customer Service

If you experience any issues with your Wolstead Pulse Stick Blender 1200W Mega Pack, get in touch with our Customer Service team by email at customerservice@kitchenwarehouse.com.au or by phone on 1800 332 934 between the hours of 9am and 7pm (AEST) Monday to Friday.

90 day money back guarantee

We promise you a full refund within 90 days if your Wolstead product does not fulfil your expectations. This guarantee applies to qualified purchases of all Wolstead branded products from participating stockists online and in-store from eligible delivery locations. The qualified product must be returned within 90 days from the date of purchase. We shall issue a full refund when the customer presents proof of purchase. We shall issue a store credit when proof of purchase is unavailable. The product packaging is not required to avail of the refund. The amount refunded will be the price of the products in the currency shown on the proof of purchase.

Warranty

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

The benefits of this warranty are in addition to any rights and remedies imposed by Australian State and Federal legislation that cannot be excluded. Nothing in this warranty excludes, restricts or modifies any State or Federal legislation applicable to the supply of goods which cannot be so excluded, restricted or modified.

Guarantee

We warrant that, subject to the exclusions and limitations below, the Product will be free from defects in materials and workmanship under normal domestic household use for the five year warranty period.

The warranty period commences on the date of sale by the original retailer to the original purchaser. The warranty applies only while the Product is owned by the original purchaser.

Use of the Product in a commercial capacity will void this warranty. If a defect appears in the Product before the end of the warranty period and we find the Product to be defective in materials or workmanship, we will replace the Product with a product comparable in quality and value.

We reserve the right to change or discontinue our product ranges at any time without notice and without liability.

Exclusions

This warranty does not apply if proper care and/or usage instructions are not followed. This warranty does not cover scratches, stains, discoloration or damage caused by misuse.

How to claim

If a fault/defect is identified cease using the Product immediately. To make a claim on this guarantee, take the Product, proof of purchase and full details of the alleged defect to any Kitchen Warehouse store.

Limitations

We make no express warranties or representations other than as set out in this guarantee. The replacement of the Product or the refund of the purchase price is the absolute limit of our liability under this guarantee.

WOLSTEAD®

Distributed by Kitchen Warehouse.

Wolstead is a registered trademark of Kitchen Warehouse Pty Ltd.

The printed material appearing in this document and related packaging is protected by copyright.

Illustrations in this manual are for reference only and may differ from the actual product.

Kitchen Warehouse Pty Ltd

1 Pensioner Guard Road

North Fremantle, WA, 6159

www.kitchenwarehouse.com.au

1800 332 934

customerservice@kitchenwarehouse.com.au