

# DAVIS & WADDELL


## essentials

Electric Kettle  
DES0583/DES0584/DES0585

Thank you for choosing the Davis & Waddell Electric Kettle. To ensure proper operation and to maintain the lifespan of your appliance, please read these instructions carefully before first use.

### Features and Parts:

1. Spout
2. Lid
3. Water Gauge
4. Body
5. Base
6. Handle
7. Switch
8. Thermometer

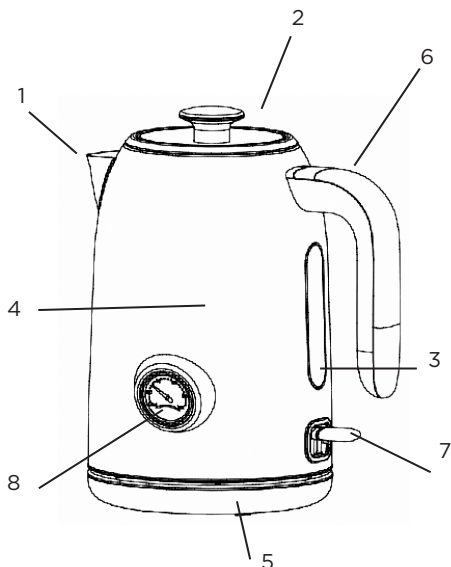

### Technical Data

Voltage : 220-240V-50/60Hz

Rated power : 1850-2200 W

Capacity : 1.7L

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed. These instructions should be saved for future reference.

Read and familiarize yourself with all operating instructions before using this Kettle.

- Before plugging your kettle into the mains, visually check that the kettle is intact and has not suffered any transit damage.
- Check that the voltage indicated on the data plate corresponds with that of the local network before connecting the appliance to the mains power supply.
- This kettle is only to be used with the stand provided.
- Close supervision is required when using this appliance near children.
- Never leave this appliance within reach of children.
- This appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision.
- Children being supervised are not to play with the appliance.
- Do not leave the appliance unattended during use.
- Avoid water spillage on the electrical connectors.
- Always use this appliance on a solid, dry and level, non-flammable surface.
- Do not use this appliance outdoors.
- It is imperative to unplug the power cord after the appliance has been used and before it is cleaned.
- If the supply cord is damaged, stop using the appliance, for electrical safety it must be replaced by the manufacturer, service agent or similarly qualified person in order to avoid hazard.
- This appliance is not intended to heat liquids other than water.
- The kettle will switch off automatically once the water has boiled, you can also stop the kettle manually by pushing up the on/off switch.

- If the water kettle is accidentally switched on without water, the dry boil protection circuit with activate, allow the kettle to cool down 10 - 15 minutes before refilling with water and switching it on.
  - Repairs to electrical appliances should only be performed by qualified personnel. Improper repairs may place user at serious risk.
  - Do not operate this appliance with a damaged plug or cord, after a malfunction or after being dropped or damaged in any way.
  - Regular, periodic checks should be carried out on the mains cable to ensure no damage is evident. Should there be any signs of damage the appliance should not be used.
  - Do not allow the mains cable to hang over sharp edges or come in contact with hot surfaces.
  - Do not run the mains cable under carpets, rugs, etc.
  - Allow the unit to cool before cleaning and storing.
  - Never place the appliance near to flammable material or high pressure containers.
  - This appliance is intended for household and similar applications such as: Staff kitchen areas, farmhouses, by clients in hotels, motels and other residential type environments, bed and breakfast type environments.
  - Do not use any accessories or attachments with this appliance other than those supplied or recommended by supplier.
  - Do not immerse the appliance, base or its cord in water or any other liquids.
  - Do not use this appliance for anything other than its intended use.
  - Do not push objects into any openings as damage to the appliance and/or electric shock may occur.
  - Ensure appliance is situated in an open area, do not allow it to come in contact with cupboards, curtains, wall coverings, clothing or other flammable materials.
  - Unplug after each use. Grasp the plug, not the cord.
  - Do not cover this appliance.
  - **CAUTION!:** The heating element surface is subject to residual heat after use.
  - **CAUTION!:** Do not operate the kettle on an inclined plane, do not operate the kettle unless the element is fully immersed, Do not move the kettle while is switched on.
  - Misuse of this appliance can potentially cause injury. Never place this appliance on an electric, gas, or any other type of hob.
- WARNING: Do not remove lid while the water is boiling.**
- Never fill the kettle more than its capacity – ensure the water level is between the min and max marks. If the kettle is overfilled, boiling water may be ejected.
  - Always fit the lid during use and do not remove the lid whilst the water is boiling.
- CAUTION: The outside surface of the kettle will get hot during use.**
- Ensure the kettle is switched off before removing it from the base.
  - Before the first time you use your kettle, please read these operating instructions thoroughly and keep them in a safe place for future reference.
  - Before using the kettle for the first time fill to the max mark and allow to boil. Pour away the boiled water and then repeat the process. If a slight taste or odour remains repeat the above process once more.
- Instructions For Use**
1. Place the kettle on a flat level surface
  2. Fill the kettle with water to the desired level ensuring that it is above the MIN mark and below the MAX mark.
  3. Place the lid on the kettle and place it onto the base.
  4. Insert the mains plug (with dry hands) into the mains socket.
  5. Push down the power on/off switch, the light on the bottom edge will illuminate and the water will begin to boil.
  6. At the end of the boiling cycle the power on/off switch will automatically switch off.
  7. Wait until the water has finished boiling before removing it from the base unit.
  8. Ensure the lid is correctly fitted before pouring boiling water –beware of scalding.

## **Cleaning Your Kettle**

Do not clean your kettle in a dishwasher.

Always disconnect the kettle from the mains power supply before cleaning.

Wipe the outside of the kettle with a soft damp cloth. Never clean any part of the kettle with harsh or abrasive cleaners.

Do not submerge any part of the base, mains cable or kettle in water or any other liquids.

## **Decalcification Of Your Kettle**

The frequency of the decalcification depends on the hardness of the water in your area and how often the appliance is used

If the kettle switches off before it boils or has a white deposit building up inside then it probably needs to be decalcified.

Do not use vinegar but a commercially available decalcification agent; carefully follow the quantities recommended in the instructions of the agent.

## **Our 12-Month Guarantee**

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable losses or damage. You are also entitled to have the goods repaired if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

We stand by this product, therefore, we offer a 12-month guarantee on the heating element. The benefits of this guarantee are in addition to any rights and remedies imposed by the Australian Consumer Law. Our guarantee excludes normal wear and tear and instances where care and use instructions have not been followed.

### **What IsAlbi Will Do:**

During this guarantee period, IsAlbi will repair, replace, or refund any defective product. If identical product is not available for replacement, a similar product may be offered. IsAlbi asks you to cover the cost of postage/transit if the product needs to be sent back to us for inspection. If IsAlbi deems the product is defective, we will reimburse your postage/transit expenses. IsAlbi will be responsible for the postage/transit of the repaired/replacement product back to you.

### **What To Do:**

If a fault/defect is identified, cease using the product immediately. To make a claim on this guarantee, take the product, proof of purchase, and full details of the alleged defect to the retailer from whom the product was purchased. If you cannot access the retailer or are unsatisfied with the solution offered by the retailer, contact IsAlbi via the details below.

### **IsAlbi**

87 Chifley Drive, Preston, Victoria 3072

P: +61 (03) 9474 1300

E: [enquiries@isalbi.com.au](mailto:enquiries@isalbi.com.au)

[isalbi.com.au](http://isalbi.com.au)